


ADMIRAL

SERVICE DATA T1091

FOR MODELS

PS3DIX PS3CIAX PS3CIX

PS2CIX ICIX

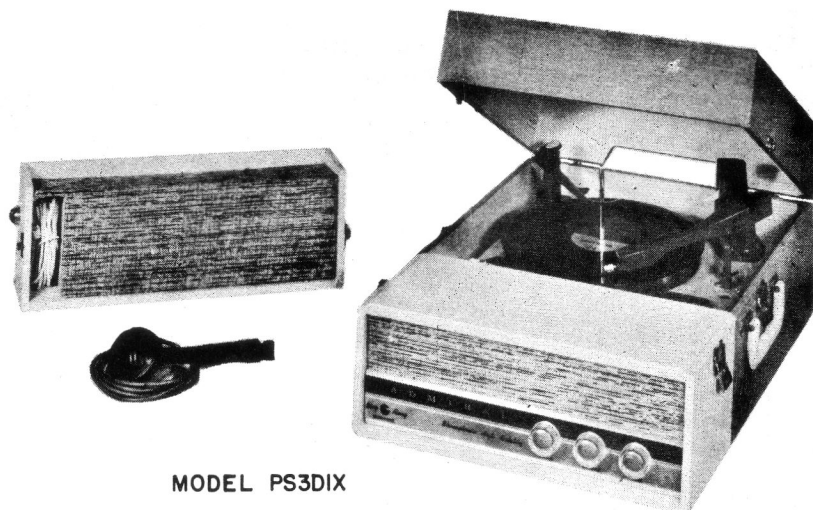

MODEL PS3DIX

ICIX PARTS LIST

CHASSIS

<i>Schematic Number</i>	<i>Part No.</i>	<i>Description</i>
C1	C555	50 mfd, 150 VDC, Electrolytic
C2	C555	30 mfd, 150 VDC, Electrolytic
C3	64L6-7	.01 mfd, 600 VDC, Tubular Condenser
C4	64L6-7	.01 mfd, 600 VDC, Tubular Condenser

RESISTORS


R1	60B8-100	10 ohm, ½ watt, 10 Resistor
R2	60B8-101	100 ohm, ½ watt, 10 Resistor
R3	60B8-103	10K ohm, ½ watt, 10 Resistor
R4	60B8-104	100K ohm, ½ watt, 10 Resistor
R5	C552	1 meg ohm, Volume Control with Switch

MISCELLANEOUS

SL1	C554	80 MA, 125 Volt Selenium Rectifier
T1	C551	Audio Output Transformer
SP1	C546	4" P.M. Speaker
PU	K314TS	Tone Arm Complete with Cartridge, Arm Rest, Leads and Hardware
	314TS	Cartridge only with Stili
	N8-3	Stylus 78 RPM
	N8-1	Stylus L.P.
	C559	Arm Rest only
M1	HPO56071	Motor Mounting Plate and Speed Change Mechanism
	S18784A	Turntable with 45 RPM Adapter
	17276C	Turntable Retaining Washer
	18758A	Speed Selector Knob
	18744A	Dial Plate
	18750A	Speed Card
V1	25L6	Tube
	C769	Line Cord

CABINET

<i>Quantity</i>	<i>Part No.</i>	<i>Hardware Description</i>
1	26K30-2	Monogram
4	27K7-1	Studs
2	37K18-2	Hinges
1	37L34-1	Carrying Handle
2	37K35-1	Catches
1	37K38-1	"Volume" Control Knob
1	35P178-1	Cabinet (Complete)
1	35P178-51	Changer Mtg. Panel
1	35P178-52	Spkr. Compartment Rear Panel
1	35P178-53	Changer Mtg. Panel
1	35P178-54	Baffle Board (Complete with Grille Cloth)

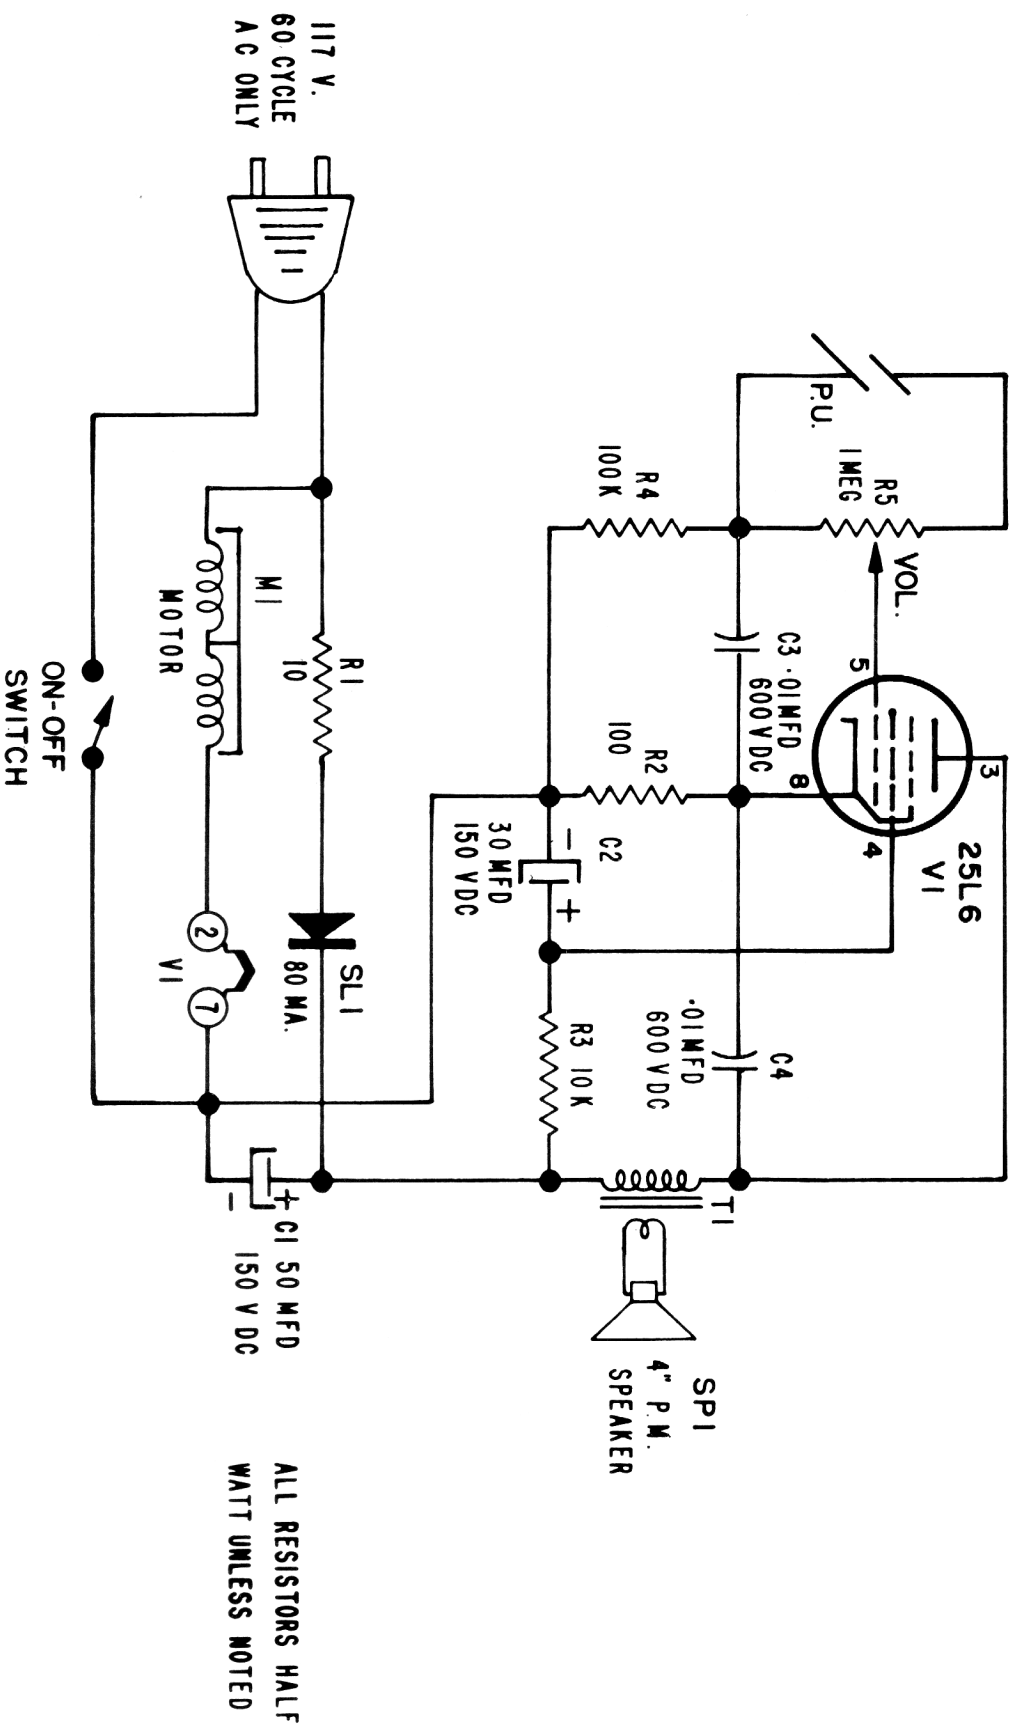

PS3C1X PARTS LIST

CHASSIS

**Schematic
Number**

Part No.

Description

CAPACITORS

C1	C574	80 mfd, 150 WVDC, Electrolytic
C2	C574	80 mfd, 150 WVDC, Electrolytic
C3	64L6-13	.01 mfd, 600 VDC, Paper
C4	64L6-15	.047 mfd, 600 VDC, Paper
C5	64L6-13	.01 mfd, 600 VDC, Paper
C6	64L6-15	.047 mfd, 600 VDC, Paper
C7	64L6-17	.0022 mfd, 600 VDC, Paper
C8	64L6-17	.0022 mfd, 600 VDC, Paper
C9	64L6-11	.02 mfd, 600 VDC, Paper
C10	64L6-11	.02 mfd, 600 VDC, Paper

RESISTORS

R1	60B14-150	15 ohm, 1 watt, Resistor
R2	60B14-470	47 ohm, 1 watt, Resistor
R3	60B14-472	4.7K ohm, 1 watt, Resistor
R4	C790	2 meg ohm, Volume Control
R5	C790	2 meg ohm, Volume Control
R6	60B8-332	3.3K ohm, 1/2 watt, Resistor
R7	60B8-332	3.3K ohm, 1/2 watt, Resistor
R8	60B8-474	470K ohm, 1/2 watt, Resistor
R9	60B8-474	470K ohm, 1/2 watt, Resistor
R10	C790	2 meg ohm, Tone Control
R11	C790	2 meg ohm, Tone Control
R12	60B8-473	47K ohm, 1/2 watt, Resistor
R13	C791	1 meg ohm, Balance Control
R14	60B8-473	47K ohm, 1/2 watt, Resistor
R15	60B8-151	150 ohm, 1/2 watt, Resistor
R16	60B8-151	150 ohm, 1/2 watt, Resistor

MISCELLANEOUS

SL1	C797	125 Volt, 150 M.A. Rectifier
T1	C595	Audio Output Transformer
T2	C595	Audio Output Transformer
SP1	C545	Speaker
SP2	C545	Speaker
P.U.	TC8S	Cartridge C/W Stili
	TC8RS	LP Stylus only
	TC8G	Std. Stylus only
M1	UA10	Changer for complete Parts List See Admiral Manual
		T1090 for BSR Changer
V1A	12AX7	Tube
V1B	12AX7	Tube
V2	50C5	Tube
V3	50C5	Tube
	C769	Line Cord
PL1	C727	External Speaker Cord, Complete with Plug
PL2	C803	Female Receptacle for Extension Speaker


CABINET

Quantity

Part No.

Hardware Description

1	26K30-2	Monogram
4	27K7-1	Studs
2	37K18-2	Hinges
1	37L24-2	Carrying Handle
4	37K35-1	Catches
1	35P174-1	Cabinet (Complete)
1	35P174-51	External Speaker Enclosure (complete with Speaker and Leads)
1	35P174-52	Cabinet Complete (Less Speaker Enclosure)
1	35P174-53	Changer Mtg. Panel
1	35P174-54	Cabinet Spkr. Baffle (complete with Grille Cloth)
1	35P174-55	External Speaker Enclosure Baffle, (Complete with Grille Cloth)
1	33L7-1	"Vol" Control Knob
1	33L7-2	"Balance" Control Knob
1	33L7-3	"Tone" Control Knob

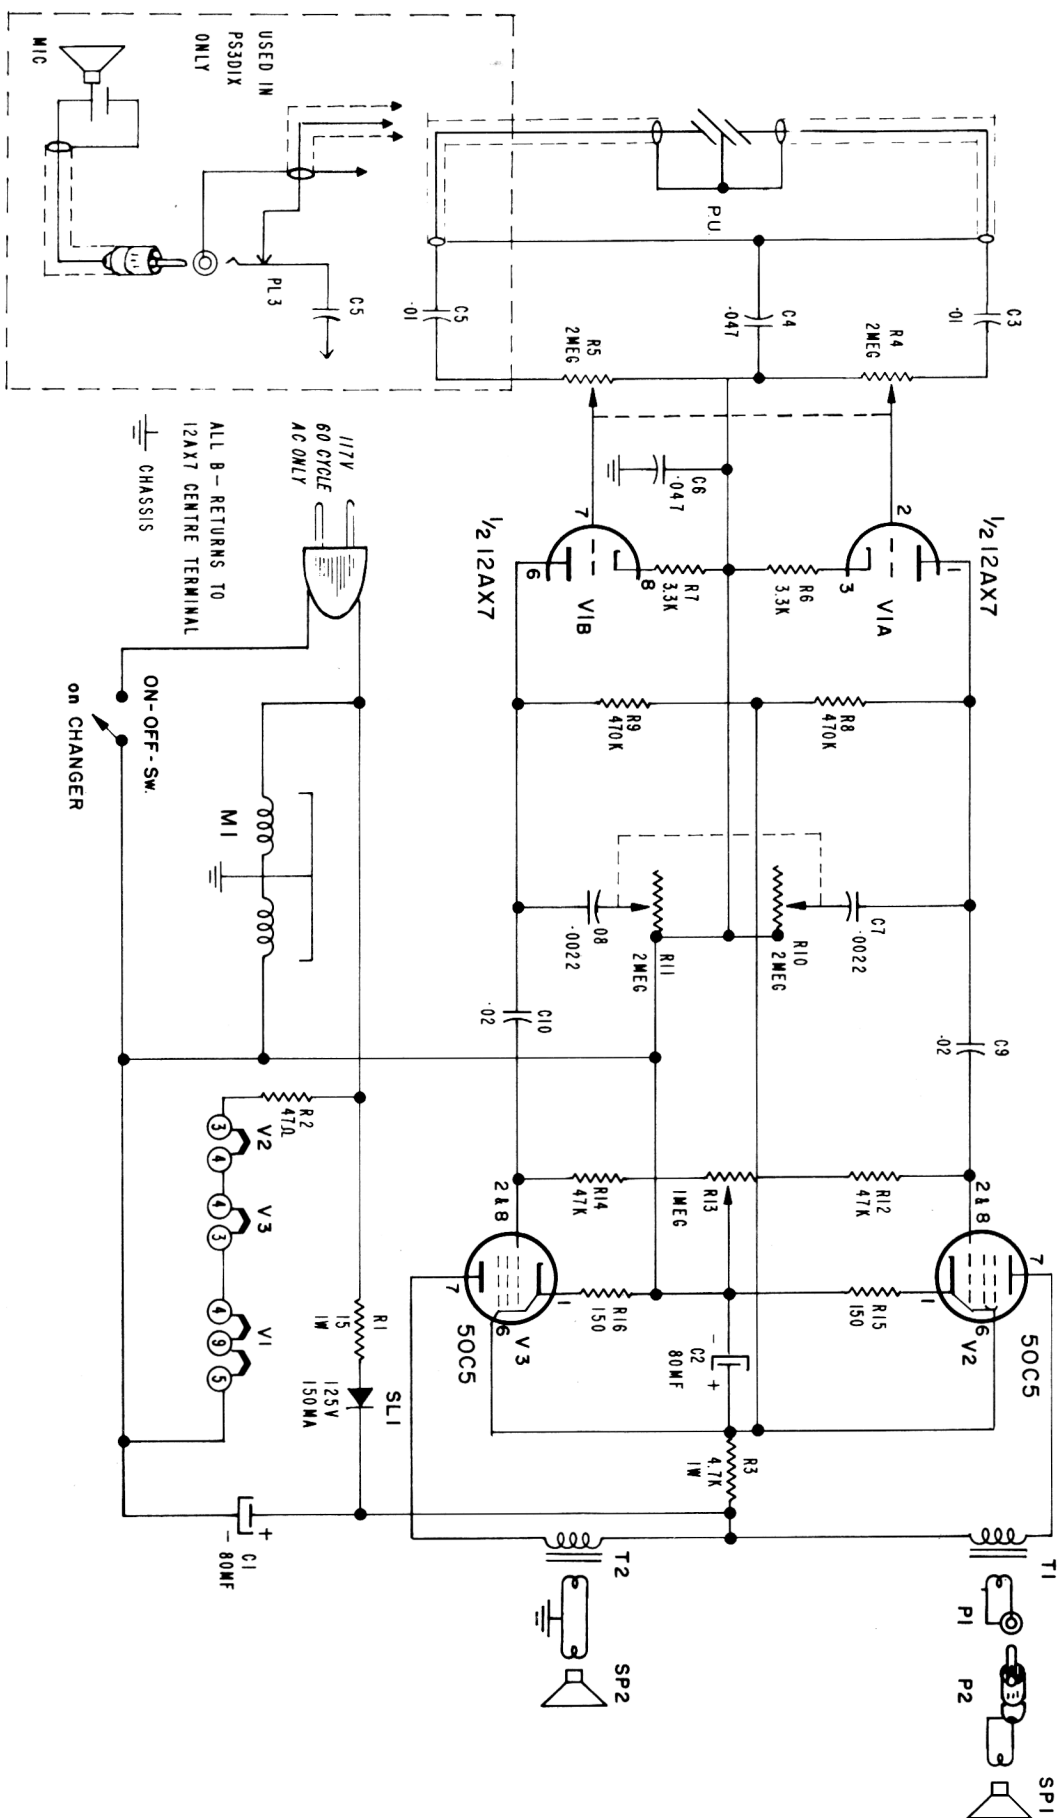

PS2C1X PARTS LIST

CHASSIS

<i>Schematic Number</i>	<i>Part No.</i>	<i>Description</i>
C1	C799	80 mfd, 150 WVDC
C2	C799	80 mfd, 150 WVDC
C3	C799	50 mfd, 25 WVDC
C4	64L6-9	047 mfd, 600 WVDC
R1	60B14-150	15 ohms, 1 watt, Resistor
R2	60B14-470	47 ohms, 1 watt, Resistor
R3	60B14-472	4.7K ohms, 1 watt, Resistor
R4	C553	1 meg, Volume Control
R5	C552	1 meg, Volume with On-Off Switch
R6	60B8-104	100K, ½ watt, Resistor
R7	60B8-104	100K, ½ watt, Resistor

MISCELLANEOUS

SL1	C576	150 MA- 125 UAC Selenium Rectifier
T1	C794	Audio Output Transformer
T2	C794	Audio Output Transformer
SP1 } SP2 }	78B39-1	Speaker Speaker
PU	K74TS	Arm Complete with Cartridge, Leads and Hardware
	74TS	Cartridge Complete with Stili
	N8-7	LP Stylus
	N8-3	Std. Stylus
M1	HPO56071	Motor Mounting Plate and Speed Change Mechanism
	S18784A	Turntable with 45 RPM Adapter
	17276C	Turntable Retaining Washer
	18758A	Speed Selector Knob
	18744A	Dial Plate
	18750A	Speed Card
V1	50EH5	Tube
V2	50EH5	Tube
	C769	Line Cord
PL1	C727	Speaker Cord Complete with Plug
PL2	C803	Female Receptacle for Extension Speaker

CABINET

<i>Quantity</i>	<i>Part No.</i>	<i>Hardware Description</i>
1	26X58-3	Monogram
4	27K7-1	Studs
2	33L7-1	"Volume" Control Knobs
2	37K18-2	Hinges
1	37L34-1	Carrying Handle
2	37K35-1	Catches
1	35P177-1	Cabinet Complete
1	35P177-51	External Speaker Enclosure (complete with Speaker and Leads)
1	35P177-52	Cabinet Complete (Less Spkr. Enclosure)
1	35P177-53	Changer Mtg Panel
1	35P177-54	Spkr. Compartment Rear Panel
1	35P177-55	Cabinet Spkr. Baffle (Complete with Grille Cloth)
1	35P177-56	External Spkr. Enclosure Baffle (complete with Grille Cloth)

PS3D1X PARTS LIST

CHASSIS

Same as PS3C1X with the following added

Schematic Number	Part No.	Description
PL3	88B11-3	Plug
Mic.	C802	Microphone (Complete with Cable and Plug)
	C801	Cable fro Microphone (Complete with Molded Plug)
	MC151	Cartridge for Microphone

Quantity	Part No.	Hardware Description
CABINET		
4	27K7-7	Studs
2	37K18-1	Hinges
1	37L24-1	Carrying Handle
4	37K35-2	Catches
1	35P174-3	Cabinet (complete)
1	35P174-56	External Speaker Enclosure (complete with Speaker and Leads
1	35P174-57	Cabinet (complete) (Less Speaker Enclosure)
1	35P174-58	Changer Panel Mtg.
1	35P174-59	Cabinet Speaker Baffle (Complete with Grille Cloth)
1	35P174-60	External Speaker Enclosure Baffle (complete with Grille Cloth)
3	33L7-4	Control Knobs
1	18A10-11	Microphone Retainer Clip
1	23N32-2	Escutcheon
3	27K8-1	Studs (for Escutcheon Assy.)

PS3C1AX PARTS LIST

Same as PS3C1X except as follows

CABINET

Quantity	Part No.	Hardware Description
Delete 1	26K30-2	Monogram
Add 1	23N32-1	Escutcheon
3	27K8-1	Studs (for Escutcheon Assy)