



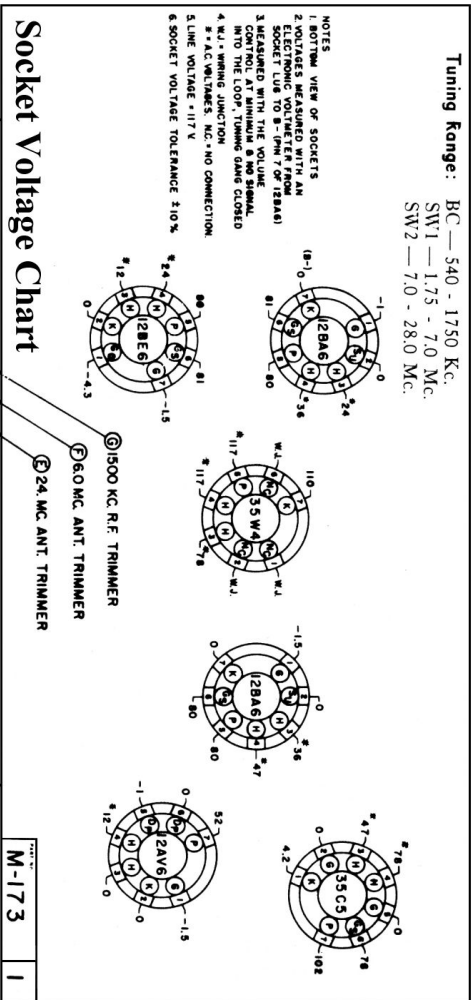

Crosley ES-30BE, ES-30GN, ES-30MN, ES-30TN, M-171 Styling Master

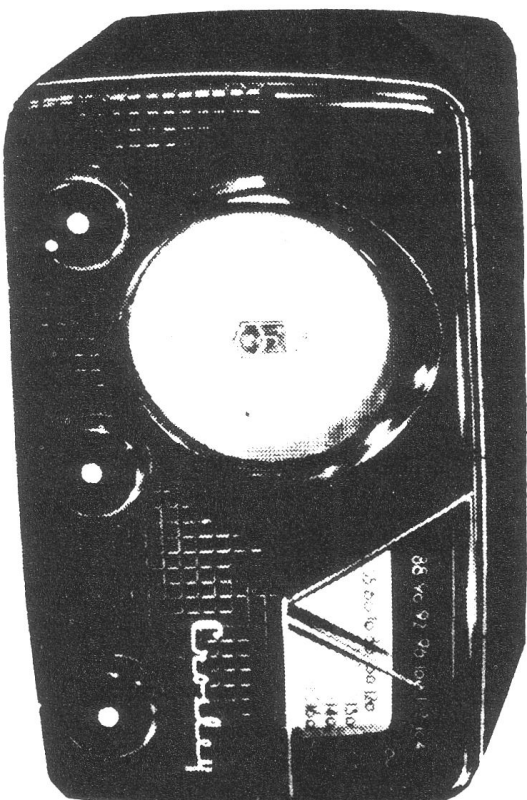

Alignment Procedure

Step	SIGNAL GENERATOR OUTPUT			POSITION OF		Adjust.
	Frequency	In Series With	To:	Operation Switch	Tuning Dial	
1	455 Kc.	.05 MFD	Mix. Gang	Broadcast	Open	I. F. Trans.
2	24. Mc.	200 MMF	Ant. - Gnd.	SW-2	24 Mc.	A, E
3	6.0 Mc.	200 MMF	Ant. - Gnd.	SW-1	6.0 Mc.	B, F
4	1500 Kc.	200 MMF	Ant. - Gnd.	Broadcast	1500 Kc.	C, G, H
5	600 Kc.	200 MMF	Ant. - Gnd.	Broadcast	600 Kc.	D
6	Re-check Step 4 and 5.					