


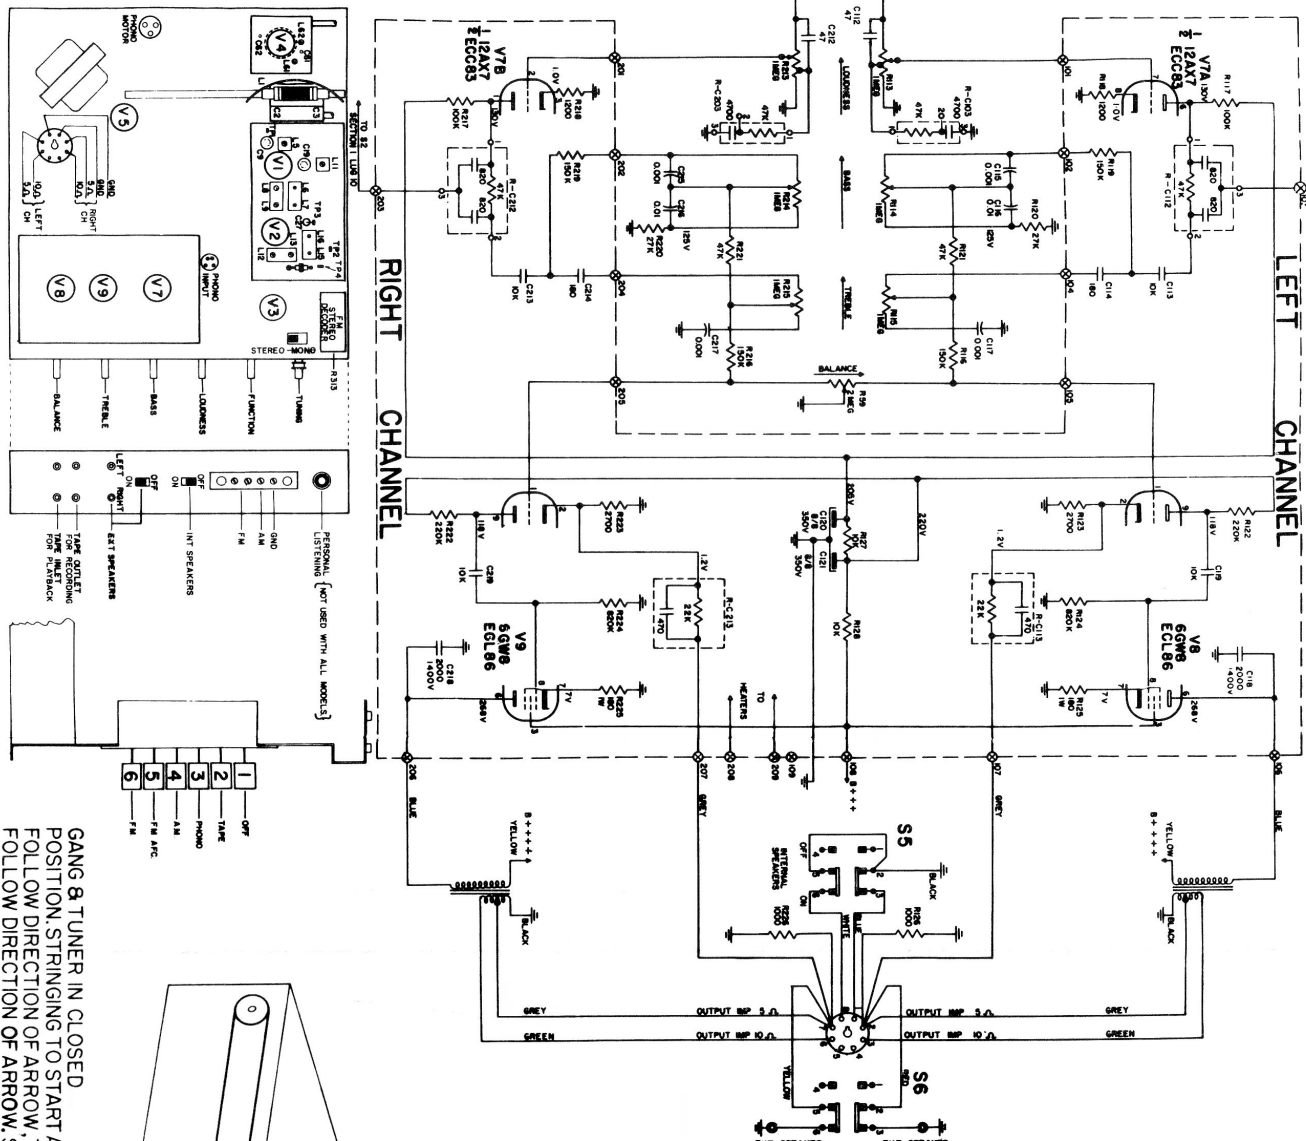



GANG & TUNER IN CLOSED POSITION. STRINGING TO START AT "A" & FOLLOW DIRECTION OF ARROW. THEN START AT "B" & FOLLOW DIRECTION OF ARROW. STRING POINTER AS SHOWN & SET AT AM-FM START INDICATION MARK ON ALIGNMENT SCALE.

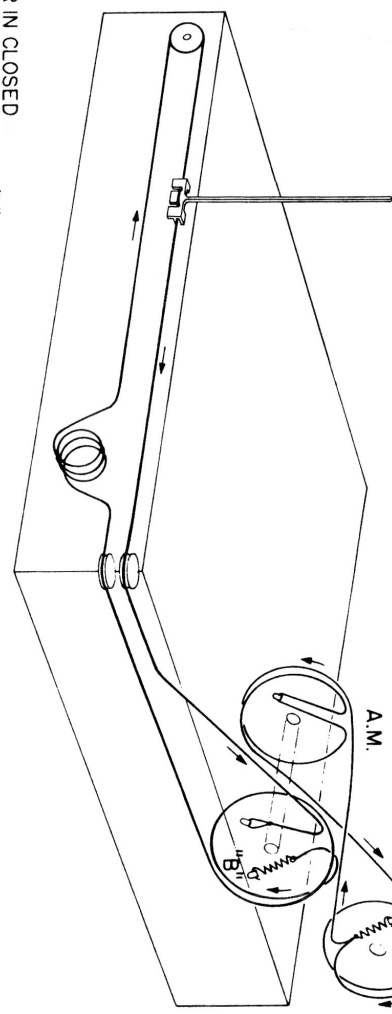


FIG. 4. DIAL STRINGING DIAGRAM

