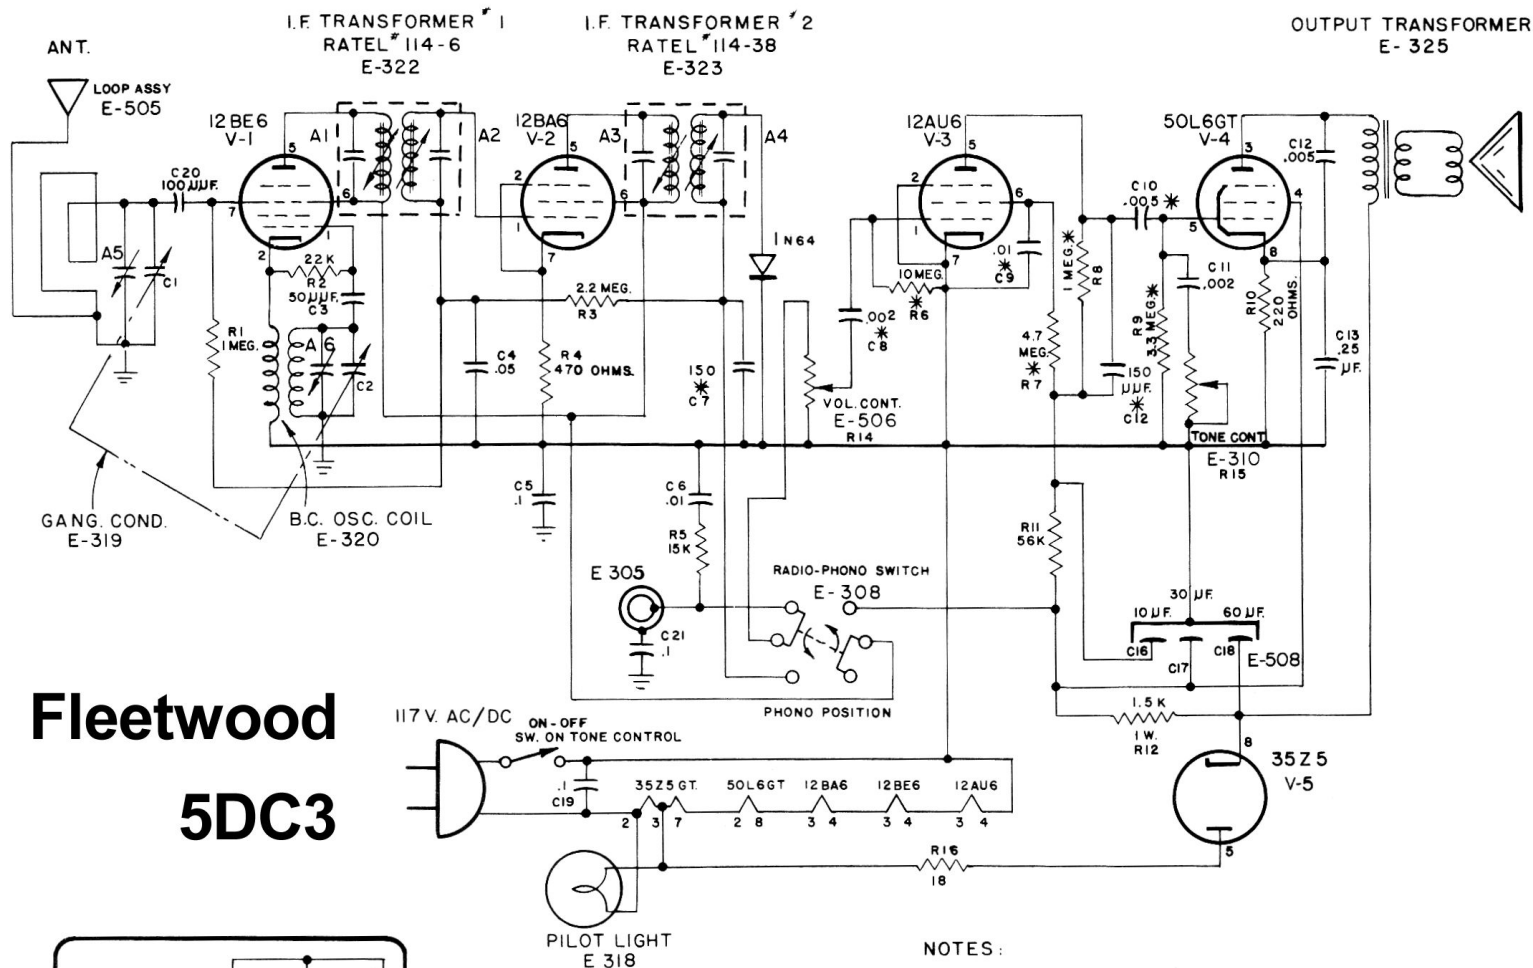


CENTRALAB
PC-160
E-504

NOTES:

- 1- COMPONENTS SHOWN THUS * ARE INCLUDED IN "CENTRALAB PC-160 PRINTED CIRCUIT"
- 2- ALL CAPACITANCES IN WHOLE NOS. IN μF . UNLESS OTHERWISE NOTED. & THOSE IN DECIMALS NOS. IN μF .
- 3- ALL RESISTANCES IN OHMS. UNLESS OTHERWISE NOTED "K" = 1000 OHMS.
- 4- $\perp$ DENOTES CHASSIS.
- 5- PHONO-RADIO SWITCH IN PHONO POSITION.

ALIGNING INSTRUCTIONS

RECEIVER FLEETWOOD MODEL 5DC3

1. Connect output meter across Voice Coil.
2. Connect signal generator through 100 MMFD condenser to Antenna clip on loop. Apply 455 KC signal.
3. Adjust I.F. No. 2 and No. 1 adjusting screws for maximum output in the following order:
 - a. I.F. No. 2 Bottom A1
 - b. I.F. No. 2 Top A2
 - c. I.F. No. 1 Bottom A3
 - d. I.F. No. 1 Top A4
 repeat if necessary, keep signal at minimum.
4. Apply 1620 KC signal, turn tuning condenser fully clockwise and adjust Oscillator trimmer (A6) for maximum output.
5. Apply 1500 KC signal, tune set to that frequency and adjust Antenna trimmer (A5) for maximum output.