

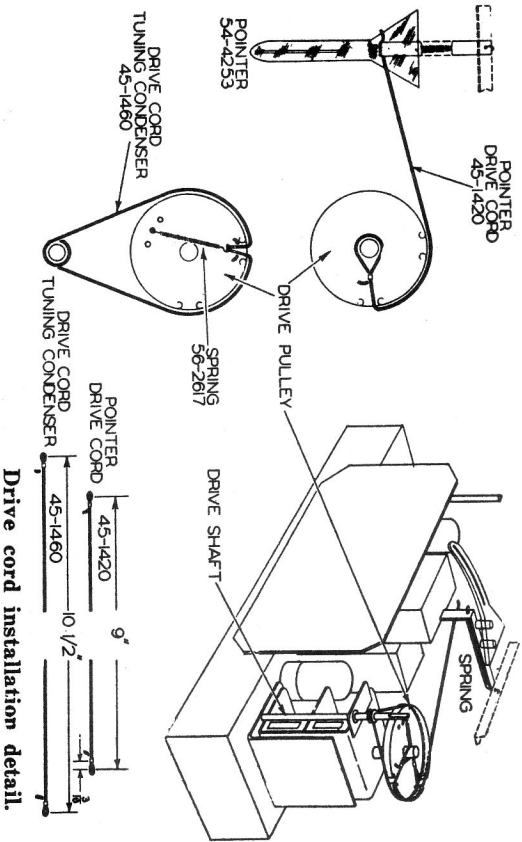


94-4

ALIGNMENT CHART

SIGNAL GENERATOR		R E C E I V E R			
Connections to Receiver	Dial Setting (tc.)	Dial Setting (tc.)	Special Instructions	Adjust Trimmers in Given Order	Adjust Trimmers For
Slater plate terminal antenna section of tuning condenser, and B-	400	500 (full closed)	Turn C90B down light. Turn tuning condenser Plate to full-meshed position. VOLUME CONTROL AT MAXIMUM.	C91A C90A C90B	Medium output
Slater plate terminal,	1000			C94B	Maximum output
External aerial lead and B-	1500	1500		C94A	Maximum output

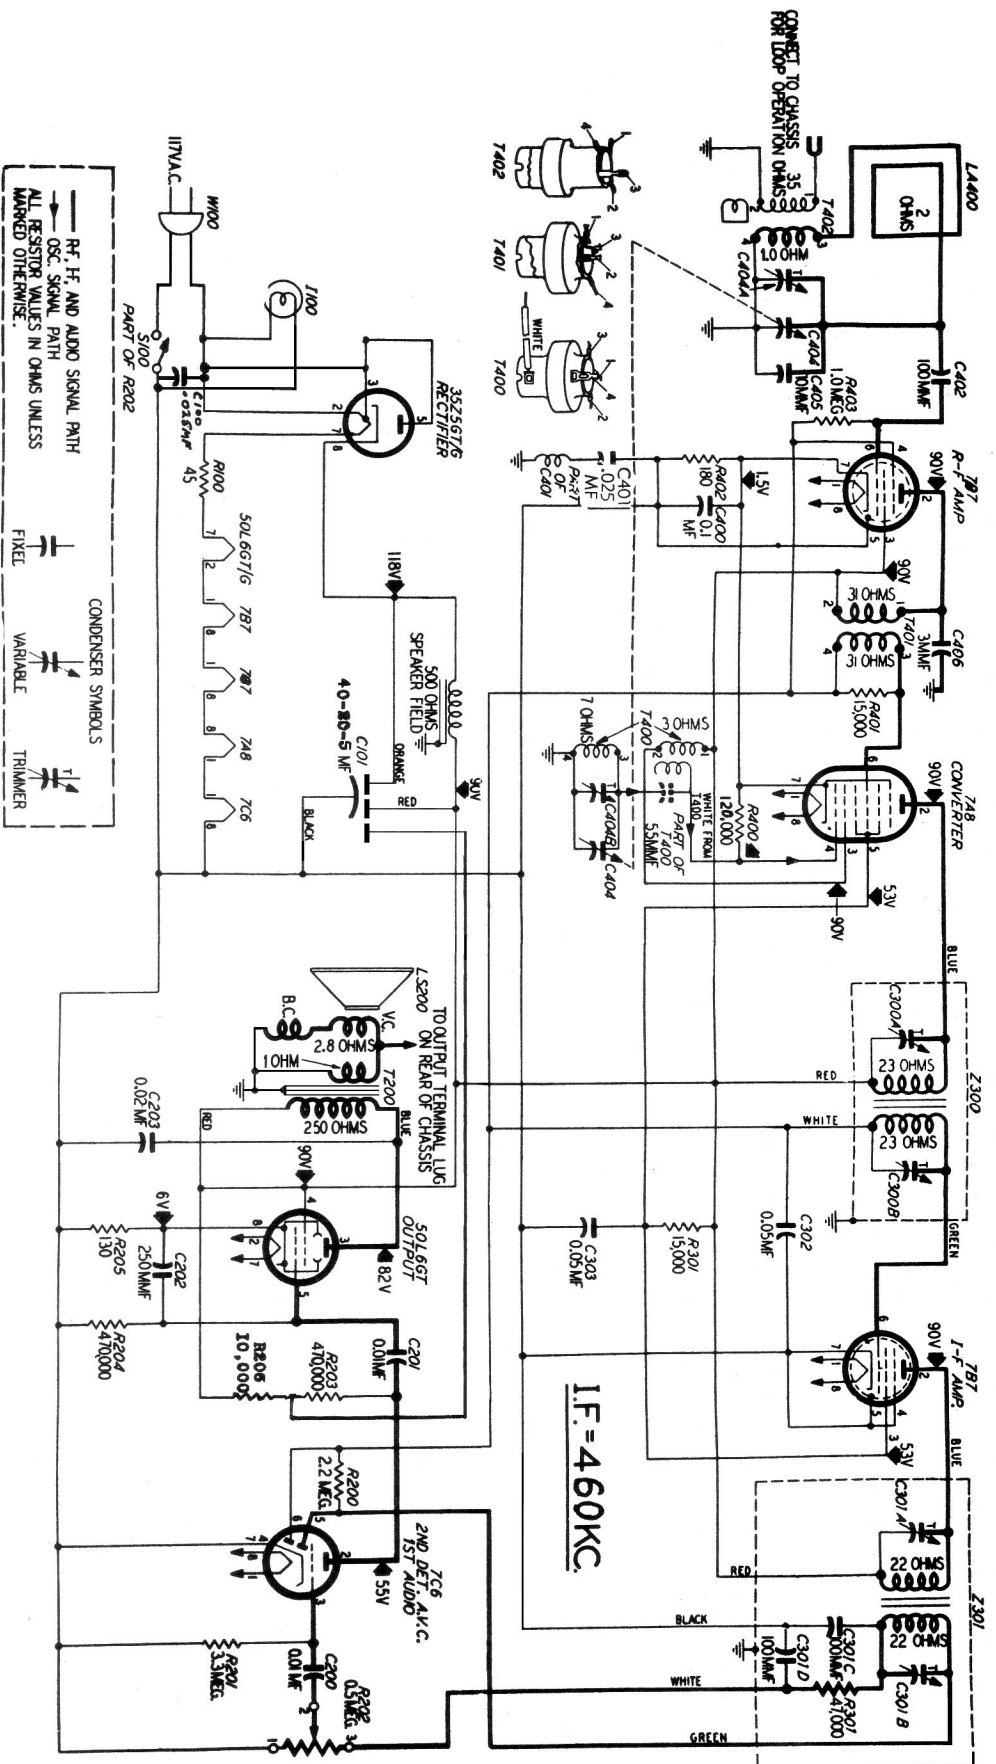

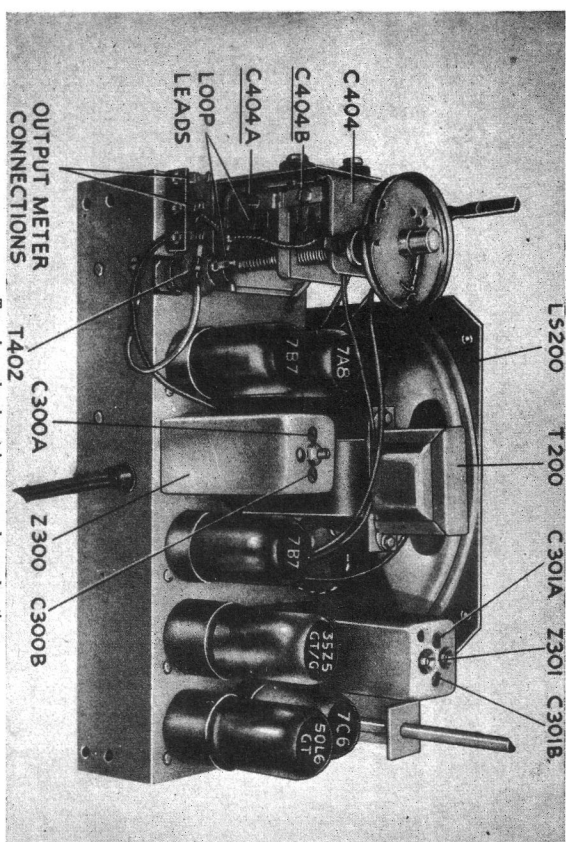

Top view, showing trimmer condenser locations.

MODELS 64, 64-I