


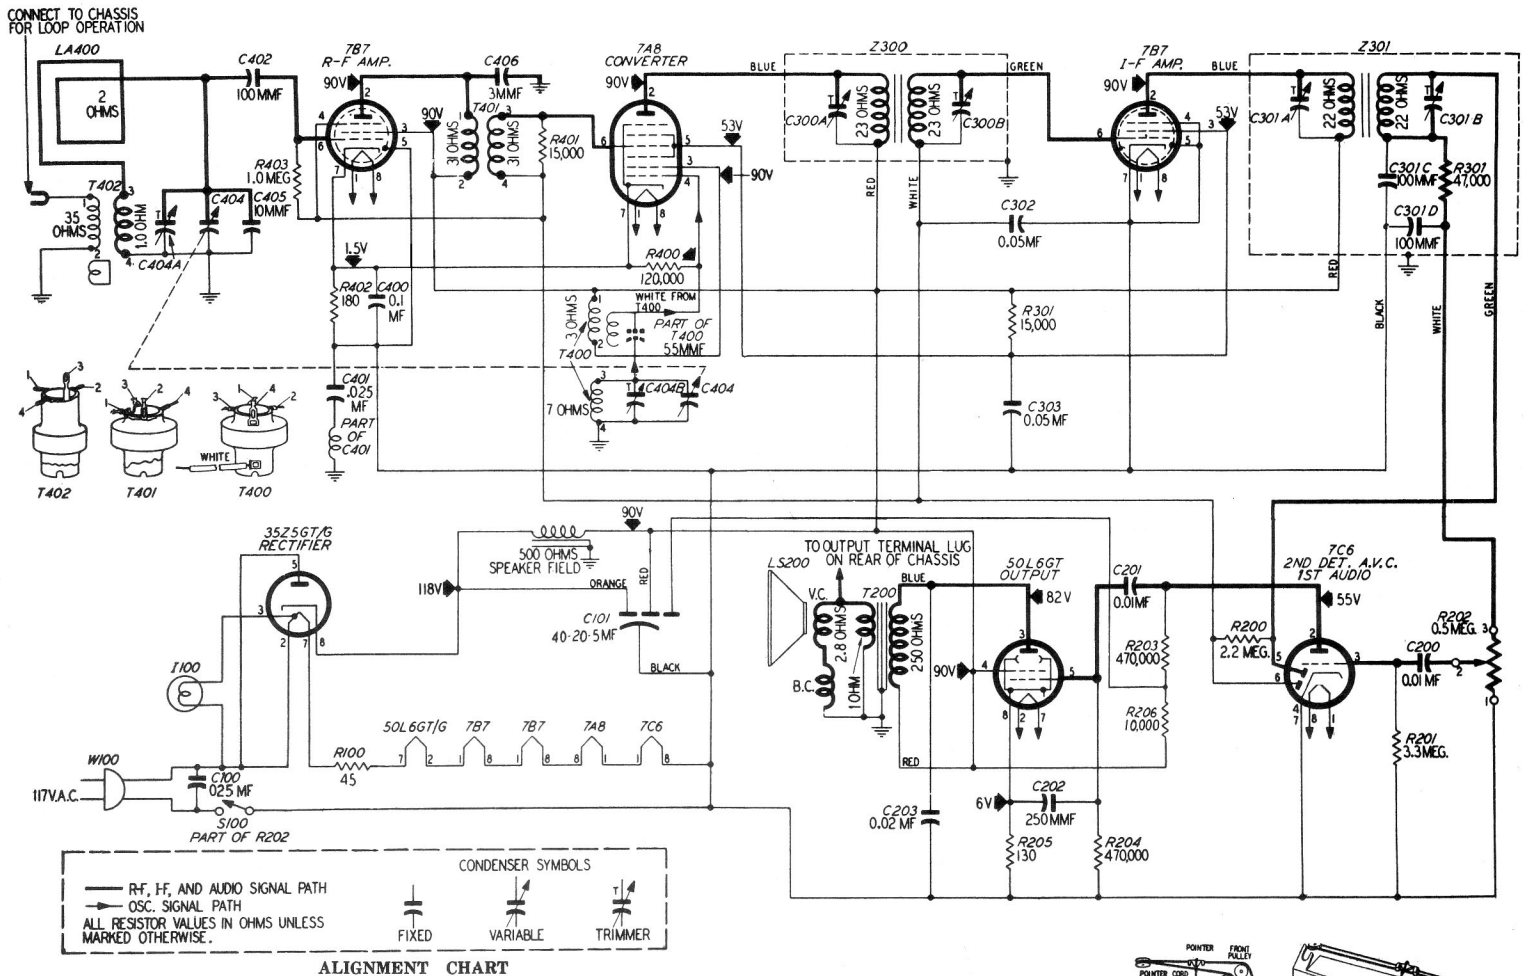

SIGNAL GENERATOR				RECEIVER		
Connections to Receiver	Dial Setting (kc.)	Dial Setting (kc.)	Volume Control Setting	Special Instructions	Adjust Trimmers in Given Order	Adjust Trimmers For
Stator plate terminal, antenna section of tuning condenser, and chassis.	460	540	Max	Turn C301B down tight before adjusting trimmers. Check to make sure that the dial pointer is set to first small index line on left side of scale, when condenser plates are fully meshed.	C300B, C300A, C301A, C301B	Maximum output
Aerial lead and chassis.	1600	1600	Max	Turn tuning condenser until dial pointer is on the first (from right) small index line stamped in the scale plate. This setting corresponds to a dial setting of 1600 kc.	C404B	Maximum output
Aerial lead and chassis.	1500	1500	Max	Turn tuning condenser until dial pointer is on second small index line from right side. This setting corresponds to 1600 kc.	C404A	Maximum output


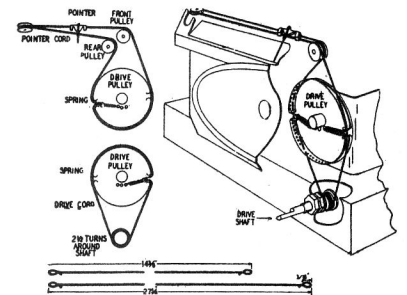


Figure 11. Drive cord installation details.

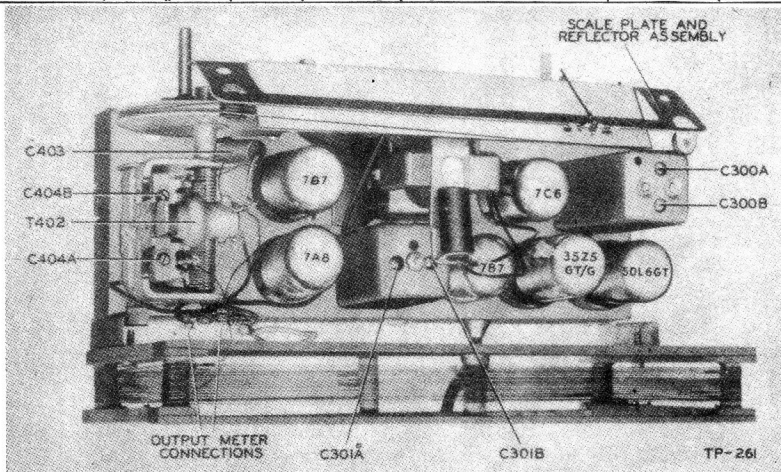

Top view showing trimmer condenser locations.

I.F. = 460kc.

1946 - 47

AC-DC MODELS

65

65-I