


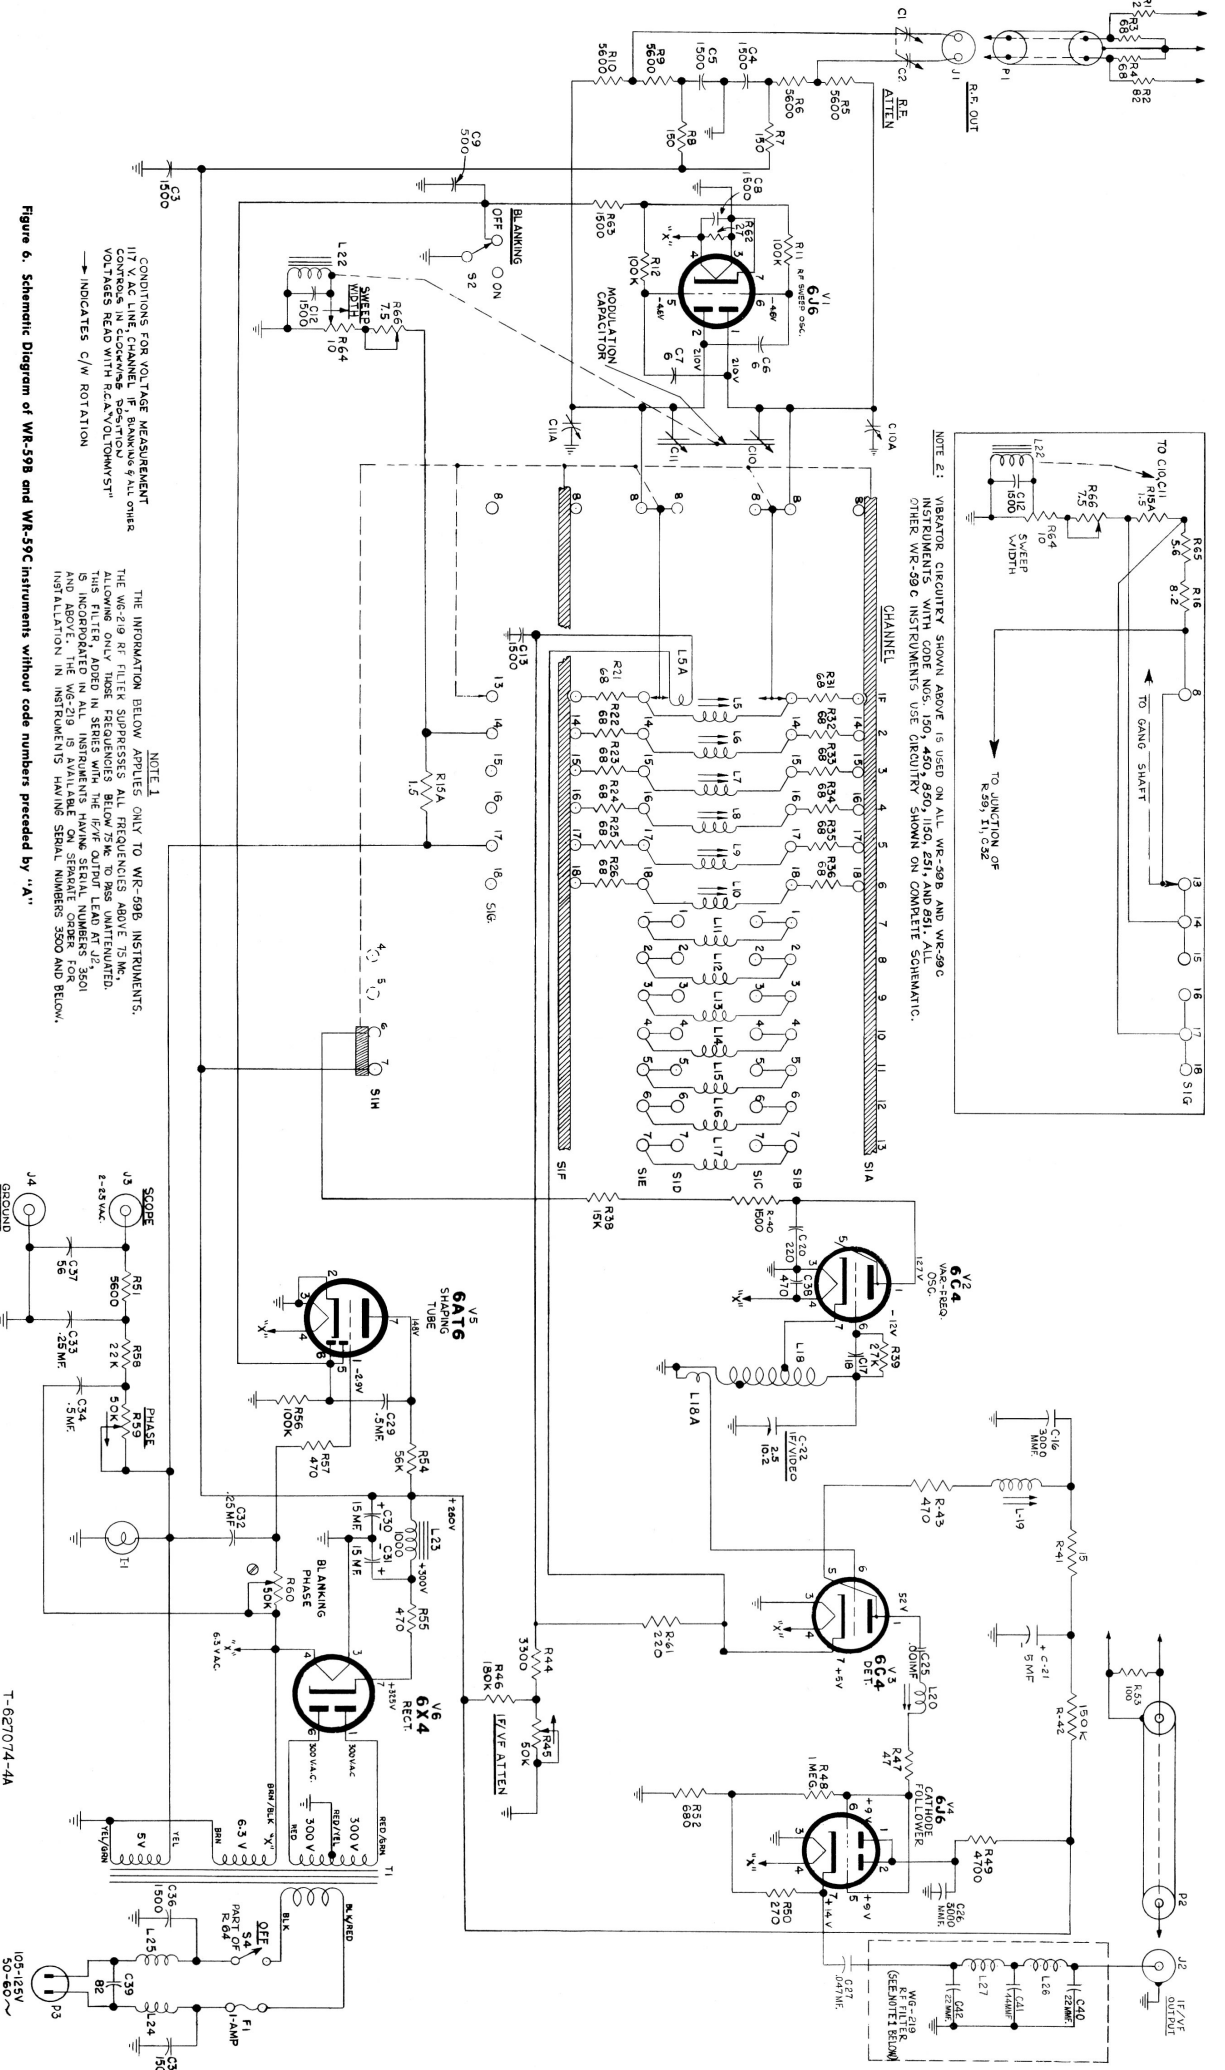


Figure 6. Schematic Diagram of WR-598 and WR-59C instruments without code numbers preceded by "A"

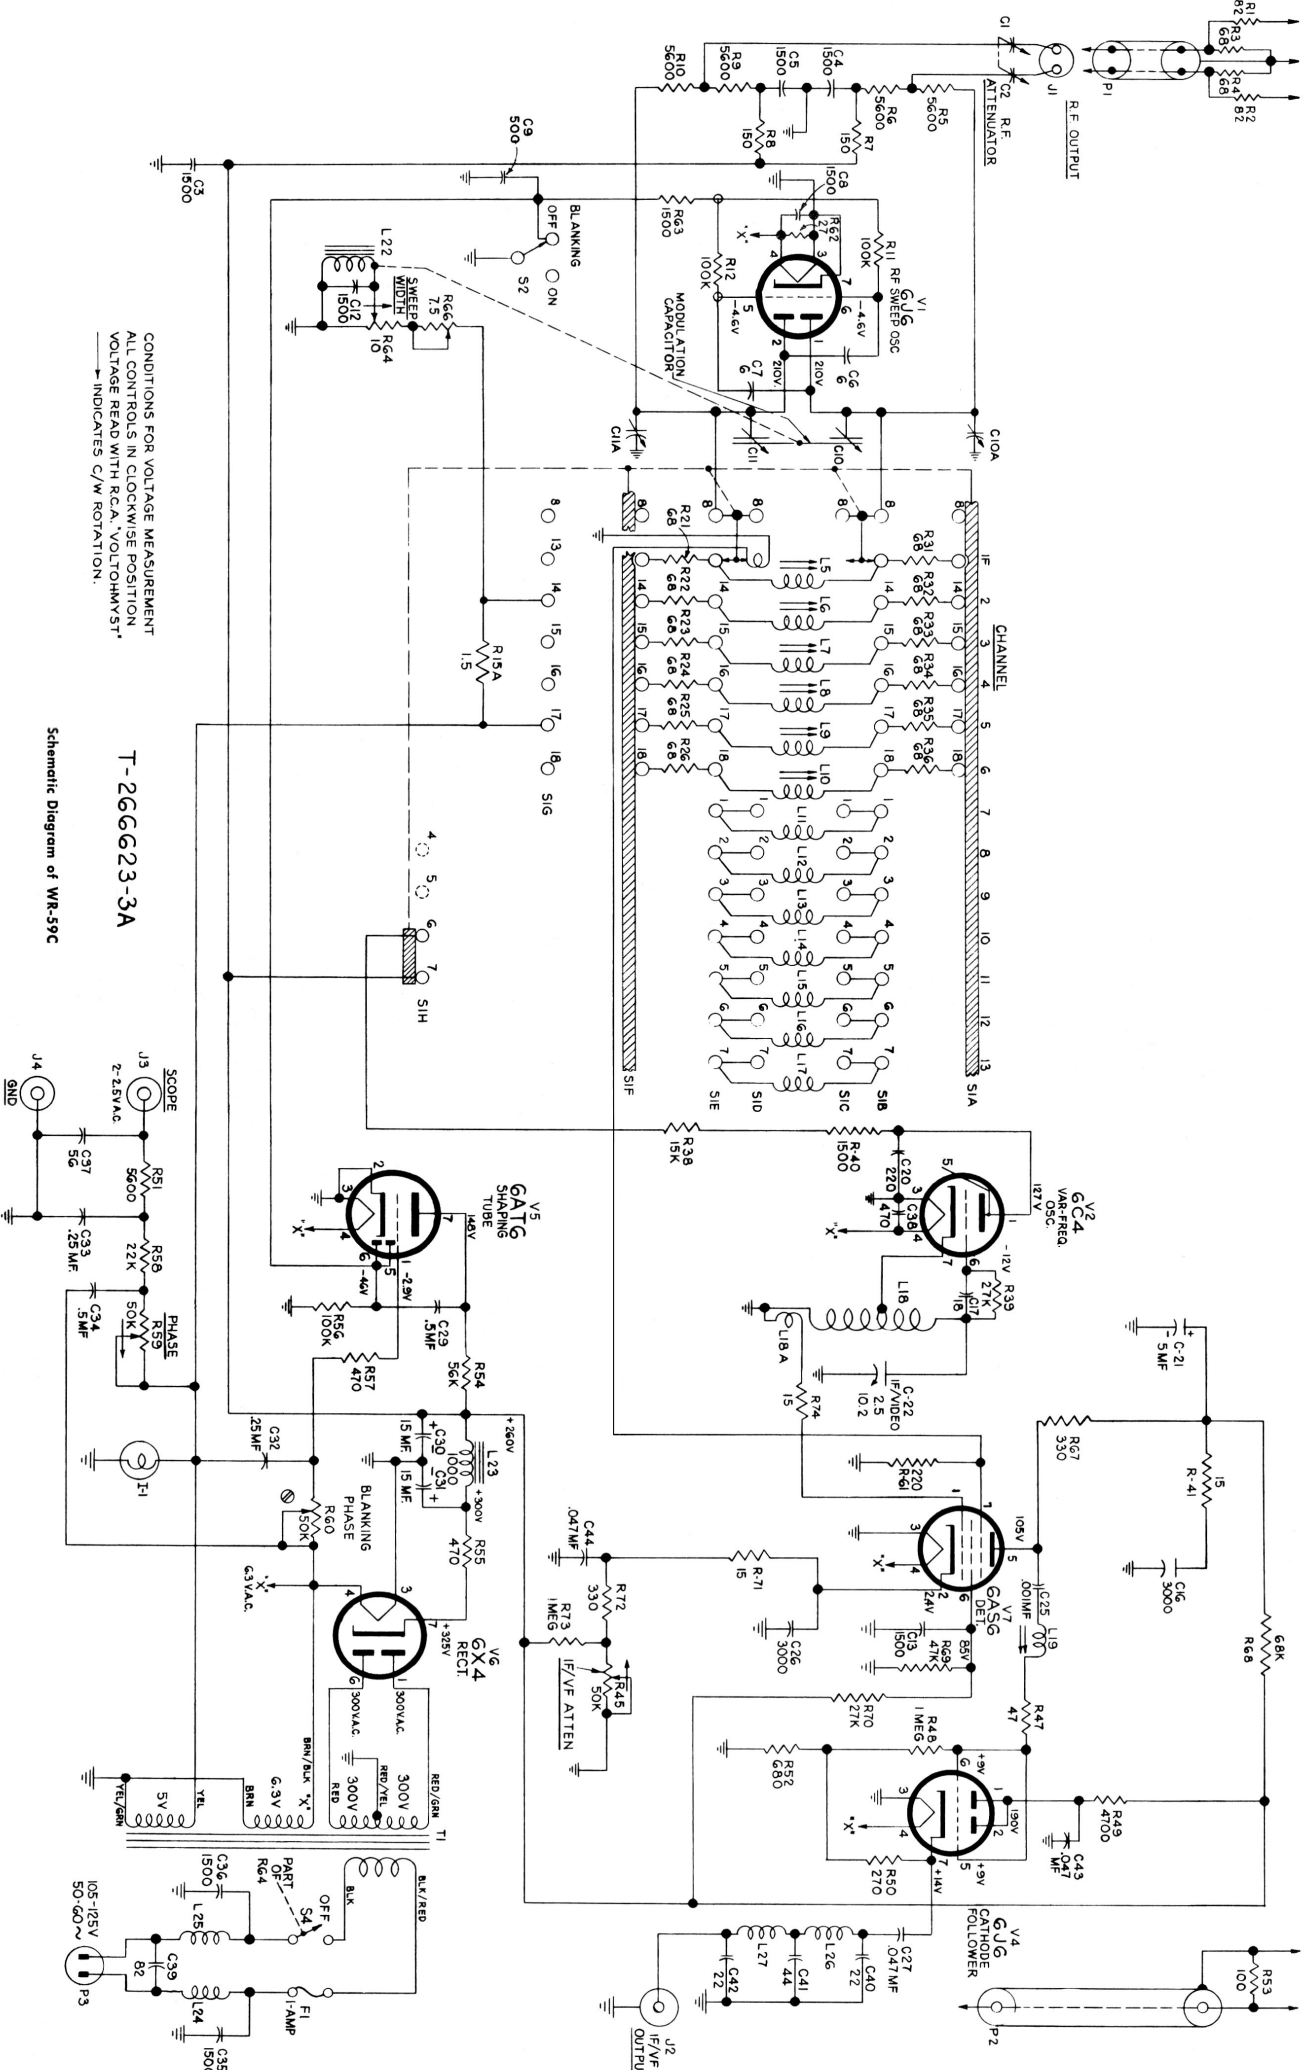

CONDITIONS FOR VOLTAGE MEASUREMENT
ALL CONTROLS IN CLOCKWISE POSITION
VOLTAGE READ WITH RCA "VOLTOHMS" *
→ INDICATES C/W ROTATION.

T-266623-3A

Schematic Diagram of WR-59C