

RADIO ALIGNMENT PROCEDURE

At least 15 minute warm up period should be allowed before adjustments are made.



- A. Connect Signal Generator to Antenna Terminal and set Generator to 455 Kcs.
- B. Set tuning capacitor to approximately 1500 Kcs and adjust slotted IF iron cores for maximum output, starting with T2 adjust L6 then L5. Next adjust L4 then L3 of T1.
- C. With tuning capacitor set to minimum capacity and Signal Generator set to 1640 Kcs adjust trimmer C5 to set oscillator. (Tuning range 1640 to 535 Kcs.)
- D. With Signal Generator set at 1500 Kcs tune in signal and adjust trimmer C2 for maximum output.

LOOP PADDER

Adjusted for optimum loop performance at factory. Field adjustment usually is unnecessary.

- A. With Signal Generator and Dial set at 600 Kcs adjust loop padder for maximum output.
- B. Reset Signal Generator and Dial to 1500 Kcs and rock the tuning capacitor while adjusting C2 for maximum output.

Hum Balance Control to be set for minimum hum
with volume full off, bass control full on.

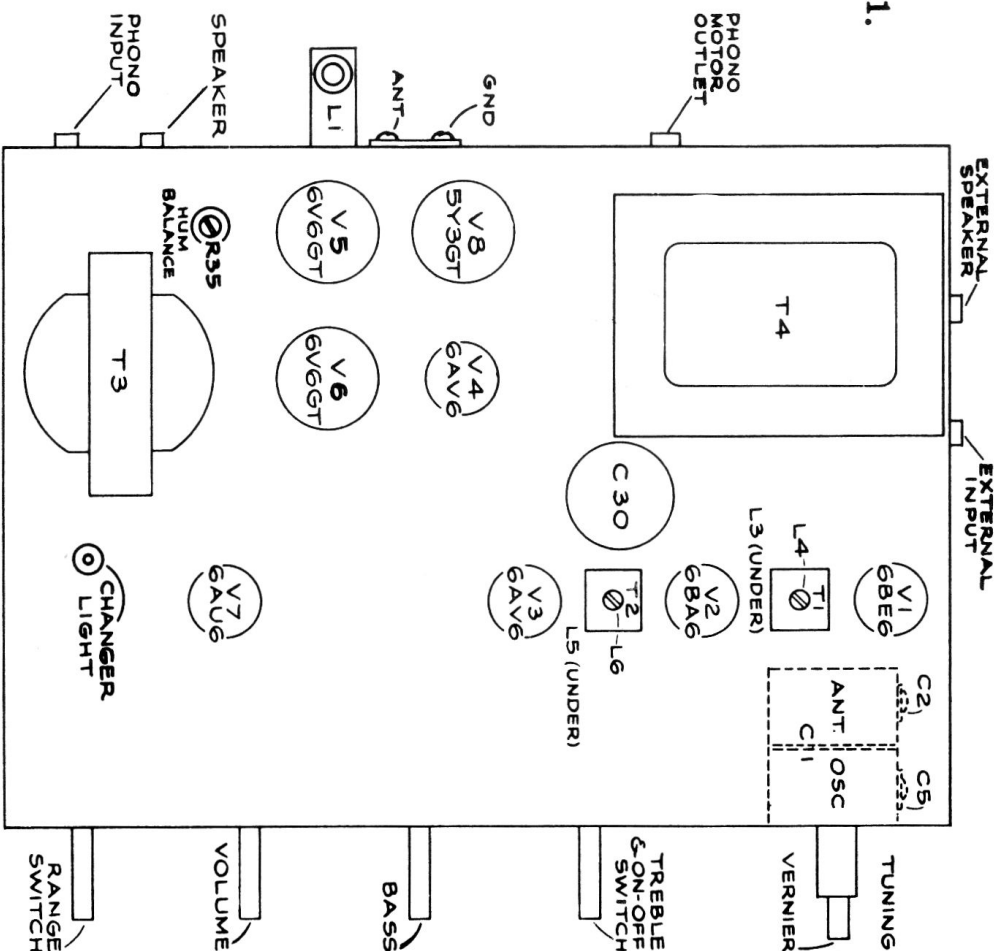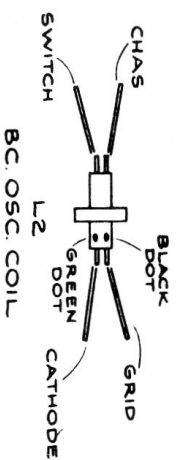

TOP VIEW OF CHASSIS

Sparton 8G1-P "Biscayne"