
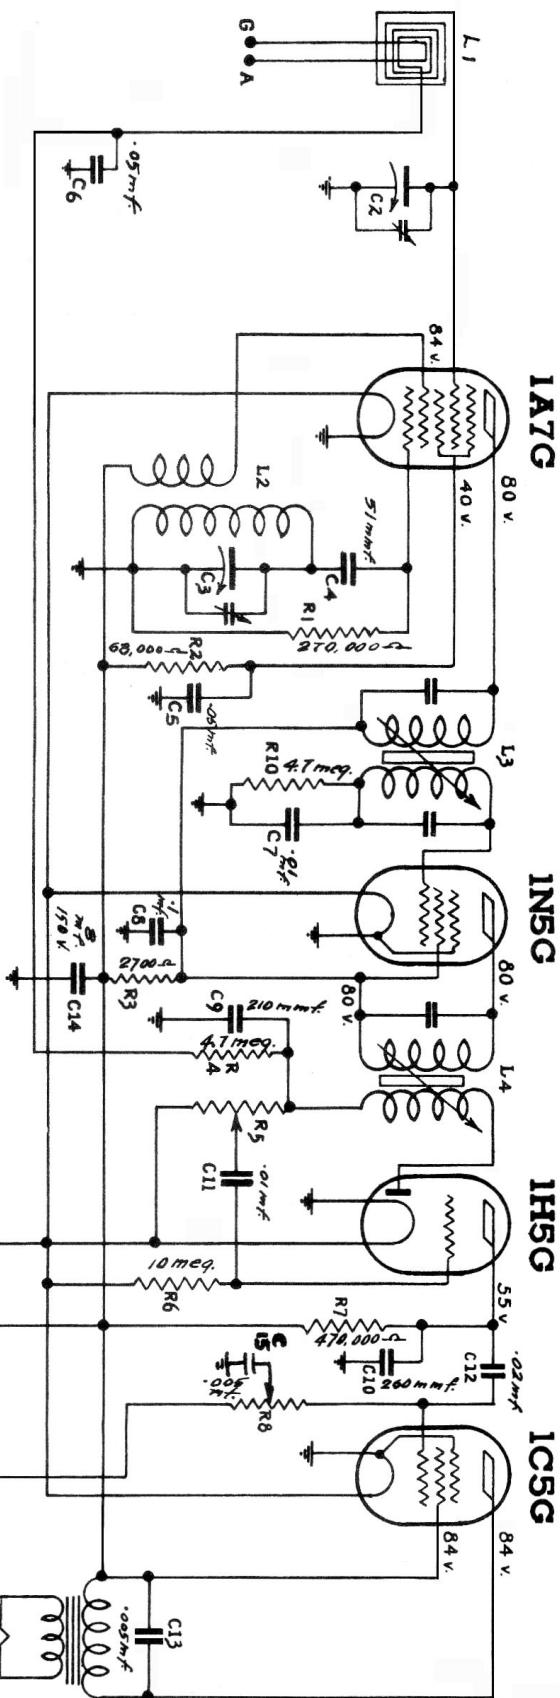


Note: For the above adjustments the volume control and tone control must be full on to the right. The batteries should be securely held in with the two blocks supplied and the cable placed so as not to interfere

with the speaker cone, or the loop. The back may be removed and slid part way under the cabinet to remove batteries or chassis without unsoldering the loop connecting wires.

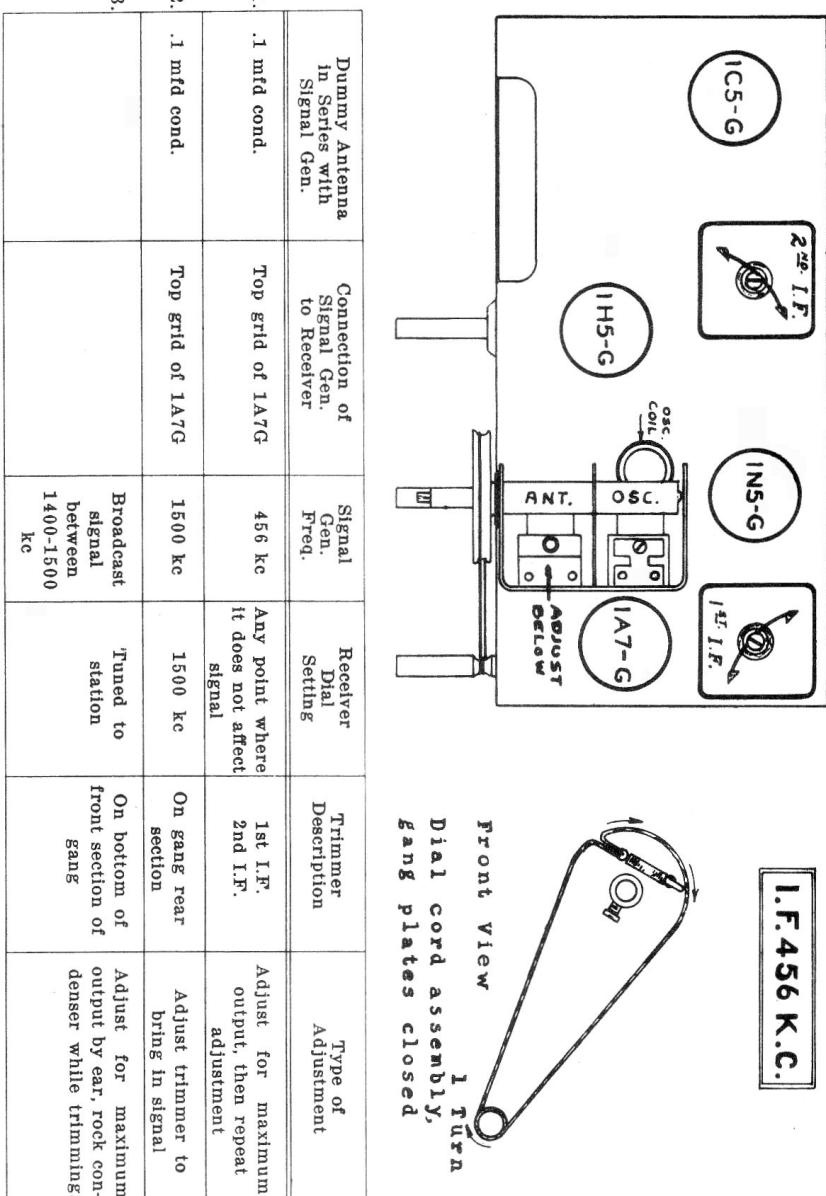

1939-40

MODEL  
R-444

BATTERY OPERATED

STEWART-WARNER

DATA SHEET 75