


HITACHI **SERVICE MANUAL**

TY

No. 476 E

TRK-610 **H, HC, E, E(BS), W, AU**

TN-21VC-177 Chassis (For E, E (BS) W, AU)
TN-21VC-177-1 Chassis (For H, HC)

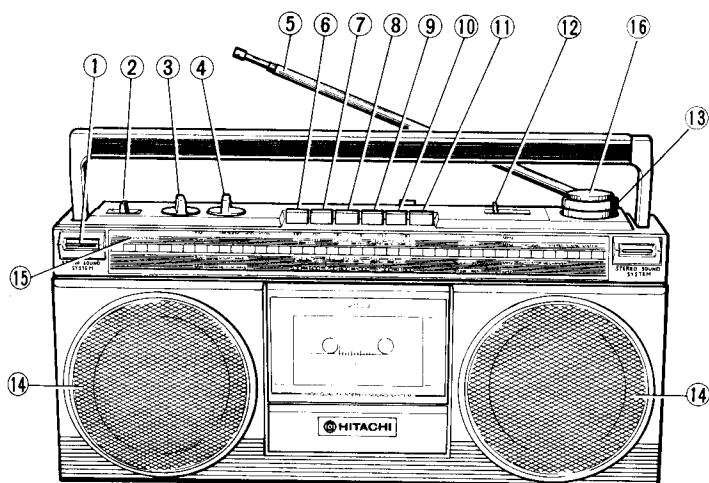

CONTENTS

KEY TO ILLUSTRATIONS	1
SPECIFICATIONS	2
DISASSEMBLY	3
ADJUSTMENT	4 - 6
ADJUSTMENT PARTS LOCATION	6 - 7
INSPECTION OF MECHANISM	7 - 8
LUBRICATION	8
DIAL CORD STRINGING	8
PRINTED WIRING BOARD	9 - 10
CIRCUIT DIAGRAM	11 - 15
BLOCK DIAGRAM	16
EXPLODED VIEW	17 - 18
REPLACEMENT PARTS LIST	19 - 20

KEY TO ILLUSTRATIONS

- | | |
|-------------------------------|------------------------------------|
| ① INNER MICROPHONE (MONAURAL) | ⑨ REWIND BUTTON |
| ② FUNCTION SELECTOR | ⑩ PLAYBACK BUTTON |
| ③ TONE CONTROL | ⑪ RECORD BUTTON |
| ④ VOLUME CONTROL | ⑫ BAND SELECTOR |
| ⑤ ROD ANTENNA (AERIAL) | ⑬ TUNING CONTROL |
| ⑥ PAUSE BUTTON | ⑭ SPEAKERS |
| ⑦ STOP/EJECT BUTTON | ⑮ FM STEREO INDICATOR |
| ⑧ FAST FORWARD BUTTON | ⑯ FINE TUNING CONTROL (W, AU ONLY) |

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT.

RADIO CASSETTE TAPE RECORDER

November 1985

TOYOKAWA WORKS

SAFETY PRECAUTION

The following precautions should be observed when servicing.

1. Since many parts in the unit have special safety-related characteristics, always use genuine Hitachi's replacement parts.
Especially critical parts in the power circuit block should not be replaced with other makers. Critical parts are marked with Δ in the circuit diagram and printed wiring board.
2. Before returning a repaired unit to the customer, the service technician must thoroughly test the unit to ascertain that it is completely safe to operate without danger of electrical shock.

SPECIFICATIONS

General Section

Semiconductors

ICs: 4
Transistors: 11 [For E]
10 [For E (BS), W, AU]
9 [For H, HC]
Diodes: 14 [For W]
13 [For E (BS), (AU)]
9 [For H, HC]
LEDs: 1

Power supply

AC: 220V, 50Hz [For E]
AC: 240V, 50Hz [For E (BS), AU]
AC: 110-127V/200-220V
230-250V, 50/60Hz [For W]
AC: 120V 60Hz [For H, HC]
DC: 9V ("D" CELL or IEC R20
x 6 or equivalent)

Power Consumption

8W

Power Output

5W P.M.P. (AC operation)
1.1W/CH (T.H.D. 10% DC)
10cm, 8 ohms x 2
420 (W) x 201 (H) x 118 (D)
2.9kg (with batteries)

Speakers Dimensions Weight

Radio Section

Circuit System

FM/SW/MW/LW 4-band
[For E, E (BS)]
FM/SW2/SW1/MW 4-band
[For W, AU]
FM/AM 2-band [for H, HC]
Super heterodyne

Tuning Range

FM: 87.5 to 108 MHz } [For E, E (BS)]
SW: 6.0 to 18.0 MHz }
MW: 530 to 1,605 kHz }
LW: 150 to 285 kHz }
FM: 88 to 108 MHz }
SW2: 7.0 to 22.0 MHz } [For W, AU]
SW1: 2.3 to 7.0 MHz }
MW: 530 to 1,605 kHz }
FM: 88 to 108 MHz } [For H, HC]
AM: 530 to 1,605 kHz }
FM: 10.7 MHz }
AM: 465 kHz [For E, E (BS)]
AM: 455 kHz [For W, AU, H, HC]

Intermediate Frequency

Sensitivity

FM: 12 dB (pra.), 5 dB (max.) }
SW: 30 dB (pra.), 22 dB (max.) } [For E, E (BS)]
MW: 50 dB (pra.), 40 dB (max.) }
LW: 55 dB (pra.), 48 dB (max.) }
FM: 12 dB (pra.), 5 dB (max.) }
SW2: 30 dB (pra.), 27 dB (max.) } [For W, AU]
SW1: 47 dB (pra.), 38 dB (max.) }
MW: 50 dB (pra.), 40 dB (max.) }
FM: 12 dB (pra.), 5 dB (max.) } [For H, HC]
AM: 50 dB (pra.), 40 dB (max.) }

Antennas (Aerials)

FM/SW: Rod antenna }
MW/LW: Built-in ferrite core antenna } [For E, E (BS)]
FM/SW2: Rod antenna }
SW1/MW: Built-in ferrite core antenna } [For W, AU]
FM: Rod antenna }
AM: Built-in ferrite core } [For H, HC]

Tape Recorder Section

Tape

Cassette tape (C-30, 60, 90)

Track System

4 track 2 channel stereo

Recording System

AC bias, 52 kHz
[For E, E (BS), W, AU]
DC Bias [For H, HC]

Erasing System

Magnet

Frequency Response

Normal: 60 to 10000 Hz

Signal to Noise Ratio

40 dB [For E, E (BS), W, AU]
35 dB [For H, HC]

Wow and Flutter

0.25% (WRMS)

Cross Talk

Between tracks: 65 dB
Between channels: 40 dB
Mic: 0.6mV, 2.2kohms

Input Sensitivity and Impedance

Line-out 500mV/(Variable), 220 ohms

Output Load Impe- dance

5%

Distortion

60 dB [For E, E (BS), W, AU]
50 dB [For H, HC]

Erasing Ratio

Fast Forwarding or Rewinding time

170sec (using C-60)

Motor

DC motor

Heads

Permalloy

DISASSEMBLY

1. Removing cassette compartment lid (Fig. 1)

Open the cassette compartment lid, and pull out it to the front while applying a force in the direction to the arrow.

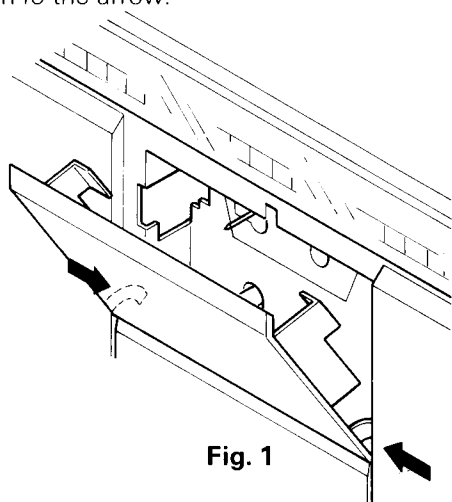


Fig. 1

2. Removing rear case (Fig. 2)

- (1) Remove the battery compartment lid.
- (2) Remove 7 screws (A) and remove the rear case.

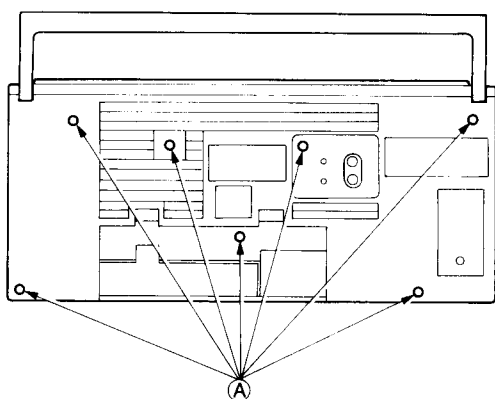


Fig. 2

3. Removing main P.W.B. (Fig. 3)

- (1) Remove VOLUME and TONE control knobs.
- (2) Remove the FUNCTION and BAND SELECTOR knobs, then remove the main PWB.

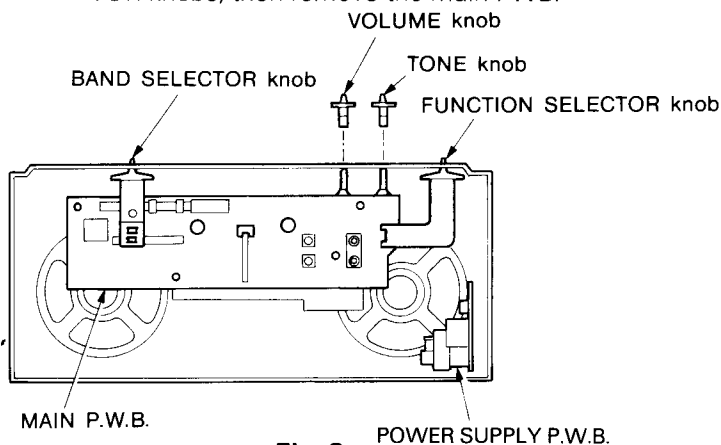


Fig. 3

4. Removing power supply P.W.B. (Fig. 3)

Pull out the power supply PWB.

5. Removing the cassette deck mechanism (Fig. 4)

Disengage 3 claws (B) and remove the cassette deck mechanism.

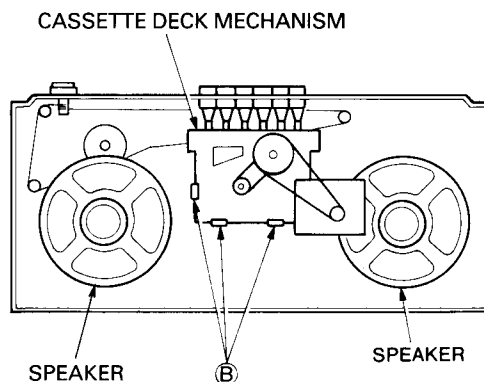


Fig. 4

6. Removing speakers

Remove the rear case, then remove the speakers.

ADJUSTMENT

1. Radio Section FM Section

* () For W. Germany

Step		Adjustment Item	Measuring Instrument and Connection			Genescope or Signal Generator Frequency	Dial Pointer Position	Adjust	Reading			
			Measuring Instrument	Input Terminal	Output Terminal							
1	(1)	FM IF	Turn T202 fully counterclockwise.									
	(2)	S-Curve	● Genescope (10.7 MHz)	L104	C301⊖	10.7 MHz	Highest	T101 T202	Note 1 Note 2			
2	(1)	FM OSC (Covering)	● FM signal generator (400 Hz, 30% dev.) ● Oscilloscope ● VTVM	TP101 (thru FM dummy antenna) (Note 3)	C301⊖	87 MHz * (87.5 MHz)	Lowest	L102	Max.			
	(2)					109 MHz * (108 MHz)	Highest	CT102				
	(3)					Repeat steps (1) and (2)						
3	(1)	FM ANT. (Tracking)							90 MHz	90 MHz	L101	Max
	(2)								106 MHz	106 MHz	CT101	
	(3)								Repeat steps (1) and (2)			
4	(1)	FM MPX. (Multiplex)	● Frequency counter	Connect a 10μF 25V electrolytic capacitor between the No. 2 pin of IC301 and the ground	C301⊖				—	—	RT301	19 kHz ± 20 Hz (Note 4)

AM Section

Step			Adjustment Item	Measuring Instrument and Connection			Genescope or Signal Generator Frequency	Dial Pointer Position	Adjust	Reading
				Measuring Instrument	Input Terminal	Output Terminal				
For E/E (BS)	1	(1)	AM IF	● Genescope (465 kHz)	Ferrite-core antenna (Note 5)	C301⊖	465 kHz	Highest	T201 T203	Note 6
		(2)					Repeat step (1)			
	2	(1)	LW OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	145 kHz	Lowest	L156	Max.
		(2)					290 kHz	Highest	CT157	
		(3)					Repeat steps (1) and (2)			
	3	(1)	LW ANT. (Tracking)				160 kHz	160 kHz	L153	Max.
		(2)					270 kHz	270 kHz	CT153	
		(3)					Repeat steps (1) and (2)			
	4	(1)	MW OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	515 kHz	Lowest	L155	Max.
		(2)					1650 kHz	Highest	CT155	
		(3)					Repeat steps (1) and (2)			
	5	(1)	MW ANT. (Tracking)				600 kHz	600 kHz	L152	Max.
		(2)					1400 kHz	1400 kHz	CT152	
		(3)					Repeat steps (1) and (2)			
	6	(1)	SW OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	TP101 (thru SW. dummy antenna) (Note 7)	C301⊖	5.8 MHz	Lowest	L154	Max.
		(2)					18.5 MHz	Highest	CT154	
		(3)					Repeat steps (1) and (2)			
	7	(1)	SW ANT. (Tracking)				6.5 MHz	6.5 MHz	L151	Max.
		(2)					16 MHz	16 MHz	CT151	
		(3)					Repeat steps (1) and (2)			

For E/E (BS)

Step			Adjustment Item	Measuring Instrument and Connection			Genescope or Signal Generator Frequency	Dial Pointer Position	Adjust	Reading
				Measuring Instrument	Input Terminal	Output Terminal				
For W/AU	8	(1)	AM IF	● Genescope (455 kHz)	Ferrite-core antenna (Note 5)	C301⊖	455 kHz	Highest	T201 T203	Note 6
		(2)					Repeat step (1)			
	9	(1)	MW OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	515 kHz	Lowest	L156	Max.
		(2)					1650 kHz	Highest	CT156	
		(3)					Repeat steps (1) and (2)			
	10	(1)	MW ANT. (Tracking)	● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	600 kHz	600 kHz	L152	Max.
		(2)					1400 kHz	1400 kHz	CT153	
		(3)					Repeat steps (1) and (2)			
	11	(1)	SW1 OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	2.2 MHz	Lowest	L155	Max.
		(2)					7.3 MHz	Highest	CT155	
		(3)					Repeat steps (1) and (2)			
	12	(1)	SW1 ANT. (Tracking)	● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	2.7 MHz	2.7 MHz	L153	Max.
		(2)					6.3 MHz	6.3 MHz	CT152	
		(3)					Repeat steps (1) and (2)			
	13	(1)	SW2 OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	TP101 (thru SW. dummy antenna) (Note 7)	C301⊖	6.7 MHz	Lowest	L154	Max.
		(2)					23 MHz	Highest	CT154	
		(3)					Repeat steps (1) and (2)			
	14	(1)	SW2 ANT. (Tracking)	● VTVM ● Oscilloscope	TP101 (thru SW. dummy antenna) (Note 7)	C301⊖	8 MHz	8 MHz	L151	Max.
		(2)					20 MHz	20 MHz	CT151	
		(3)					Repeat steps (1) and (2)			
For H/HC	15	(1)	AM IF	● Genescope (455 kHz)	Ferrite-core antenna (Note 5)	C301⊖	455 kHz	Highest	T201 T203	Note 6
		(2)					Repeat step (1)			
	16	(1)	MW OSC. (Covering)	● AM signal generator (400 Hz, 30 % mod.) ● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	515 kHz	Lowest	L152	Max.
		(2)					1650 kHz	Highest	CT152	
		(3)					Repeat steps (1) and (2)			
	17	(1)	MW ANT. (Tracking)	● VTVM ● Oscilloscope	Ferrite-core antenna (Note 5)	C301⊖	600 kHz	600 kHz	L151	Max.
		(2)					1400 kHz	1400 kHz	CT151	
		(3)					Repeat steps (1) and (2)			

Note:

1. Feed in a weak signal to L104 from the genescope. Adjust T101 for maximum gain and the waveform indicated in Fig. 5. If the center of the waveform cannot be lined up on the marker, adjust the right/left balance.
2. Use the T202 core to form the S-curve shown in Fig. 6. Adjust the symmetry of A and B about point C for linearity.

Adjust the genescope output so that there is a little noise riding on the leading edge.

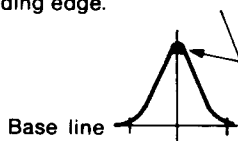


Fig. 5

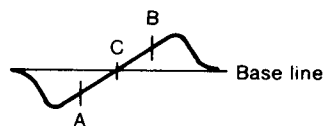


Fig. 6

3. FM dummy antenna is shown in Fig. 7.


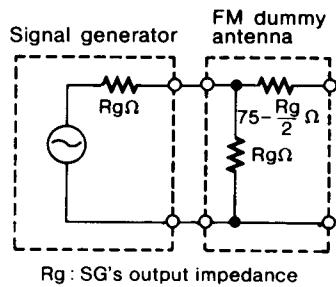


Fig. 7

4. Connect the frequency counter to C301⊖ and connect a 100 kΩ resistor series with the frequency counter.

5. Connect the output of AM signal generator to the loop antenna, and put it near to the ferrite antenna.

6. Feed in a weak signal from the genescope. Adjust T201, T203 for maximum gain and the waveform of Fig. 8.

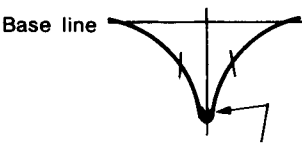

Adjust the genescope output so that there is a little noise riding on the leading edge.

Fig. 8

7. SW. dummy antenna is shown in Fig. 9

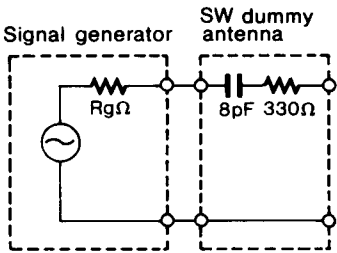


Fig. 9

ADJUSTMENT PARTS LOCATION

● TUNER SECTION

- ★: in case of 4 band set
- ☆: in case of 2 band set

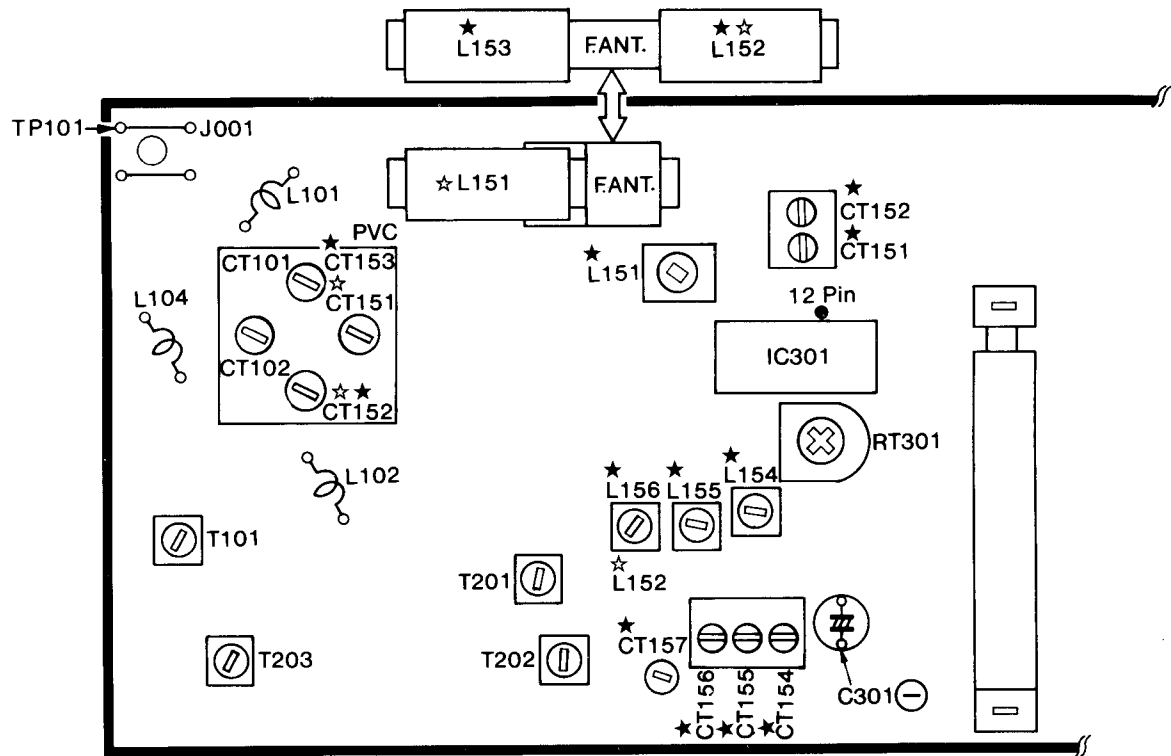


Fig. 10

2. Tape Recorder Section

Perform the following adjustments in the sequence stated after cleaning the head, pressure roller, and capstan with a head cleaning stick moistened in alcohol.

Step	Adjustment Item	Measuring Instrument and Connection			Check Tape	Mode	Adjusted Position	Adjusted Value	Remarks
		Measuring Instrument	Input Terminal	Output Terminal					
1	Tape speed	● Frequency counter	—	Speaker terminal	Tape speed adjustment tape (3 kHz)	Playback	Semivariable resistor in the motor (Fig. 11)	3 kHz ± 20 Hz	Note 1
2	Head azimuth	● VTVM	—	Speaker terminal	Head azimuth adjustment tape (10 kHz)	Playback	Azimuth adjusting screw	Output max.	Note 2

Note:

- 1. Adjust within 30 sec. after heat-running for more than 20 minutes.
- 2. When the maximum values of both channels are different, adjust to the maximum value of the L channel. In this case, the difference between the maximum values of both channels should be within 2 dB.

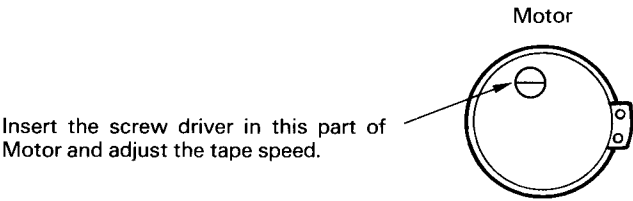



Fig. 11

INSPECTION OF MECHANISM

Item	Checking item		Reference value	Remarks
1	Pressure of pressure roller		300 – 500g	Note
2	Take-up torque		35 – 65 g·cm	
3	Fast forward/Rewind torque		60 – 140 g·cm	
4	Auto-Stop sensor operation force		40 – 75 g	
5	Brake torque		15 g·cm or more	Measured in stop mode
6	Back tension torque	Take-up	1 – 6 g·cm	
		Supply	2 – 6 g·cm	
7	Flywheel thrust gap		0.05 – 0.5 mm	
8	Button operation force	Play button	1.7 kg or less	
		FF button	1.0 kg or less	
		Rewind button	1.0 kg or less	
		Eject button	1.0 kg or less	
		Record button	1.0 kg or less	
		Pause button	1.5 kg or less	

Note:

Set this unit in the playback mode and press the pressure roller in the direction of the arrow using a fan type tension gauge, and measure the pressure when the pressure roller is released from the capstan.

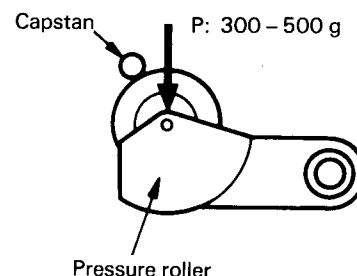**Fig. 12****LUBRICATION**


Lubricate one or two drops of oil to rotating point or lubricate grease to sliding point.

Lubricate the respective parts listed once every 1000 hours or once a year under normal conditions of use. Avoid oiling them excessively, or rotation may become irregular because of oil splashes.

Lubrication point		Oil or Grease
Rotary section	Metal and metal	Pan motor oil (10W-40)
	Mold and metal	Sonic slider oil (# 1600)
Sliding section	Metal and metal	Hitasol (MO-138)
	Mold and mold	White grease (FL-LUBE-A)
	Mold and metal	White grease (FL-LUBE-A)
Spring resonance prevention		Floil (GB-TS-1)


DIAL CORD STRINGING**Stringing method**


- String the dial cord to each rollers according to the order from ① to ⑧ after turned the pulley to the end of clockwise direction.

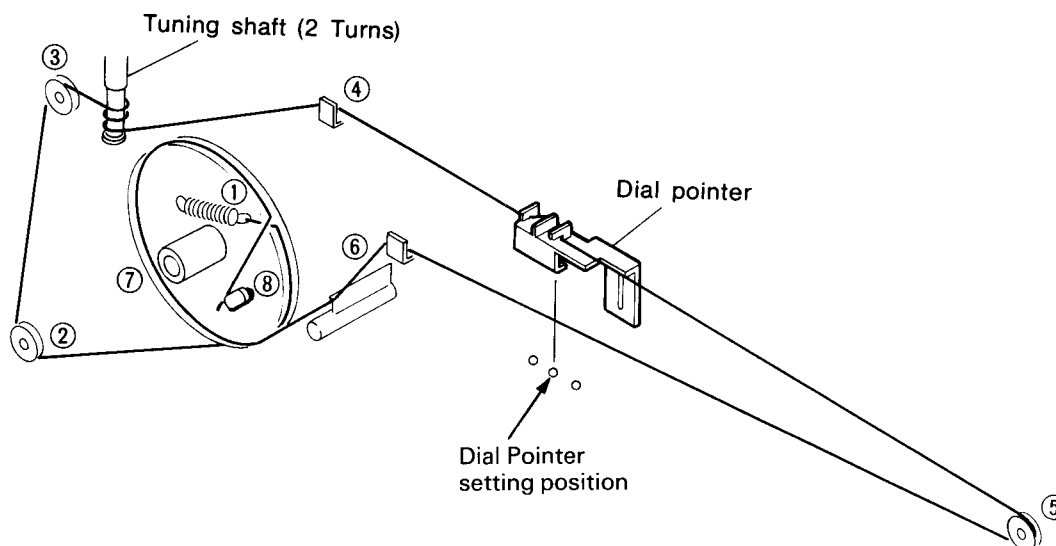**Fig. 13**

PRINTED WIRING BOARD

[For H, HC]

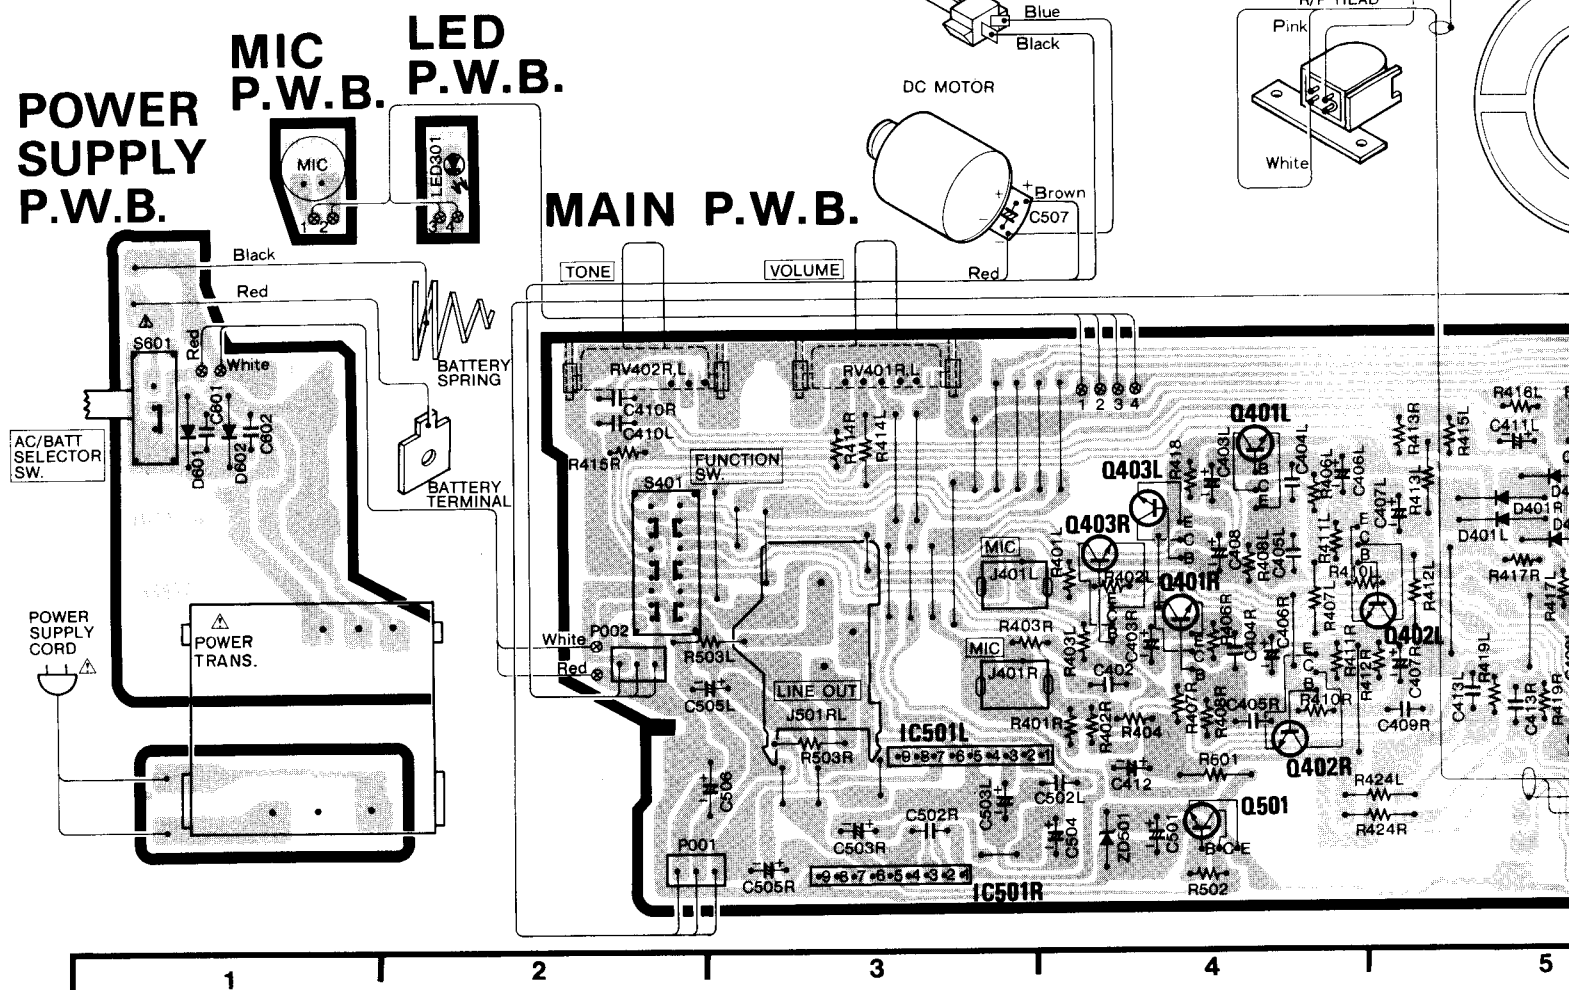

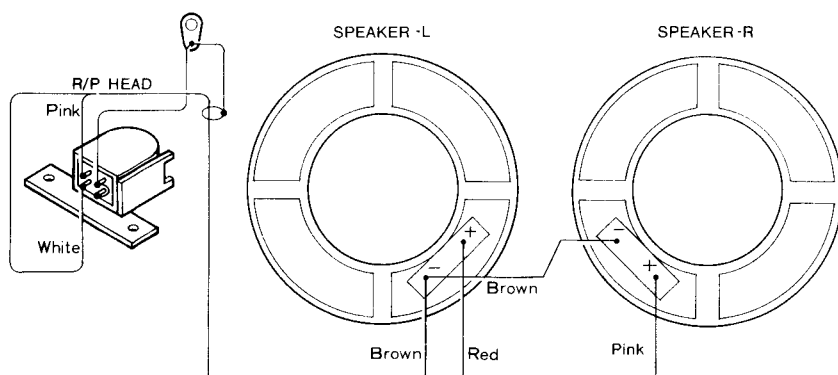

() VOLTAGE : AM

IC201			
1	0.5V(1.6V)	9	1.4V
2	0.5V(1.6V)	10	4.5V
3	(2.3V)	11	4.5V
4	(2.3V)	12	1.4V
5	(0.9V)	13	1.4V
6	(0.9V)	14	1.4V
7	0V	15	1.4V
8	0V	16	4.5V

IC301			
1	4.5V	9	0.5V (1.6V)
2	1.5V	10	1.3V
3	1.4V	11	1.3V
4	2.2V	12	1.1V
5	2.1V	13	1.3V
6	2.9V	14	1.3V
7	0V	15	1.3V
8	0V	16	1.8V

IC501LR															
1	0V	2	3.0V	3	0.6V	4	0.6V	5	0V	6	0V	7	3.9V	8	9V
9	9V	10	3.0V	11	0.6V	12	0.6V	13	0V	14	0V	15	3.9V	16	9V
17	9V	18	3.0V	19	0.6V	20	0.6V	21	0V	22	0V	23	3.9V	24	9V
25	9V	26	3.0V	27	0.6V	28	0.6V	29	0V	30	0V	31	3.9V	32	9V
33	9V	34	3.0V	35	0.6V	36	0.6V	37	0V	38	0V	39	3.9V	40	9V
41	9V	42	3.0V	43	0.6V	44	0.6V	45	0V	46	0V	47	3.9V	48	9V
49	9V	50	3.0V	51	0.6V	52	0.6V	53	0V	54	0V	55	3.9V	56	9V
57	9V	58	3.0V	59	0.6V	60	0.6V	61	0V	62	0V	63	3.9V	64	9V

Q101			
B	1.6V	C	4.4V
E	0.9V		


Q102			
B	1.5V	C	4.4V
E	0.8V		

Q401LR			
B	0.6V	C	1.6V
E	0V		

Q402LR			
B	0.6V	C	2.1V
E	0V		

Q403LR			
B	0V	C	0V
E	0V		


Q501LR			
B	5.9V	C	9V
E	5.2V		

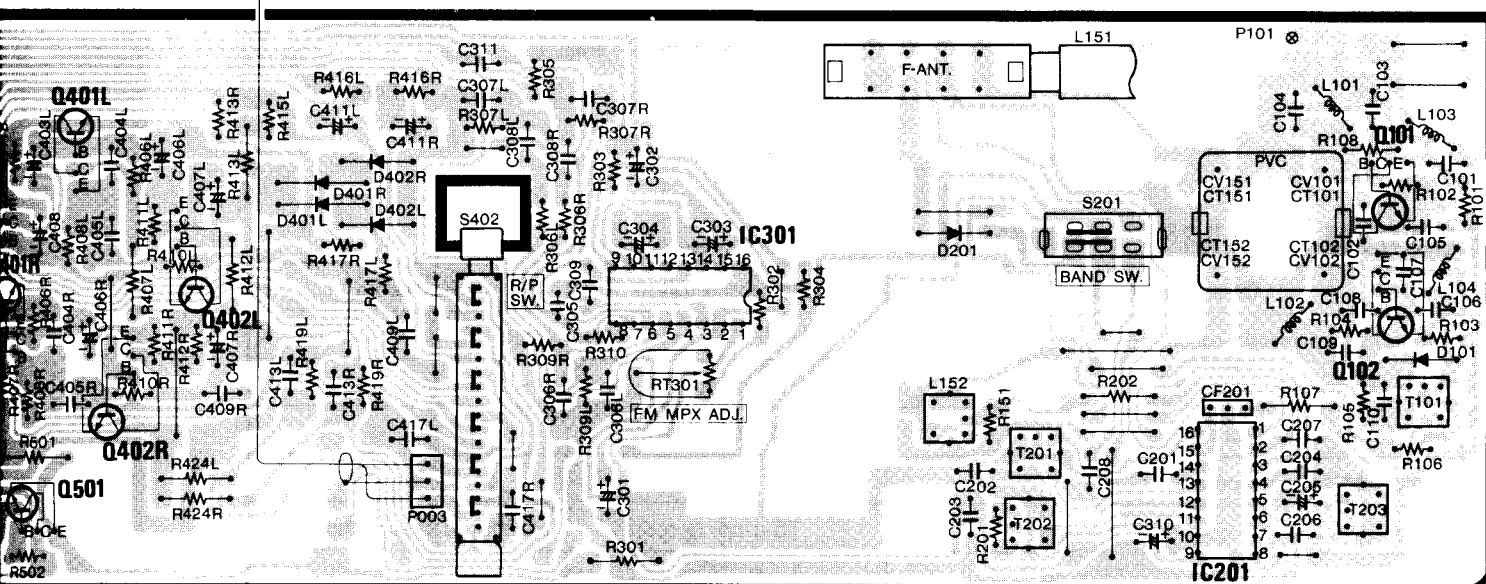


[Except H, HC]

POWER MIC LED
SUPPLY P.W.B. P.W.B.
P.W.B.

MAIN P.W.B.

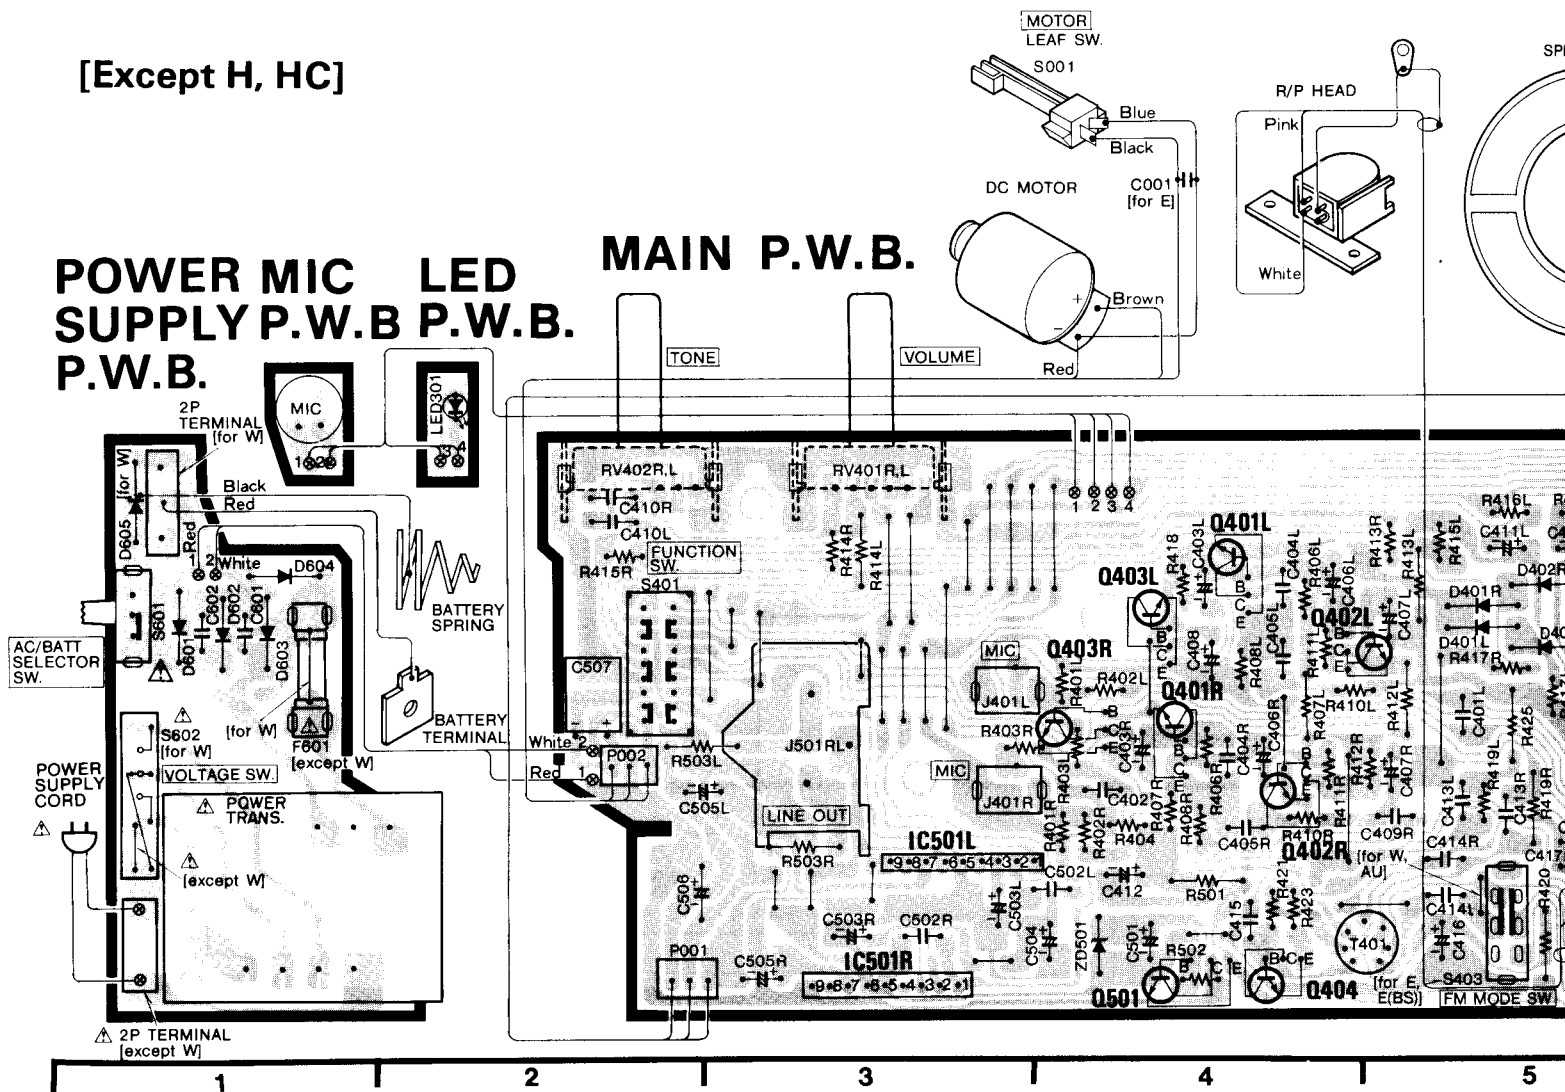

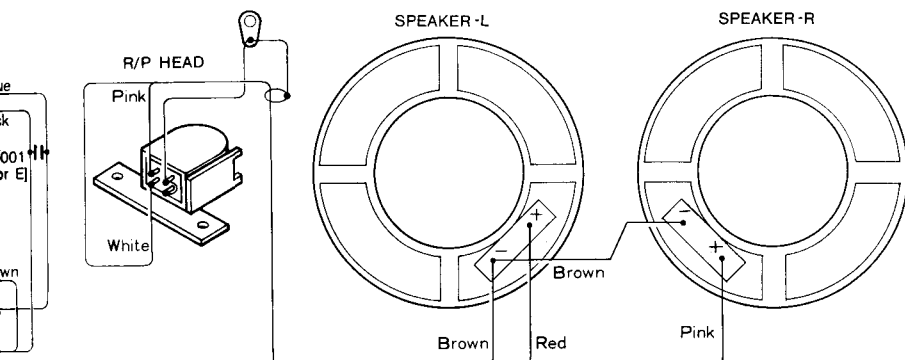

() VOLTAGE : AM

IC201			
1	0V (1.6V)	9	1.4V
2	0V (1.6V)	10	4.5V
3	(2.3V)	11	4.5V
4	(2.3V)	13	1.4V
5	(0.9V)	12	1.4V
6	(0.9V)	14	1.4V
7	—	15	1.4V
8	0V	16	4.5V

IC301			
1	4.5V	9	0V (1.6V)
2	1.5V	10	1.3V
3	1.4V	11	1.3V
4	2.2V	12	1.1V
5	2.1V	13	1.3V
6	2.9V	14	1.3V
7	0V	15	1.3V
8	0V	16	1.8V

IC501LR			
1	0V		
2	3.0V		
3	0.6V		
4	0.6V		
5	0V		
6	0V		
7	3.9V		
8	—		
9	9V		

Q101	
B	1.6V
C	4.4V
E	0.9V

Q102	
B	1.5V
C	4.4V
E	0.8V

Q151	
B	(1.1V)
C	(4.6V)
E	(0.4V)


Q401LR	
B	0.6V
C	1.6V
E	0V

Q402LR	
B	0.6V
C	2.1V
E	0V


Q403LR	
B	0V
C	0V
E	0V

Q404 REC	
B	(4.5V)
E	(0.2V)

Q501	
B	5.9V
C	9V
E	5.2V

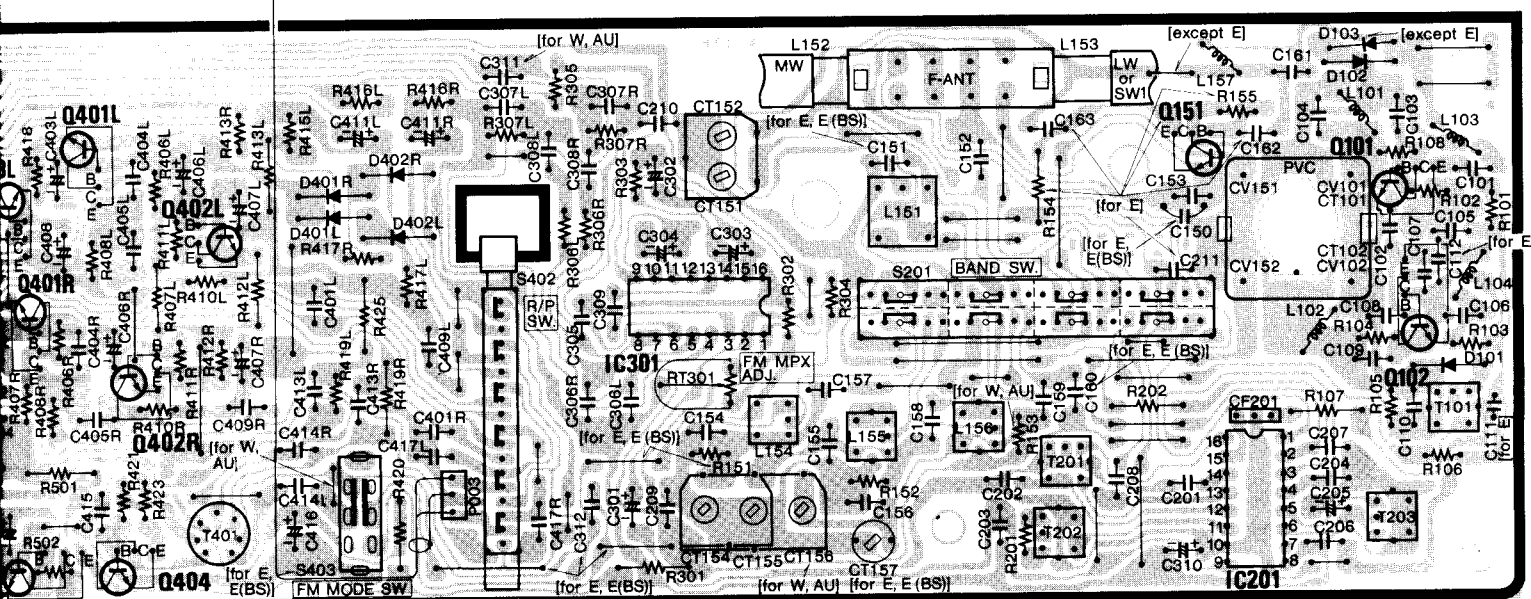


CIRCUIT DIAGRAM

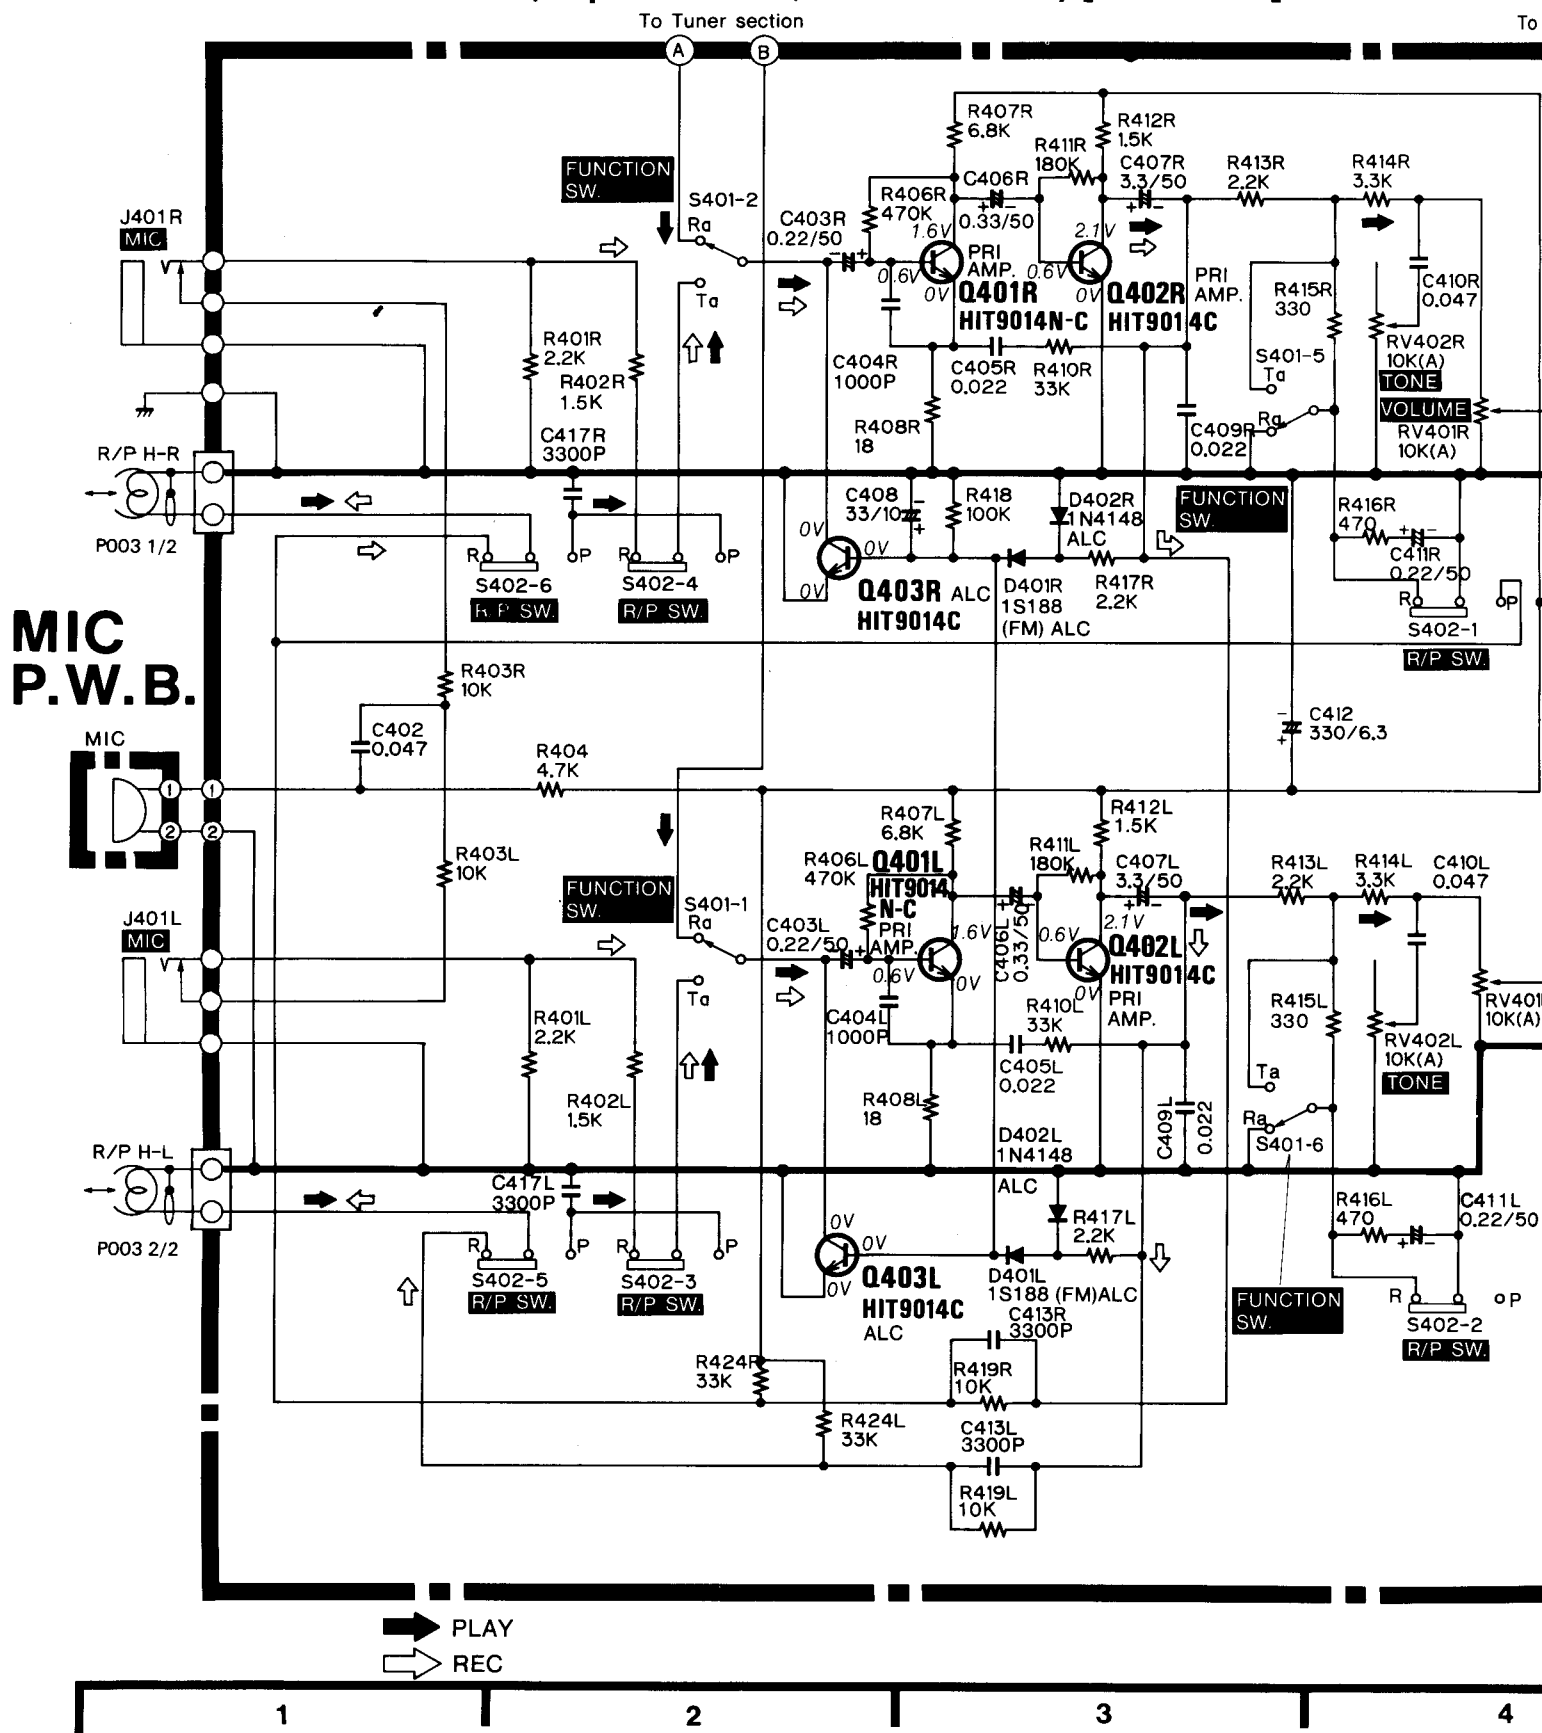MAIN P.W.B. (Tape recorder/Audio section) [For H, HC]


CAUTION

Use the electrolytic capacitors with explosion-proof valve when the diameter of them is more than 10 mm ϕ .

r H, HC]

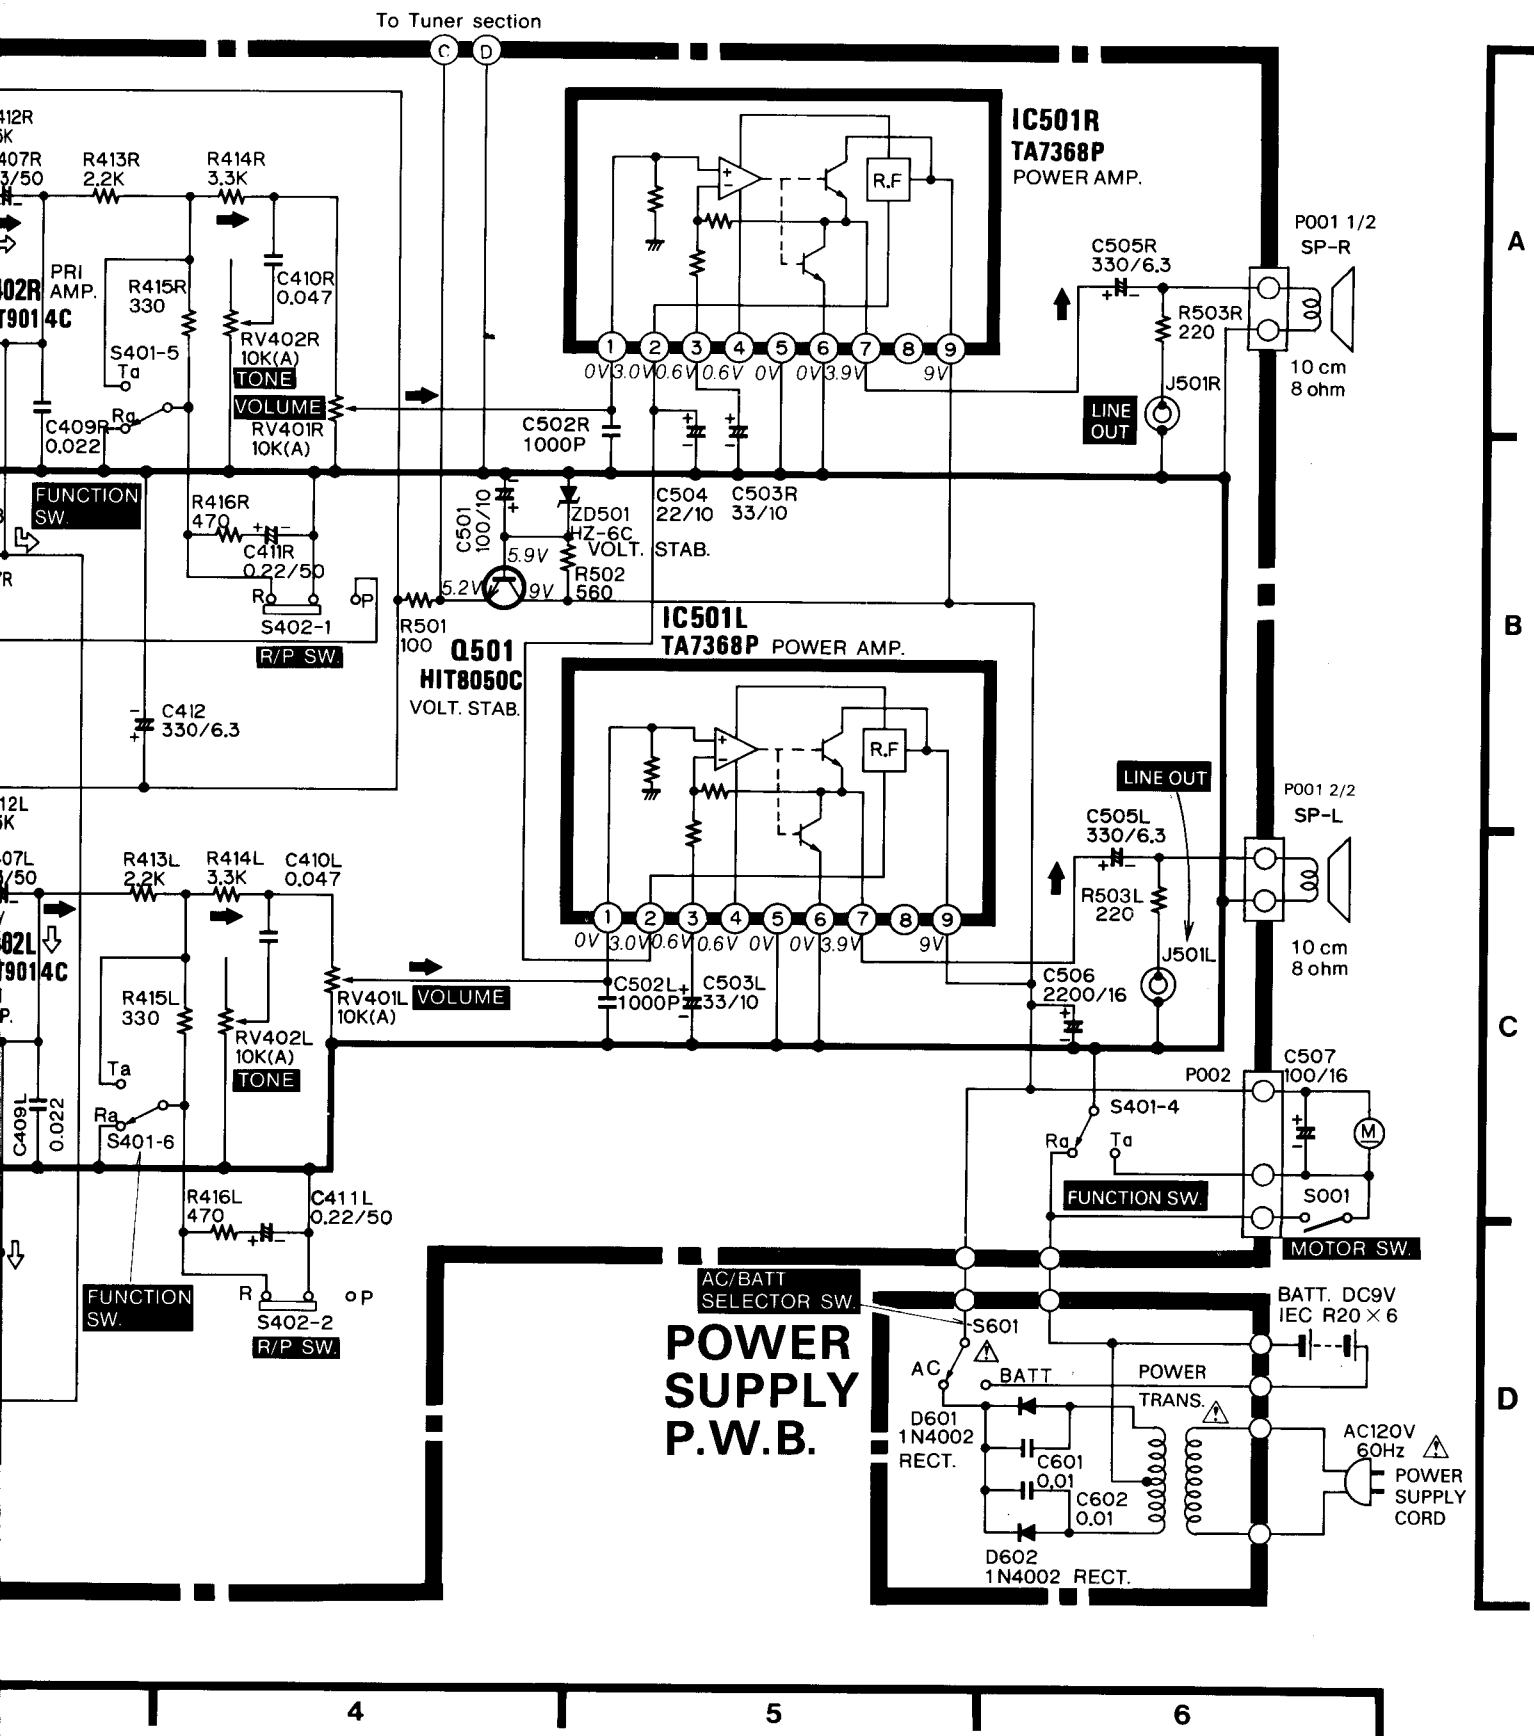


MAIN P.W.B. (Tape recorder/Audio section) [Except H, HC]

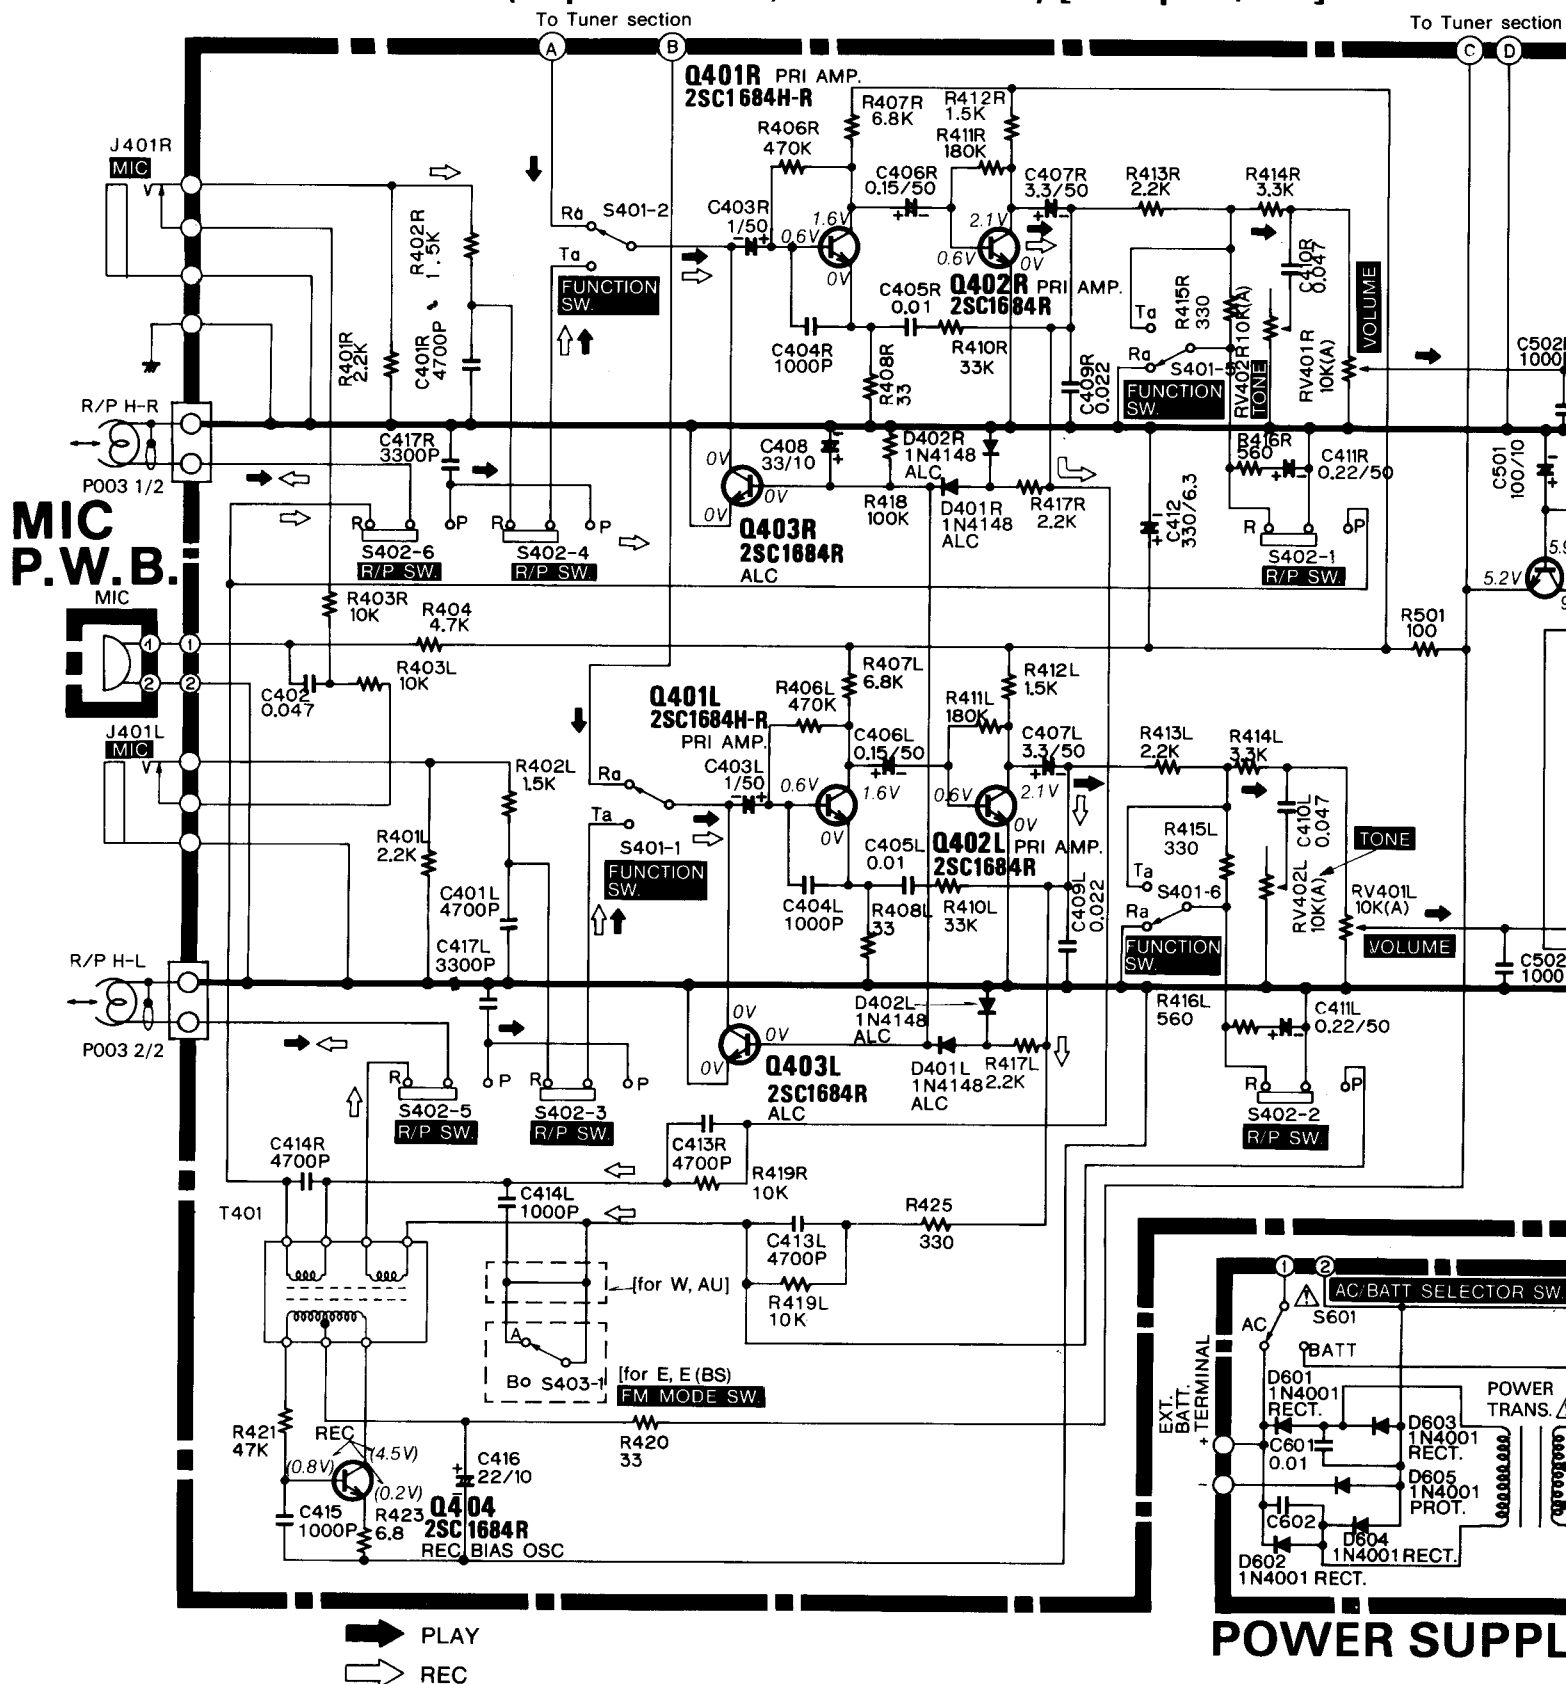

CAUTION

Use the electrolytic capacitors with explosion-proof valve when the diameter of them is more than 10 mm ϕ .

except H, HC]

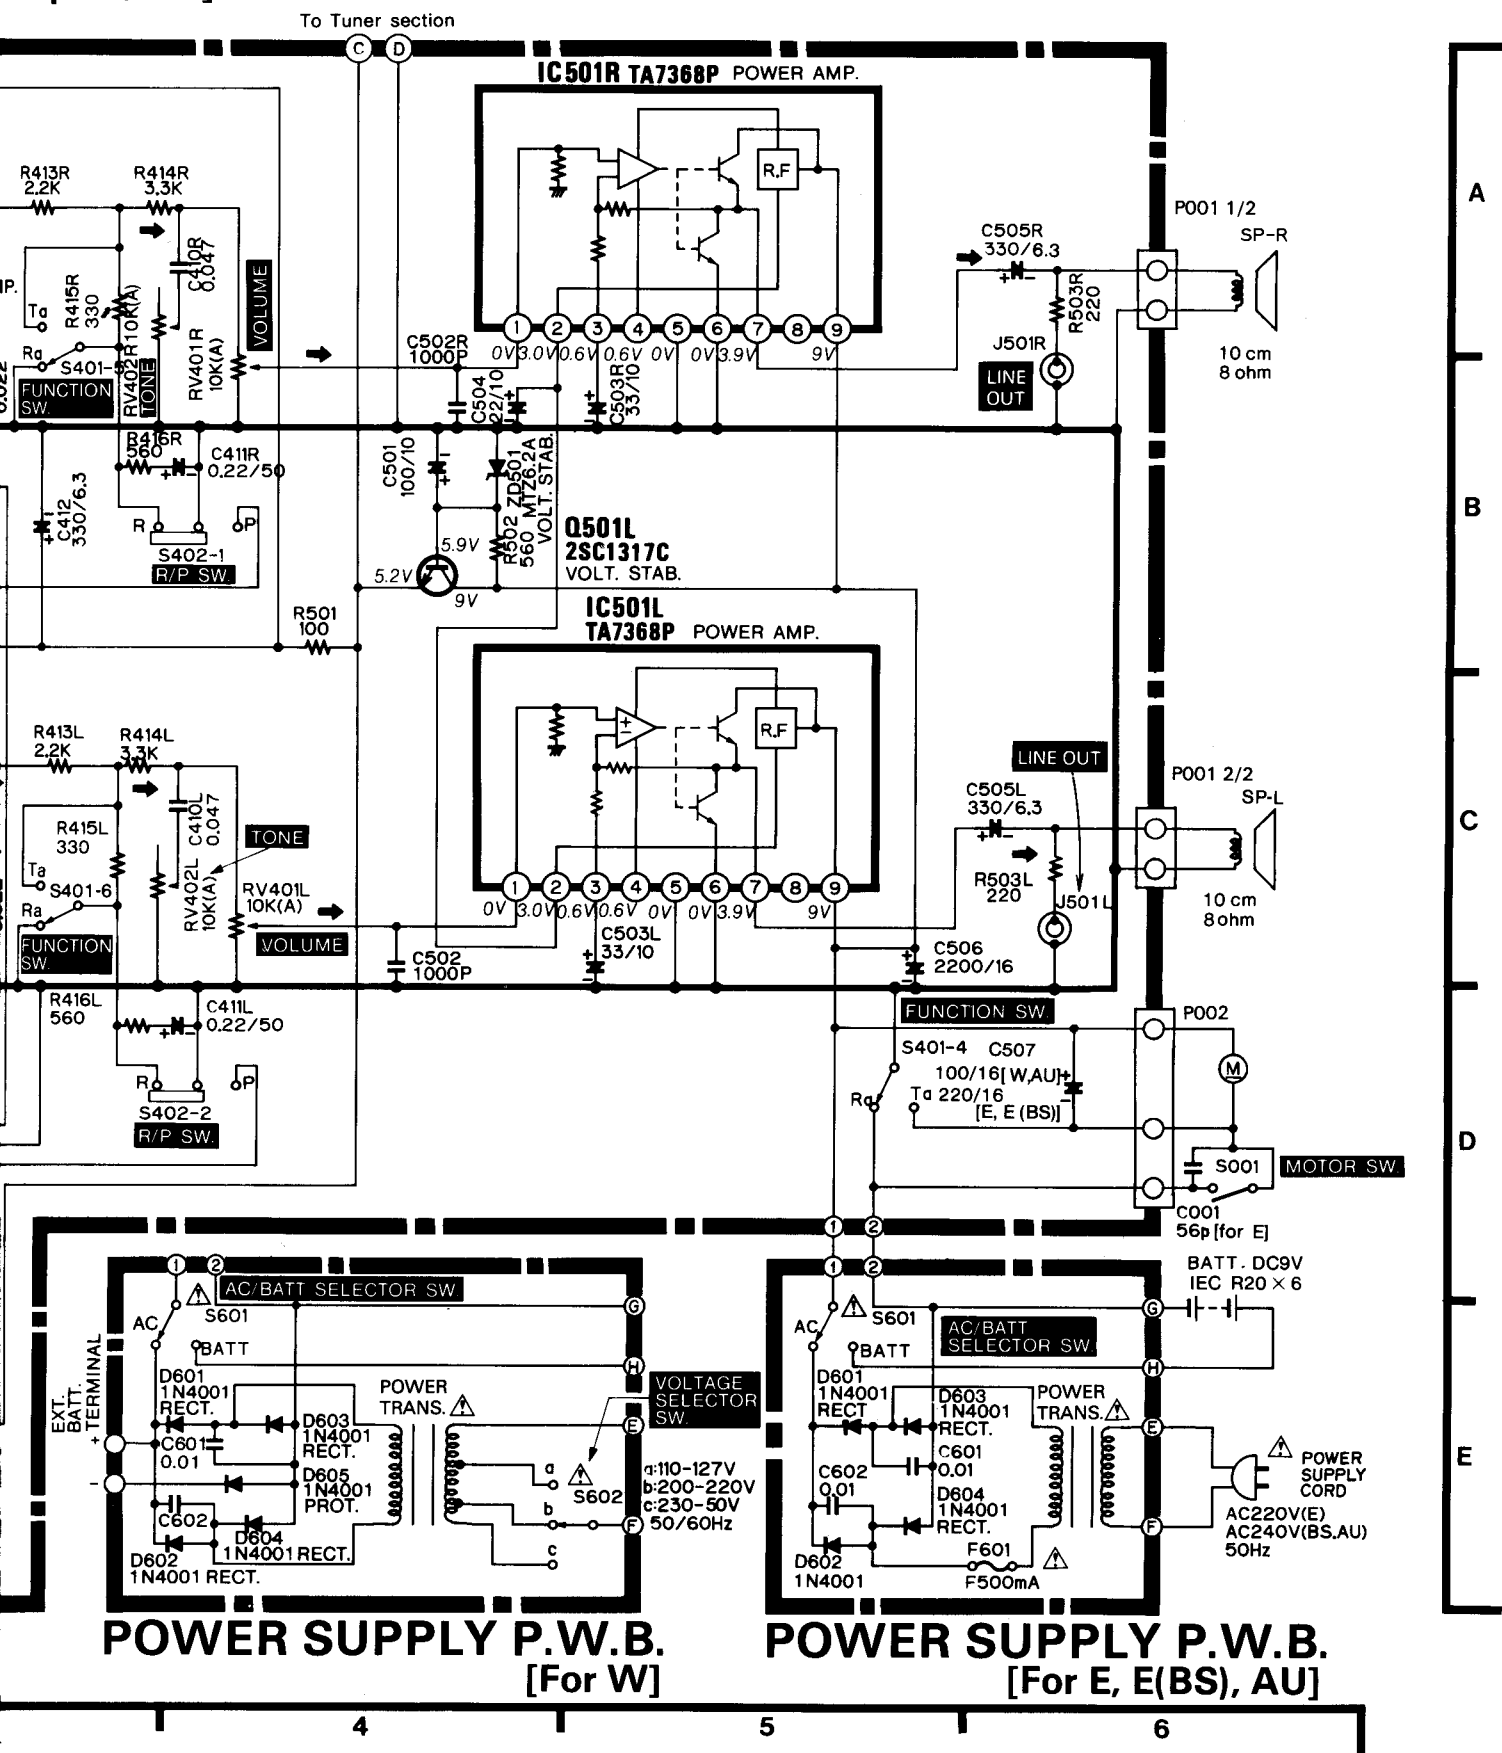


CIRCUIT DIAGRAM

CAUTION

Use the ele
the diameter

MAIN P.W.B. (Tuner section) [For E, E(BS)]

() VOLTAGE: AM

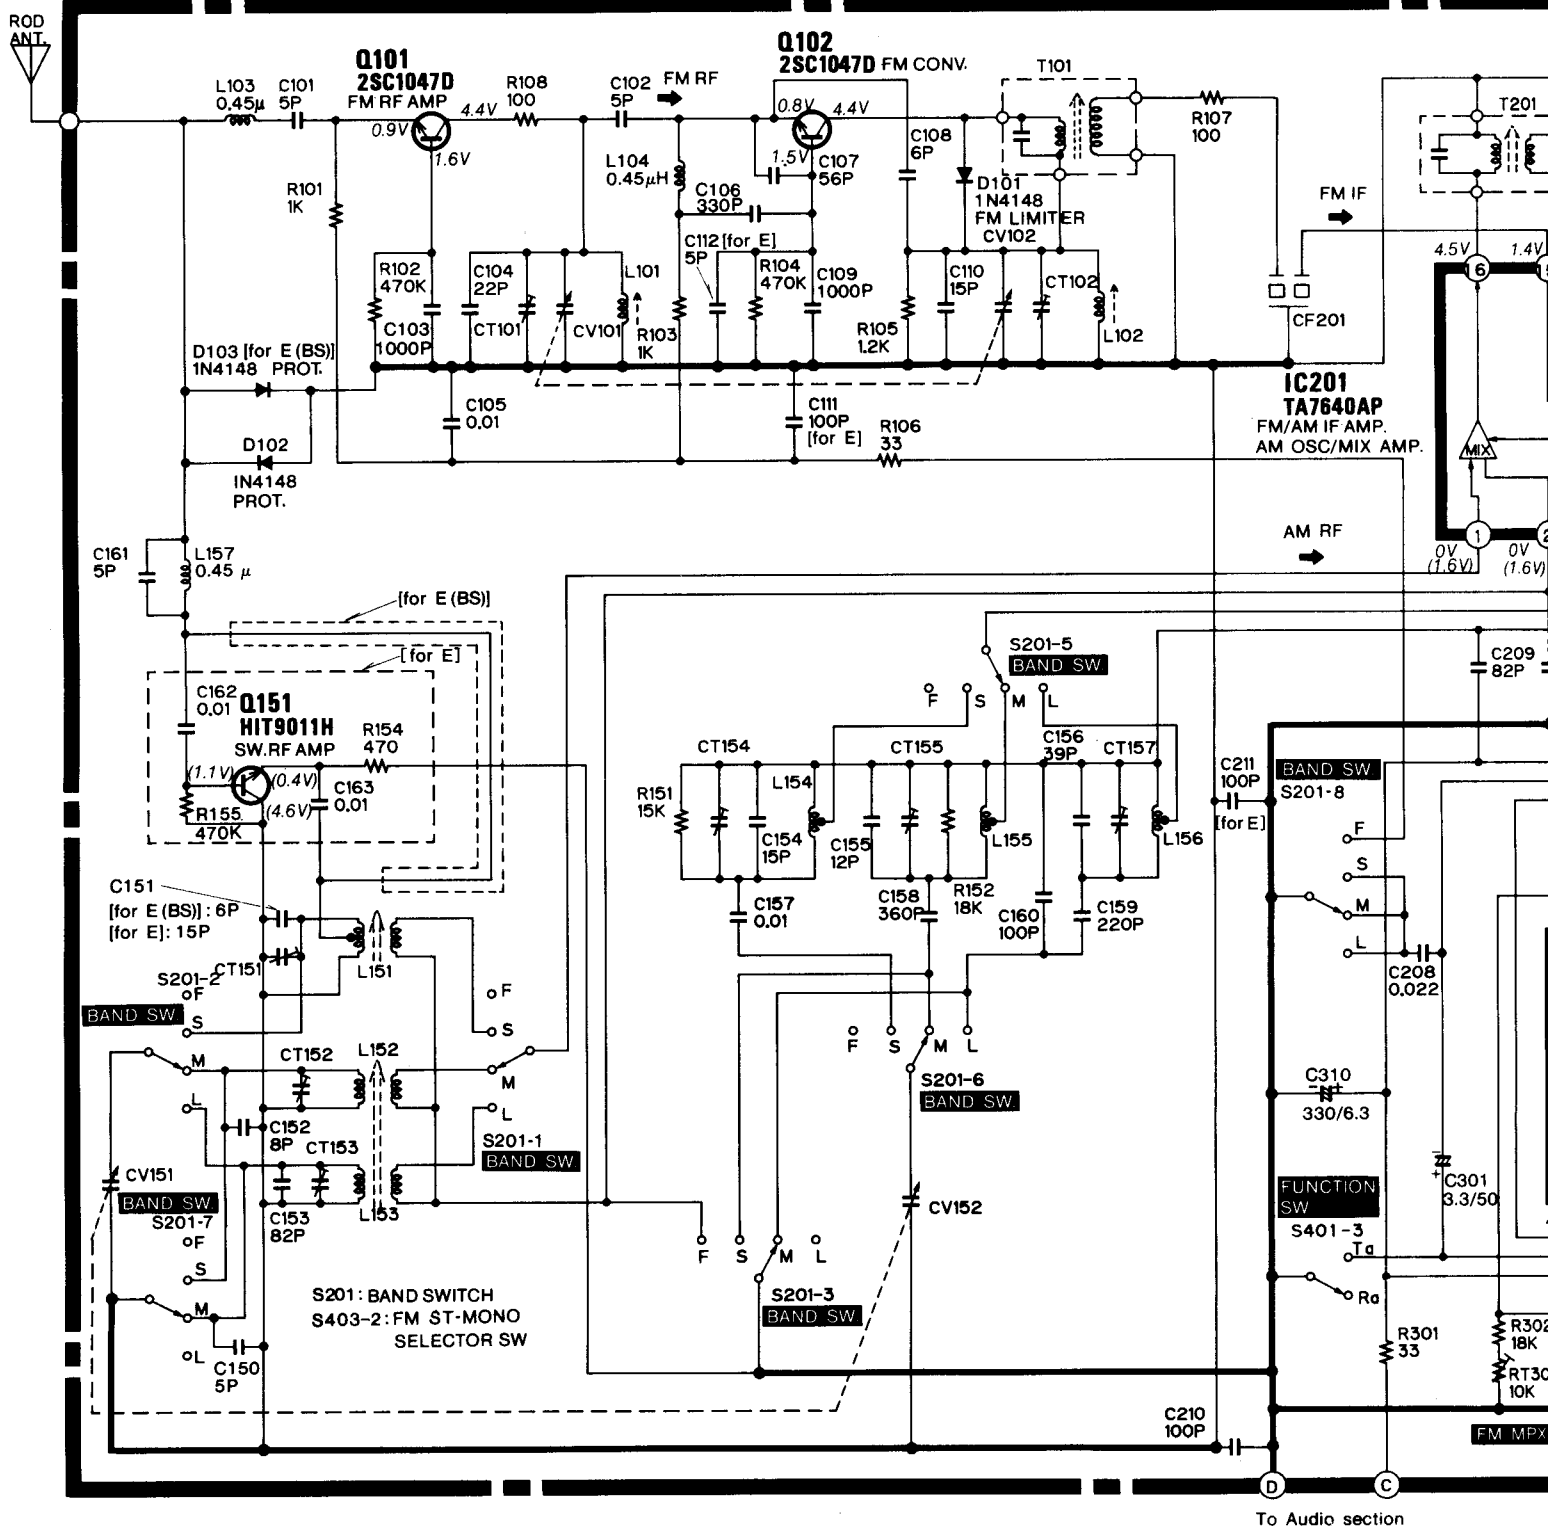


To Audio section

CAUTION

Use the electrolytic capacitors with explosion-proof valve when the diameter of them is more than 10 mm ϕ .

() VOLTAGE: AM

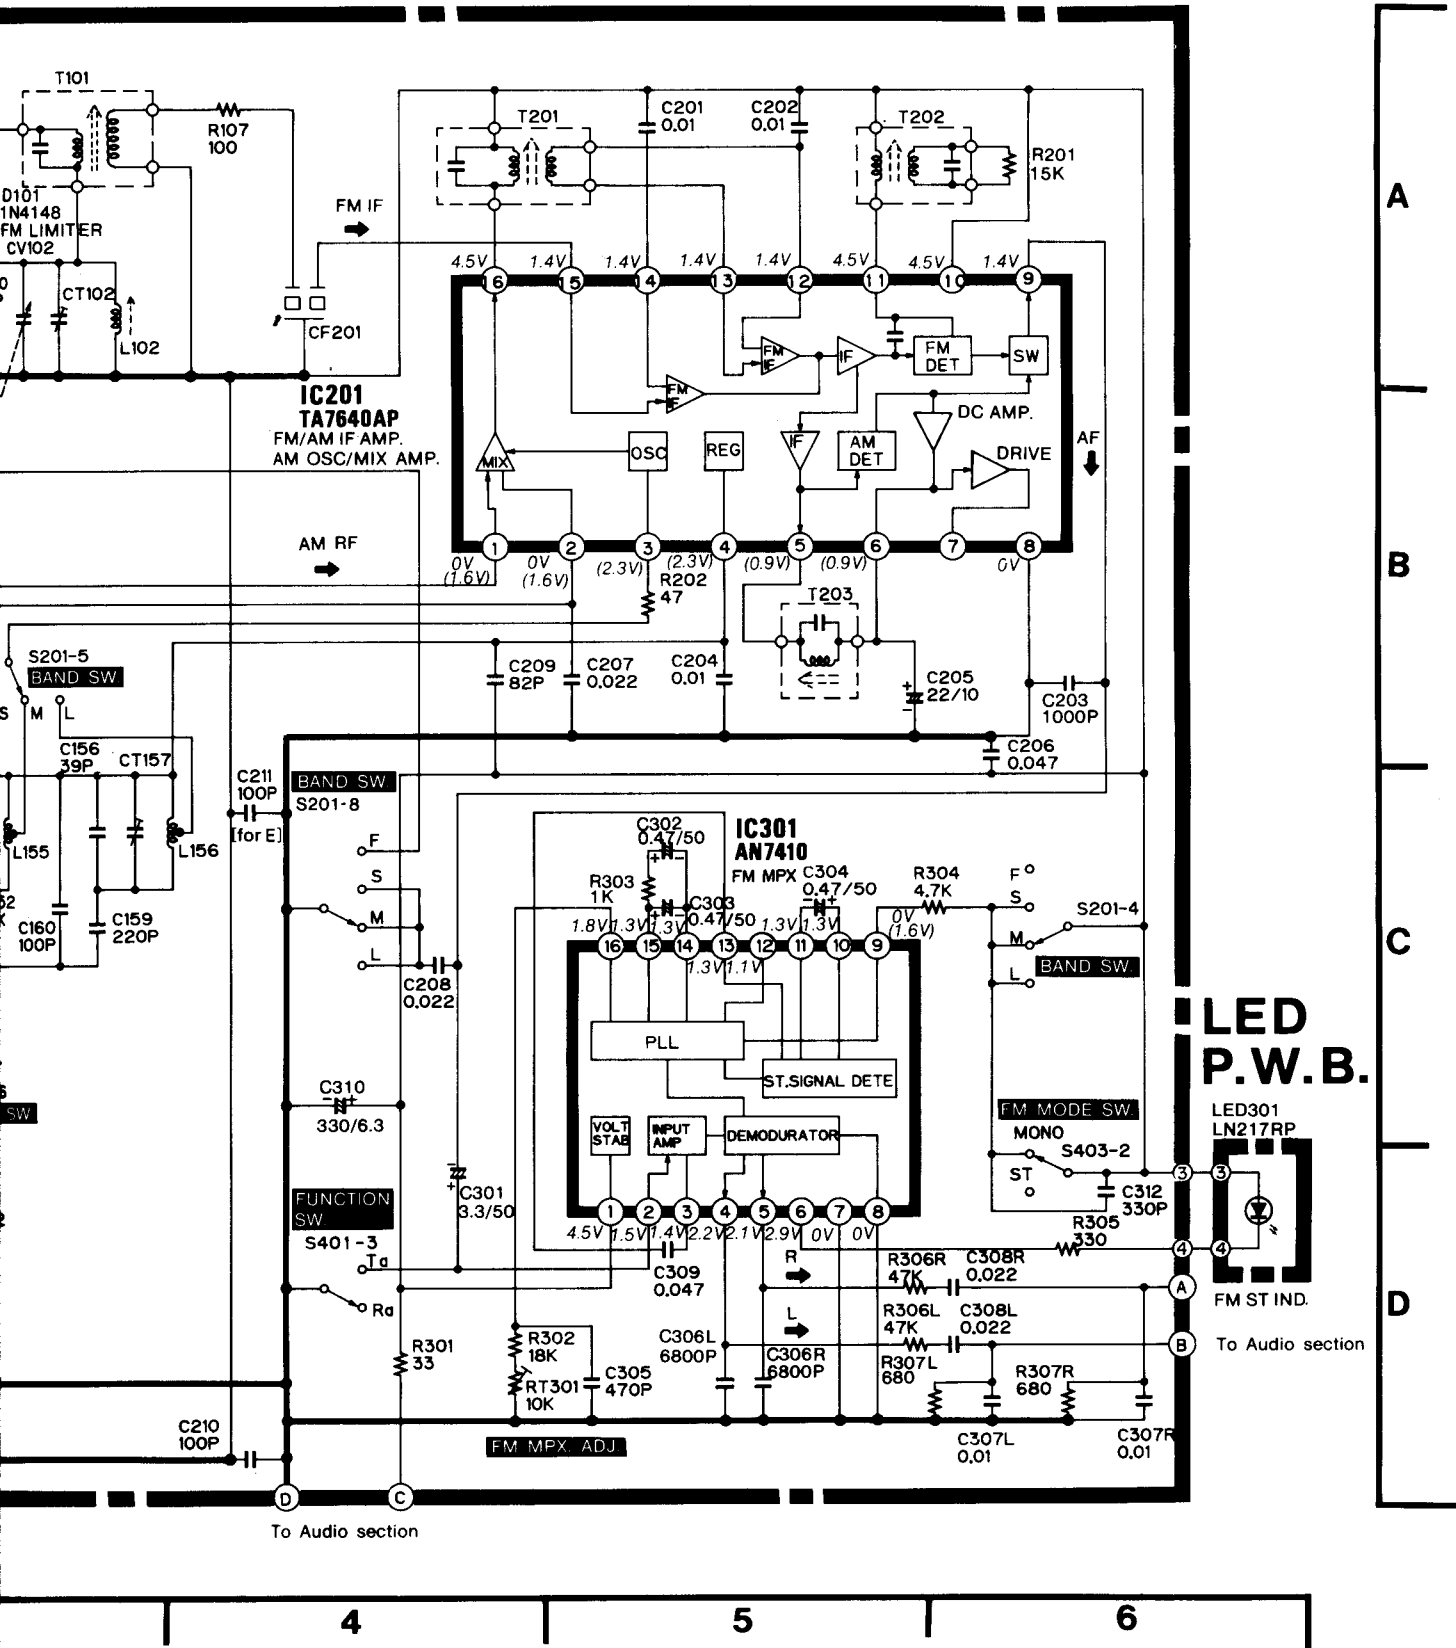


MAIN P.W.B. (Tuner section) [For W, AU]

() VOLTAGE: AM

CAUTION

Use the electro
the diameter of

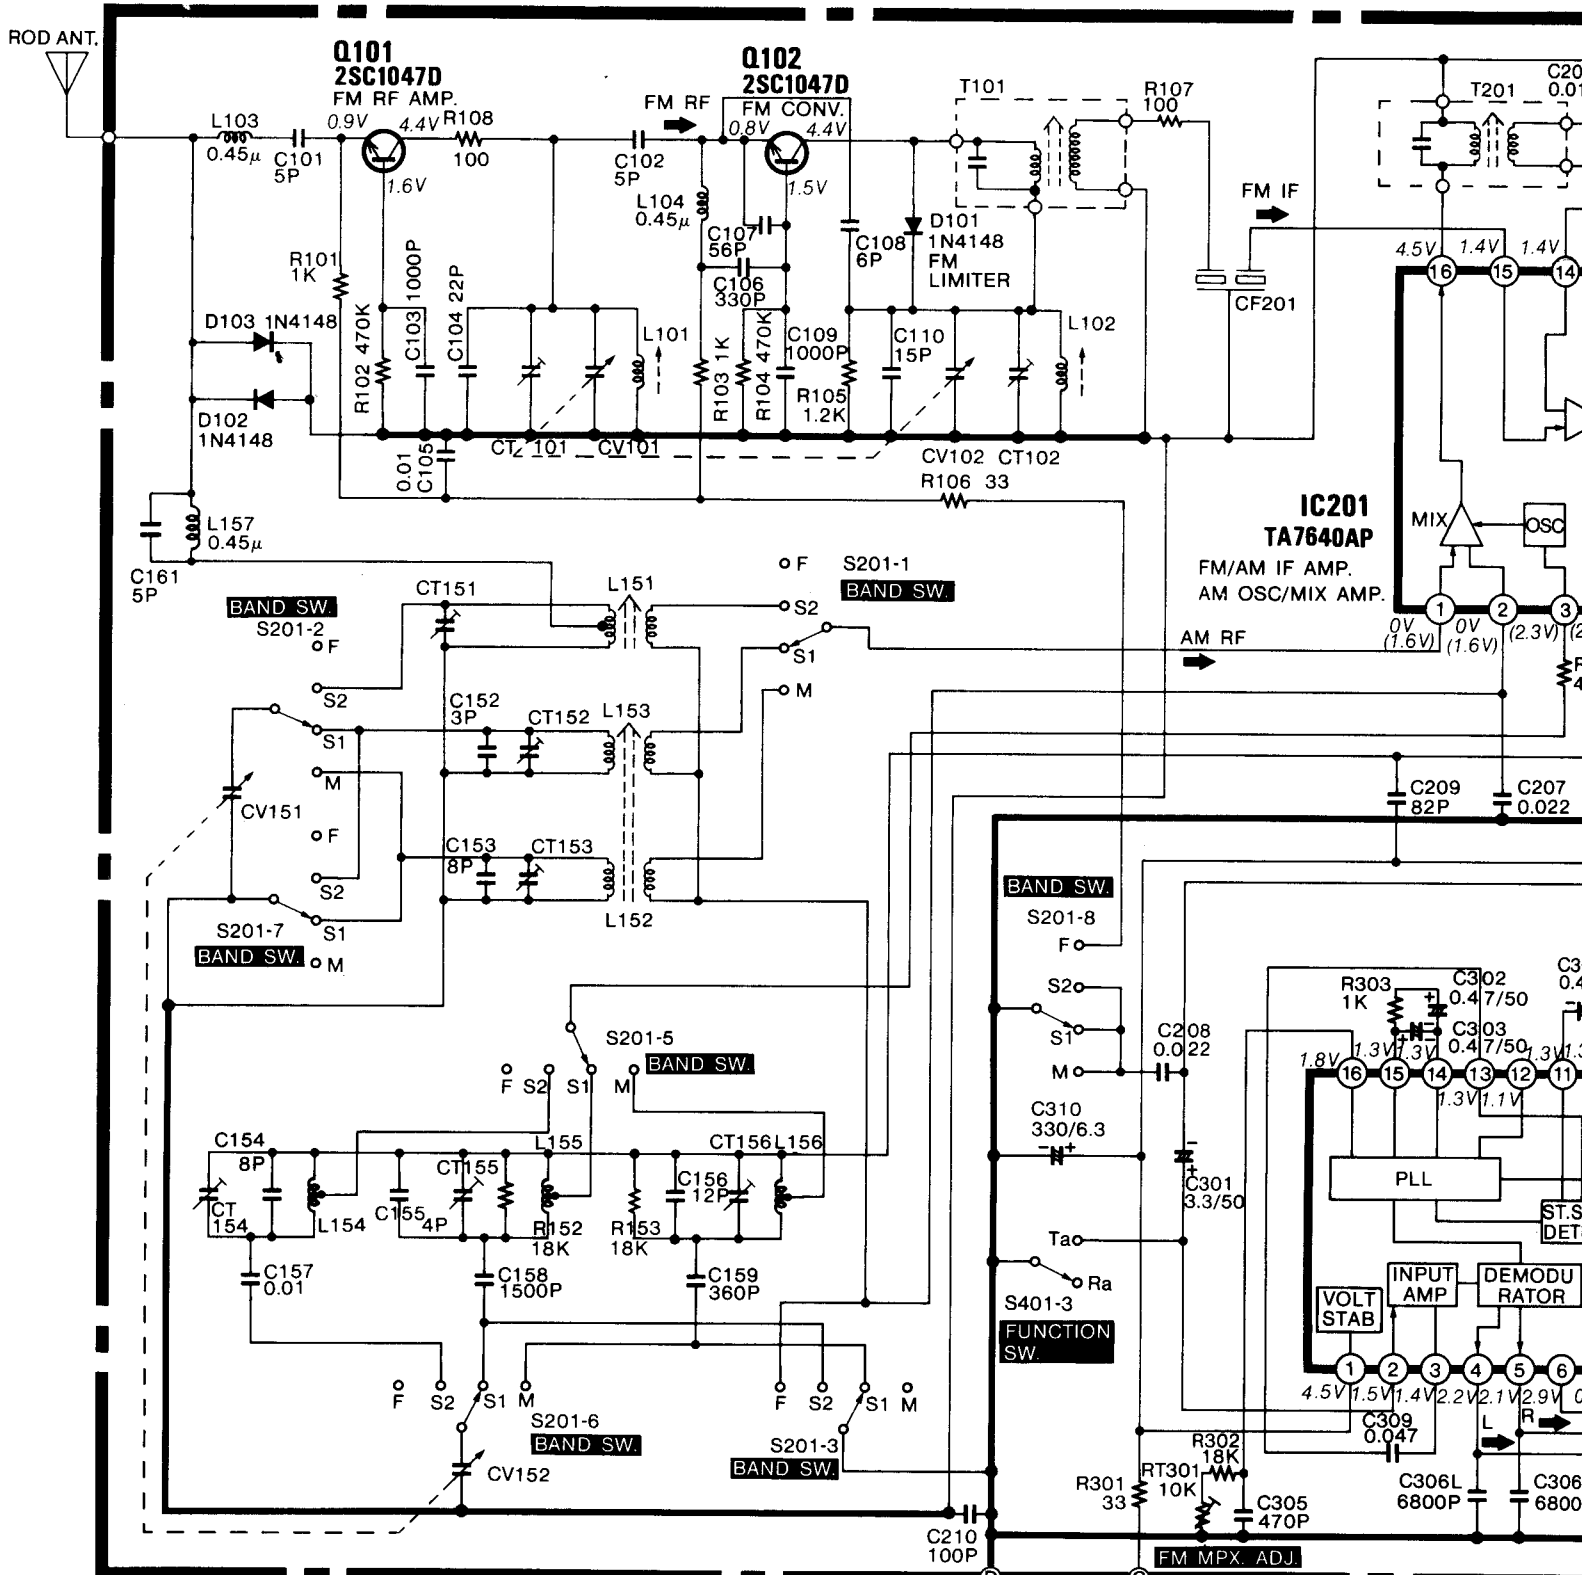

1

2


3

4

CAUTION

Use the electrolytic capacitors with explosion-proof valve when the diameter of them is more than 10 mm ϕ .

() VOLTAGE: AM

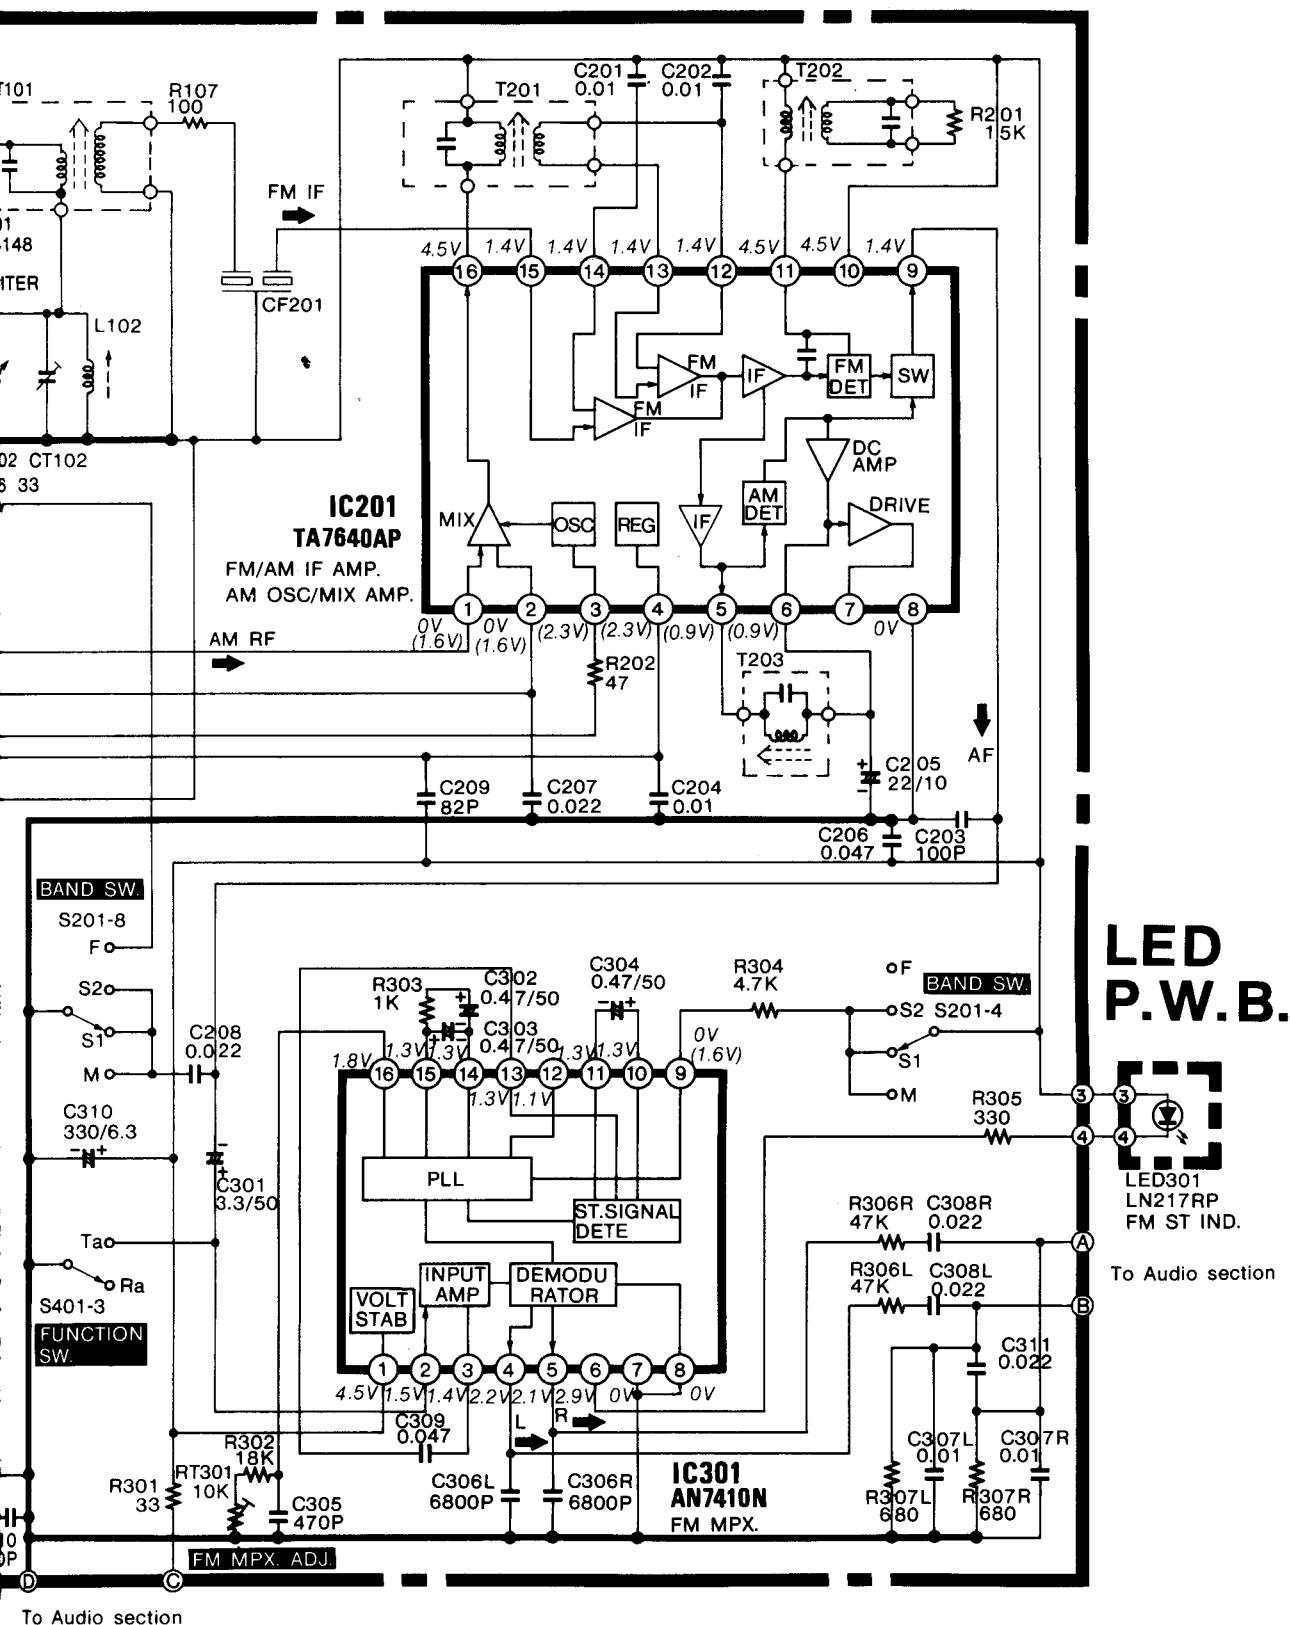

A

B

C

D

E


CAUTION

Use the elec
the diameter

MAIN P.W.B. (Tuner section) [For H, HC]

() VOLTAGE: AM

ROD ANT.

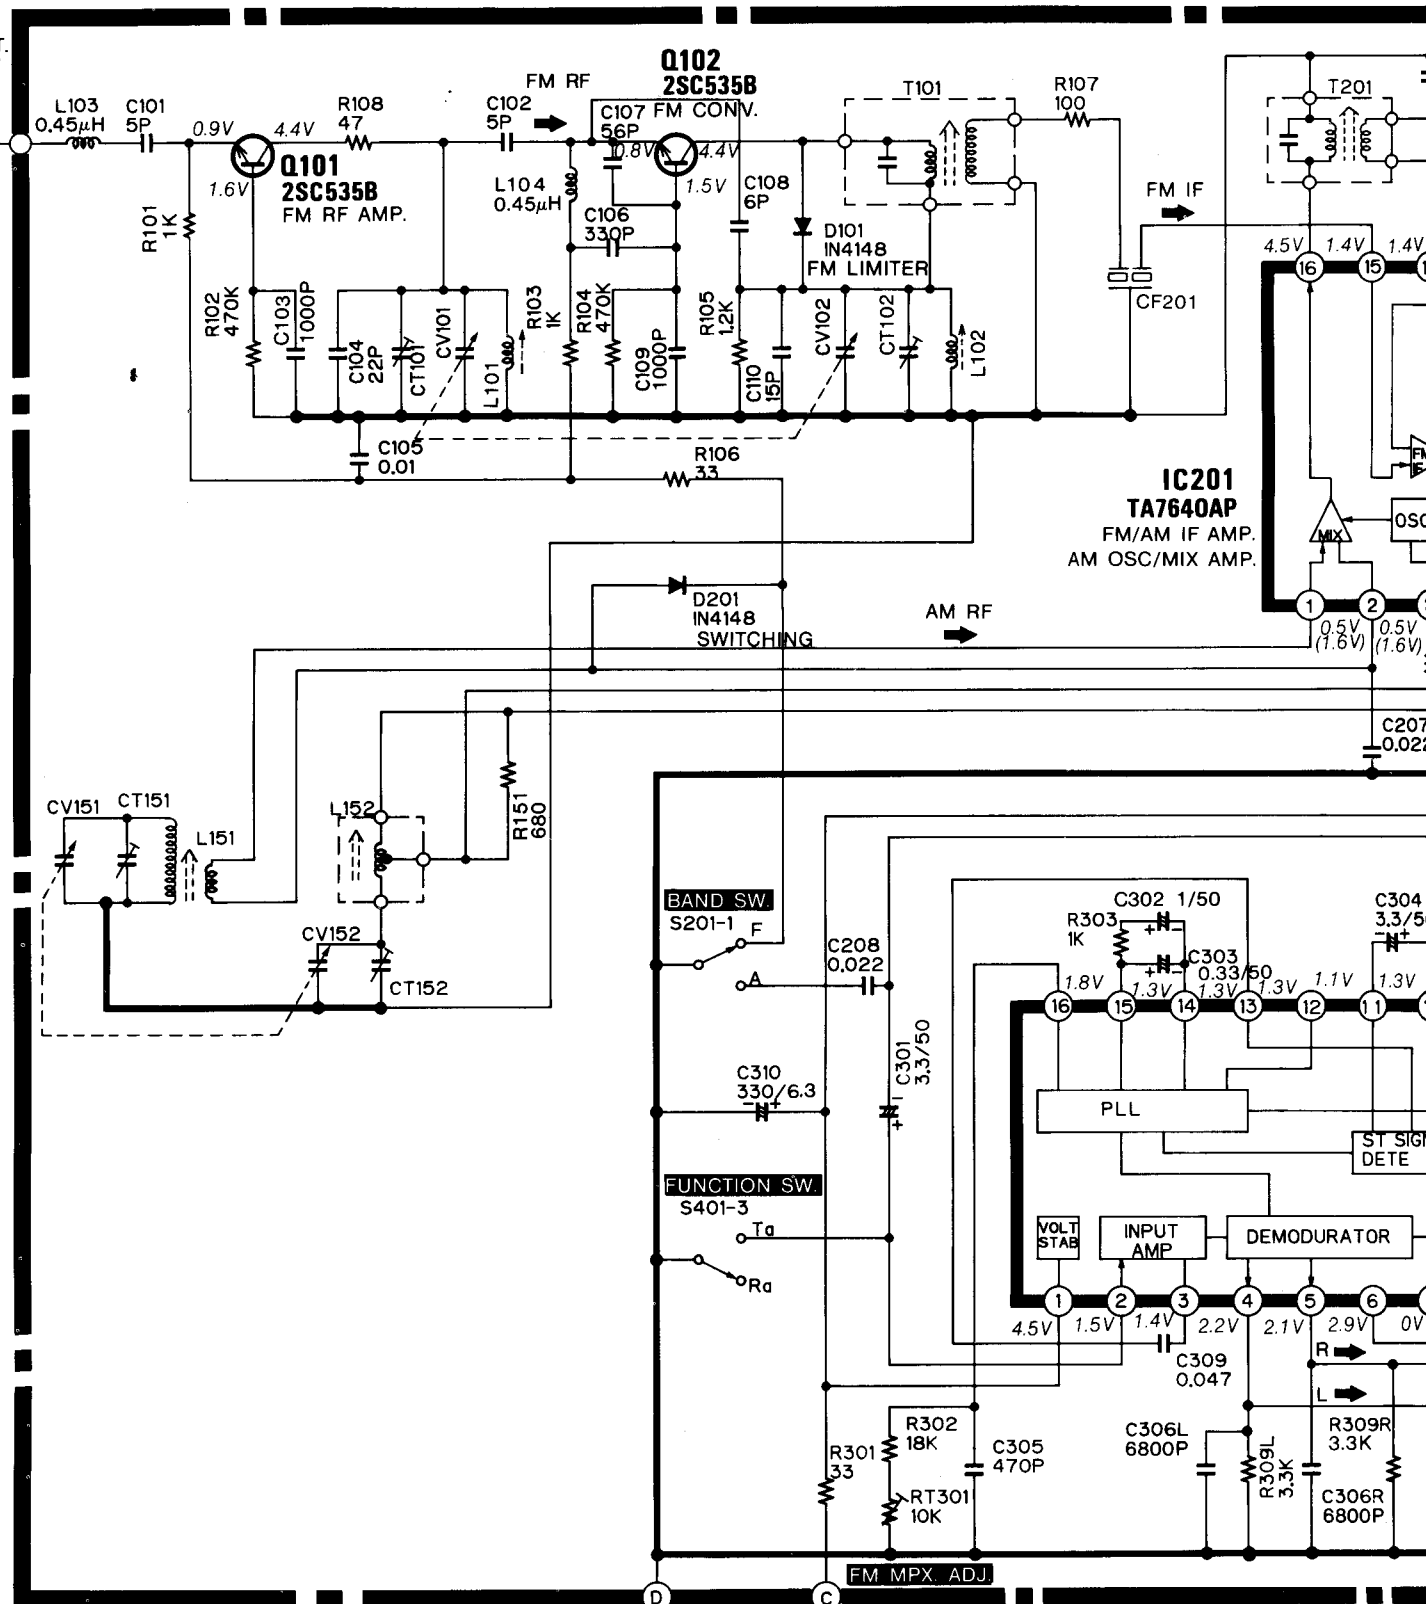

Use the electrolytic capacitors with explosion-proof valve when the diameter of them is more than 10 mm ϕ .

() VOLTAGE: AM




BROCK DIAGRAM

EXPLO

● CAB


(Nos.

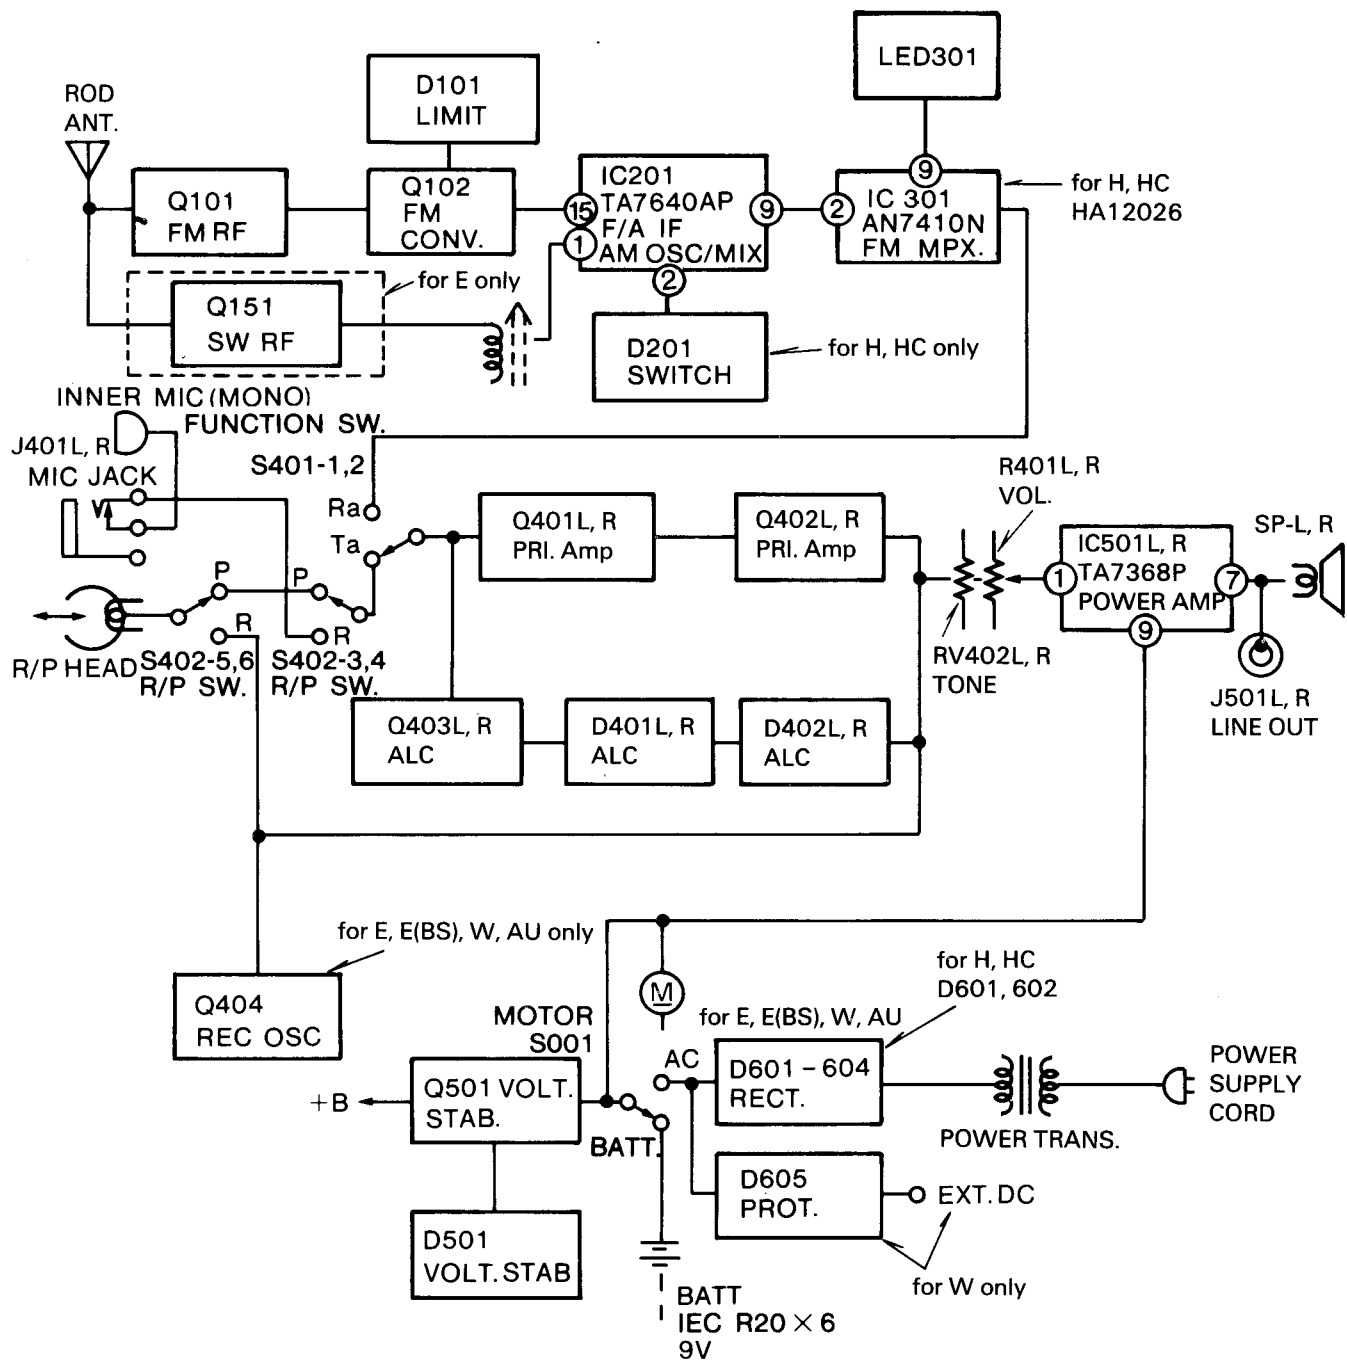

EXPLODED VIEW

● **CABINET**

(Nos. are reference Nos. of parts list)

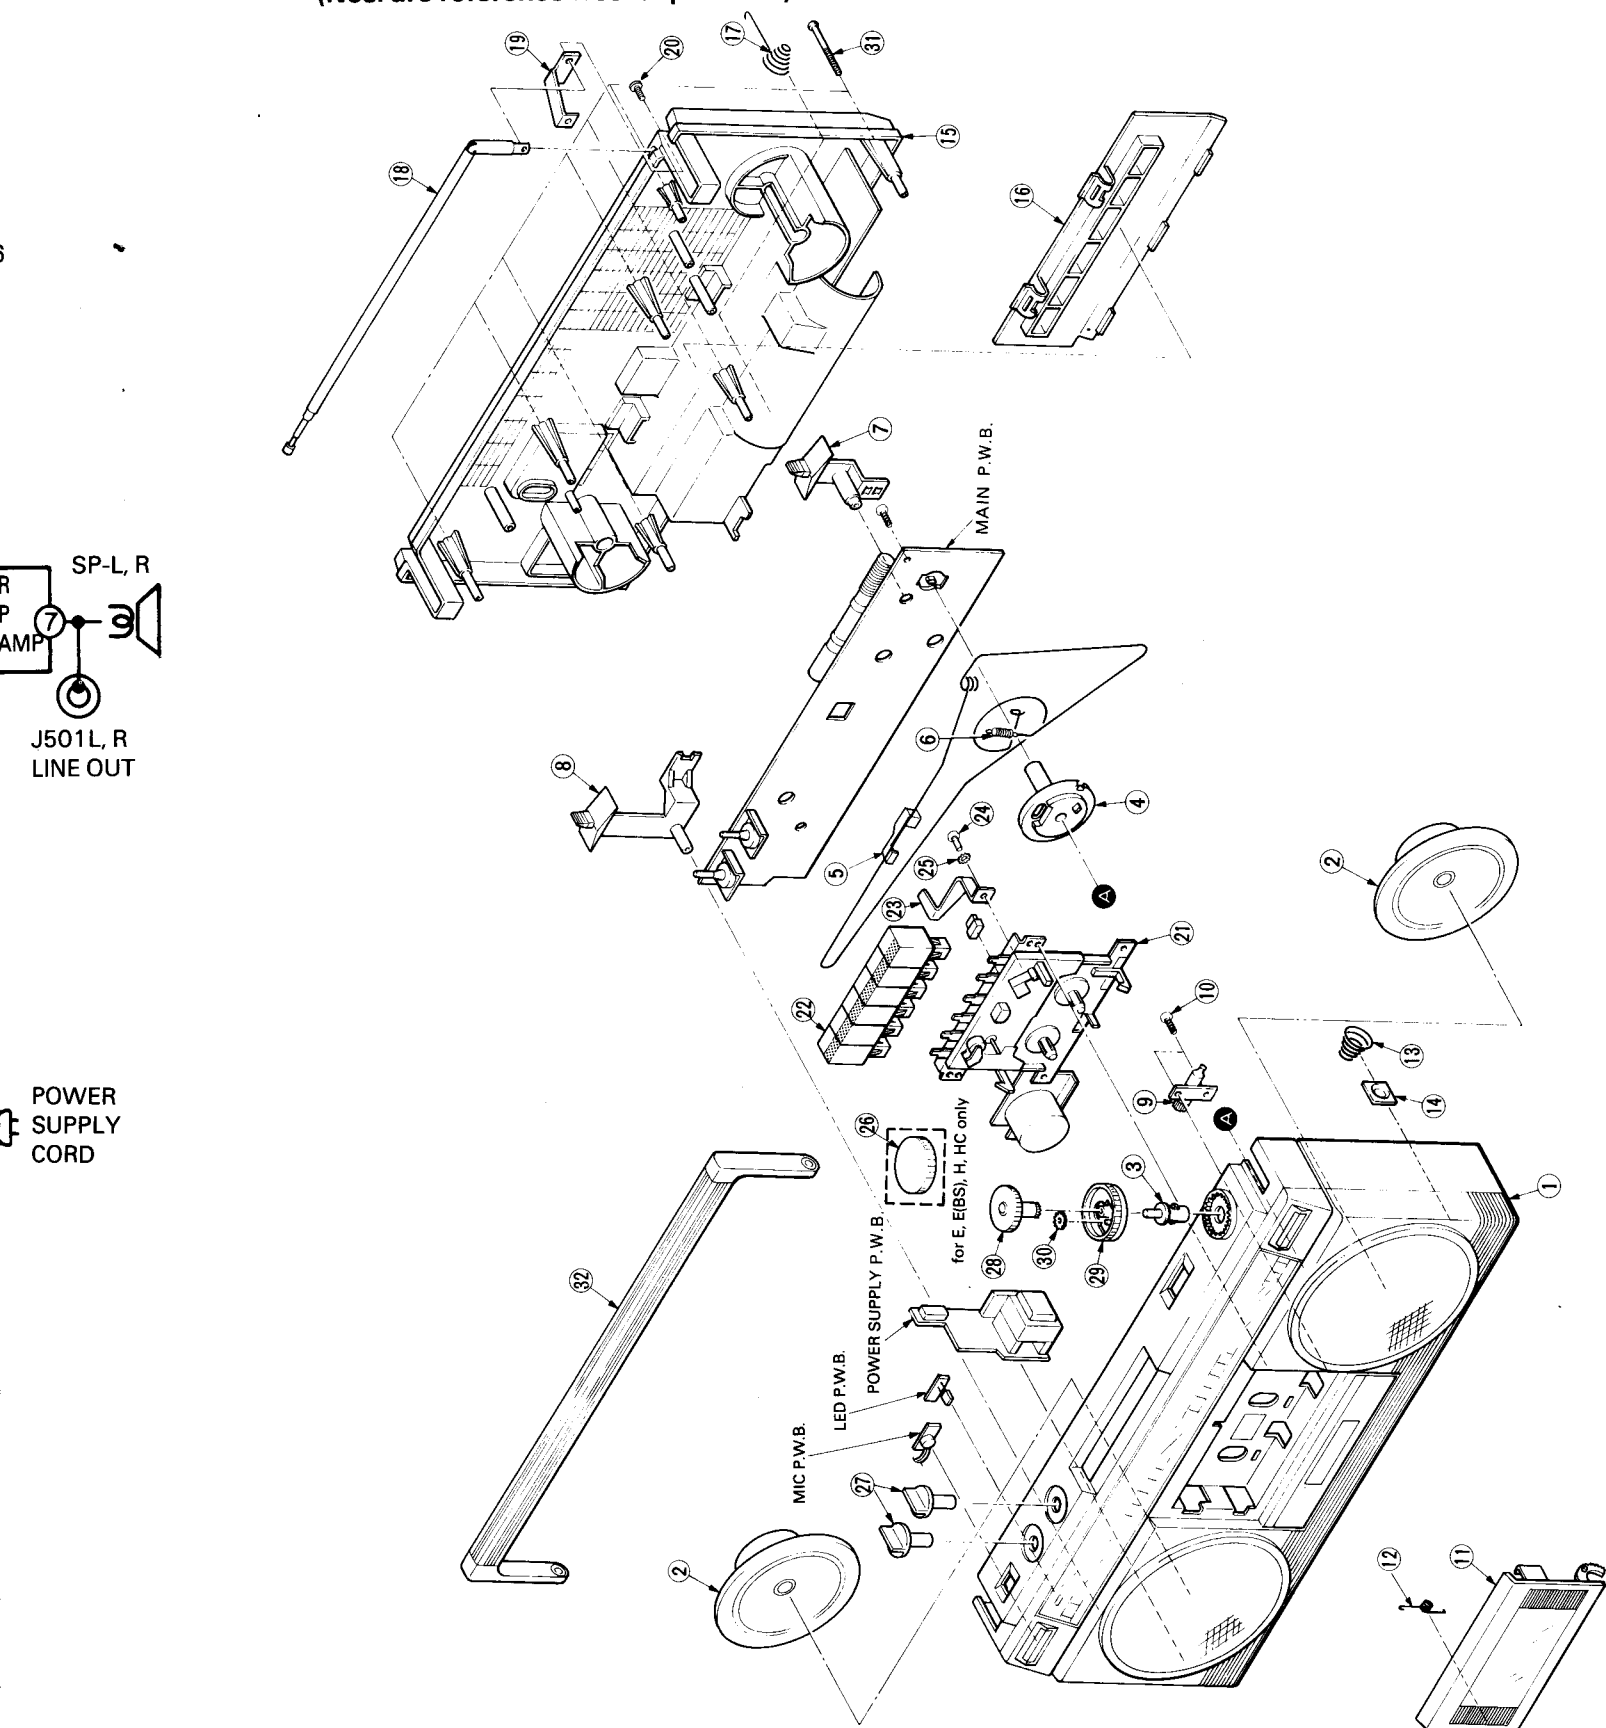

- Cassette chassis TN-21VC-177 chassis [For E, E(BS), W, AU]
- Cassette chassis TN-21VC-177-1 chassis [For H, HC]


REPLACE

Cabinet

SYMBOL NO.	PART NO.	
for FRONT C		
1	4027981	F
	4027982	F
	4028251	F
2	2402952	S
3	3976261	S
	3976262	S
	3976263	S
4	3976251	P
	3976252	P
5	3388241	P
	3388242	P
6	3340321	S
7	3305651	L
	3305652	L
8	3305641	L
	3305642	L
9	3970221	G
10	8691410	S
11	3976211	C
	3976212	C

Cassette chassis

SYMBOL NO.	PART NO.	
TN-2		
1	4818991	M
2	4818992	S
3	4820211	P
4	4820212	L
5	4820213	L
6	4818996	L
7	4818997	L
8	4818998	L
9	4818999	P
10	4818990	L
11	4819131	L
12	4819132	S
13	4819133	S
14	4820214	S
15	4820215	S
16	4819007	S
17	4819100	S
18	4820216	S
19	4819008	S
20	4819009	L
21	4819000	S
22	4820217	S
23	2789801	S
24	4819568	L

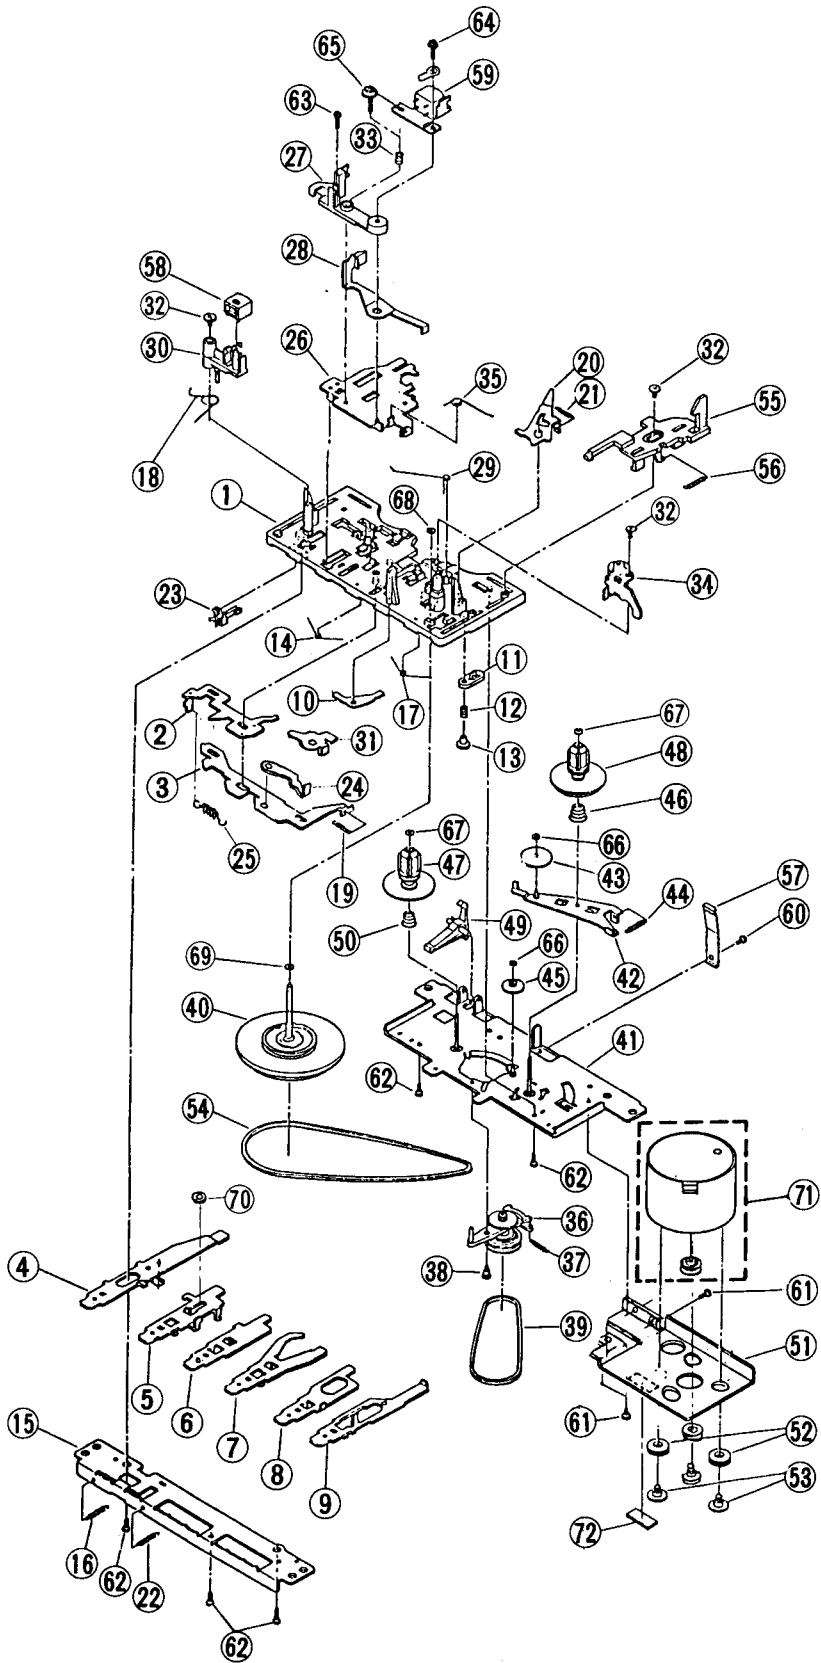

REPLACEMENT PARTS LIST

Cabinet

SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION
for FRONT CASE ASSEMBLY			for REAR CASE ASSEMBLY			for TN MECHA ASSEMBLY		
1	4027981	Front case assembly [for E, E (BS)]	12	3368263	Spring	21	2588561	TN-21 Deck mecha assembly [except H, HC]
	4027982	Front case assembly [for W, AU]	13	3367142	Spring A		2588562	TN-21 Deck mecha assembly [for H, HC]
	4028251	Front case assembly [for H, HC]	14	4436666	Terminal	22	3305631	Button, Cassette [except H, HC]
2	2402952	Speaker 10cm	for REAR CASE ASSEMBLY				3305633	Button, Cassette [for H, HC]
3	3976261	Shaft, Tuning [for E, E (BS)]	15	4028001	Rear case assembly [for E]	23	4463322	Plate, Rec
	3976262	Shaft, Tuning [for W, AU]		4028002	Rear case assembly [for E (BS)]	24	4578281	2.6 x 4 Screw
	3976263	Shaft, Tuning [for H, HC]		4028003	Rear case assembly [for W]	25	8815113	2.6 Lock washer
4	3976251	Pulley 80 [except H, HC]		4028004	Rear case assembly [for AU]	for FAINAL ASSEMBLY		
	3976252	Pulley 80 [for H, HC]		4028271	Rear case assembly [for H]	26	3303181	Knob 38 [for E, E (BS)]
5	3388241	Pointer [except H, HC]		4028272	Rear case assembly [for HC]		3303183	Knob 38 [for H, HC]
	3388242	Pointer [for H, HC]	16	3976221	Battery lid [except H, HC]	27	3303177	Knob, Selection [except H, HC]
6	3340321	Spring		3976222	Battery lid [for H, HC]		3303178	Knob, Selection [for H, HC]
7	3305651	Lever, Band [except H, HC]	17	3369941	Spring	28	3303091	Knob, Fine [for W, AU]
	3305652	Lever, Band [for H, HC]	18	2758231	Rod antenna [except H, HC]	29	3303331	Knob, Tuning [for W, AU]
8	3305641	Lever, Function [except H, HC]		2758141	Rod antenna [for H, HC]	30	3348611	OG gear 2 [for W, AU]
	3305642	Lever, Function [for H, HC]	19	4463331	Bracket, Antenna	31	4577819	Screw, 3 x 35 BT
9	3970221	Gear damper assembly	20	8744412	Screw bind head 3 x 12	32	4028151	Handle assembly
10	8691410	Screw, 3 x 10 BT bind head						
11	3976211	Cassette lid [except H, HC]						
	3976212	Cassette lid [for H, HC]						

Cassette chassis (TN-21VC-177 chassis, TN-21VC-177-1 chassis)

SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION	SYMBOL NO.	PART NO.	DESCRIPTION
TN-21VC-177								
1	4818991	Main base assy	25	4820218	Spring, Switch actuator	50	4819032	Spring
2	4818992	Switch Plate	26	4820219	Head panel	51	4820234	Bracket, motor
3	4820211	Push button actuator	27	4819014	Head base	52	4819039	Motor rubber
4	4820212	Lever, REC button	28	4819015	Sensing plate ass'y	53	4819533	Screw, motor collar
5	4820213	Lever, PLAY button	29	4820221	Spring, Head panel	54	4820235	Main belt
6	4818996	Lever, RWD button	30	4819018	MG arm	55	4819043	Level, Eject slide
7	4818997	Lever, FF button	31	4819006	PR stopper	56	4819044	Spring, Eject Slide lever
8	4818998	Lever, STOP button	32	4819045	Screw	57	4820242	Pack spring
9	4818999	PAUSE button lever ass'y	33	4819017	Spring	58	2557321	Erase head
10	4818990	Lever, RWD	34	4820222	Pressure roller arm ass'y	59	4817061	R/P head [for E,W,AU]
11	4819131	Lever, PAUSE	35	4820223	Spring, Pressure roller arm		2557491	R/P head [for H,HC]
12	4819132	Spring, PAUSE lever	36	4820224	RF pulley arm ass'y	60	4819063	Screw, Tapping 2 x 3
13	4819133	Stopper, PAUSE	37	4820225	Spring, RF pulley arm	61	4819068	Screw, Tapping 2 x 4
14	4820214	Spring, Button lever	38	4820226	Screw, RF arm collar	62	4819607	Screw, Bind tapping 2 x 5
15	4820215	Sub chassis	39	4820227	Belt	63	4819069	Screw, 2 x 6
16	4819007	Spring, Button lever	40	4820231	Flywheel ass'y	64	4819060	Screw, 2 x 7
17	4819100	Spring, Button lever	41	4820232	Reel base ass'y	65	4819600	Screw, Azimuth
18	4820216	Spring, MG arm	42	4820233	Take-up gear plate ass'y	66	4819180	Washer, 1.2
19	4819008	Spring, Actuator	43	4819029	Gear, Take-up, roller	67	4819077	Washer, 1.2
20	4819009	Lever, AUTO	44	4819020	Spring, TG plate	68	4819078	Washer, 1.55
21	4819000	Spring, AUTO lever	45	4819112	FF gear	69	4819614	Washer, 2.05
22	4820217	Spring, PLAY button lever	46	4819037	Spring	70	4820243	Washer, 2.1
23	2789801	Switch, LEAF (S001)	47	4819033	Supply reel ass'y	71	4820361	Motor assembly [for E,W,AU]
24	4819568	Lever, E kick	48	4819034	Take-up reel ass'y		4820362	Motor assembly [for H,HC]
			49	4819035	Record safety lever	72	4820241	Mat

REPLACEMENT PARTS LIST

CD.....Ceramic discal

EL..... Electrolytic

ST..... Styrol

ME..... Metal

CO..... Composition

CC..... Cylindrical ceramic

MF..... Mylar, film

CF..... Carbon film

MO..... Metal, oxide

FR..... Fuse resistor

SYMBOL NO.	PART NO.	DESCRIPTION
CAPACITORS		
C101	0208635	CD 5pF 0.25pF 50V
C102	0208635	CD 5pF 0.25pF 50V
C103	0209161	CD 1000pF $\pm 5\%$ 50V
C104	0208668	CD 22pF $\pm 5\%$ 50V
C105	0244171	CD 0.01 μ F $\pm 10\%$ 50V
C106	0209721	CD 330pF $\pm 10\%$ 50V
C107	0208678	CD 56pF $\pm 5\%$ 50V
C108	0208016	CD 6pF $\pm 0.5pF$ 50V
C109	0209161	CD 1000pF $\pm 5\%$ 50V
C110	0208034	CD 15pF $\pm 5\%$ 50V
C111	0248684	CD 100pF $\pm 5\%$ 50V [for E]
C112	0248635	CD 5pF $\pm 0.25pF$ 50V [for E]
C150	0248645	CD 5pF $\pm 0.5pF$ 50V [for E, E (BS)]
C151	0248646	CD 6pF $\pm 0.5pF$ 50V [for E (BS)]
C151	0248664	CD 15pF $\pm 5\%$ 50V [for E]
C152	0208648	CD 8pF $\pm 0.5pF$ 50V [for E, E (BS)]
C152	0208633	CD 3pF $\pm 0.25pF$ 50V [for W, AU]
C153	0208682	CD 82pF $\pm 5\%$ 50V [for E, E (BS)]
C153	0208648	CD 8pF $\pm 0.5pF$ 50V [for W, AU]
C154	0208664	CD 15pF $\pm 5\%$ 50V [for E, E (BS)]
C154	0208648	CD 8pF $\pm 0.5pF$ 50V [for W, AU]
C155	0208662	CD 12pF $\pm 5\%$ 50V [for E, E (BS)]
C155	0208634	CD 4pF $\pm 0.25pF$ 50V [for W, AU]
C156	0208674	CD 39pF $\pm 5\%$ 50V [for E, E (BS)]
C156	0208662	CD 12pF $\pm 5\%$ 50V [for W, AU]
C157	0209737	CD 0.01 μ F $\pm 10\%$ 50V [except H, HC]
C158	0221339	ST 1500pF $\pm 5\%$ 50V [for W, AU]
C158	0221324	ST 360pF $\pm 5\%$ 50V [for E, E (BS)]
C159	0221324	ST 360pF $\pm 5\%$ 50V [for W, AU]
C159	0221319	ST 220pF $\pm 5\%$ 50V [for E, E (BS)]
C160	0208684	CD 100pF $\pm 5\%$ 50V [for E, E (BS)]
C161	0208635	CD 5pF $\pm 0.25pF$ 50V [except H, HC]
C162	0244171	CD 0.01 μ F $\pm 10\%$ 50V [for E]
C163	0244171	CD 0.01 μ F $\pm 10\%$ 50V [for E]
C201	0244171	CD 0.01 μ F $\pm 10\%$ 50V

SYMBOL NO.	PART NO.	DESCRIPTION
C202	0244171	CD 0.01 μ F $\pm 10\%$ 50V
C203	0209161	CD 1000pF $\pm 5\%$ 50V [except H, HC]
C203	0244161	CD 1000pF $\pm 5\%$ 50V [for H, HC]
C204	0244171	CD 0.01 μ F $\pm 10\%$ 50V
C205	0252322	EL 22 μ F 10V
C206	0209175	CD 0.047 μ F $\pm 10\%$ 50V [except H, HC]
C206	0244175	CD 0.047 μ F $\pm 10\%$ 50V [for H, HC]
C207	0244173	CD 0.022 μ F $\pm 10\%$ 50V
C208	0244173	CD 0.022 μ F $\pm 10\%$ 50V
C209	0208682	CD 82pF $\pm 5\%$ 50V [except H, HC]
C210	0248684	CD 100pF $\pm 5\%$ 50V [except H, HC]
C211	0248684	CD 100pF $\pm 5\%$ 50V [for E]
C301	0252813	EL 3.3 μ F 50V
C302	0252805	EL 0.47 μ F 50V [except H, HC]
C302	0252811	EL 1.0 μ F 50V [for H, HC]
C303	0252805	EL 0.47 μ F 50V [except H, HC]
C303	0252803	EL 0.33 μ F 50V [for H, HC]
C304	0252805	EL 0.47 μ F 50V [except H, HC]
C304	0252813	EL 3.3 μ F 50V [for H, HC]
C305	0221327	ST 470pF $\pm 5\%$ 50V [except H, HC]
C305	0268444	PP 470P $\pm 5\%$ 100V [for H, HC]
C306L,R	0209736	CD 6800pF $\pm 10\%$ 50V
C307L,R	0244171	CD 0.01 μ F $\pm 10\%$ 50V
C308L,R	0244173	CD 0.022 μ F $\pm 5\%$ 50V
C309	0209175	CD 0.047 μ F $\pm 10\%$ 50V
C310	0252233	EL 330 μ F 0.3V
C311	0244173	CD 0.022 μ F $\pm 5\%$ 50V [except E, E (BS)]
C312	0208696	CD 330pF $\pm 5\%$ 50V [for E, E (BS)]
C401L,R	0209165	CD 4700pF $\pm 10\%$ 50V [except H, HC]
C402	0209175	CD 0.047 μ F $\pm 10\%$ 50V
C403L,R	0252811	EL 1 μ F 50V [except H, HC]
C403L,R	0252802	EL 0.22 μ F 50V [for H, HC]
C404L,R	0209161	CD 1000pF $\pm 5\%$ 50V
C405L,R	0244171	CD 0.01 μ F $\pm 5\%$ 50V
C406L,R	0252804	EL 0.15 μ F 50V [except H, HC]
C406L,R	0252803	EL 0.33 μ F 50V [for H, HC]
C407L,R	0252813	EL 3.3 μ F 50V
C408	0252323	EL 33 μ F 10V
C409L,R	0244173	CD 0.022 μ F $\pm 10\%$ 50V

SYMBOL NO.	PART NO.	DESCRIPTION
C410L,R	0209175	CD 0.047 μ F $\pm 10\%$ 50V
C411L,R	0252802	EL 0.22 μ F 50V
C412	0252233	EL 330 μ F 6.3V
C413L,R	0209735	CD 4700pF $\pm 10\%$ 50V [except H, HC]
C413L,R	0209734	CD 3300pF $\pm 10\%$ 50V [for H, HC]
C414L	0209731	CD 1000pF $\pm 10\%$ 50V [except H, HC]
C414R	0274015	MF 4700pF $\pm 10\%$ 50V [except H, HC]
C415	0209161	CD 1000pF $\pm 10\%$ 50V [except H, HC]
C416	0252322	EL 22 μ F 10V [except H, HC]
C417L,R	0209734	CD 3300pF $\pm 10\%$ 50V [except H, HC]
C417L	0209734	CD 3300pF $\pm 10\%$ 50V [for H, HC]
C417R	0244107	CD 3300pF $\pm 10\%$ 50V [for H, HC]
C501	0252331	EL 100 μ F 10V
C502L,R	0209161	CD 1000pF $\pm 10\%$ 50V
C503L,R	0252323	EL 33 μ F 10V
C504	0252322	EL 22 μ F 10V
C505L,R	0252233	EL 330 μ F 6.3V
C506	0252542	EL 2200 μ F 16V
C507	0252532	EL 220 μ F 16V [for E, E (BS)]
C507	0252531	EL 100 μ F 16V [for W, AU]
C601	0244171	CD 0.01 μ F $\pm 10\%$ 50V
C602	0244171	CD 0.01 μ F $\pm 10\%$ 50V
RESISTORS		
R101	0113615	CF 1k Ω $\pm 5\%$ SRD 1/8P
R102	0113679	CF 470k Ω $\pm 5\%$ SRD 1/8P
R103	0113615	CF 1k Ω $\pm 5\%$ SRD 1/8P
R104	0113679	CF 470k Ω $\pm 5\%$ SRD 1/8P
R105	0113617	CF 1.2k Ω $\pm 5\%$ SRD 1/8P
R106	0113579	CF 33 Ω $\pm 5\%$ SRD 1/8P
R107	0113591	CF 100 Ω $\pm 5\%$ SRD 1/8P
R108	0113591	CF 100 Ω $\pm 5\%$ SRD 1/8P [except H, HC]
R108	0113583	CF 47 Ω $\pm 5\%$ SRD 1/8P [for H, HC]
R151	0113643	CF 15k Ω $\pm 5\%$ SRD 1/8P [for E, E (BS)]
R151	0113611	CF 680 Ω $\pm 5\%$ SRD 1/8P [for H, HC]
R152	0113645	CF 18k Ω $\pm 5\%$ SRD 1/8P [except H, HC]
R153	0113645	CF 18k Ω $\pm 5\%$ SRD 1/8P [for W, AU]
R154	1129577	CF 470 Ω $\pm 5\%$ SRD 1/8P [for E]
R155	0170384	CF 470k Ω $\pm 5\%$ SRD 1/8P [for E]

SYMBOL NO.	PART NO.	DESCRIPTION
R201	0113643	CF 15k Ω $\pm$ 5% SRD 1/8P
R202	0113583	CF 47 Ω $\pm$ 5% SRD 1/8P [except H, HC]
R202	0113589	CF 82 Ω $\pm$ 5% SRD 1/8P [for H, HC]
R301	0129543	CF 33 Ω $\pm$ 5% SRD 1/4P
R302	0113645	CF 18k Ω $\pm$ 5% SRD 1/8P
R303	0113615	CF 1k Ω $\pm$ 5% SRD 1/8P
R304	0113631	CF 4.7k Ω $\pm$ 5% SRD 1/8P
R305	0113603	CF 330 Ω $\pm$ 5% SRD 1/8P
R306L,R	0113655	CF 47k Ω $\pm$ 5% SRD 1/8P
R307L,R	0113611	CF 680 Ω $\pm$ 5% SRD 1/8P [except H, HC]
R307L,R	0113609	CF 560 Ω $\pm$ 5% SRD 1/8P [for H, HC]
R309L,R	0113627	CF 3.3k Ω $\pm$ 5% SRD 1/8P [for H, HC]
R310	0113607	CF 470 Ω $\pm$ 5% SRD 1/8P [for H, HC]
R401L,R	0113623	CF 2.2k Ω $\pm$ 5% SRD 1/8P
R402L,R	0113619	CF 1.5k Ω $\pm$ 5% SRD 1/8P
R403L,R	0113639	CF 10k Ω $\pm$ 5% SRD 1/8P
R404	0113631	CF 4.7k Ω $\pm$ 5% SRD 1/8P
R406L,R	0113679	CF 470k Ω $\pm$ 5% SRD 1/8P
R407L,R	0113635	CF 1.8k Ω $\pm$ 5% SRD 1/8P
R408L,R	0113579	CF 33 Ω $\pm$ 5% SRD 1/8P [except H, HC]
R408L,R	0113573	CF 18 Ω $\pm$ 5% SRD 1/8P [for H, HC]
R410L,R	0113651	CF 33k Ω $\pm$ 5% SRD 1/8P
R411L,R	0113669	CF 180k Ω $\pm$ 5% SRD 1/8P
R412L,R	0113619	CF 1.5k Ω $\pm$ 5% SRD 1/8P
R413L,R	0113623	CF 2.2k Ω $\pm$ 5% SRD 1/8P
R414L,R	0113627	CF 3.3k Ω $\pm$ 5% SRD 1/8P
R415L,R	0113603	CF 330 Ω $\pm$ 5% SRD 1/8P
R416L,R	0113609	CF 560 Ω $\pm$ 5% SRD 1/8P [except H, HC]
R416L,R	0113607	CF 470 Ω $\pm$ 5% SRD 1/8P [for H, HC]
R417L,R	0113623	CF 2.2k Ω $\pm$ 5% SRD 1/8P
R418	0113663	CF 100k Ω $\pm$ 5% SRD 1/8P
R419L,R	0113639	CF 10k Ω $\pm$ 5% SRD 1/8P
R420	0129543	CF 33 Ω $\pm$ 5% SRD 1/4P [except H, HC]
R421	0113655	CF 47k Ω $\pm$ 5% SRD 1/8P [except H, HC]
R423	0113563	CF 6.8 Ω $\pm$ 5% SRD 1/8P [except H, HC]
R424L,R	0113651	CF 33k Ω $\pm$ 5% SRD 1/8P [for H, HC]
R425	0113603	CF 330 Ω $\pm$ 5% SRD 1/8P [except H, HC]
R501	0113591	CF 100 Ω $\pm$ 5% SRD 1/8P
R502	0113609	CF 560 Ω $\pm$ 5% SRD 1/8P
R503L,R	0113599	CF 220 Ω $\pm$ 5% SRD 1/8P
ICS & TRANSISTORS		
IC201	2389511	TA7640AP
IC301	2369631	AN7410N [except H, HC]
IC301	2389501	HA12026 [for H, HC]
IC501L,R	2300031	TA7368P
Q101	2317991	2SC1047D [except H, HC]
Q101	2329332	2SC535B [for H, HC]
Q102	2317991	2SC1047D [except H, HC]

SYMBOL NO.	PART NO.	DESCRIPTION
Q102	2329332	2SC535B [for H, HC]
Q151	2319081	HIT9011H [for E]
Q401L,R	2318001	2SC1684H-R [except H, HC]
Q401L,R	2319091	HIT9014N-C [for H, HC]
Q402L,R	2319101	2SC1684R [except H, HC]
Q402L,R	2319161	HIT9014C [for H, HC]
Q403L,R	2319101	2SC1684R [except H, HC]
Q403L,R	2319161	HIT9014C [for H, HC]
Q404	2319101	2SC1684R [except H, HC]
Q501	2318011	2SC1317C [except H, HC]
Q501	2319052	HIT8050C [for H, HC]
DIODES		
D101	2398081	1N4148
D102	2398081	1N4148 [except H, HC]
D103	2398081	1N4148 [for E (BS), W, AU]
D201	2398081	1N4148 [for H, HC]
D401L,R	2398081	1N4148 [except H, HC]
D401L,R	2398132	1S188 (FM) [for H, HC]
D402L,R	2398081	1N4148
ZD501	2397261	MTZ 6.2A [except H, HC]
ZD501	2338003	HZ-6C [for H, HC]
D601	2398062	1N4001 [except H, HC]
D601	2398061	1N4002 [for H, HC]
D602	2398062	1N4001 [except H, HC]
D602	2398061	1N4002 [for H, HC]
D603	2398062	1N4001 [except H, HC]
D604	2398062	1N4001 [except H, HC]
D605	2398062	1N4001 [for W]
LED301	2397753	LN217RP
VARIABLE RESISTORS		
RT301	0199331	10k Ω [except H, HC] (FM MPX ADJ.)
RT301	0151808	10k Ω [for H, HC] (FM MPX ADJ.)
RV401L,R	0166942	10k Ω -A (VOLUME)
RV402L,R	0166931	10k Ω -A (TONE)
COILS & TRANSFORMERS		
L101	2137683	FM RF coil
L102	2137682	FM OSC coil
L103	2137684	Choke coil
L104	2137684	Choke coil
L151	2137662	SW ANT coil [for E]
L151	2758221	Ferrite antenna [for H, HC]
L151	2137661	SW ANT coil [for E (BS)]
L151	2137667	SW ANT coil [for W, Au]
L152	2137634	MW OSC coil [for H, HC]
L154	2137671	SW OSC coil [for E, (BS)]
L154	2137672	SW2 OSC coil [for W, Au]
L155	2137631	MW OSC coil [for E, E (BS)]
L155	2137633	SW1 OSC coil [for W, Au]
L156	2137632	LW OSC coil [for E, E (BS)]
L156	2137631	MW OSC coil [for W, Au]
L157	2137684	Choke coil [except H, HC]
T101	2154962	FM IF transformer

SYMBOL NO.	PART NO.	DESCRIPTION
T201	2154952	AM IF transformer
T202	2154964	FM IF transformer
T203	2154951	AM IF transformer
T401	2136891	REC OSC transformer [except H, HC]
MISCELLANEOUS		
CT151	0283557	Semi variable capacitor [except H, HC]
CT152	0283557	Semi variable capacitor [except H, HC]
CT154	0283557	Semi variable capacitor [for E, E (BS)]
CT155	0283557	Semi variable capacitor [for E, E (BS)]
CT154	0283130	Semi variable capacitor [for W, Au]
CT155	0283130	Semi variable capacitor [for W, Au]
CT156	0283130	Semi variable capacitor [for W, Au]
CT157	0282148	Semi variable capacitor [for E, E (BS)]
S201	2629411	Slide switch (2-2) [for H, HC] (BAND)
S201	2629282	Slide switch [except H, HC] (BAND)
S401	2628372	Slide switch (6-2) (FUNCTION)
S402	2628361	Slide switch (6-2) (R/P)
S403	2629331	Slide switch (2-2) (FM MODE) [for E, E (BS)]
S601	2628351	Slide switch (1-2) [except H, HC] (AC/BATT)
S602	2618471	Rotary switch (1-3) [for W] (VOLTAGE SELECTOR)
S601	2629381	Slide switch (1-2) [for H, HC] (AC/BATT)
CF201	2135321	Ceramic filter
△ F601	2727723	Fuse F500mA [except W, H, HC]
	2737102	Microphone [except H, HC]
	2737441	Microphone [for H, HC]
	0282120	PVC (VARIABLE CAPACITOR) [except H, HC]
	0282282	PVC (VARIABLE CAPACITOR) [for H, HC]
	2757994	Ferrite antenna [for E, E (BS)]
	2757982	Ferrite antenna [for W, Au]
△	2707709	Power supply cord [for E]
△	2717902	Power supply cord [for E (BS)]
△	2706584	Power supply cord [for W]
△	2706251	Power supply cord [for Au]
△	2706593	Power supply cord [for H, HC]
△	2249016	Power transformer [for E]
△	2249017	Power transformer [for E (BS), Au]
△	2249013	Power transformer [for W]
△	2249014	Power transformer [for H]
△	2249015	Power transformer [for HC]

**HITACHI SALES EUROPA GmbH**

Postfach 801060 Rungedamm 2, 2050 Hamburg 80,
West Germany
Tel. 040-734 11-0

HITACHI SALES (U.K.) Ltd.

Hitachi House, Station Road, Hayes, Middlesex UB3
4DR, England
Tel. 01-848-8787

HITACHI SALES SCANDINAVIA AB

Rissneleden 8, Box 7138, 172-07 Sundbyberg, Sweden
Tel. 08-98 52 80

HITACHI SALES NORWAY A/S

Oerebekk 1620, Gressvik, P.O. Box 46, N-1601,
Fredrikstad, Norway
Tel. 032-28255

SUOMEN HITACHI OY

Takojankatsu 5, 15800 Lahti 80, Finland
Tel. Lahti 44 241

HITACHI SALES A/S

Kuldysen 13, DK-2630, Taastrup, Denmark
Tel. 02-999200

HITACHI SALES A.G.

Bahnhofstrasse, 19, 5600 Lenzburg, Switzerland
Tel. 064-513621

HITACHI SALES WARENHANDELS GMBH

A-1180/Wien, Kreuzgasse 27, Austria
Tel. 0222-439367

HITACHI SALES ITALIANA, S.P.A.

Via Cristoforo Colombo 49, Trezzano sul naviglio
(Milano), Italy
Tel. 02-44 59 031

HITACHI SALES BELGIUM S.A.

56, Chaussee de Namur B-1400 Nivelles, Belgium
Tel. (003267) 227181

HITACHI SALES IBERICA, S.A.

Gran Via Carlos Tercero, 101, 1-1, Barcelona-28,
Spain
Tel. 330-8652

HITACHI MAROC (RADIO TV ELECTRO-MANAGER), S.A.

Rue du Havre, Casablanca, Morocco
Tel. 30-73-68, 30-73-57

HITACHI CANARIAS S.A.

Calle San-Francisco No. 19, Santa Cruz de Tenerife
Canary Islands
Tel. 24-64-98

HITACHI SALES (HELLAS) LTD.

110 Syngrou St., Athens, Greece
Tel. 9219082, 9233469

HITACHI SALES (MALAYSIA) SDN. BHD.

17, Jalan 20/16, Petaling Jaya, Selangor, Malaysia
Tel. 762523, 769918, 769836, 762594

HITACHI (SINGAPORE) PTE., LTD.

Room B, C & D, 15th Floor, Yen San Building
268 Orchard Road, Singapore 9, Singapore
Tel. 7378244, 7379826

HITACHI SALES (THAILAND) LTD.

2242-48, New Petchburi Road, Bangkok, Hueykuang
Bangkok, Thailand
Tel. 314-2741

HITACHI ELECTRIC SERVICE CO., (HONG KONG) LTD.

4th Floor Leun Tai Industrial Bldg., 72-76 Kwai Cheong
Road Kwai Chung N.T., Hong Kong
Tel. 240126

HITACHI SALES AUSTRALIA PTY LTD.

153 Keys Road, Moorabbin, Victoria 3189 Australia
Tel. 555-8722

HITACHI SALES CORPORATION OF AMERICA

Eastern Regional Office
1290 Wall Street West, Lyndhurst, New Jersey 07071,
U.S.A.
Tel. 201-935-8980

Mid-Western Regional Office

1400 Morse Ave., Elk Grove Village, Ill. 60007, U.S.A.
Tel. 312-593-1550

Southern Regional Office

510 Plaza Drive, College Park, Georgia 30349, U.S.A.
Tel. 404-763-0360

Western Regional Office

401 West Artesia Boulevard, Compton, California 90220
U.S.A.
Tel. 213-537-8383

HITACHI SALES CORPORATION OF HAWAII, INC.

3219 Koapaka Street, Honolulu, Hawaii 96819, U.S.A.
Tel. 808-836-3621

HITACHI (HSC) CANADA INC.

3300 Trans-Canada Highway, Pointe Claire, Quebec,
H9R 1B1, Canada
Tel. 514-697-9150

Hitachi Sales Centroamericana, S.A.

San Rafael de Escazu, (Apartado 10272), San Jose,
Costa Rica
Tel. 28-20-11, 28-00-37

Hitachi Sales Corporation de Panama, S.A.

Nuevo Reparto E1 Carmen, Calle Ramon Arias y Calle B
Edificio Brasil 100, (Apartado 7657) Panama 5
Panama City, Rep. of Panama
Tel. 61-3100, 61-4305

Hitachi Sales de Chile Cia., Ltda.

Av. Mexico, 0183, Casilla 9793, Correo Central
Santiago, Chile
Tel. 774165

HITACHI-FRANCE S.A.

95-101 Rue Charles Michels,
93200 SAINT-DENIS,
France
Tel. 821 6015

HITACHI LTD. TOKYO JAPAN

Head Office: THE HITACHI ATAGO BLDG.
No. 15-12, 2-Chome Nishi-Shinbashi
Minato-ku, Tokyo 105, Japan
Tel. Tokyo (03) 502-2111