

Hi-Fi Products Service Bulletin

CSA-13

Sony Service Company - Technical Services
A Division of Sony Electronics Inc.
Sony Drive, Park Ridge, New Jersey 07656

Model: CDP-C445

No. 465

Subject: Drawer will not open

Date: January 31, 1996


Symptom:

(**)


The Drawer will not open or open completely.

Solution:

Remove the four screws holding the cabinet top. Lift the cover off of the unit. Remove the two large brackets located at the front of the unit. Remove the small brackets (see diagram).

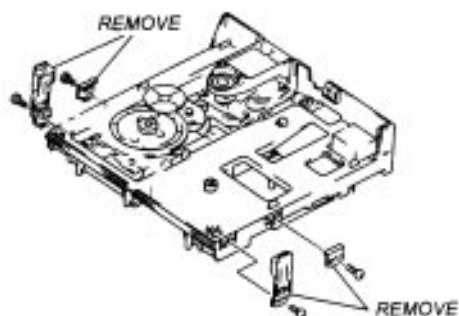

Slide the table forward to expose the gear assy. Take care not to damage or disconnect the flex cable attached to the sensor board. Remove the Rubber cushion. (see diagram below)

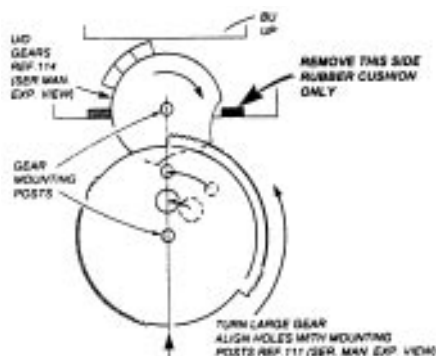

Rotate the large gear (ref. 111) to line up the holes with the U/D gears (ref. 114) mounting post. (See diagram)

Reassemble the unit and check operation.



Filename: HFP0465.SB
Directory: J:\SBDOC\JAN96
Template: C:\WINWORD\TEMPLATE\S_BULL.DOT
Title:
Subject:
Author: Hoyt Wing Lee
Keywords:
Comments:
Creation Date: 01/31/96 9:38 AM
Revision Number: 2
Last Saved On: 01/31/96 9:38 AM
Last Saved By: Hoyt Wing Lee
Total Editing Time: 0 Minutes
Last Printed On: 04/01/96 8:54 AM
As of Last Complete Printing
Number of Pages: 1
Number of Words: 163 (approx.)
Number of Characters: 931 (approx.)