

CDP-CX240

SERVICE MANUAL

*US Model
Canadian Model*



Model Name Using Similar Mechanism	CDP-CX250
CD Mechanism Type	CDM-40B
Base Unit Type	KSM-213BKN/M-N
Optical Pick-up Type	KSS-213B/S-N

SPECIFICATIONS

Compact disc player

Laser	Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous
Laser output	Max 44.6 μW * * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture.
Frequency response	20 Hz to 20 kHz $\pm 0.5 \text{ dB}$
Signal-to-noise ratio	More than 107 dB
Dynamic range	More than 98 dB
Harmonic distortion	Less than 0.0045 %
Channel separation	More than 100 dB

Outputs

	Jack type	Maximum output level	Load impedance
LINE OUT	Phono jacks	2 V (at 50 kilohms)	Over 10 kilohms
DIGITAL OUT (OPTICAL)	Optical output connector	-18 dBm	Wave length: 660 nm

General

Power requirements	120 V AC, 60 Hz
Power consumption	12 W
Dimensions (approx.) (w/h/d)	When the front cover is closed 430 $\times$ 200 $\times$ 480 mm (17 $\times$ 7 7/8 $\times$ 19 in.) incl. projecting parts
Mass (approx.)	9.5 kg (21 lbs)

Supplied accessories

Audio cord (2 phono plugs - 2 phono plugs) (1)
Remote commander (remote) (1)
Sony SUM-3 (NS) batteries (2)
CD booklet holders (2) and label (1)

Design and specifications are subject to change without notice.

COMPACT DISC PLAYER

SONY®



Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.
ADVARSEL : USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGA UDSÆTTELSE FOR STRÅLING.
VORSICHT : UNSICHTBARE LASERSTRALUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSSVERRIGELUNG ÜBERBRÜCKT, NICHT DEM STRAHL AUSSETZEN.
VARO! : AVATTAESSA JA SUOJALUKITUS OHITETTASSA OLET ALT-TINA NÄKYMÄTTÖMÄLLE LASERSÄTEYLLÄ. ÄLÄ KATSO SÄTEESEEN.
VARNING : OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD, BETRÄKTA EJ STRÅLEN.
ADVARSEL : USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES, UNNGÅ EKSPONERING FOR STRÅLEN.
VIGYÁZAT! : A BURKOLAT NYITÁSÁKOR LÁTHATATIAN LÉZERSUGÁRVESZÉLY! KERÜLJE A BESUGÁRZÁST!

The following caution label is located inside of the unit.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth Ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

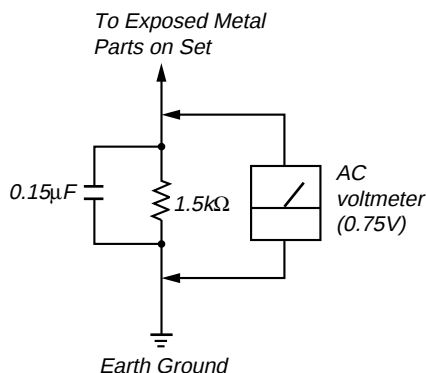


Fig. A. Using an AC voltmeter to check AC leakage.

MODEL IDENTIFICATION — BACK PANEL —



PARTS No.	MODEL
4-999-020-0□	US
4-999-020-1□	Canadian

SECTION 1

SERVICING NOTE

TABLE OF CONTENTS

1. SERVICING NOTE	3
2. GENERAL	6
3. DISASSEMBLY	
3-1. Front Panel Assembly	7
3-2. Back Panel Assembly	7
3-3. Base (Door, Gear) Assembly	8
3-4. Table Assembly	8
3-5. Mechanism Deck	9
3-6. Base Unit	9
4. TEST MODE	10
5. ADJUSTMENTS	
5-1. Mechanical Adjustment	13
5-2. Electrical Block Checking	19
6. DIAGRAMS	
6-1. Circuit Boards Location	22
6-2. Block Diagrams	
• BD Section	23
• Main Section	25
6-3. Schematic Diagram – BD Section –	29
6-4. Printed Wiring Board – BD Section –	31
6-5. Printed Wiring Board – Main Section –	33
6-6. Schematic Diagram – Main (1/2) Section –	35
6-7. Schematic Diagram – Jack Section –	37
6-8. Printed Wiring Board – Jack Section –	39
6-9. Schematic Diagram – Display Section –	41
6-10. Printed Wiring Board – Display Section –	43
6-11. Schematic Diagram – Sensor/Motor Section –	45
6-12. Printed Wiring Board – Sensor/Motor Section –	46
6-13. IC Block Diagrams	47
6-14. IC Pin Functions	49
7. EXPLODED VIEWS	
7-1. Case and Back Panel Section	54
7-2. Disc Table Section	55
7-3. Front Panel Section	56
7-4. Mechanism Section-1 (CDM-40B)	57
7-5. Mechanism Section-2 (CDM-40B)	58
7-6. Mechanism Section-3 (CDM-40B)	59
7-7. Base Unit Section (KSM-213BKN/M-N)	60
8. ELECTRICAL PARTS LIST	61

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens. The emission check enables continuous checking of the S curve.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the “S curve check” in “CD section adjustment” and check that the S curve waveform is output three times.

CD-TEXT TEST DISC

This unit is able to display the TEXT data (character information) written in the CD on its fluorescent indicator tube.

The CD-TEXT TEST DISC (TGCS-313:J-2501-126-A) is used for checking the display.

To check, perform the following procedure.

Checking Method:

1. Turn ON the power, set the disc on the disc table with the side labeled as “test disc” as the right side, close the front cover, and chuck the disc.
2. The following will be displayed on the fluorescent indicator tube. (The display switches each time the TIME/TEXT button is pressed.)
Display : Main Artist Test or CD TEXT TEST DISC (Album Title)
3. Press the ▶ button and play back the disc.
4. The following will be displayed on the fluorescent indicator tube. (If nothing is displayed, press the TIME/TEXT button.)
Display : 1kHz/0 dB/ L&R
5. Rotate ◀◀ and ▶▶ buttons to switch the track. The text data of each track will be displayed.
For details of the displayed contents for each track, refer to “Table 1 : CD-TEXT TEST DISC TEXT Data Contents” and “Table 2 : CD-TEXT TEST DISC Recorded Contents and Display”.

Restrictions in CD-TEXT Display

In this unit, some special characters will not be displayed properly. These will be displayed as a space or a character resembling it. For details, refer to “Table 2 : CD-TEXT DISC Recorded Contents and Display”.

Table 1 : CD-TEXT TEST DISC TEXT Data Contents (TRACKS No. 1 to 41:Normal Characters)

TRACK No.	Displayed Contents	TRACK No.	Displayed Contents
1	1kHz/0dB/L&R	22	1kHz/-90dB/L&R
2	20Hz/0dB/L&R	23	Infinity Zero w/o emphasis//L&R
3	40Hz/0dB/L&R	24	Infinity Zero with emphasis//L&R
4	100Hz/0dB/L&R	25	400Hz+7kHz(4:1)/0dB/L&R
5	200Hz/0dB/L&R	26	400Hz+7kHz(4:1)/-10dB/L&R
6	500Hz/0dB/L&R	27	19kHz+20kHz(1:1)/0dB/L&R
7	1kHz/0dB/L&R	28	19kHz+20kHz(1:1)/-10dB/L&R
8	5kHz/0dB/L&R	29	100Hz/0dB/L*
9	7kHz/0dB/L&R	30	1kHz/0dB/L*
10	10kHz/0dB/L&R	31	10kHz/0dB/L*
11	16kHz/0dB/L&R	32	20kHz/0dB/L*
12	18kHz/0dB/L&R	33	100Hz/0dB/R*
13	20kHz/0dB/L&R	34	1kHz/0dB/R*
14	1kHz/0dB/L&R	35	10kHz/0dB/R*
15	1kHz/-1dB/L&R	36	20kHz/0dB/R*
16	1kHz/-3dB/L&R	37	100Hz Squer Wave//L&R
17	1kHz/-6dB/L&R	38	1kHz Squer Wave//L&R
18	1kHz/-10dB/L&R	39	1kHz w/emphasis/-0.37dB/L&R
19	1kHz/-20dB/L&R	40	5kHz w/emphasis/-4.53dB/L&R
20	1kHz/-60dB/L&R	41	16kHz w/emphasis/-9.04dB/L&R
21	1kHz/-80dB/L&R		


NOTE : The contents of Track No. 1 to 41 are the same as those of the current TEST DISC-their titles are displayed.

Table 2: CD-TEXT TEST DISC Recorded Contents and Display
(In this unit, some special characters cannot be displayed. This is no a fault.)

TRACK No.	Recorded contents	Display
42	! " # \$ % & ' (21h to 27h)1kHz 0dB L&R	← All the same
43	() * + , - . / (28h to 2Fh)	← All the same
44	0 1 2 3 4 5 6 7 (30h to 37h)	← All the same
45	8 9 : ; < = > ? (38h to 3Fh)	← All the same
46	@ A B C D E F G (40h to 47h)	← All the same
47	H I J K L M N O (48h to 4Fh)	← All the same
48	P Q R S T U V W (50h to 57h)	← All the same
49	X Y Z [\] ^ _ (58h to 5Fh)	X Y Z [\] ^ _ (58....
50	` a b c d e f g (60h to 57h)	← All the same
51	h i j k l m n o (68h to 6Fh)	← All the same
52	p q r s t u v w (70h to 77h)	← All the same
53	x y z { } ~ ■ (78h to 7Fh)	x y z { } ~ (78....
54	■ i ¢ £ ¤ ¥ ¦ § (A0h to A7h) 8859-1	(A0.... ■ is not displayed
55	♪ © ª « ¬ ® ¯ (A8h to AFh)	♪ (A8.... © ª « ¬ ® ¯ are not displayed
56	· ± ² ³ ´ µ ¶ · (B0h to B7h)	´ µ · (B0.... · ± ² ³ ¶ are not displayed
57	† º » ¼ ½ ¾ ¿ (B8h to BFh)	† ¿ (B8.... º » ¼ ½ ¾ are not displayed
58	À Á Â Ã Ä Å Æ Ç (C0h to C7h)	← All the same
59	È É Ê Ë Ì Í Î Ï (C8h to CFh)	← All the same
60	Ð Ñ Ò Ó Ô Õ Ö × (D0h to D7h)	← All the same
61	Ø Ù Ú Û Ü Ý Þ ß (D8h to DFh)	Φ Ù Ú Û Ü Ý Þ ß (D8....
62	à á â ã ä å æ ç (E0h to E7h)	← All the same
63	è é ê ë ì í î ï (E8h to FFh)	← All the same
64	ð ñ ò ó ô õ ö ÷ (F0h to F7h)	ð ñ ò ó ô õ ö ÷ (F0....
65	ø ù ú û ü ý þ ÿ (F8h to FFh)	← All the same
66	No.66	← All the same
67	No.67	← All the same
to	to	to
99	No.99	← All the same

SECTION 2 GENERAL

Front Panel

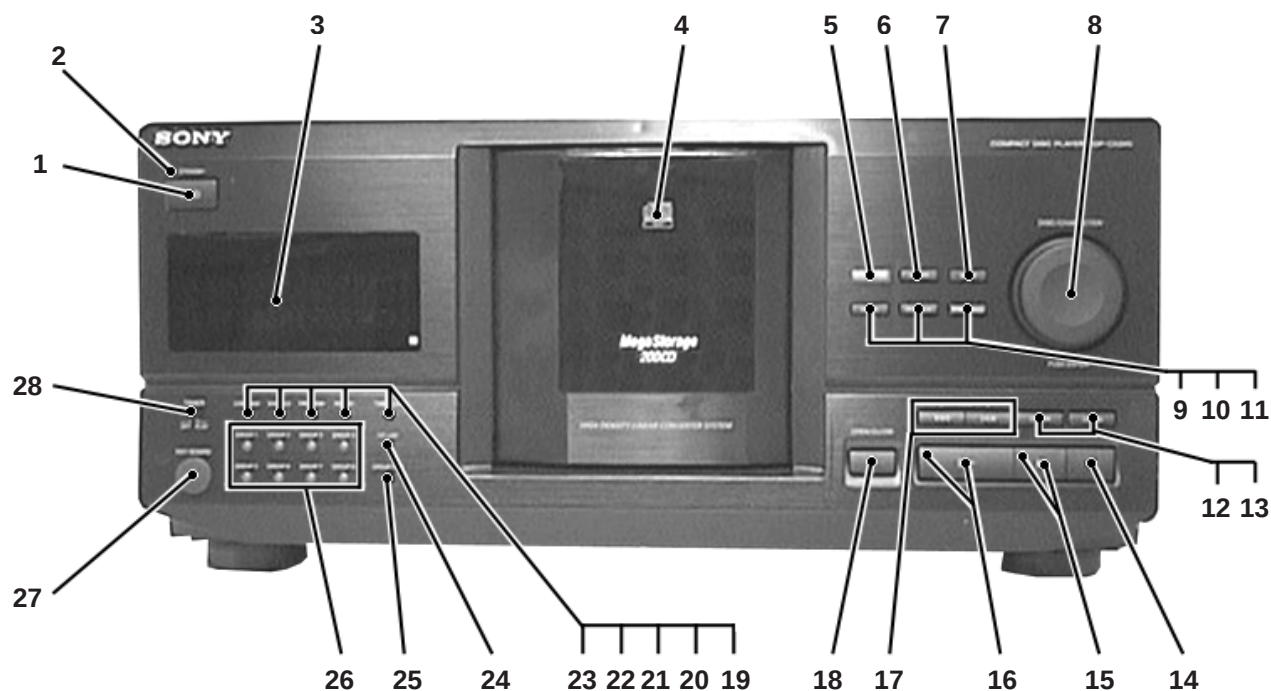

LOCATION OF PARTS AND CONTROLS


- 1 I/⏻ (power) button
- 2 STANDBY indicator
- 3 Display window
- 4 Front cover
- 5 MEGA control button and indicator
- 6 X-FADE button
- 7 INPUT button
- 8 DISC/CHARACTOR dial and PUSH ENTER button
- 9 FADER button
- 10 NO DELAY button
- 11 MEMO SEARCH button
- 12 CHECK button
- 13 CLEAR button
- 14 ■ (stop) button
- 15 || (pause) button and indicator
- 16 ▷ (play) button and indicator
- 17 ◀◀ AMS ▶▶ button
- 18 ⌵ OPEN/CLOSE button
- 19 TIME/TEXT button
- 20 REPEAT button
- 21 PROGRAM button
- 22 SHUFFLE button
- 23 CONTINUE button
- 24 HIT LIST button and indicator
- 25 GROUP FILE button
- 26 GROUP 1 to 8 button and indicator
- 27 KEY BOARD jack
- 28 TIMER (OFF/PLAY) switch

* AMS is abbreviation for Automatic Music Sensor.


SECTION 3 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


3-1. FRONT PANEL ASSEMBLY

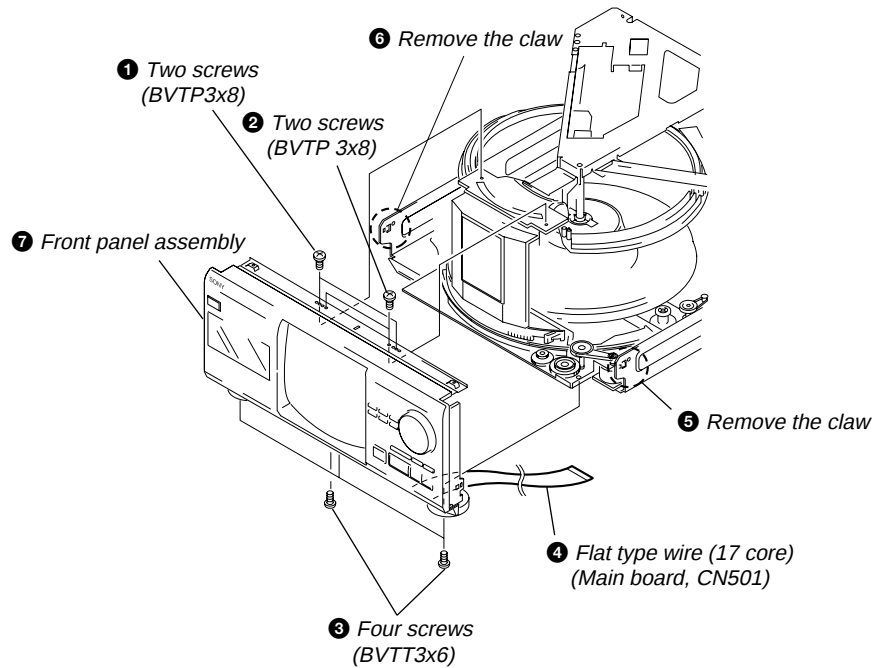


3-2. BACK PANEL ASSEMBLY

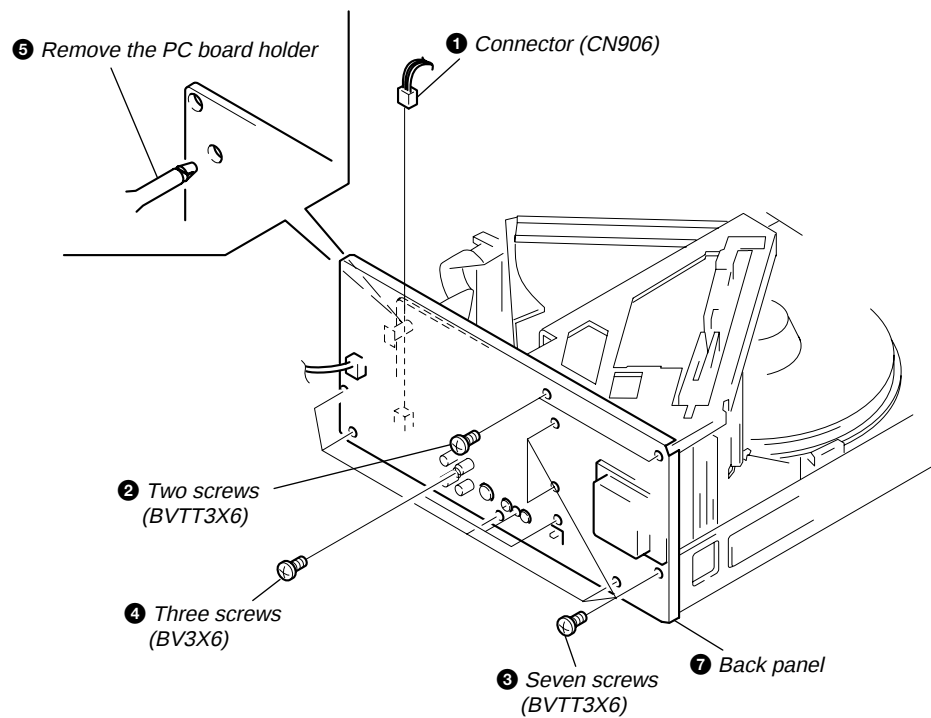


3-3. BASE (DOOR, GEAR) ASSEMBLY

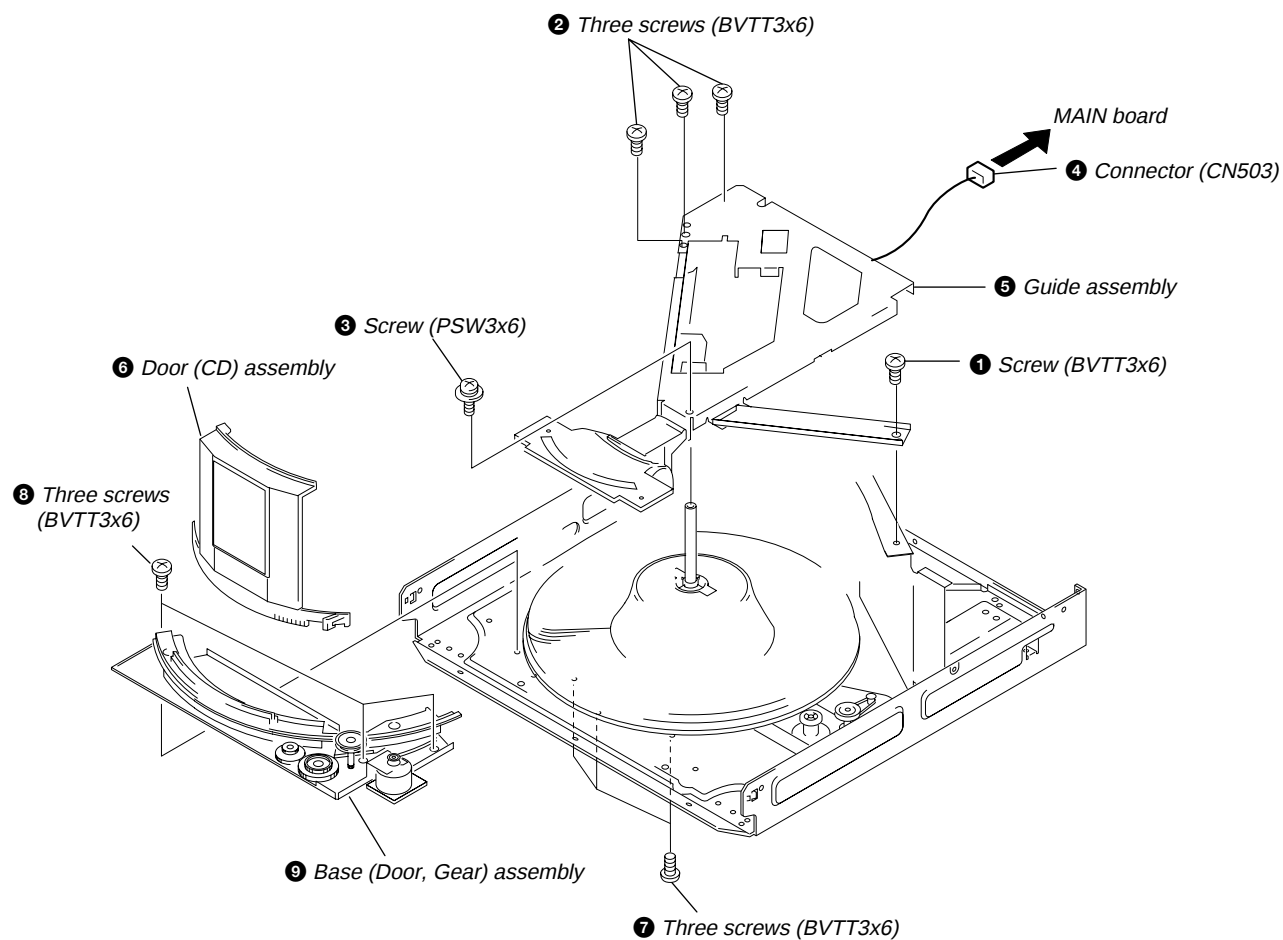


3-4. TABLE ASSEMBLY

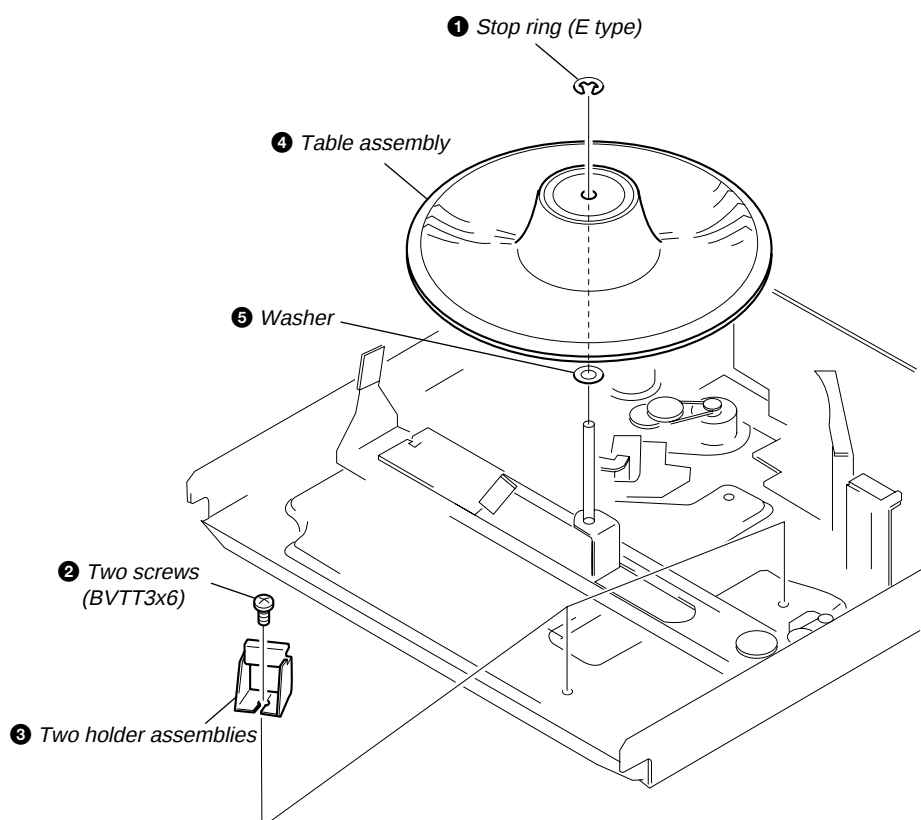

3-5. MECHANISM DECK

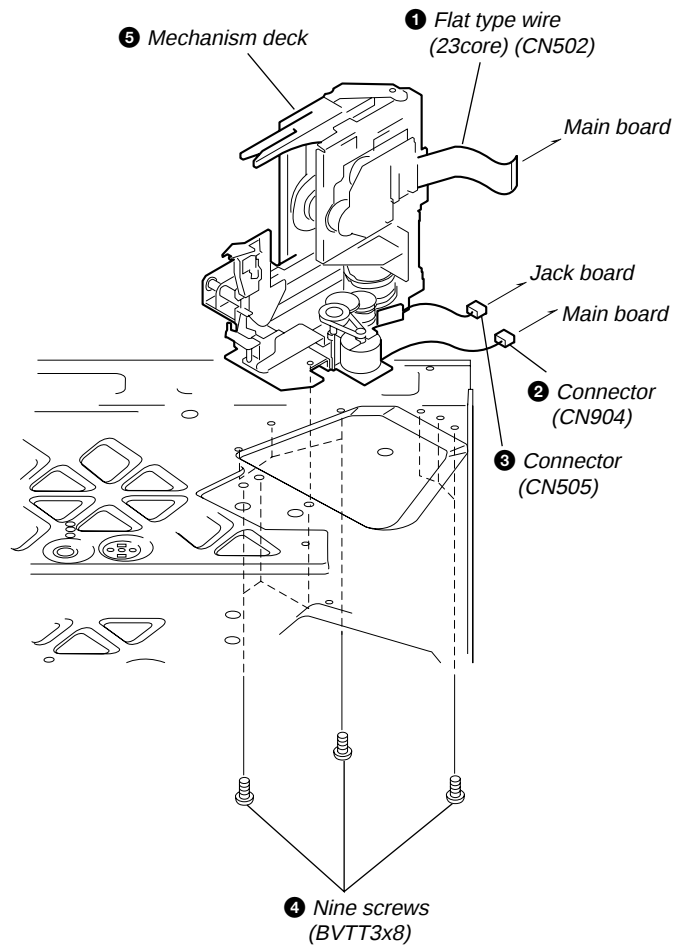

3-6. BASE UNIT

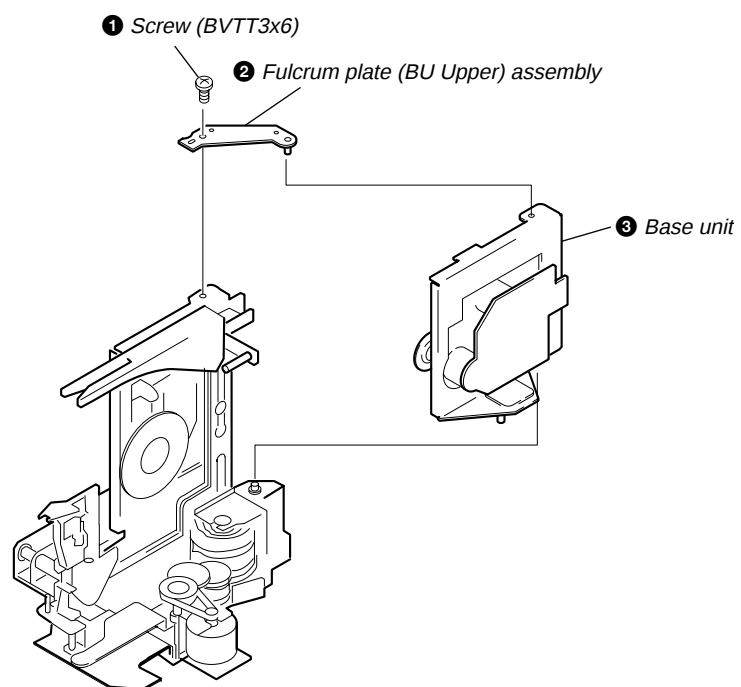

SECTION 4 TEST MODE

4-1. DISPLAY CHECK MODE

With the power turned off (standby state), press the  button while pressing the  (pause) button.

All FL segments and grids light up together with the  (play),  (pause), and **[STANDBY]** LEDs.

At the same time, the **[GROUP]** LEDs are lights up simultaneously.

Note: To exit this mode, press the  (stop) button.

4-2. ADJ MODE

1. Turn ON the power of the unit, set disc to disc table, and perform chucking.
2. Disconnect the power supply plug from the outlet.
3. To set ADJ mode, connect the test point (ADJ) of the MAIN board to Ground, and connect the power supply plug to the outlet.

The power will turn on automatically, and the first track will be played.

In this mode, table rotation and loading operations are not performed because it is taken that the disc has already been chucked.

Note: The same operations are also performed in the following when the test point (ADJ) is connected to Ground after turning on the power.

- Direct search (movement of sledding motor) is not performed during accessing
- Ignored even when GFS becomes L
- Ignored even when the Q data cannot be read
- Focus gain does not decrease
- Spindle gain does not decrease
- Servo related settings can be set manually and checked (Refer to ADJ Mode Special Functions Table)

ADJ Mode Special Functions Table

(The buttons shown with () function by using the supplied remote commander only)

Button	Function
CONTINUE	Servo average display Displays VC, FE, RF, TE and traverse in hexadecimal numbers
SHUFFLE	Focus bias display Each time this is pressed, the focus bias is switched between 1 and 2 (1) Bias actually set Optimum bias Minimum jitter (2) U:Upper aliasing bias L:Lower aliasing bias
PROGRAM	Auto gain display Displays focus, tracking, sledding in hexadecimal numbers
GROUP 1 (1)	Increases the focus bias in 8 steps.
GROUP 2 (2)	Sets the focus bias in the middle of aliasing.
GROUP 3 (3)	Turns off the tracking and sledding servo
GROUP 4 (4)	Returns the auto gain to the initial value (30)
GROUP 5 (5)	Turns off the focus servo
GROUP 6 (6)	Decreases the focus bias in 8 steps.
GROUP 7 (7)	Re-adjusts the focus bias
GROUP 8 (8)	Turns on the tracking and sledding servo
(9)	Switches the focus servo gain between normal and down FG. norm: normal, FG. down: down
(10/0)	Sets the focus bias to 0 (no bias) Next, displays the jitter measured at the focus bias set
CHECK	S-curve observation mode. (Exits this mode when the  button is pressed.)
CLEAR	Automatic eccentric measurement The results of measurement is displayed in μm directly.

4-3. KEY AND DISPLAY CHECK MODE


To set this mode, connect the test point (AFADJ) on the MAIN board to Ground, and connect the power supply plug to the outlet.

- All FL segments and grids will light up. (All lit check)
When a button is pressed, the types of buttons pressed until then will be displayed on the left side and the number of the buttons will be displayed on the right side. However, these will not be displayed for the following special buttons.

-  (stop) button: FL segment check
(Refer to FL Tube Check Patterns)
-  (pause) button: FL grid check
(Refer to FL Tube Check Patterns)
The pause LED also lights up simultaneously.
-  (play) button: All FL segment and grid will light up.
The play LED also lights up simultaneously.

FL Tube Check Patterns

Segment check

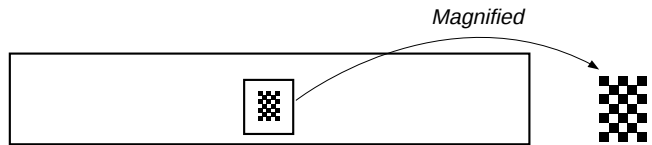

Grid check




- When the jog dial is rotated to the right, the GROUP LEDs light up in the order of 1→2..8→1.
- When the jog dial is rotated to the left, the GROUP LEDs light up in the order of 8→7..1→8.

• Abbreviation

FL: Fluorescent Indicator Tube

[MAIN BOARD] – Component Side –

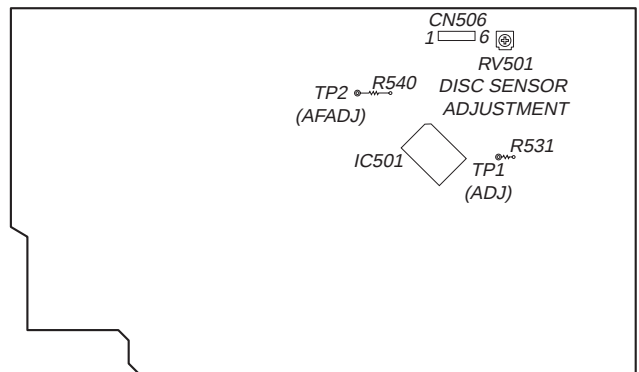


4-4. AGING MODE

Aging Mode


- Mode which repeatedly changes and plays back discs automatically in the unit.
- It will repeat aging as long as no errors occur.
- If an error occurs during aging, it will stop all servos, motors, etc. instantaneously, display the error number, and stop operations. However, the stopping conditions differ according to whether the unit is equipped with the “self-protection function during errors” described later.
The function serves to maintain the state of the unit when errors occur.

Sequence of Aging Mode

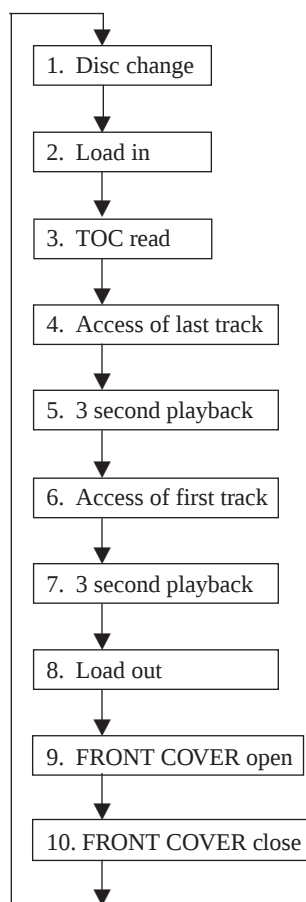

Order of Disc Change

(1 cycle takes 3 minutes)

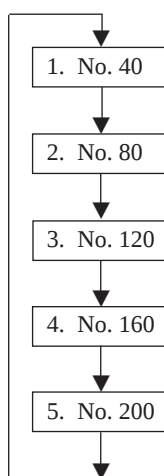

Special Aging Mode Functions

The aging mode is provided with the following convenient functions

- Disc setting mode (*1)
- Selection of presence of protection function during error (*2)
- Count function of aging cycle (*3)

*1 Disc setting mode:

5 discs are set before setting the aging mode. This mode makes the setting of these discs more easy.

*2 Self protection function during errors:


Function which voluntarily corrects errors which occur during normal operations by retries.

If this function is not provided, all operations will be stopped without retiring. It is suitable for checking errors with low reproducibility.

If this function is provided, and errors can be corrected by retries, aging will be continued without stopping.

*3 Aging cycle count function:

Functions which displays the number of agings carried out on the Fluorescent indicator tube in numbers. One aging cycle consists of five discs.

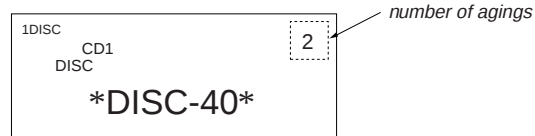

Aging Method

1. Turn ON the power of the unit. Press the  and open the front cover.
2. Change the  switch (S901) on set to .
3. Press the  button of the remote commander for aging mode (J-2501-123-A).
4. When the disc set mode is set, the  and  LEDs blink.
5. Rotate the  dial. The slits (No. 40, 80, 120, 160, 200) for setting the discs will come forward. Insert the discs into these slits. Do not set the discs in other slits.
6. Set whether the self-protection function during errors is equipped with the unit. Press the  button. If "REPEAT" is displayed on the Fluorescent indicator tube, it means the function is provided. If "REPEAT" is not displayed, it means the function is not provided.
7. Press the  button.
8. The  LED blinks, the aging mode is set, and aging is started.
9. The aging cycle lasts 3 minutes. If errors occur during aging, the error number will be displayed on the Fluorescent indicator tube. (Refer to the following table for the details of the errors.)
10. Aging will be repeated as long as no errors occur.
11. After each aging cycle, the number displayed on the Fluorescent indicator tube will increase.
12. To end aging, press the  button.

Error Display

120 Err01
Disc number Error code

Error code

Code number	Name	Contents
Err 01	DISC sensor check 1	No disc in the specified slit
Err 02	DISC sensor check 2	Disc in other slits
Err 03	Table operation check 1	Table motor current over
Err 04	Table operation check 2	No table sensor input
Err 05	Loading operation check 1	Load in timeover
Err 06	Loading operation check 2	Load out timeover
Err *1	BU related check 1	Access timeover
Err *2	BU related check 2	High speed search NG
Err *3	BU related check 3	Q data read error
Err *4	BU related check 4	BU operation (from focus search to until signal can be read) timeover
Err *5	BU related check 5	GFS monitor error
Err *6	BU related check 6	Focus cannot be imposed by focus search
Err *7	BU related check 7	Auto focus bias adjustment cannot be performed

The * numbers mean the following according to the state of the unit during aging

2 : From chucking to end of TOC read

3 : From end of TOC read to end of last track playback


4 : From end of last track playback to end of first track playback

SECTION 5 ADJUSTMENTS


5-1. MECHANICAL ADJUSTMENT

Perform the following steps before carrying out adjustments.


1. Turn ON the power of the unit, set disc to disc table No. 92, and perform chucking.
2. Turn OFF the power.
3. Remove the case.
4. While pressing the **STOP** button, turn ON the **I/⏻** button. The test mode is set.
5. The POWER button LED starts blinking. (Test mode)

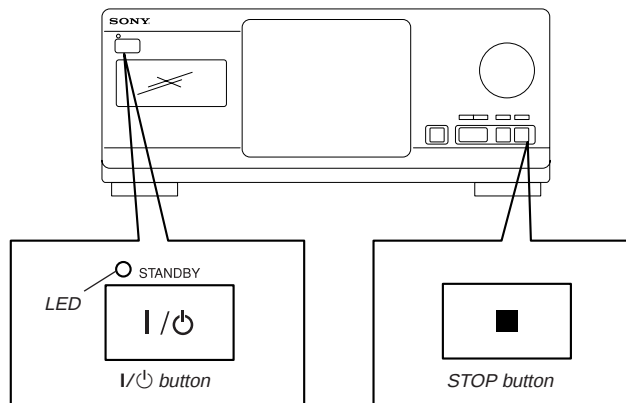




NOTE 1: The cam will start rotating when the GROUP 1 or GROUP 5 button is pressed continuously in the test mode.

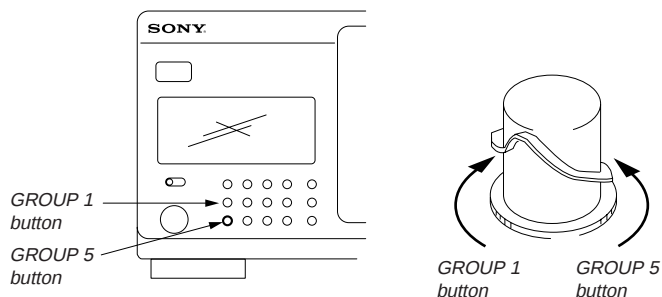




NOTE 2: If the power cannot be supplied, the cam can be rotated by rotating the pulley with your finger.

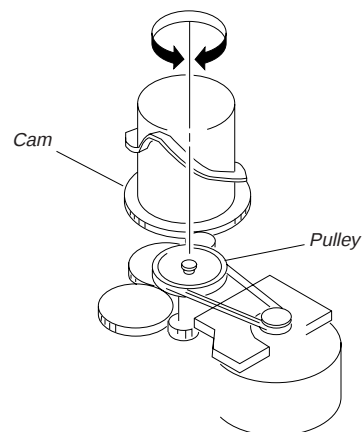

GUIDE (DISC T) ALIGNMENT

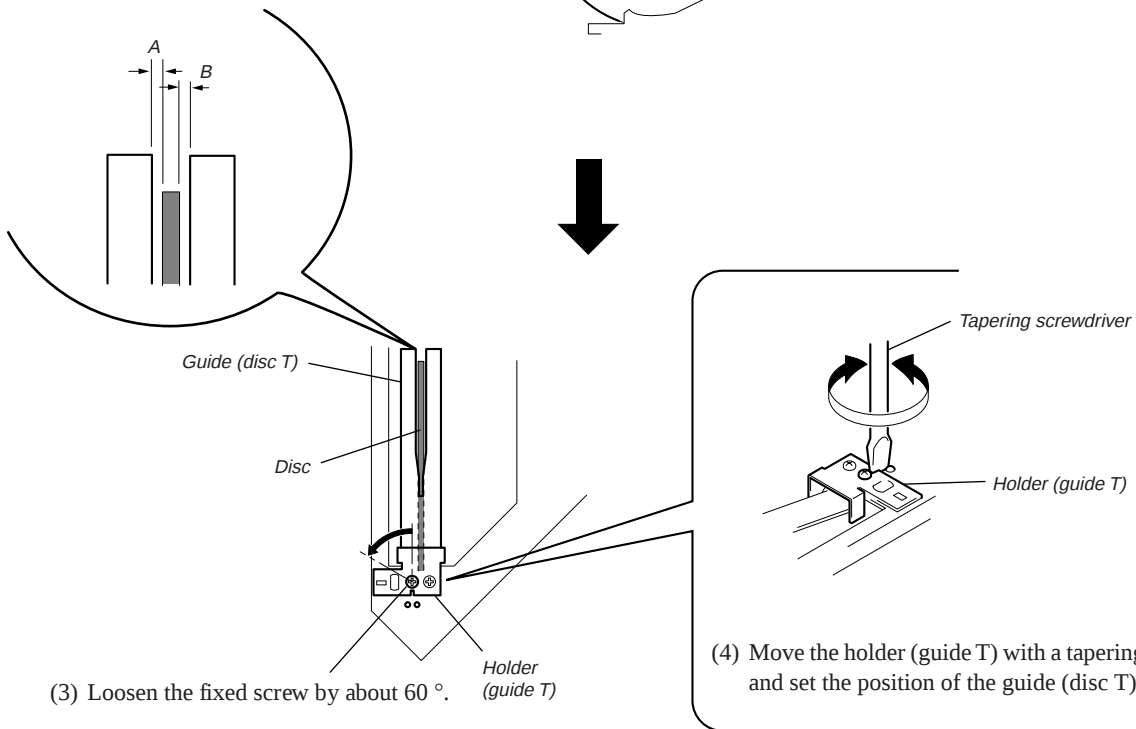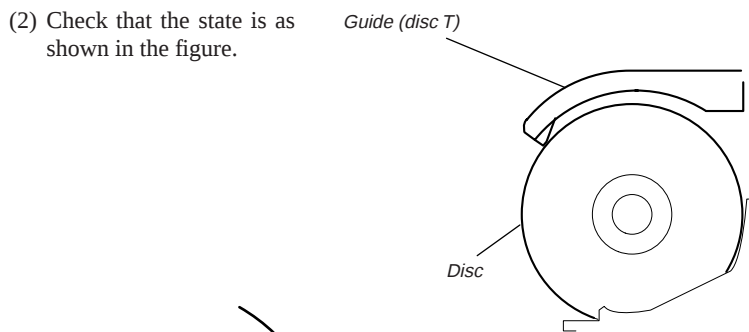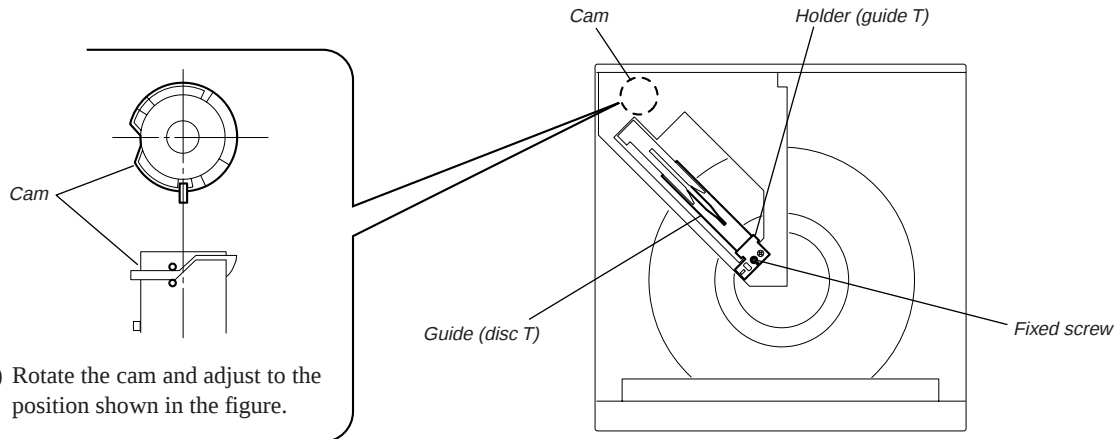

HOLDER (DISC A) ALIGNMENT

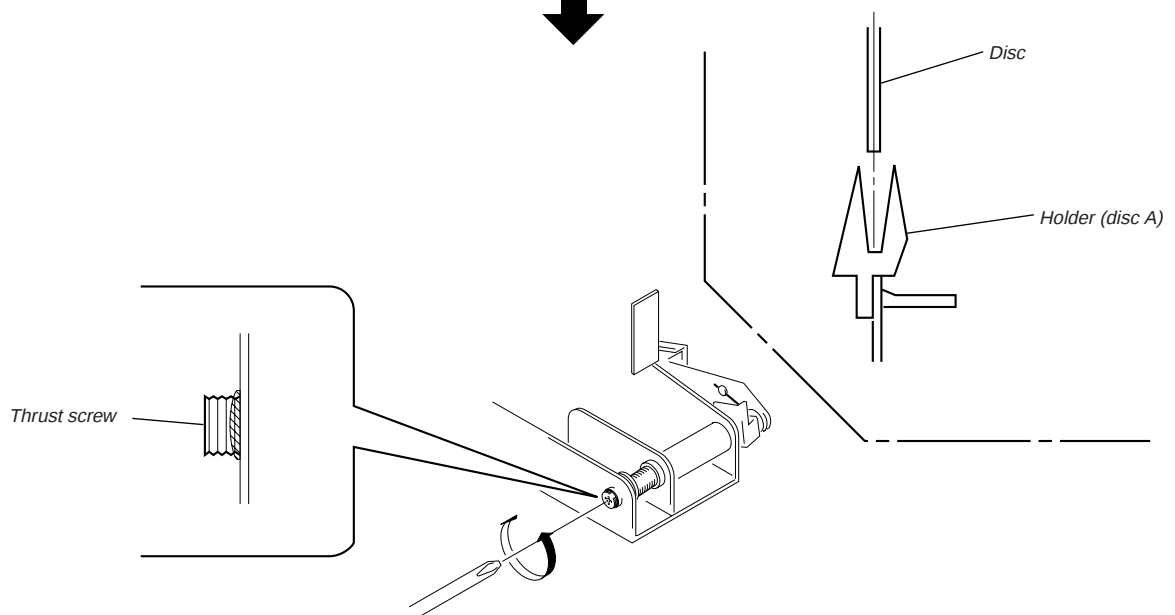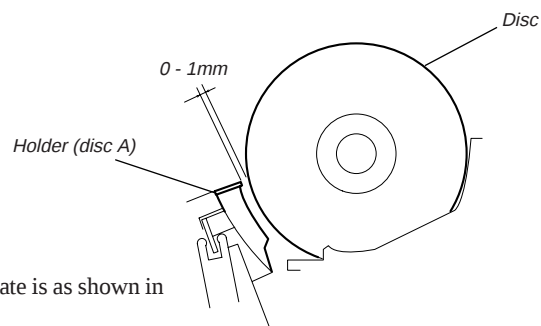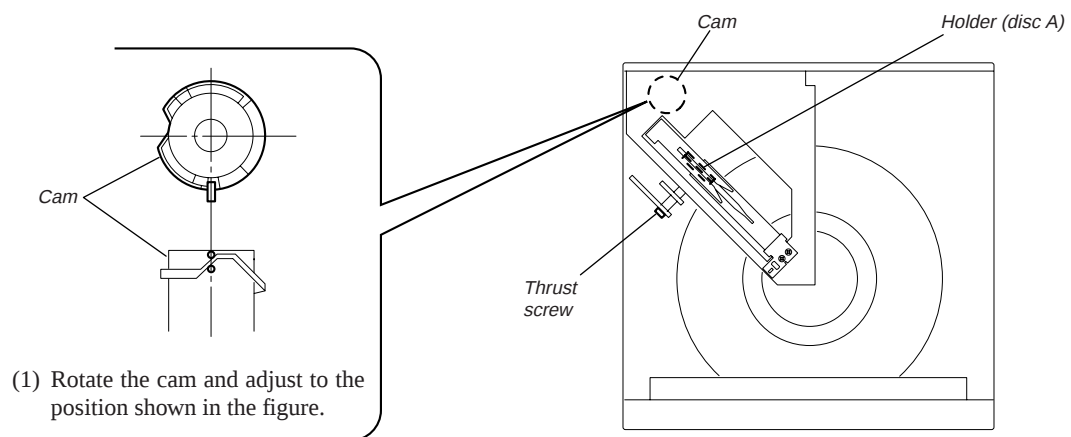


SENSOR ALIGNMENT

Perform this adjustment after the “holder (disc A) adjustment”.
If the disc table swings to the left and right just before the disc is
chucked, perform the following adjustment.

CAUTION:


The LED may not light up in steps (3) and (4) for some
microprocessor versions, and consequently adjustments will not
be possible.

In this case, fix the bracket (sensor) at the mechanical center.
As fine adjustments need to be performed in “Disc Sensor
Adjustment” in Electrical Adjustments, sensor alignment need
not be performed here.

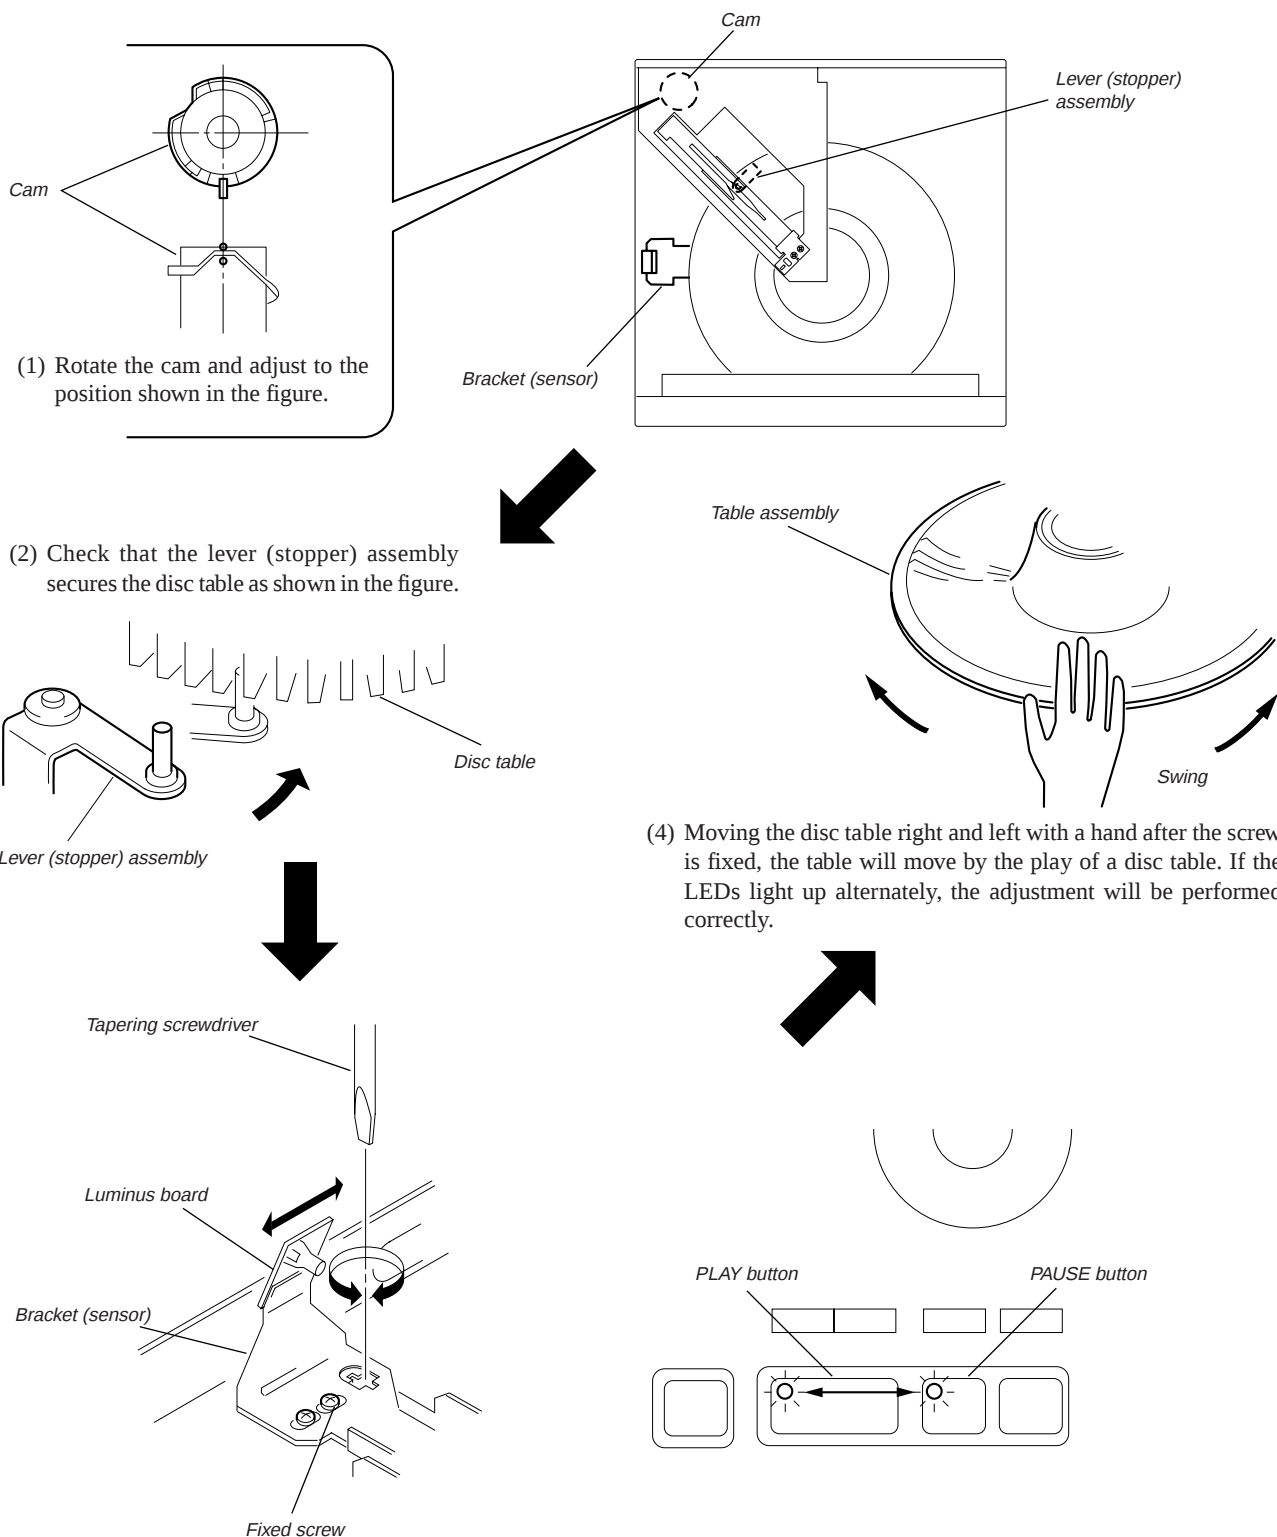


- (3) Loosen the fixed screw by 60° to 90°, and use a tapering screwdriver to adjust the screw as shown in the figure.
Move the bracket (sensor) with the tapering screwdriver little by little, and fix the fixed screw at where the play button's LED (green) is
switched to the pause button's LED (orange) (or its reverse).



PULLEY AND DISC CENTER HOLE ALIGNMENT

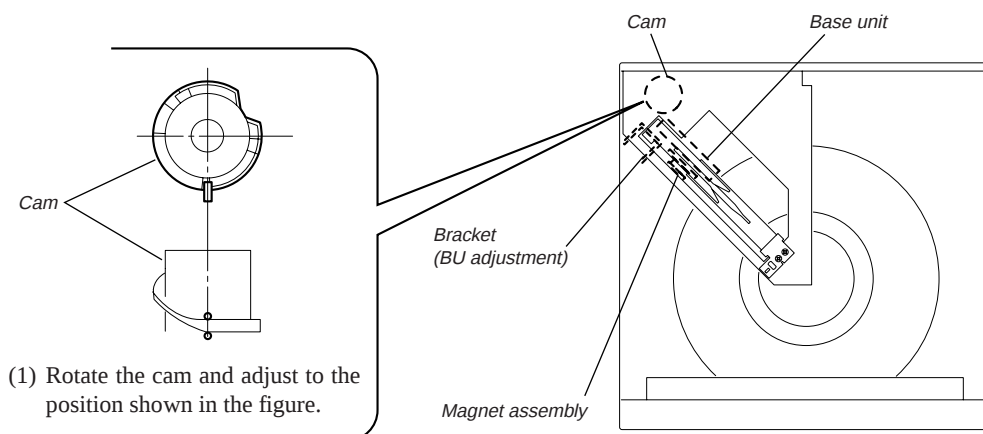


(2) Check that the state is as shown in the figure.

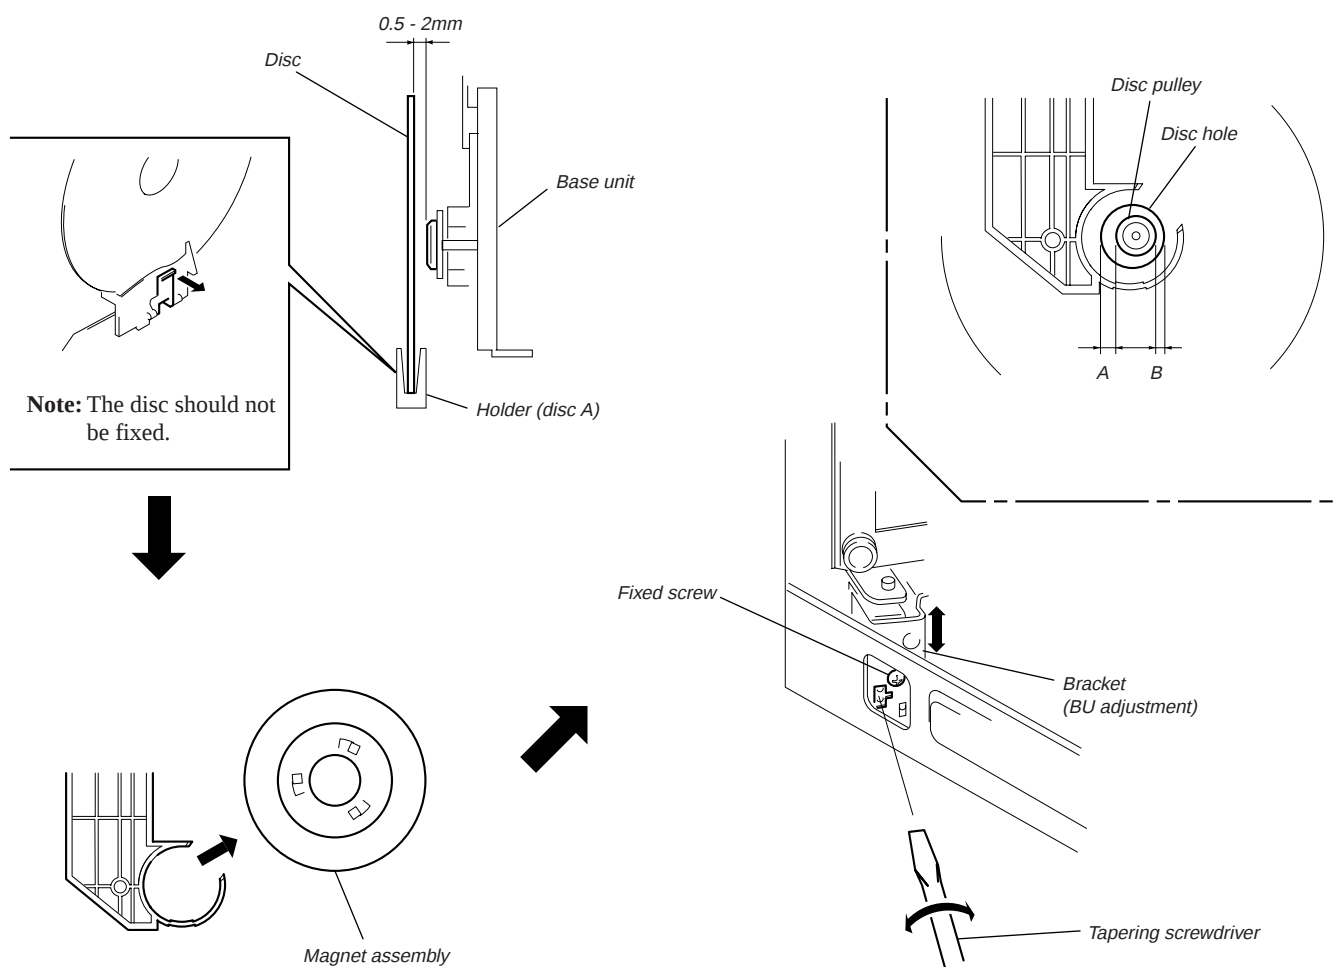

MAGNET ASSY ALIGNMENT

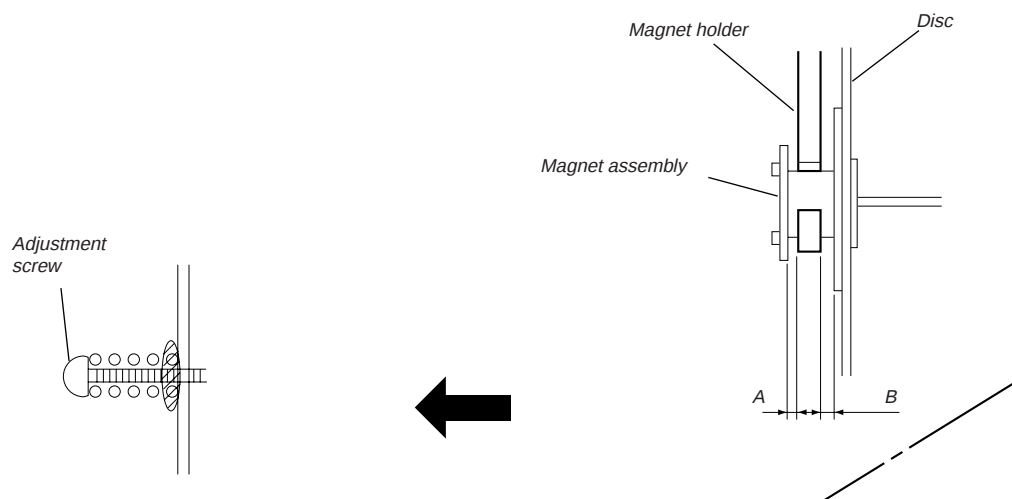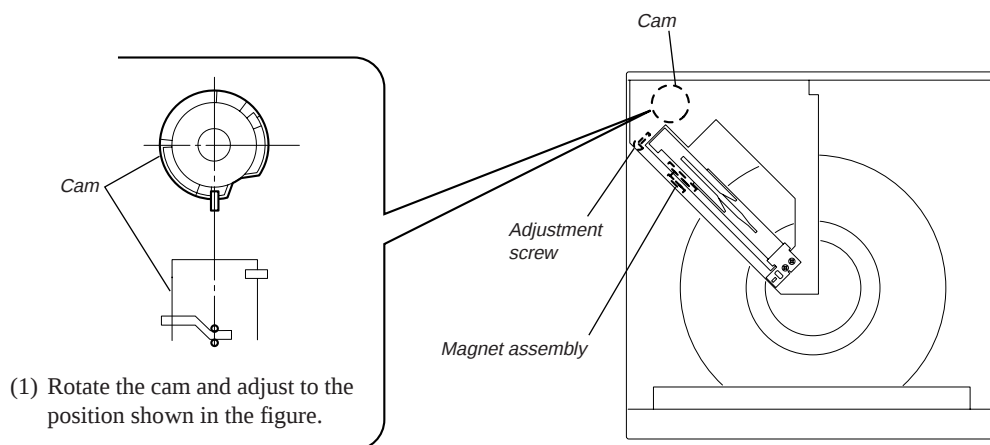

(3) Apply suitable locking compound to the  part after adjusting.

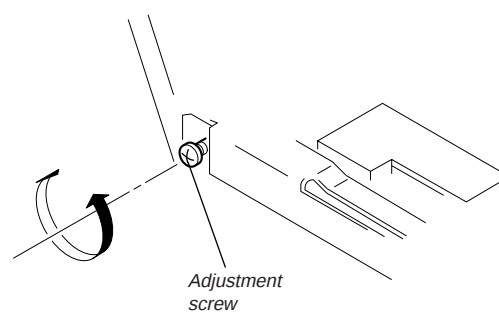


(2) Rotate the adjustment screw until $A=B$ or between $A:B=2:1$ and $1:2$

5-2. ELECTRICAL BLOCK CHECKING

Note:

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S-Curve Check

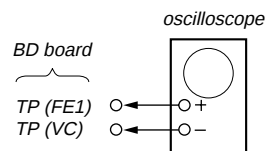

Procedure :

1. Chuck the disc (YEDS-18) beforehand, and disconnect the power cord from the outlet.
2. Connect oscilloscope to test point TP (FE1) on BD board.
3. Connect test point TP1 (ADJ) on MAIN board to ground with lead wire.
4. The ADJ mode is set when the power cord is inserted into the outlet and power is supplied.
5. The fifth track is played automatically.
6. Press the **CHECK** button.
7. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 1 Vp-p.

S-curve waveform

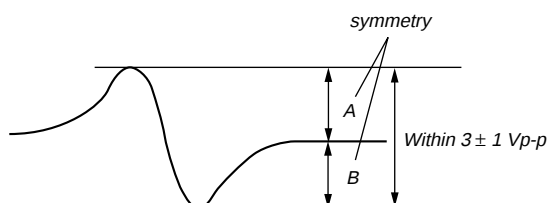


8. Pressing the **STOP** button stops the output of the waveform (s curve).
9. After check, remove the lead wire connected in step 3.

Note : • Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.

- Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

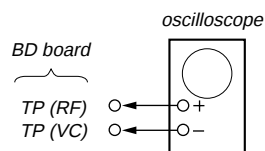


Procedure :


1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in to play the number five track.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note: A clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

RF signal waveform

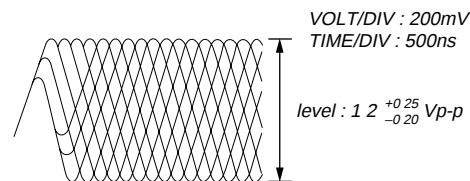


E-F Balance Check

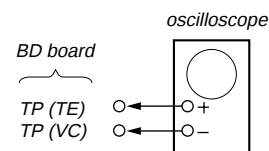

Procedure :


1. Chuck the disc (YEDS-18) beforehand, and disconnect the power cord from the outlet.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Connect test point TP1 (ADJ) on MAIN board to ground with lead wire.
4. The ADJ mode is set when the power cord is inserted into the outlet and power is supplied.
5. The fifth track is played automatically.
6. Press the **GROUP 3** button. (The tracking servo and the sledging servo are turned OFF.)
7. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform. Confirm the following :
 $A/B \times 100 = \text{less than } \pm 22\%$

Traverse waveform

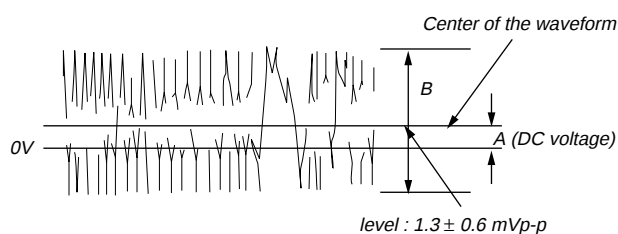

8. Press the **GROUP 8** button. (The tracking servo and sledging servo are turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 7.

Traverse waveform

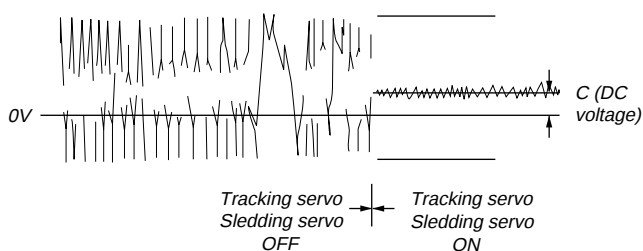


9. Disconnect the lead wire of TP1 (ADJ) connected in step 2.

Disc Sensor Adjustment


Perform this adjustment after completing all adjustments of the mechanism section.

If not performed accurately, the presence of the disc may not be detected properly.


Connection 1:

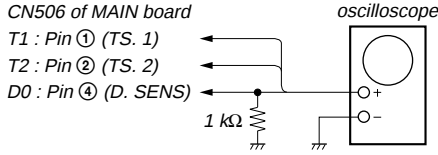


Waveform 1:

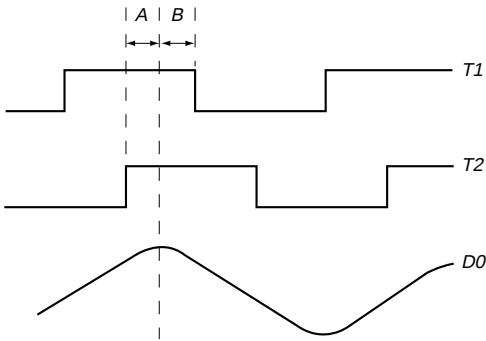

Connection 2:

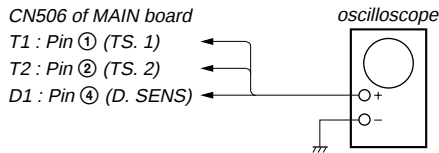


Waveform 2

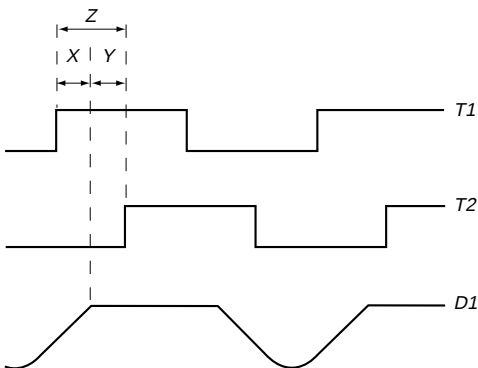


Procedure:

1. Connect the oscilloscope to Pins ①, ②, and ④ of CN506 of the MAIN board. Also connect a 1 kΩ resistor to Pin ④ at the same time. (Connection 1)
2. Check that no discs are loaded in the unit.
3. With the power OFF, press the **I/O** button while pressing the **INPUT** button, and turn on the power at the same time.
4. The rotary table will continue rotating in the clockwise direction.
5. Observe the waveform at that time on the oscilloscope.
6. Loosen the screw securing the LUMINOUS board slightly.
7. Slide the LUMINOUS board to the left and right so that the peak of the D0 waveform is at the center between the descending point of the T1 waveform and ascending point of the T2 waveform. (Waveform 1) After adjusting, apply locking compound.

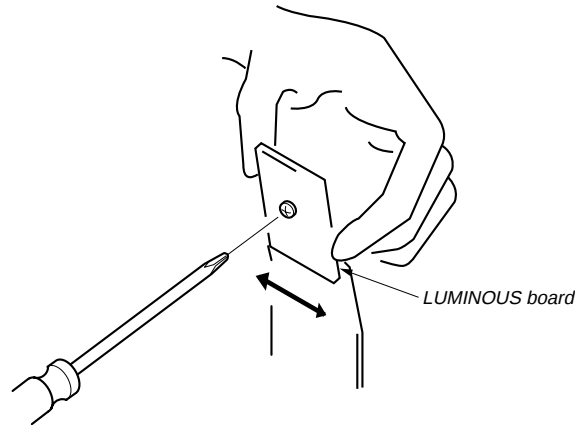

8. Disconnect the resistor connected to Pin ④ of CN506 of the MAIN board. (Connection 2)
9. Observe the waveform on the oscilloscope. (Waveform 2)
10. Adjust RV501 of the MAIN board so that the waveform on the oscilloscope satisfies the following adjustment value 1.
11. Press the **I/O** button and turn OFF the power.
12. Press the **I/O** button, turn on the power, press the **OPEN/CLOSE** button, and open the front cover. Next rotate the **DISC/CHARACTER** dial in the counterclockwise direction continuously so that the rotary table rotates continuously in the counterclockwise direction.
13. Observe the waveform on the oscilloscope and confirm that it satisfies the adjustment value 2 (waveform 3). If it does not, adjust RV501 of the MAIN board.

Waveform 3:

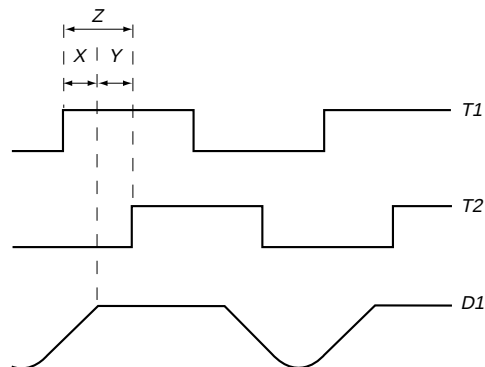

14. After the adjustment, load a disc only in slit 1, and press the  button to turn off the power.
15. Press the  button while pressing the **PUSH ENTER** button to turn on the power.
16. If the rotary table makes one round, and “YES” is displayed on the fluorescent indicator tube after it stops, it means that the adjustment has been performed properly.

Adjustment value 1:

At the shoulder part of waveform D1, T1 becomes H and T2 becomes L, and at the same time, the Y width must not be smaller than 1/4 of the Z width.


In order to satisfy this value more easily, adjust so that X=Y approximately and observe the deviation of the waveform.

Adjustment value 2:


At the shoulder part of waveform D1, T1 becomes L and T2 becomes H, and at the same time, the Y width must not be smaller than 1/4 of the Z width.

Adjustment Location :

[BD BOARD] – Side B –


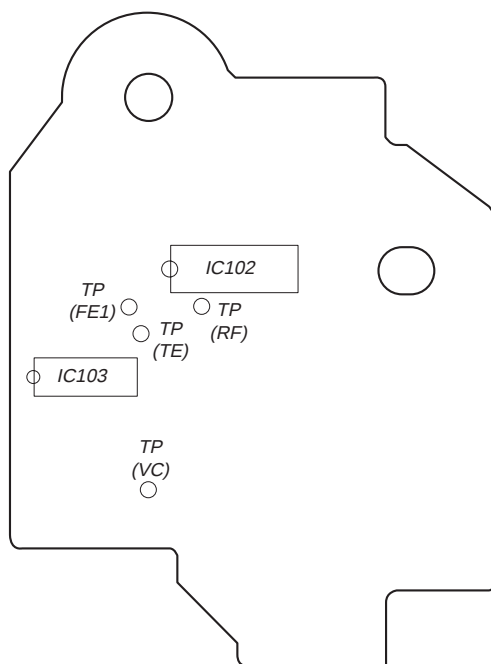


[MAIN BOARD] – Component Side –

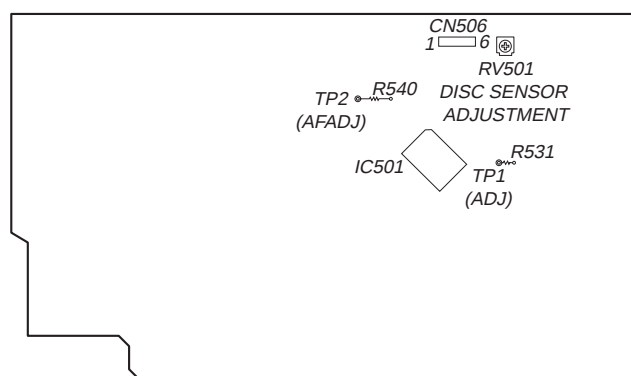


SECTION 6 DIAGRAMS

6-1. CIRCUIT BOARDS LOCATION

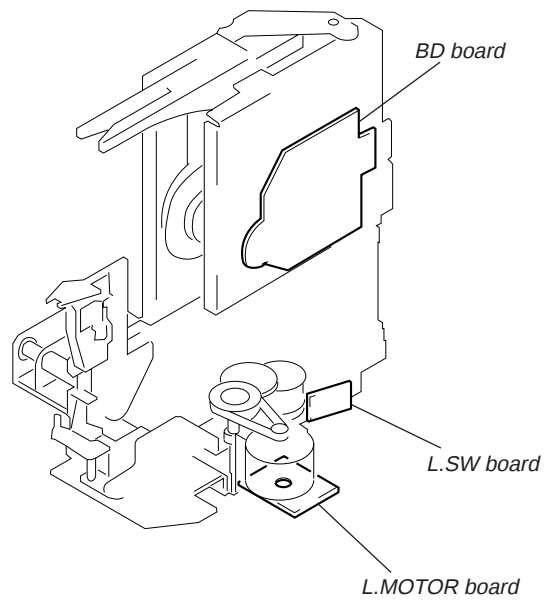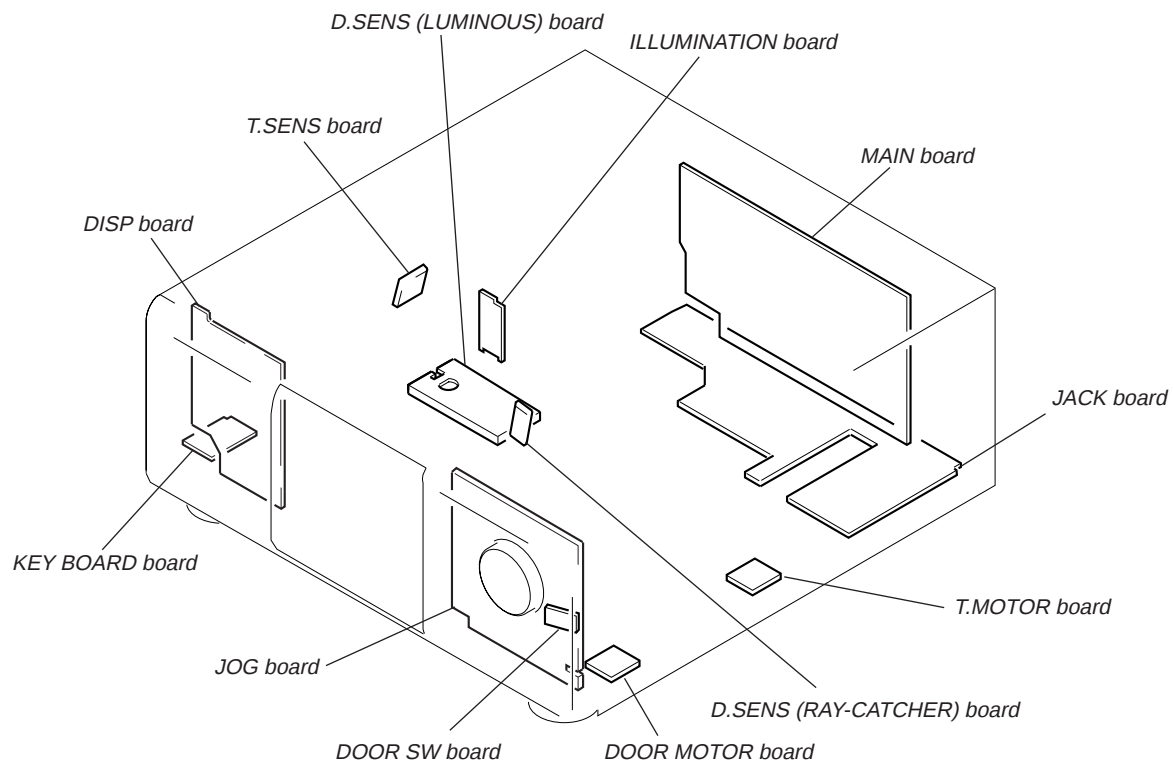


6-2. BLOCK DIAGRAMS - BD SECTION -

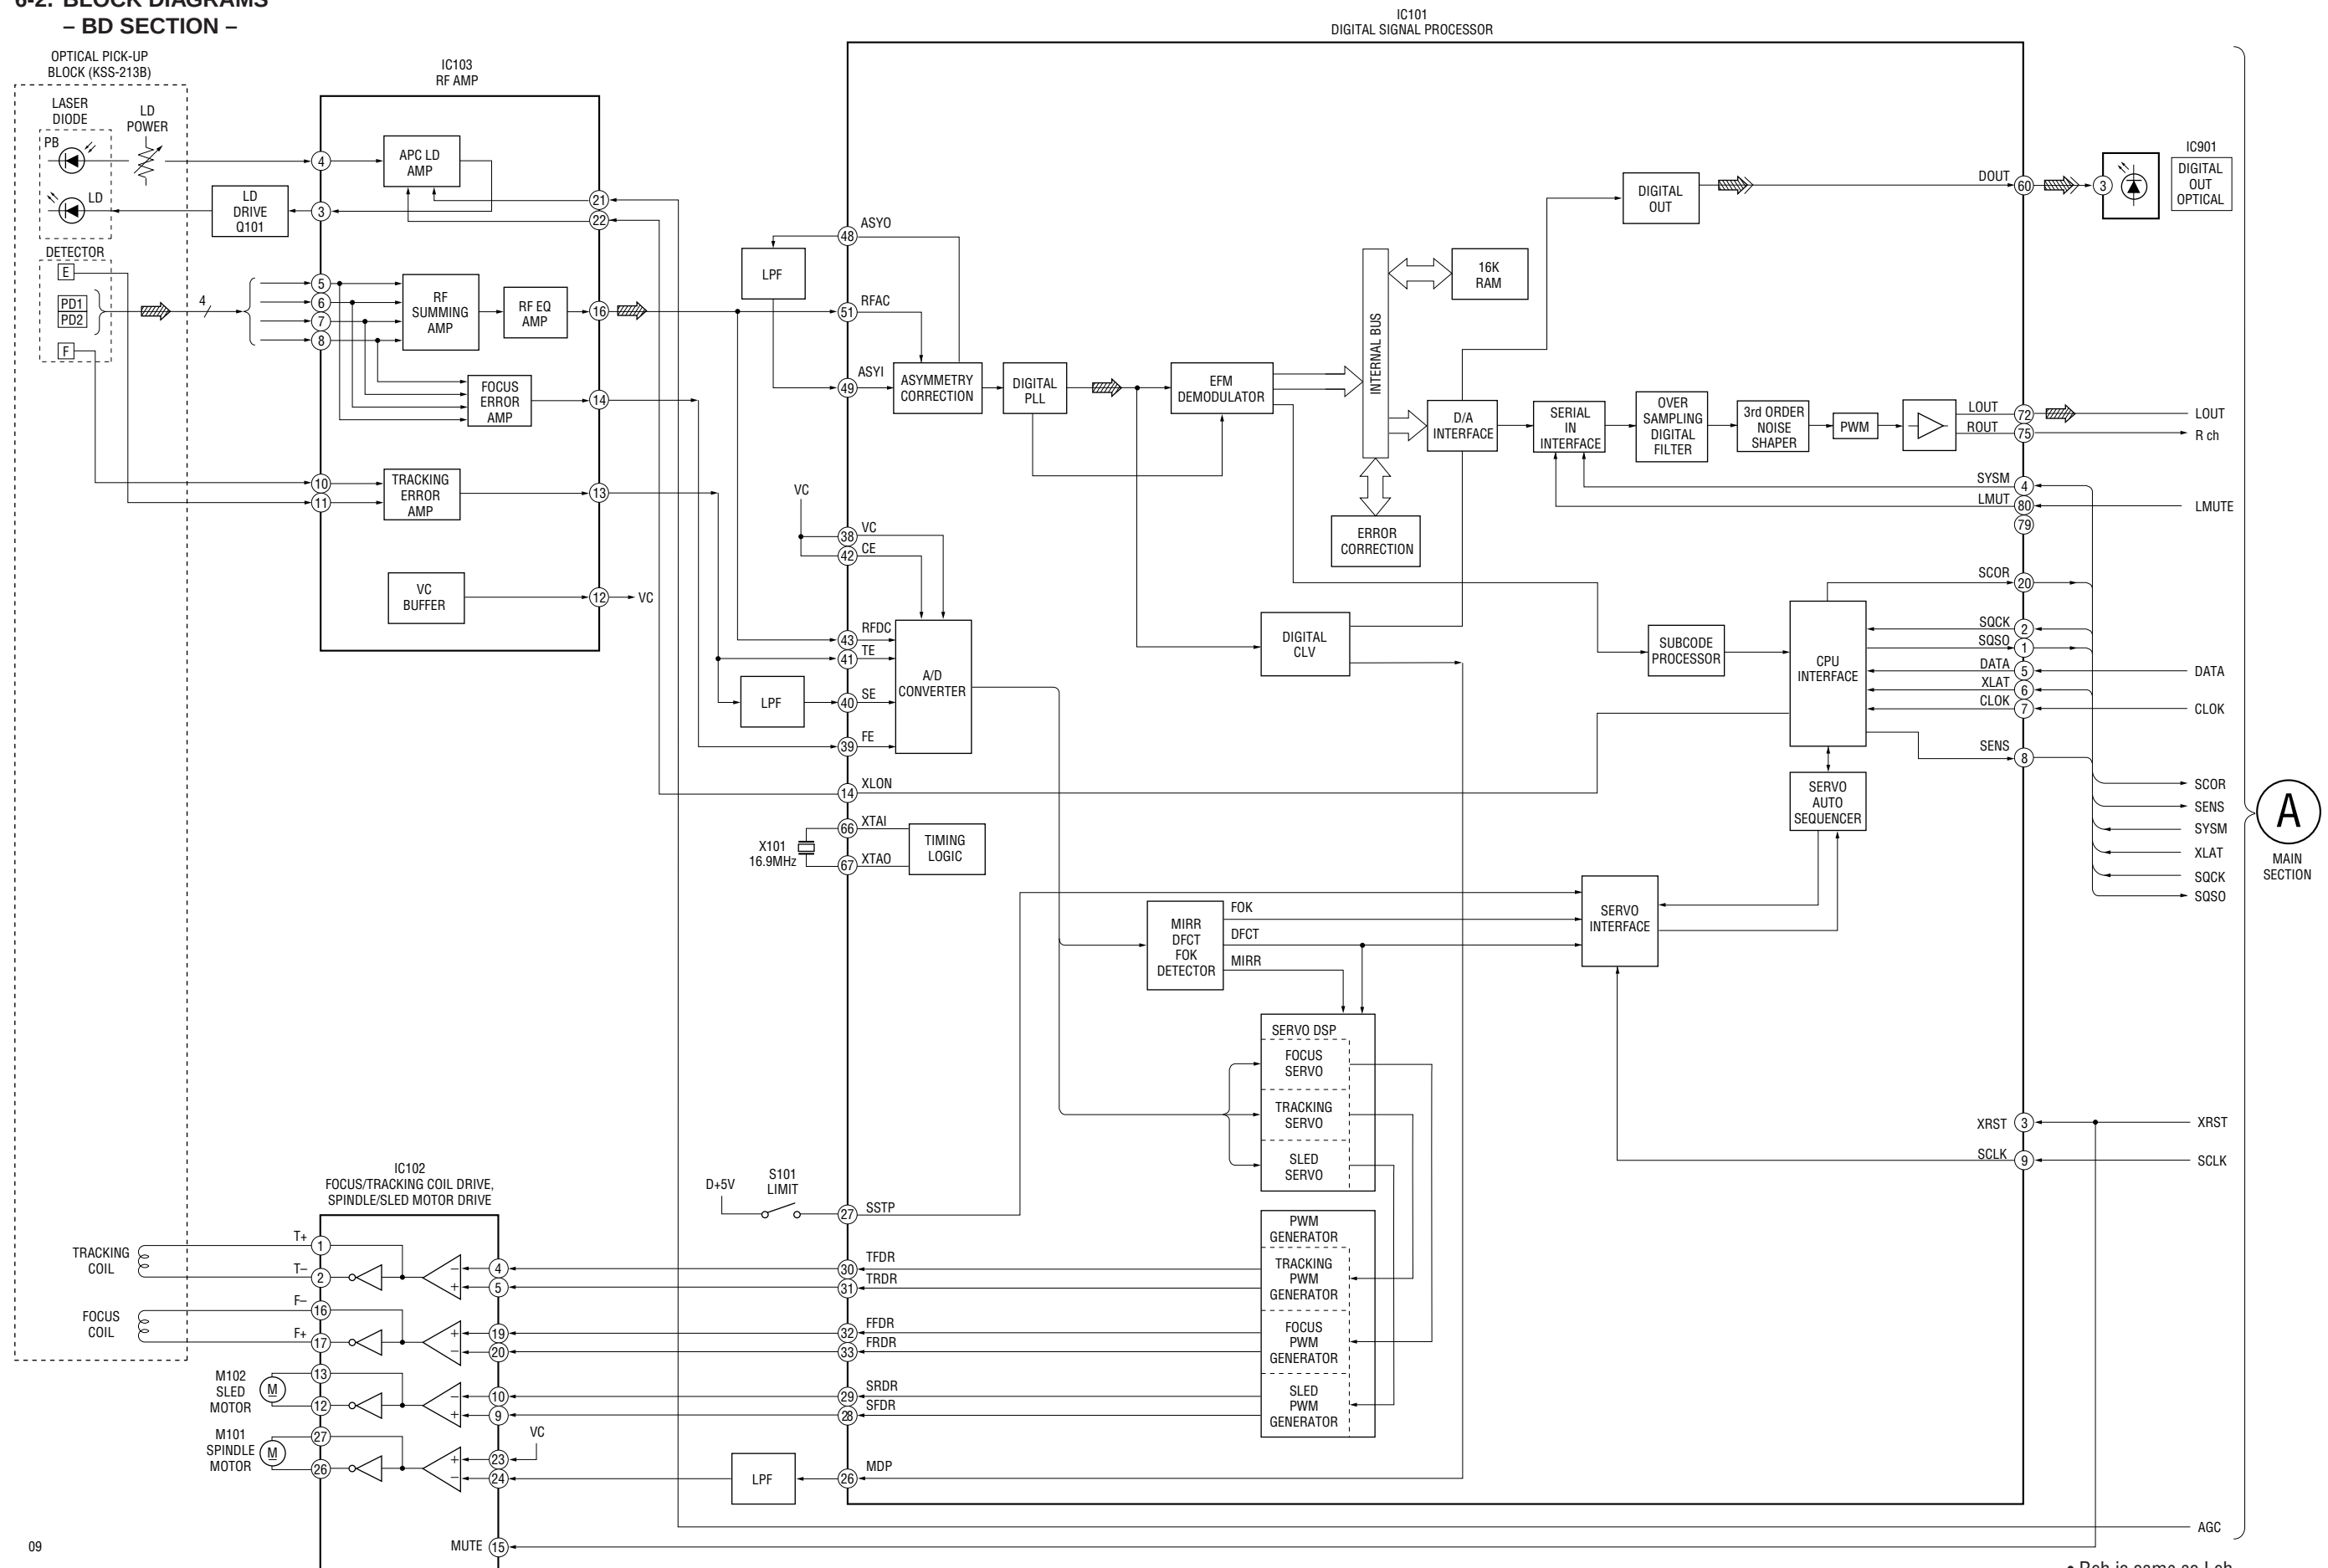

– MAIN SECTION –

A
BD
SECTION

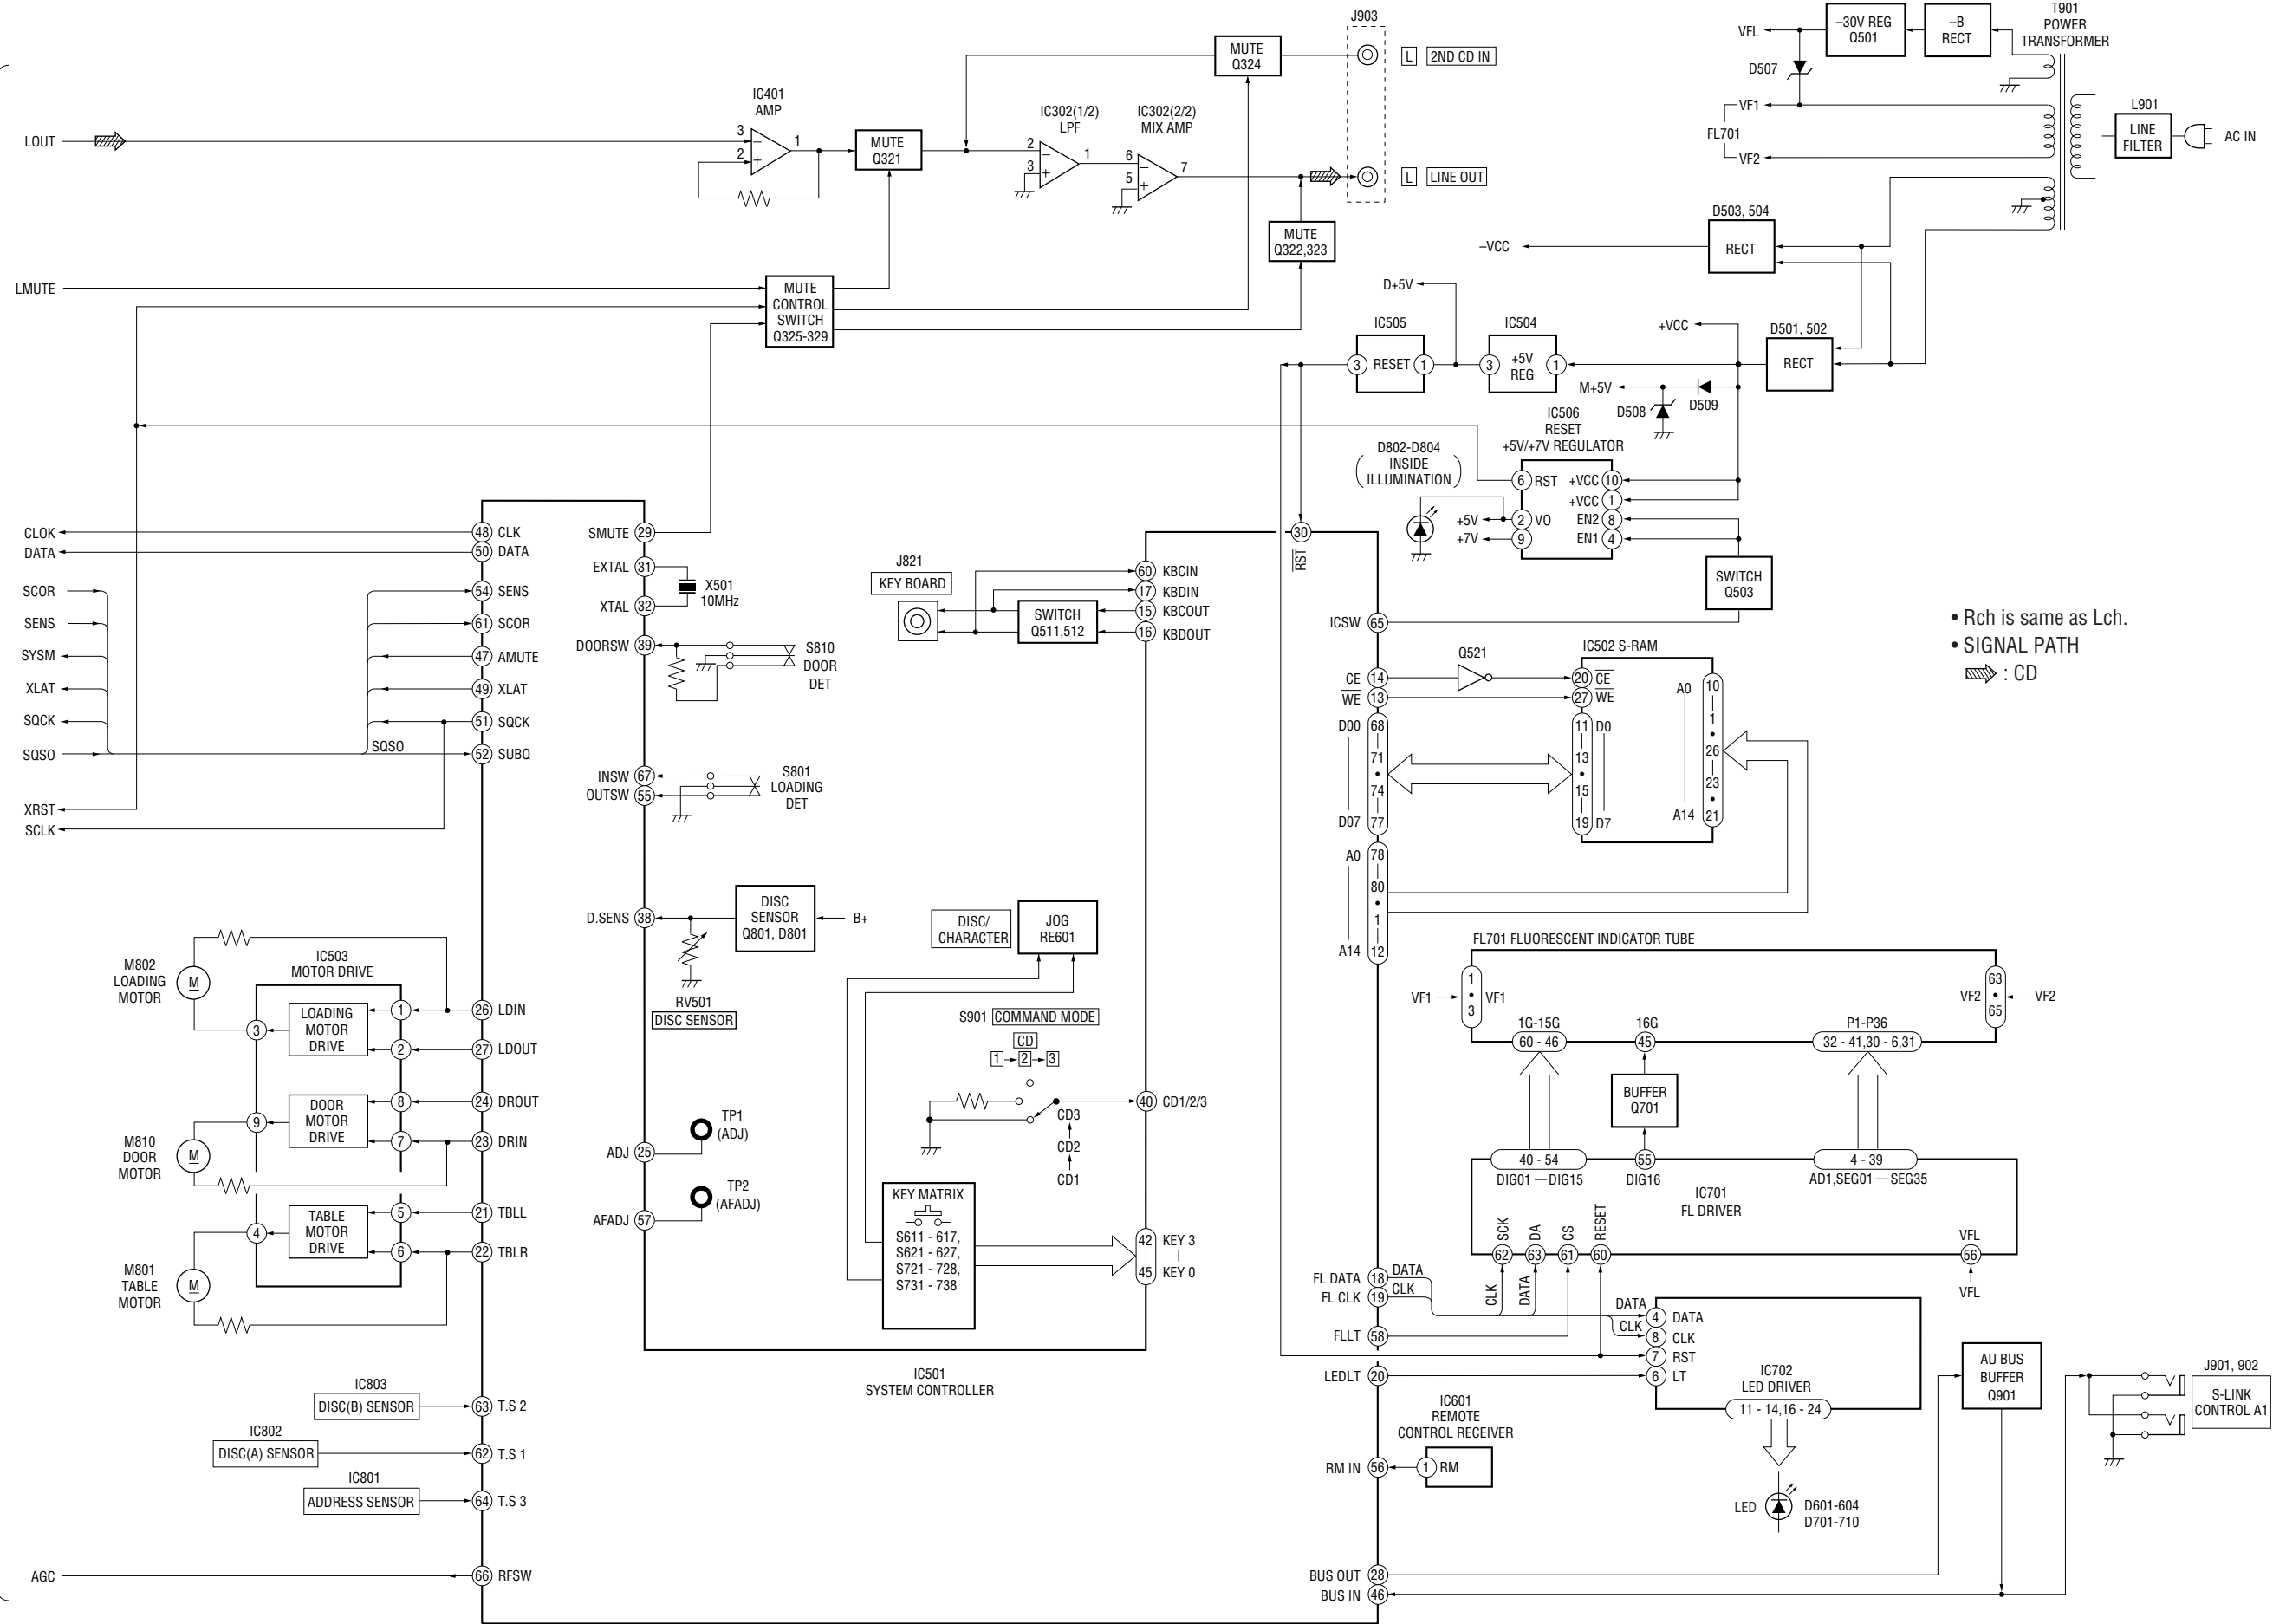

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

- Note:**
- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
 - $\triangle$: internal component.
 - : panel designation.

Note:	Note:
The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

 

- B + : B+ Line.
- B - : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark : STOP
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 $\Rightarrow$: CD
 $\Rightarrow$: digital out

For printed wiring boards.


- Note:**
- $\circ$ — : parts extracted from the component side.
 - — : parts extracted from the conductor side.
 - $\circ$: Through hole.
 - $\square$: Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from the (Side B) pattern face are indicated.
Parts face side: Parts on the parts face side seen from the (Side A) parts face are indicated.

Indication of transistor

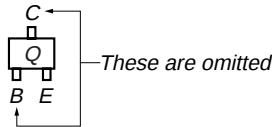


WAVEFORMS

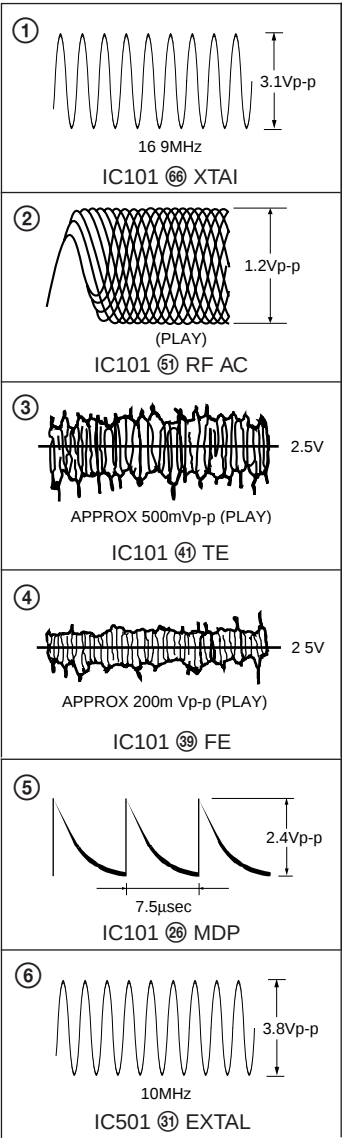



6-4. PRINTED WIRING BOARD – BD SECTION –
• See page 22 for Circuit Boards Location.


【 BD BOARD 】(SIDE A)

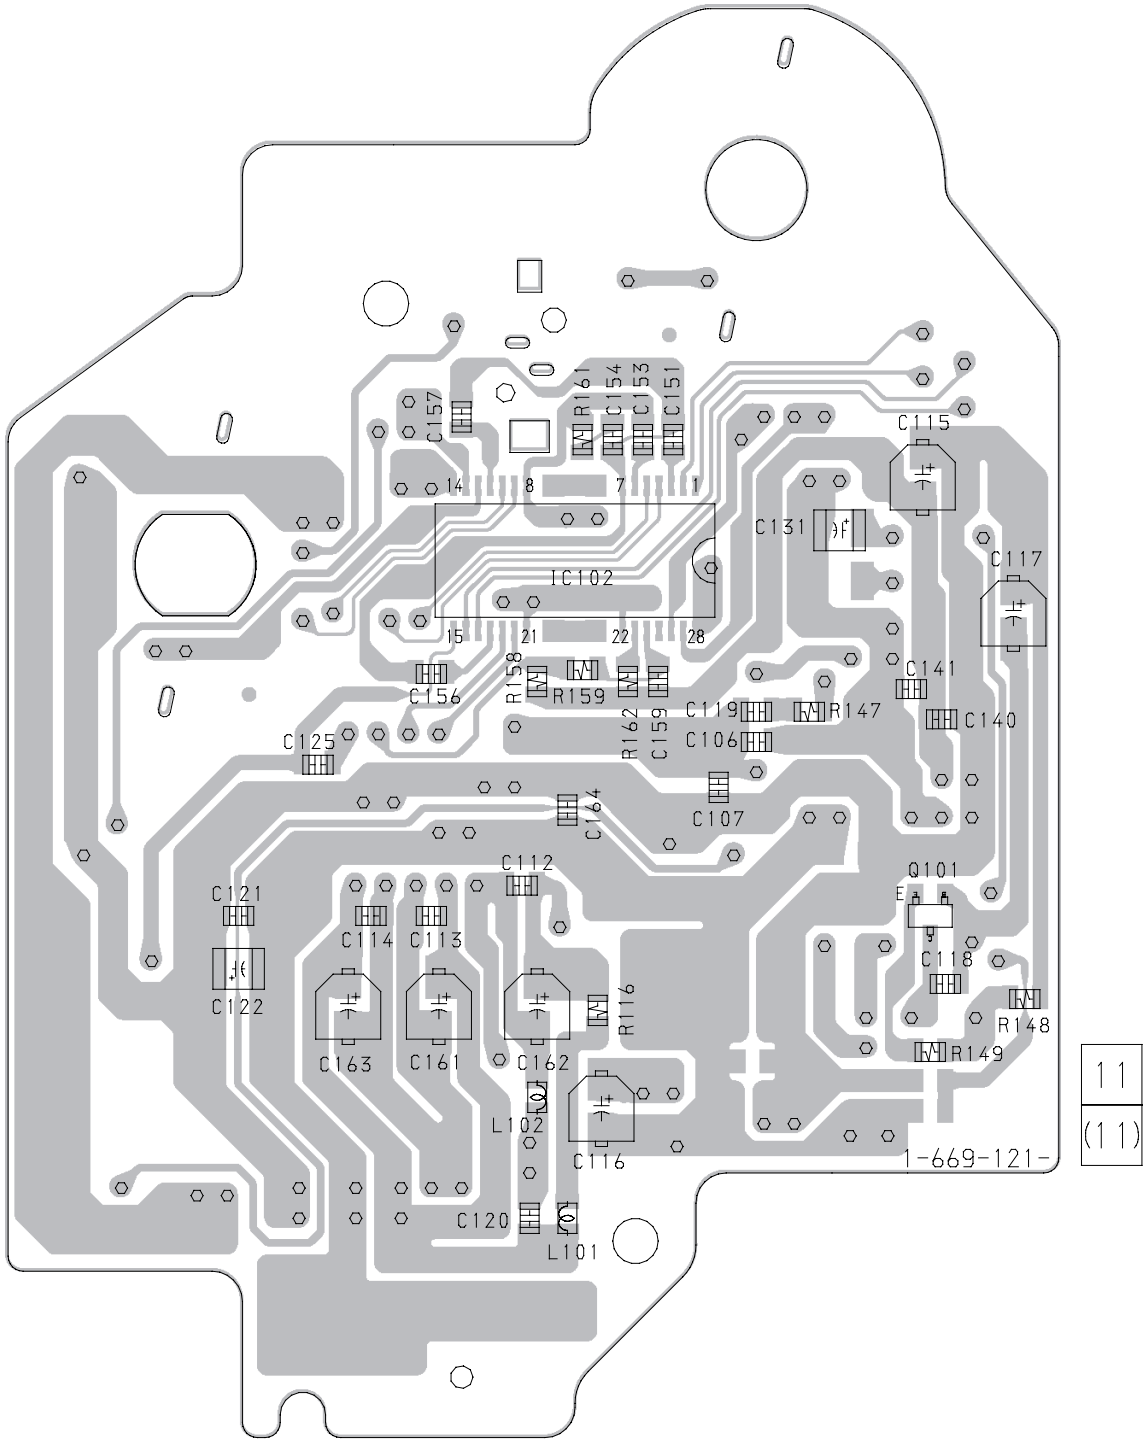

11
(11)

09

【 BD BOARD 】(SIDE B)

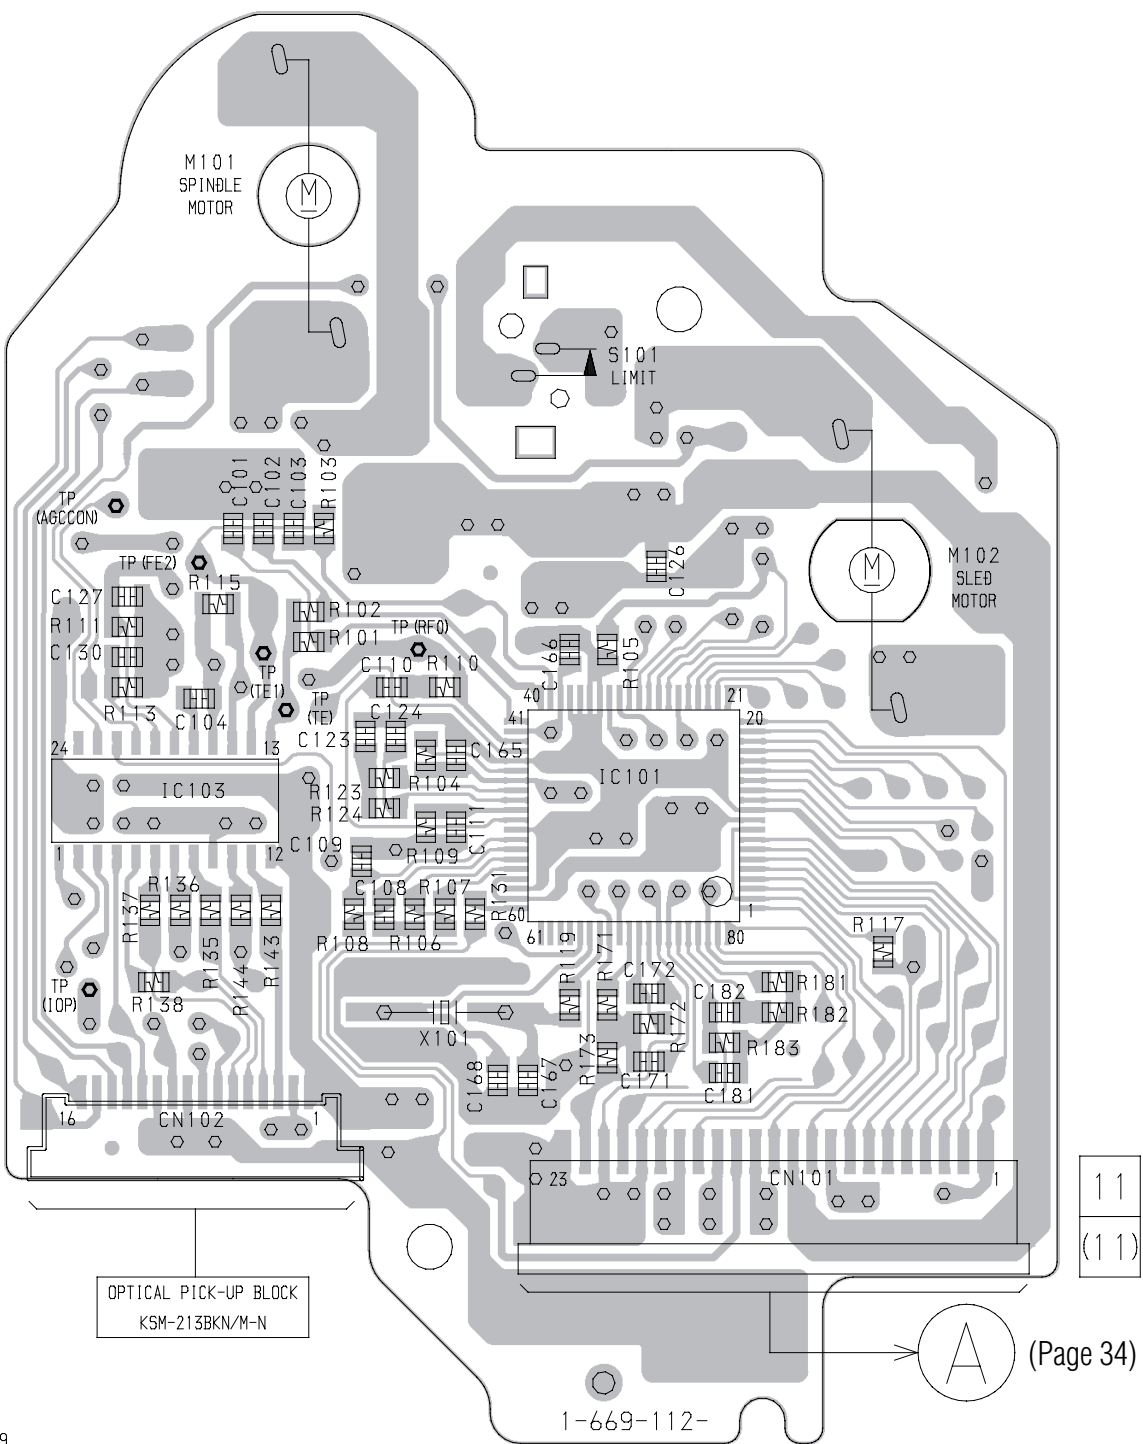


11
(11)

09

6-5. PRINTED WIRING BOARD – MAIN SECTION –
• See page 22 for Circuit Boards Location.


• Semiconductor Location


Ref. No.	Location
D325	E-6
D327	E-5
D329	F-6
D425	E-6
D501	F-4
D502	F-4
D503	F-4
D504	F-4
D505	E-3
D506	E-1
D507	E-1
D508	F-5
D509	F-5
D521	B-3
IC302	D-7
IC401	C-8
IC402	D-8
IC501	C-4
IC502	B-4
IC503	D-1
IC504	D-5
IC505	D-3
IC506	C-6
Q321	D-7
Q322	E-7
Q323	E-7
Q324	E-7
Q325	E-6
Q326	D-6
Q327	E-5
Q328	F-6
Q329	F-6
Q421	D-9
Q422	E-8
Q423	E-8
Q424	E-9
Q425	E-6
Q426	D-6
Q501	E-2
Q503	C-5
Q511	B-2
Q512	B-2
Q521	A-3

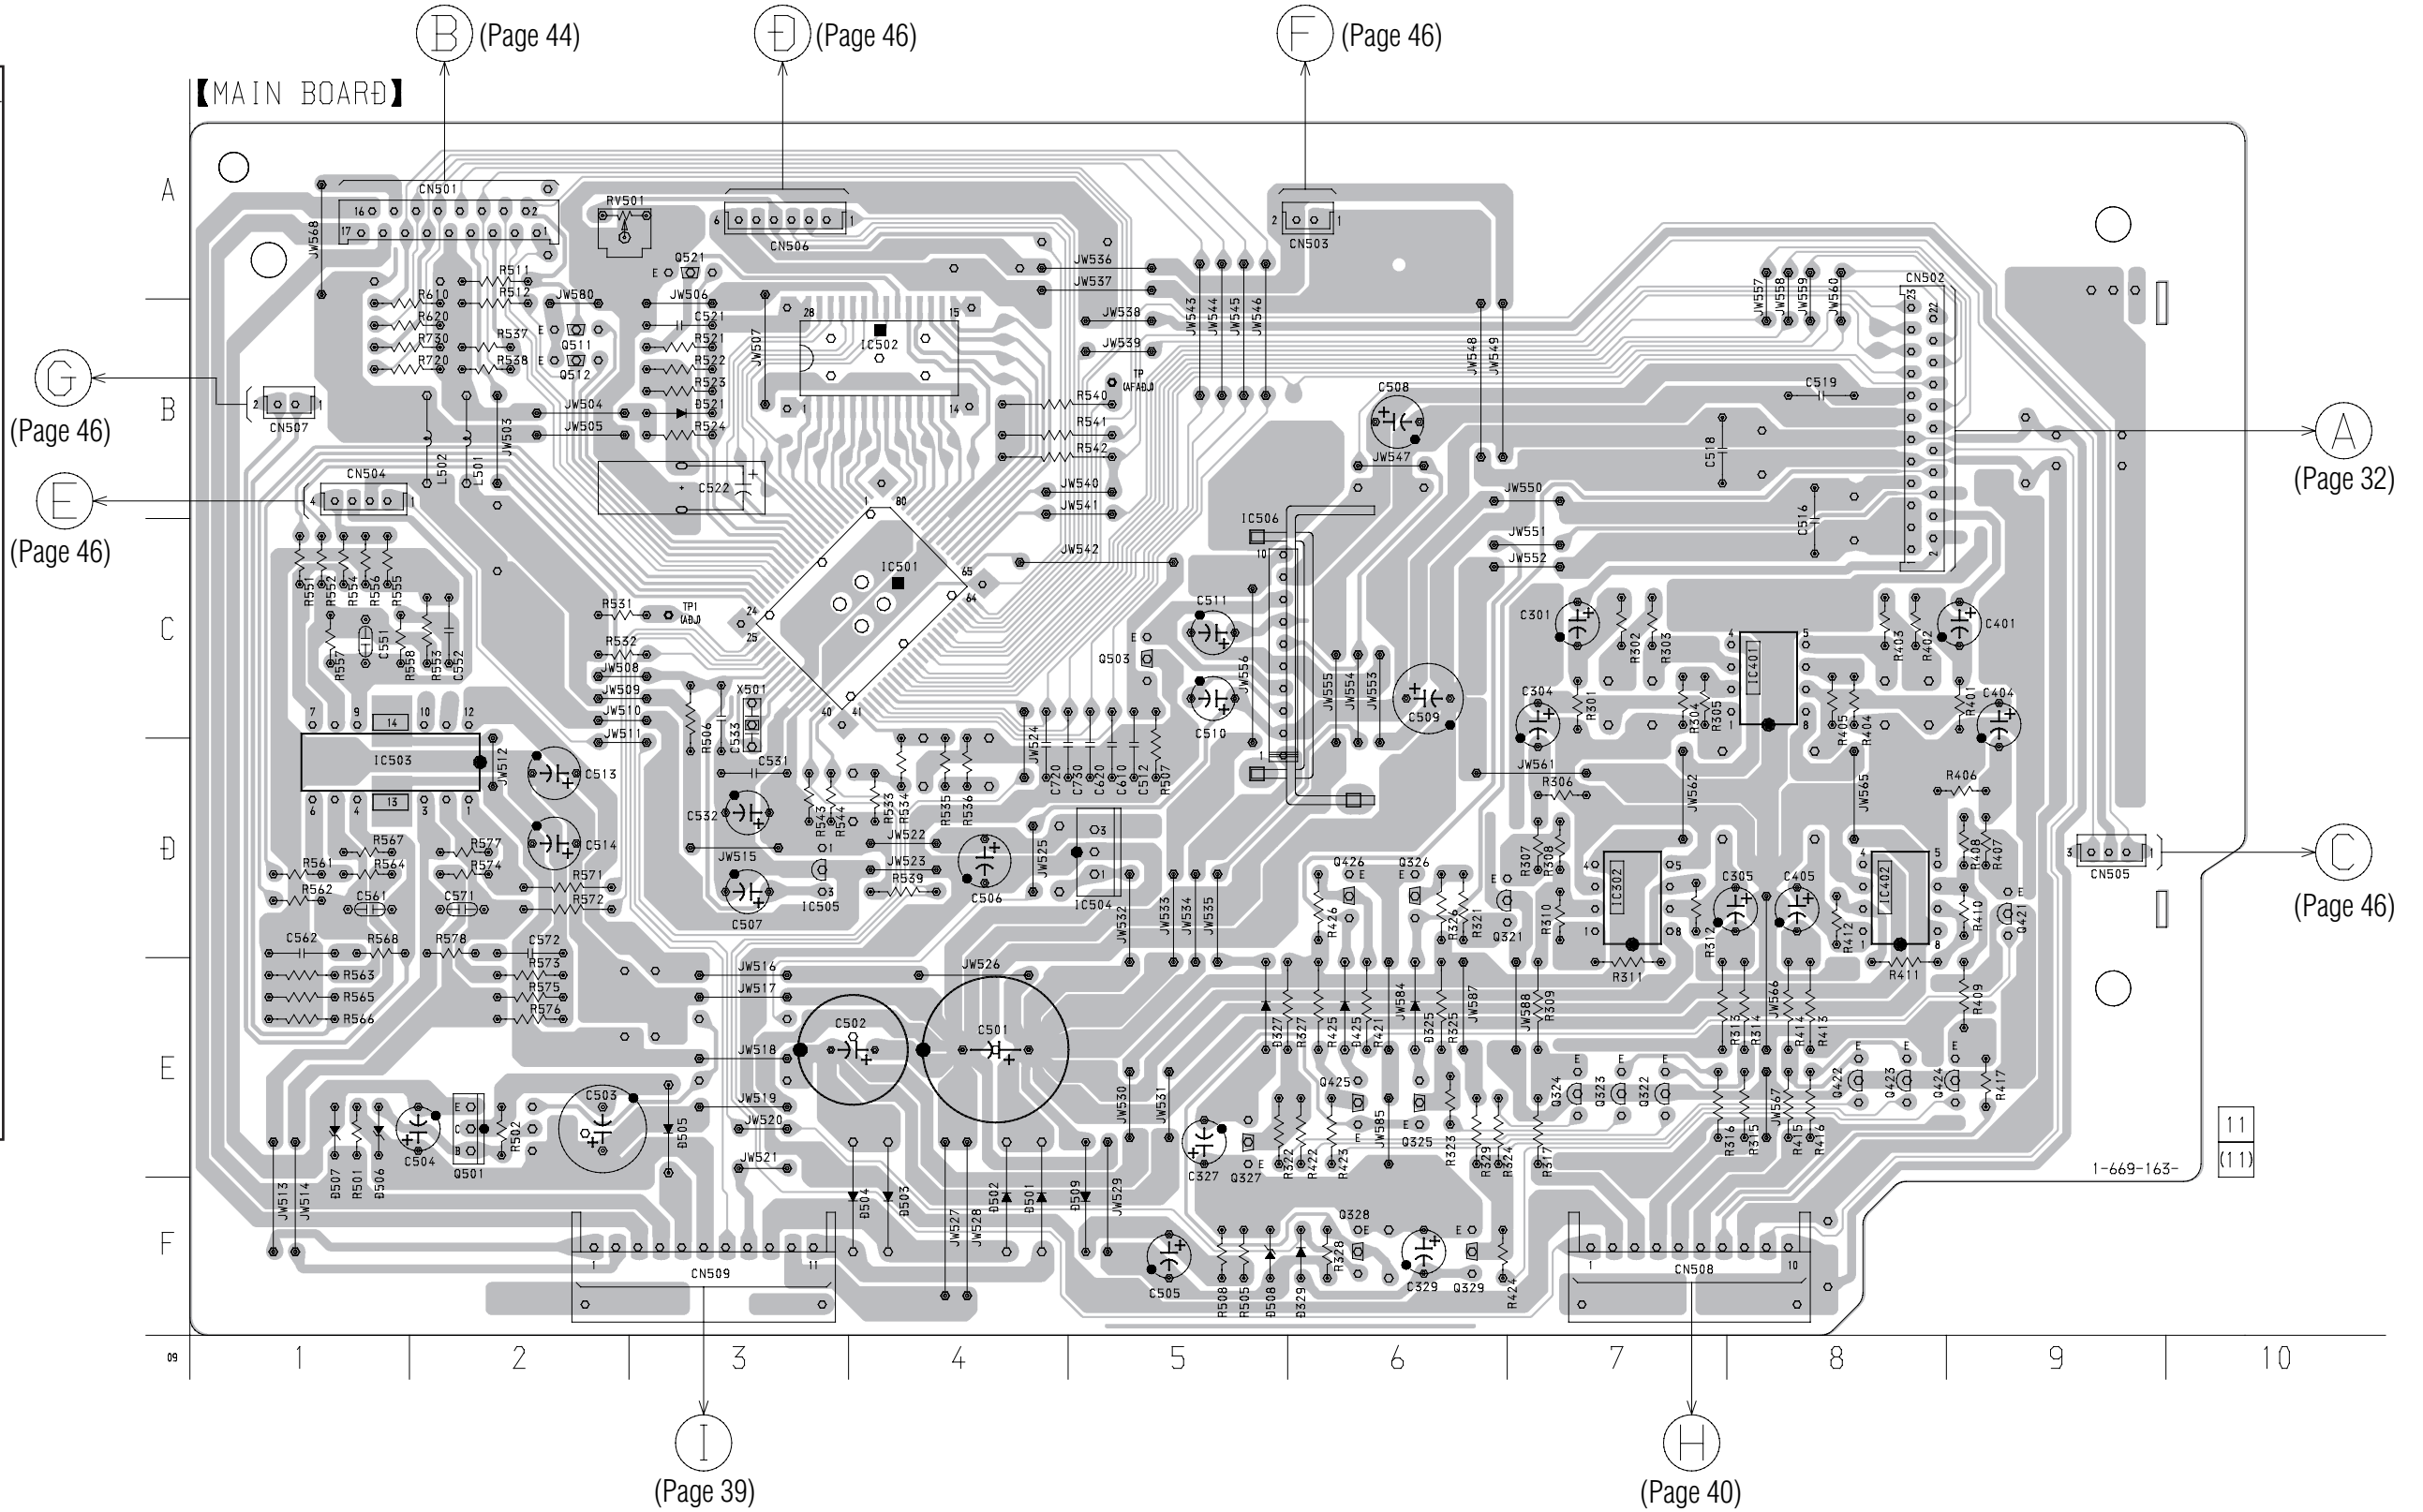



6-6. SCHEMATIC DIAGRAM – MAIN (1/2) SECTION –

- See page 28 for Waveforms.
- See page 49 for IC Block Diagrams.
- See page 52 for IC Pin Functions.

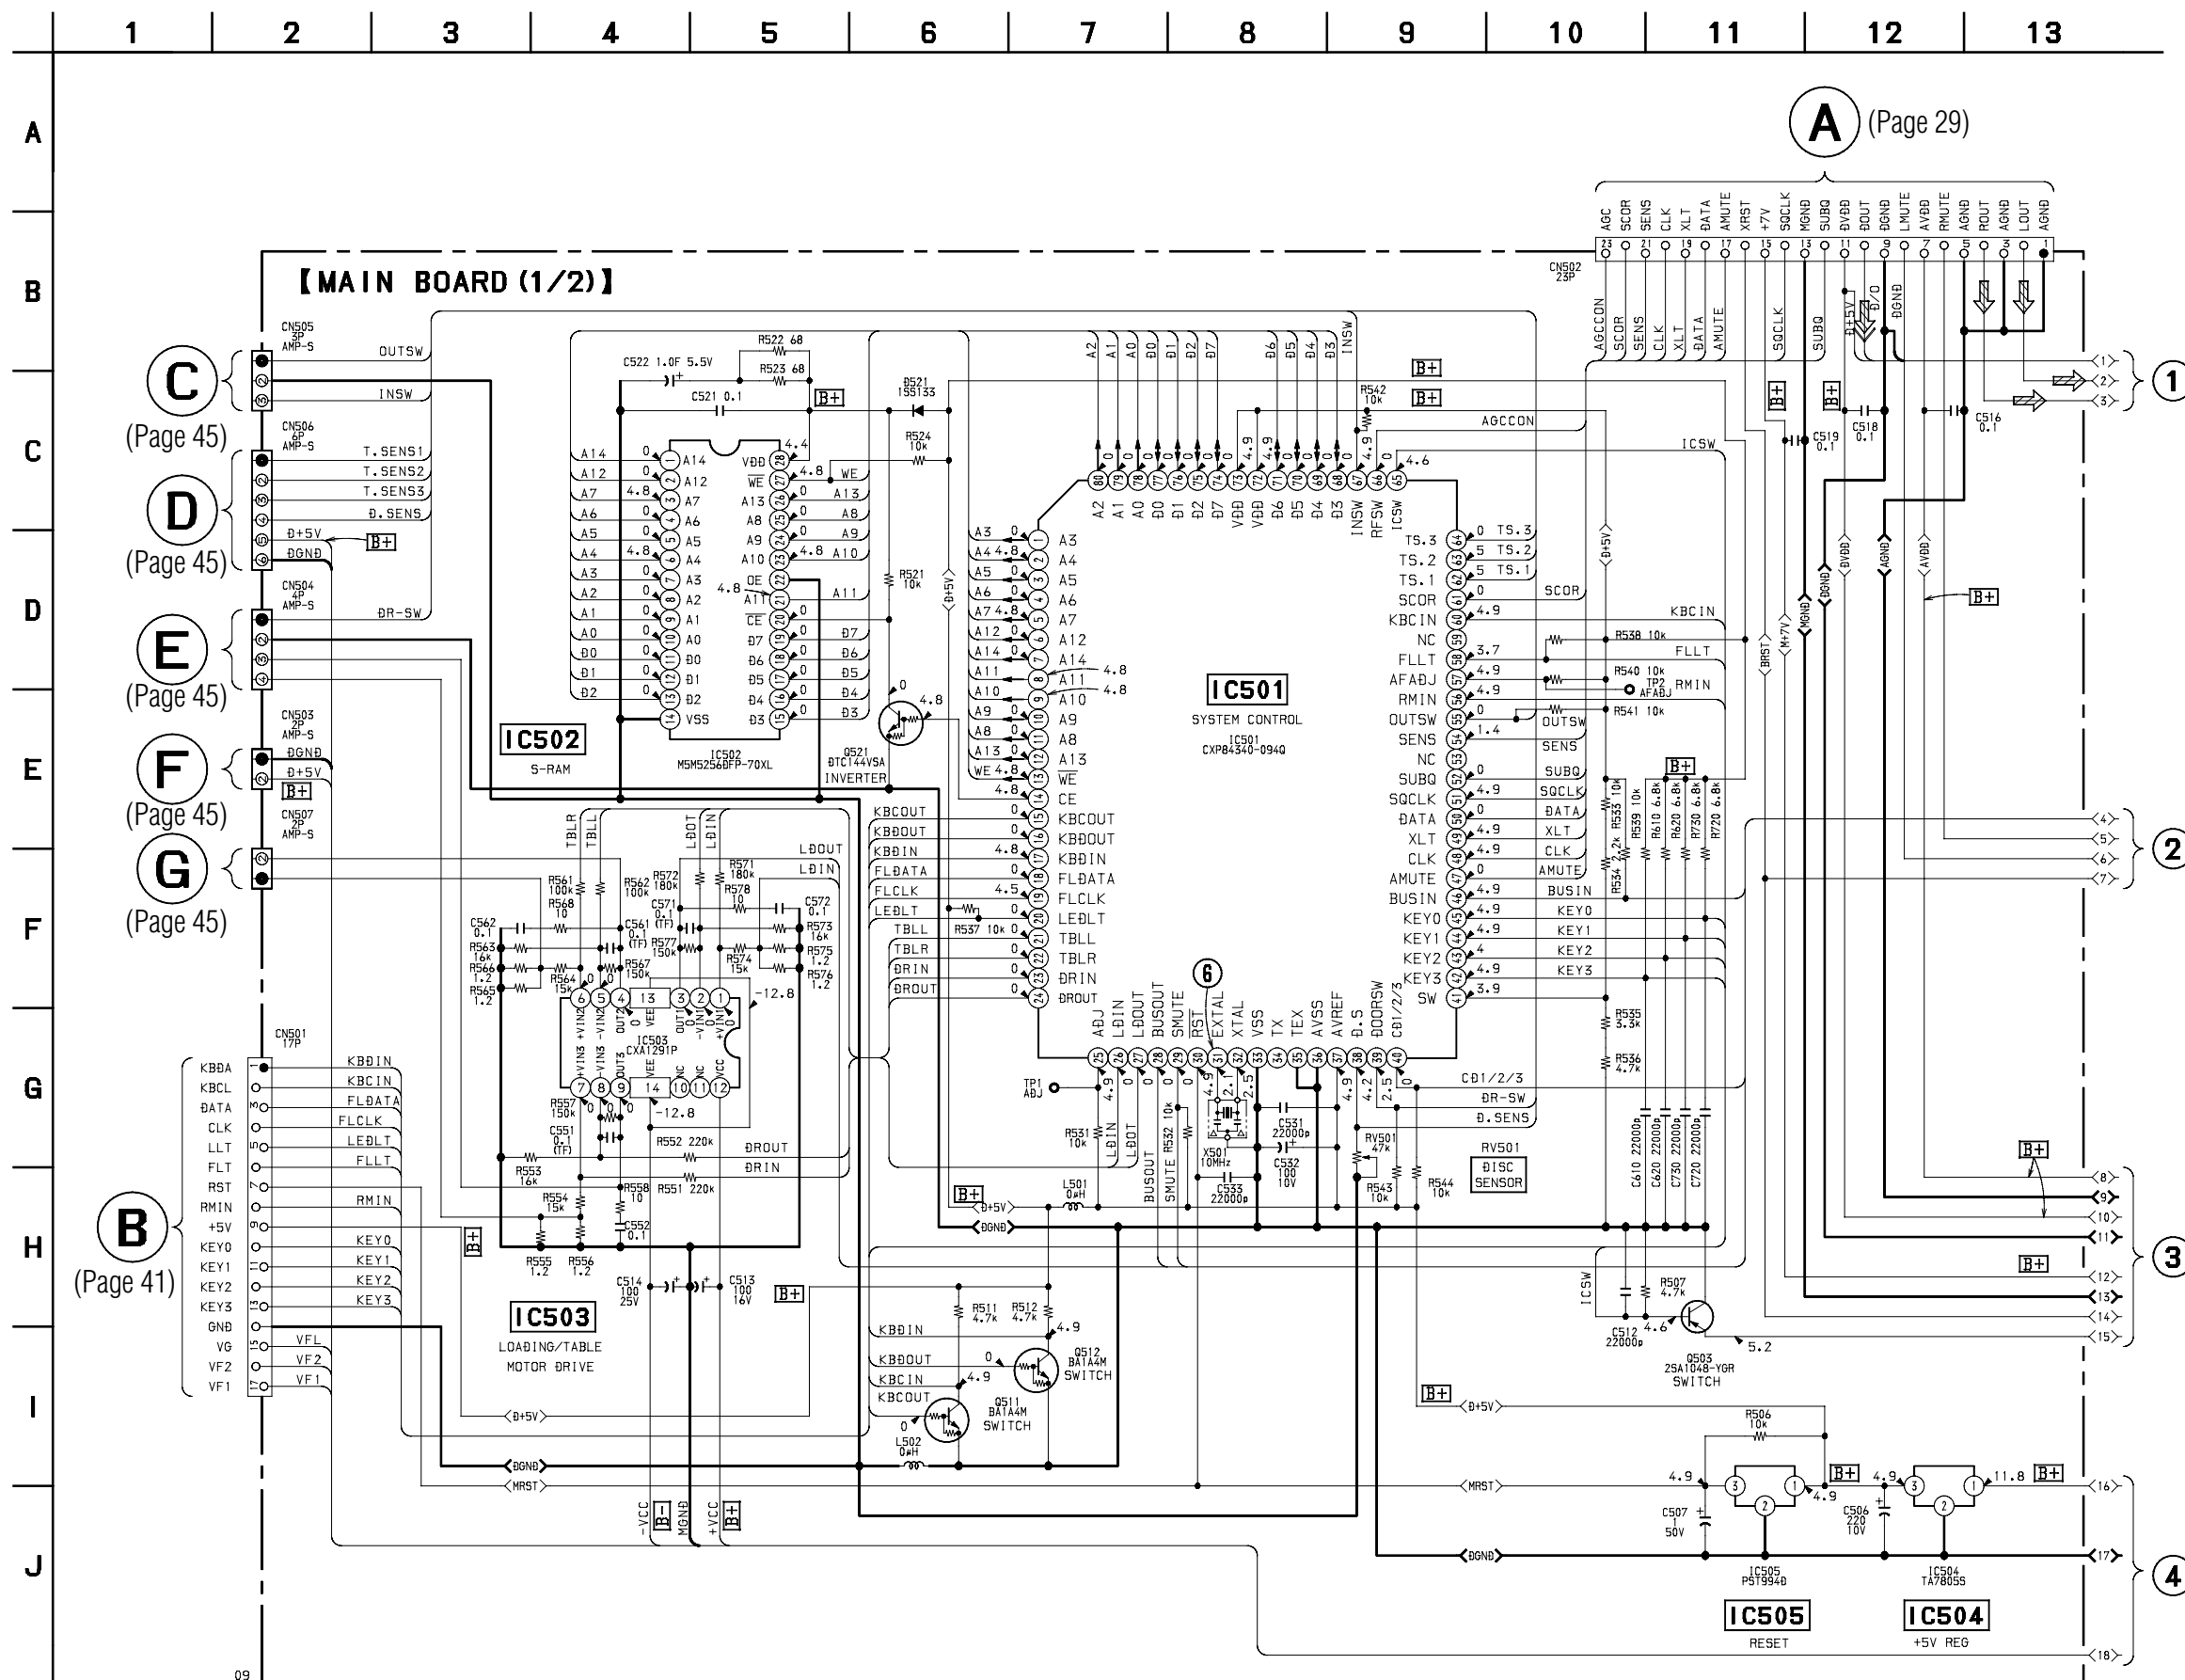


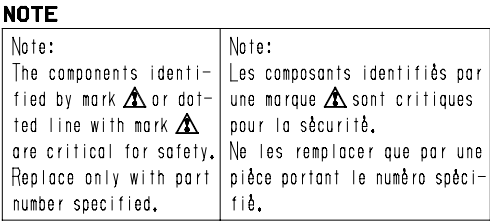



6-8. PRINTED WIRING BOARD – JACK SECTION –
• See page 22 for Circuit Boards Location.

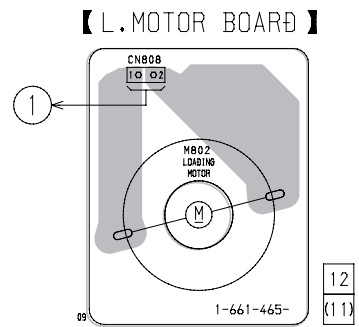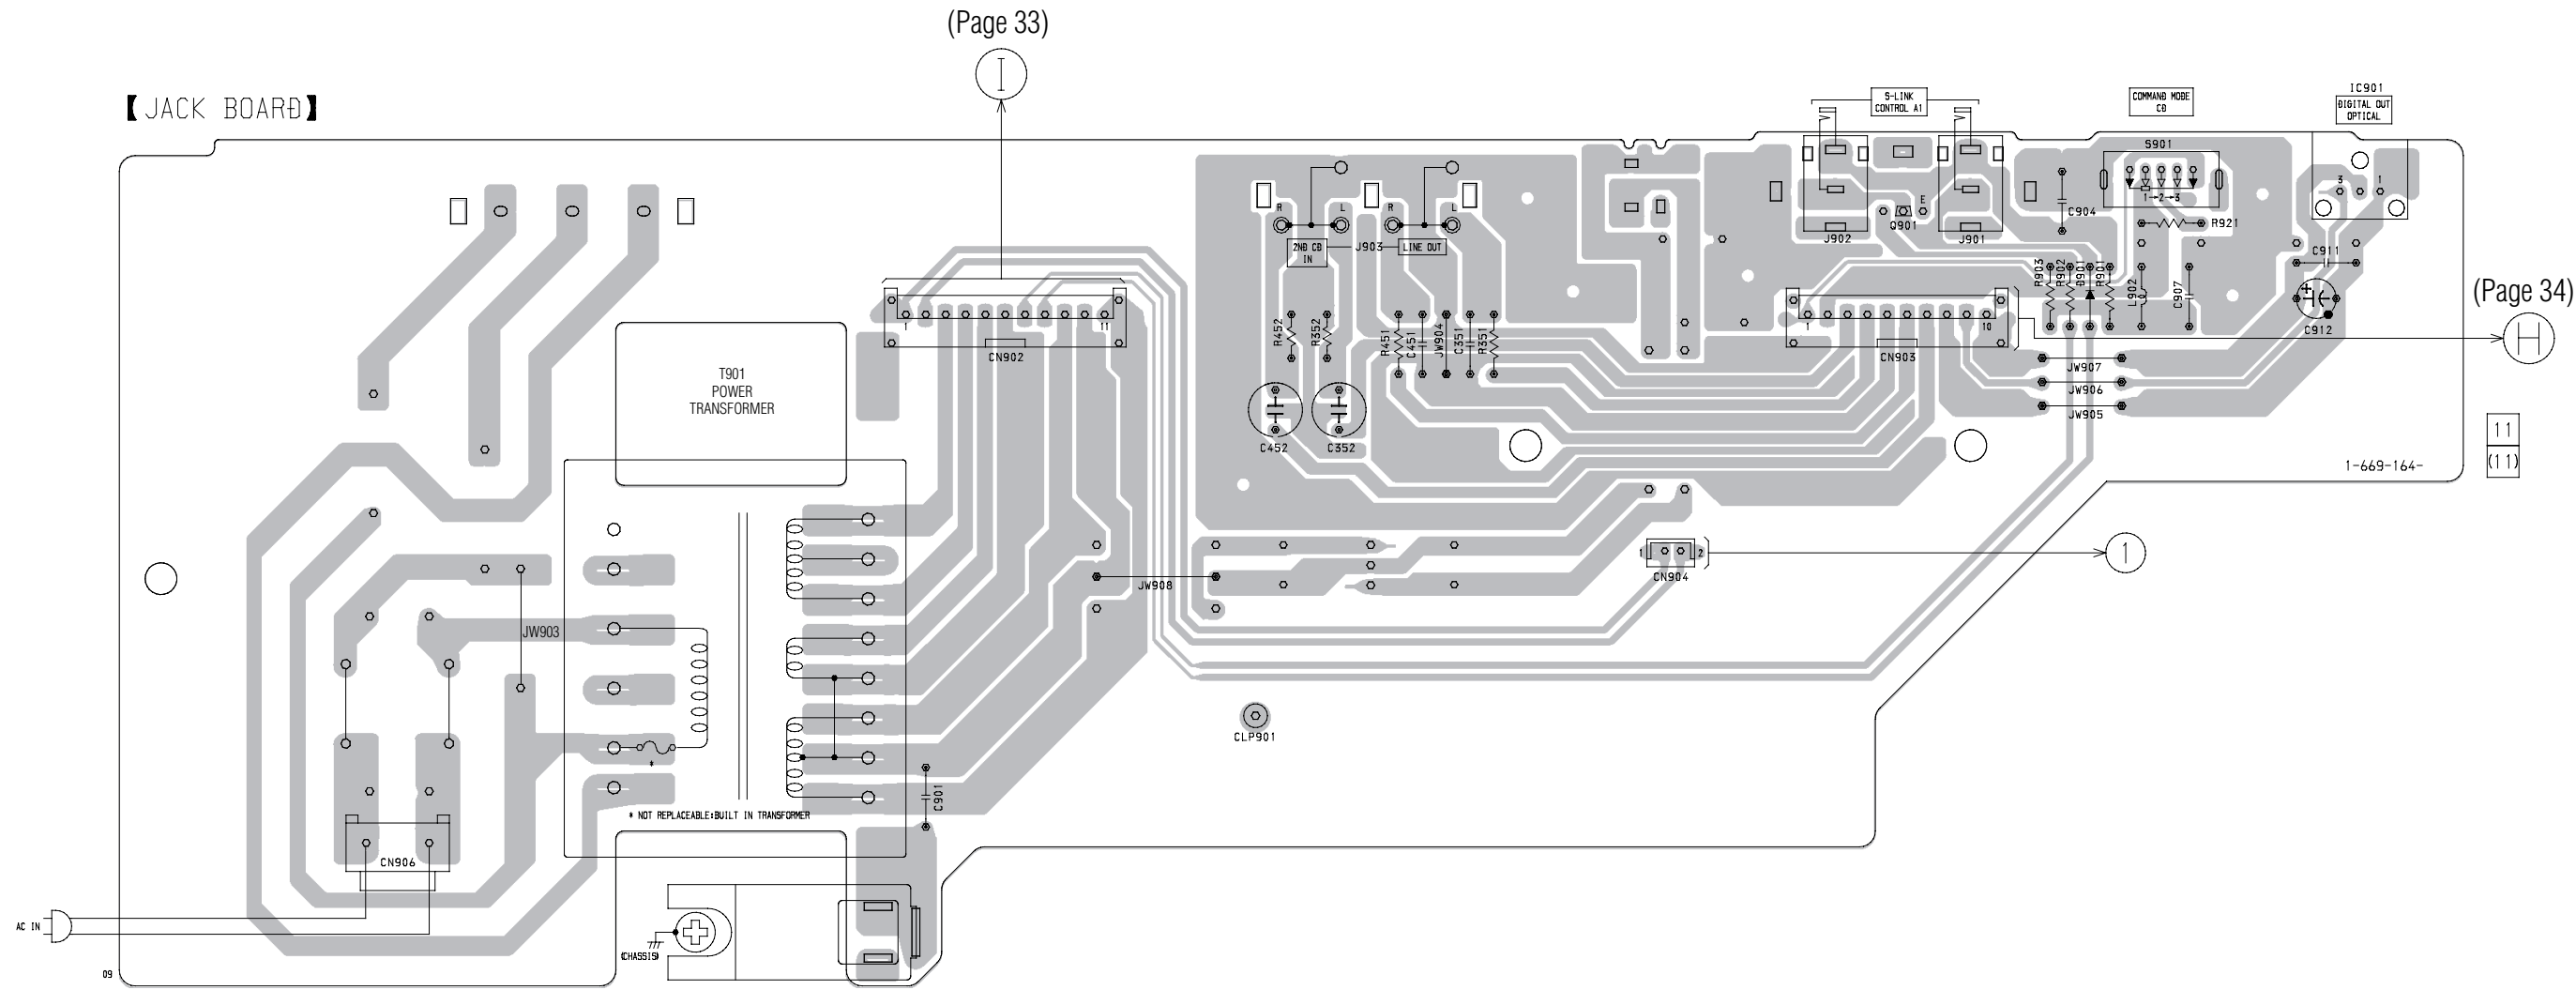

6-9. SCHEMATIC DIAGRAM – DISPLAY SECTION –
• See page 49 for IC Block Diagrams.

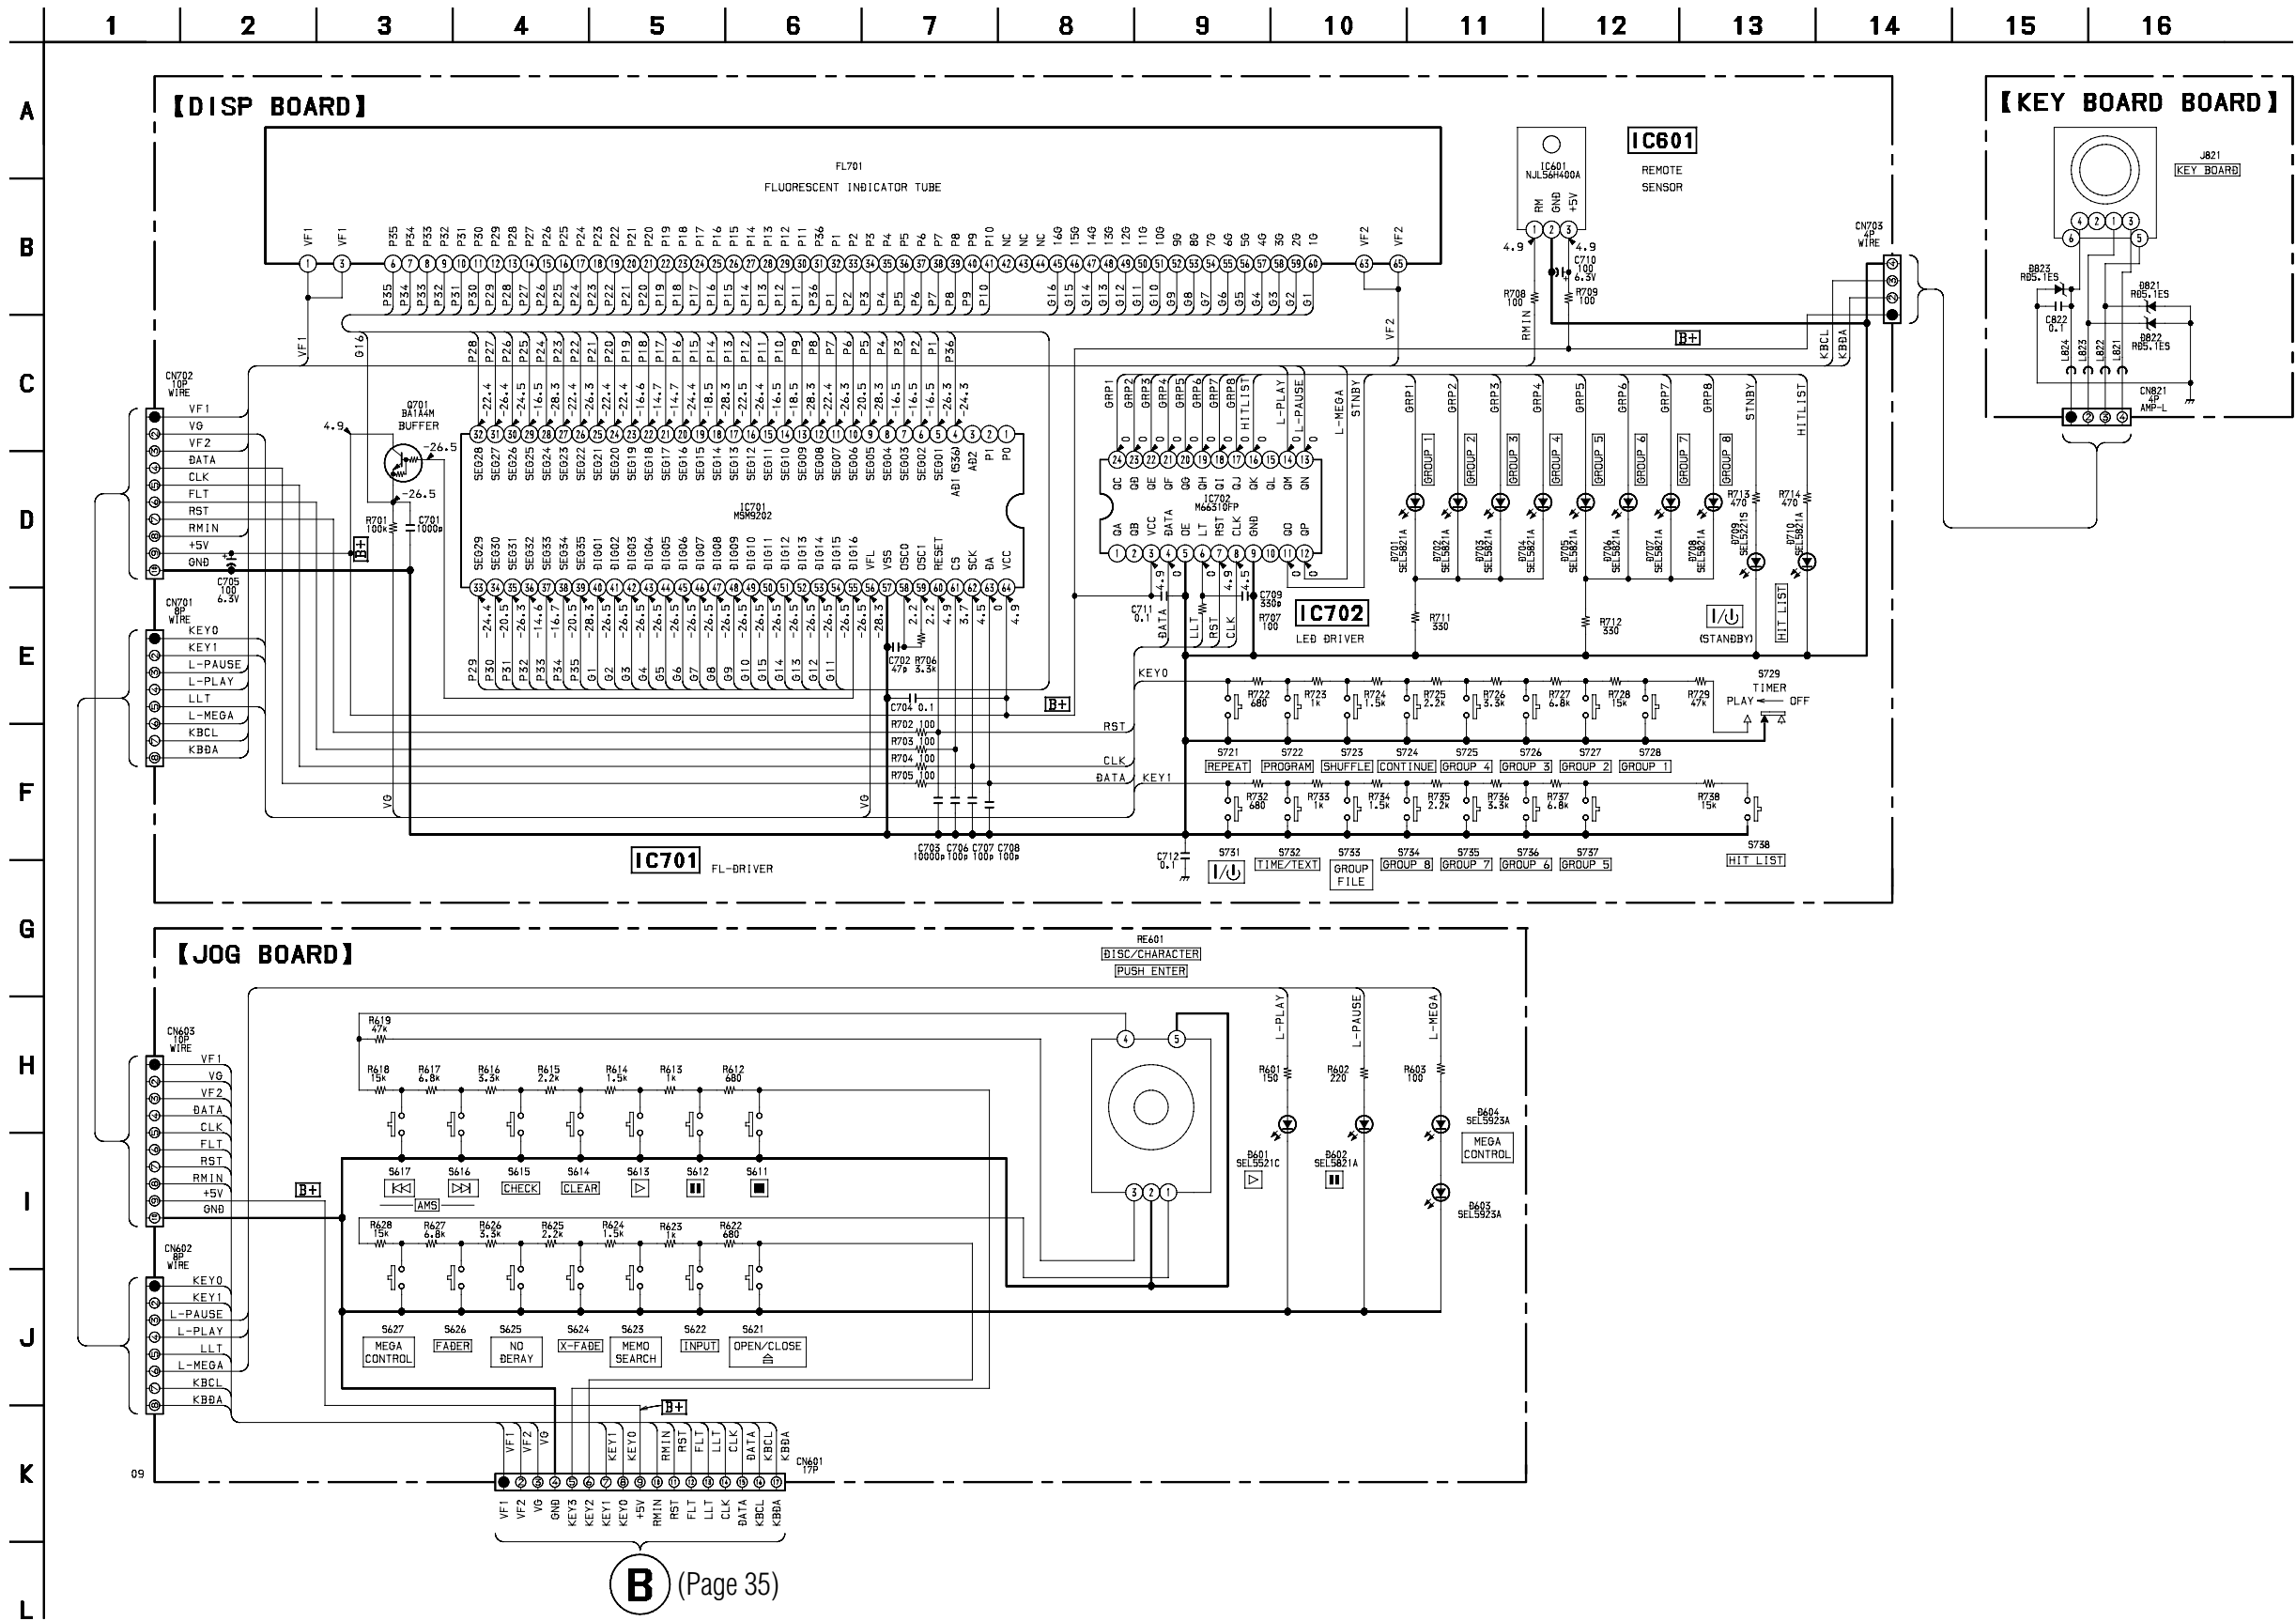


6-10. PRINTED WIRING BOARD – DISPLAY SECTION –
• See page 22 for Circuit Boards Location.

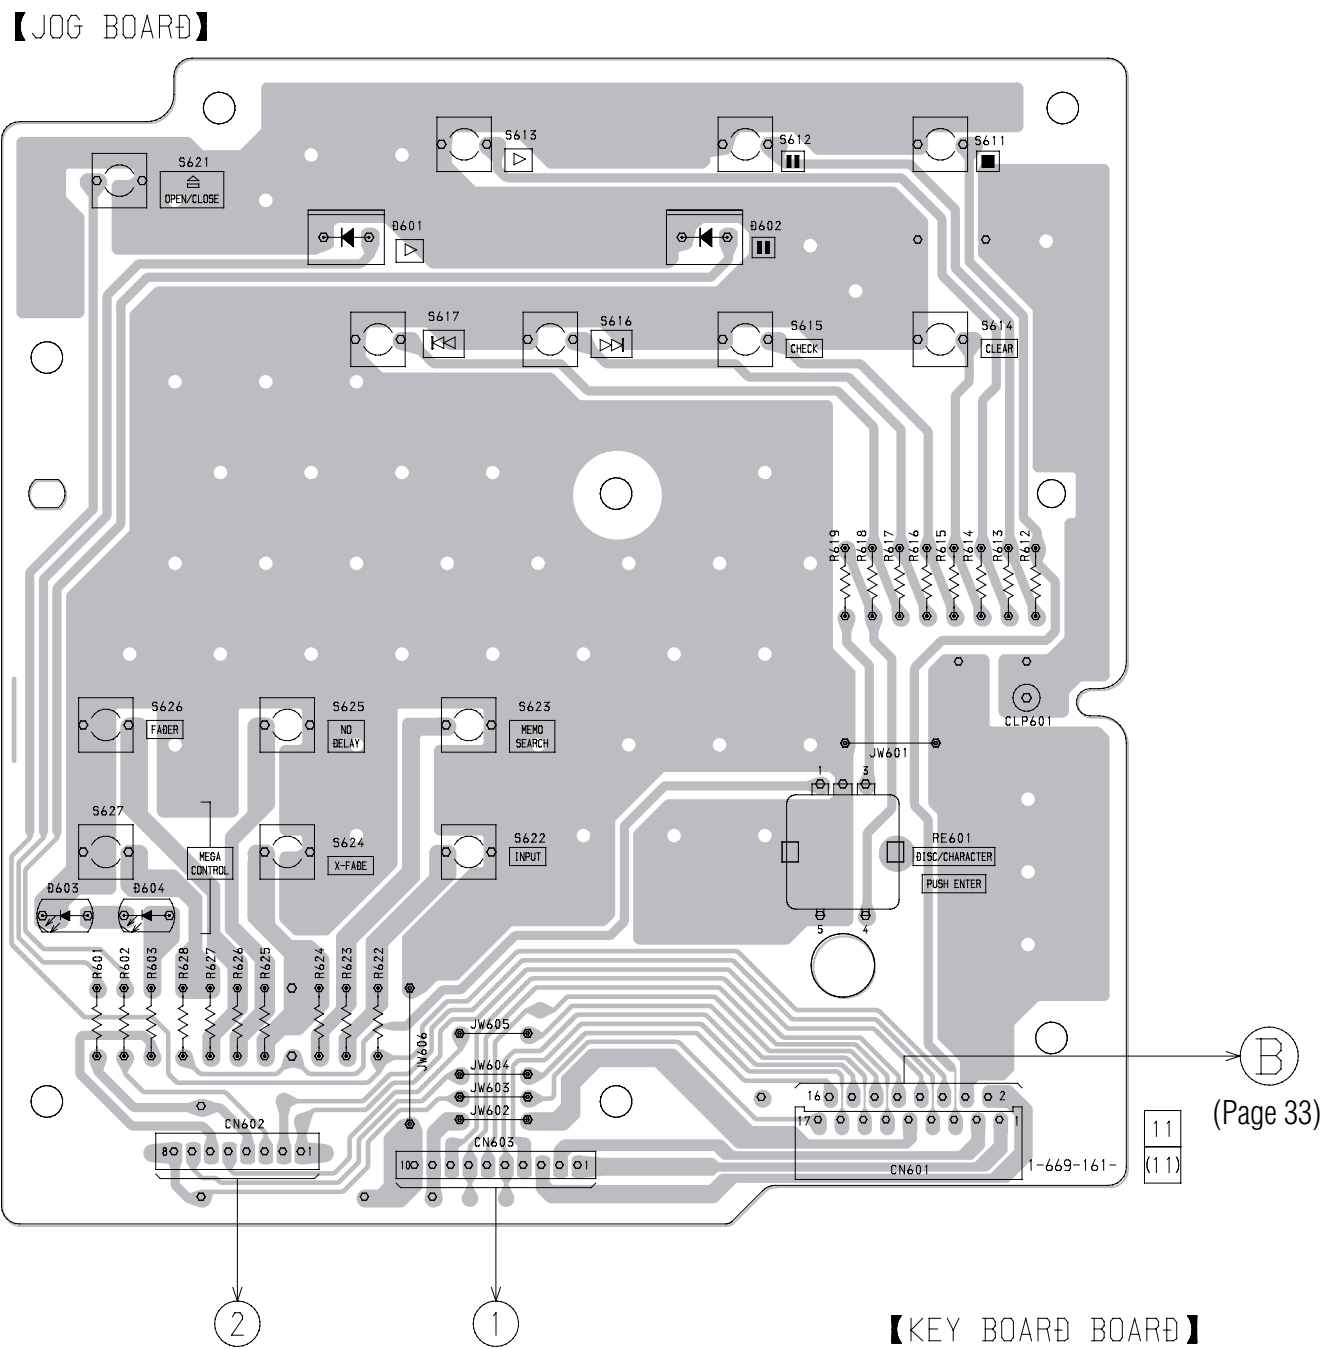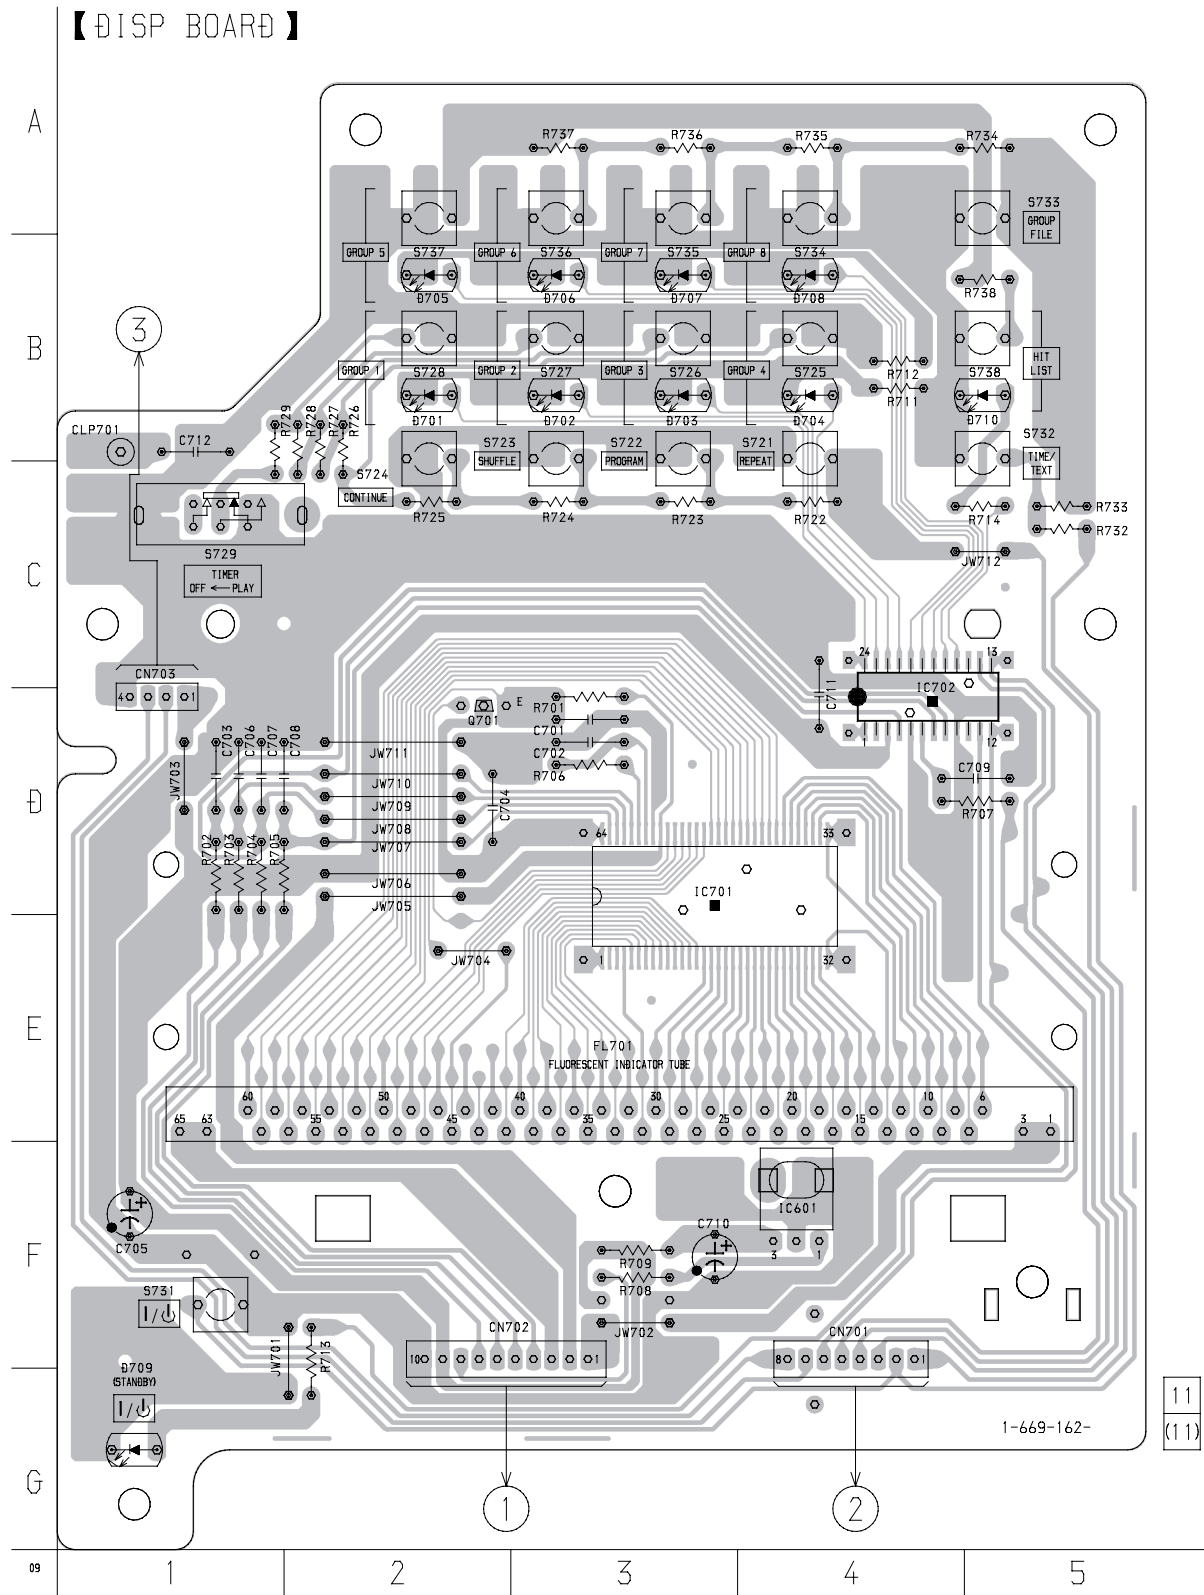


• Semiconductor Location

Ref. No.	Location
D701	B-2
D702	B-3
D703	B-3
D704	B-4
D705	B-2
D706	B-3
D707	B-3
D708	B-4
D709	G-1
D710	B-5
IC601	F-4
IC701	D-3
IC702	D-4
Q701	D-2

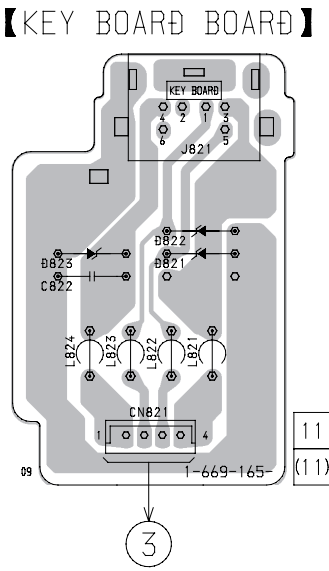


6-11. SCHEMATIC DIAGRAM – SENSOR/MOTOR SECTION –

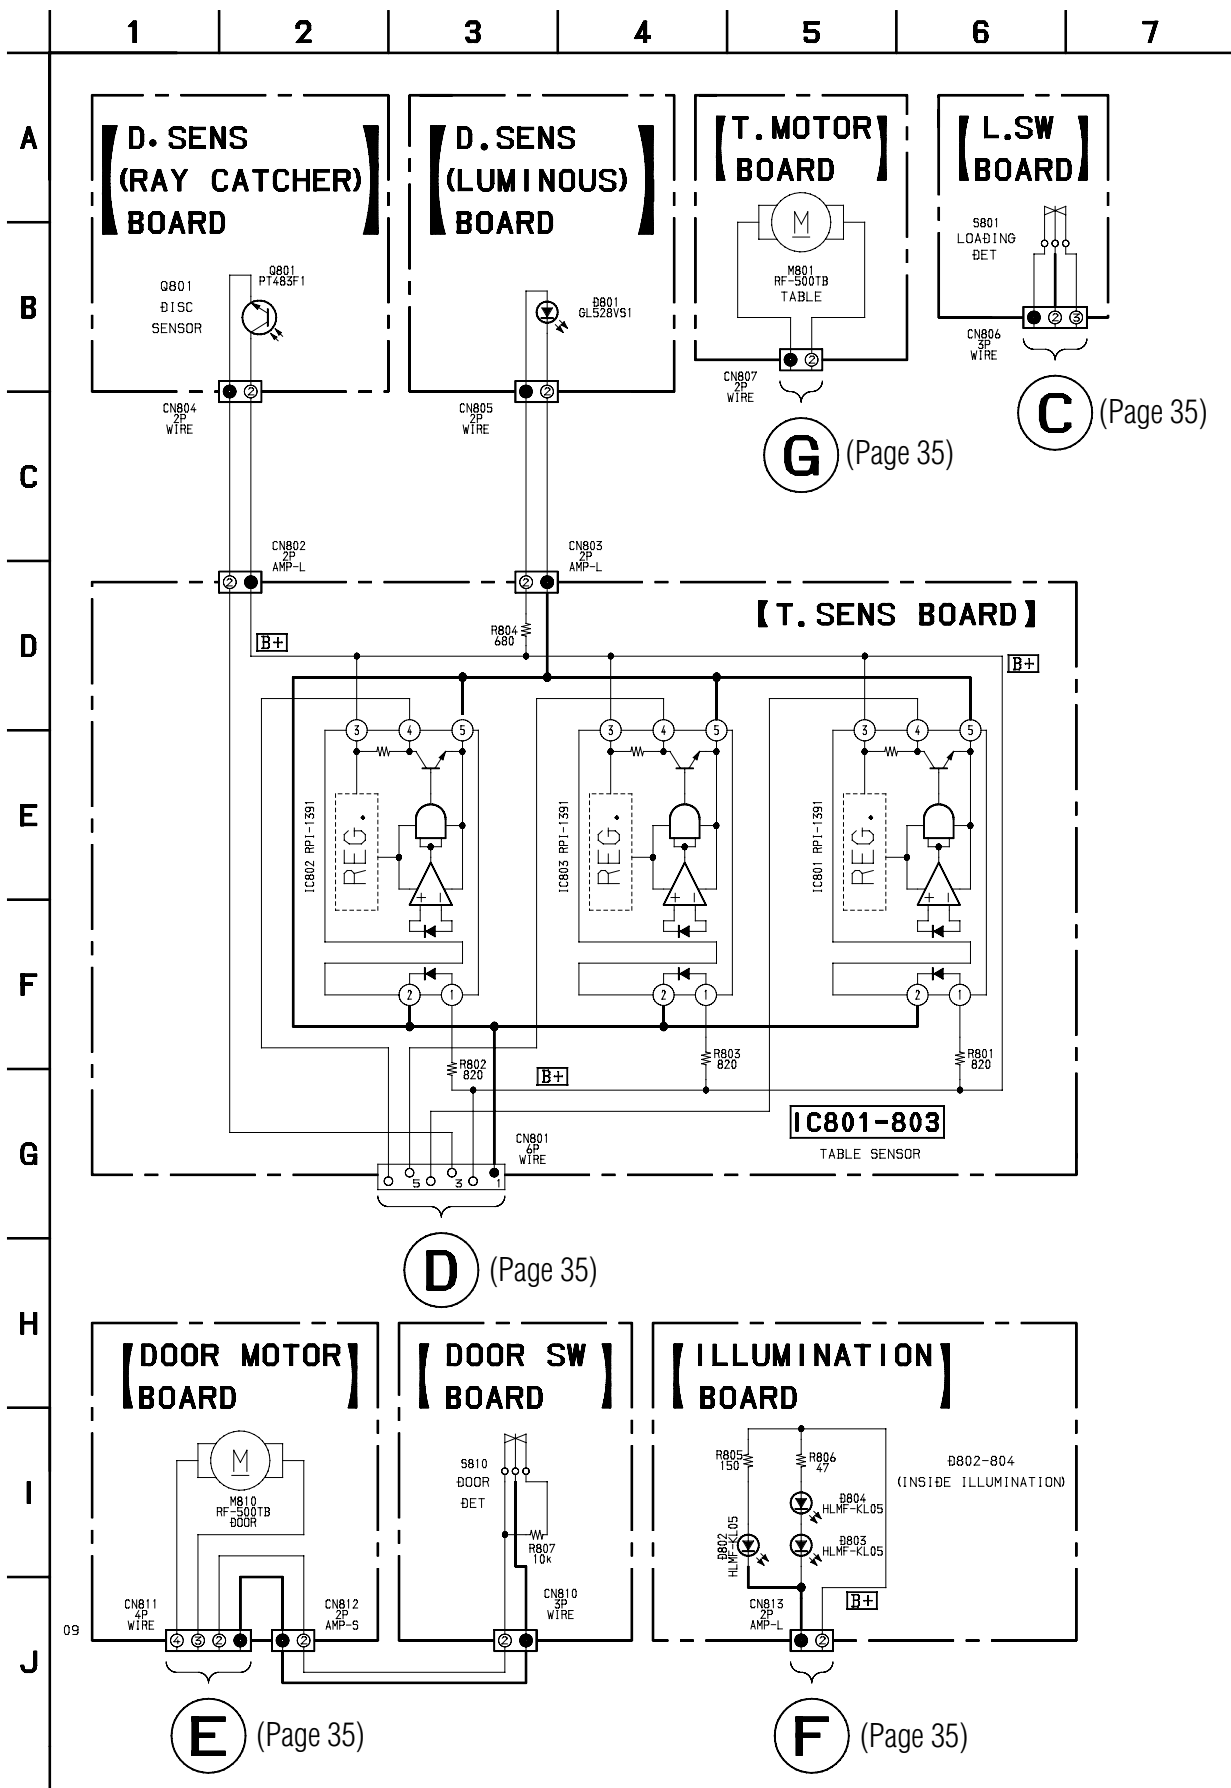

6-12. PRINTED WIRING BOARD – SENSOR/MOTOR SECTION –

- See page 22 for Circuit Boards Location.

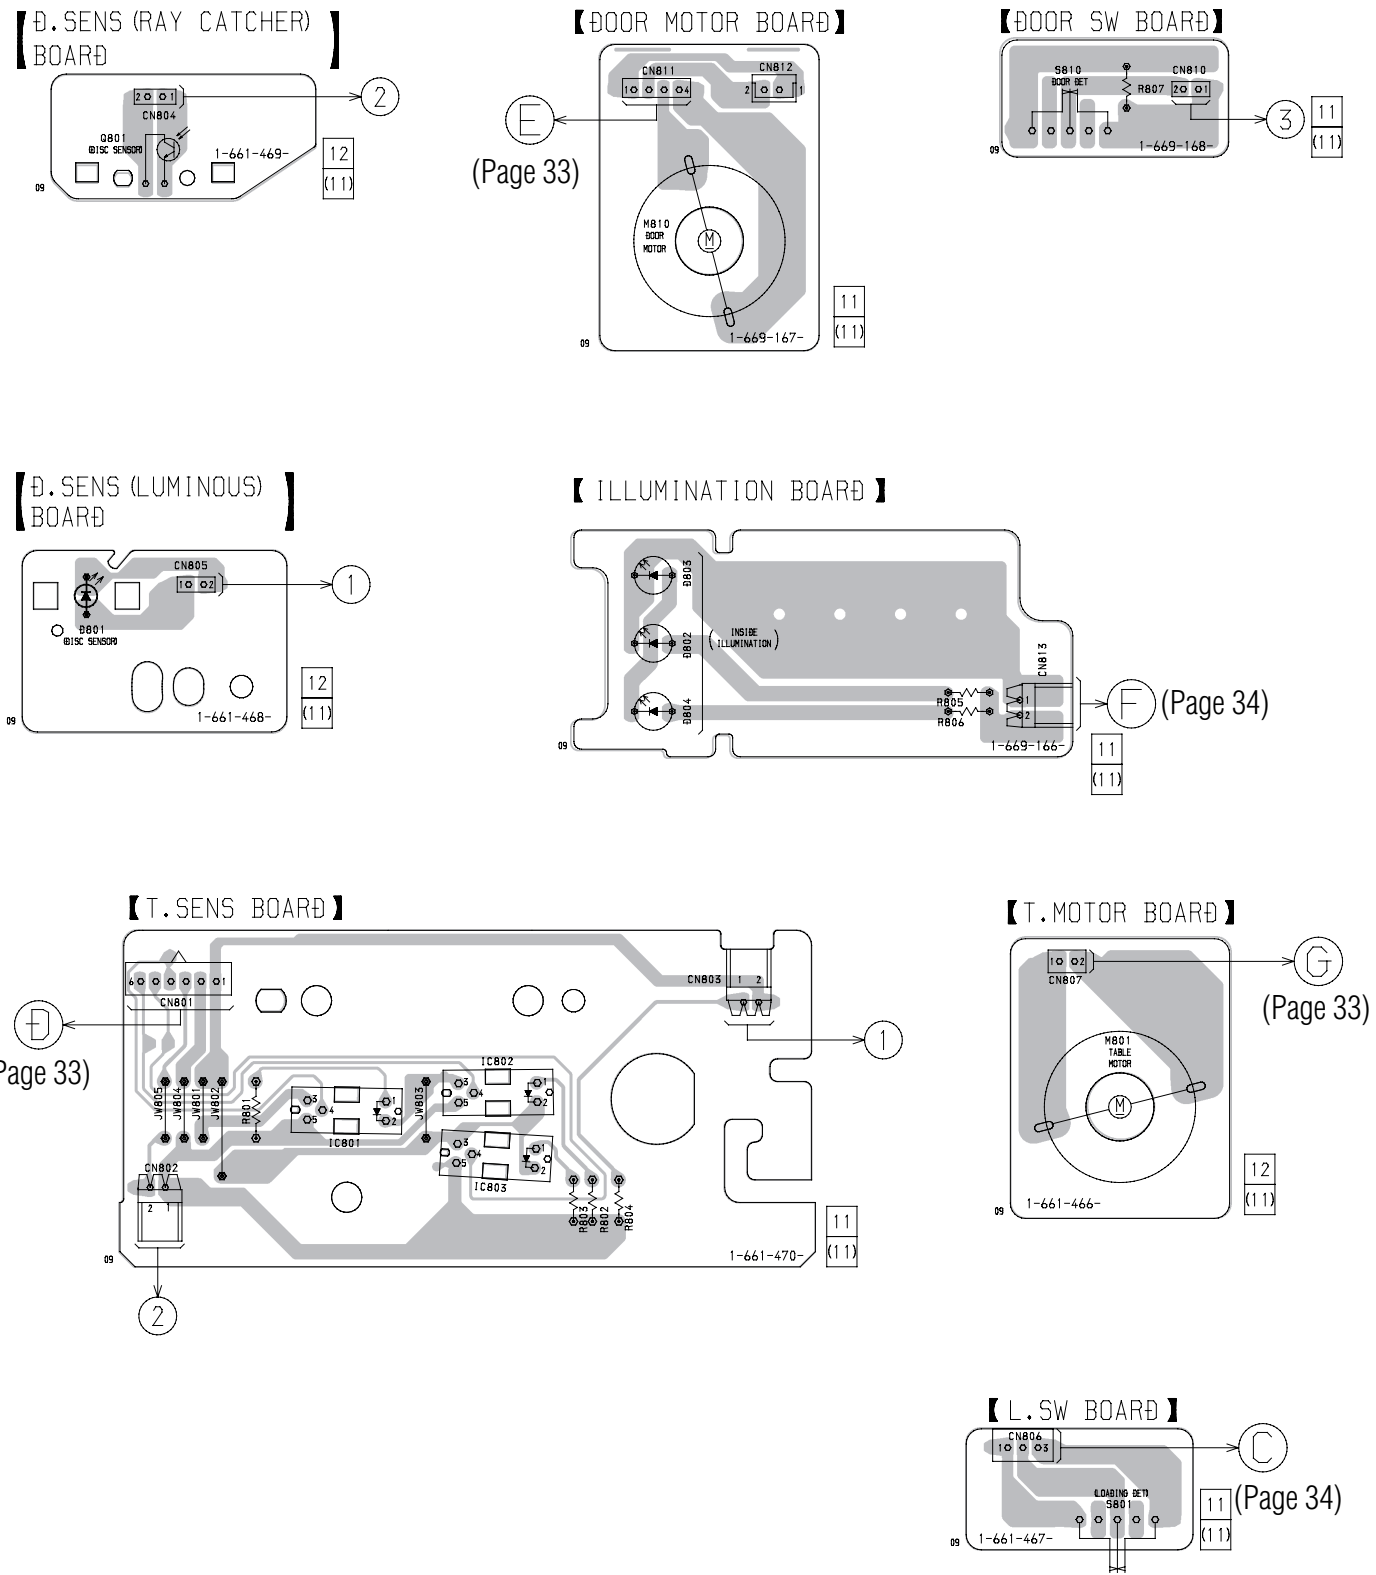


- **BD section**


IC101 CXD2587Q




IC102 BA6392FP

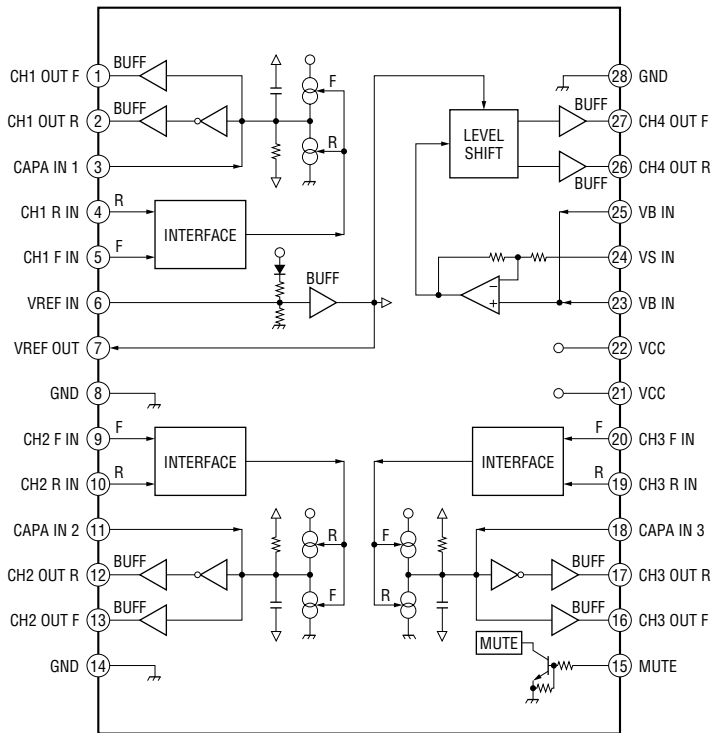


IC103 CXA2568M

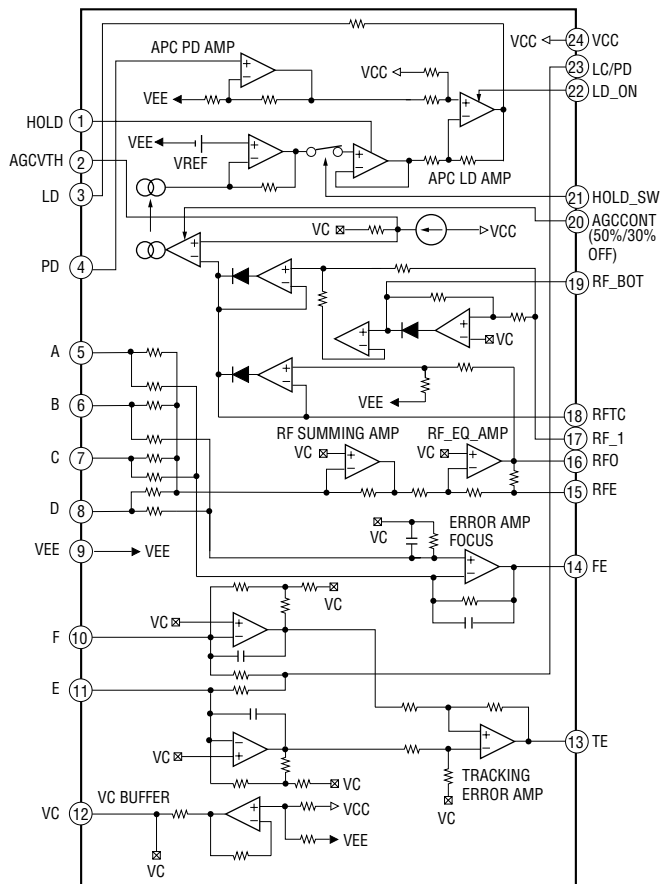


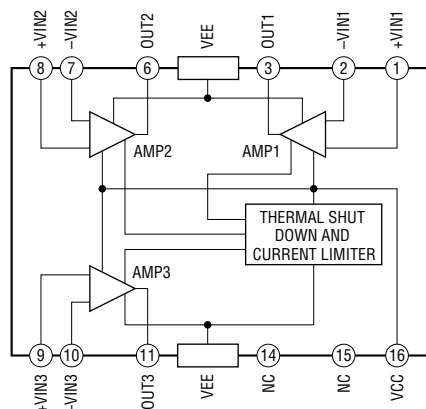IC503 CXA1291P

IC506 LA5616

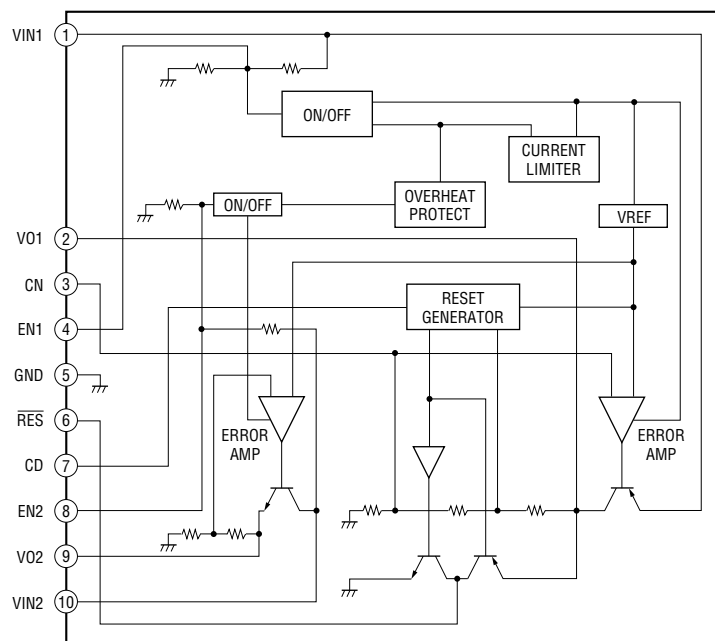

IC702 M66310FP

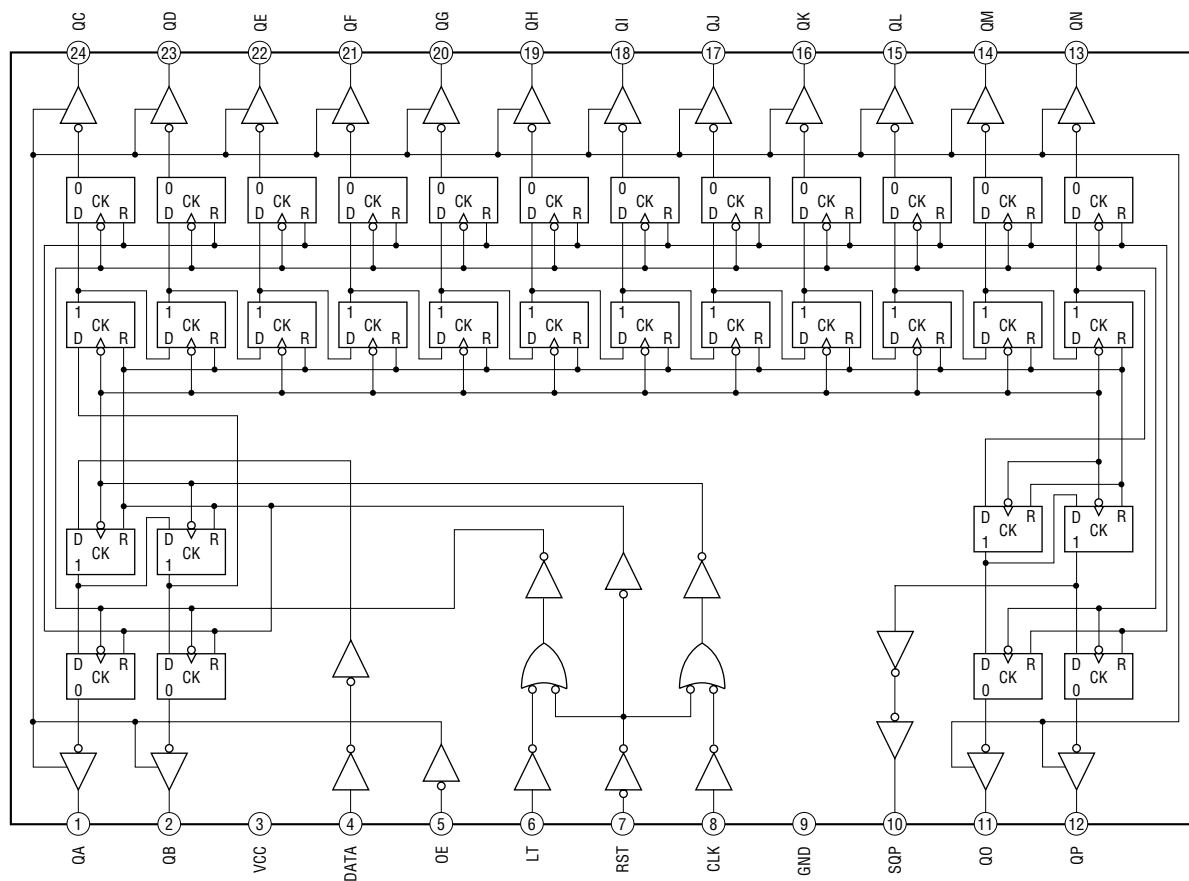

6-14. IC PIN FUNCTIONS

• IC101 DIGITAL SIGNAL PROCESSOR (CXD2587Q)

Pin No.	Pin Name	I/O	Function
1	SQSO	O	Sub-Q 80-bit and PCM peak level data output (CD text data output)
2	SQCK	I	Clock input for SQSO read-out
3	XRST	I	System reset "L" : reset
4	SYSM	I	Muting input "H" : mute
5	DATA	I	Serial data input, supplied from CPU
6	XLAT	I	Latch input, supplied from CPU
7	CLOK	I	Serial data transfer clock input, supplied from CPU
8	SENS	O	SENS signal output to CPU
9	SCLK	I	SENS serial data read-out clock input
10	VDD	–	Digital power supply
11	ATSK	I/O	Input pin for anti-shock (Connected to ground)
12	SPOA	I	Microcomputer escape interface input A
13	SPOB	I	Microcomputer escape interface input B
14	XLON	O	Microcomputer escape interface output
15	WFCK	O	WFCK output (Not used)
16	XUGF	O	Not used
17	XPCK	O	Not used
18	GFS	O	Not used
19	C2PO	O	Not used
20	SCOR	O	Sub-code sync output
21	COUT	I/O	Numbers of track counted signal input/output (Not used)
22	MIRR	I/O	Mirror signal input/output (Not used)
23	DFCT	I/O	Defect signal input/output (Not used)
24	FOK	I/O	Focus OK input/output (Not used)
25	LOCK	I/O	GFS is sampled by 460 Hz. H when GFS is H (Not used)
26	MDP	O	Output to control spindle motor servo
27	SSTP	I	Input signal to detect disc inner most track
28	SFDR	O	Sled drive output
29	SRDR	O	Sled drive output
30	TFDR	O	Tracking drive output
31	TRDR	O	Tracking drive output
32	FFDR	O	Focus drive output
33	FRDR	O	Focus drive output
34	VSS	–	Digital ground
35	TEST	I	TEST pin connected normally to ground
36	TES1	I	TEST pin connected normally to ground
37	XTSL	I	X'tal selection input (Connected to ground)
38	VC	I	Center voltage input pin
39	FE	I	Focus error signal input
40	SE	I	Sled error signal input

- Abbreviation
GFS : Guarded Frame Sync

Pin No.	Pin Name	I/O	Function
41	TE	I	Tracking error signal input
42	CE	I	Center servo analog input
43	RFDC	I	RF signal input
44	ADIO	O	Test pin (Not used)
45	AVSS0	–	Analog ground
46	IGEN	I	Stabilized current input for operational amplifiers
47	AVDD0	–	Analog power supply
48	ASYO	O	EFM full swing output
49	ASYI	I	Asymmetry compare voltage input
50	BIAS	I	Asymmetry circuit constant current input
51	RFAC	I	EFM signal input
52	AVSS3	–	Analog ground
53	CLTV	I	Control voltage input for master VCO1
54	FILO	O	Filter output for master PLL
55	FILI	I	Filter input for master PLL
56	PCO	O	Charge-pump output for master PLL
57	AVDD3	–	Analog power supply
58	VSS	–	Digital ground
59	VDD	–	Digital power supply
60	DOUT	O	Digital-out output pin
61	LRCK	O	D/A interface LR clock output ($f = F_s$) (Not used)
62	PCMD	O	D/A interface serial data output (Not used)
63	BCK	O	D/A interface bit clock output (Not used)
64	EMPH	O	Playback disc output in emphasis mode (Not used)
65	XVDD	–	Power supply for master clock
66	XTAI	I	X'tal oscillator circuit input (16.9344MHz)
67	XTAO	O	X'tal oscillator circuit output (16.9344MHz)
68	XVSS	–	Ground for master clock
69	AVDD1	–	Analog power supply
70	AOUT1	O	L-ch analog output
71	AIN1	I	L-ch operational amplifiers input
72	LOUT1	O	L-ch line output
73	AVSS1	–	Analog ground
74	AVSS2	–	Analog ground
75	LOUT2	O	R-ch line output
76	AIN2	I	R-ch operational amplifiers input
77	AOUT2	O	R-ch analog output
78	AVDD2	–	Analog power supply
79	RMUT	O	R-ch “0” detection flag output
80	LMUT	O	L-ch “0” detection flag output

- Abbreviation
EFM : Eight to Fourteen Modulation
PLL : Phase Locked Loop

• IC501 SYSTEM CONTROL (CXP84340-094Q)

Pin No.	Pin Name	I/O	Function
1	A3	O	SRAM address
2	A4	O	SRAM address
3	A5	O	SRAM address
4	A6	O	SRAM address
5	A7	O	SRAM address
6	A12	O	SRAM address
7	A14	O	SRAM address
8	A11	O	SRAM address
9	A10	O	SRAM address
10	A9	O	SRAM address
11	A8	O	SRAM address
12	A13	O	SRAM address
13	$\overline{WE}$	O	SRAM writing
14	CE	O	SRAM enable
15	KBCOUT	O	Keyboard clock output
16	KBDOUT	O	Keyboard data output
17	KBDIN	I	Keyboard data input
18	FLDATA	O	Data for fluorescent indicator driver IC
19	FLCLK	O	Clock for fluorescent indicator driver IC
20	LEDLT	I	Latch for LED driver IC
21	TBLL	O	Table motor PWM output for left turn
22	TBLR	O	Table motor PWM output for right turn
23	DRIN	O	Door close output
24	DROUT	O	Door open output
25	ADJ	I	Test mode pin
26	LDIN	O	Loading motor PWM output for inside direction
27	LDOUT	O	Loading motor PWM output for outside direction
28	BUSOUT	O	CONTROL A1 out
29	SMUTE	O	Zero mute disenble output
30	$\overline{RST}$	I	Reset input L: Reset
31	EXTAL	O	X'tal Oscillation (10MHz)
32	XTAL	I	X'tal Oscillation (10MHz)
33	VSS	–	Connect to ground
34	TX	–	Not used
35	TEX	–	Connect to ground
36	AVSS	–	Connect to ground
37	AVREF	–	Connect to +5V
38	D.S	I	Disc sensor input
39	DOORSW	O	Front door switch
40	CD 1/2/3	I	Command mode switch

Pin No.	Pin Name	I/O	Function
41	SW	I	Model select switch input
42	KEY3	I	Key input
43	KEY2	I	Key input
44	KEY1	I	Key input
45	KEY0	O	Key input
46	BUSIN	I	CONTROL-A1 input L: Active
47	AMUTE	O	Audio mute driver
48	CLK	O	Clock for servo IC and digital filter IC
49	XLT	O	Latch for command
50	DATA	O	Data for command
51	CLK	O	Clock for sub code Q
52	SUBQ	I	Sub code Q data input
53	NC	–	Not used
54	SENS	I	Servo sensor signal
55	OUTSW	I	Loading out switch input L: Out
56	RMIN	I	Remote control signal
57	AFADJ	I	Test mode pin
58	FLLT	O	Latch for fluorescent indicator driver IC
59	NC	–	Not used
60	KBCIN	O	Keyboard clock output
61	SCOR	I	Sub code Q synchronous signal Start at rising edge
62	TS.1	I	Table position sensor 1 input
63	TS.2	I	Table position sensor 2 input
64	TS.3	I	Table position sensor 3 input
65	ICSW	O	Power switch control signal output for BD board
66	RFSW	O	RF automatic gain control hold output
67	INSW	I	Loading in switch input L: In
68	D3	I/O	SRAM data
69	D4	I/O	SRAM data
70	D5	I/O	SRAM data
71	D6	I/O	SRAM data
72	VDD	–	Connect to +5V
73	VDD	–	Connect to +5V
74	D7	I/O	SRAM data
75	D2	I/O	SRAM data
76	D1	I/O	SRAM data
77	D0	I/O	SRAM data
78	A0	O	SRAM address
79	A1	O	SRAM address
80	A2	O	SRAM address

SECTION 7 EXPLODED VIEWS

NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
CND : Canadian model

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité.


Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. CASE AND BACK PANEL SECTION

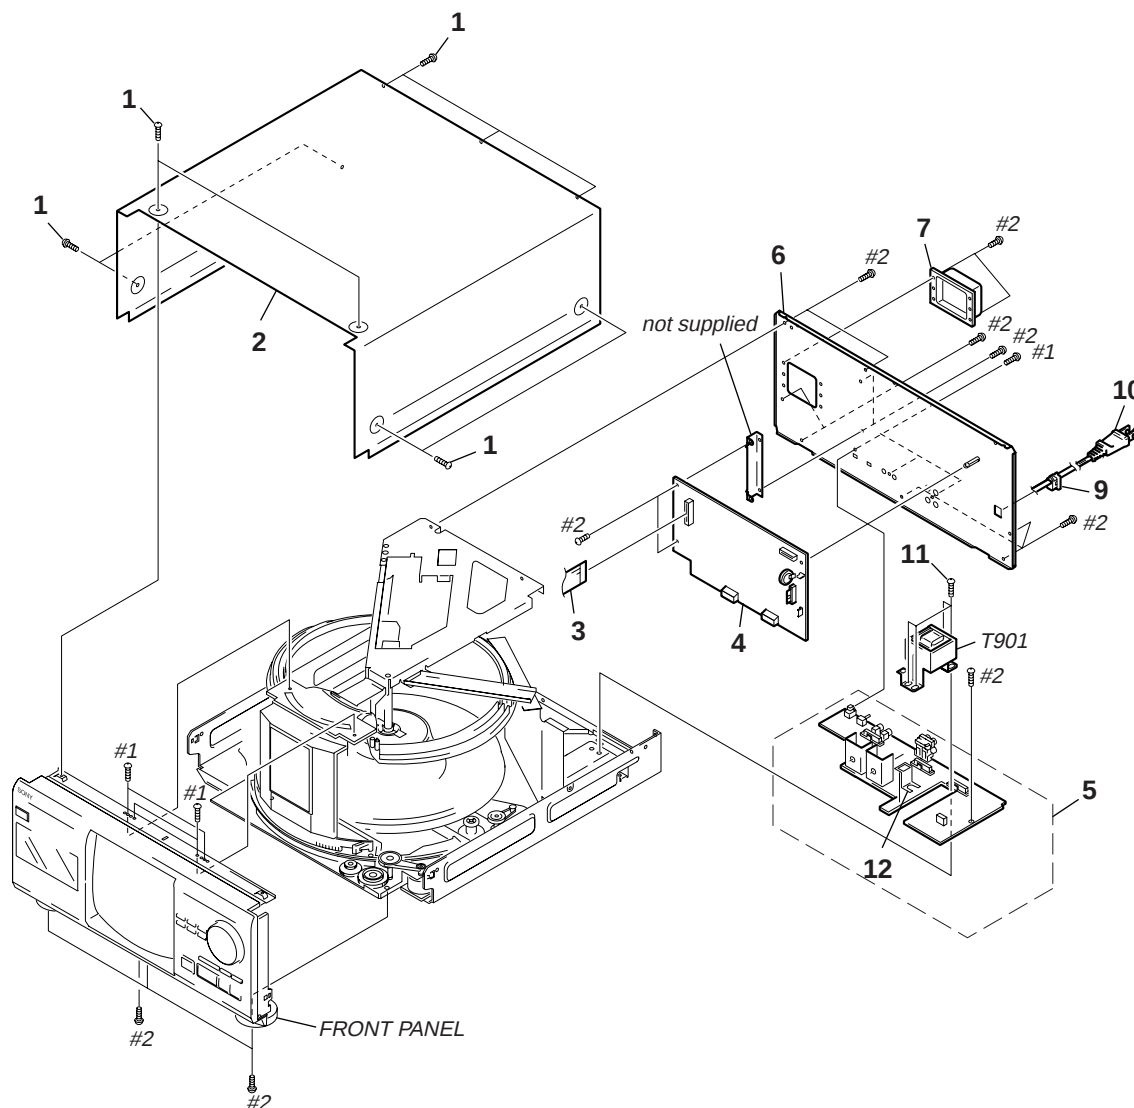


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-710-901-11	SCREW, TAPPING		* 7	4-982-807-01	COVER (FFC)	
* 2	4-982-946-11	CASE		* 9	3-703-244-00	BUSHING (2104), CORD	
3	1-773-183-11	WIRE (FLAT TYPE) (23 CORE)		$\triangle$ 10	1-575-042-21	CORD, POWER	
* 4	A-4724-058-A	MAIN BOARD, COMPLETE		11	4-886-821-11	SCREW, S TIGHT, +PTTWH 3X6	
* 5	1-669-164-11	JACK BOARD, COMPLETE		* 12	4-962-200-11	PLATE (TR), GROUND	
* 6	4-999-020-01	PANEL, BACK (US)		$\triangle$ T901	1-431-759-11	TRANSFORMER, POWER	
* 6	4-999-020-11	PANEL, BACK (CND)					

7-2. DISC TABLE SECTION

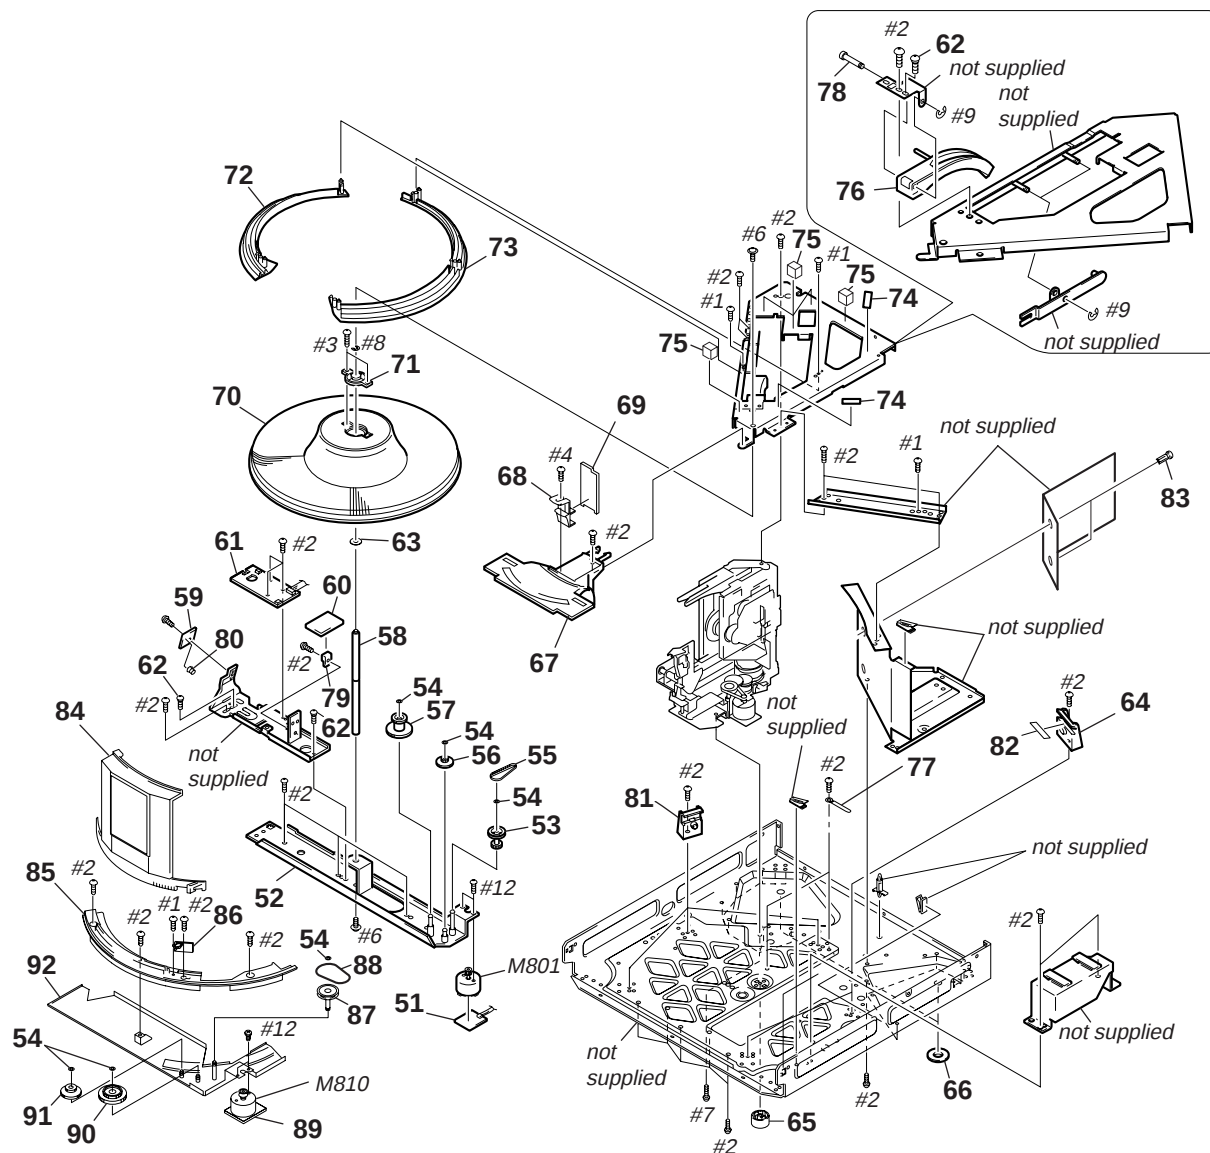


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	1-661-466-11	T.MOTOR BOARD		* 73	4-982-802-01	RING (A)	
52	X-4947-230-1	BRACKET (TABLE) ASSY		* 74	3-378-434-01	CUSHION, SARANET	
53	X-4947-607-1	GEAR (PULLEY) ASSY		75	4-985-553-11	CUSHION	
54	3-325-697-21	WASHER		76	4-982-862-01	GUIDE (DISC T)	
55	4-962-822-01	BELT (TIMING)		77	3-703-397-01	STOPPER, WIRING	
56	4-982-893-01	GEAR (CENTER 2)		78	4-982-870-01	SHAFT (GUIDE FULCRUM)	
57	4-982-891-01	GEAR (TABLE)		* 79	4-985-300-01	HOLDER (P-T)	
58	4-982-892-01	SHAFT (CENTER)		* 80	4-976-473-01	HOLDER (LED-S)	
* 59	1-661-468-11	D.SENS (LUMINOUS) BOARD		81	X-4947-606-1	HOLDER (ROLLER 2) ASSY	
* 60	1-661-469-11	D.SENS (RAY CATCHER) BOARD		82	4-985-574-01	SPACER (ROLLER)	
* 61	1-661-470-11	T.SENS BOARD		83	4-053-543-01	RIVET, NYLON	
62	3-356-601-11	SCREW, STEP		84	X-4949-616-1	DOOR (CD) ASSY	
63	3-701-446-21	WASHER, 8		85	4-998-507-01	GUIDE (DOOR.B)	
64	X-4947-229-1	HOLDER (ROLLER) ASSY		* 86	1-669-168-11	DOOR SW BOARD	
65	4-931-169-01	FOOT		87	4-998-510-01	GEAR (PULLEY)	
66	4-983-279-01	CUSHION (RF)		88	4-210-030-01	BELT (DIA. 42X1)	
67	4-998-506-01	GUIDE (DOOR.T)		* 89	1-669-167-11	DOOR MOTOR BOARD	
68	4-999-182-01	ILLUMINATOR		90	4-998-509-01	GEAR (DOOR.CENTER)	
* 69	1-669-166-11	ILLUMINATION BOARD		91	4-998-508-01	GEAR (DOOR)	
70	X-4947-231-1	TABLE (200) ASSY		* 92	X-4949-615-1	BRACKET (GEAR) ASSY	
71	4-976-471-01	BEARING (TABLE)		M801	A-4604-847-A	MOTOR ASSY (TABLE)	
* 72	4-982-803-01	RING (B)		M810	X-4950-062-1	MOTOR ASSY, DOOR	

7-3. FRONT PANEL SECTION

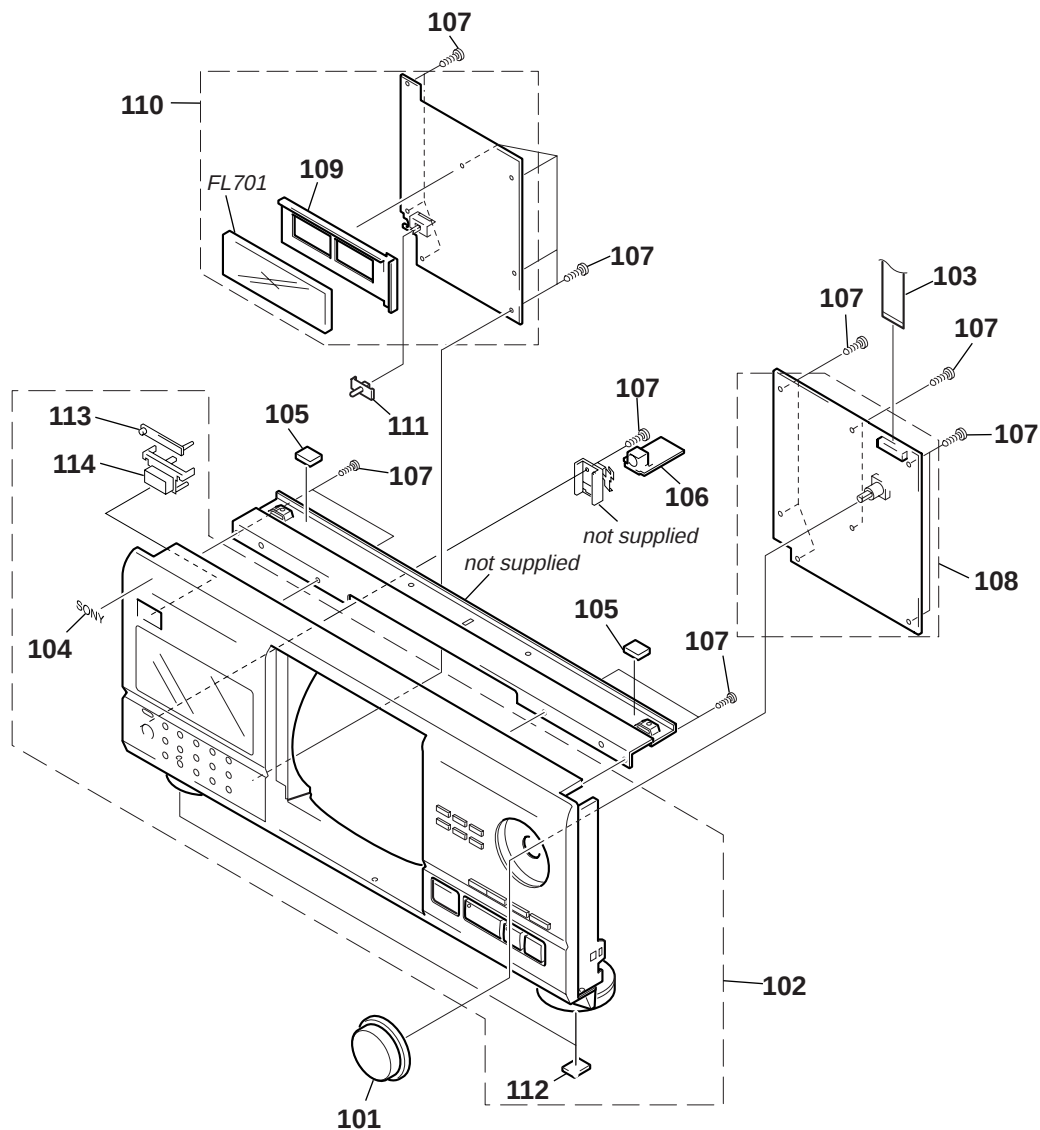


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-998-523-01	KNOB (JOG)		* 109	4-982-811-01	HOLDER (FL)	
102	X-4949-663-1	PANEL ASSY, FRONT		* 110	A-4724-061-A	DISP BOARD, COMPLETE	
103	1-783-365-11	WIRE (FLAT TYPE) (17 CORE)		111	3-917-216-21	KNOB (TIMER)	
104	4-996-698-01	EMBLEM, SONY		112	4-977-358-11	CUSHION	
105	4-985-553-21	CUSHION		113	4-996-682-11	INDICATOR	
* 106	1-669-165-11	KEY BOARD BOARD		114	4-996-683-21	BUTTON (POWER)	
107	4-951-620-01	SCREW (2.6X8), +BVTP		FL701	1-517-756-11	INDICATOR TUBE, FLUORESCENT	
* 108	1-669-161-11	JOG BOARD					

7-4. MECHANISM SECTION-1 (CDM-40B)

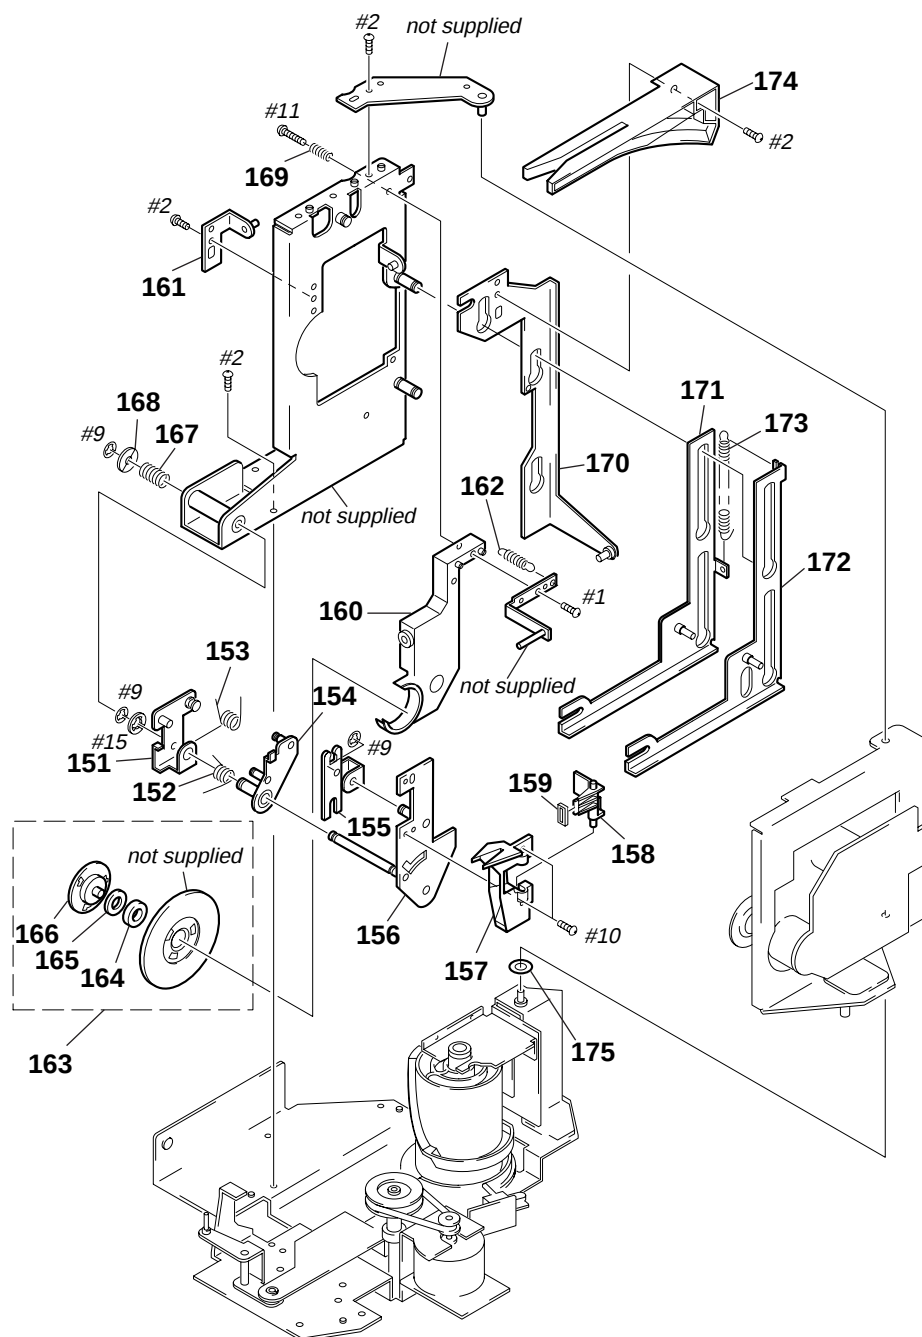


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-4947-241-1	LEVER (C) ASSY		163	A-4672-092-A	MAGNET ASSY	
152	4-982-882-01	SPRING (LIMITER), TORSION		164	3-366-559-02	MAGNET (CHUCK)	
153	4-982-881-01	SPRING (HOLDER), TORSION		165	4-960-633-01	YOKE (MAGNET)	
154	X-4947-239-1	LIMITTER (A) ASSY					
155	4-982-853-01	LEVER (B)		166	4-960-632-11	PULLEY (B)	
156	X-4947-240-1	LEVER (A) ASSY		167	4-983-319-01	SPRING (THRUST), COMPRESSION	
157	4-988-143-01	HOLDER (DISC A2)		* 168	4-976-456-01	WASHER (STOPPER)	
158	4-982-855-01	HOLDER (DISC B)		169	3-938-588-01	SPRING, COMPRESSION	
159	4-982-856-01	PAD		170	X-4947-242-1	SLIDER (C) ASSY	
160	4-976-458-01	HOLDER (MAGNET)					
161	X-4946-326-1	HOLDER (CLAMP) ASSY		171	X-4947-238-1	SLIDER (B) ASSY	
162	4-983-777-01	SPRING (MG), TENSION		172	X-4947-237-1	SLIDER (A) ASSY	
				173	4-982-880-01	SPRING (SLIDER A), TENSION	
				* 174	4-982-863-01	GUIDE (DISC P)	
				175	3-701-441-21	WASHER	

7-5. MECHANISM SECTION-2 (CDM-40B)

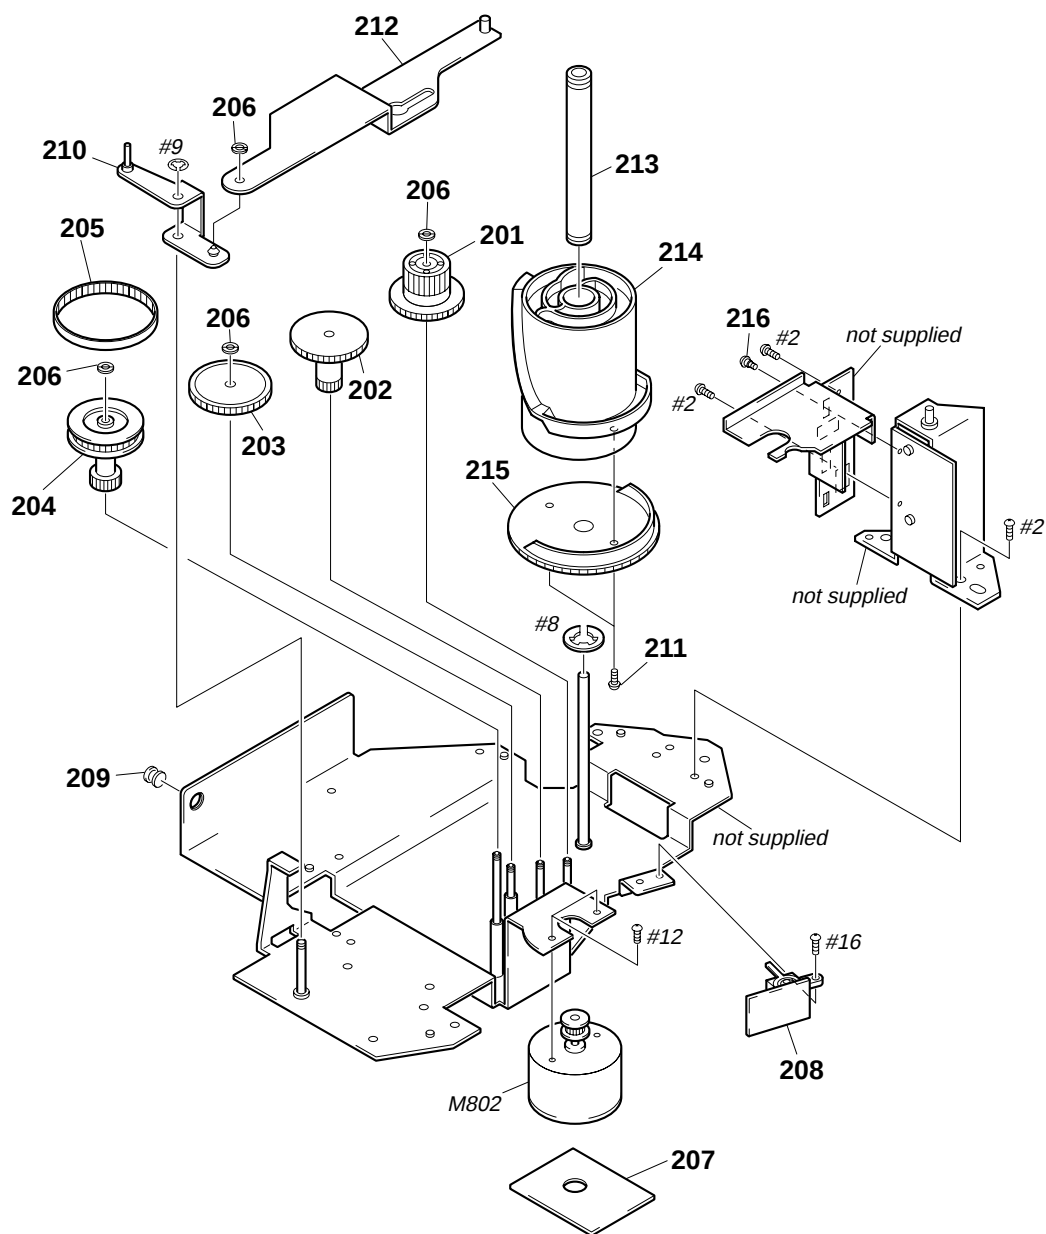


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	4-976-465-01	GEAR (LOADING 1)		210	X-4947-227-1	LEVER (STOPPER) ASSY	
202	4-976-466-01	GEAR (LOADING 2)		211	4-951-291-01	SCREW	
203	4-982-893-01	GEAR (CENTER 2)		212	X-4947-234-1	SLIDER (LOCK) ASSY	
204	X-4947-607-1	GEAR (PULLEY) ASSY		213	4-982-857-01	BEARING (CAM)	
205	4-982-867-01	BELT (TIMING)		214	4-982-860-01	CAM (A)	
206	3-325-697-21	WASHER		215	4-982-861-01	CAM (B)	
* 207	1-661-465-11	L.MOTOR BOARD		216	3-356-601-11	SCREW, STEP	
* 208	1-661-467-11	L.SW BOARD		M802	A-4604-847-A	MOTOR ASSY (LOADING)	
209	3-489-073-00	SCREW, THRUST					

7-6. MECHANISM SECTION-3 (CDM-40B)

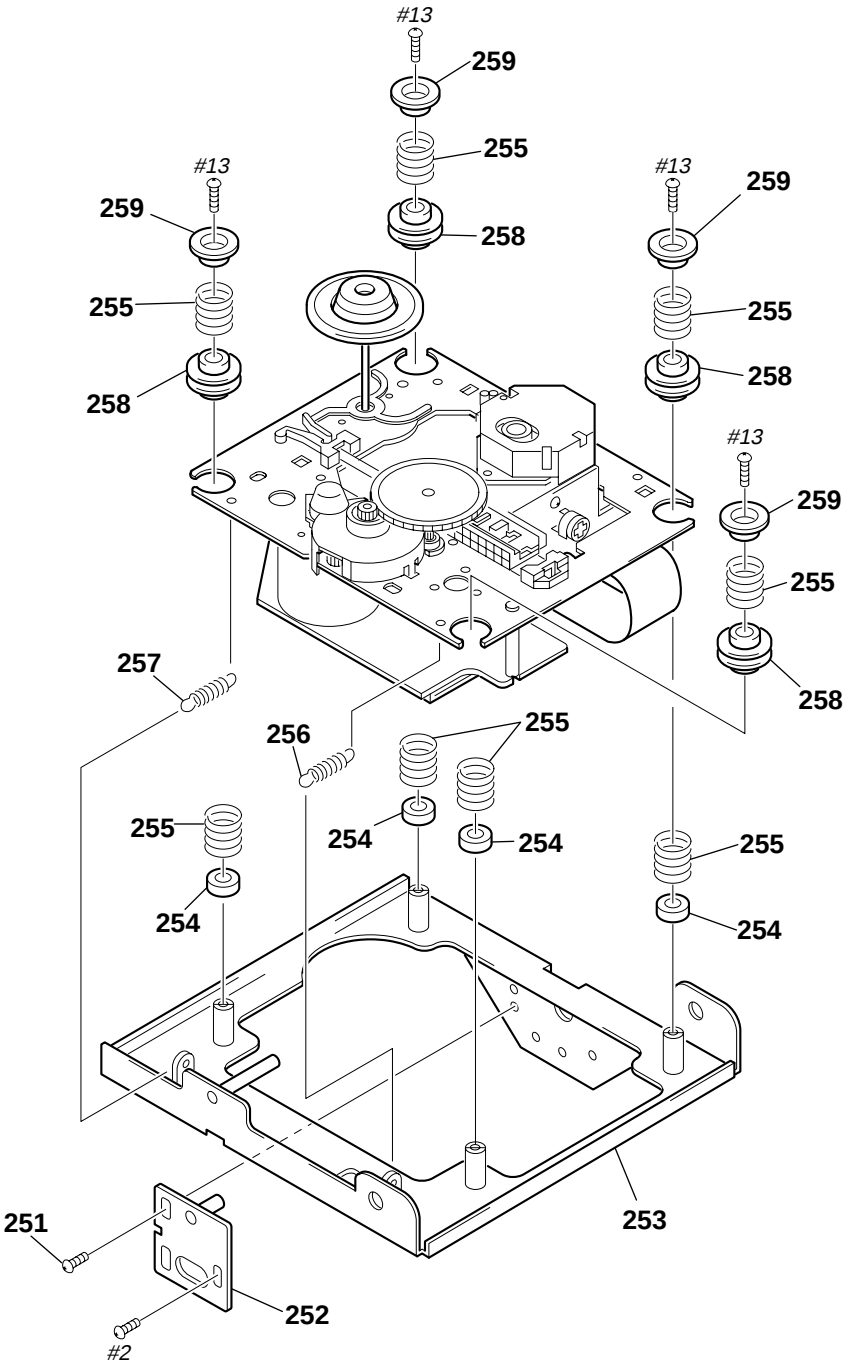

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	3-356-601-11	SCREW, STEP		256	4-982-872-01	SPRING (F-2), TENSION	
252	X-4947-244-1	SLIDER (BU ADJUSTMENT) ASSY		257	4-982-871-01	SPRING (F-1), TENSION	
253	X-4947-243-1	HOLDER (BU) ASSY		258	4-982-858-01	DAMPER	
254	4-982-859-01	HOLDER (DAMPER)		259	4-960-617-01	CAP (F)	
255	4-982-878-01	SPRING (F), COMPRESSION					

7-7. BASE UNIT SECTION (KSM-213BKN/M-N)

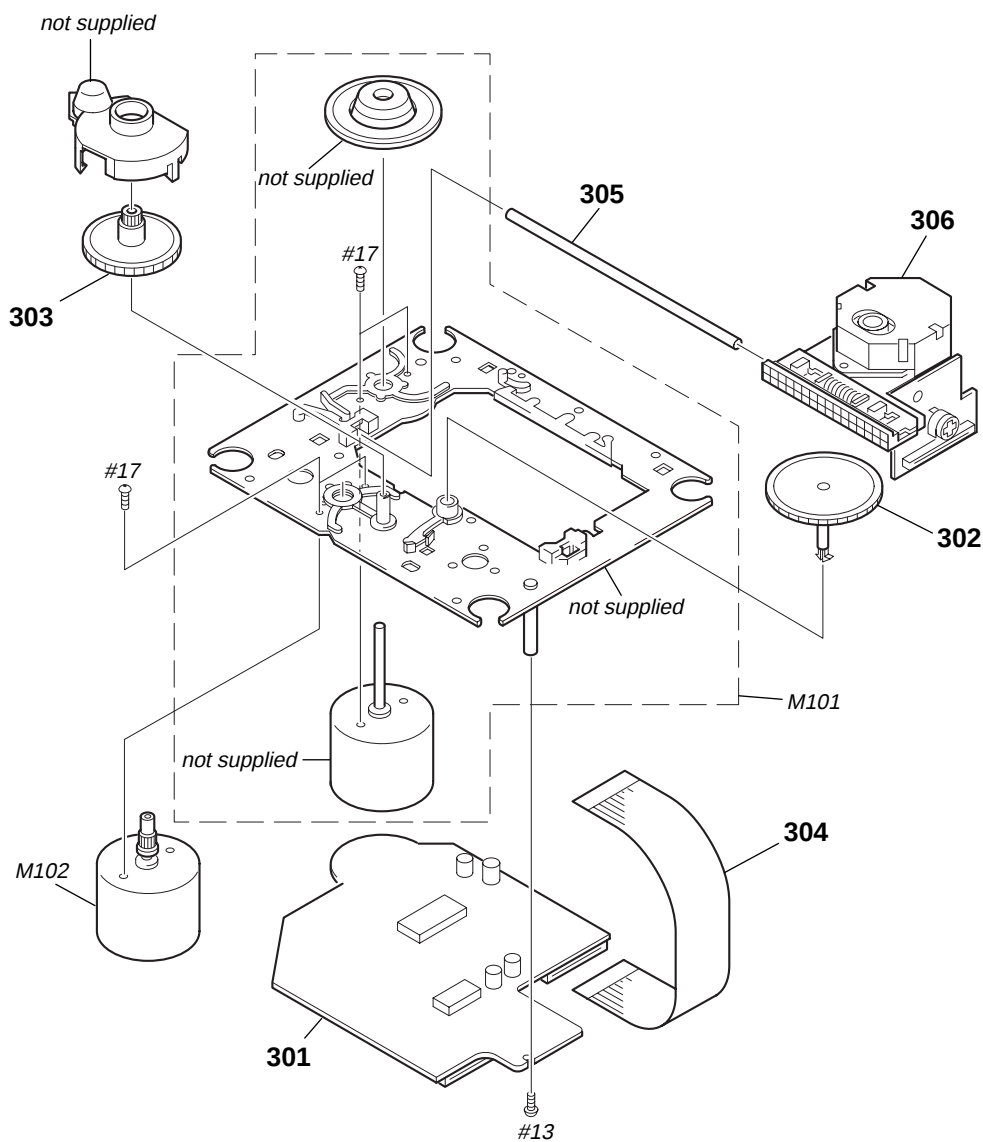

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

Ref. No.	Part No.	Description	Remark
* 301	A-4724-029-A	BD BOARD, COMPLETE	
302	2-626-907-01	GEAR (A)(S)	
303	2-627-003-01	GEAR (B)(RP)	
304	1-769-069-11	WIRE (FLAT TYPE)(16 CORE)	
305	2-626-908-01	SHAFT, SLED	

Ref. No.	Part No.	Description	Remark
$\triangle$ 306	8-848-376-01	OPTICAL PICK-UP BLOCK KSS-213B/S-N	
M101	X-2626-234-1	T.T CHAISSIS ASSY (MG)(K)(SPINDLE)	
M102	X-2625-769-1	MOTOR GEAR ASSY (MB)(RP)(SLED)	

SECTION 8 ELECTRICAL PARTS LIST

BD

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable

- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H
- Abbreviation
CND : Canadian model

Ref. No.	Part No.	Description	Remark		Ref. No.	Part No.	Description	Remark	
*	A-4724-029-A	BD BOARD, COMPLETE *****			C167	1-163-235-11	CERAMIC CHIP 22PF	5%	50V
					C168	1-163-237-11	CERAMIC CHIP 27PF	5%	50V
					C171	1-163-137-00	CERAMIC CHIP 680PF	5%	50V
		< CAPACITOR >			C172	1-163-251-11	CERAMIC CHIP 100PF	5%	50V
C101	1-163-005-11	CERAMIC CHIP 470PF	10%	50V	C181	1-163-137-00	CERAMIC CHIP 680PF	5%	50V
C102	1-163-038-91	CERAMIC CHIP 0.1uF		25V	C182	1-163-251-11	CERAMIC CHIP 100PF	5%	50V
C103	1-163-005-11	CERAMIC CHIP 470PF	10%	50V			< CONNECTOR >		
C104	1-163-021-91	CERAMIC CHIP 0.01uF	10%	50V	CN101	1-770-072-11	CONNECTOR,(LIF(NON-ZIF))FFC23P		
C106	1-164-346-11	CERAMIC CHIP 1uF		16V	CN102	1-777-937-11	CONNECTOR, FFC/FPC 16P		
C107	1-164-346-11	CERAMIC CHIP 1uF		16V			< IC >		
C108	1-163-035-00	CERAMIC CHIP 0.047uF		50V	IC101	8-752-386-85	IC CXD2587Q		
C109	1-163-145-00	CERAMIC CHIP 0.0015uF	5%	50V	IC102	8-759-455-91	IC BA6392FP-E2		
C110	1-163-017-00	CERAMIC CHIP 0.0047uF	5%	50V	IC103	8-752-085-51	IC CXA2568M-T6		
C111	1-163-251-11	CERAMIC CHIP 100PF	5%	50V			< COIL >		
C112	1-163-038-91	CERAMIC CHIP 0.1uF		25V	L101	1-414-234-11	INDUCTOR CHIP 0uH		
C113	1-163-038-91	CERAMIC CHIP 0.1uF		25V	L102	1-414-234-11	INDUCTOR CHIP 0uH		
C114	1-163-038-91	CERAMIC CHIP 0.1uF		25V			< TRANSISTOR >		
C115	1-126-607-11	ELECT CHIP 47uF	20%	4V	Q101	8-729-010-08	TRANSISTOR MSB710-R		
C116	1-126-607-11	ELECT CHIP 47uF	20%	4V			< RESISTOR >		
C117	1-126-209-11	ELECT CHIP 100uF	20%	4V	R101	1-216-077-00	METAL CHIP 15K	5%	1/10W
C118	1-163-275-11	CERAMIC CHIP 0.001uF	5%	50V	R102	1-216-097-91	RES,CHIP 100K	5%	1/10W
C119	1-163-231-11	CERAMIC CHIP 15PF	5%	50V	R103	1-216-077-00	METAL CHIP 15K	5%	1/10W
C120	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R104	1-216-085-00	METAL CHIP 33K	5%	1/10W
C121	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R105	1-216-097-91	RES,CHIP 100K	5%	1/10W
C122	1-135-155-21	TANTALUM CHIP 4.7uF	10%	16V	R106	1-216-061-00	METAL CHIP 3.3K	5%	1/10W
C123	1-163-021-91	CERAMIC CHIP 0.01uF	10%	50V	R107	1-216-061-00	METAL CHIP 3.3K	5%	1/10W
C124	1-164-005-11	CERAMIC CHIP 0.47uF		25V	R108	1-216-073-00	METAL CHIP 10K	5%	1/10W
C125	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R109	1-216-121-91	RES,CHIP 1M	5%	1/10W
C126	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R110	1-216-025-91	RES,CHIP 100	5%	1/10W
C127	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	R111	1-216-121-91	RES,CHIP 1M	5%	1/10W
C130	1-164-004-11	CERAMIC CHIP 0.1uF	10%	25V	R113	1-216-121-91	RES,CHIP 1M	5%	1/10W
C131	1-135-216-11	TANTALUM CHIP 10uF	20%	10V	R116	1-216-025-91	RES,CHIP 100	5%	1/10W
C140	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R117	1-216-049-91	RES,CHIP 1K	5%	1/10W
C141	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R119	1-216-043-91	RES,CHIP 560	5%	1/10W
C151	1-163-237-11	CERAMIC CHIP 27PF	5%	50V	R123	1-216-073-00	METAL CHIP 10K	5%	1/10W
C153	1-163-038-91	CERAMIC CHIP 0.1uF		25V	R124	1-216-097-91	RES,CHIP 100K	5%	1/10W
C154	1-164-336-11	CERAMIC CHIP 0.33uF		25V	R131	1-216-037-00	METAL CHIP 330	5%	1/10W
C156	1-163-237-11	CERAMIC CHIP 27PF	5%	50V	R135	1-216-295-91	SHORT 0		
C157	1-163-145-00	CERAMIC CHIP 0.0015uF	5%	50V	R136	1-216-295-91	SHORT 0		
C159	1-163-019-00	CERAMIC CHIP 0.0068uF	10%	50V	R137	1-216-295-91	SHORT 0		
C161	1-126-205-11	ELECT CHIP 47uF	20%	6.3V					
C162	1-126-205-11	ELECT CHIP 47uF	20%	6.3V					
C163	1-126-205-11	ELECT CHIP 47uF	20%	6.3V					
C164	1-163-038-91	CERAMIC CHIP 0.1uF		25V					
C165	1-163-038-91	CERAMIC CHIP 0.1uF		25V					
C166	1-163-038-91	CERAMIC CHIP 0.1uF		25V					

BD	D.SENS (LUMINOUS)	D.SENS (RAY CATCHER)	DISP
----	-------------------	----------------------	------

Ref. No.	Part No.	Description	Remark		
R138	1-216-295-91	SHORT	0		
R143	1-216-103-00	METAL CHIP	180K	5%	1/10W
R144	1-216-103-00	METAL CHIP	180K	5%	1/10W
R147	1-216-081-00	METAL CHIP	22K	5%	1/10W
R148	1-216-001-00	METAL CHIP	10	5%	1/10W
R149	1-216-003-11	RES,CHIP	12	5%	1/10W
R158	1-216-111-00	METAL CHIP	390K	5%	1/10W
R159	1-216-101-00	METAL CHIP	150K	5%	1/10W
R161	1-216-308-00	METAL CHIP	4.7	5%	1/10W
R162	1-216-101-00	METAL CHIP	150K	5%	1/10W
R171	1-216-077-00	METAL CHIP	15K	5%	1/10W
R172	1-216-077-00	METAL CHIP	15K	5%	1/10W
R173	1-216-077-00	METAL CHIP	15K	5%	1/10W
R181	1-216-077-00	METAL CHIP	15K	5%	1/10W
R182	1-216-077-00	METAL CHIP	15K	5%	1/10W
R183	1-216-077-00	METAL CHIP	15K	5%	1/10W
< SWITCH >					
S101	1-572-085-11	SWITCH, LEAF (LIMIT IN SW)			
< VIBRATOR >					
X101	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHz)			

*	1-661-468-11	D.SENS (LUMINOUS) BOARD			

*	4-976-473-01	HOLDER (LED-S)			
	7-685-871-01	SCREW +BVTT 3X6 (S)			
< DIODE >					
D801	8-719-055-84	DIODE GL528VS1 (DISC SENSOR)			

*	1-661-469-11	D.SENS (RAY CATCHER) BOARD			

*	4-985-300-01	HOLDER (P-T)			
	7-685-871-01	SCREW +BVTT 3X6 (S)			
< TRANSISTOR >					
Q801	8-729-926-31	PHOTO TRANSISTOR PT483F1S (DISC SENSOR)			

*	A-4724-061-A	DISP BOARD, COMPLETE			

*	4-982-811-01	HOLDER (FL)			
< CAPACITOR >					
C701	1-162-294-31	CERAMIC	0.001uF	10%	50V
C702	1-162-215-31	CERAMIC	47PF	5%	50V
C703	1-162-306-11	CERAMIC	0.01uF	20%	16V
C704	1-164-159-11	CERAMIC	0.1uF		50V
C705	1-124-584-00	ELECT	100uF	20%	10V
C706	1-162-282-31	CERAMIC	100PF	10%	50V

Ref. No.	Part No.	Description	Remark		
C707	1-162-282-31	CERAMIC	100PF	10%	50V
C708	1-162-282-31	CERAMIC	100PF	10%	50V
C709	1-162-288-31	CERAMIC	330PF	10%	50V
C710	1-124-584-00	ELECT	100uF	20%	10V
C711	1-164-159-11	CERAMIC	0.1uF		50V
C712	1-164-159-11	CERAMIC	0.1uF		50V
< LEAD >					
* CLP701	1-690-880-31	LEAD (WITH CONNECTOR)			
< DIODE >					
D701	8-719-046-39	DIODE SEL5821A-TP15 (GROUP1)			
D702	8-719-046-39	DIODE SEL5821A-TP15 (GROUP2)			
D703	8-719-046-39	DIODE SEL5821A-TP15 (GROUP3)			
D704	8-719-046-39	DIODE SEL5821A-TP15 (GROUP4)			
D705	8-719-046-39	DIODE SEL5821A-TP15 (GROUP5)			
D706	8-719-046-39	DIODE SEL5821A-TP15 (GROUP6)			
D707	8-719-046-39	DIODE SEL5821A-TP15 (GROUP7)			
D708	8-719-046-39	DIODE SEL5821A-TP15 (GROUP8)			
D709	8-719-046-44	DIODE SEL5221S (1/1)			
D710	8-719-046-39	DIODE SEL5821A-TP15 (HIT LIST)			
< FLUORESCENT INDICATOR >					
FL701	1-517-756-11	INDICATOR TUBE, FLUORESCENT			
< IC >					
IC601	8-749-014-66	IC NJL64H400A			
IC701	8-759-498-92	IC MSM9202-03GS-K			
IC702	8-759-183-47	IC M66310FP			
< TRANSISTOR >					
Q701	8-729-900-80	TRANSISTOR DTC114ES			
< RESISTOR >					
R701	1-249-441-11	CARBON	100K	5%	1/4W
R702	1-247-807-31	CARBON	100	5%	1/4W
R703	1-247-807-31	CARBON	100	5%	1/4W
R704	1-247-807-31	CARBON	100	5%	1/4W
R705	1-247-807-31	CARBON	100	5%	1/4W
R706	1-247-843-11	CARBON	3.3K	5%	1/4W
R707	1-247-807-31	CARBON	100	5%	1/4W
R708	1-247-807-31	CARBON	100	5%	1/4W
R709	1-247-807-31	CARBON	100	5%	1/4W
R711	1-249-411-11	CARBON	330	5%	1/4W
R712	1-249-411-11	CARBON	330	5%	1/4W
R713	1-249-413-11	CARBON	470	5%	1/4W F
R714	1-249-413-11	CARBON	470	5%	1/4W F
R722	1-249-415-11	CARBON	680	5%	1/4W F
R723	1-249-417-11	CARBON	1K	5%	1/4W F
R724	1-249-419-11	CARBON	1.5K	5%	1/4W F
R725	1-249-421-11	CARBON	2.2K	5%	1/4W F
R726	1-247-843-11	CARBON	3.3K	5%	1/4W
R727	1-249-427-11	CARBON	6.8K	5%	1/4W F
R728	1-249-431-11	CARBON	15K	5%	1/4W
R729	1-249-437-11	CARBON	47K	5%	1/4W
R732	1-249-415-11	CARBON	680	5%	1/4W F

DISP						DOOR MOTOR						DOOR SW						ILLUMINATION						JACK					
Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark																
R733	1-249-417-11	CARBON	1K	5%	1/4W	F			< DIODE >																				
R734	1-249-419-11	CARBON	1.5K	5%	1/4W	F																							
R735	1-249-421-11	CARBON	2.2K	5%	1/4W	F	D802	8-719-059-65	DIODE	HLMF-KL05																			
							D803	8-719-059-65	DIODE	HLMF-KL05																			
R736	1-247-843-11	CARBON	3.3K	5%	1/4W		D804	8-719-059-65	DIODE	HLMF-KL05																			
R737	1-249-427-11	CARBON	6.8K	5%	1/4W	F			< RESISTOR >																				
R738	1-249-431-11	CARBON	15K	5%	1/4W																								
		< SWITCH >					R805	1-249-407-11	CARBON	150	5%	1/4W	F																
							R806	1-249-401-11	CARBON	47	5%	1/4W	F																
S721	1-572-184-11	SWITCH, KEYBOARD (REPEAT)					*****																						
S722	1-572-184-11	SWITCH, KEYBOARD (PROGRAM)																											
S723	1-572-184-11	SWITCH, KEYBOARD (SHUFFLE)																											
S724	1-572-184-11	SWITCH, KEYBOARD (CONTINUE)					*	1-669-164-11	JACK BOARD																				
S725	1-572-184-11	SWITCH, KEYBOARD (GROUP4)							*****																				
									< CAPACITOR >																				
S726	1-572-184-11	SWITCH, KEYBOARD (GROUP3)					C351	1-162-290-31	CERAMIC	470PF	10%	50V																	
S727	1-572-184-11	SWITCH, KEYBOARD (GROUP2)					C352	1-124-282-00	ELECT	22uF	20%	25V																	
S728	1-572-184-11	SWITCH, KEYBOARD (GROUP1)					C451	1-162-290-31	CERAMIC	470PF	10%	50V																	
S729	1-570-157-51	SWITCH, SLIDE (TIMER)					C452	1-124-282-00	ELECT	22uF	20%	25V																	
S731	1-572-184-11	SWITCH, KEYBOARD (I/⏻)					C901	1-161-494-00	CERAMIC	0.022uF		25V																	
							C904	1-164-159-11	CERAMIC	0.1uF		50V																	
S732	1-572-184-11	SWITCH, KEYBOARD (TIME/TEXT)					C907	1-164-159-11	CERAMIC	0.1uF		50V																	
S733	1-572-184-11	SWITCH, KEYBOARD (GROUP FILE)					C911	1-161-494-00	CERAMIC	0.022uF		25V																	
S734	1-572-184-11	SWITCH, KEYBOARD (GROUP 8)					C912	1-126-052-11	ELECT	100uF	20%	10V																	
S735	1-572-184-11	SWITCH, KEYBOARD (GROUP 7)							< CONNECTOR >																				
S736	1-572-184-11	SWITCH, KEYBOARD (GROUP 6)					CN902	1-569-497-11	SOCKET, CONNECTOR 11P																				
							* CN903	1-569-496-11	SOCKET, CONNECTOR 10P																				
							* CN904	1-568-951-11	PIN, CONNECTOR 2P																				
							CN906	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P																				
*****									< DIODE >																				
*	1-669-167-11	DOOR MOTOR BOARD																											

		< CONNECTOR >							< IC >																				
* CN812	1-568-951-11	PIN, CONNECTOR 2P					D901	8-719-911-19	DIODE 1SS119-25																				
		< MOTOR >							< JACK >																				
M810	1-541-632-11	MOTOR, DC (DOOR)					IC901	8-749-921-12	IC GP1F32T (DIGITAL OUT OPTICAL)																				
*****									< TRANSISTOR >																				
*	1-669-168-11	DOOR SW BOARD					* J901	1-764-188-11	JACK (SMALL TYPE) (DIA. 3.5)																				
		*****							(S-LINK CONTROL A1)																				
		< RESISTOR >					* J902	1-764-188-11	JACK (SMALL TYPE) (DIA. 3.5)																				
									(S-LINK CONTROL A1)																				
R807	1-249-429-11	CARBON	10K	5%	1/4W		J903	1-770-720-11	JACK, PIN 4P (LINE OUT, 2ND CD IN)																				
		< SWITCH >							< COIL >																				
							L902	1-410-503-11	INDUCTOR 3.3uH																				
S810	1-571-300-21	SWITCH, ROTARY (DOOR DET)							< TRANSISTOR >																				
*****							Q901	8-729-620-05	TRANSISTOR 2SC2603-EF																				
*	1-669-166-11	ILLUMINATION BOARD							< RESISTOR >																				

		< CONNECTOR >					R351	1-215-405-00	METAL	220	1%	1/4W																	
							R352	1-215-485-00	METAL	470K	1%	1/4W																	
CN813	1-506-481-11	PIN, CONNECTOR 2P					R451	1-215-405-00	METAL	220	1%	1/4W																	
							R452	1-215-485-00	METAL	470K	1%	1/4W																	
							R901	1-249-393-11	CARBON	10	5%	1/4W	F																

Ref. No.	Part No.	Ref. No.	Description	Part No.	Description	Remark
R902	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R903	1-249-429-11	CARBON	10K	5%	1/4W	
R921	1-249-429-11	CARBON	10K	5%	1/4W	
< SWITCH >						
S901	1-762-910-11	SWITCH, SLIDE (COMMAND MODE CD)				

*	1-669-161-11	JOG BOARD *****				
< CONNECTOR >						
CN601	1-568-438-11	SOCKET, CONNECTOR 17P				
< DIODE >						
D601	8-719-046-40	DIODE	SEL5521C-TH8F (▷)			
D602	8-719-046-38	DIODE	SEL5821A-TH8F (■)			
D603	8-719-057-97	DIODE	SEL5923A-TP15 (MEGA CONTROL)			
D604	8-719-057-97	DIODE	SEL5923A-TP15 (MEGA CONTROL)			
< RESISTOR >						
R601	1-249-407-11	CARBON	150	5%	1/4W	F
R602	1-249-409-11	CARBON	220	5%	1/4W	F
R603	1-247-807-31	CARBON	100	5%	1/4W	
R612	1-249-415-11	CARBON	680	5%	1/4W	F
R613	1-249-417-11	CARBON	1K	5%	1/4W	F
R614	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R615	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R616	1-247-843-11	CARBON	3.3K	5%	1/4W	
R617	1-249-427-11	CARBON	6.8K	5%	1/4W	F
R618	1-249-431-11	CARBON	15K	5%	1/4W	
R619	1-249-437-11	CARBON	47K	5%	1/4W	
R622	1-249-415-11	CARBON	680	5%	1/4W	F
R623	1-249-417-11	CARBON	1K	5%	1/4W	F
R624	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R625	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R626	1-247-843-11	CARBON	3.3K	5%	1/4W	
R627	1-249-427-11	CARBON	6.8K	5%	1/4W	F
R628	1-249-431-11	CARBON	15K	5%	1/4W	
< SWITCH >						
RE601	1-475-543-11	ENCODER, ROTARY (DISC/CHARACTER)				
< SWITCH >						
S611	1-572-184-11	SWITCH, KEYBOARD (■)				
S612	1-572-184-11	SWITCH, KEYBOARD (■)				
S613	1-572-184-11	SWITCH, KEYBOARD (▷)				
S614	1-572-184-11	SWITCH, KEYBOARD (CLEAR)				
S615	1-572-184-11	SWITCH, KEYBOARD (CHECK)				
S616	1-572-184-11	SWITCH, KEYBOARD (▷⇨ AMS)				
S617	1-572-184-11	SWITCH, KEYBOARD (⇨⇨ AMS)				
S621	1-572-184-11	SWITCH, KEYBOARD (OPEN/CLOSE ⇨)				
S622	1-572-184-11	SWITCH, KEYBOARD (INPUT)				
S623	1-572-184-11	SWITCH, KEYBOARD (MEMO SEARCH)				
S624	1-572-184-11	SWITCH, KEYBOARD (X-FADE)				
S625	1-572-184-11	SWITCH, KEYBOARD (NO DELAY)				

– 64 –

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C405	1-126-022-11	ELECT	47uF	20%	10V	D509	8-719-911-19	DIODE 1SS119-25			
C501	1-128-489-11	ELECT	3300uF	20%	16V	D521	8-719-911-19	DIODE 1SS119-25			
C502	1-124-360-00	ELECT	1000uF	20%	16V			< IC >			
C503	1-124-122-11	ELECT	100uF	20%	50V	IC302	8-759-145-58	IC UPC4558C			
C504	1-126-021-11	ELECT	33uF	20%	35V	IC401	8-759-145-58	IC UPC4558C			
C505	1-126-052-11	ELECT	100uF	20%	16V	IC402	8-759-145-58	IC UPC4558C			
C506	1-126-101-11	ELECT	100uF	20%	16V	IC501	8-752-897-22	IC CXP84340-094Q			
C507	1-126-044-11	ELECT	1uF	20%	50V	IC502	8-759-463-99	IC MSM5256DFP-70XL			
C508	1-126-101-11	ELECT	100uF	20%	16V	IC503	8-759-821-32	IC CXA1291P			
C509	1-124-997-11	ELECT	470uF	20%	10V	IC504	8-759-094-53	IC TA7805S (LBSONY)			
C510	1-126-163-11	ELECT	4.7uF	20%	50V	IC505	8-759-256-72	IC PST994D			
C511	1-126-163-11	ELECT	4.7uF	20%	50V	IC506	8-759-330-29	IC LA5616			
C512	1-161-494-00	CERAMIC	0.022uF		25V			< COIL >			
C513	1-126-052-11	ELECT	100uF	20%	16V	L501	1-412-473-21	INDUCTOR 0uH			
C514	1-126-023-11	ELECT	100uF	20%	25V	L502	1-412-473-21	INDUCTOR 0uH			
C516	1-164-159-11	CERAMIC	0.1uF		50V			< TRANSISTOR >			
C518	1-164-159-11	CERAMIC	0.1uF		50V						
C519	1-164-159-11	CERAMIC	0.1uF		50V						
C521	1-164-159-11	CERAMIC	0.1uF		50V	Q321	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C522	1-110-489-11	CAPACITOR	1F		5.5V	Q322	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C531	1-161-494-00	CERAMIC	0.022uF		25V	Q323	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C532	1-126-052-11	ELECT	100uF	20%	10V	Q324	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C533	1-161-494-00	CERAMIC	0.022uF		25V	Q325	8-729-900-65	TRANSISTOR DTA144ES			
C551	1-136-165-00	FILM	0.1uF	5%	50V	Q326	8-729-900-65	TRANSISTOR DTA144ES			
C552	1-164-159-11	CERAMIC	0.1uF		50V	Q327	8-729-900-65	TRANSISTOR DTA144ES			
C561	1-136-165-00	FILM	0.1uF	5%	50V	Q328	8-729-900-65	TRANSISTOR DTA144ES			
C562	1-164-159-11	CERAMIC	0.1uF		50V	Q329	8-729-900-65	TRANSISTOR DTA144ES			
C571	1-136-165-00	FILM	0.1uF	5%	50V	Q421	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C572	1-164-159-11	CERAMIC	0.1uF		50V	Q422	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C610	1-161-494-00	CERAMIC	0.022uF		25V	Q423	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C620	1-161-494-00	CERAMIC	0.022uF		25V	Q424	8-729-141-26	TRANSISTOR 2SC3622A-LK			
C720	1-161-494-00	CERAMIC	0.022uF		25V	Q425	8-729-900-65	TRANSISTOR DTA144ES			
C730	1-161-494-00	CERAMIC	0.022uF		25V	Q426	8-729-900-65	TRANSISTOR DTA144ES			
		< CONNECTOR >				Q501	8-729-140-97	TRANSISTOR 2SB734-34			
CN501	1-568-440-11	SOCKET, CONNECTOR 17P				Q503	8-729-119-76	TRANSISTOR 2SA1175-HFE			
CN502	1-568-742-11	SOCKET, CONNECTOR 23P				Q511	8-729-900-80	TRANSISTOR DTC114ES			
* CN503	1-568-951-11	PIN, CONNECTOR 2P				Q512	8-729-900-80	TRANSISTOR DTC114ES			
CN504	1-506-469-11	PIN, CONNECTOR 4P				Q521	8-729-030-08	TRANSISTOR DTC144VSA			
CN505	1-506-468-11	PIN, CONNECTOR 3P						< RESISTOR >			
* CN506	1-568-955-11	PIN, CONNECTOR 6P				R301	1-215-453-00	METAL 22K	1%	1/4W	
* CN507	1-568-951-11	PIN, CONNECTOR 2P				R302	1-215-425-00	METAL 1.5K	1%	1/4W	
* CN508	1-569-505-11	PIN, CONNECTOR 10P				R303	1-215-425-00	METAL 1.5K	1%	1/4W	
* CN509	1-569-506-11	PIN, CONNECTOR 11P				R304	1-215-445-00	METAL 10K	1%	1/4W	
		< DIODE >				R305	1-215-443-00	METAL 8.2K	1%	1/4W	
D325	8-719-911-19	DIODE 1SS119-25				R306	1-215-485-00	METAL 470K	1%	1/4W	
D327	8-719-911-19	DIODE 1SS119-25				R307	1-215-427-00	METAL 1.8K	1%	1/4W	
D329	8-719-911-19	DIODE 1SS119-25				R308	1-215-443-00	METAL 8.2K	1%	1/4W	
D425	8-719-911-19	DIODE 1SS119-25				R309	1-215-416-00	METAL 620	1%	1/4W	
D501	8-719-024-99	DIODE 11ES2-NTA2B				R310	1-215-445-00	METAL 10K	1%	1/4W	
D502	8-719-024-99	DIODE 11ES2-NTA2B				R311	1-215-445-00	METAL 10K	1%	1/4W	
D503	8-719-024-99	DIODE 11ES2-NTA2B				R312	1-215-445-00	METAL 10K	1%	1/4W	
D504	8-719-024-99	DIODE 11ES2-NTA2B				R313	1-215-477-00	METAL 220K	1%	1/4W	
D505	8-719-024-99	DIODE 11ES2-NTA2B				R314	1-215-405-00	METAL 220	1%	1/4W	
D506	8-719-110-72	DIODE RD30ESB2				R315	1-215-405-00	METAL 220	1%	1/4W	
D507	8-719-109-93	DIODE RD6.2ESB2				R316	1-249-393-11	CARBON 10	5%	1/4W	F
D508	8-719-109-85	DIODE RD5.1ESB2				R317	1-215-443-00	METAL 8.2K	1%	1/4W	

MAIN

T.MOTOR

T.SENS

Ref. No.	Part No.	Description			Remark
R321	1-249-421-11	CARBON	2.2K	5%	1/4W F
R322	1-249-421-11	CARBON	2.2K	5%	1/4W F
R323	1-249-421-11	CARBON	2.2K	5%	1/4W F
R324	1-249-421-11	CARBON	2.2K	5%	1/4W F
R325	1-249-441-11	CARBON	100K	5%	1/4W
R326	1-249-441-11	CARBON	100K	5%	1/4W
R327	1-249-441-11	CARBON	100K	5%	1/4W
R328	1-249-441-11	CARBON	100K	5%	1/4W
R329	1-249-441-11	CARBON	100K	5%	1/4W
R401	1-215-453-00	METAL	22K	1%	1/4W
R402	1-215-425-00	METAL	1.5K	1%	1/4W
R403	1-215-425-00	METAL	1.5K	1%	1/4W
R404	1-215-445-00	METAL	10K	1%	1/4W
R405	1-215-443-00	METAL	8.2K	1%	1/4W
R406	1-215-485-00	METAL	470K	1%	1/4W
R407	1-215-427-00	METAL	1.8K	1%	1/4W
R408	1-215-443-00	METAL	8.2K	1%	1/4W
R409	1-215-416-00	METAL	620	1%	1/4W
R410	1-215-445-00	METAL	10K	1%	1/4W
R411	1-215-445-00	METAL	10K	1%	1/4W
R412	1-215-445-00	METAL	10K	1%	1/4W
R413	1-215-477-00	METAL	220K	1%	1/4W
R414	1-215-405-00	METAL	220	1%	1/4W
R415	1-215-405-00	METAL	220	1%	1/4W
R416	1-249-393-11	CARBON	10	5%	1/4W F
R417	1-215-443-00	METAL	8.2K	1%	1/4W
R421	1-249-421-11	CARBON	2.2K	5%	1/4W F
R422	1-249-421-11	CARBON	2.2K	5%	1/4W F
R423	1-249-421-11	CARBON	2.2K	5%	1/4W F
R424	1-249-421-11	CARBON	2.2K	5%	1/4W F
R425	1-249-441-11	CARBON	100K	5%	1/4W
R426	1-249-441-11	CARBON	100K	5%	1/4W
R501	1-249-435-11	CARBON	33K	5%	1/4W
R502	1-249-425-11	CARBON	4.7K	5%	1/4W F
R505	1-249-413-11	CARBON	470	5%	1/4W F
R506	1-249-429-11	CARBON	10K	5%	1/4W
R507	1-249-425-11	CARBON	4.7K	5%	1/4W F
R508	1-249-413-11	CARBON	470	5%	1/4W F
R511	1-249-425-11	CARBON	4.7K	5%	1/4W F
R512	1-249-425-11	CARBON	4.7K	5%	1/4W F
R521	1-249-429-11	CARBON	10K	5%	1/4W
R522	1-249-403-11	CARBON	68	5%	1/4W F
R523	1-249-403-11	CARBON	68	5%	1/4W F
R524	1-249-429-11	CARBON	10K	5%	1/4W
R531	1-249-429-11	CARBON	10K	5%	1/4W
R532	1-249-429-11	CARBON	10K	5%	1/4W
R533	1-249-429-11	CARBON	10K	5%	1/4W
R534	1-249-421-11	CARBON	2.2K	5%	1/4W F
R535	1-247-843-11	CARBON	3.3K	5%	1/4W
R536	1-249-425-11	CARBON	4.7K	5%	1/4W F
R537	1-249-429-11	CARBON	10K	5%	1/4W
R538	1-249-429-11	CARBON	10K	5%	1/4W
R539	1-249-429-11	CARBON	10K	5%	1/4W
R540	1-249-429-11	CARBON	10K	5%	1/4W
R541	1-249-429-11	CARBON	10K	5%	1/4W
R542	1-249-429-11	CARBON	10K	5%	1/4W
R543	1-249-429-11	CARBON	10K	5%	1/4W

Ref. No.	Part No.	Description			Remark
R544	1-249-429-11	CARBON	10K	5%	1/4W
R551	1-247-887-00	CARBON	220K	5%	1/4W
R552	1-247-887-00	CARBON	220K	5%	1/4W
R553	1-247-860-11	CARBON	16K	5%	1/4W
R554	1-249-431-11	CARBON	15K	5%	1/4W
R555	1-249-382-11	CARBON	1.2	5%	1/6W F
R556	1-249-382-11	CARBON	1.2	5%	1/6W F
R557	1-247-883-00	CARBON	150K	5%	1/4W
R558	1-249-393-11	CARBON	10	5%	1/4W F
R561	1-249-441-11	CARBON	100K	5%	1/4W
R562	1-249-441-11	CARBON	100K	5%	1/4W
R563	1-247-860-11	CARBON	16K	5%	1/4W
R564	1-249-431-11	CARBON	15K	5%	1/4W
R565	1-249-382-11	CARBON	1.2	5%	1/6W F
R566	1-249-382-11	CARBON	1.2	5%	1/6W F
R567	1-247-883-00	CARBON	150K	5%	1/4W
R568	1-249-393-11	CARBON	10	5%	1/4W F
R571	1-247-885-00	CARBON	180K	5%	1/4W
R572	1-247-885-00	CARBON	180K	5%	1/4W
R573	1-247-860-11	CARBON	16K	5%	1/4W
R574	1-249-431-11	CARBON	15K	5%	1/4W
R575	1-249-382-11	CARBON	1.2	5%	1/6W F
R576	1-249-382-11	CARBON	1.2	5%	1/6W F
R577	1-247-883-00	CARBON	150K	5%	1/4W
R578	1-249-393-11	CARBON	10	5%	1/4W F
R610	1-249-427-11	CARBON	6.8K	5%	1/4W F
R620	1-249-427-11	CARBON	6.8K	5%	1/4W F
R720	1-249-427-11	CARBON	6.8K	5%	1/4W F
R730	1-249-427-11	CARBON	6.8K	5%	1/4W F
< VARIABLE RESISTOR >					
RV501	1-241-787-11	RES, ADJ, CARBON 47K			
< VIBRATOR >					
X501	1-579-175-11	VIBRATOR, CERAMIC (10MHz)			

*	1-661-466-11	T.MOTOR BOARD			

< MOTOR >					
M801	A-4604-847-A	MOTOR ASSY, LOADING (TABLE)			

*	1-661-470-11	T.SENS BOARD			

< CONNECTOR >					
CN802	1-506-481-11	PIN, CONNECTOR 2P			
CN803	1-506-481-11	PIN, CONNECTOR 2P			
< IC >					
IC801	8-749-924-18	IC PHOTO INTERRUPTER RPI-1391			(TABLE SENSOR)
IC802	8-749-924-18	IC PHOTO INTERRUPTER RPI-1391			(TABLE SENSOR)

Ref. No.	Part No.	Description	Remark
IC803	8-749-924-18	IC PHOTO INTERRUPTER RPI-1391 (TABLE SENSOR)	

< RESISTOR >

R801	1-249-416-11	CARBON	820	5%	1/4W	F
R802	1-249-416-11	CARBON	820	5%	1/4W	F
R803	1-249-416-11	CARBON	820	5%	1/4W	F
R804	1-249-415-11	CARBON	680	5%	1/4W	F

MISCELLANEOUS

3	1-773-183-11	WIRE (FLAT TYPE) (23 CORE)	
△ 10	1-575-042-21	CORD, POWER	
103	1-783-365-11	WIRE (FLAT TYPE) (17 CORE)	
304	1-769-069-11	WIRE (FLAT TYPE)(16 CORE)	
△ 306	8-848-376-01	OPTICAL PICK-UP BLOCK KSS-213B/S-N	

FL701	1-517-756-11	INDICATOR TUBE, FLUORESCENT	
M101	X-2626-234-1	T.T CHAISSIS ASSY (MG)(K)(SPINDLE)	
M102	X-2625-769-1	MOTOR GEAR ASSY (MB)(RP)(SLED)	
M801	A-4604-847-A	MOTOR ASSY (TABLE)	
M802	A-4604-847-A	MOTOR ASSY (LOADING)	

M810	X-4950-062-1	MOTOR ASSY, DOOR	
△ T901	1-431-759-11	TRANSFORMER, POWER	

ACCESSORIES & PACKING MATERIALS

1-475-655-11	REMOTE COMMANDER (RM-DX240)	
1-558-271-11	CORD, CONNECTION (AUDIO 108cm)	
1-777-172-11	CORD, CONNECTION (CONTROL-A1)(CND)	
3-810-765-11	MANUAL,COMMONNESS INSTRUCTION (FOR CONTROL-A1)(ENGLISH)(US)	
3-810-765-21	MANUAL,COMMONNESS INSTRUCTION (FOR CONTROL-A1) (ENGLISH,FRENCH,GERMAN,SPANISH,DUTCH, SWEDISH,ITALIAN,PORTUGUESE,CHINESE)(CND)	
3-862-563-11	MANUAL, INSTRUCTION (ENGLISH)(US)	
3-862-563-21	MANUAL, INSTRUCTION (ENGLISH,FRENCH,SPANISH)(CND)	
4-984-086-01	BOOKLET (100)	
4-981-643-01	COVER, BATTERY (FOR RM-DX240)	

Ref. No.	Part No.	Description	Remark
		***** HARDWARE LIST *****	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#2	7-685-871-01	SCREW +BVTT 3X6 (S)	
#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
#4	7-685-134-19	SCREW +PTPWH 2.6X8 (TYPE2)	
#6	7-682-947-01	SCREW +PSW 3X6	
#7	7-685-872-09	SCREW +BVTT 3X8 (S)	
#8	7-624-111-04	STOP RING 7.0, TYPE -E	
#9	7-624-106-04	STOP RING 3.0, TYPE -E	
#10	7-621-772-20	SCREW +B 2X5	
#11	7-682-552-09	SCREW +B 3X16	
#12	7-621-775-00	SCREW +B 2.6X3	
#13	7-621-772-30	SCREW +B 2X6	
#15	7-624-109-04	STOP RING 5.0, TYPE -E	
#16	7-621-775-20	SCREW +B 2.6X5	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

