

STR-DB870/DB1070

SERVICE MANUAL

Ver. 1.6 2005.09

US Model
E Model
Chinese Model
STR-DB1070

Canadian Model
AEP Model
UK Model
STR-DB870/DB1070



Photo: STR-DB870

This receiver incorporates Dolby* Digital and Pro Logic Surround and the DTS** Digital Surround System.

* Manufactured under license from Dolby Laboratories.

"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

** "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8 ohm loads, both channels driven, from 20 – 20,000 Hz; rated 100 watts per channel minimum RMS power, with no more than 0.09 % total harmonic distortion from 250 milliwatts to rated output (Models of area code U only).

Amplifier section

POWER OUTPUT

Models of area code U, CA

Rated Power Output at Stereo Mode

(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
100 W + 100 W
(4 ohms 20 Hz – 20 kHz, THD 0.09 %)
90 W + 90 W

Reference Power Output

(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
STR-DB1070: FRONT¹⁾: 100 W + 100 W
CENTER¹⁾: 100 W
SURR¹⁾: 100 W + 100 W
SURR BACK¹⁾: 100 W

STR-DB870: FRONT¹⁾: 100 W + 100 W
CENTER¹⁾: 100 W
SURR¹⁾: 100 W + 100 W
(4 ohms 20 Hz – 20 kHz, THD 0.09 %)

STR-DB1070: FRONT¹⁾: 90 W + 90 W
CENTER¹⁾: 90 W
SURR¹⁾: 90 W + 90 W
SURR BACK¹⁾: 90 W
STR-DB870: FRONT¹⁾: 90 W + 90 W
CENTER¹⁾: 90 W
SURR¹⁾: 90 W + 90 W

Models of other area code

Rated Power Output at Stereo Mode

(8 ohms 1 kHz, THD 0.7 %)
STR-DB1070: 100 W + 100 W²⁾
90 W + 90 W²⁾
STR-DB870: 100 W + 100 W²⁾
(4 ohms 1 kHz, THD 0.7 %)
STR-DB1070: 90 W + 90 W²⁾
80 W + 80 W²⁾
STR-DB870: 100 W + 100 W²⁾

Reference Power Output²⁾

(8 ohms 1 kHz, THD 0.7 %)
STR-DB1070: FRONT¹⁾: 100 W + 100 W
CENTER¹⁾: 100 W
SURR¹⁾: 100 W + 100 W
SURR BACK¹⁾: 100 W
STR-DB870: FRONT¹⁾: 100 W + 100 W
CENTER¹⁾: 100 W
SURR¹⁾: 100 W + 100 W

(4 ohms 1 kHz, THD 0.7 %)
STR-DB1070: FRONT¹⁾: 90 W + 90 W
CENTER¹⁾: 90 W
SURR¹⁾: 90 W + 90 W
SURR BACK¹⁾: 90 W

STR-DB870: FRONT¹⁾: 100 W + 100 W
CENTER¹⁾: 100 W
SURR¹⁾: 100 W + 100 W

(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
STR-DB1070: FRONT¹⁾: 90 W + 90 W
CENTER¹⁾: 90 W
SURR¹⁾: 90 W + 90 W
SURR BACK¹⁾: 90 W

STR-DB870: FRONT¹⁾: 90 W + 90 W
CENTER¹⁾: 90 W
SURR¹⁾: 90 W + 90 W

(4 ohms 20 Hz – 20 kHz, THD 0.09 %)

STR-DB1070: FRONT¹⁾: 80 W + 80 W
CENTER¹⁾: 80 W
SURR¹⁾: 80 W + 80 W
SURR BACK¹⁾: 80 W
STR-DB870: FRONT¹⁾: 90 W + 90 W
CENTER¹⁾: 90 W
SURR¹⁾: 90 W + 90 W

1) Depending on the sound field settings and the source, there may be no sound output.

2) Measured under the following conditions:

Area code	Power requirements
E	240 V AC, 50 Hz
CN, SP, CEL, KR	230 V AC, 50 Hz
TW	110 V AC, 60 Hz

3) Measured under the following conditions:

Area code	Power requirements
CN	220 V AC, 50 Hz

Frequency response

PHONO	RIAA equalization curve ±0.5 dB
CD/SACD, TAPE, MD/DAT, MD/TAPE, TV/SAT, DVD/LD, VIDEO 1, 2, 3	10 Hz – 100 kHz ±3 dB (with sound field, equalizer, and bass boost bypassed)

– Continued on next page –

FM STEREO/FM-AM RECEIVER

9-873-842-17

2005I05-1

© 2005.09

Sony Corporation

Audio Group

Published by Sony Engineering Corporation

SONY®

STR-DB870/DB1070

Inputs (Analog)	
PHONO	Sensitivity: 2.5 mV Impedance: 50 kilohms S/N ⁴⁾ : 86 dB (A, 2.5 mV ⁵⁾)
MULTI CH IN (1, 2), CD/SACD, TAPE, MD/DAT, MD/TAPE, DVD/LD, TV/SAT, VIDEO 1, 2, 3	Sensitivity: 150 mV Impedance: 50 kilohms S/N ⁴⁾ : 96 dB (A, 150 mV ⁵⁾)

- 4) INPUT SHORT.
5) Weighted network, input level.

Inputs (Digital)	
DVD/LD (Coaxial)	Sensitivity: – Impedance: 75 ohms S/N: 100 dB (A, 20 kHz LPF)
DVD/LD, TV/SAT, MD/DAT, MD/TAPE (Optical)	Sensitivity: – Impedance: – S/N: 100 dB (A, 20 kHz LPF)

Outputs	
TAPE, MD/DAT, MD/ TAPE (REC OUT), VIDEO 1, 2 (AUDIO OUT)	Voltage: 150 mV Impedance: 1 kilohms
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK, SUB WOOFER	Voltage: 2 V Impedance: 1 kilohms

EQ	
BASS:	99 Hz~1.0 kHz (21 steps)
MID:	198 Hz~10 kHz (37 steps)
TREBLE:	1.0 kHz~10 kHz (23 steps)
Gain levels:	±10 dB, 1 dB step

FM tuner section	
Tuning range	87.5 - 108.0 MHz
Antenna terminals	75 ohms, unbalanced
Sensitivity	
Mono:	18.3 dBf, 2.2 μV/75 ohms
Stereo:	38.3 dBf, 22.5 μV/75 ohms
Usable sensitivity	11.2 dBf, 1 μV/75 ohms
S/N	
Mono:	76 dB
Stereo:	70 dB
Harmonic distortion at 1 kHz	
Mono:	0.3%
Stereo:	0.5%

Separation	45 dB at 1 kHz
Frequency response	30 Hz – 15 kHz, +0.5/–2 dB
Selectivity	60 dB at 400 kHz

AM tuner section
Tuning range
Models of area code U, CA
With 10-kHz tuning scale: 530 – 1.710 kHz⁵⁾
With 9-kHz tuning scale: 531 – 1.710 kHz⁵⁾
Models of area code E
With 10-kHz tuning scale: 530 – 1.610 kHz⁵⁾
With 9-kHz tuning scale: 531 – 1.602 kHz⁵⁾
Models of area code CN, SP, CEL, TW, KR
With 9-kHz tuning scale: 531 – 1.602 kHz

Antenna	Loop antenna
Usable sensitivity	50 dB/m (at 1,000 kHz or 999 kHz)
S/N	54 dB (at 50 mV/m)
Harmonic distortion	0.5 % (50 mV/m, 400 kHz)

Selectivity	
At 9 kHz:	35 dB
At 10 kHz:	40 dB

- 6) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. Hold down TUNING – and press I/⏏. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

Video section	
Inputs	
Video:	1 Vp-p, 75 ohms
S-video:	Y: 1 Vp-p, 75 ohms C: 0.286 Vp-p, 75 ohms
Outputs	
Video:	1 Vp-p, 75 ohms
S-video:	Y: 1 Vp-p, 75 ohms C: 0.286 Vp-p, 75 ohms

General	
Power requirements	
Area code	Power requirements
U, CA	120 V AC, 60 Hz
CEL	230 V AC, 50/60 Hz
CN, SP	220 – 230 V AC, 50/60 Hz
E	120/220/240 V AC, 50/60 Hz
TW	110 V AC, 60 Hz
KR	220 V – 230 V AC, 60 Hz

Power consumption	
Area code	Power consumption
U	STR-DB1070: 300 W
CA	STR-DB1070: 420 VA STR-DB870: 390 VA
CEL	STR-DB1070: 240 W STR-DB870: 230 W
CN, SP, E, TW, KR	STR-DB1070: 240 W

AC outlets	
Area code	AC outlets
U, CA	2 switched, 120 W/1A MAX
SP, CEL, KR	1 switched, 100 W MAX
CN, E, TW	2 switched, 100 W MAX

Dimensions	430 × 161 × 401 mm including projecting parts and controls
Mass (Approx.)	16.0 kg

- Supplied accessories**
FM wire antenna (1)
AM loop antenna (1)
• Models of area code U, CA
Audio/video/control S connecting cord (1)
Control S connecting cord (1)
• STR-DB1070 only
• Models of area code U, CA
Remote commander RM-PP505L (1)
R6 (size-AA) batteries (2)
• Models of other area codes
Remote commander RM-LP205 (1)
R6 (size-AA) batteries (3)
• STR-DB870 only
• Models of area code CA
Remote commander RM-PP505 (1)
R6 (size-AA) batteries (2)
• Models of area code CEL
Remote commander RM-U305 (1)
R6 (size-AA) batteries (2)

Design and specifications are subject to change without notice.

- Abbreviation
CA : Canadian model
CEL : AEP and UK models
CN : Chinese model
KR : Korean model
- SP : Malaysia and Singapore models
TW : Taiwan model
U : US model

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:


Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage.

Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

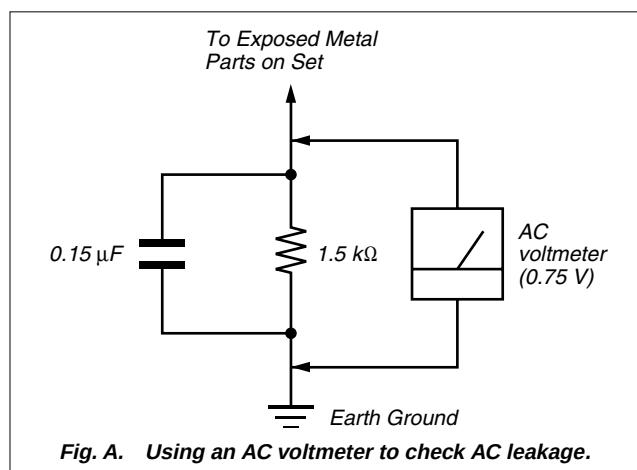

与安全有关的零部件须知

在原理图上用阴影及 $\triangle$ 标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。

在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


TABLE OF CONTENTS

1. SERVICING NOTES	5	7. EXPLODED VIEWS	
2. GENERAL	6	7-1. Case Section	63
3. DISASSEMBLY		7-2. Front Panel Section-1	64
3-1. Disassembly Flow	8	7-3. Front Panel Section-2	65
3-2. Case	9	7-4. Chassis Section-1	66
3-3. S-VIDEO board, VIDEO Board, Tuner	9	7-5. Chassis Section-2	67
3-4. VIDEO AU Board	10	8. ELECTRICAL PARTS LIST	68
3-5. DIGITAL Board	10		
3-6. MAIN Board	11		
4. TEST MODE	12		
5. ELECTRICAL ADJUSTMENT	13		
6. DIAGRAMS			
6-1. Block Diagram			
– TUNER/VIDEO INPUT Section –	15		
6-2. Block Diagram – AUDIO DSP Section –	16		
6-3. Block Diagram – AUDIO CONTROL Section –	17		
6-4. Block Diagram – POWER AMP Section –	18		
6-5. Block Diagram			
– DISPLAY/KEY CONTROL Section –	19		
6-6. Block Diagram – POWER SUPPLY Section –	20		
6-7. Note for Printed Wiring Boards			
and Schematic Diagrams	21		
6-8. Schematic Diagram – DIGITAL Board (1/5) –	23		
6-9. Schematic Diagram – DIGITAL Board (2/5) –	24		
6-10. Schematic Diagram – DIGITAL Board (3/5) –	25		
6-11. Schematic Diagram – DIGITAL Board (4/5) –	26		
6-12. Schematic Diagram – DIGITAL Board (5/5) –	27		
6-13. Printed Wiring Board			
– DIGITAL Board (Component Side) –	28		
6-14. Printed Wiring Board			
– DIGITAL Board (Conductor Side) –	29		
6-15. Printed Wiring Board – VIDEO Board –	30		
6-16. Schematic Diagram – VIDEO Board –	31		
6-17. Printed Wiring Boards			
– S-VIDEO/VIDEO AU Boards –	32		
6-18. Schematic Diagram			
– S-VIDEO/VIDEO AU Boards –	33		
6-19. Printed Wiring Board – MAIN Board –	34		
6-20. Schematic Diagram – MAIN Board (1/3) –	35		
6-21. Schematic Diagram – MAIN Board (2/3) –	36		
6-22. Schematic Diagram – MAIN Board (3/3) –	37		
6-23. Printed Wiring Board – BIAS Board –	38		
6-24. Schematic Diagram – BIAS Board –	39		
6-25. Printed Wiring Boards – DISP/SW Boards –	40		
6-26. Schematic Diagram – DISP/SW Boards –	41		
6-27. Printed Wiring Boards			
– H.P/MUTING/POWER/SP/VIDEO 3 Boards –	42		
6-28. Schematic Diagram			
– H.P/MUTING/POWER/SP/VIDEO 3 Boards –	43		
6-29. Printed Wiring Boards			
– POWER SUPPLY Section –	44		
6-30. Schematic Diagram – POWER SUPPLY Section –	45		
6-31. IC Pin Function Description	51		

SECTION 1 SERVICING NOTES

• MODEL IDENTIFICATION


– Rear Panel –

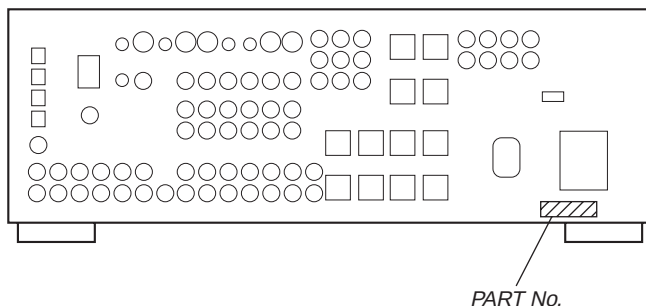

Model	PART No.
DB1070 : US model	4-233-610-0□
DB1070 : Canadian model	4-233-610-1□
DB1070 : Malaysia and Singapore models	4-233-610-2□
DB1070 : Chinese model	4-233-610-3□
DB1070 : AEP and UK models	4-233-610-5□
DB1070 : 120 V AC area and 240 V AC area in E models	4-233-610-7□
DB1070 : Taiwan model	4-233-610-8□
DB1070 : Korean model	4-233-610-9□
DB870 : Canadian model	4-233-630-1□
DB870 : AEP and UK models	4-233-630-2□

SERVICE POSITION

In checking the DIGITAL board, prepare jig (extension cable J-2501-208-A: 200 mm 21 core).

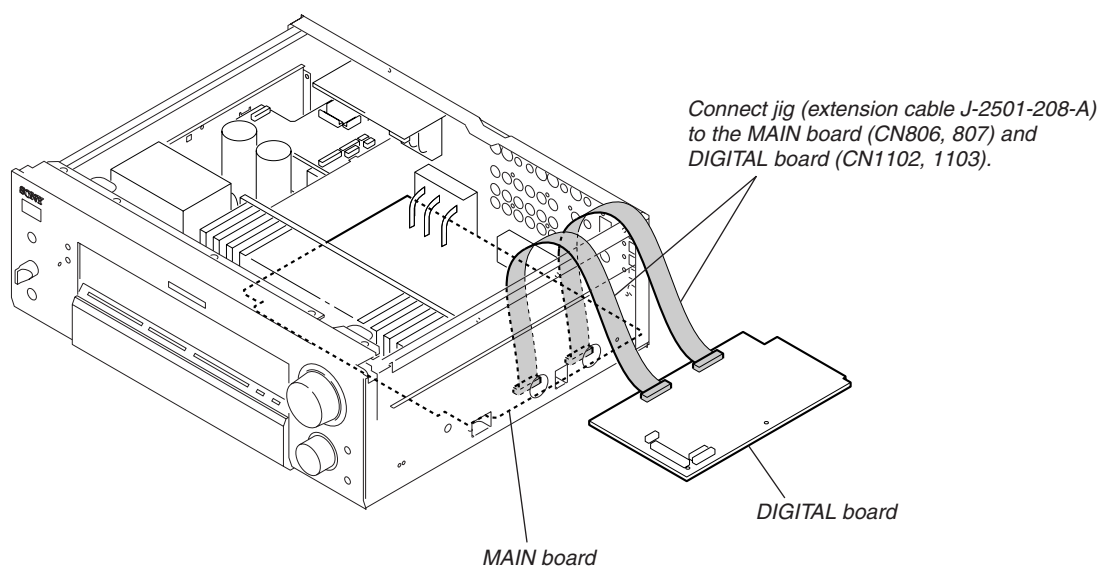


SECTION 2 GENERAL

This section is extracted from instruction manual.

LOCATION OF CONTROLS

– Front Panel –

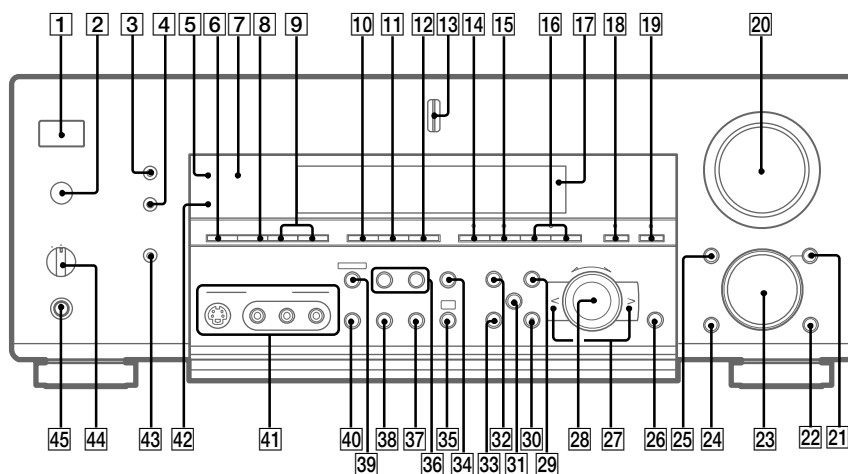


2CH **15** (30)
 2ND ROOM (STR-DB1070 only) **35** (27)
 6.1CH DECODING **10** (31)
 6.1CH DECODING indicator **7** (31)
 A.F.D. **14** (30)
 AUDIO SPLIT **21** (25)
 CINEMA STUDIO EX **11** (28)
 Cursor buttons (</>) **27** (19, 33, 35, 36, 43, 45)
 DIGITAL CONCERT HALL **12** (29)
 DIMMER **4** (27)
 DIMMER indicator **42** (27)
 Digital Cinema Sound indicator **5** (28)
 Display **17** (32)
 DISPLAY **3** (27, 41)
 DOOR OPEN **25**

ENTER **26** (43)
 EQ **30** (36)
 EQUALIZER **34** (36)
 FM/AM **6** (38, 39)
 FM MODE **40** (39)
 FUNCTION **23** (24, 25, 38, 39, 40, 43)
 INPUT MODE **24** (26)
 IR receptor **2**
 Jog dial **28** (19, 33, 35, 36, 43, 45)
 LEVEL **29** (35)
 MASTER VOLUME **20** (24, 26)
 MEMORY **39** (38, 40)
 MODE +/- **16** (28, 37)
 MULTI/2CH A. DIRECT **18** (26, 30)
 MULTI CHANNEL DECODING indicator **13**
 MUTING **22** (26)

NAME **33** (43)
 NIGHT MODE **19** (31)
 ON SCREEN (STR-DB1070 only) **43** (10)
 PHONES jack **45** (26)
 PRESET TUNING +/- **9** (40)
 PTY SELECT +/- (AEP and UK models) **36** (41)
 RDS/PTY (AEP and UK models) **38** (41)
 SET UP **32** (19, 45)
 SHIFT **8** (40)
 SLEEP (Except AEP and UK models) **38** (44)
 SPEAKERS switch **44** (26)
 STREAM INFO (STR-DB870 only) **35** (27)
 SURR **31** (33)
 TEST TONE **37** (24)
 TUNING +/- **36** (39)
 VIDEO 3 INPUT jacks **41**
 I/⏻ (power) **1** (18, 23, 24, 37, 38)


– Rear Panel –

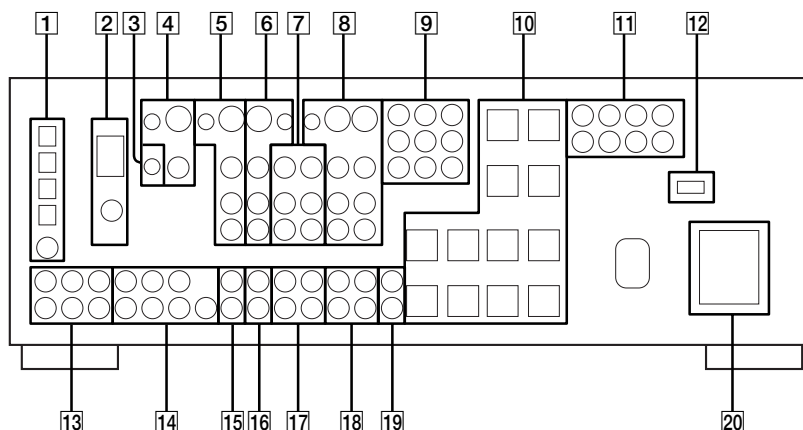

- | | |
|---|------------------------------------|
| 1 DIGITAL jack | 11 PRE OUT jack |
| 2 ANTENNA terminal | 12 IMPEDANCE SELECTOR switch |
| 3 CONTROL A1 II jack | 13 MULTI CH IN jack (STR-DB870) |
| 4 MONITOR jack | MULTI CH IN 2 jack (STR-DB1070) |
| 5 TV/SAT jack | 14 MULTI CH IN 1 jack (STR-DB1070) |
| 6 DVD/LD jack | 15 PHONO jack |
| 7 VIDEO 2 jack | 16 CD/SACD jack |
| 8 VIDEO 1 jack | 17 MD/TAPE jack (STR-DB870) |
| 9 COMPONENT VIDEO jack (US and Canadian models) | MD/DAT jack (STR-DB1070) |
| 10 SPEAKER terminal | 18 TAPE jack (STR-DB1070) |
| | 19 2ND ROOM jack (STR-DB1070) |
| | 20 AC OUTLET |

Setting the voltage selector (120 V AC area and 240 V AC area in E models)


If your receiver has a voltage selector on the rear panel, check that the voltage selector is set to the local power supply voltage. If not, use a screwdriver to set the selector to the correct position before connecting the AC power cord to a wall outlet.

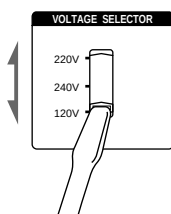

SECTION 3 DISASSEMBLY


- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW

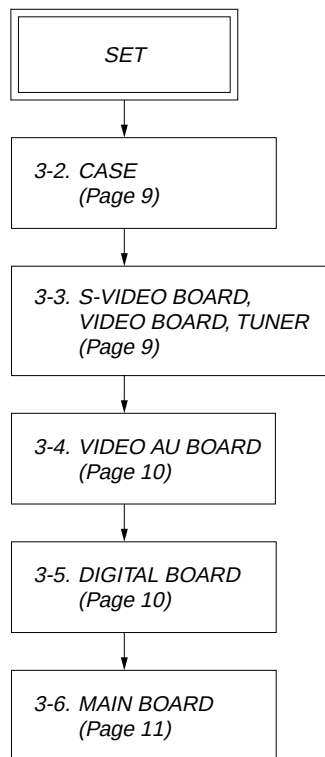


Note: Follow the disassembly procedure in the numerical order given.


3-2. CASE

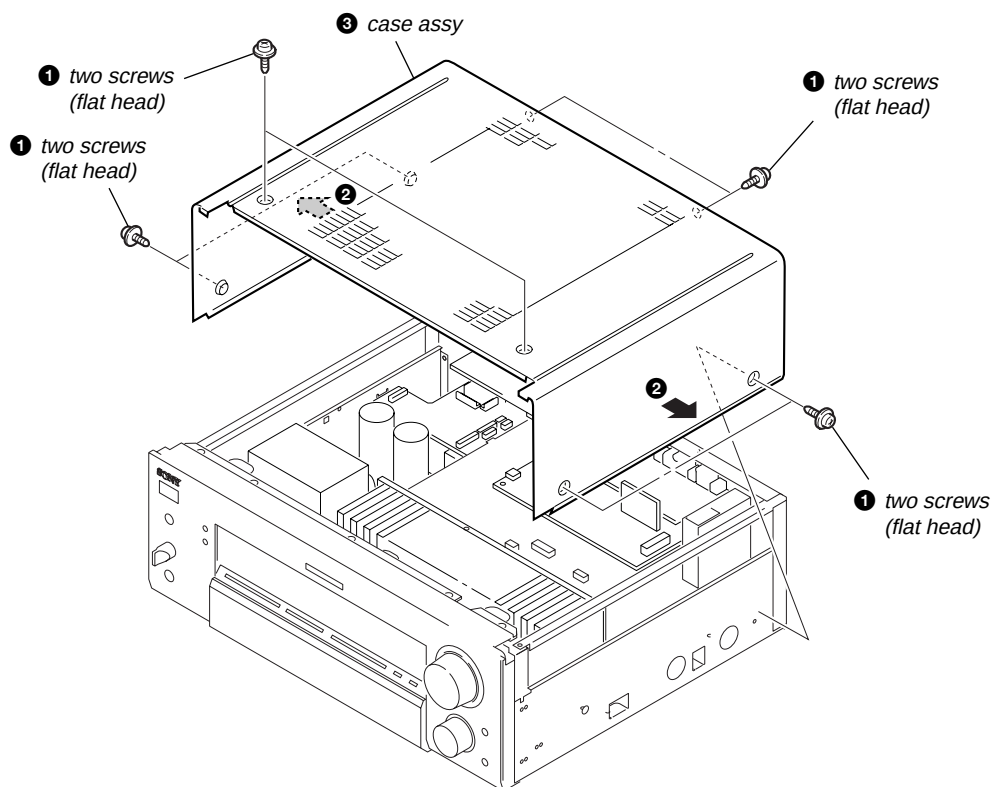


3-3. S-VIDEO BOARD, VIDEO BOARD, TUNER

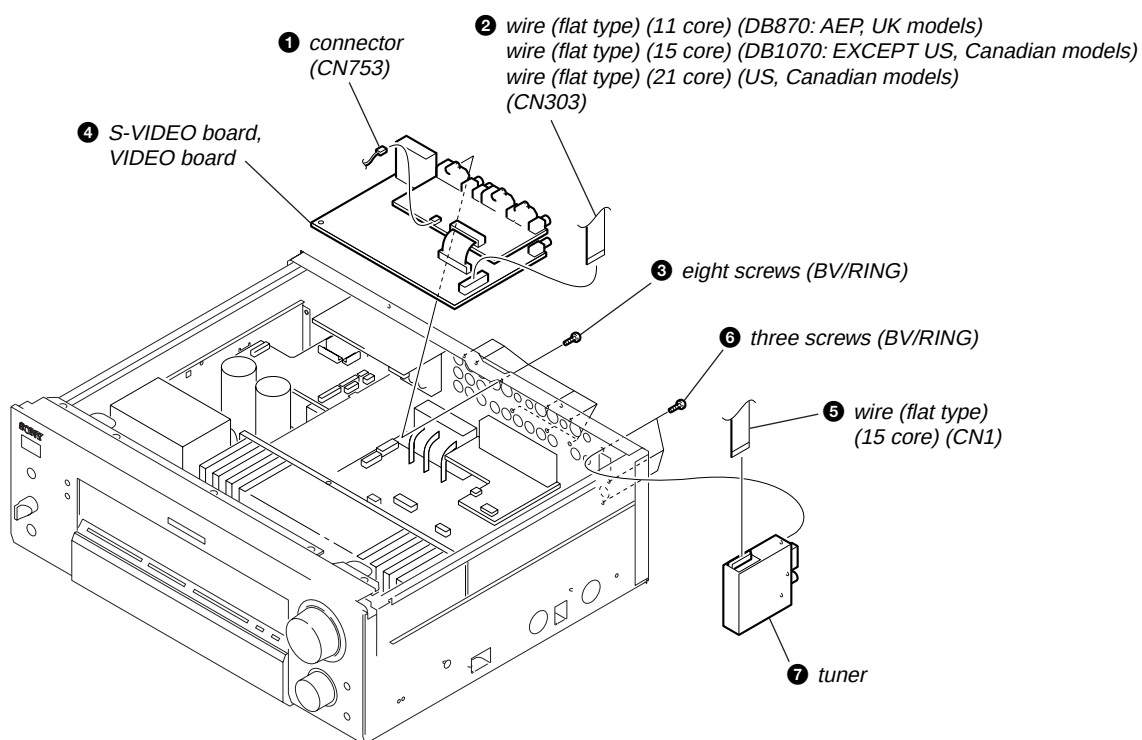


3-4. VIDEO AU BOARD

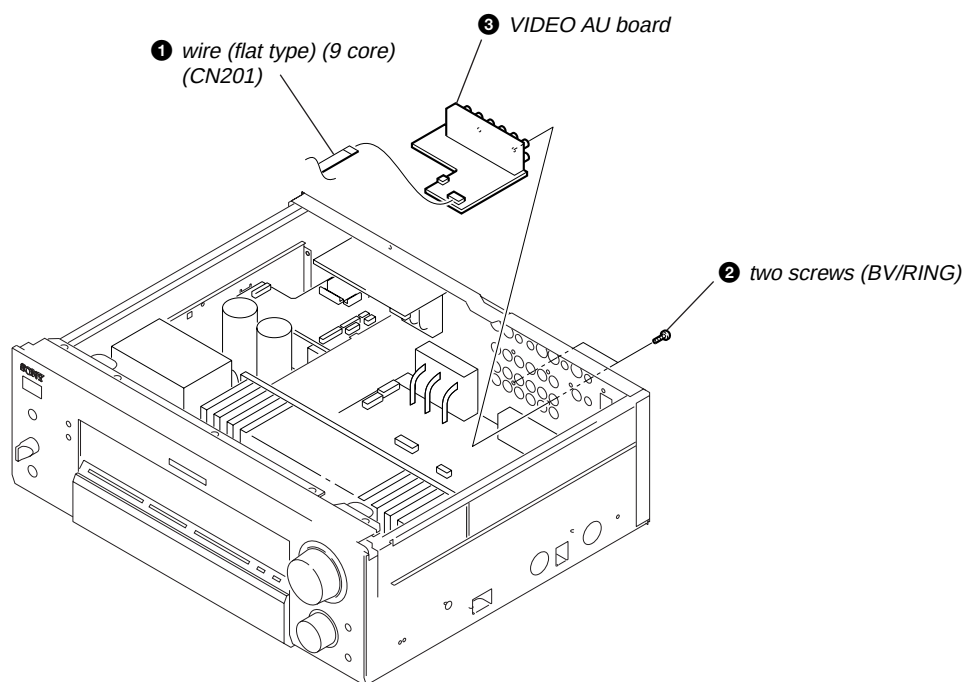

3-5. DIGITAL BOARD

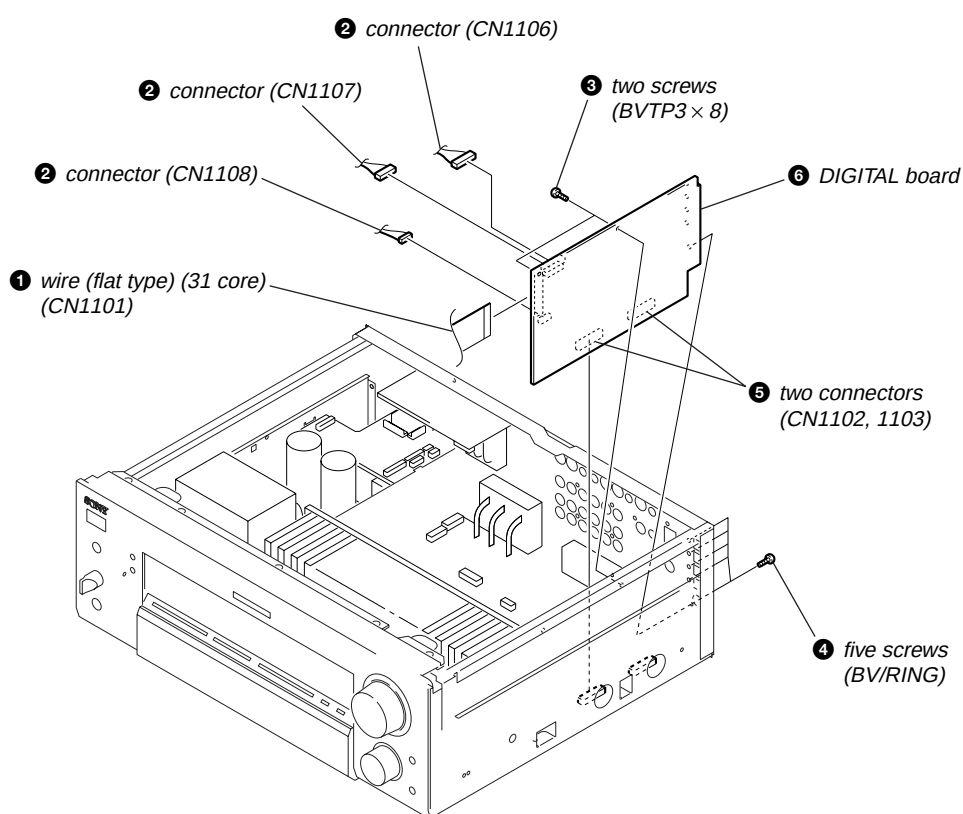

3-6. MAIN BOARD

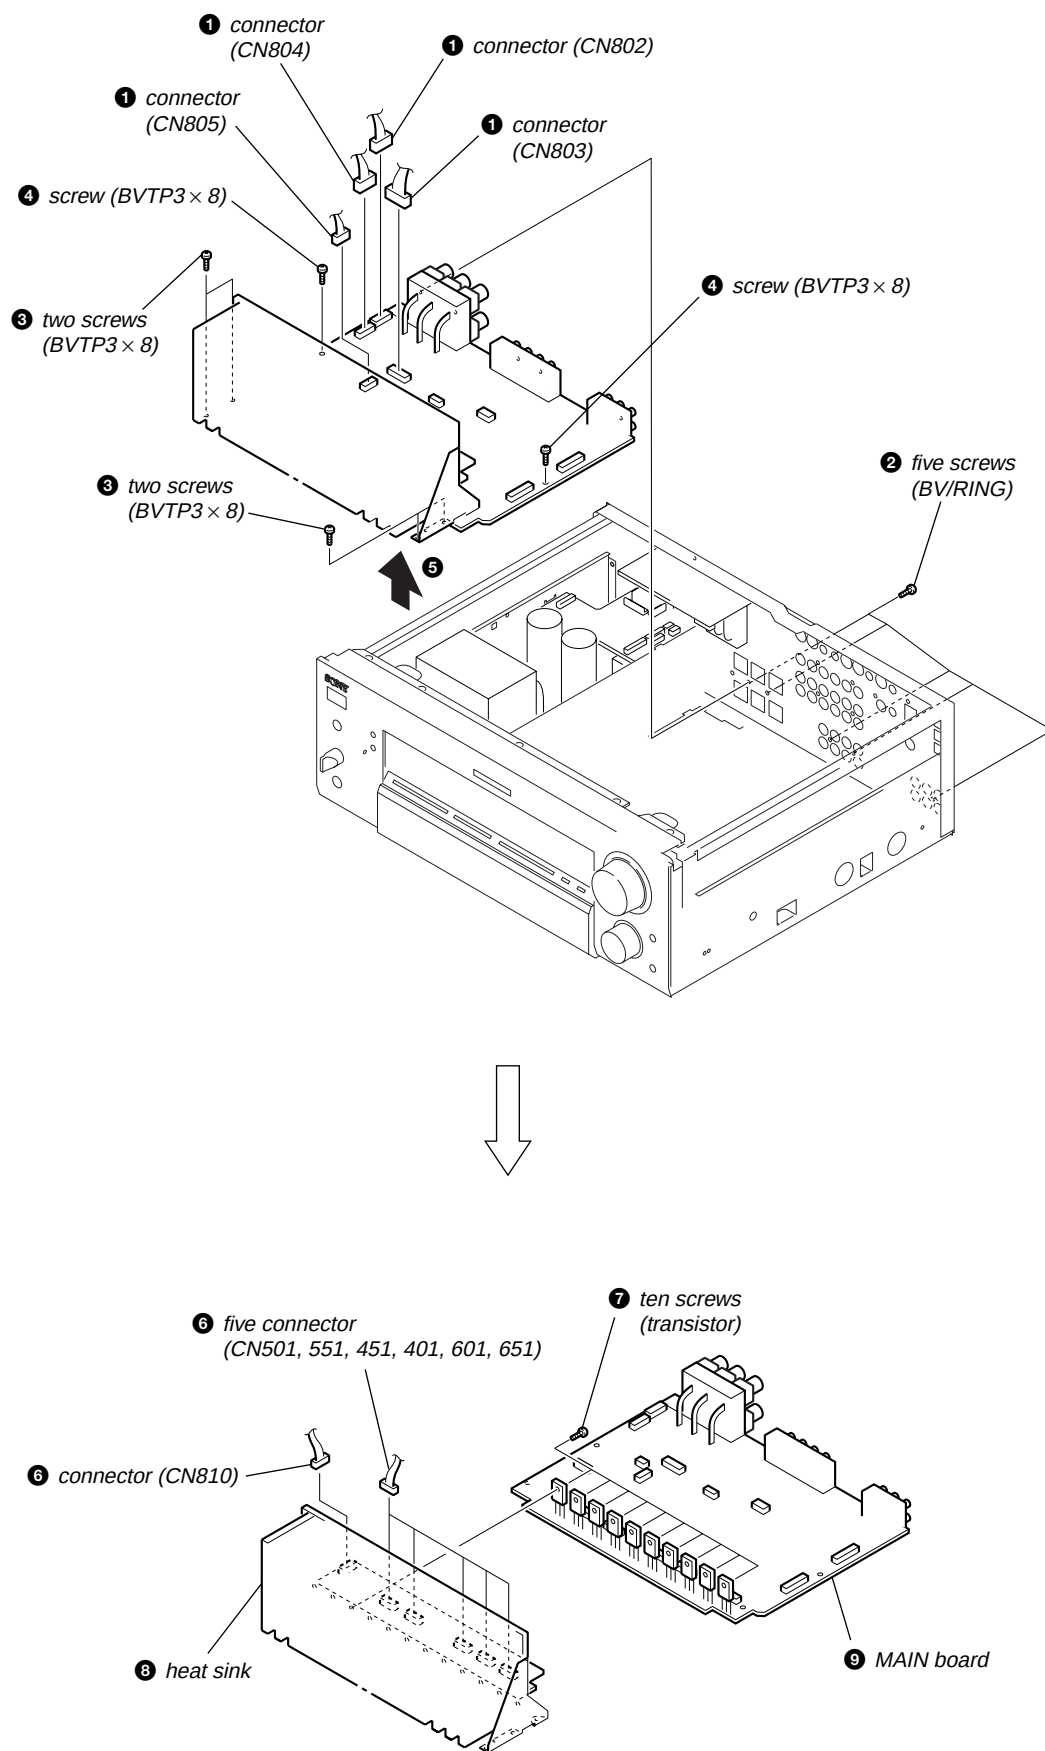

SECTION 4

TEST MODE

Factory Set Mode

All preset contents are reset to the default setting.

Procedure:

While pressing the **[SET UP]** and **[DIMMER]** buttons, press the **[I/⏻]** button to turn on the main power. The message “TUNER FACTORY PRESET” appears and the present contents are reset to the default values.

All Clear Mode

All preset contents are cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

Procedure:

While pressing the **[A.F.D.]** and **[MODE +]** buttons, press the **[I/⏻]** button to turn on the main power. The message “MEMORY CLEARED” appears and the memories are reset to the default values.

Sound Field Clear Mode

The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

Procedure:

While pressing the **[MODE +]** button, press the **[I/⏻]** button to turn on the main power. The message “S.F Initialize” appears and initialization is performed.

Fluorescent Indicator Tube Test Mode

All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.

Procedure:

1. While pressing the **[A.F.D.]** and **[DIMMER]** buttons, press the **[I/⏻]** button to turn on the main power.
2. All segments turn on at the same time, then each segment turns on press the **[A.F.D.]** button.

Demonstration Mode

Procedure:

While pressing the **[SET UP]** button simultaneously, press the **[I/⏻]** button to turn on the main power. The set enters the DEMO mode.

Wait a while, then the demonstration starts. If the **[I/⏻]** button is pressed often the demonstration has started, the power is turned off, and the demonstration resumes if the **[I/⏻]** button is pressed again.

AM Channel Step 9 kHz/10 kHz Selection Mode (US, Canadian and E Models)

Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

Procedure:

1. Set the FUNCTION to AM. Press the **[I/⏻]** button to turn off the main power.
2. While depressing the **[PRESET TUNING +]** button, press the **[I/⏻]** button to turn on the main power.
3. Either the message “AM 9 kHz Step” or “AM 10 kHz Step” appears. Select the desired step.

Version Mode

When this mode is used, the microprocessor version number is displayed.

Procedure:

Press three buttons of **[SHIFT]**, **[MODE +]** and **[TUNING -]** simultaneously. The microprocessor version number appears.

DSP Test Mode

This test is conducted to check if the DSP functions normally.

Procedure:

1. While pressing the **[DISPLAY]** and **[TUNING +]** buttons, press the **[I/⏻]** button to turn on the main power.
2. If the DSP is normal, the message “RWS 1:000 2:000 SYNC” appears.
3. If the DSP is abnormal, characters other than 0 appears at the 000 part of the message.


Note: RWS characters of the message correspond to the digits of 000. RW means read/write from the system controller (IC1703) to the DSP, and S means the communication between DSP and S-RAM (IC1502, IC1602). For example, if the writing of the system controller failed, 0*0 (* is a character other than 0) appears. Also, 1 and 2 indicates DSP1 (IC1501) and DSP2 (IC1601), and 1:000 and 2:000 show the test results of DSP1 and DSP2 respectively.

SECTION 5

ELECTRICAL ADJUSTMENT

OSD Adjustment (STR-DB1070 Model)

Connection

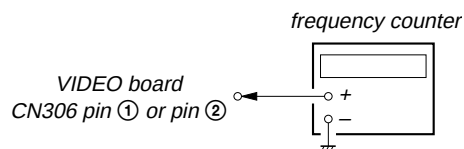


Procedure:

1. Short the CN306 pin ④ on the VIDEO board to the GND.
2. Connect a frequency counter to the CN306 pin ② on the VIDEO board.
3. Press the button to turn on the main power.
4. Press the **SET UP** button.
5. Press the or button to display "COLOR".
6. Turn the JOG DIAL to display "NTSC".
7. Press the button to display "OSD H.POSITION".
8. Adjust the CT302 so that the frequency counter reading is 3.57954 MHz.
9. Press the button to display "NTSC".
10. Turn the JOG DIAL to display "PAL".
11. Press the button to display "OSD H.POSITION".
12. Adjust the CT301 so that the frequency counter reading is 4.43361 MHz.
13. Press the button to turn off the main power.
14. Connect a frequency counter to the CN306 pin ① on the VIDEO board.
15. Press the button to turn on the main power.
16. Press the **SET UP** button.
17. Press the button to display "OSD V.POSITION".
18. Adjust the CT303 so that the frequency counter reading is 7.20 MHz.

Note: The steps 5, 6 and 9 to 12 should be performed to the models except for the US and Canadian.

Adjustment and Connection Location:


– VIDEO BOARD (Component Side) –

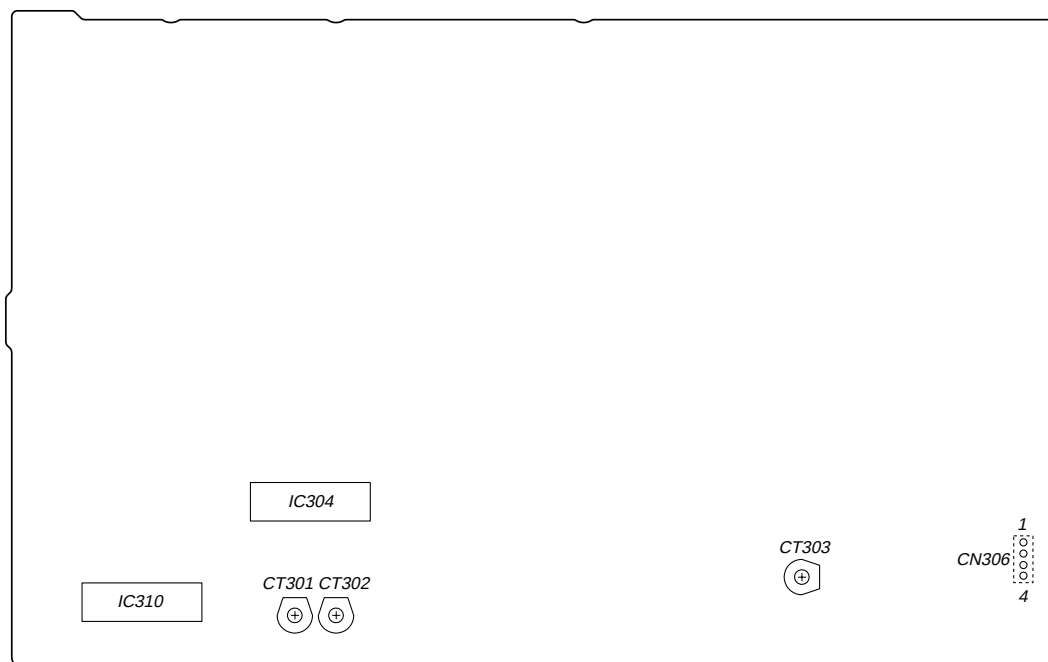


MEMO


SECTION 6 DIAGRAMS

6-1. BLOCK DIAGRAM – TUNER/VIDEO INPUT Section –

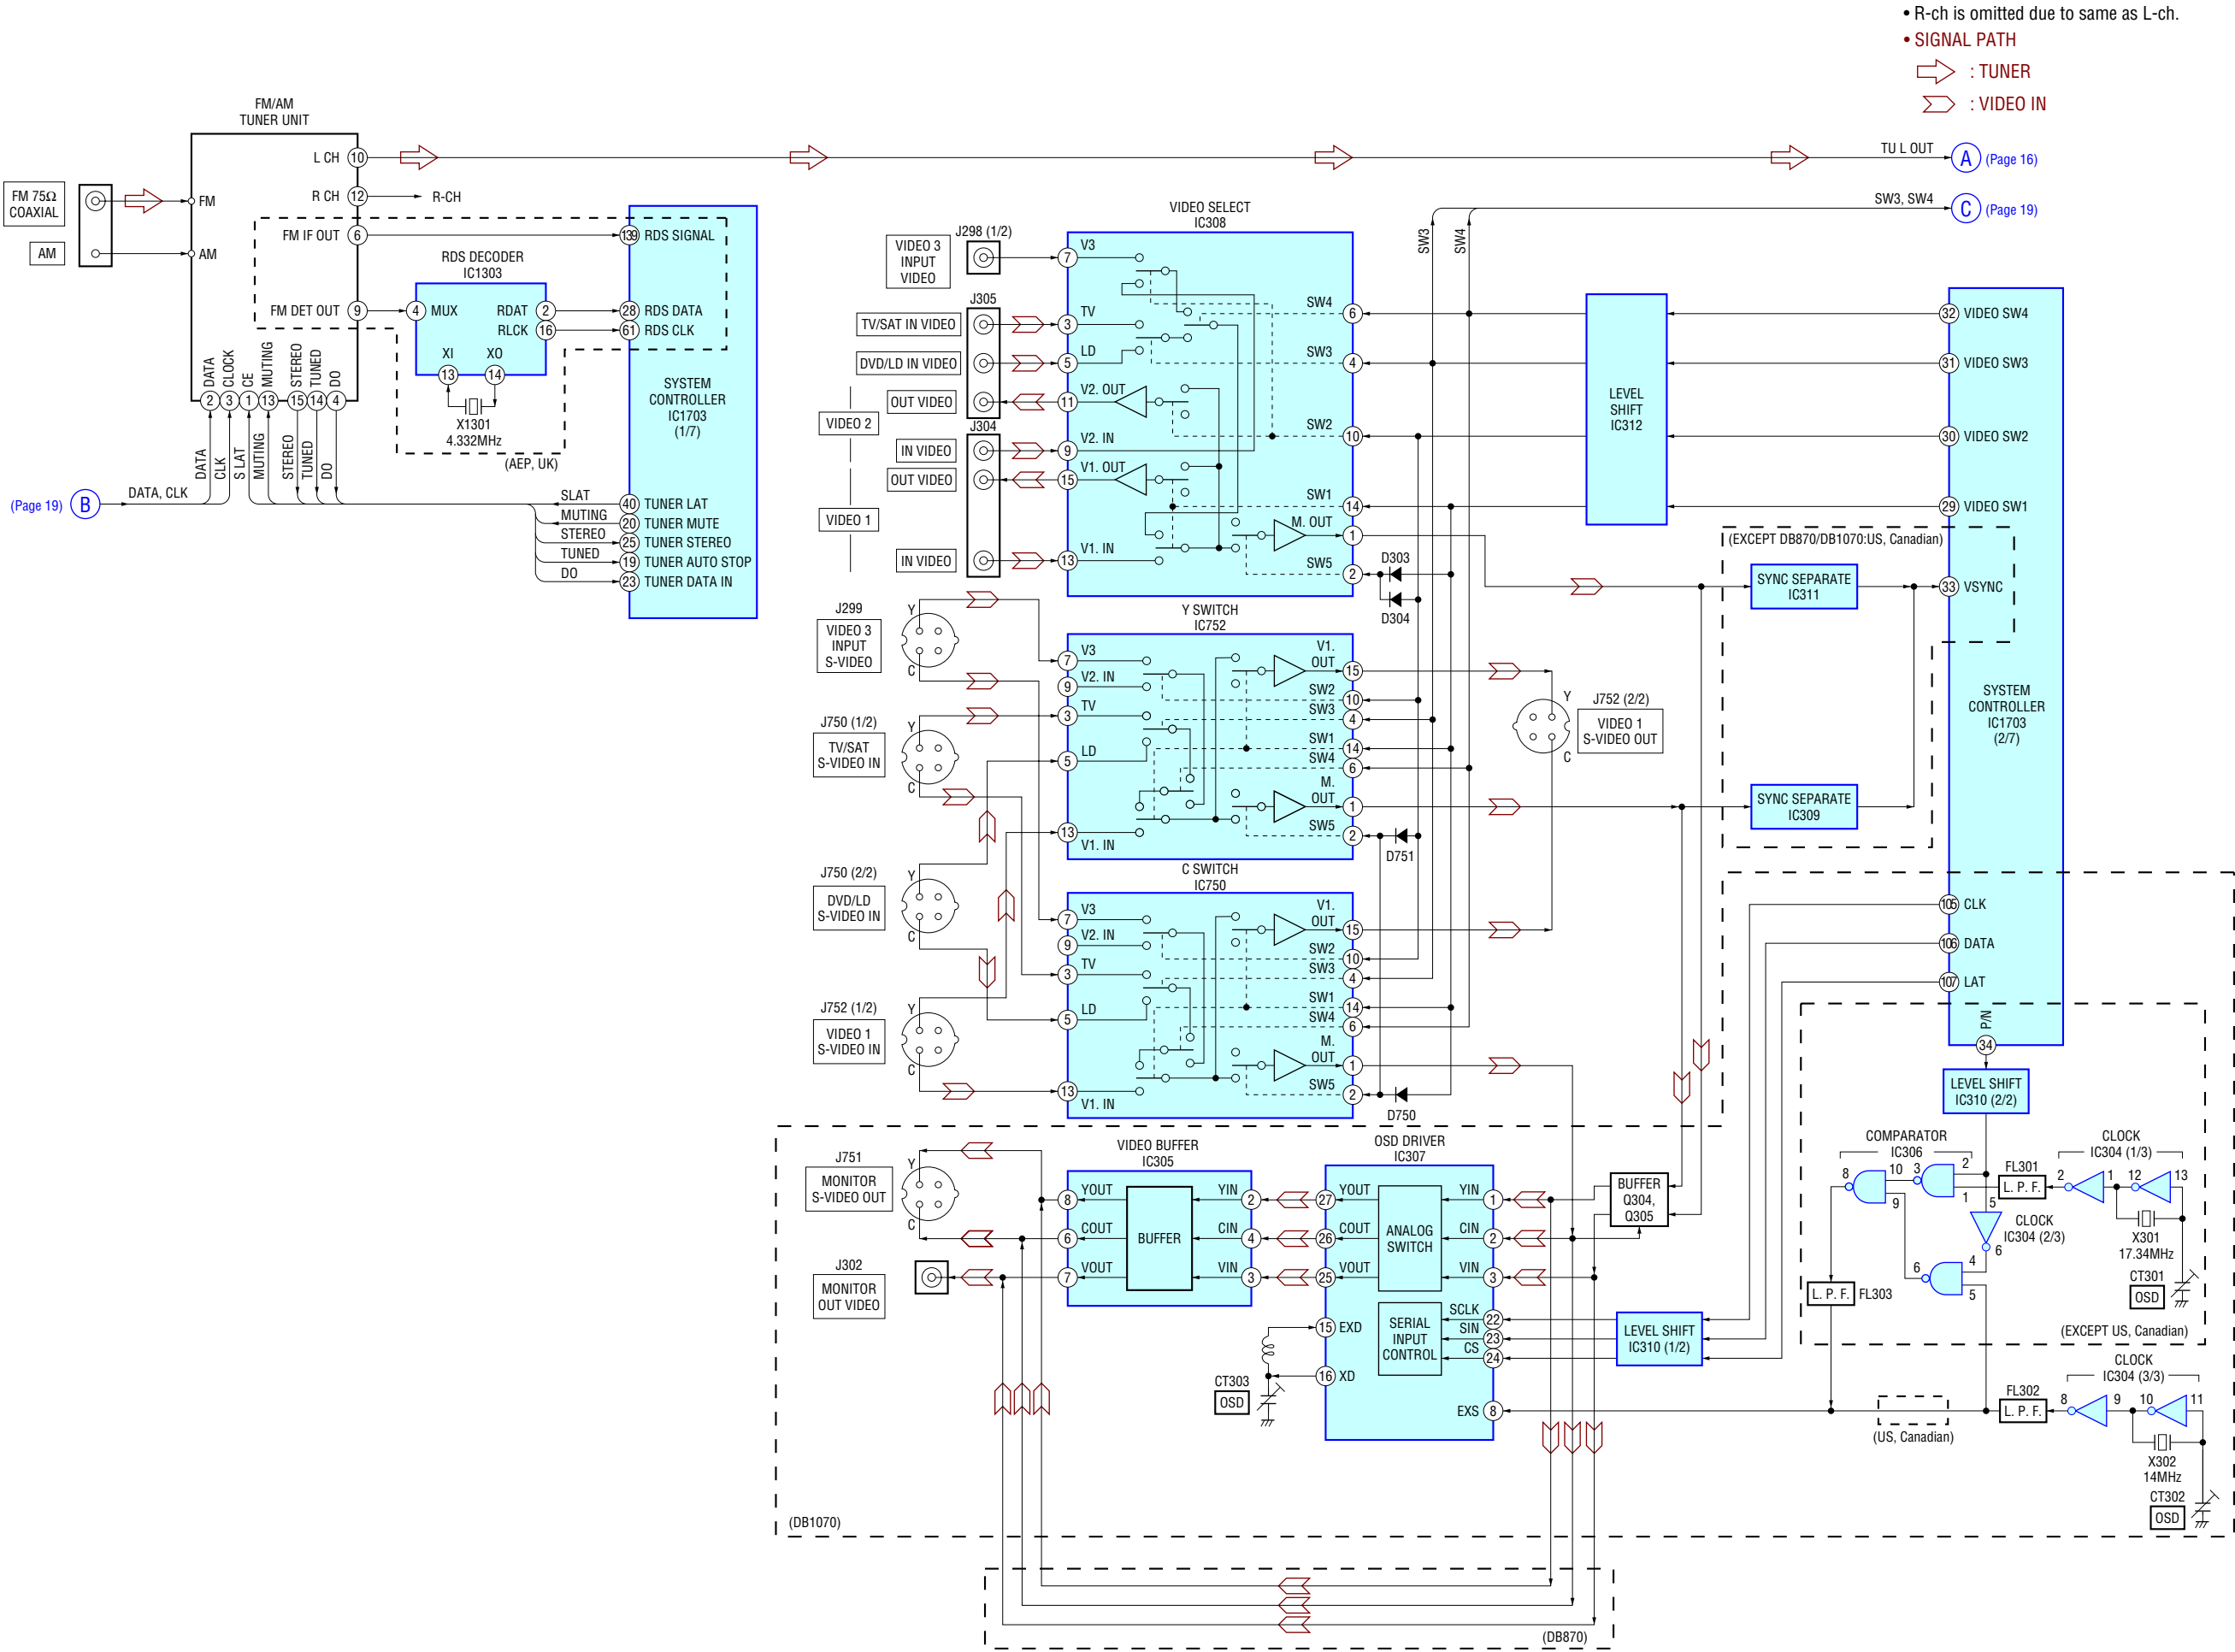


6-2. BLOCK DIAGRAM – AUDIO DSP Section –

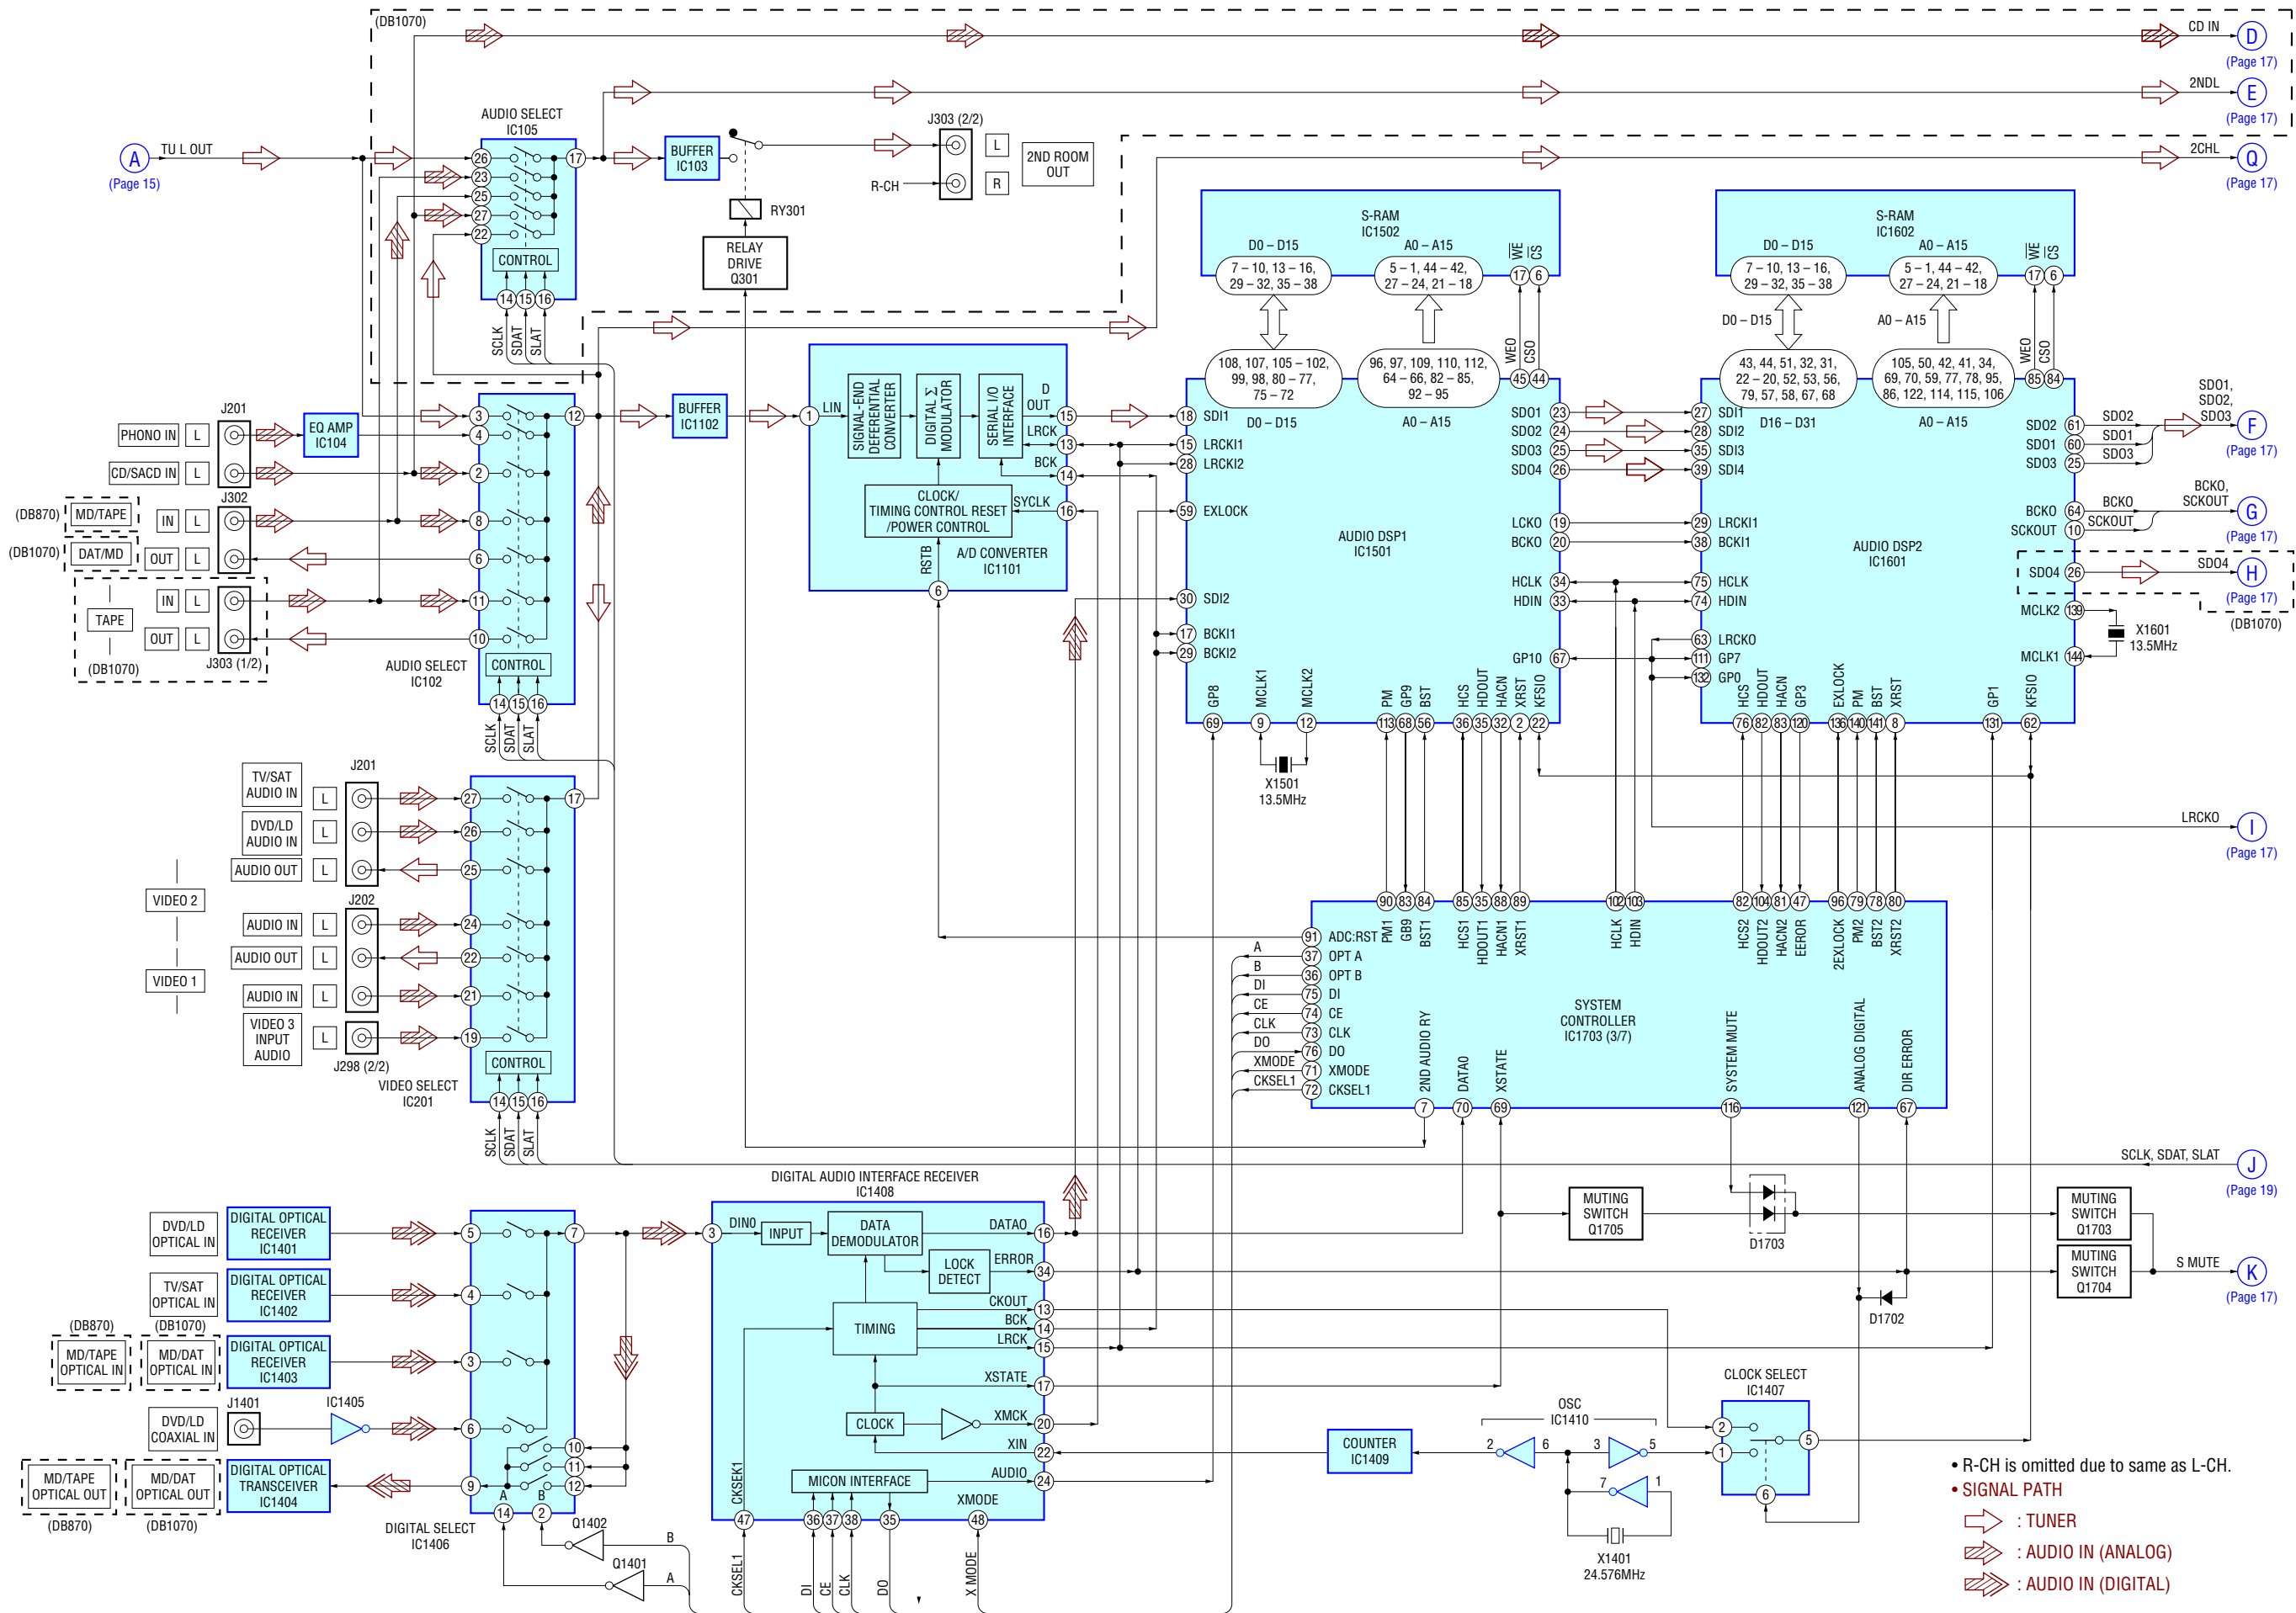


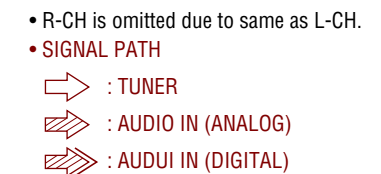

[illegible]

6-5. BLOCK DIAGRAM - DISPLAY/KEY CONTROL Section -

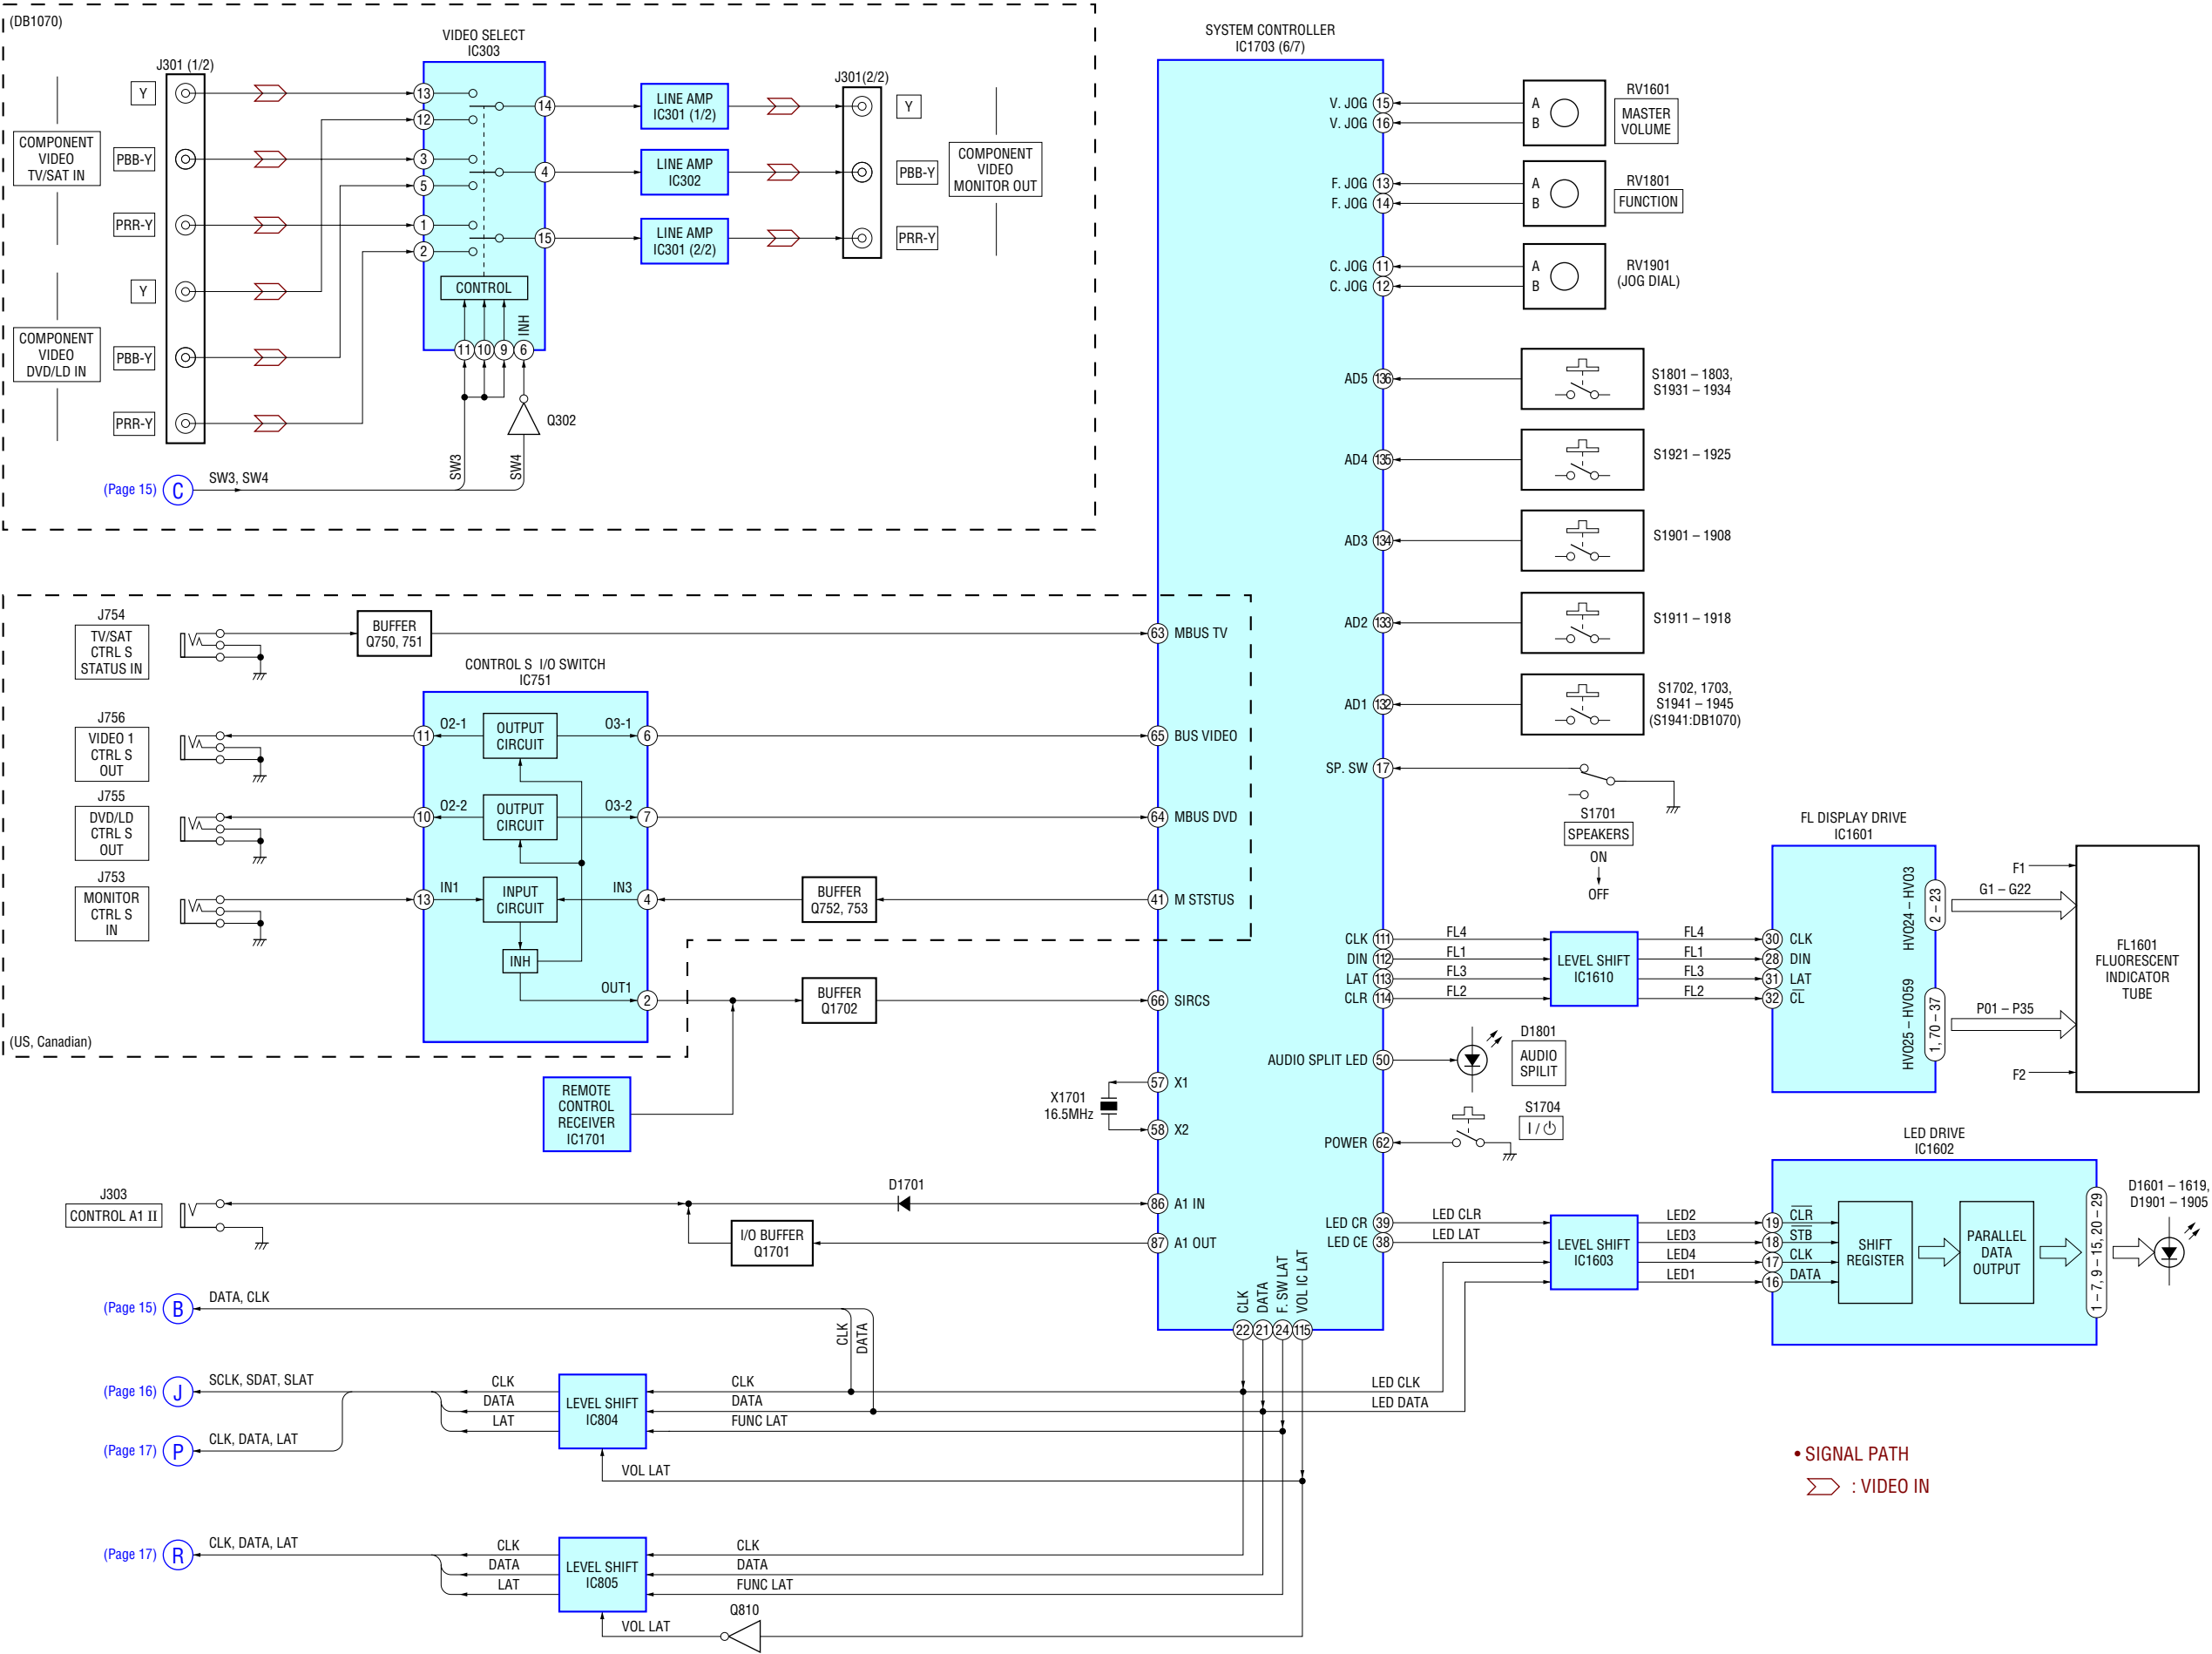

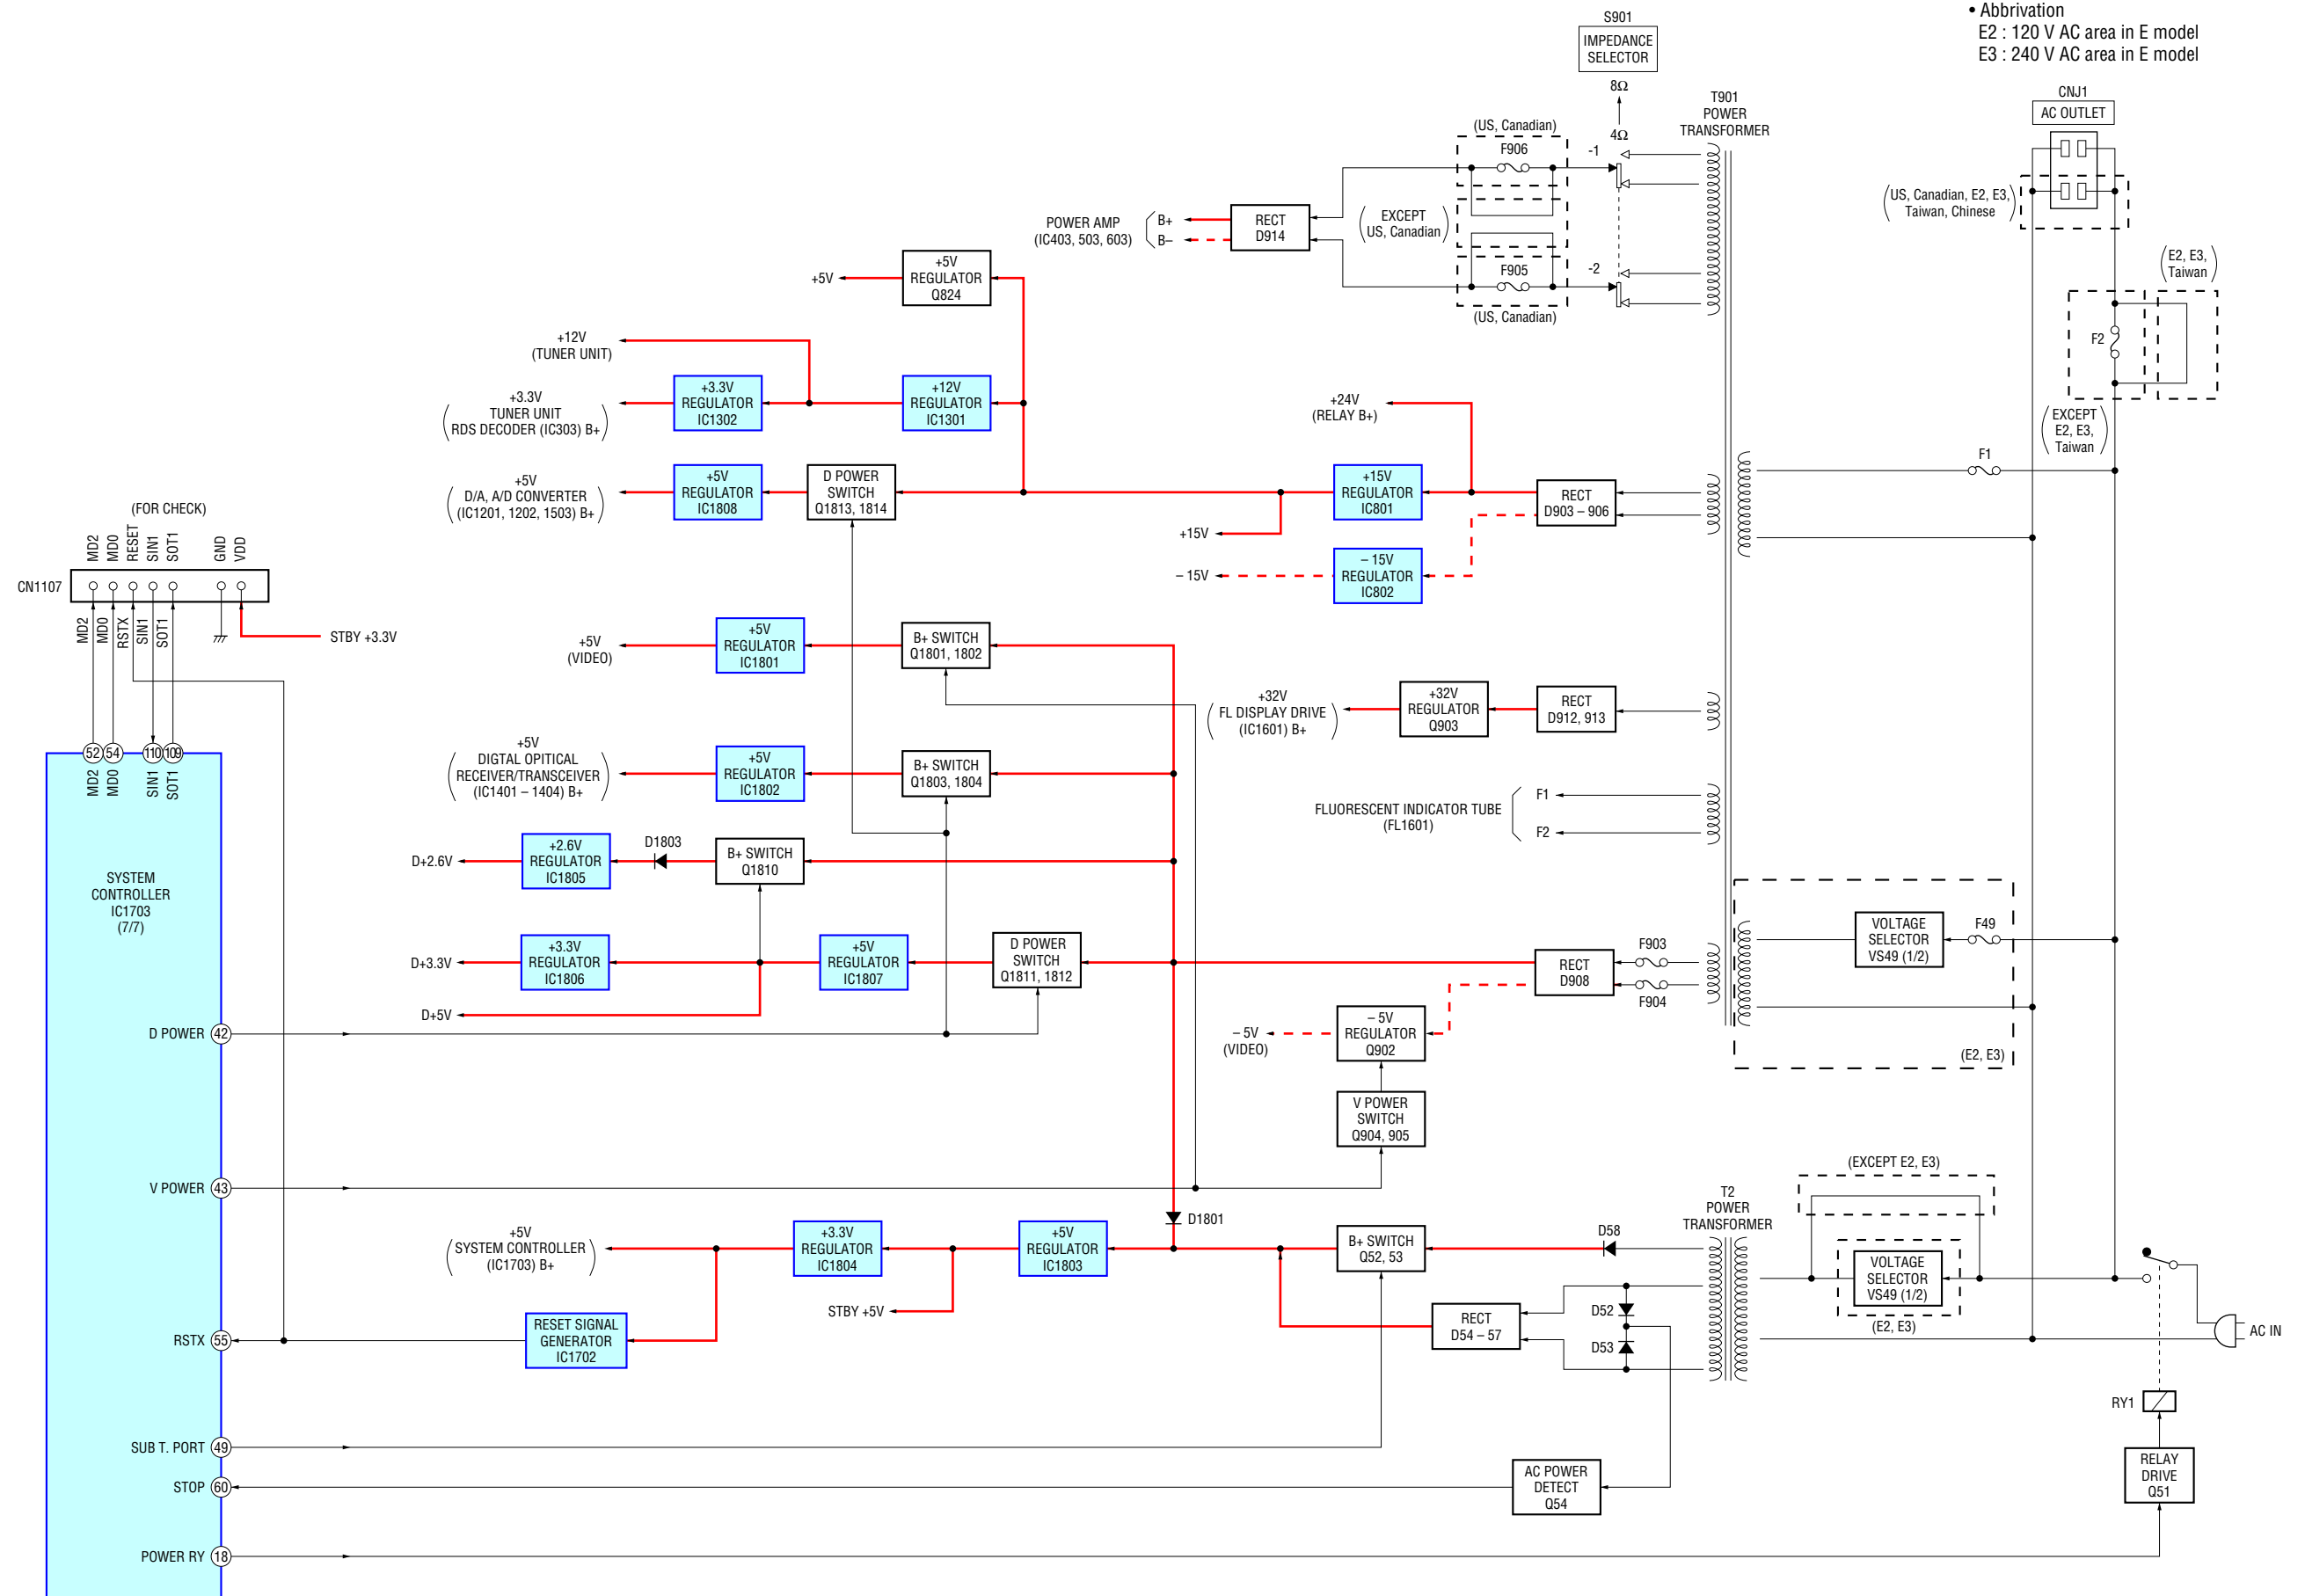




6-7. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note on Printed Wiring Board:

- — : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:	
Pattern face side:	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side:	Parts on the parts face side seen from the parts face are indicated.

 - Indication of transistor

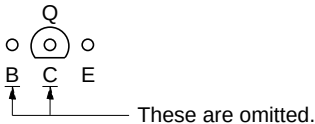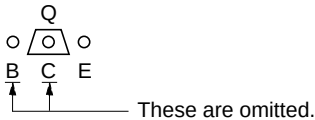

Note on Schematic Diagram:



- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- : nonflammable resistor.
- : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	---


以阴影和 Δ 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark : TUNER
* : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 : TUNER
 : AUDIO IN (ANALOG)
 : AUDIO IN (DIGITAL)
 : VIDEO IN
- Abbreviation
CH : Chinese model
CND : Canadian model
E2 : 120 V AC area in E model
E3 : 240 V AC area in E model
KR : Korean model
MY : Malaysia model
SP : Singapore model
TW : Taiwan model


• Circuit Boards Location

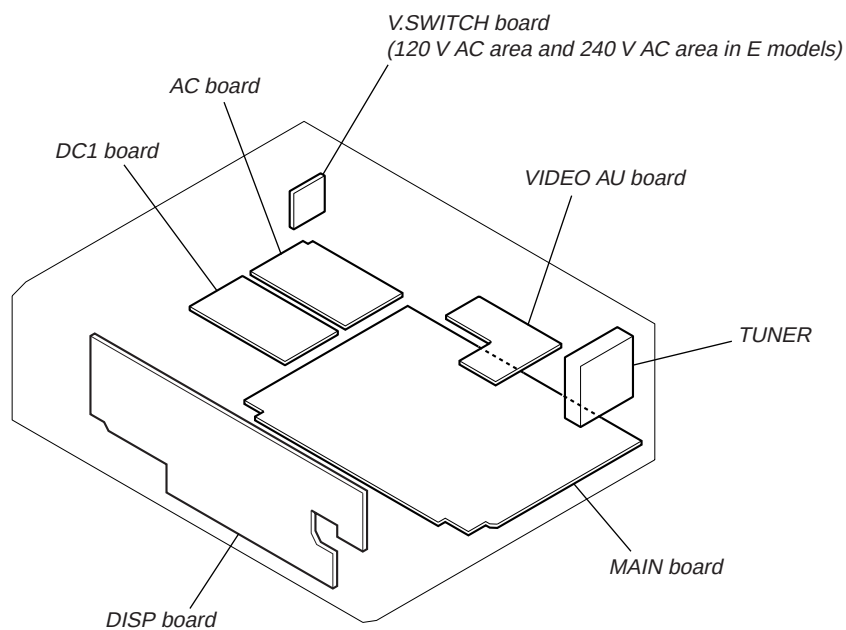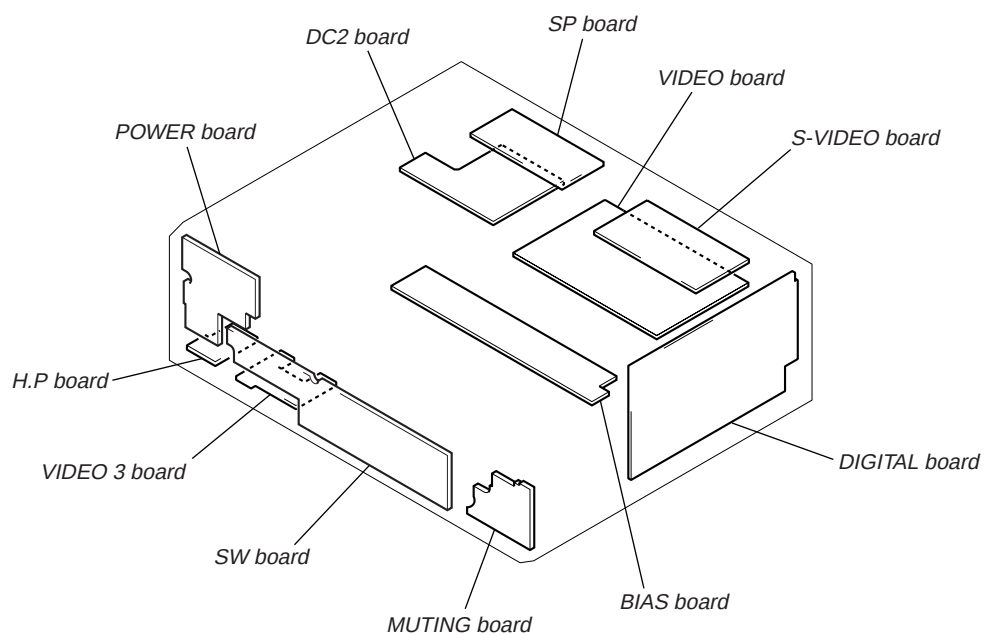



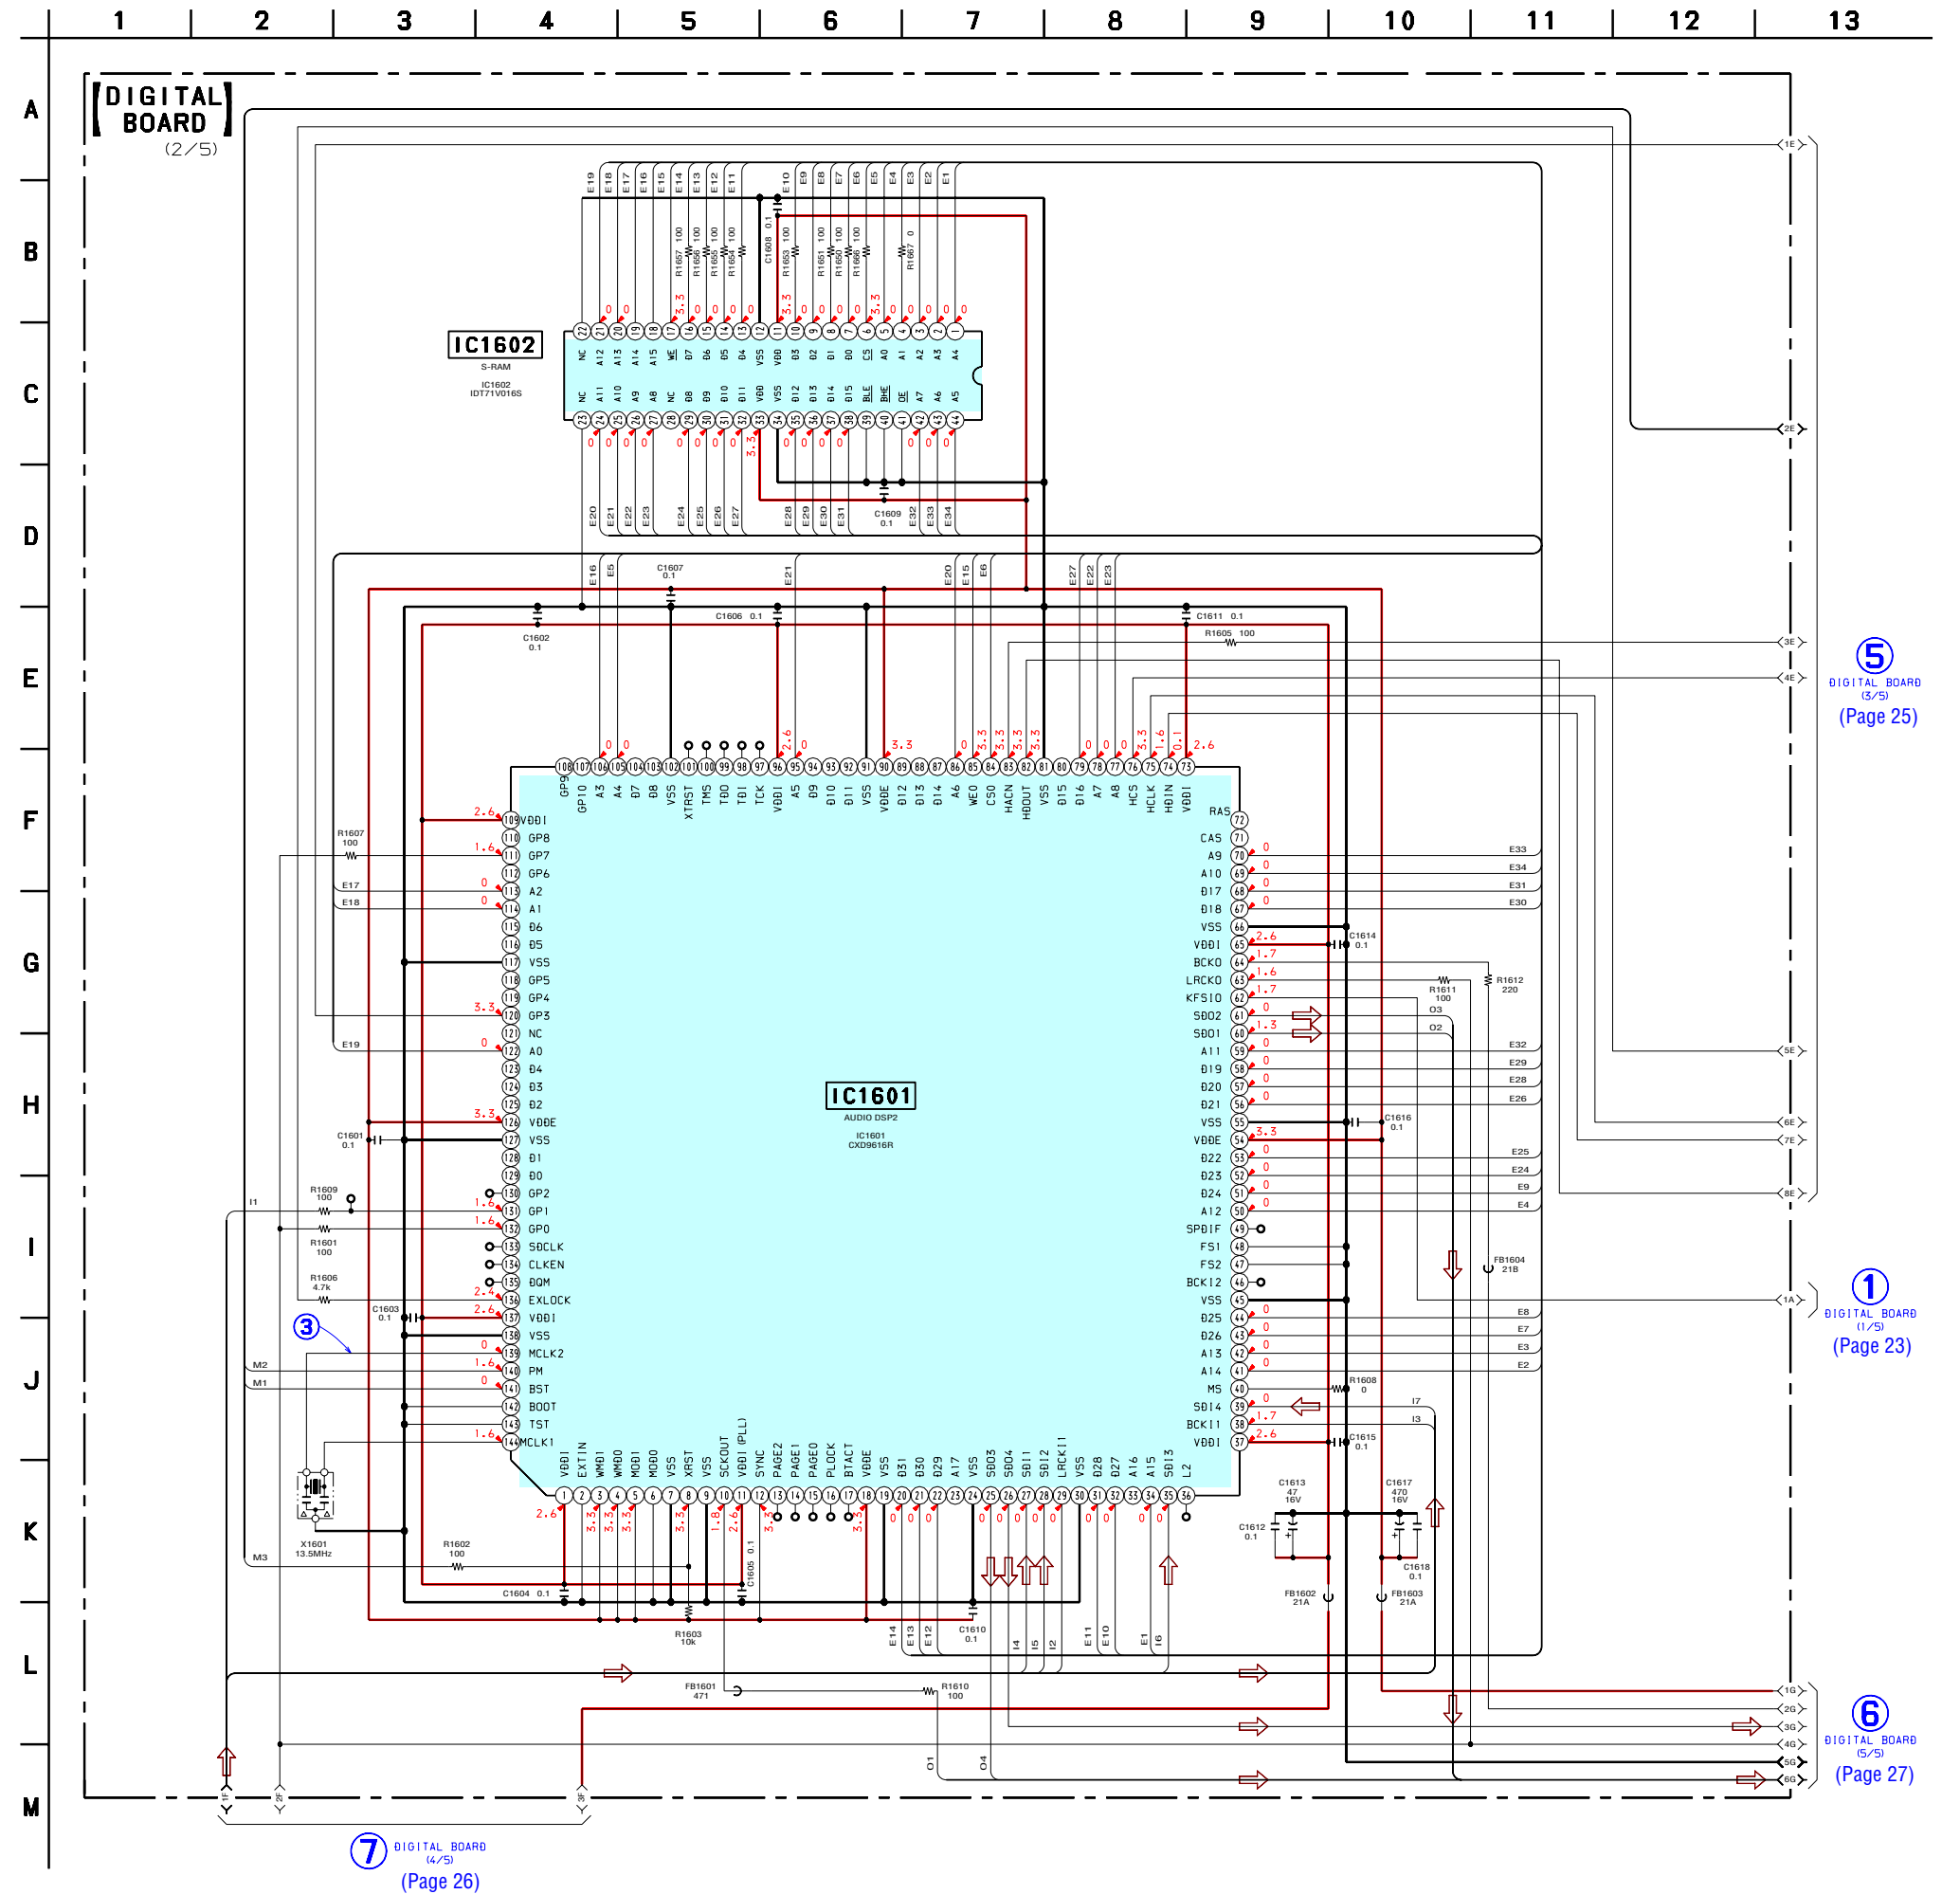

6-10. SCHEMATIC DIAGRAM – DIGITAL Board (3/5) – • See page 46 for Waveform.

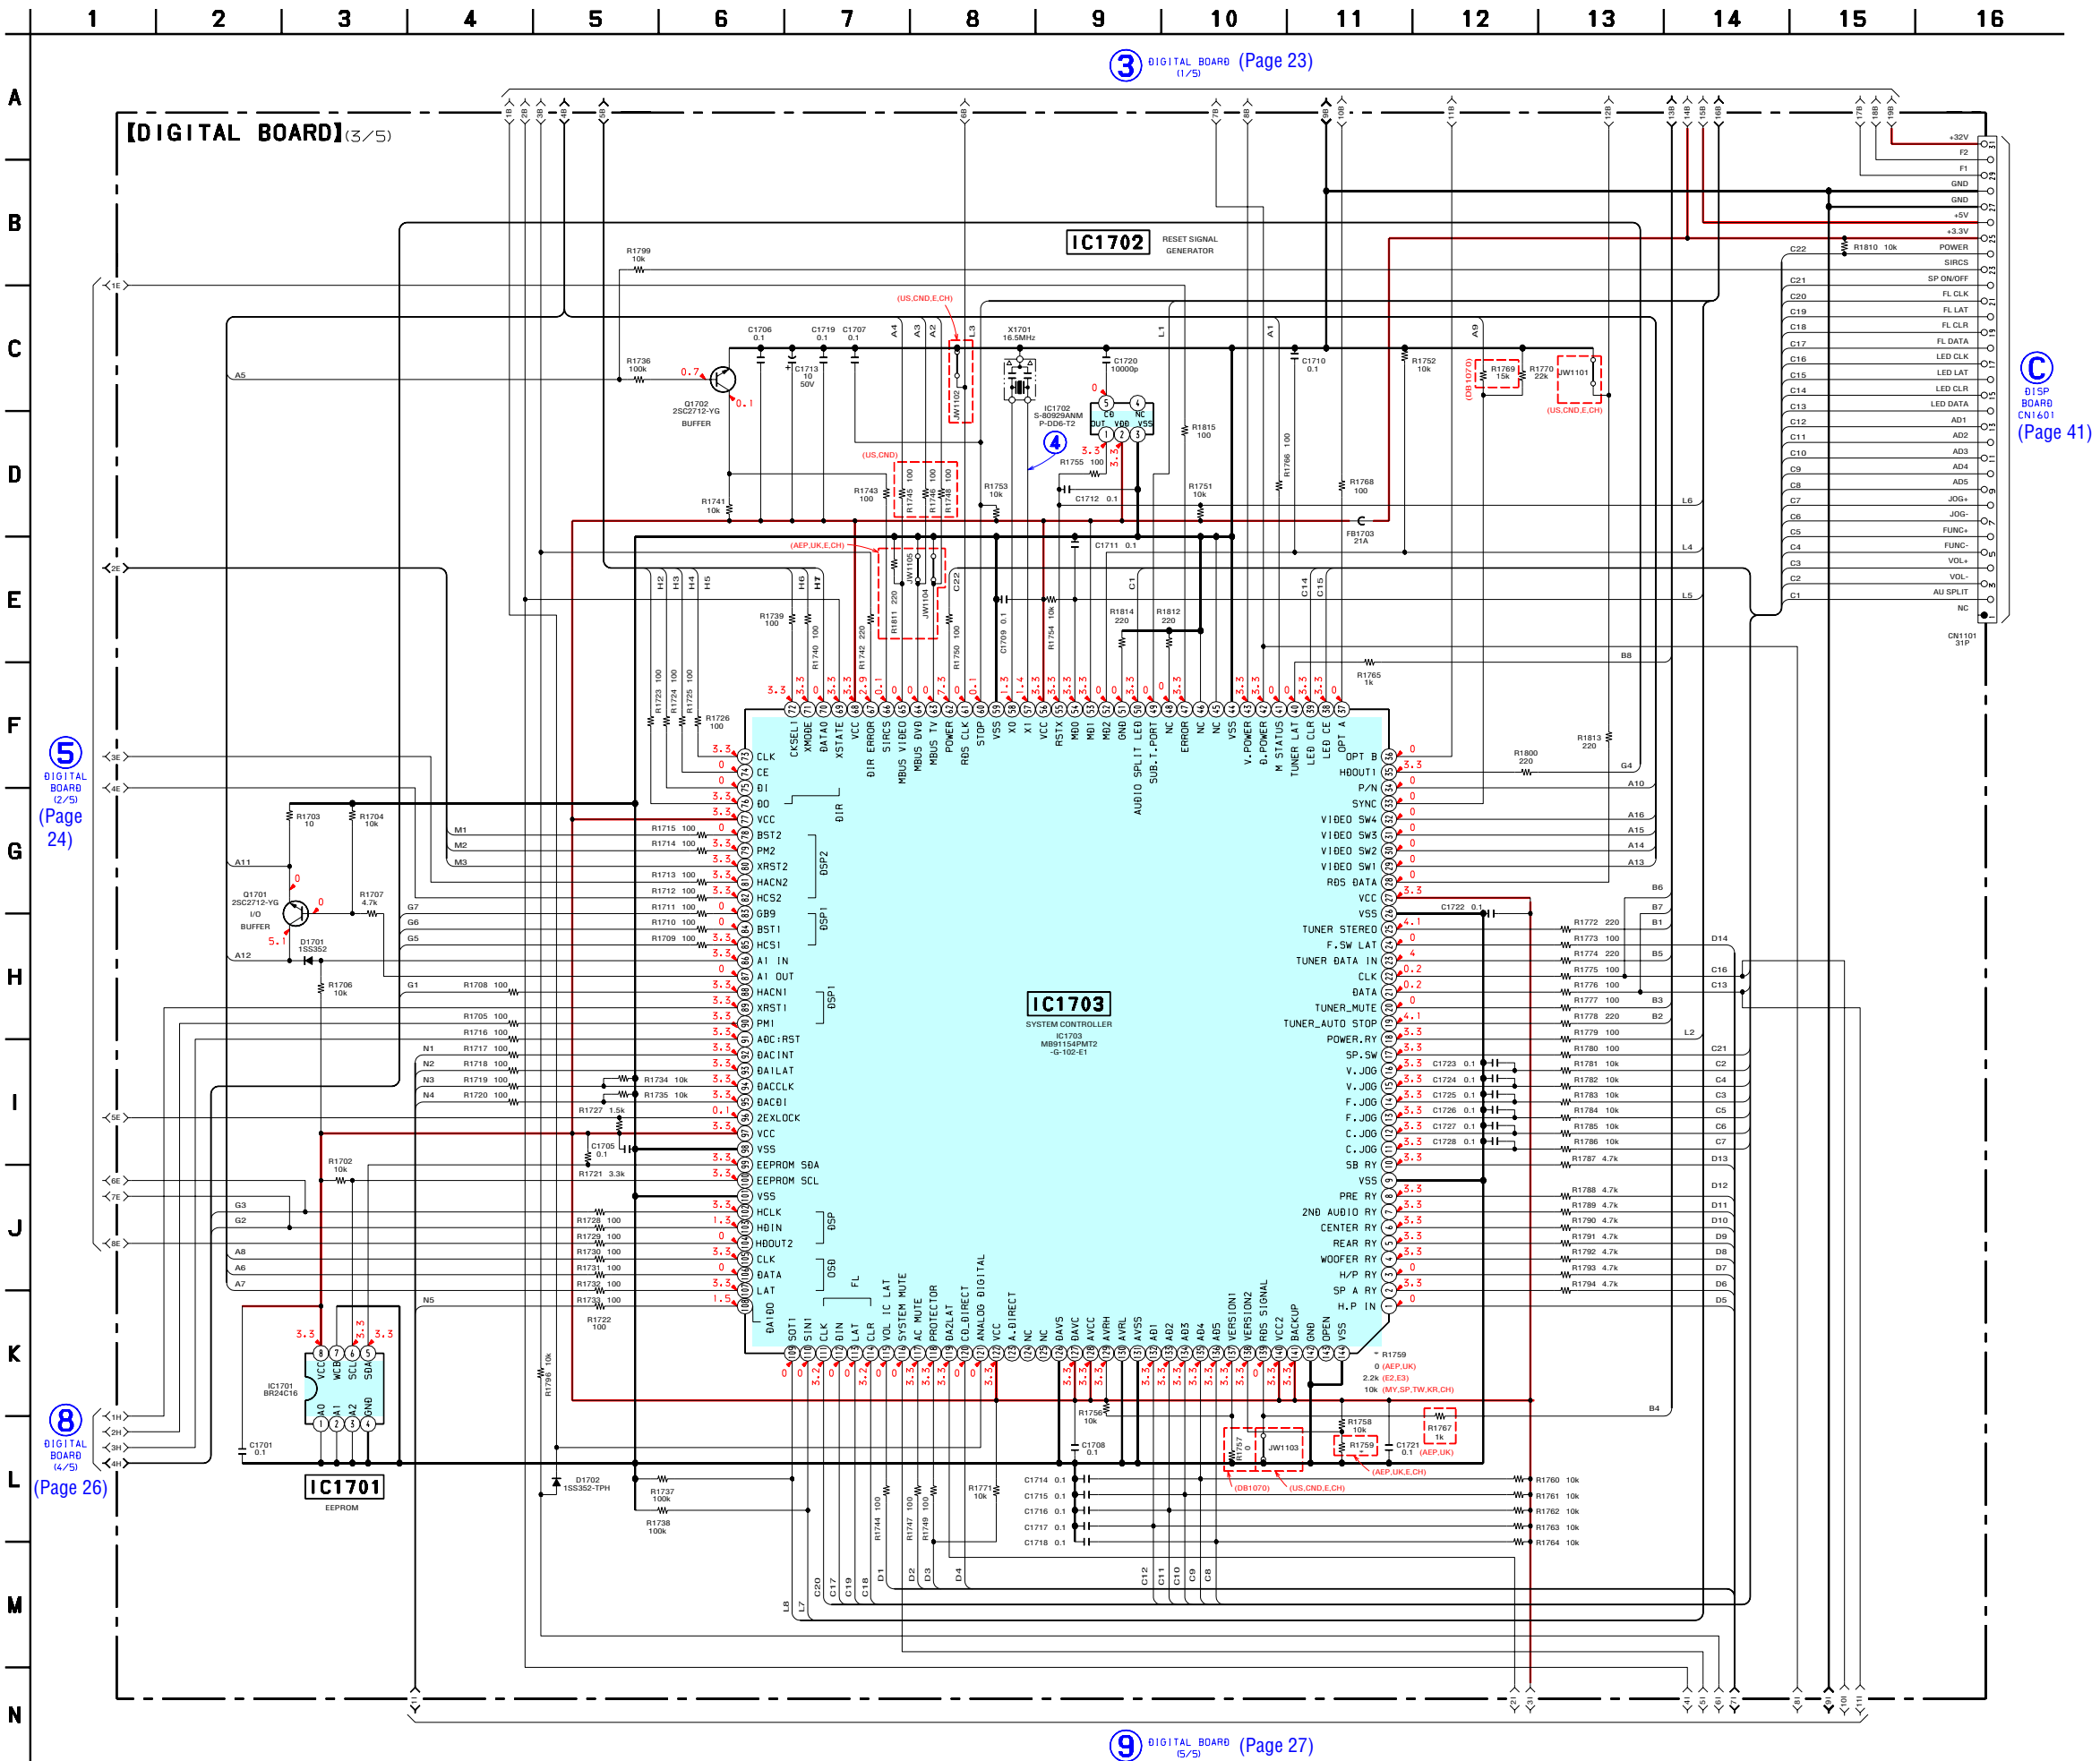






6-13. PRINTED WIRING BOARD – DIGITAL Board (Component Side) – • See page 22 for Circuit Boards Location.

- **Semiconductor Location**


Ref. No.	Location
D1701	D-11
D1702	F-13
D1703	G-13
D1801	B-14
D1802	B-16
D1803	I-15
IC1101	H-4
IC1102	J-3
IC1201	I-10
IC1202	I-11
IC1221	I-8
IC1241	I-7
IC1261	I-5
IC1281	I-4
IC1303	B-3
IC1405	G-2
IC1406	D-2
IC1407	F-3
IC1408	E-4
IC1409	E-4
IC1410	F-4
IC1501	F-6
IC1502	D-6
IC1601	G-9
IC1602	E-9
IC1701	F-12
IC1702	C-14
IC1703	E-13
Q1401	C-3
Q1402	C-3
Q1703	G-13
Q1704	G-13
Q1705	G-13
Q1802	B-10
Q1804	B-11
Q1812	I-14
Q1814	J-13

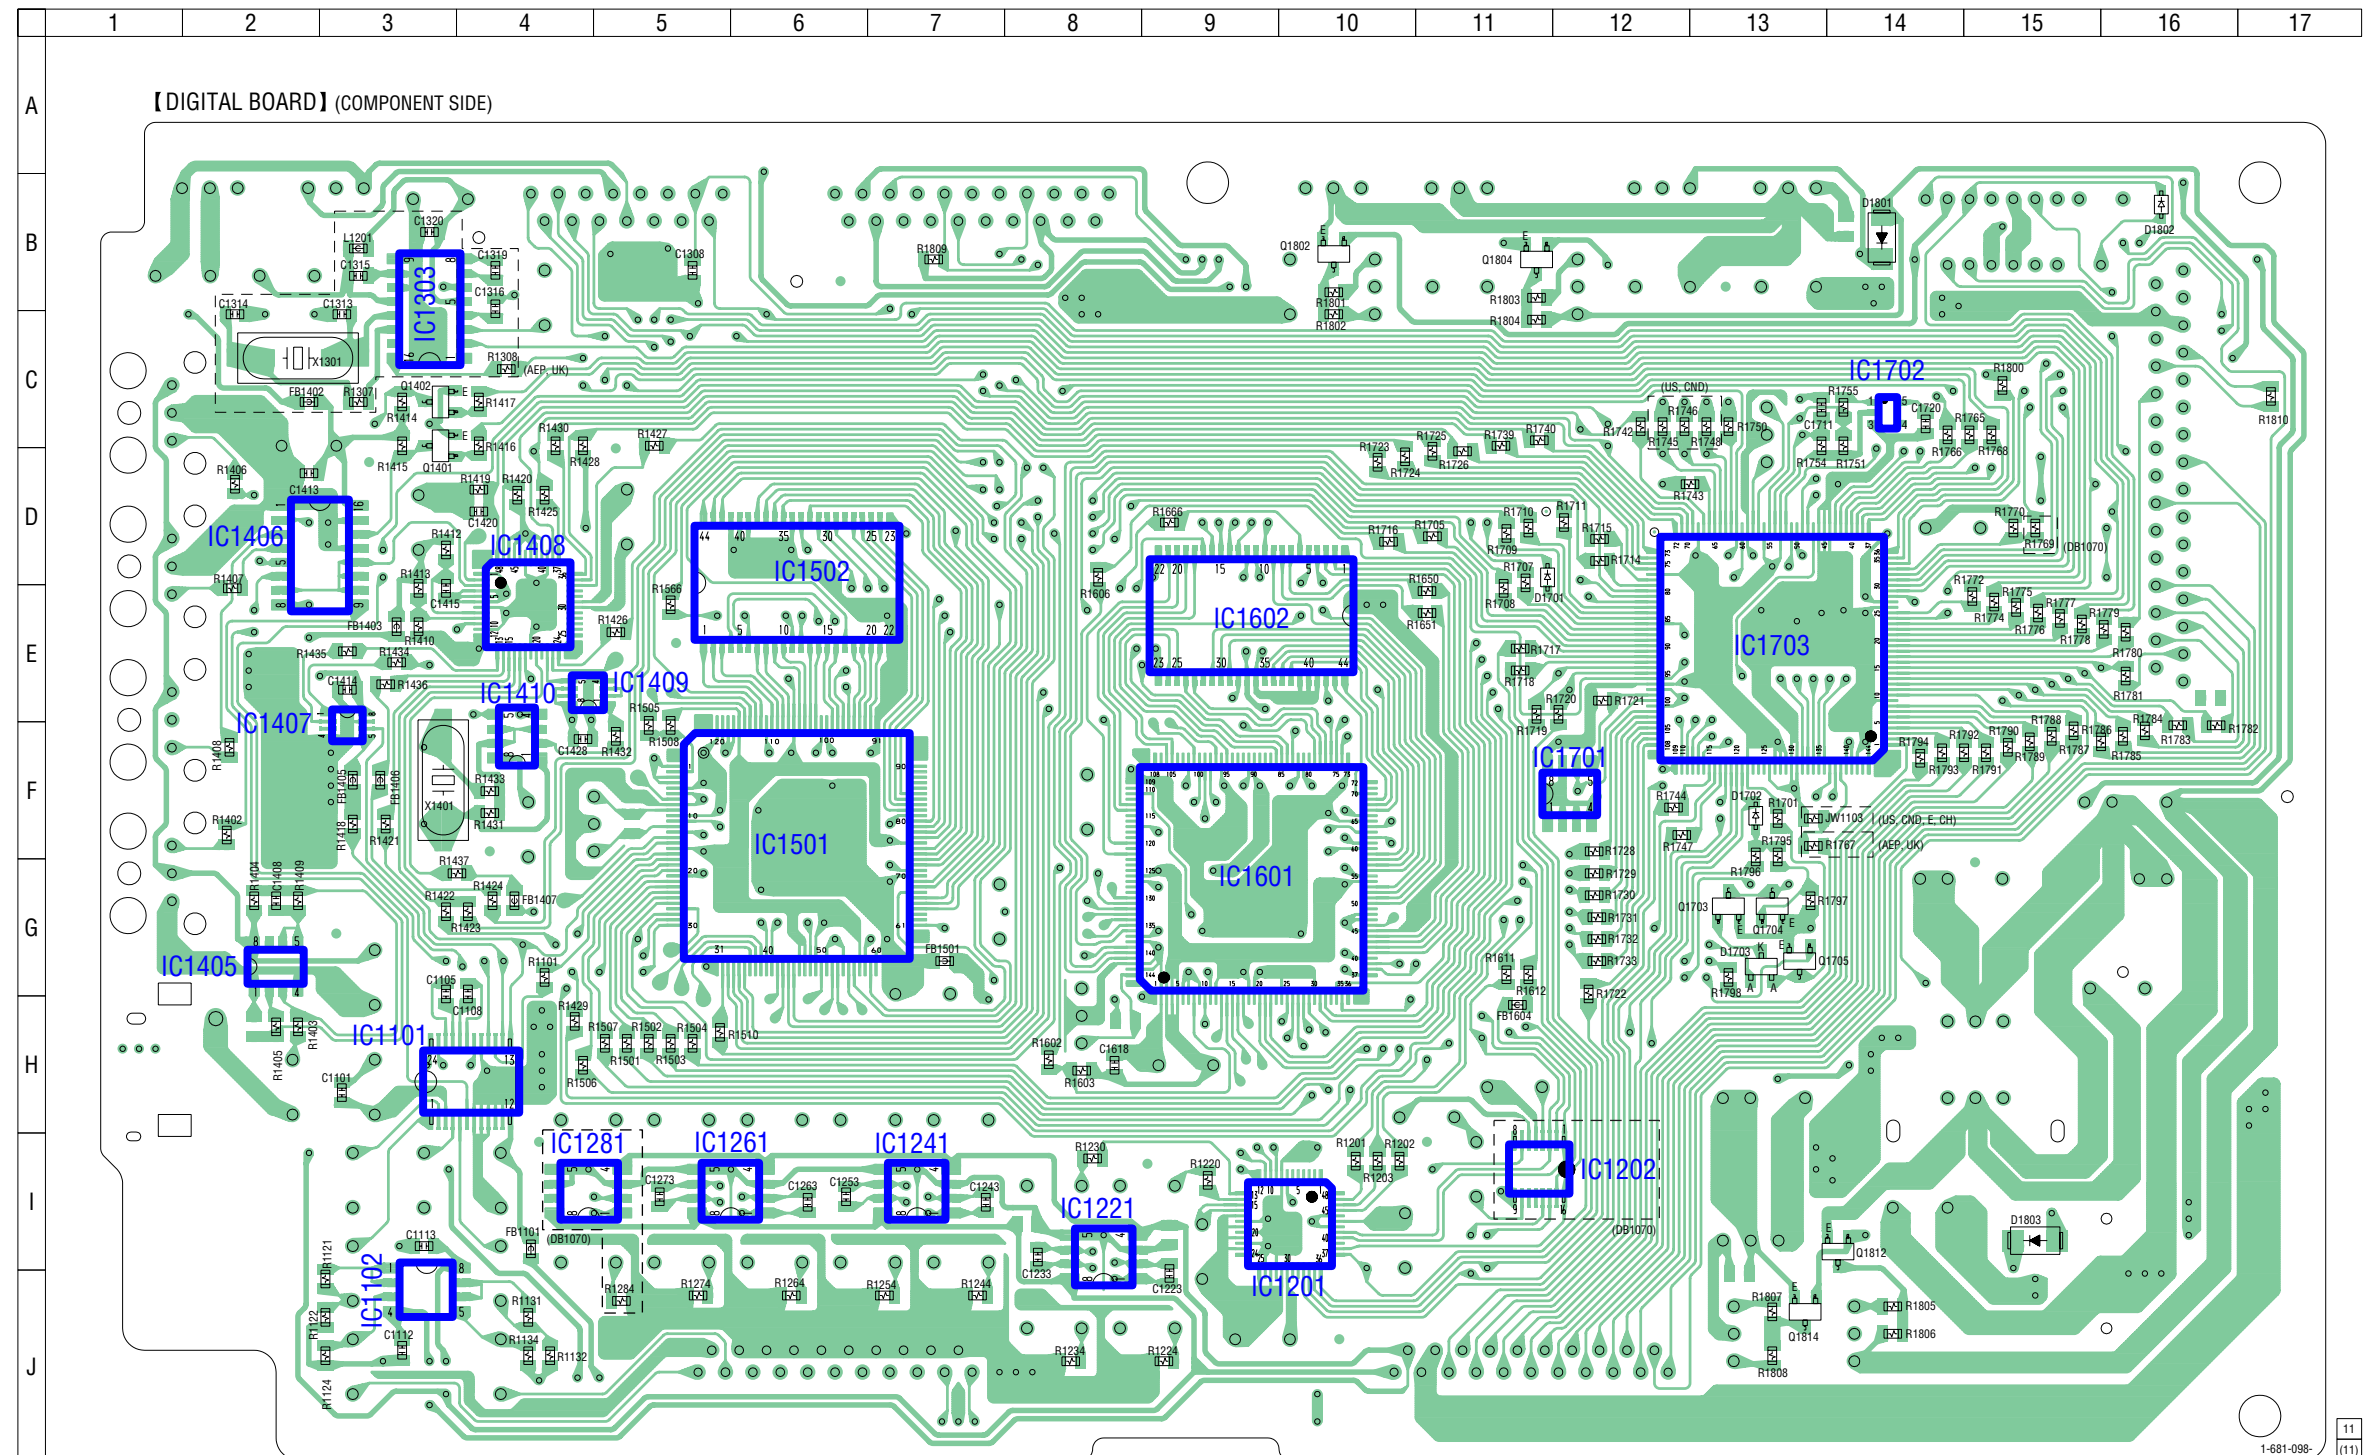


6-15. PRINTED WIRING BOARD – VIDEO Board – • See page 22 for Circuit Boards Location.

• Semiconductor Location


Ref. No.	Location
D301	E-7
D303	C-2
D304	C-2
IC301	C-5
IC302	C-6
IC303	C-7
IC304	E-3
IC305	E-5
IC306	E-4
IC307	E-7
IC308	C-3
IC309	D-7
IC310	E-2
IC311	D-6
IC312	C-2
Q302	C-5
Q304	E-8
Q305	E-7

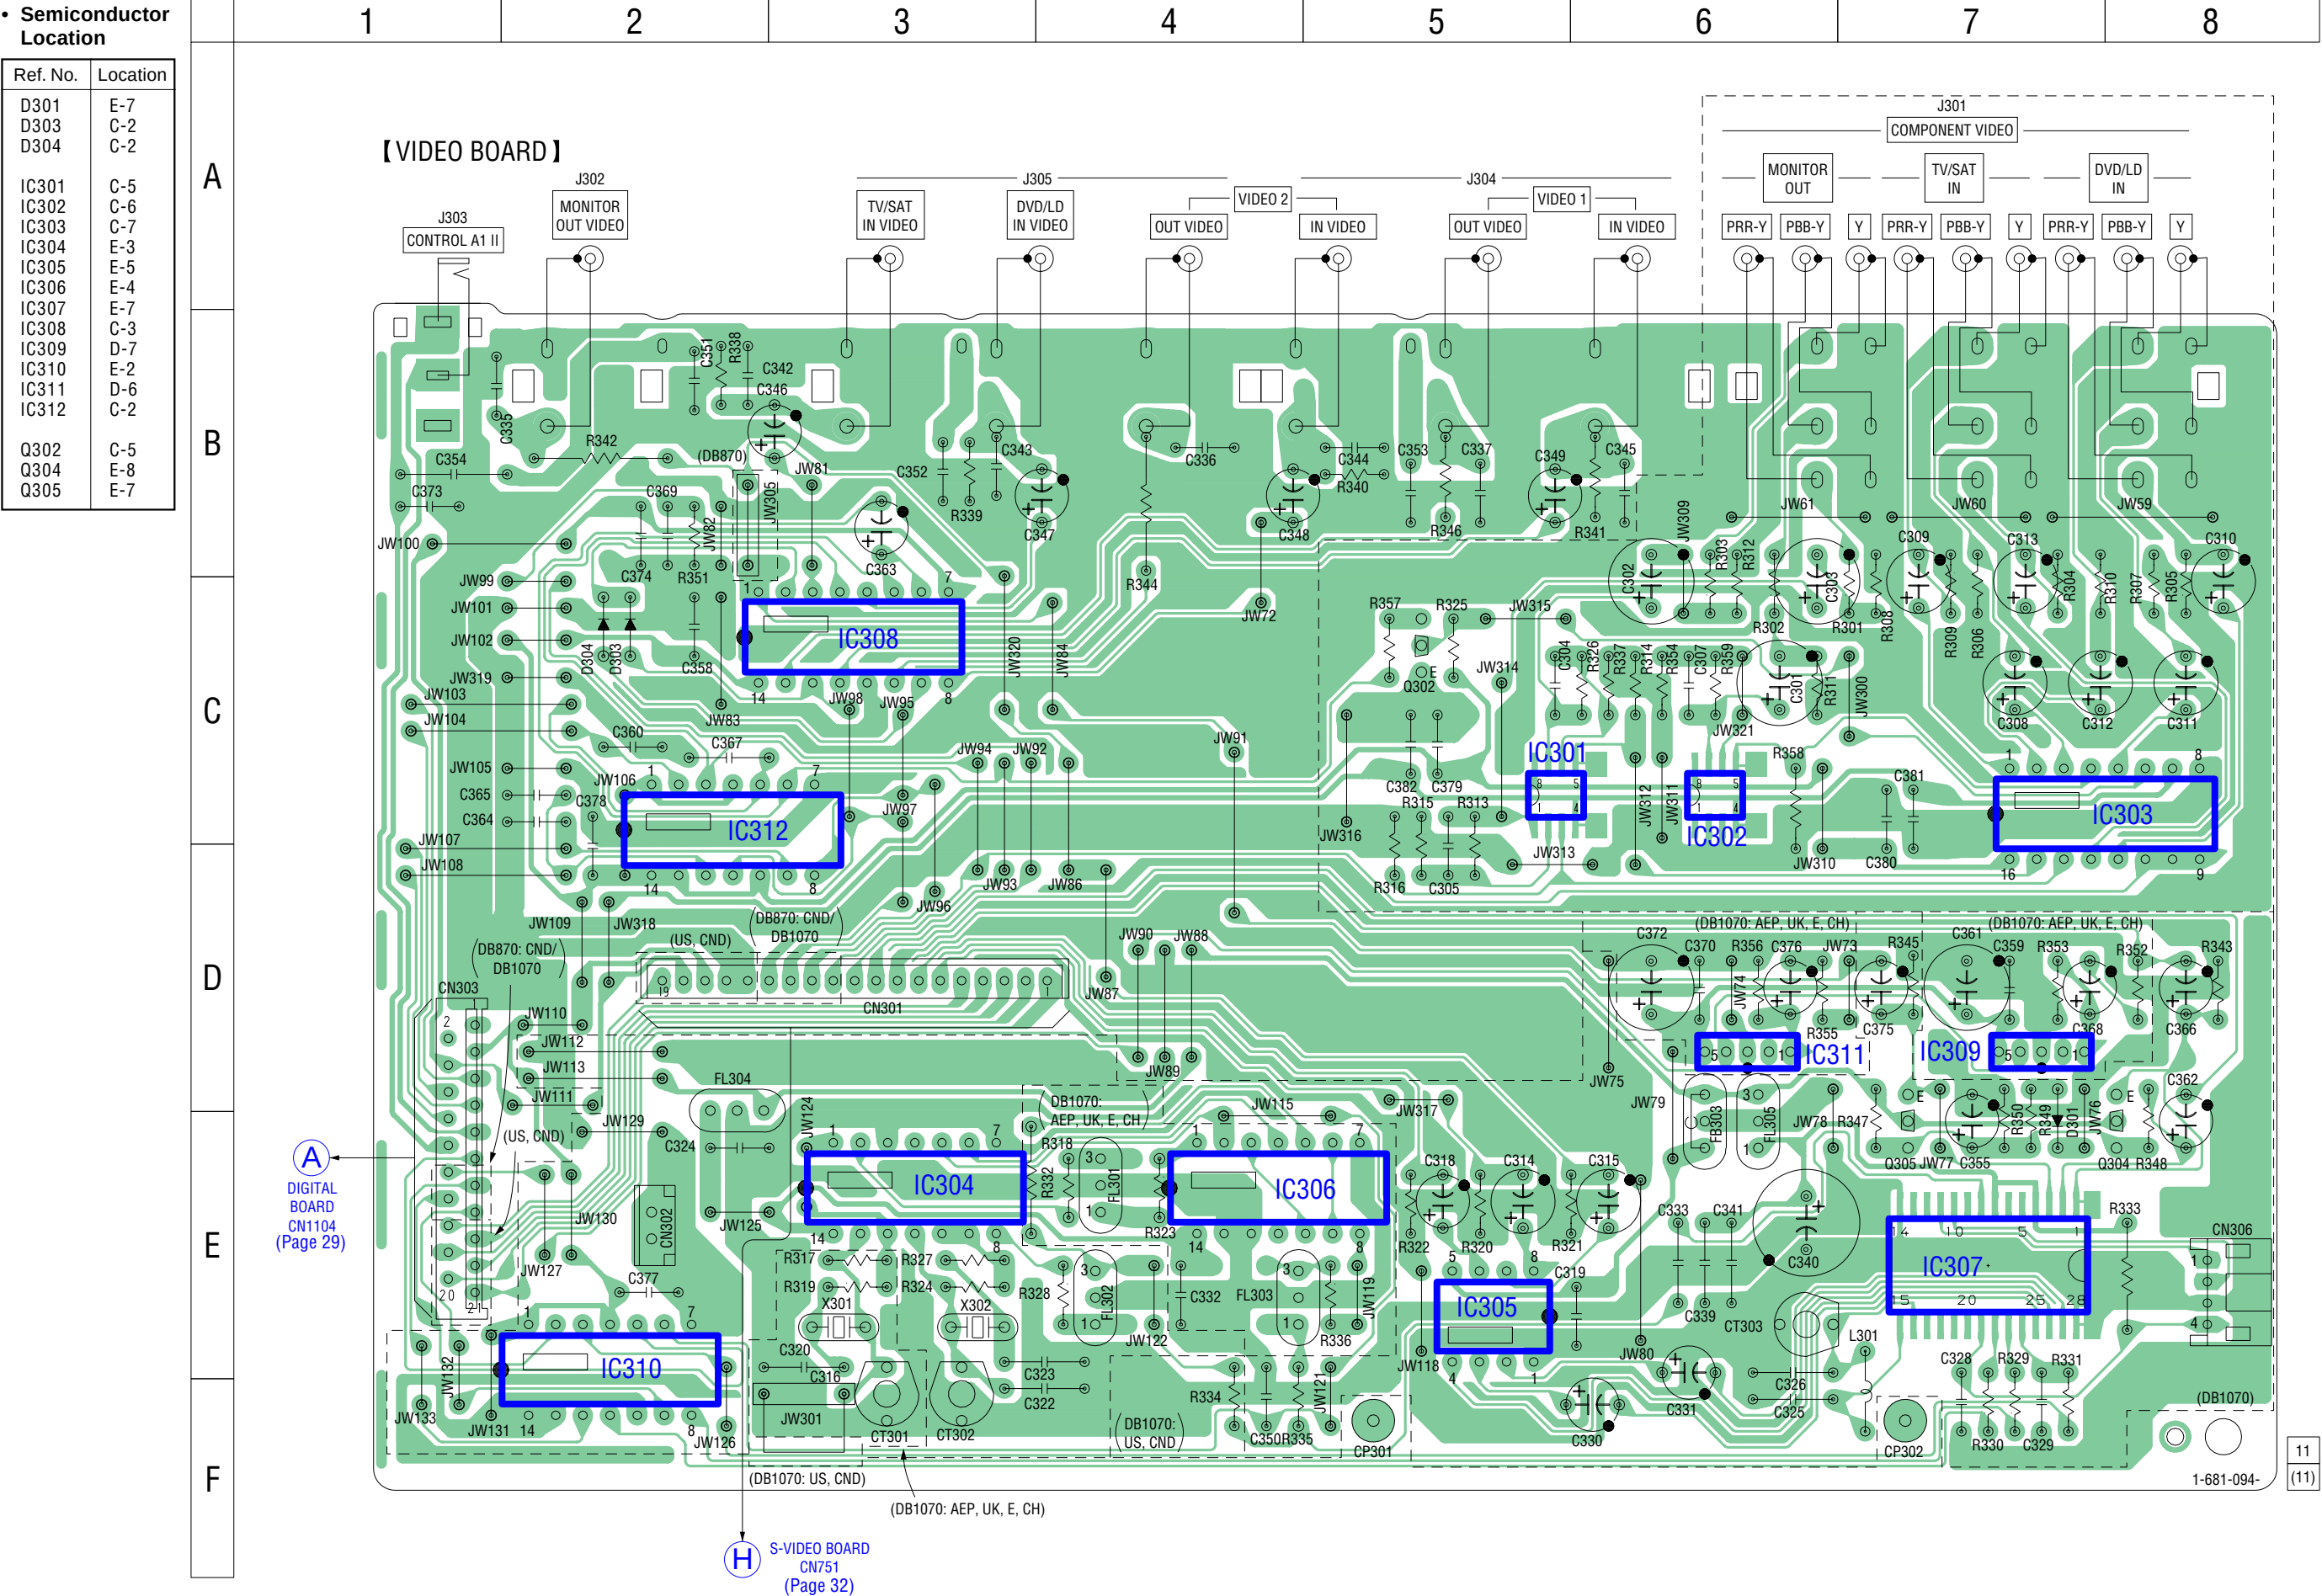

6-16. SCHEMATIC DIAGRAM – VIDEO Board – • See page 46 for Waveforms. • See page 46 for IC Block Diagrams.

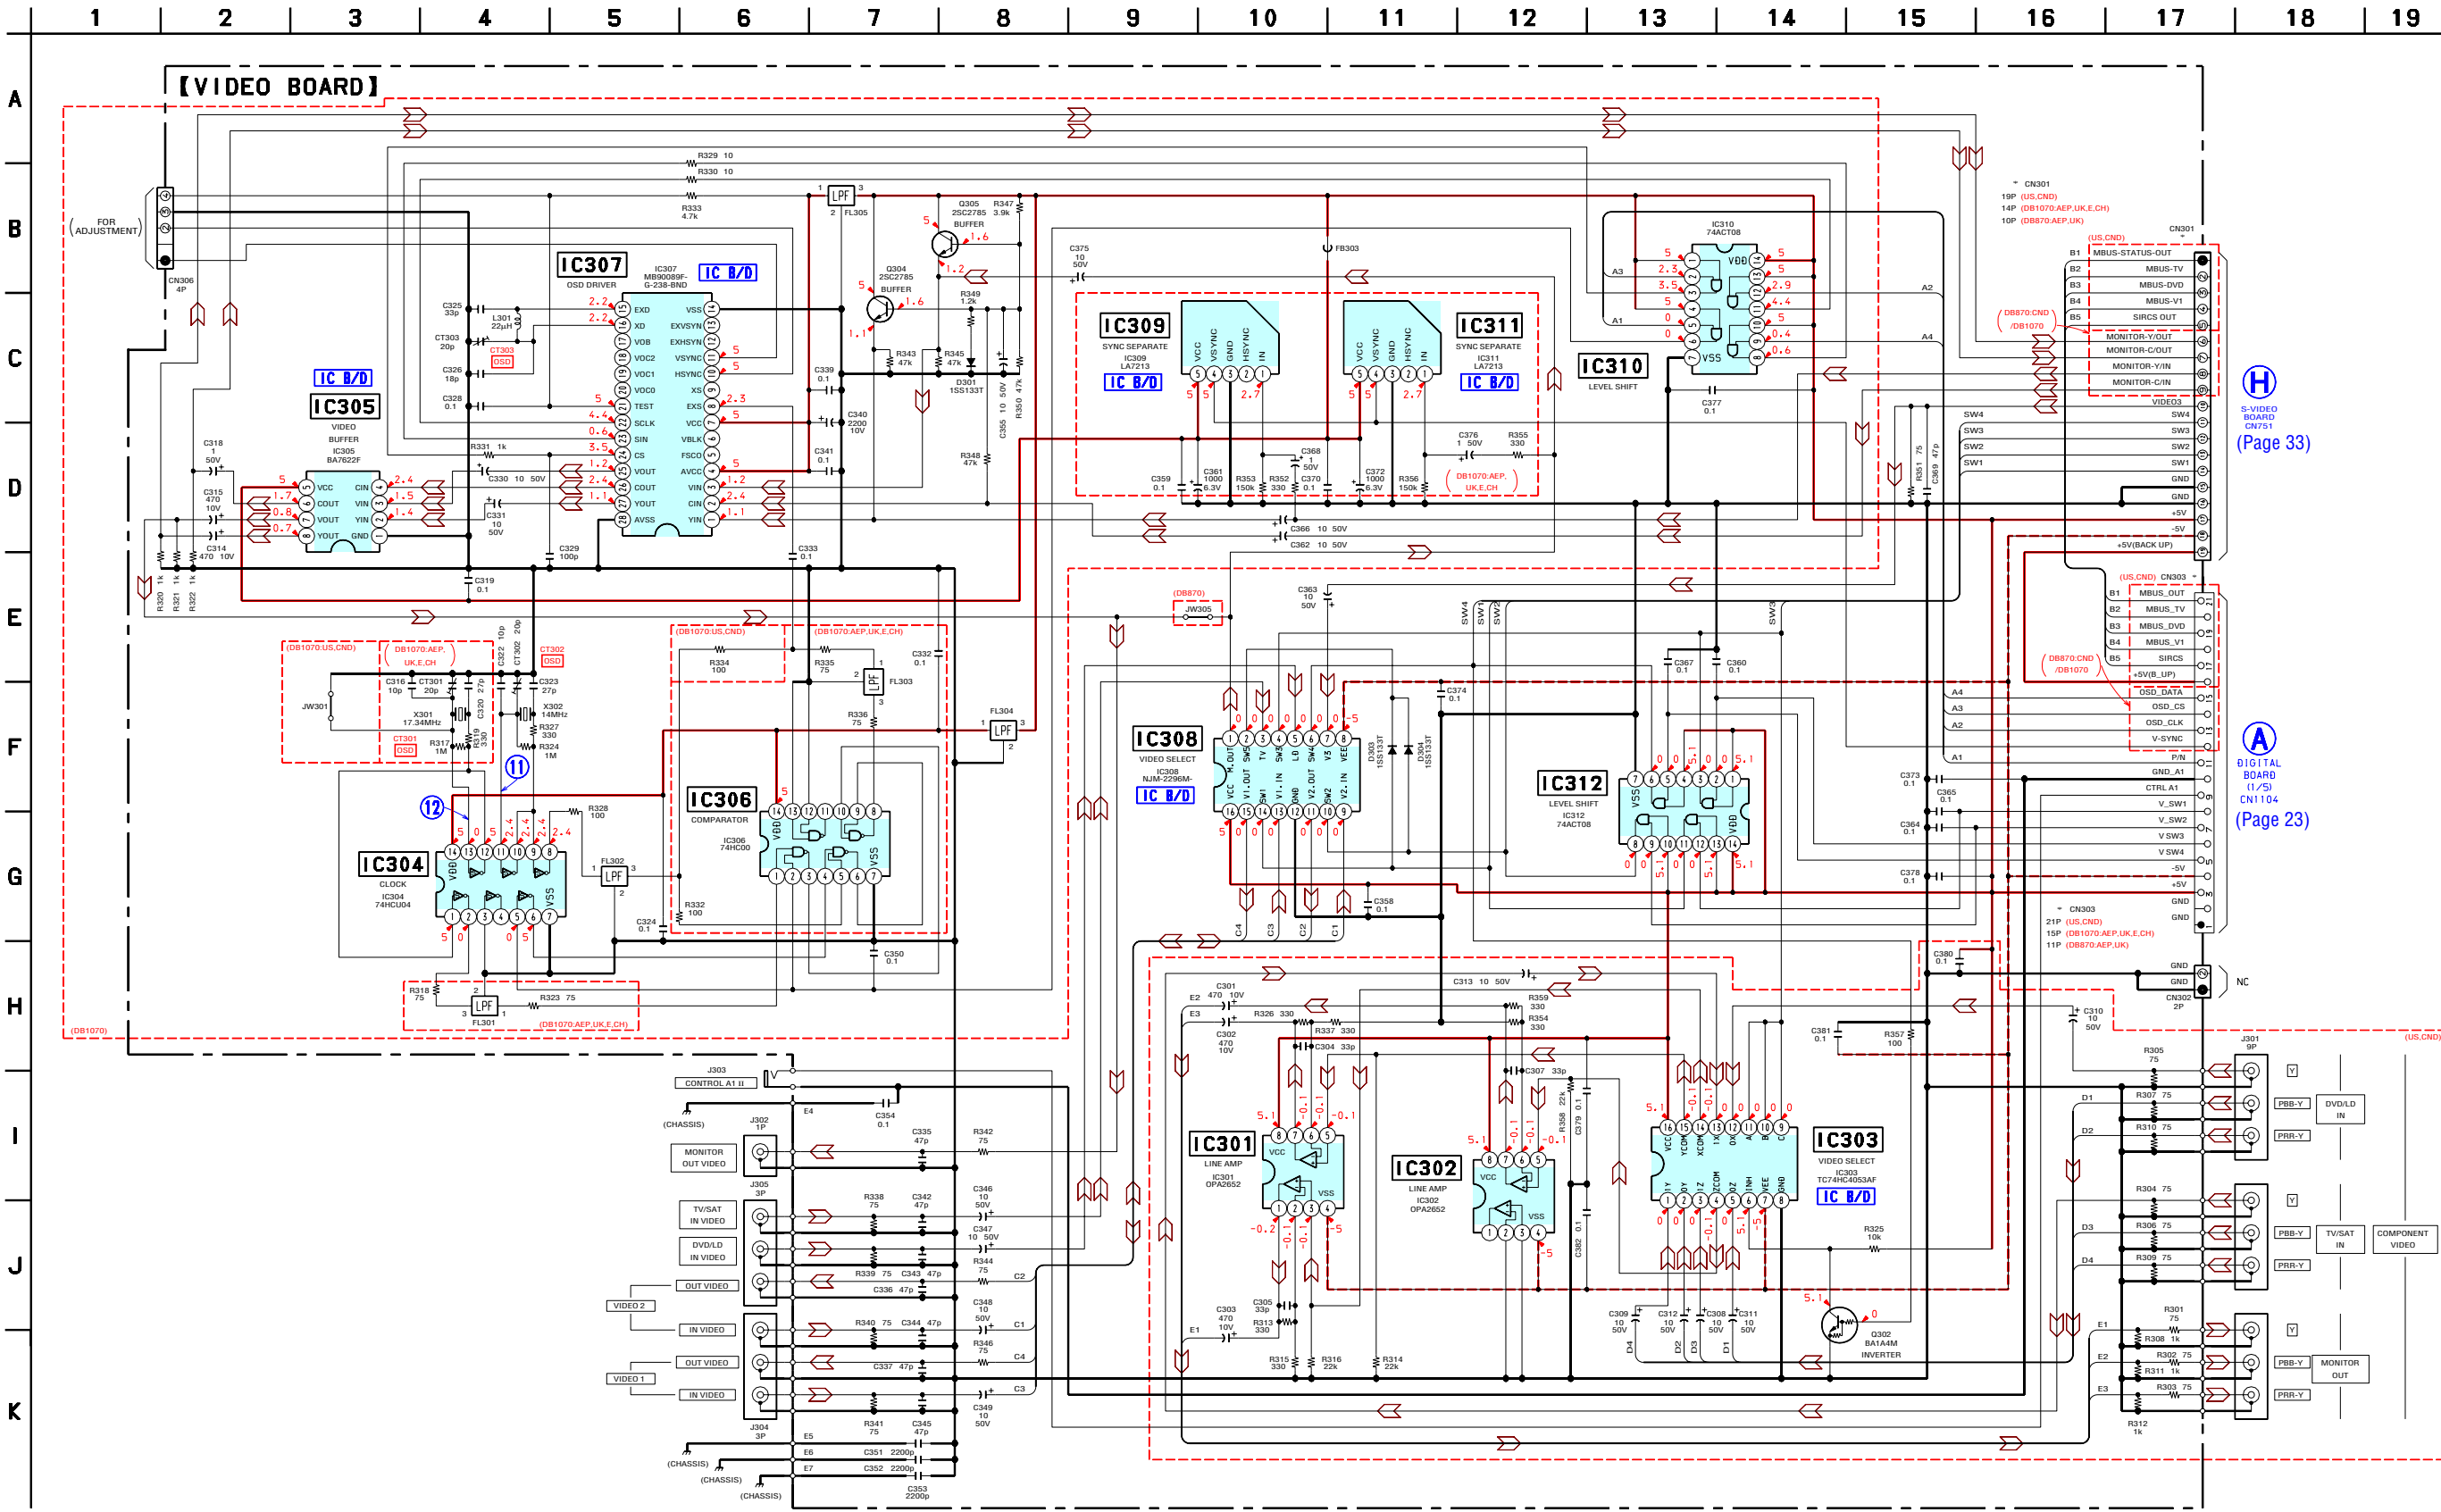


6-17. PRINTED WIRING BOARDS – S-VIDEO/VIDEO AU Boards – • See page 22 for Circuit Boards Location.

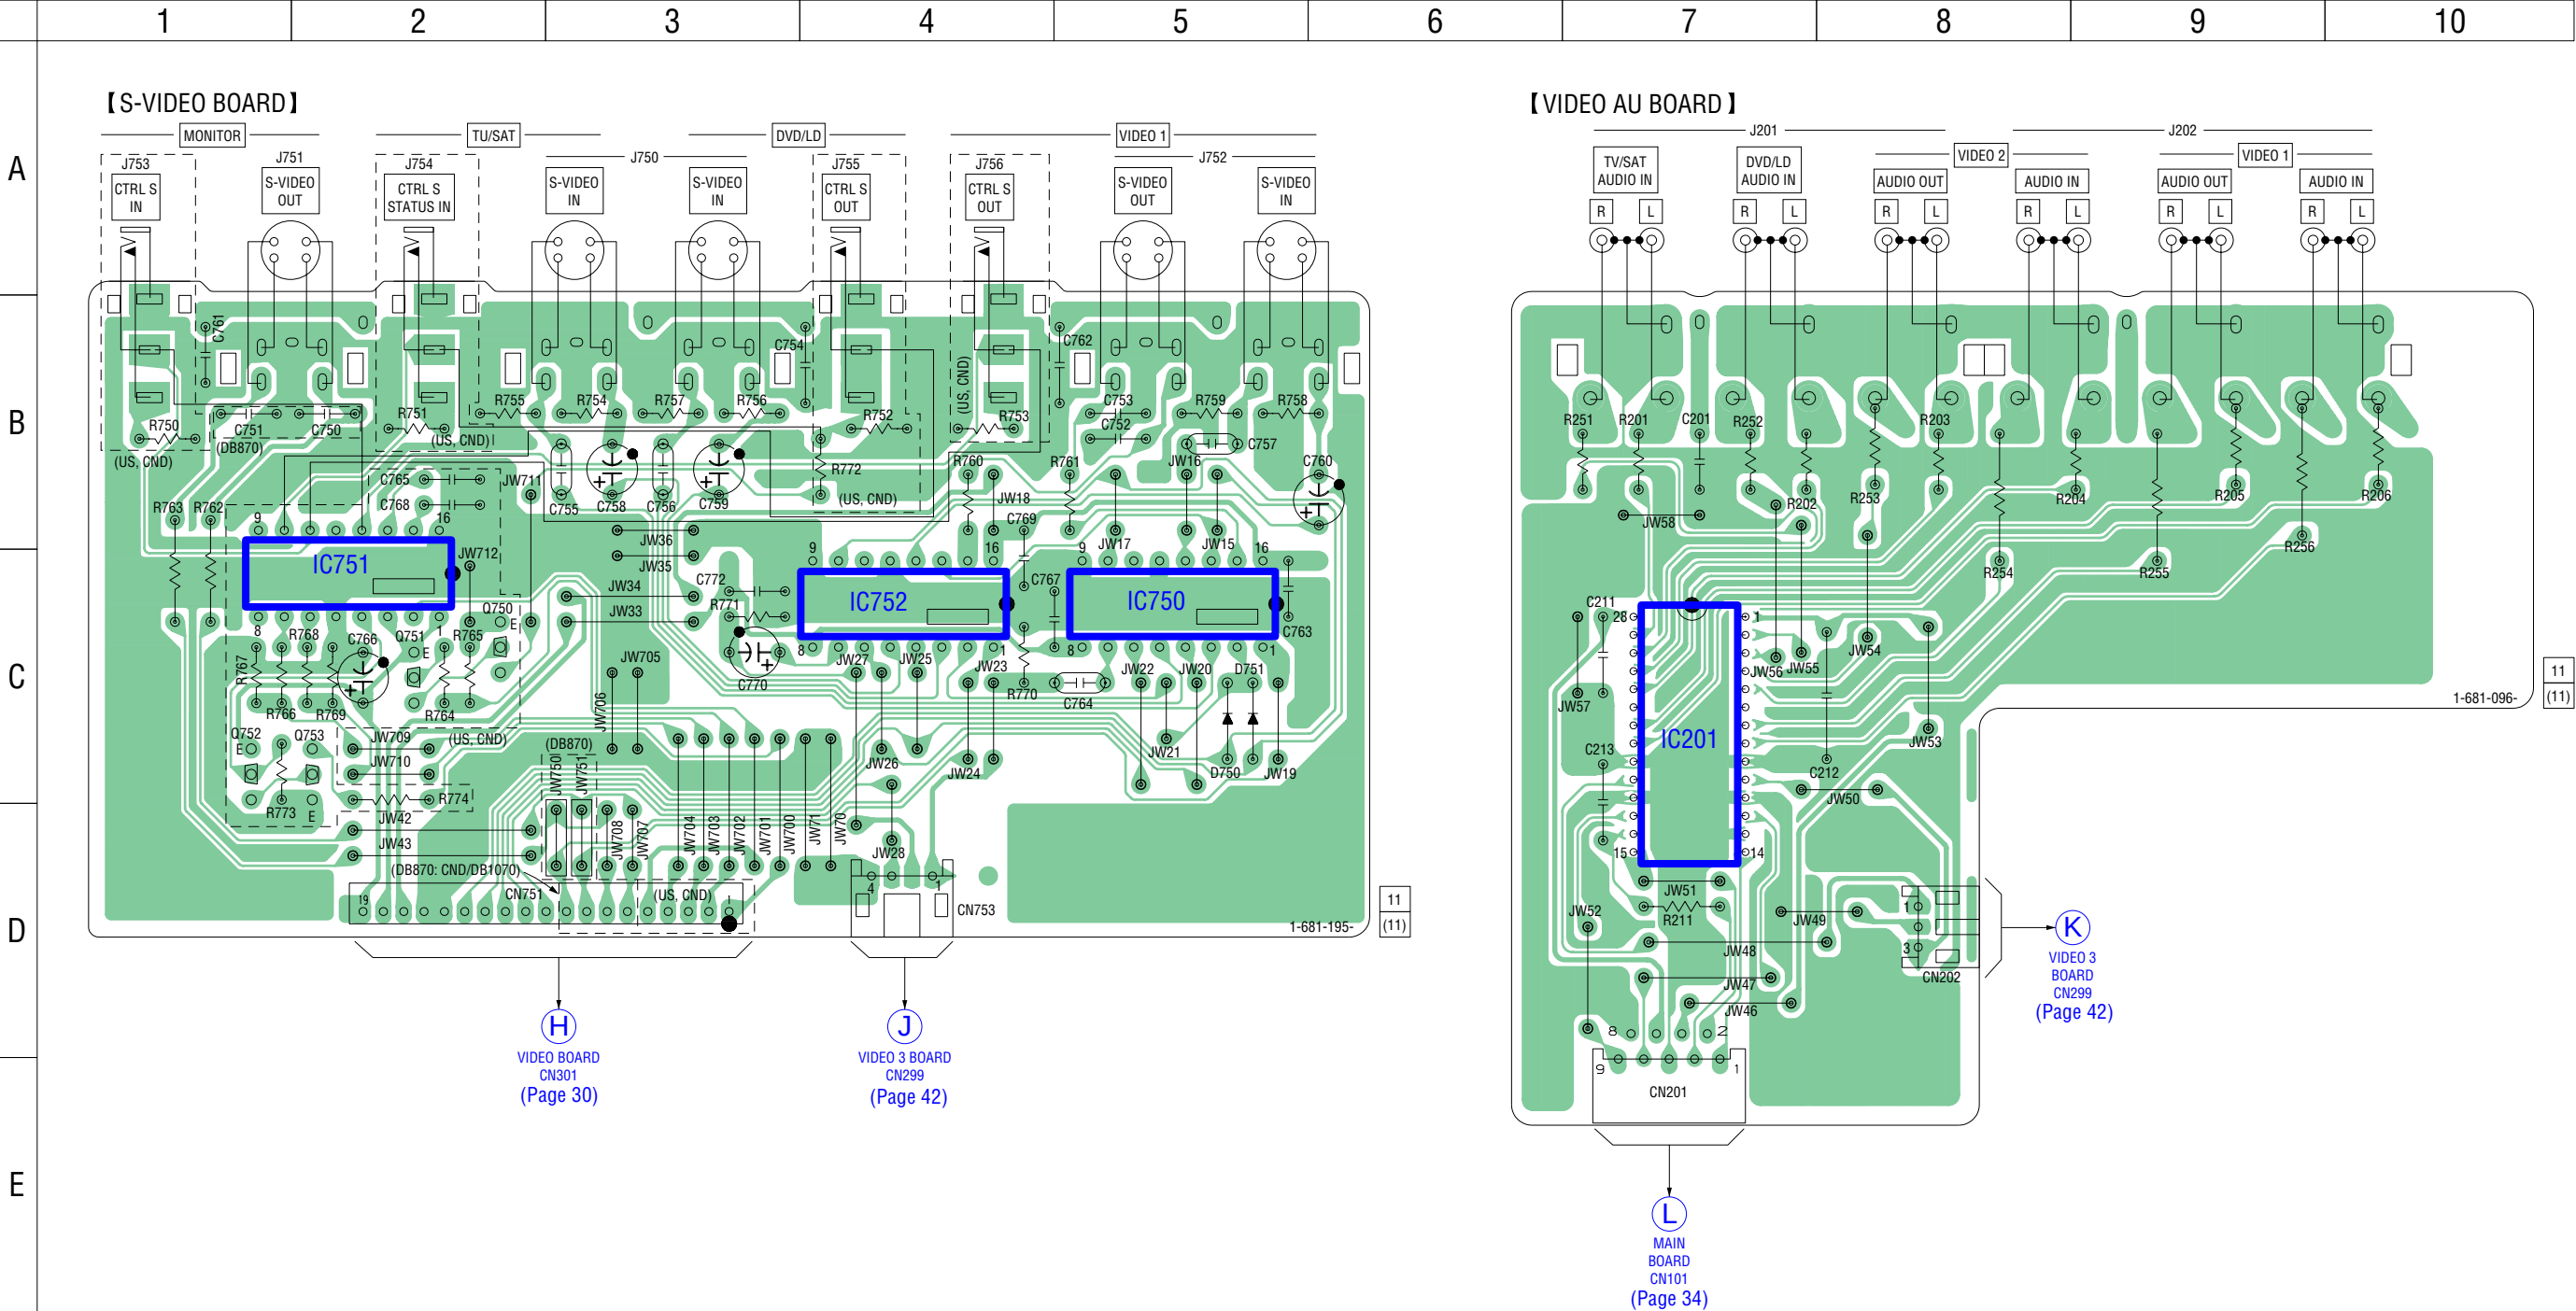


- **Semiconductor Location**

Ref. No.	Location
D750	C-5
D751	C-5
IC201	C-7
IC750	C-5
IC751	C-2
IC752	C-4
Q750	C-2
Q751	C-2
Q752	C-1
Q753	C-2

6-18. SCHEMATIC DIAGRAM – S-VIDEO/VIDEO AU Boards – • See page 46 for IC Block Diagrams.

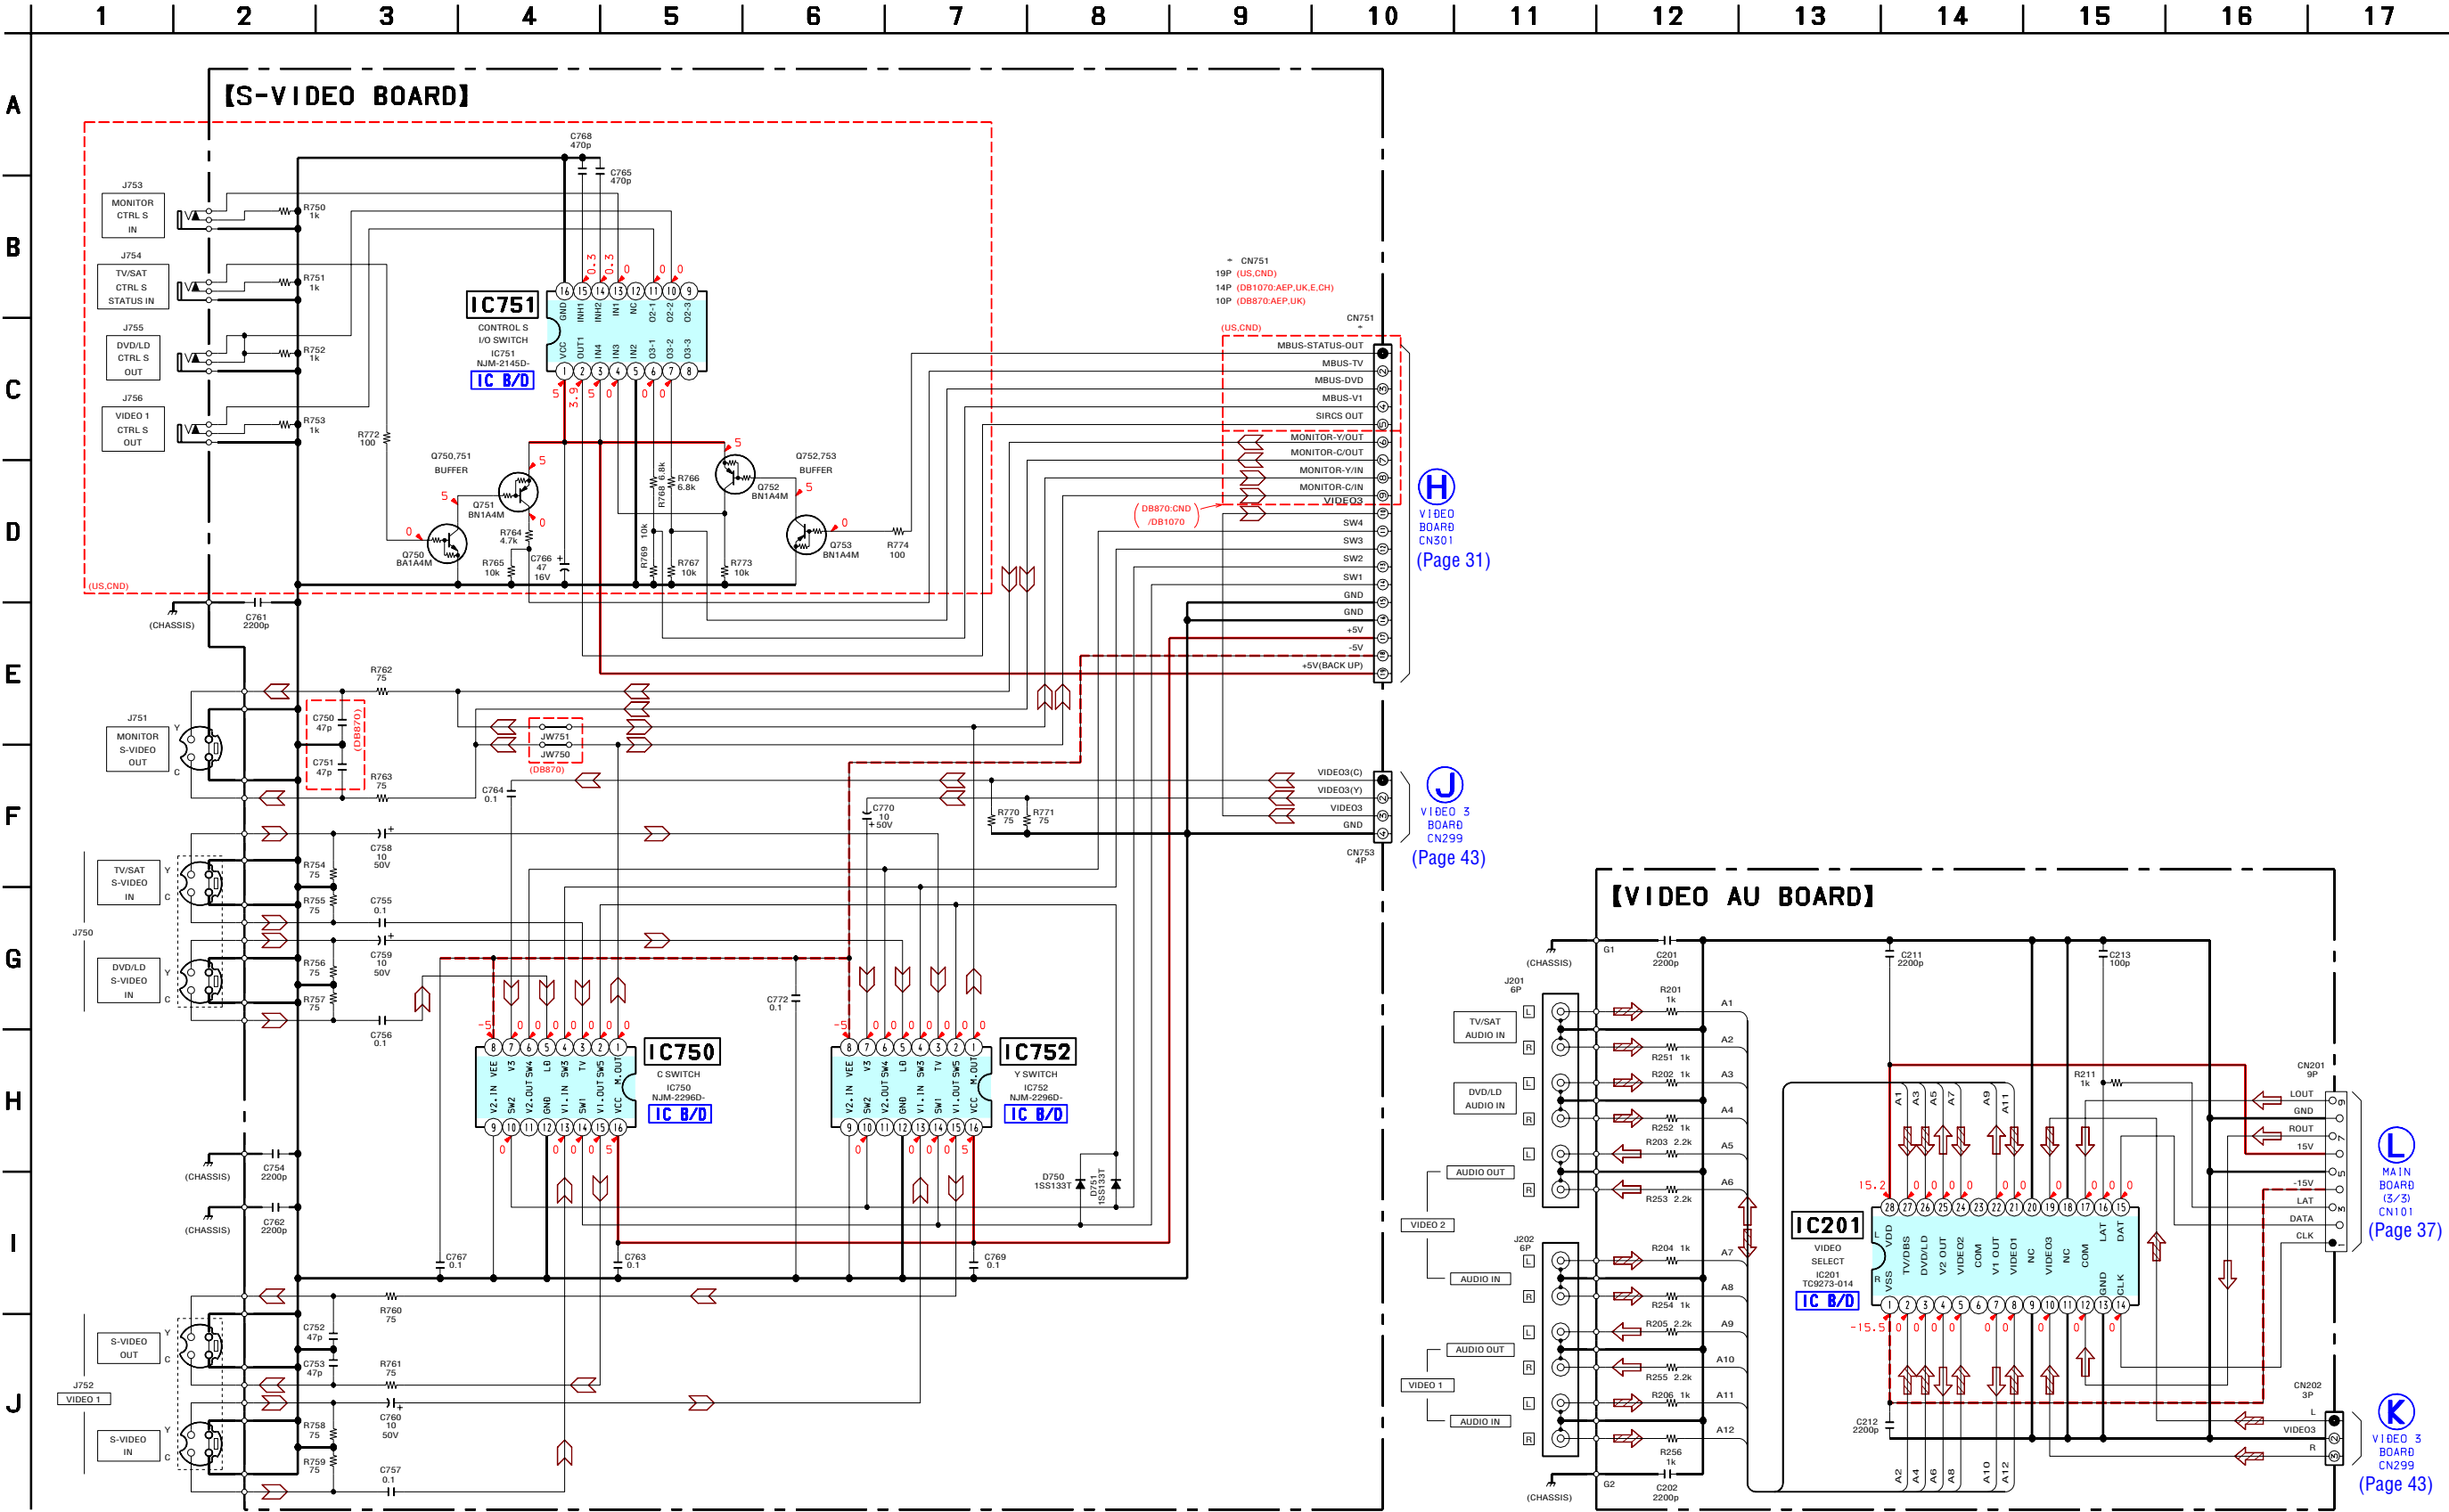


Ref. No.	Location
D301	C-10
D801	F-11
D802	E-3
D803	E-3
D809	D-11
D810	F-11
D811	D-11
D813	D-4
D814	E-9
D815	G-12
D816	F-9
IC101	C-4
IC102	D-7
IC103	C-10
IC104	C-6
IC105	D-9
IC401	G-5
IC402	F-5
IC403	I-7
IC501	G-4
IC502	F-4
IC503	I-4
IC601	G-7
IC602	F-7
IC603	I-11
IC701	G-8
IC702	F-8
IC801	E-13
IC802	E-12
IC804	G-3
IC805	H-3
Q301	C-10
Q401	D-3
Q402	J-8
Q403	J-9
Q451	C-2
Q452	J-6
Q453	J-7
Q501	C-2
Q502	J-3
Q503	J-4
Q551	D-3
Q552	J-4
Q553	J-5
Q601	B-2
Q602	J-10
Q603	J-11
Q651	D-2
Q652	J-12
Q653	J-12
Q701	C-2
Q806	H-12
Q807	C-11
Q808	F-11
Q809	D-11
Q810	H-2
Q811	H-3
Q812	H-3
Q813	C-2
Q815	D-5
Q823	E-8
Q824	F-12
Q825	F-9
Q826	F-11

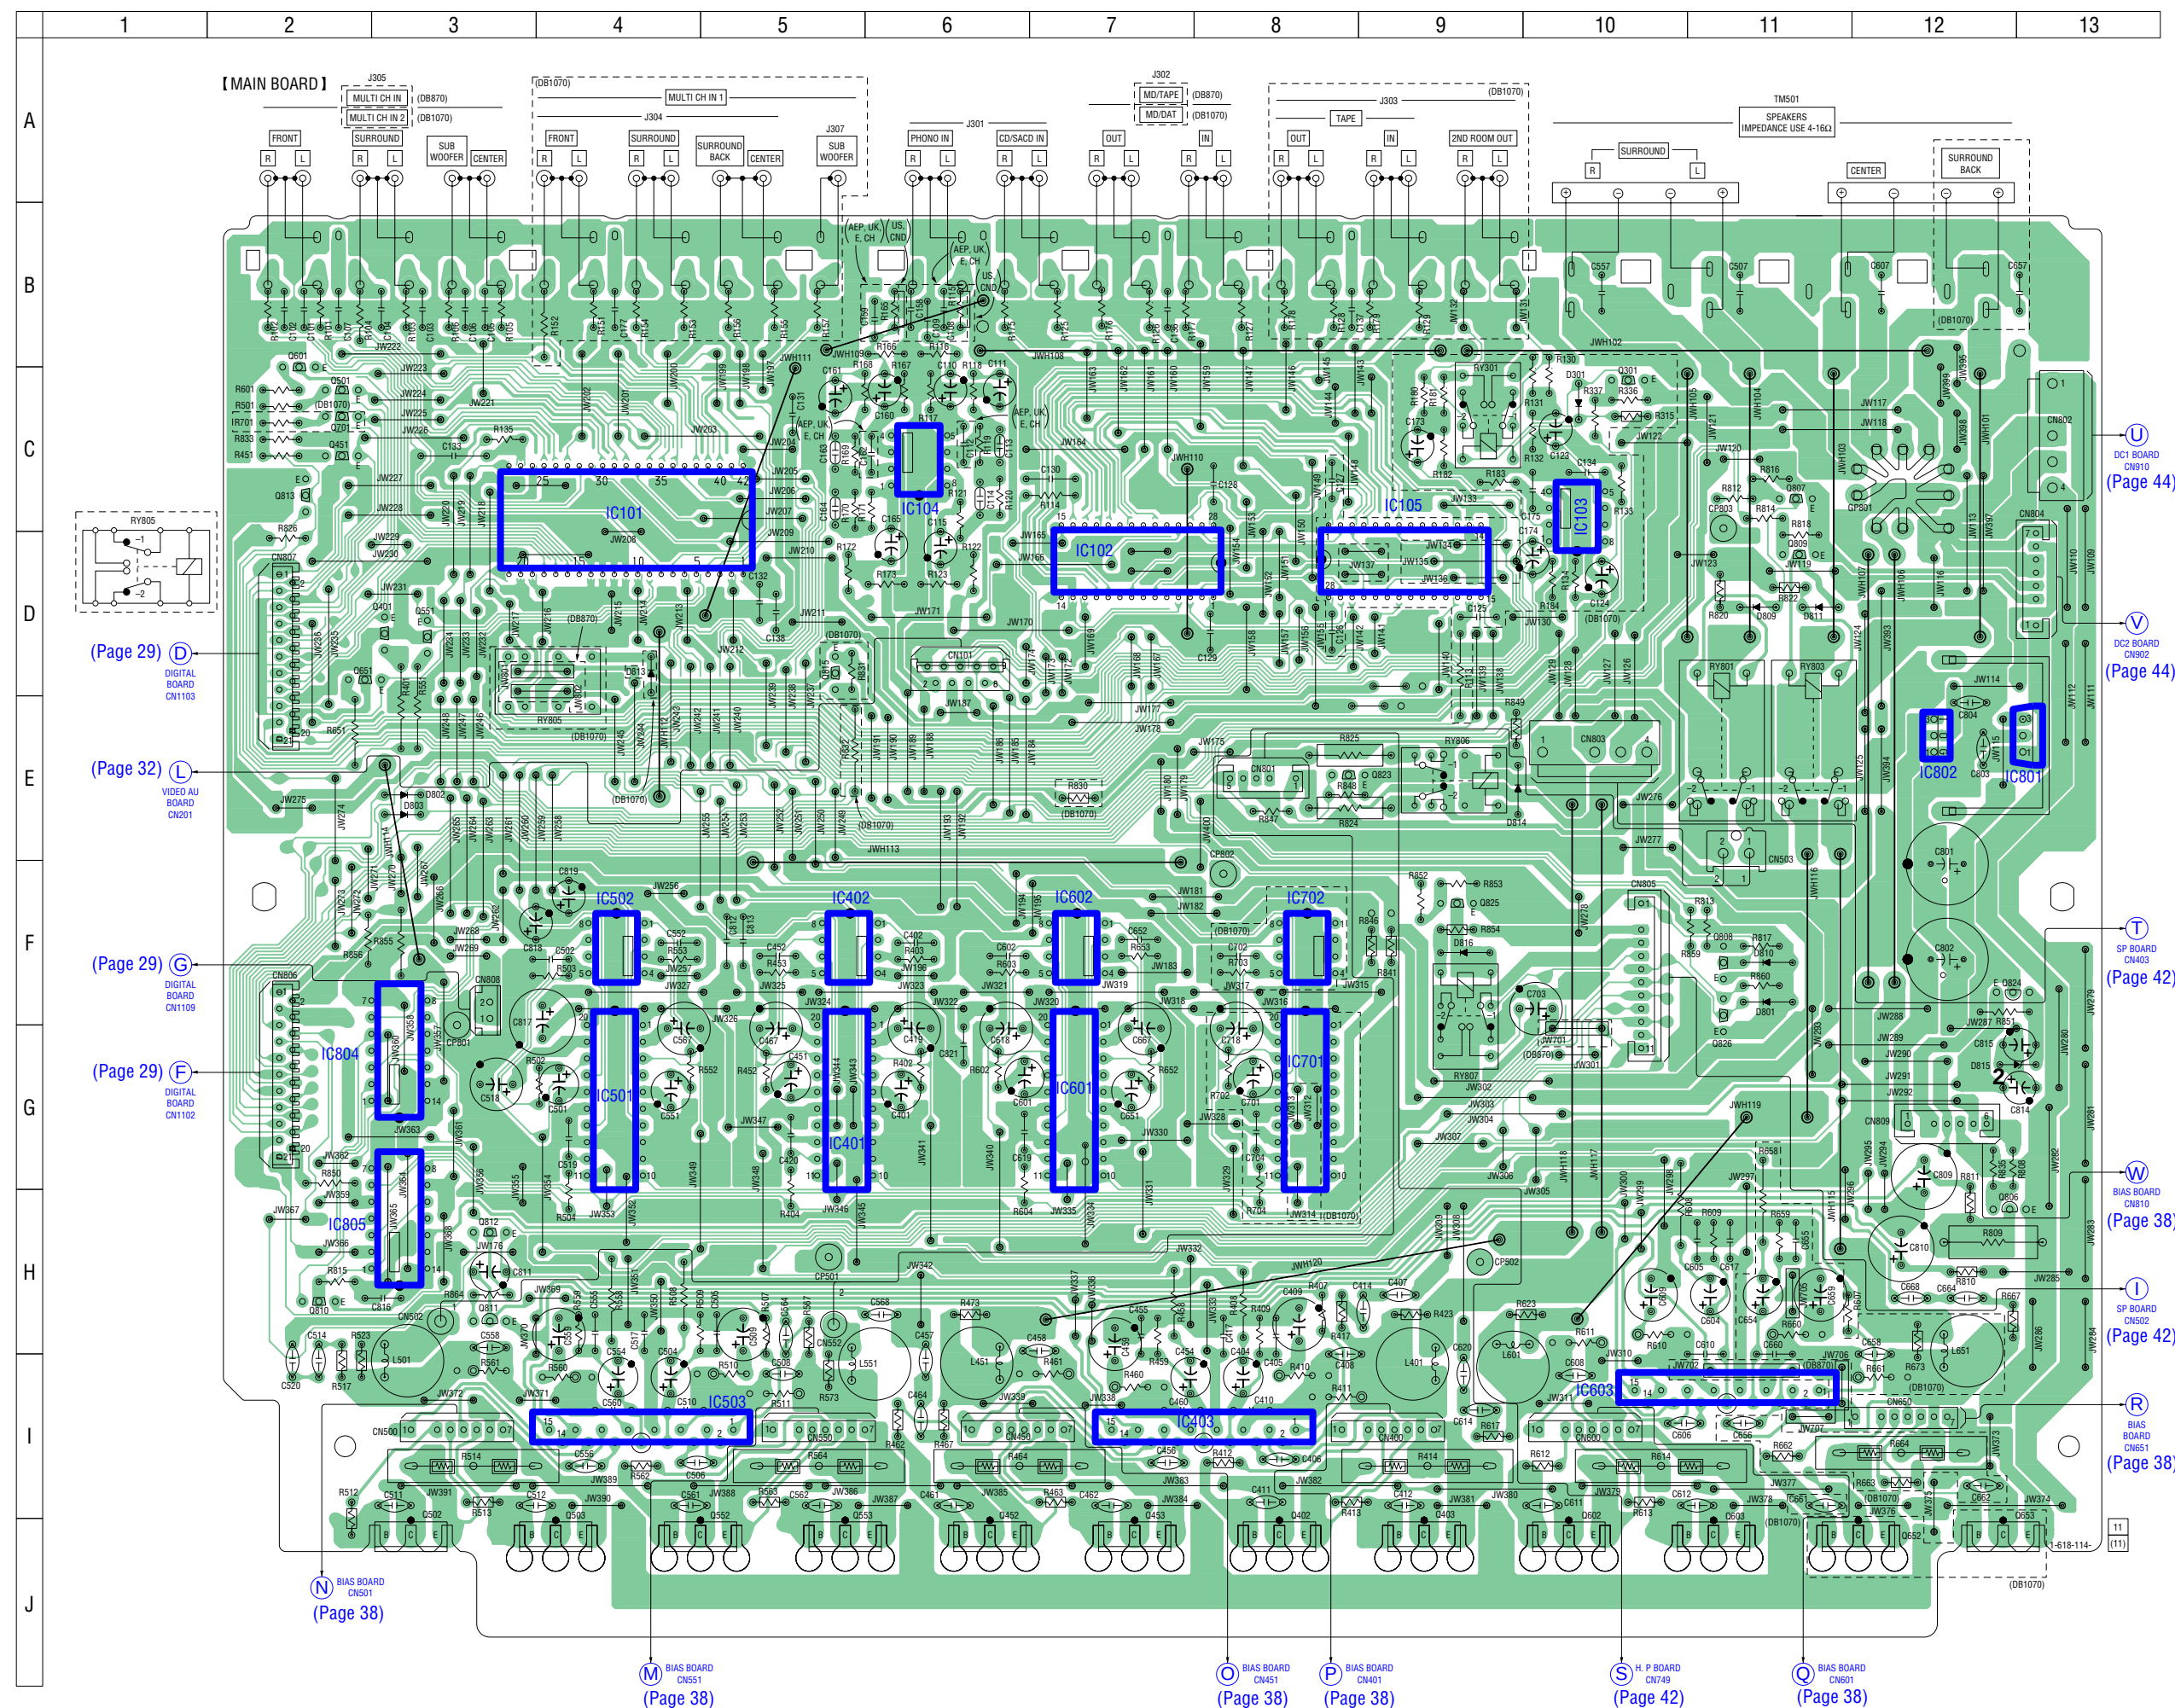


The components identified by mark  or dotted line with mark are critical for safety.
Replace only with part number specified.

 Les composants identifiés par une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



6-22. SCHEMATIC DIAGRAM – MAIN Board (3/3) – • See page 46 for IC Block Diagrams.

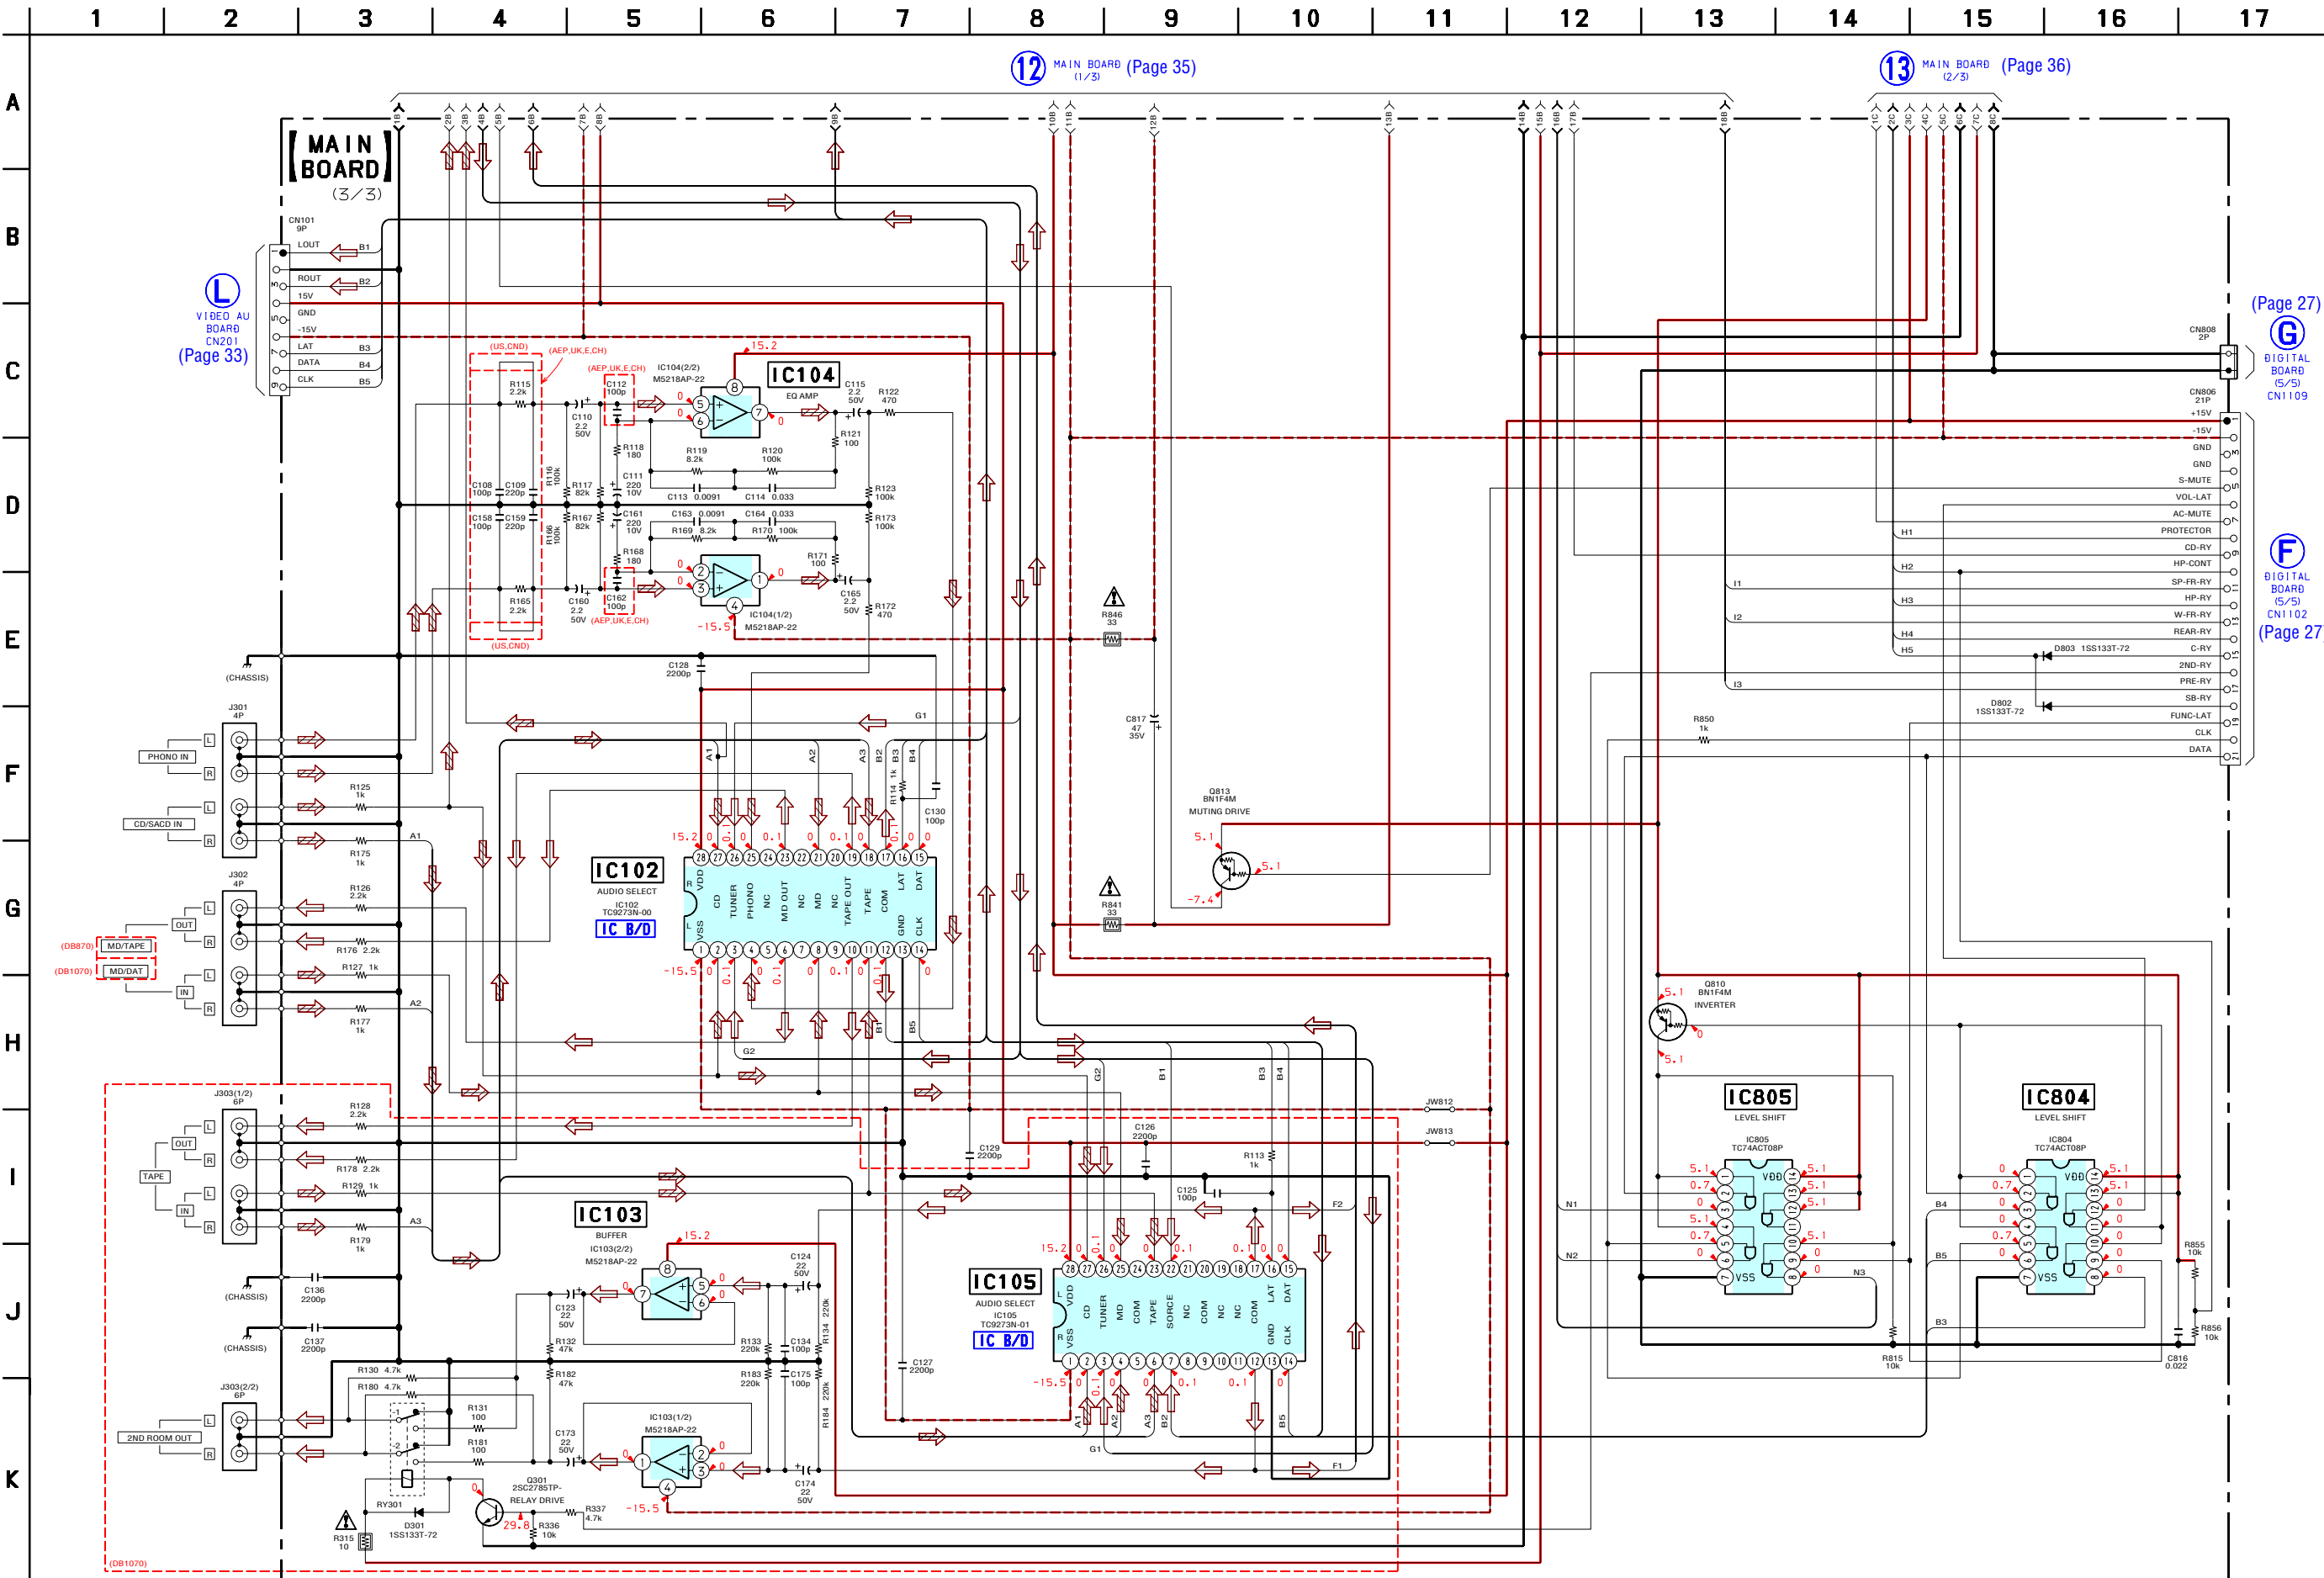

(Page 27)
G
DIGITAL BOARD (5/5)
CN1109


(Page 27)
F
DIGITAL BOARD (5/5)
CN1102

以阴影和△标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


6-23. PRINTED WIRING BOARD – BIAS Board – • See page 22 for Circuit Boards Location.

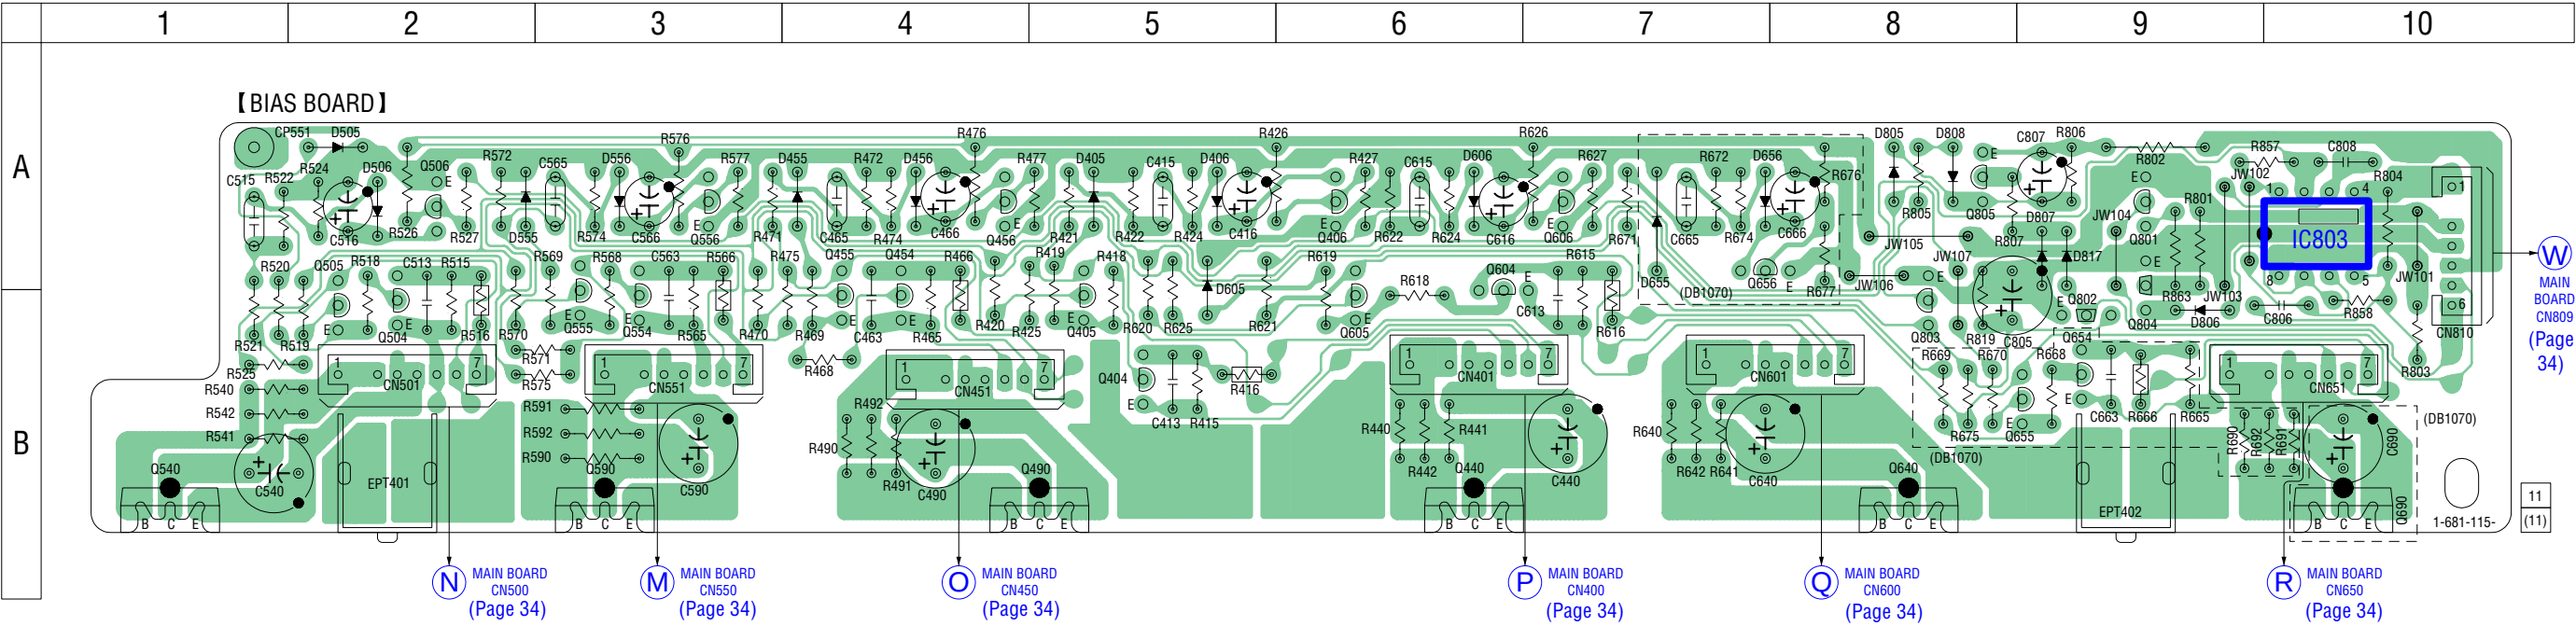


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D405	A-5	Q455	B-4
D406	A-5	Q456	A-4
D455	A-4	Q490	B-5
D456	A-4	Q504	B-2
D505	A-2	Q505	B-2
D506	A-2	Q506	A-2
D555	A-2	Q540	B-1
D556	A-3	Q554	B-3
D605	A-5	Q555	B-3
D606	A-6	Q556	A-3
D655	A-7	Q590	B-3
D656	A-7	Q604	A-6
D805	A-8	Q605	B-6
D806	B-9	Q606	A-7
D807	A-9	Q640	B-8
D808	A-8	Q654	B-9
D817	A-9	Q655	B-9
		Q656	A-7
IC803	A-10	Q690	B-10
		Q801	A-9
Q404	B-5	Q802	B-9
Q405	B-5	Q803	B-8
Q406	A-6	Q804	A-9
Q440	B-6	Q805	A-8
Q454	B-4		

6-24. SCHEMATIC DIAGRAM - BIAS Board -

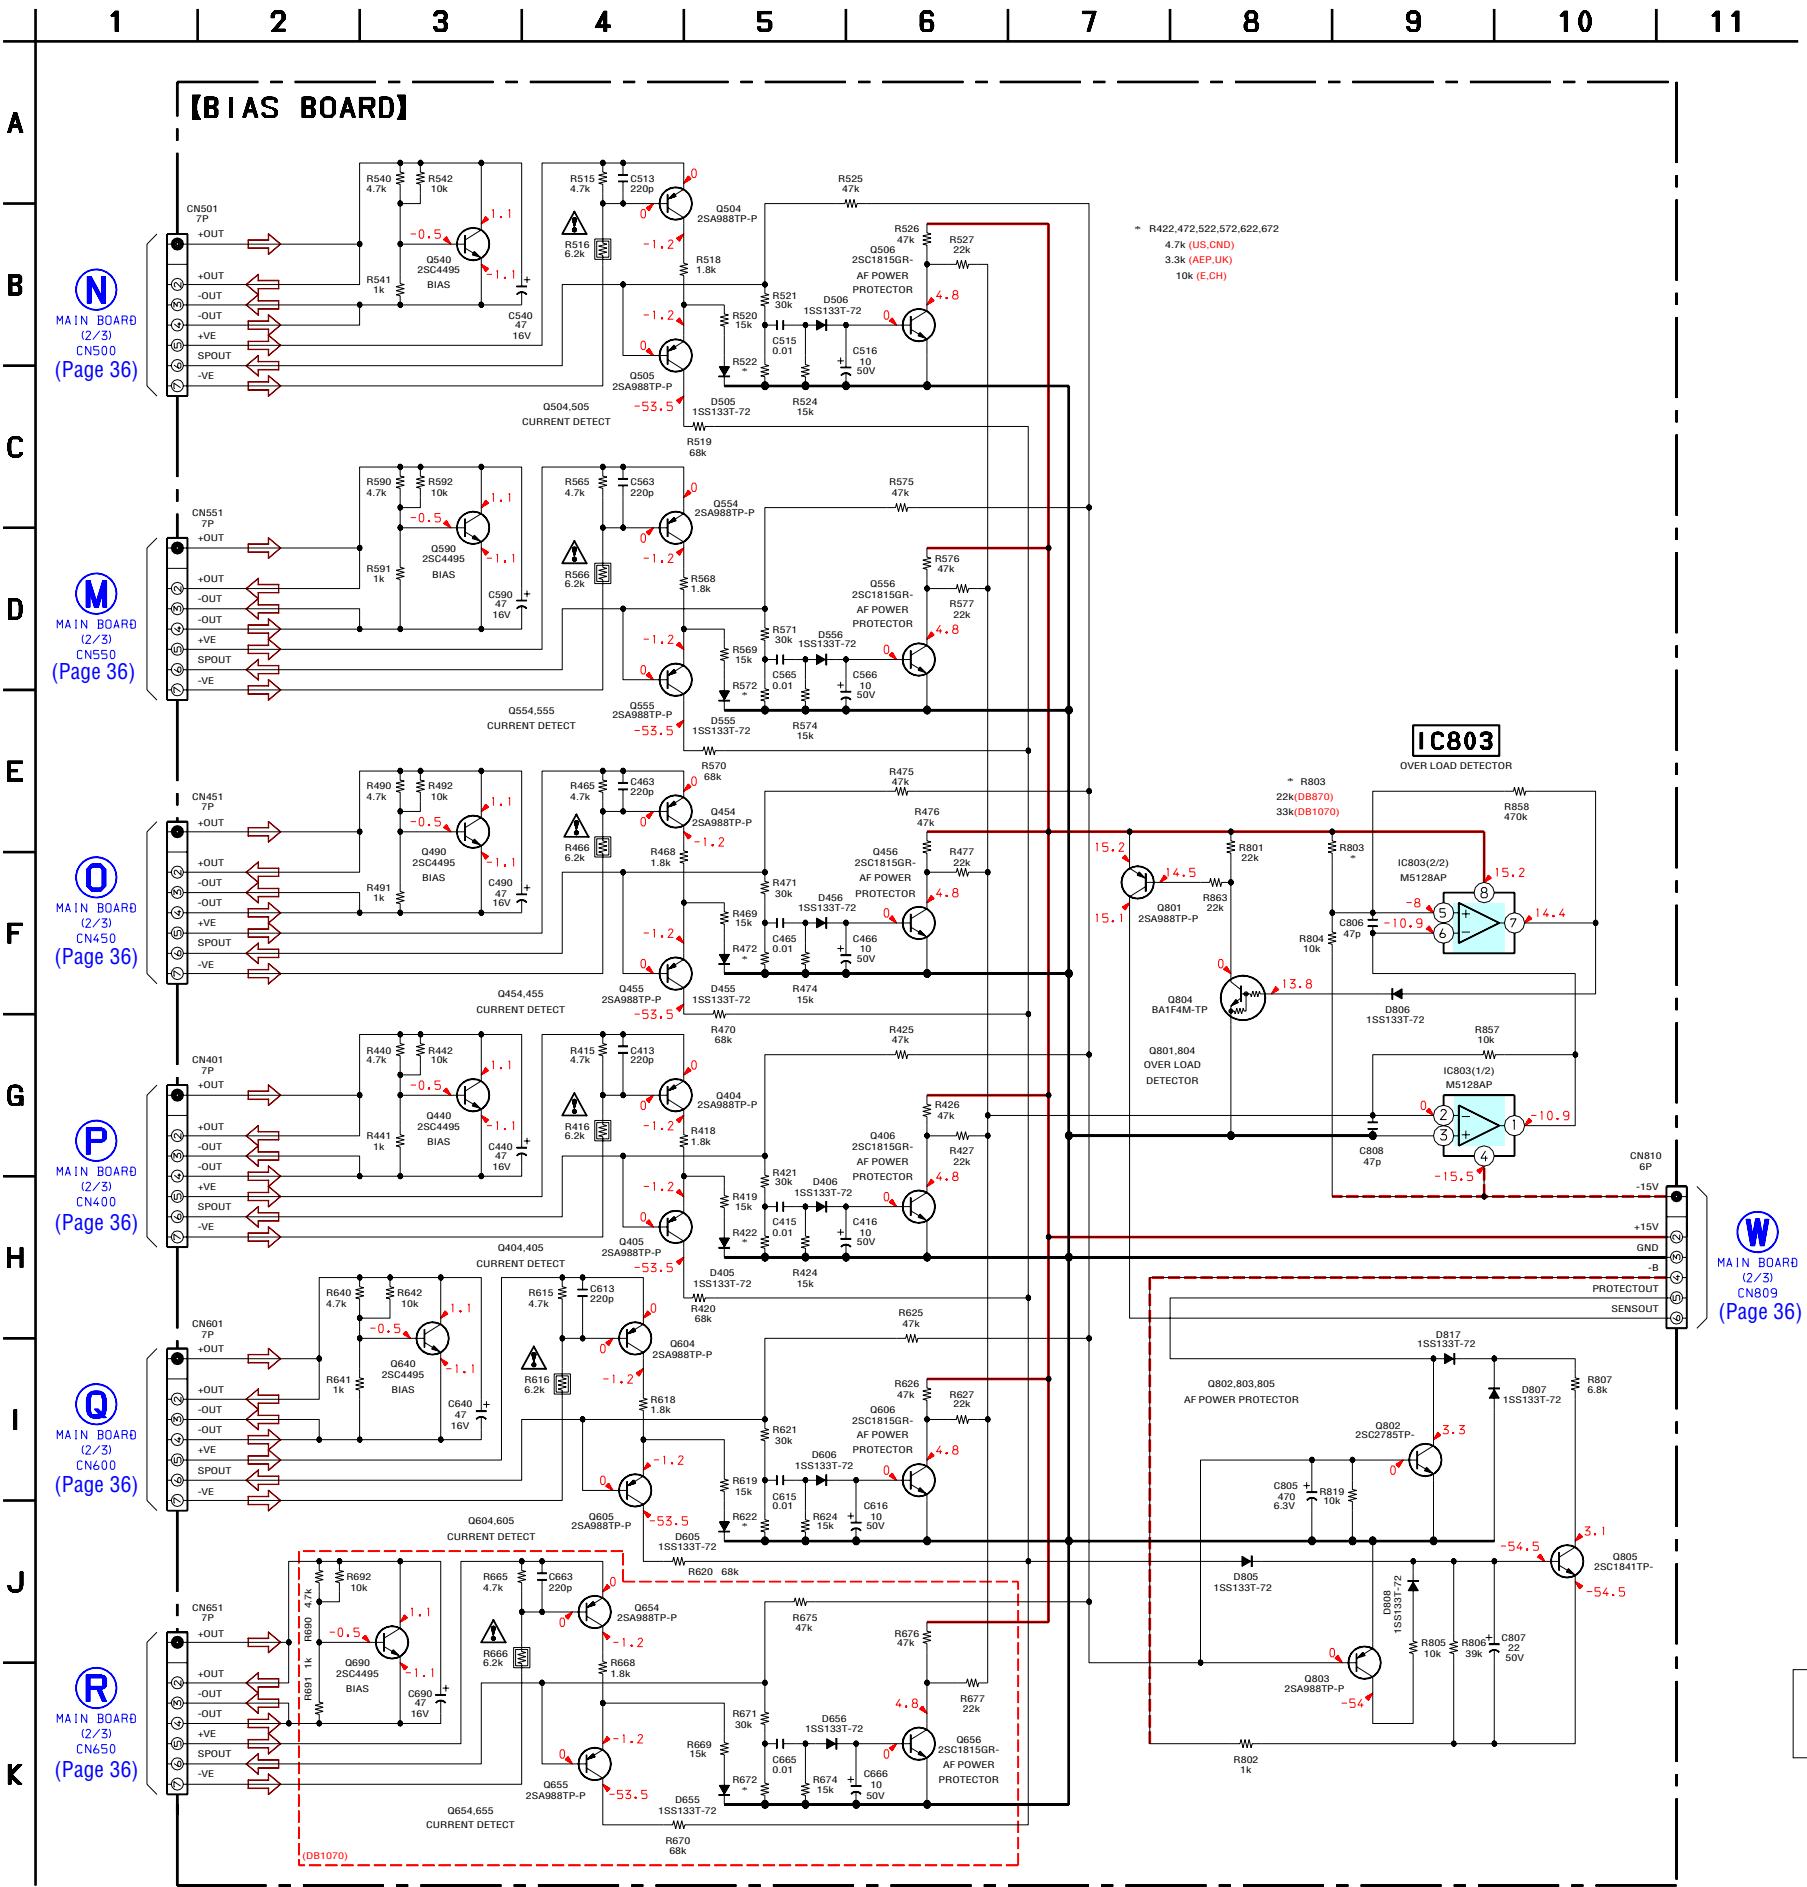

6-25. PRINTED WIRING BOARDS – DISP/SW Boards – • See page 22 for Circuit Boards Location.

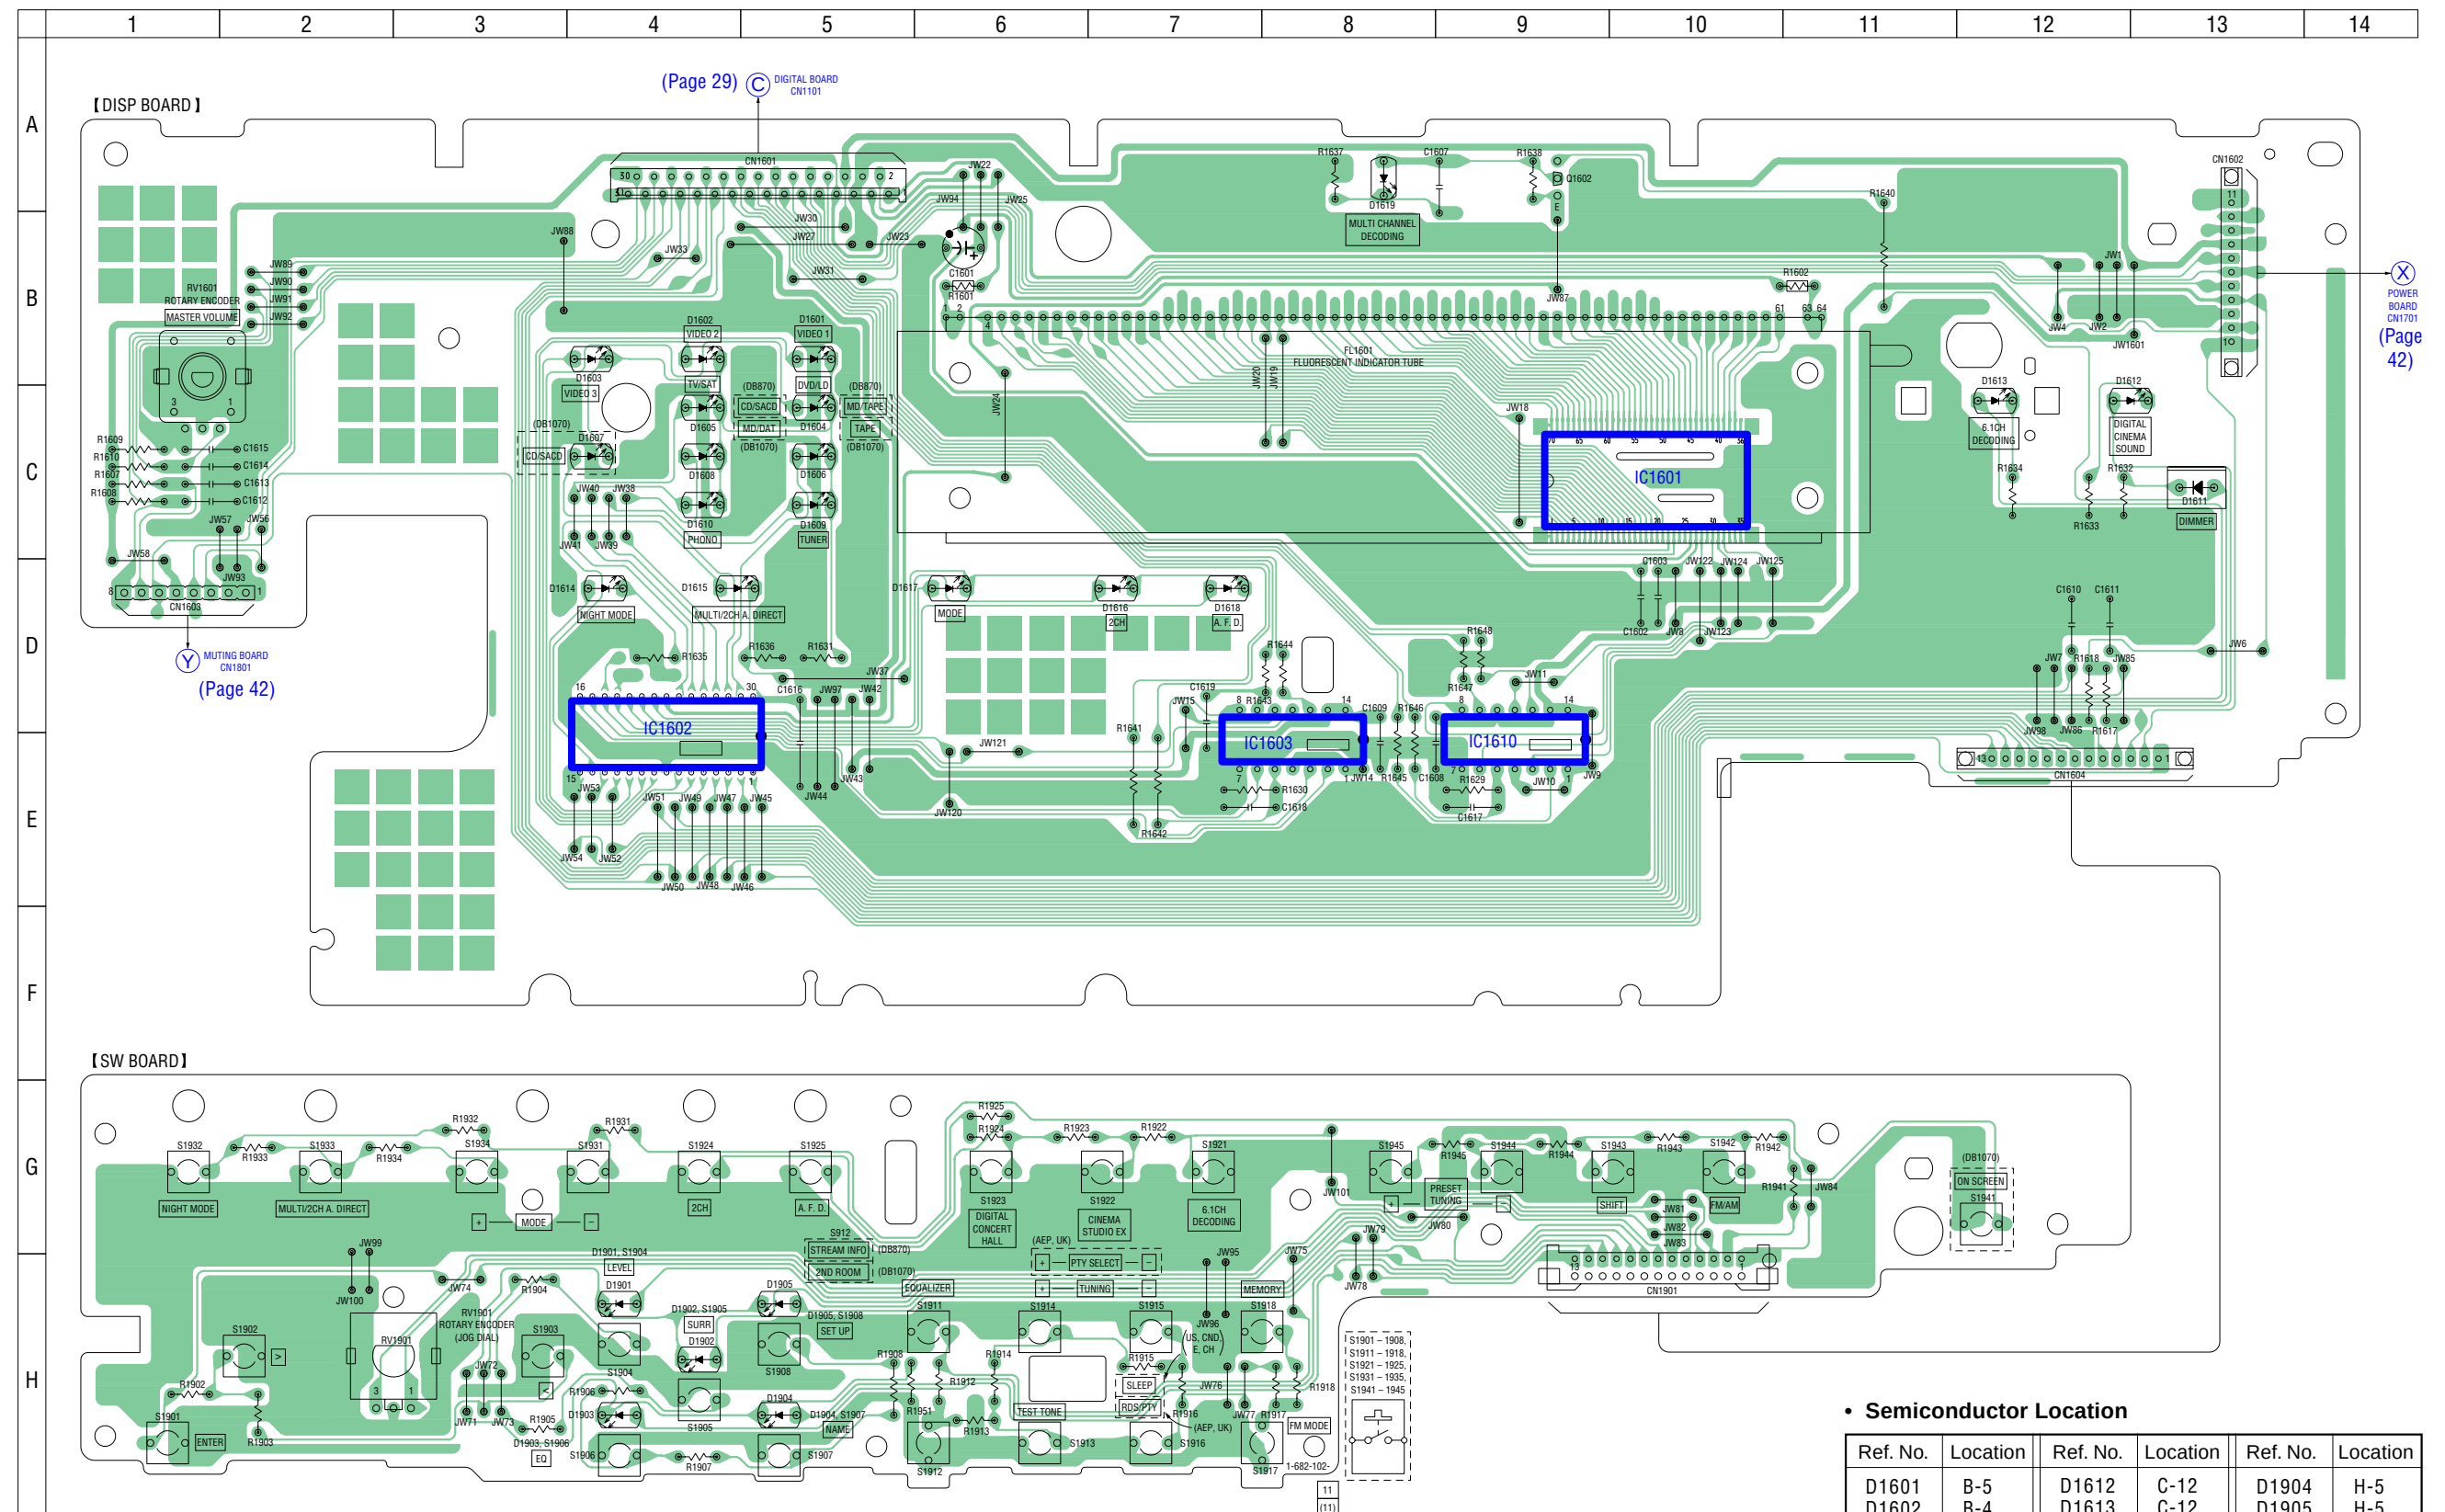


- **Semiconductor Location**


Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1601	B-5	D1612	C-12	D1904	H-5
D1602	B-4	D1613	C-12	D1905	H-5
D1603	B-4	D1614	D-4		
D1604	C-5	D1615	D-4	IC1601	C-10
D1605	C-4	D1616	D-7	IC1602	E-4
D1606	C-5	D1617	D-6	IC1603	E-8
D1607	C-4	D1618	D-7	IC1610	E-9
D1608	C-4	D1619	A-8		
D1609	C-5	D1901	H-4	Q1602	A-9
D1610	C-4	D1902	H-4		
D1611	C-13	D1903	H-4		



6-27. PRINTED WIRING BOARDS – H.P/MUTING/POWER/SP/VIDEO 3 Boards – • See page 22 for Circuit Boards Location.

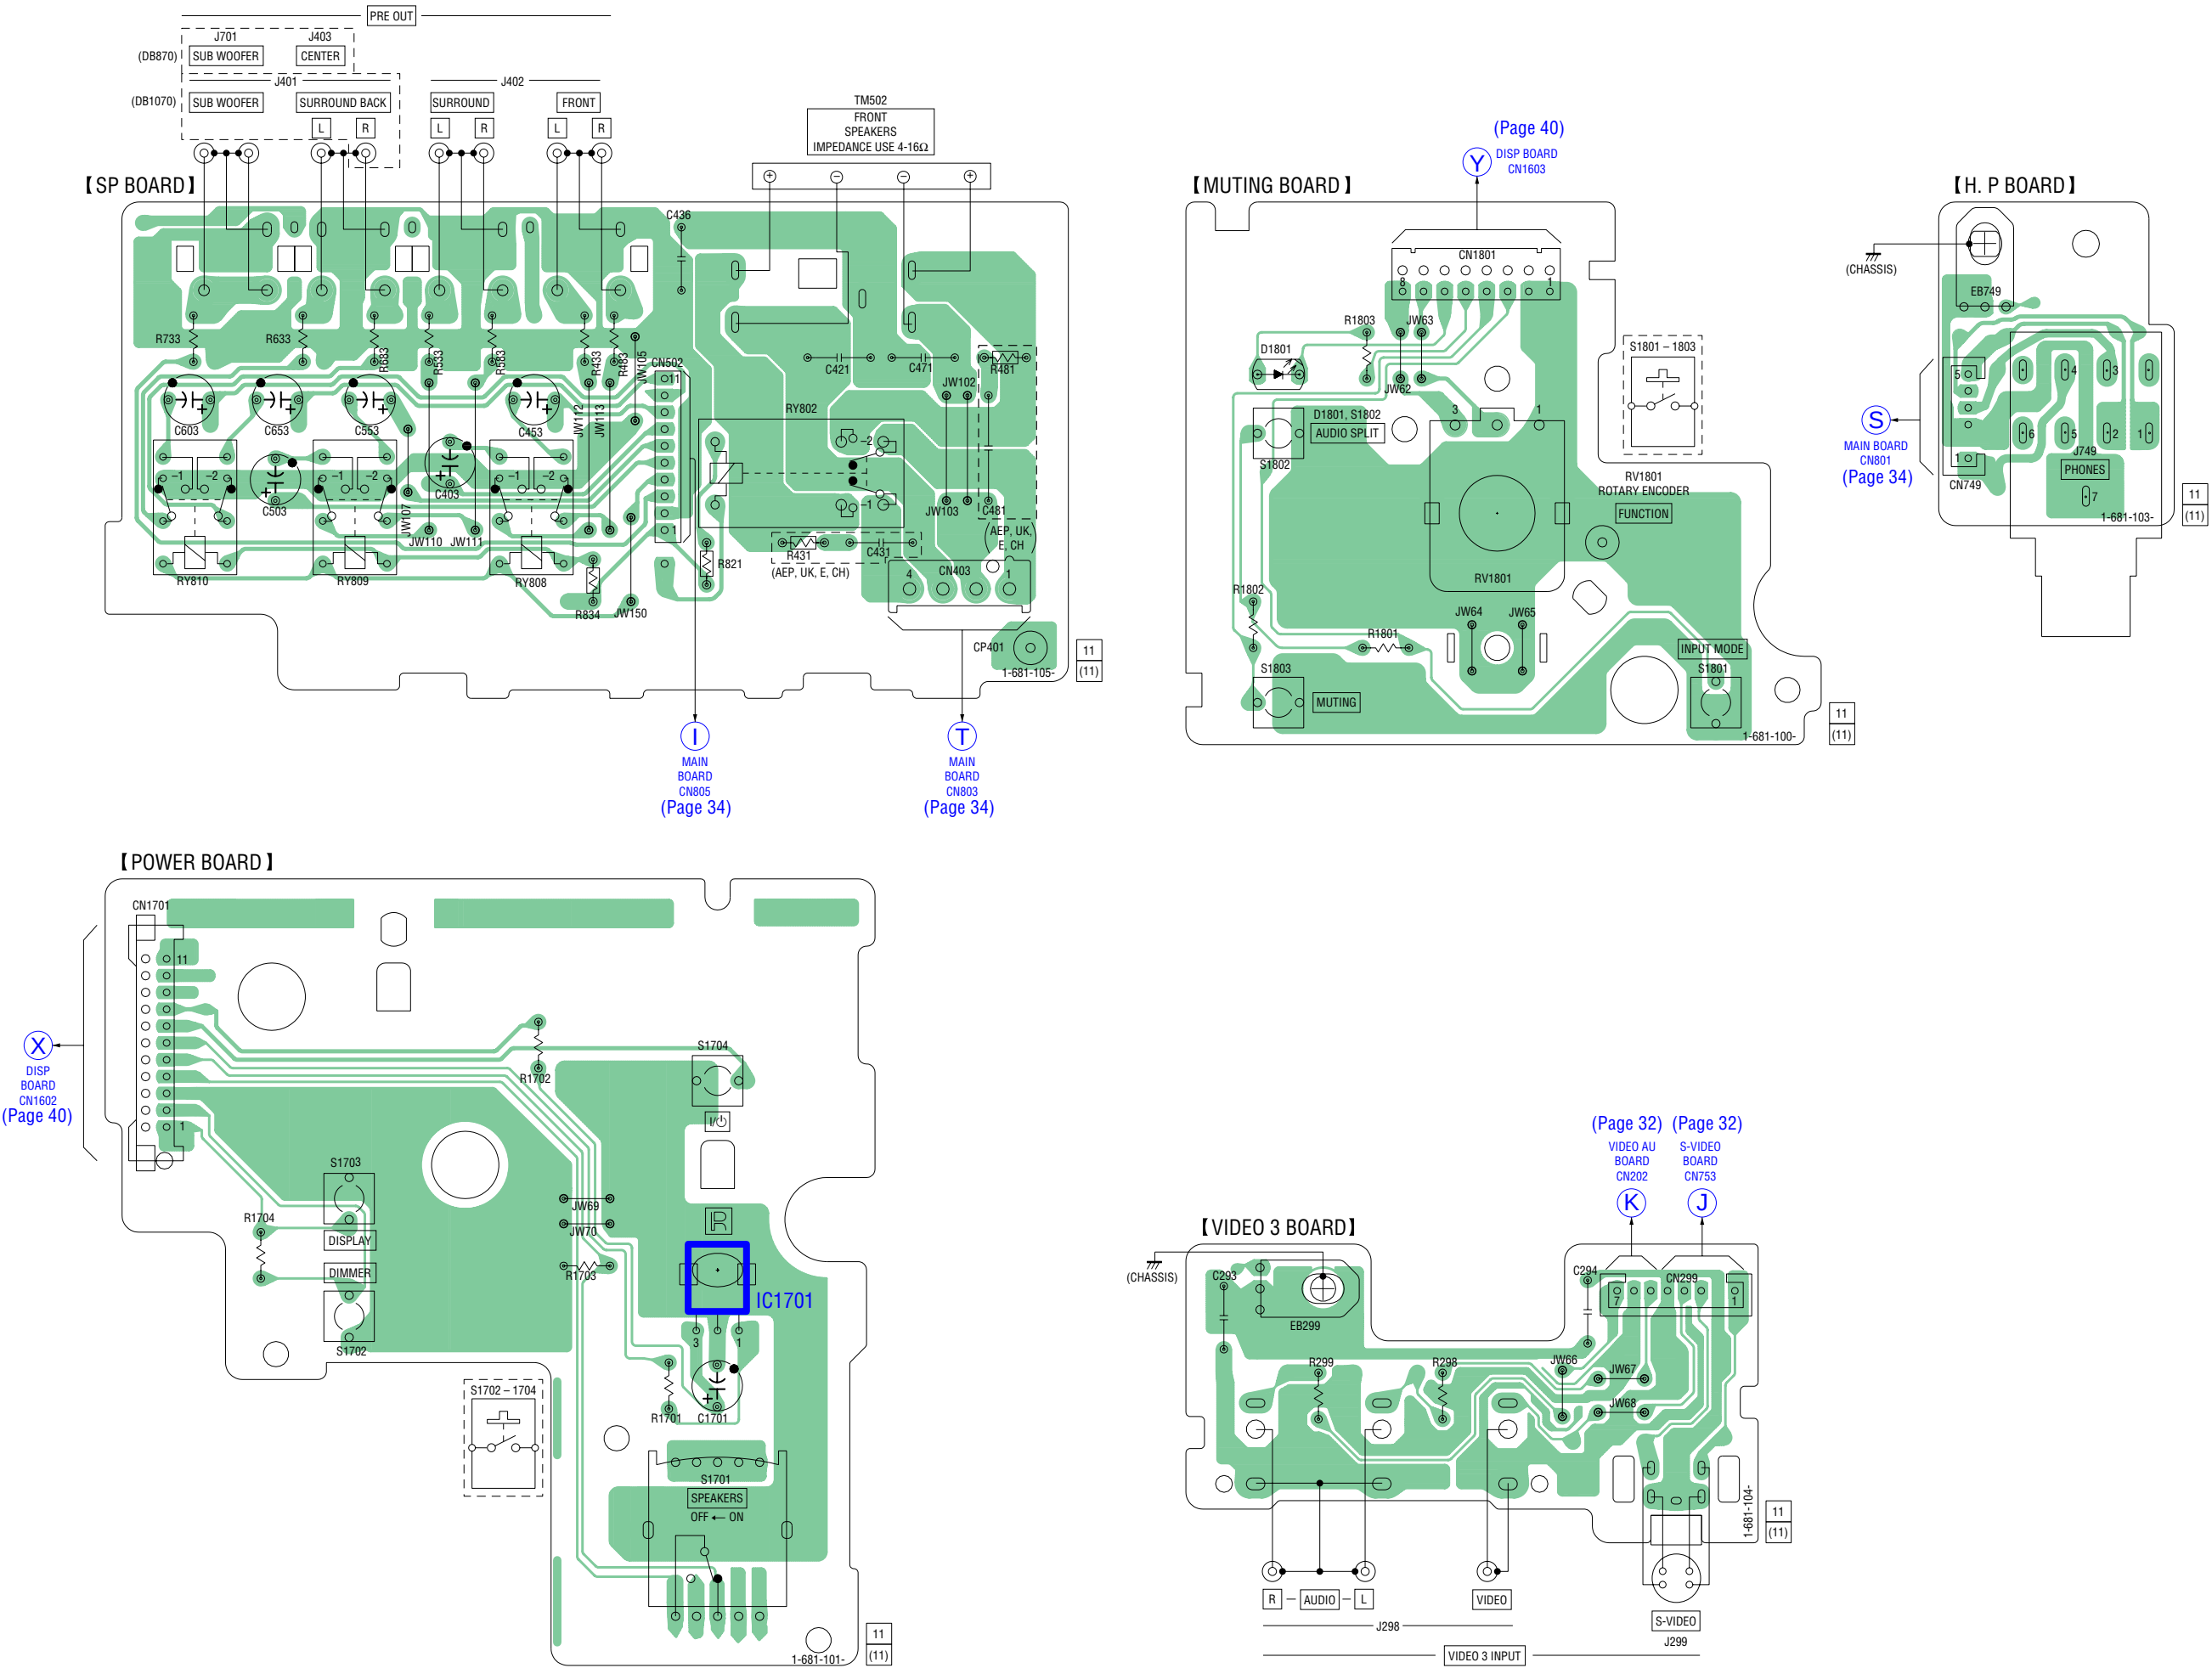

6-28. SCHEMATIC DIAGRAM – H.P/MUTING/POWER/SP/VIDEO 3 Boards –

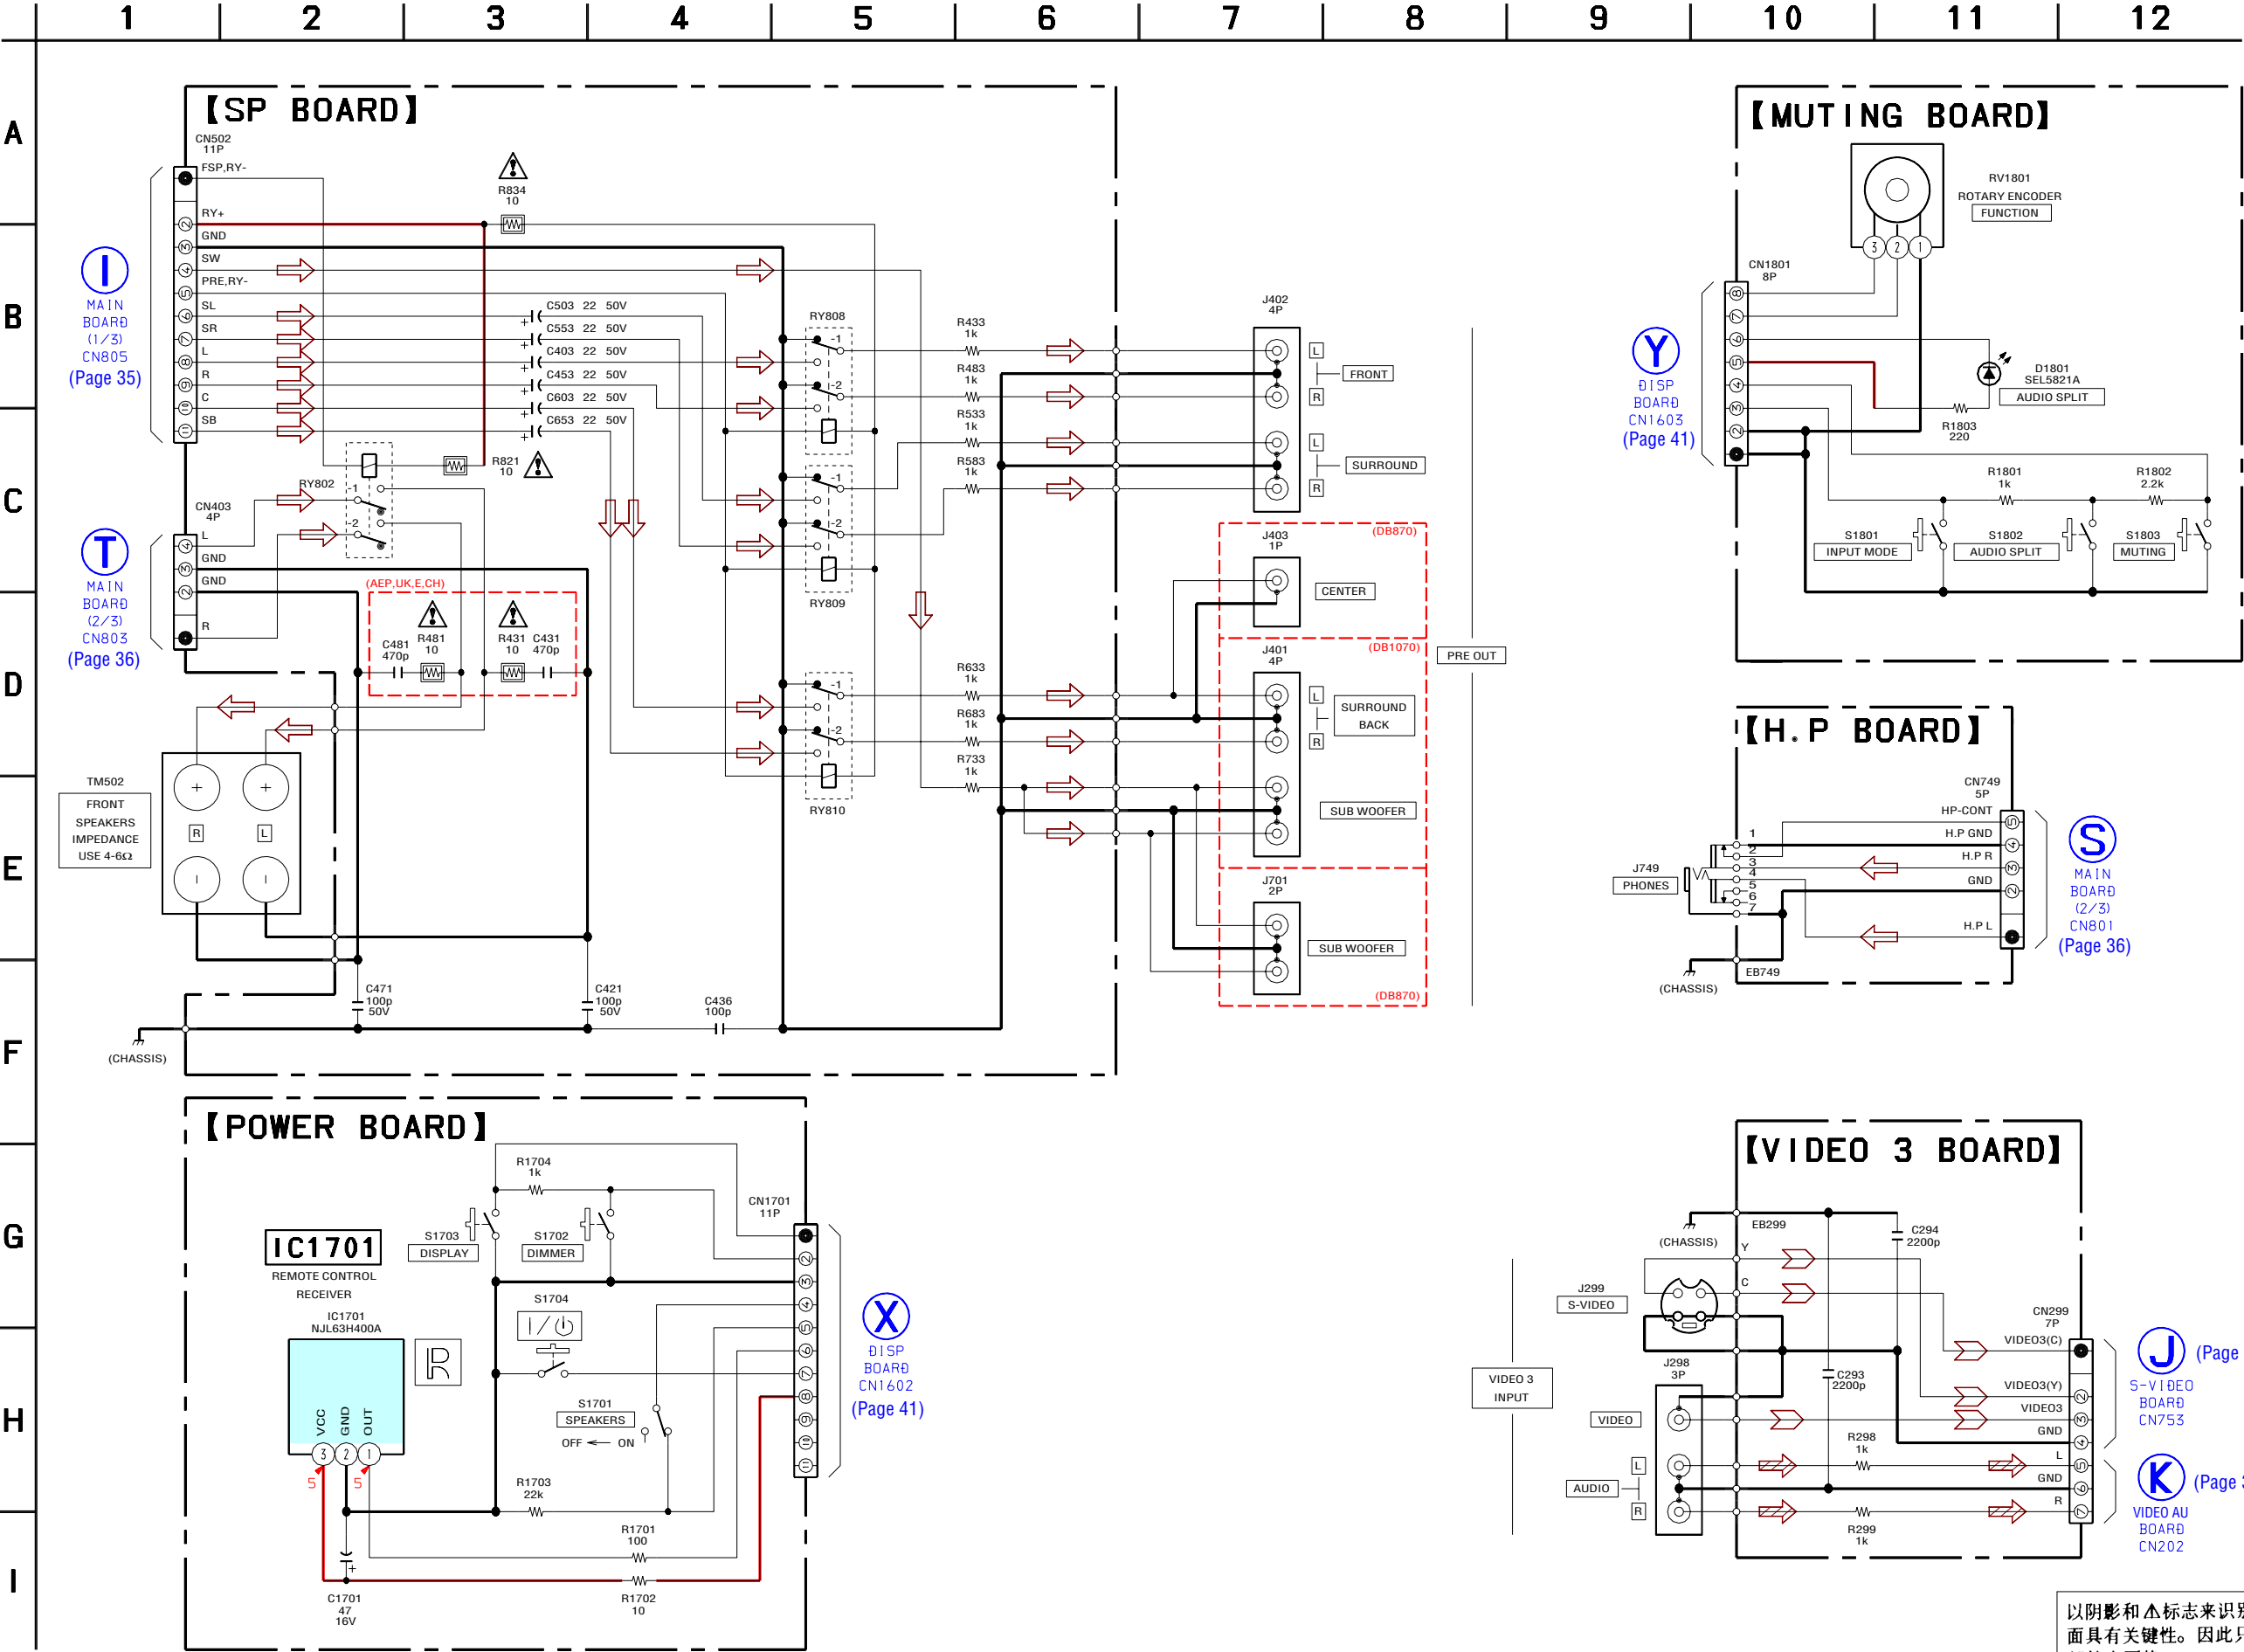

以阴影和△标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。


The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-29. PRINTED WIRING BOARDS – POWER SUPPLY Section – • See page 22 for Circuit Boards Location.

• Semiconductor Location






Ref. No.	Location
D51	D-7
D52	C-7
D53	C-7
D54	C-7
D55	B-7
D56	B-7
D57	B-7
D58	B-8
D901	F-2
D902	D-2
D903	G-3
D904	G-3
D905	G-3
D906	G-3
D907	F-1
D908	F-3
D912	E-2
D913	E-2
D914	B-3
Q51	D-7
Q52	B-8
Q53	B-8
Q54	D-7
Q902	F-2
Q903	D-2
Q904	F-2
Q905	F-2

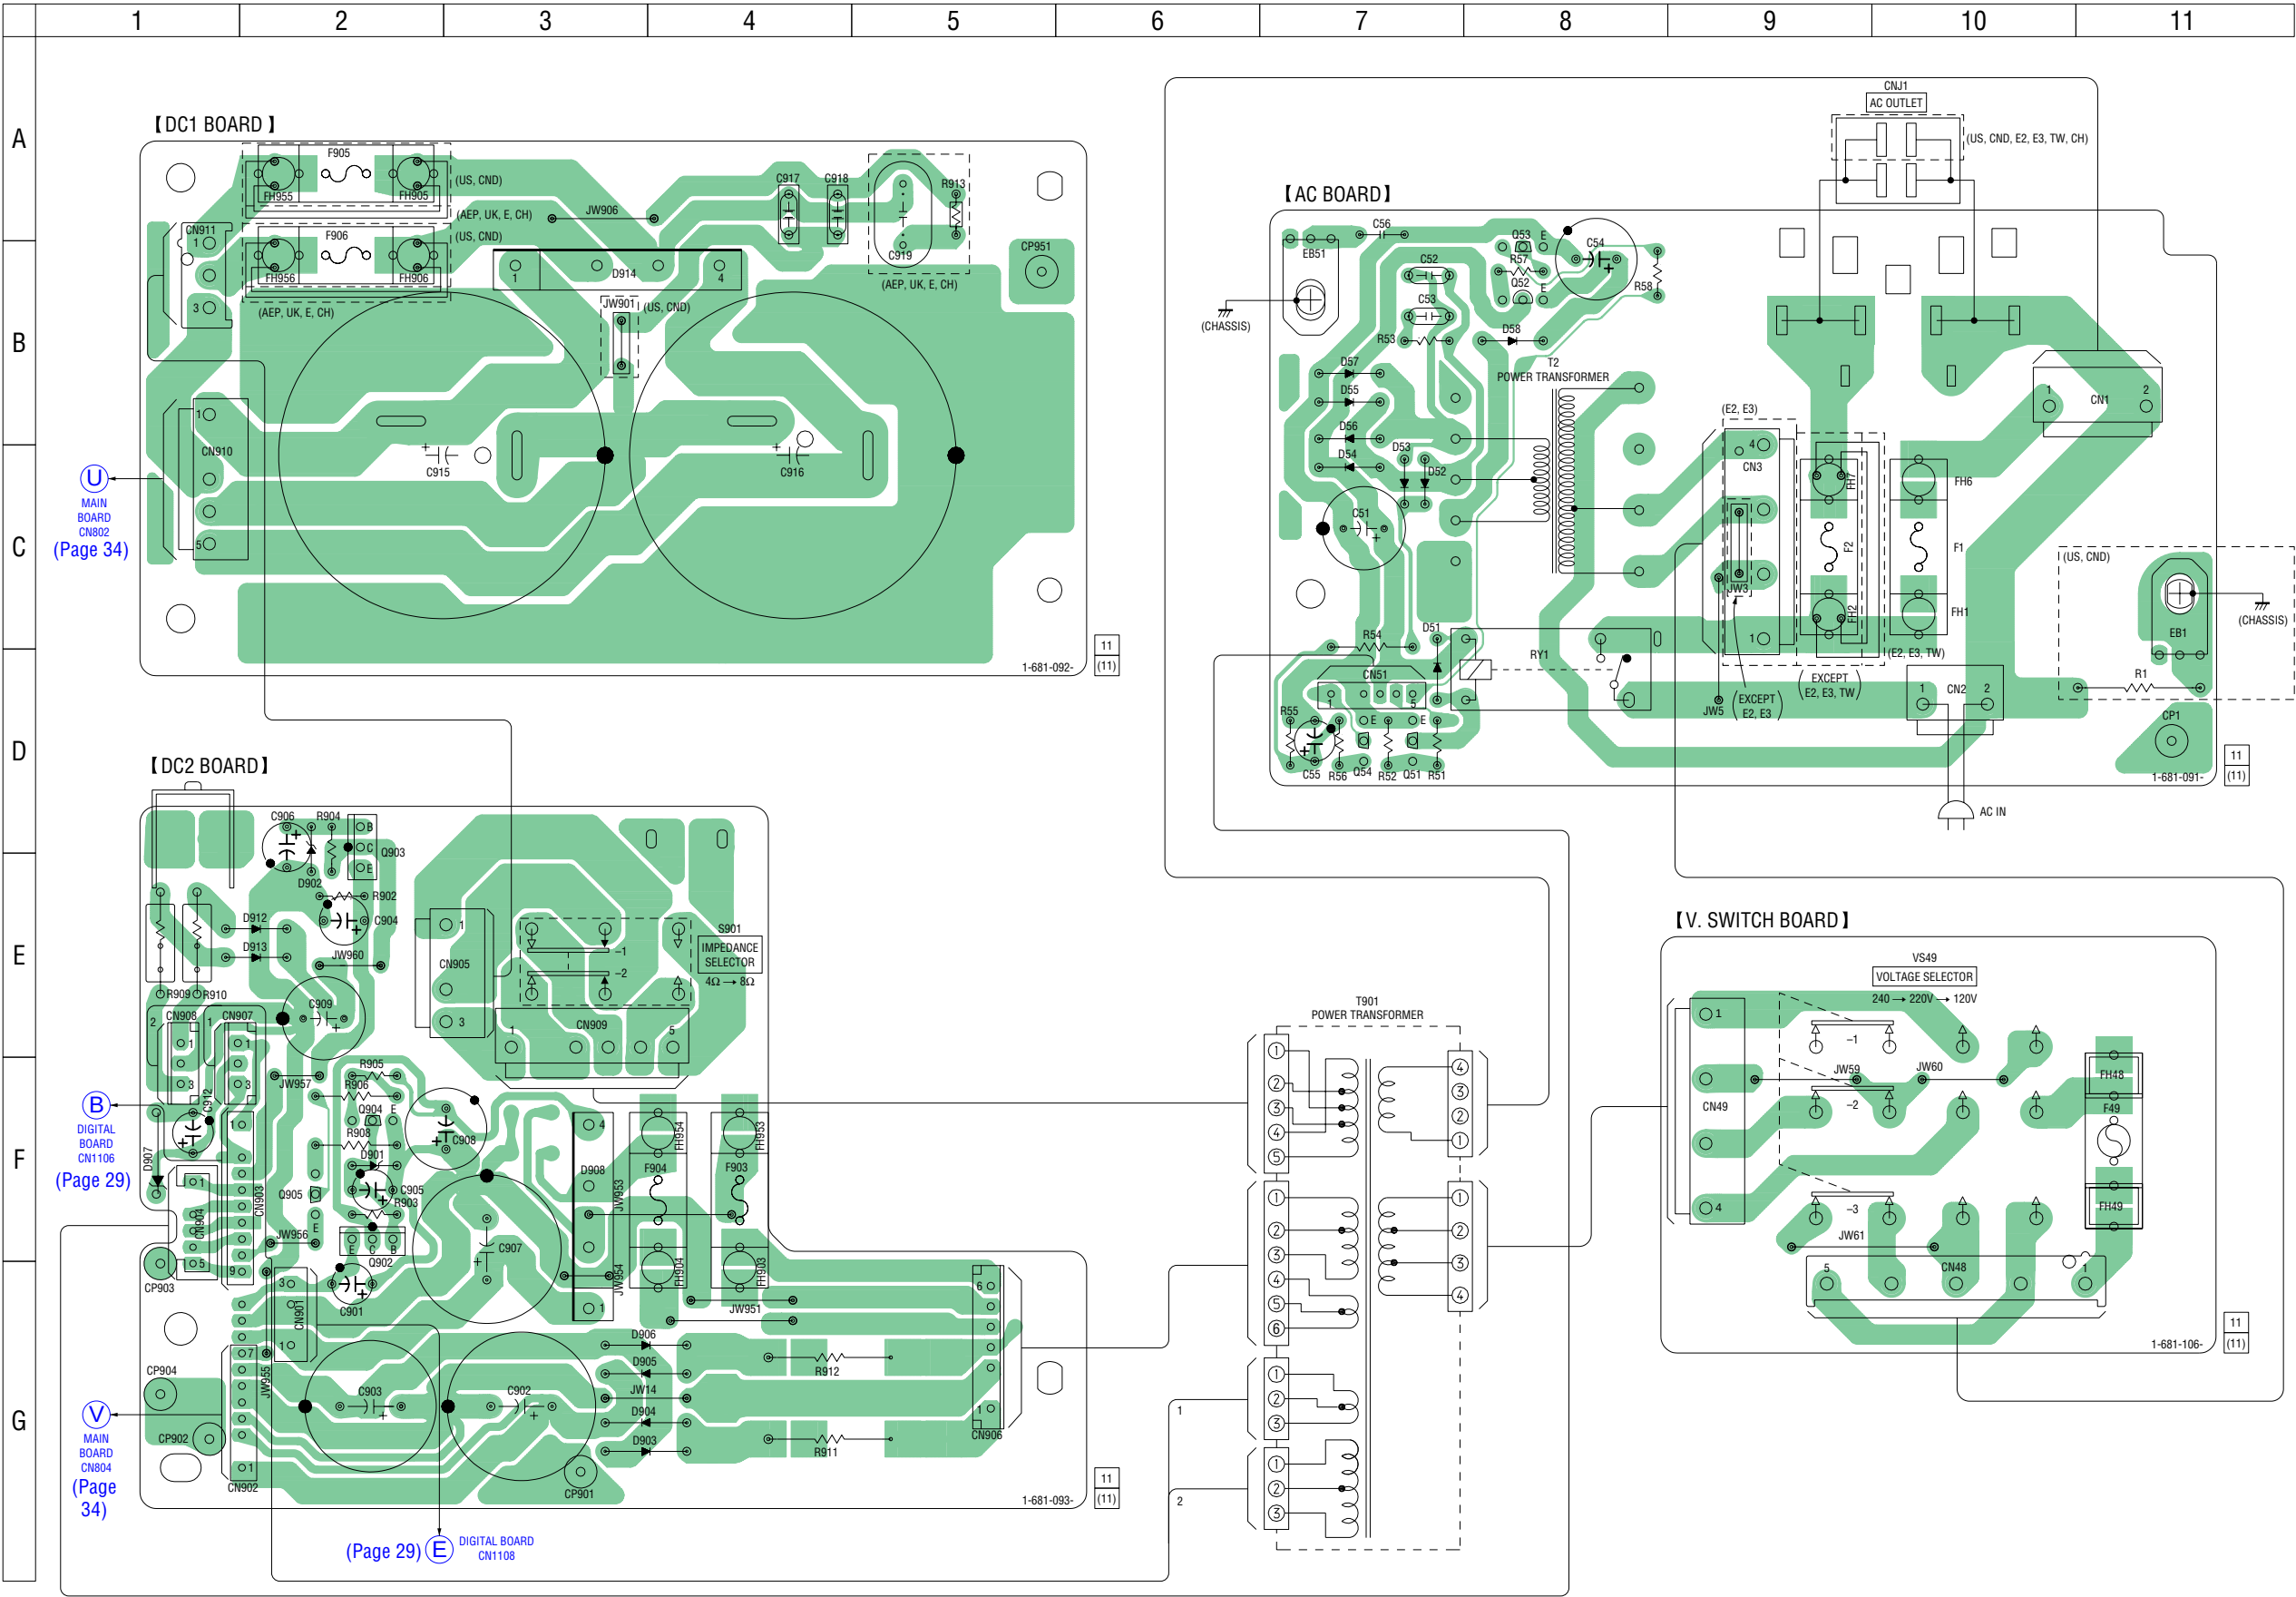


 


STR-DB870/DB1070

• Waveforms
– DIGITAL Board –

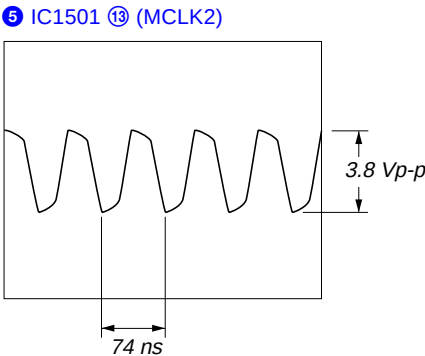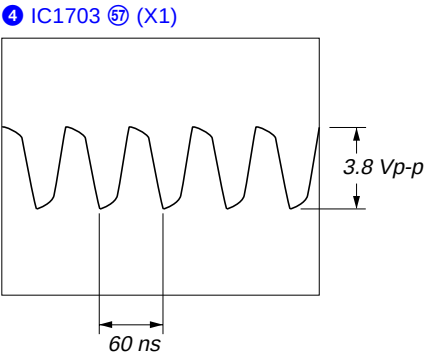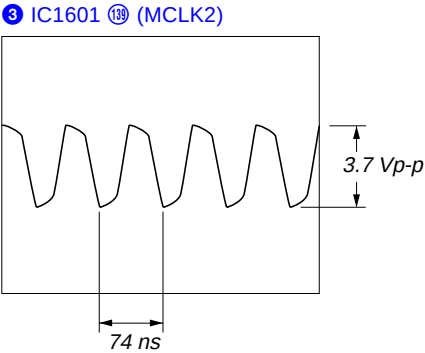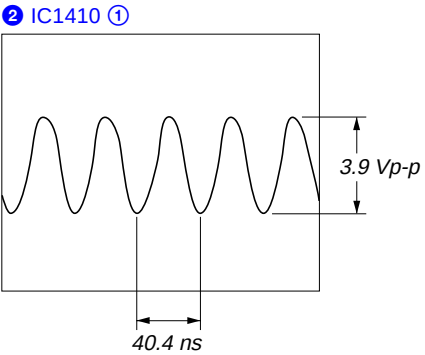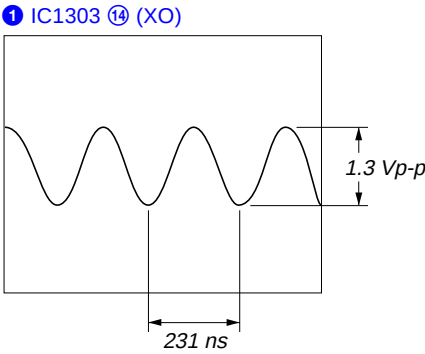


– VIDEO Board –

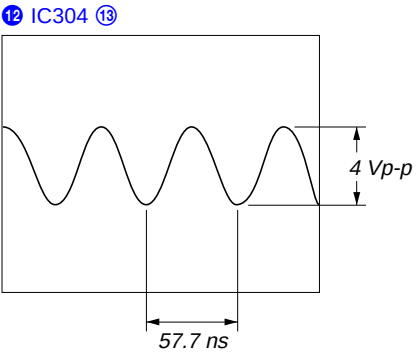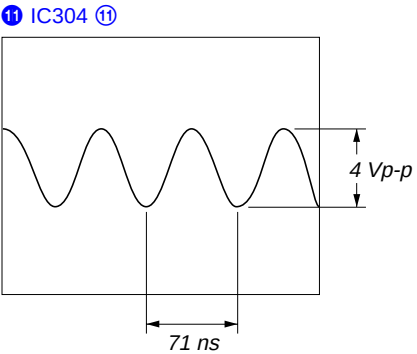


• IC Block Diagrams


IC101 TC9274N-016 (MAIN board)

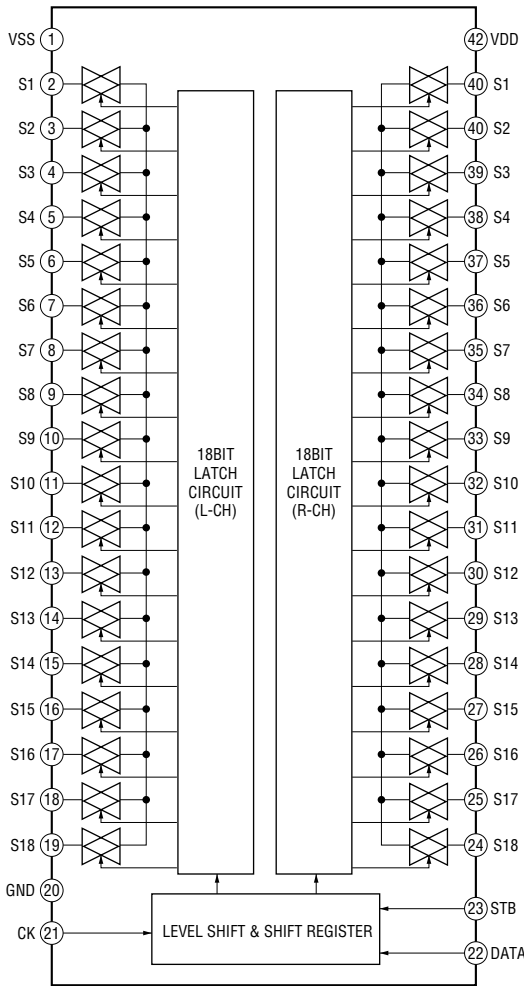


IC102 TC9273N-004 (MAIN Board)
IC105 TC9273N-013 (MAIN Board (STR-DB1070))
IC201 TC9273N-014 (VIDEO AU Board)




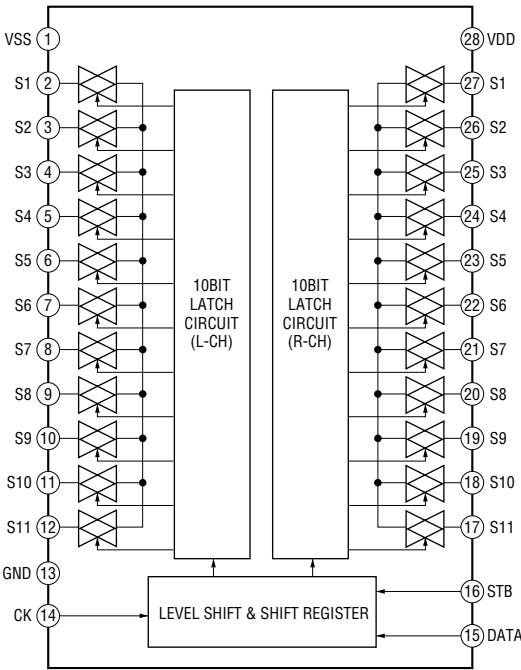


IC303 TC74HC4053AP (VIDEO Board (US and Canadian models))

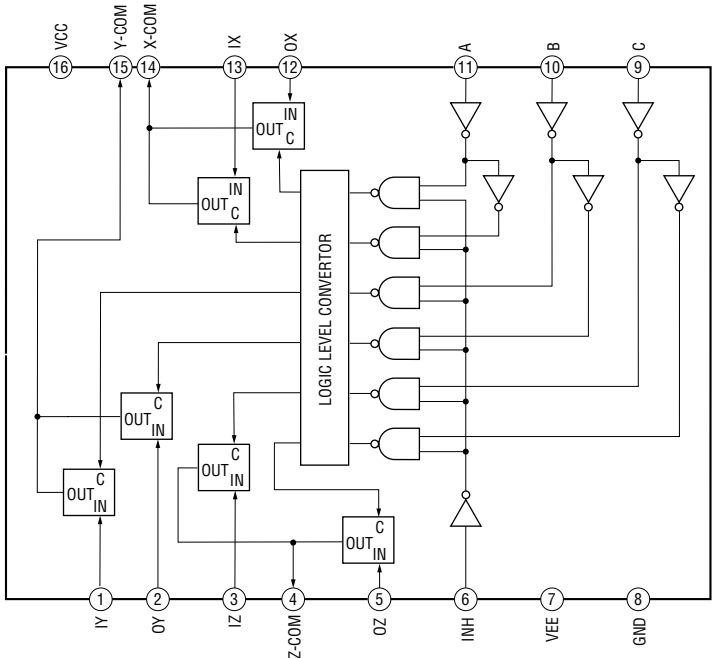


IC305 BA7622 (VIDEO Board (STR-BD1070))

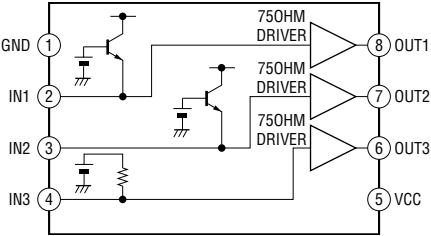

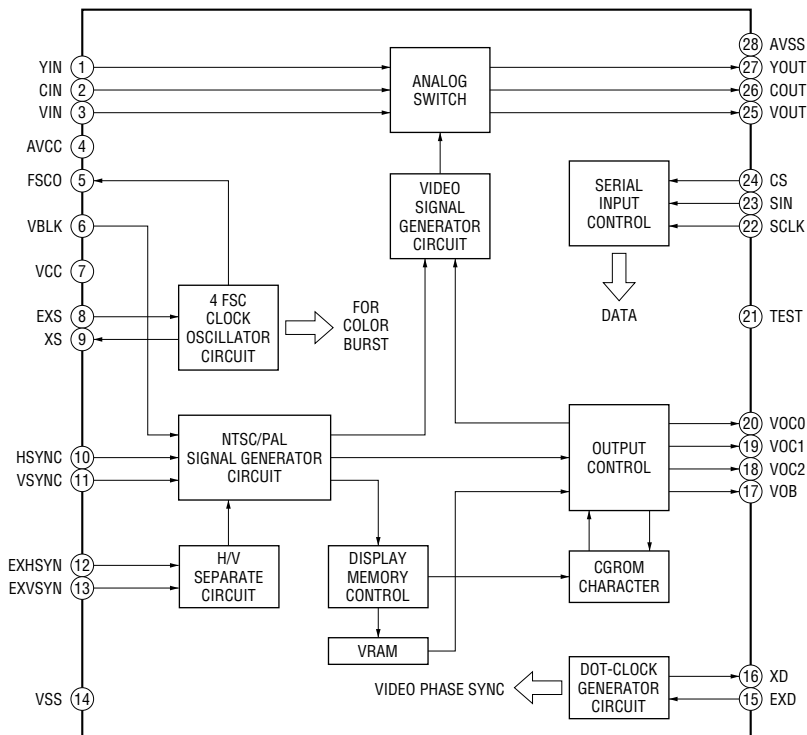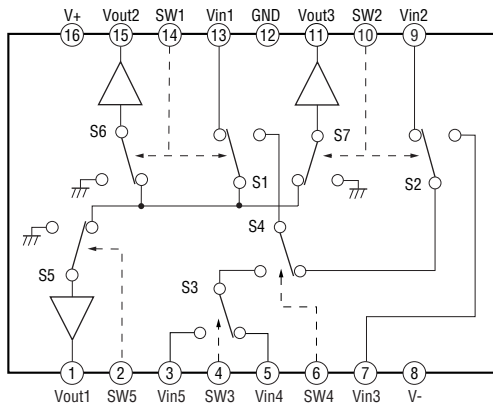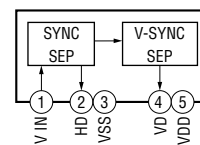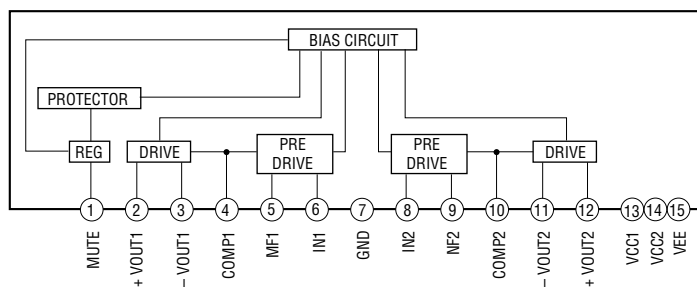
IC307 MB90089F-G-238-BND (VIDEO Board (STR-DB1070))**IC308 NJM2296D (VIDEO Board)
IC750, 752 NJM2296D (S-VDIEO Board)****IC309, 311 LA7213 (VIDEO Board
(STR-DB1070: AEP, UK, E and Chinese models))****IC403, 503, 603 μ PC2581V (MAIN Board (IC603: STR-DB1070))**

STR-DB870/DB1070


IC401, 501, 601, 701 TC94A07P (MAIN Board)



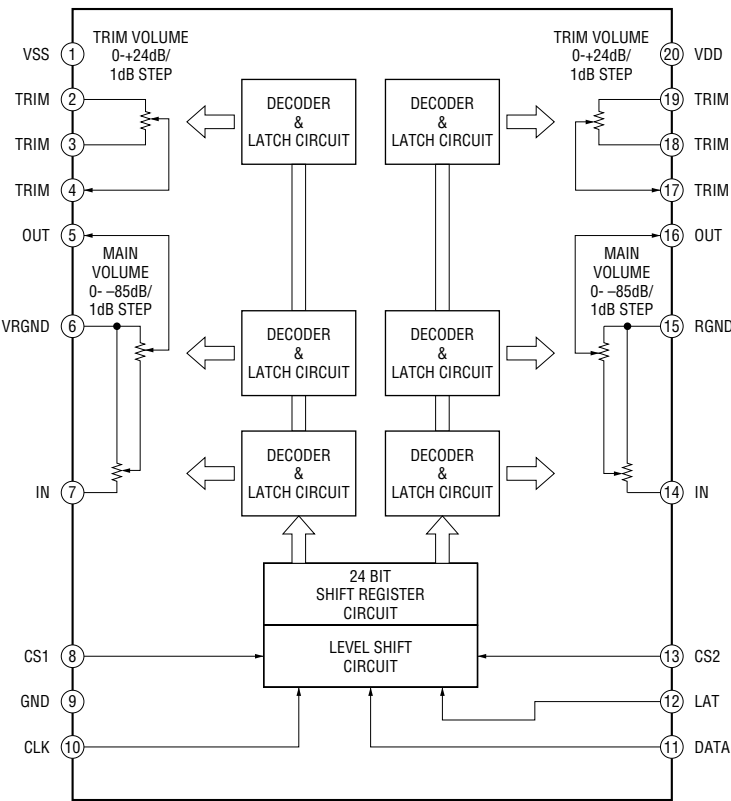


IC751 NJM2145D (S-VIDEO Board (US and Canadian models))

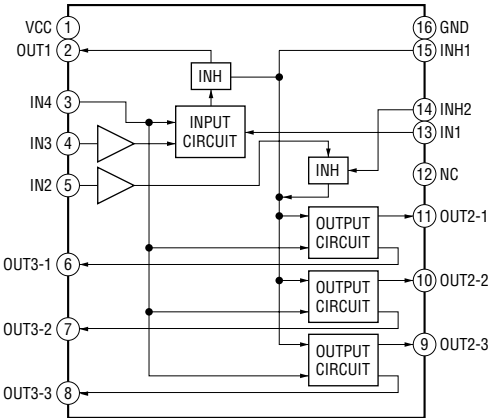


IC1101 PCM1800E/2K (DIGITAL Board)

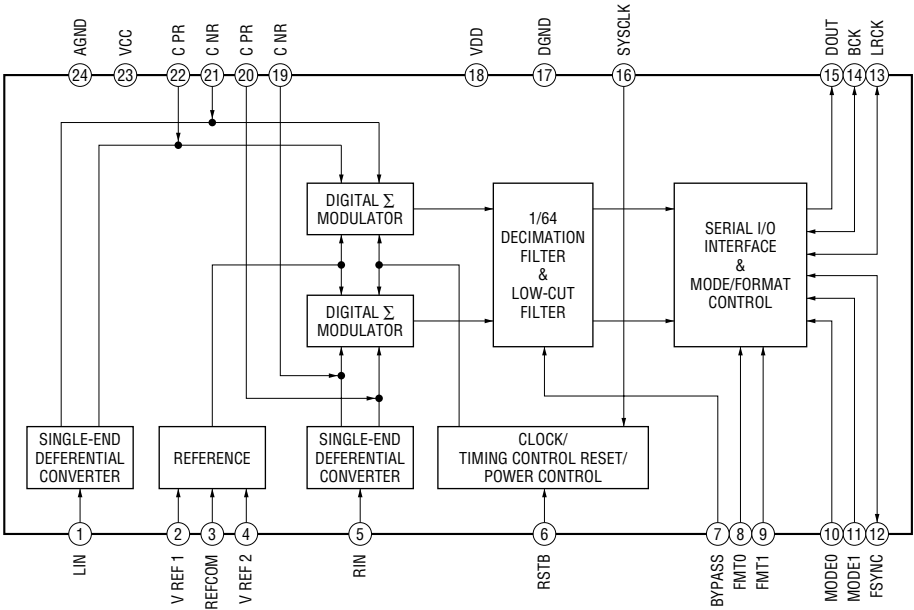

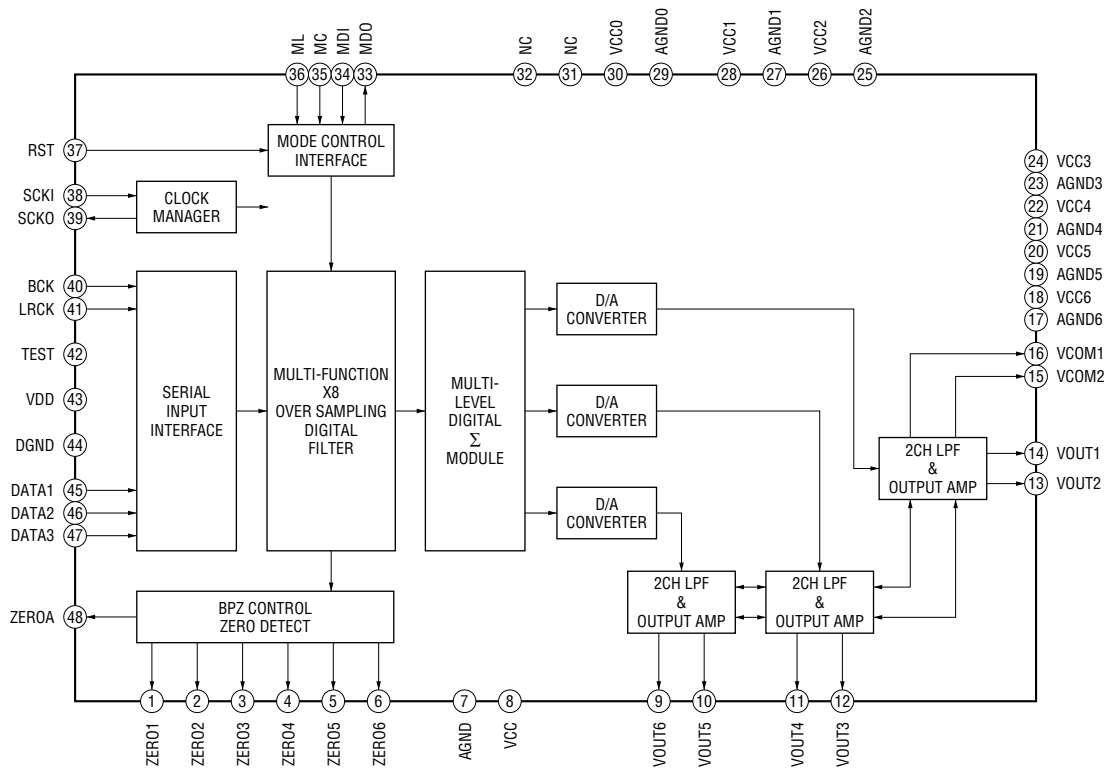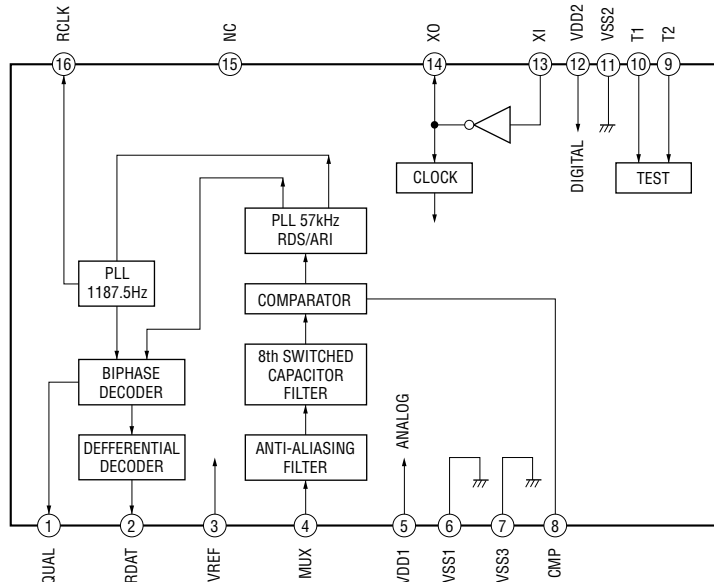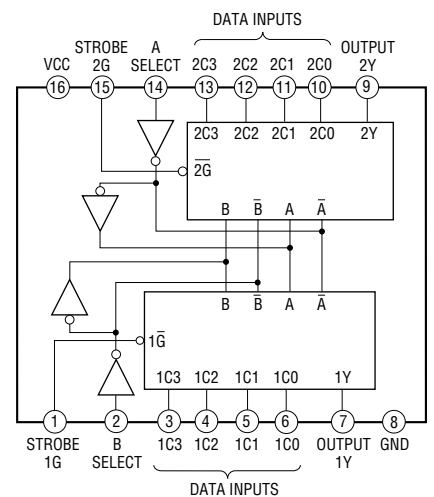
IC1201 PCM1604Y/2K (DIGITAL Board)**IC1303 BU1924F-E2 (DIGITAL Board (AEP and UK models))****IC1406 SN74HC153ANS (DIGITAL Board)**

STR-DB870/DB1070


IC1407 TC7WH157FU (TE12R)
(DIGITAL Board)

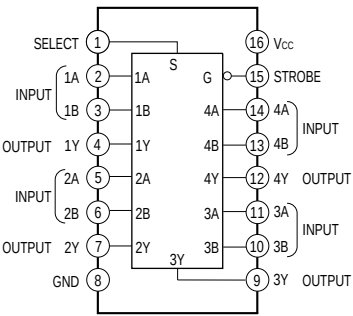


IC1409 TC7WH74FU (TE12R)
(DIGITAL Board)

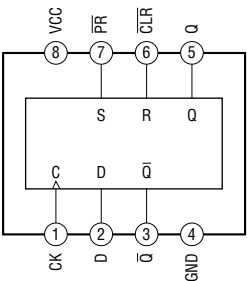


IC1601 ML9261MB (DISP Board)

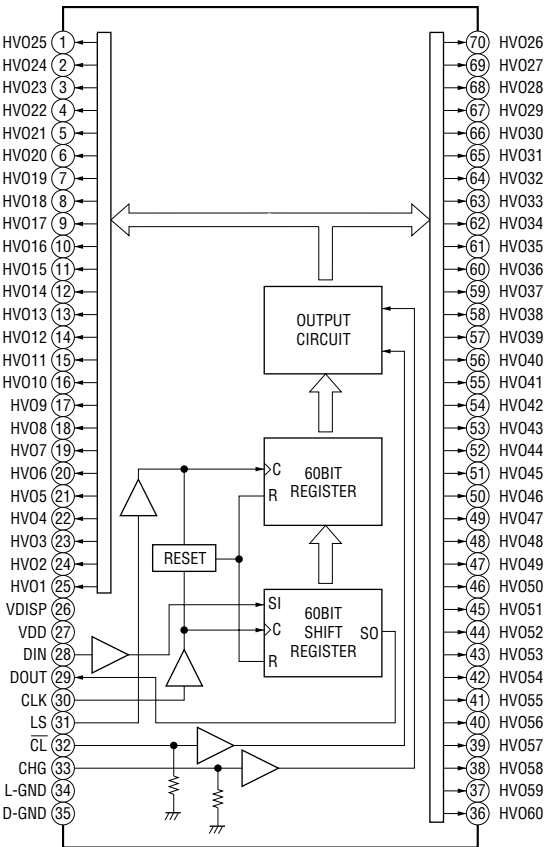

IC1408 LC89056W-E (DIGITAL Board)

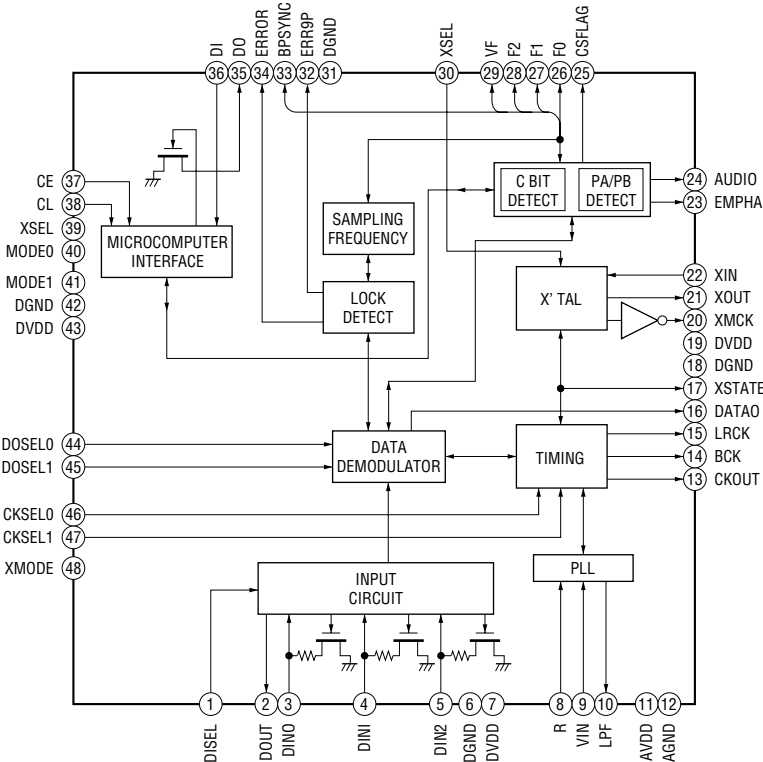

IC1602 NJU3719L (DISP Board)

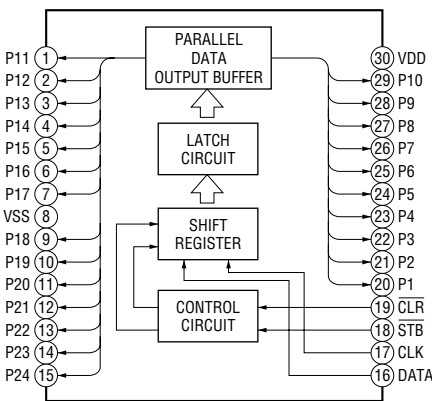

6-31. IC PIN FUNCTION DESCRIPTION

• DIGITAL BOARD IC1201 PCM1604Y/2K (D/A CONVERTER)

Pin No.	Pin Name	I/O	Description
1 to 6	ZER01 to ZER06	I	Not used (open)
7	AGND	—	Ground terminal (for analog)
8	VCC	—	Power supply terminal (+5V)
9	VOUT6	O	Analog negative signal output to the line amp (IC1261)
10	VOUT5	O	Analog negative signal output to the line amp (IC1261)
11	VOUT4	O	Analog negative signal output to the line amp (IC1241)
12	VOUT3	O	Analog negative signal output to the line amp (IC1241)
13	VOUT2	O	Analog negative signal output to the line amp (IC1221)
14	VOUT1	O	Analog negative signal output to the line amp (IC1221)
15	VCOM2	O	Common voltage output terminal
16	VCOM1	O	Large external capacitor is used to reduce power supply noise
17	AGND6	—	Ground terminal (for analog)
18	VCC6	—	Power supply terminal (+5V)
19	AGND5	—	Ground terminal (for analog)
20	VCC5	—	Power supply terminal (+5V)
21	AGND4	—	Ground terminal (for analog)
22	VCC4	—	Power supply terminal (+5V)
23	AGND3	—	Ground terminal (for analog)
24	VCC3	—	Power supply terminal (+5V)
25	AGND2	—	Ground terminal (for analog)
26	VCC2	—	Power supply terminal (+5V)
27	AGND1	—	Ground terminal (for analog)
28	VCC1	—	Power supply terminal (+5V)
29	AGND0	—	Ground terminal (for analog)
30	VCC0	—	Power supply terminal (+5V)
31, 32	NC	—	Not used (open)
33	MDO	O	Serial data output to the system control (IC1703)
34	MDI	I	Serial data input from the system controller (IC1703)
35	MC	I	Clock signal input from the system controller (IC1703)
36	ML	I	Latch signal input from the system controller (IC1703)
37	RST	I	Reset signal input from the system controller (IC1703)
38	SCKI	I	Serial clock signal input from the audio DSP2 (IC1601)
39	SCKO	O	Serial clock signal output terminal Not used (open)
40	BCK	I	Bit clock signal input from the audio DSP2 (IC1601)
41	LRCK	I	L/R sampling clock signal input from the audio DSP2 (IC1601)
42	TEST	I	Test data input terminal (fixed at “L”)
43	VDD	—	Power supply terminal (+5V)
44	DGND	—	Ground terminal (for digital)
45	DATA1	I	Audio serial data1 input from the audio DSP2 (IC1601)
46	DATA2	I	Audio serial data2 input from the audio DSP2 (IC1601)
47	DATA3	I	Audio serial data3 input from the audio DSP2 (IC1601)
48	ZER0A	I	Zero input detect terminal Not used (open)

• DIGITAL BOARD IC1408 LC89056W-E (DIGITAL AUDIO INTERFACE RECEIVER)

Pin No.	Pin Name	I/O	Description
1	DISEL	I	Input data select terminal (fixed at “L”)
2	DOUT	O	EIAJ data and parity output terminal Not used (open)
3	DIN0	I	Amp integrate data input from the select switch (IC1406)
4	DIN1	O	Amp integrate data input terminal Not used (fixed at “L”)
5	DIN2	I	Amp integrate data input terminal Not used (fixed at “L”)
6	DGND	—	Ground terminal (for digital)
7	DVDD	—	Power supply terminal (+5V) (for digital)
8	R	I	Input terminal for VCO generator band adjustment
9	VIN	I	Input terminal for VCO self running frequency set
10	LPF	O	External LPF for PLL is connected to this terminal
11	AVDD	—	Power supply terminal (+5V) (for analog)
12	AGND	—	Ground terminal (for analog)
13	CKOUT	O	Clock signal output to the audio DSP1, 2 (IC1501, 1601)
14	BCK	O	Bit clock signal output to the A/D converter (IC1101) and audio DSP1 (IC1501)
15	LRCK	O	L/R sampling clock signal output to the A/D converter (IC1101) and audio DSP1, 2 (IC1501, 1601)
16	DATAO	O	Audio data output to the system controller (IC1703) and audio DSP1 (IC1501)
17	XSTATE	O	Clock status flag output to the system controller (IC1703)
18	DGND	—	Ground terminal (for digital)
19	DVDD	—	Power supply terminal (+5V) (for digital)
20	XMCK	O	Clock signal outout to the A/D converetr (IC1101) (24.576MHz)
21	XOUT	O	Clock output terminal Not used (open)
22	XIN	I	Clock input from the clock oscillator (IC1410) (24.576MHz)
23	EMPHA	O	Emphasis monitor output terminal “H”: on Not used (open)
24	AUDIO	O	Audio transfer signal output to the audio DSP1 (IC1501)
25	CSFLAG	O	Not used (open)
26 to 29	F0/P0/C0 to F3/P3/C3	O	Terminal for check Not used (open)
30	DVDD	—	Power supply terminal (+5V) (for digital)
31	DGND	—	Ground terminal (for digital)
32	AUTO	O	Not used (open)
33	BPSYNC	O	Not used (open)
34	ERROR	O	Error mute output to the system controller (IC1703) and audio DSP1 (IC1501)
35	DO	O	Data output to the system controller (IC1703)
36	DI	I	Data input from the system controller (IC1703)
37	CE	I	Chip enable signal input from the system controller (IC1703)
38	CLK	I	Clock signal input from the system controller (IC1703)
39	XSEL	I	Clock select terminal (fixed at “H”)
40, 41	MODE0, MODE1	I	Mode setting input terminal (fixed at “L”)
42	DGND	—	Ground terminal (for digital)
43	DVDD	—	Power supply terminal (+5V) (for digital)
44, 45	DOSEL0, DOSEL1	I	Data format select signal input terminal (fixed at “L”)
46	CKSEL0	I	System clock select signal input terminal (fixed at “L”)
47	CKSEL1	I	System clock select signal input from the system controller (IC1703)
48	XMODE	I	Reset signal input from the system controller (IC1703)

• DIGITAL BOARD IC1501 CDX9617R (AUDIO DSP1)

Pin No.	Pin Name	I/O	Description
1	VSS	—	Ground terminal
2	XRST	I	Reset signal input from the system controller (IC1703)
3	EXTIN	I	Master clock input terminal Not used (fixed at “L”)
4	FS2	I	Sampling frequency select signal input terminal Not used (fixed at “L”)
5	VDDI	—	Power supply terminal (+2.5V)
6	FS1	I	Sampling frequency select signal input terminal Not used (fixed at “L”)
7	PLOCK	O	Internal PLL lock signal output terminal Not used (open)
8	VSS	—	Ground terminal
9	MCLK1	I	System clock input terminal (13.5MHz)
10	VDDI	—	Power supply terminal (+2.5V)
11	VSS	—	Ground terminal
12	MCLK2	O	System clock output terminal (13.5MHz)
13	MS	I	Master/slave active select terminal “L”: internal clock, “H”: external clock
14	SCKOUT	O	Internal system clock output terminal Not used (open)
15	LRCKI1	I	L/R sampling clock signal input from the audio interface receiver (IC1408)
16	VDDE	—	Power supply terminal (+3.3V)
17	BCKI1	I	Bit clock signal input from the audio interface receiver (IC1408)
18	SDI1	I	Audio data input from the A/D converter (IC1503)
19	LRCKO	O	L/R sampling clock signal output to the audio DSP2 (IC1601)
20	BCKO	O	Bit clock signal output to the audio DSP2 (IC1601)
21	VSS	—	Ground terminal
22	KFSIO	I/O	Audio clock signal (384fs/256fs) in/out terminal
23 to 26	SDO1 to SDO4	O	Audio serial data output to the audio DSP2 (IC1601)
27	SPDIF	O	S/PDIF output terminal Not used (open)
28	LRCKI2	I	L/R sampling clock signal input from the audio interface receiver (IC1408)
29	BCKI2	I	Bit clock signal input from the audio interface receiver (IC1408)
30	SDI2	I	Audio serial data input from the audio interface receiver (IC1408)
31	VSS	—	Ground terminal
32	HACN	O	Host acknowledge signal output to the system controller (IC1703)
33	HDIN	I	Host serial data input from the system controller (IC1703)
34	HCLK	I	Host clock signal input from the system controller (IC1703)
35	HDOUT	O	Host serial data output to the system controller (IC1703)
36	HCS	I	Host chip select input from the system controller (IC1703)
37	SDCLK	O	SD-RAM clock output terminal Not used (open)
38	CLKEN	O	SD-RAM clock enable output terminal Not used (open)
39	RAS	O	Row address strobe signal output terminal Not used (open)
40	VDDI	—	Power supply terminal (+2.5V)
41	VSS	—	Ground terminal
42	CAS	O	Column address strobe signal output terminal Not used (open)
43	DQM/OE0	O	Mask data output terminal
44	CS0	O	Chip select signal output to the S-RAM (IC1502)
45	WE0	O	Write enable signal output to the S-RAM (IC1502)
46	VDDE	—	Power supply terminal (+3.3V)
47	WMD1	I	External memory wait mode setting terminal (fixed at “H”)
48	VSS	—	Ground terminal

Pin No.	Pin Name	I/O	Description
49	WMD0	I	External memory wait mode setting terminal (fixed at “H”)
50	PAGE2	O	External memory page select signal output terminal Not used (open)
51	VSS	—	Ground terminal
52, 53	PAGE1, PAGE0	O	External memory page select signal output terminal Not used (open)
54	BOOT	I	Boot mode control signal input terminal Not used (fixed at “L”)
55	BTACT	O	Boot mode display signal output terminal Not used (open)
56	BST	I	Boot strap signal input from the system controller (IC1703)
57	MOD1	I	Mode select signal input terminal “L”: 384fs, “H”: 256fs
58	MOD0	I	Mode select signal input terminal “L”: single chip mode, “H”: can not use
59	EXLOCK	I	Error lock signal input from the digital audio interface receiver (IC1408)
60	VDDI	—	Power supply terminal (+2.5V)
61	VSS	—	Ground terminal
62, 63	A17, A16	O	Address signal output terminal Not used (open)
64 to 66	A15 to A13	O	Address signal output to the S-RAM (IC1502)
67	GP10	I	Serial clock input from the audio DSP2 (IC1601)
68	GP9	O	Signal output to the system controller (IC1703)
69	GP8	I	Audio transfer signal output to the digital audio interface receiver (IC1408)
70	VDDI	—	Power supply terminal (+2.5V)
71	VSS	—	Ground terminal
72 to 75	D15/GP7 to D12/GP4	I/O	Two-way data bus with the S-RAM (IC1502)
76	VDDE	—	Power supply terminal (+3.3V)
77 to 80	D11/GP3 to D8/GP0	I/O	Two-way data bus with the S-RAM (IC1502)
81	VSS	—	Ground terminal
82 to 85	A9, A12 to A10	O	Address signal output to the S-RAM (IC1502)
86	TDO	O	Emulation data output terminal Not used (open)
87	TMS	I	Emulation data input start/end select terminal Not used (open)
88	XTRST	I	Emulation break signal input terminal Not used (open)
89	TCK	I	Emulation clock signal input terminal Not used (open)
90	TDI	I	Emulation data input terminal Not used (open)
91	VSS	—	Ground terminal
92 to 97	A8 to A3	O	Address signal output to the S-RAM (IC1502)
98, 99	D7, D6	I/O	Two-way data bus with the S-RAM (IC1502)
100	VDDI	—	Power supply terminal (+2.5V)
101	VSS	—	Ground terminal
102 to 105	D5 to D2	I/O	Two-way data bus with the S-RAM (IC1502)
106	VDDE	—	Power supply terminal (+3.3V)
107, 108	D1, D0	I/O	Two-way data bus with the S-RAM (IC1502)
109, 110	A2, A1	O	Address signal output to the S-RAM (IC1502)
111	VSS	—	Ground terminal
112	A0	O	Address signal output to the S-RAM (IC1502)
113	PM	I	PLL initialize signal input from the system controller (IC1703)
114	SDI3, SDI4	I	Audio serial data input data terminal Not used (open)
116	SYNC	I	Sync/unsync select signal input terminal “L”: sync (fixed at “H”)
117 to 119	VSS	—	Ground terminal
120	VDDI	—	Power supply terminal (+2.5V)

• **DIGITAL BOARD IC1601 CXD9616R (AUDIO DSP2)**

Pin No.	Pin Name	I/O	Description
1	VDDI	—	Power supply terminal (+2.5V)
2	EXTIN	I	Not used (fixed at “L”)
3, 4	WMD1, WMD0	I	External memory wait mode setting terminal (fixed at “H”)
5	MOD1	I	Mode select signal input terminal “L”: 384fs, “H”: 256fs
6	MOD0	I	Mode select signal input terminal “L”: single chip mode, “H”: can not use
7	VSS	—	Ground terminal
8	XRST	I	Reset signal input from the system controller (IC1703)
9	VSS	—	Ground terminal
10	SCKOUT	O	Serial clock signal output to the D/A converter (IC1201, 1202)
11	VDDI (PLL)	—	Power supply terminal (+2.5V) (for PLL)
12	SYNC	I	Sync/unsync select signal input terminal “L”: sync
13 to 15	PAGE2 to PAGE0	O	External memory page select signal output terminal Not used (open)
16	PLOCK	O	Internal PLL lock signal output terminal Not used (open)
17	BTACK	I	Boot mode display signal output terminal Not used (open)
18	VDDE	—	Power supply terminal (+3.3V)
19	VSS	—	Ground terminal
20 to 22	D31 to D29	I/O	Two-way data bus with the S-RAM (IC1602)
23	A17	O	Address signal output terminal Not used (open)
24	VSS	—	Ground terminal
25	SDO3	O	Audio serial data output to the D/A converter (IC1201)
26	SDO4	O	Audio serial data output to the D/A converter (IC1202)
27, 28	SDI1, SDI2	I	Audio serial data input from the audio DSP1 (IC1501)
29	LRCKI1	I	L/R sampling clock signal input from the audio DSP1 (IC1501)
30	VSS	—	Ground terminal
31, 32	D28, D27	I/O	Two-way data bus with the S-RAM (IC1602)
33	A16	O	Address signal output terminal Not used (open)
34	A15	O	Address signal output to the S-RAM (IC1602)
35	SDI3	I	Audio serial data input from the audio DSP1 (IC1501)
36	L2	—	Not used (open)
37	VDDI	—	Power supply terminal (+2.5V)
38	BCKI1	I	Bit clock signal input from the audio DSP1 (IC1501)
39	SDI4	I	Audio serial data input from the audio DSP1 (IC1501)
40	MS	I	Master/slave active select terminal “L”: internal clock, “H”: external clock (fixed at “L”)
41, 42	A14, A13	O	Address signal output to the S-RAM (IC1602)
43, 44	D26, D25	I/O	Two-way data bus with the S-RAM (IC1602)
45	VSS	—	Ground terminal
46	BCKI2	I	Bit clock signal input terminal Not used (open)
47, 48	FS2, FS1	I	Sampling frequency select signal input terminal Not used (open)
49	SPDIF	I	S/PDIF output terminal Not used (open)
50	A12	O	Address signal output to the S-RAM (IC1602)
51 to 53	D24 to D22	I/O	Two-way data bus with the S-RAM (IC1602)
54	VDDE	—	Power supply terminal (+3.3V)
55	VSS	—	Ground terminal
56 to 58	D21 to D19	I/O	Two-way data bus with the S-RAM (IC1602)
59	A11	O	Address signal output to the S-RAM (IC1602)

Pin No.	Pin Name	I/O	Description
60, 61	SDO1, SDO2	O	Audio serial data output to the D/A converter (IC1201)
62	KFSIO	I/O	Audio clock signal (384fs/256fs) in/out terminal
63	LRCKO	O	L/R sampling clock signal output to the D/A converter (IC1201, 1202)
64	BCKO	O	Bit clock signal output to the D/A converter (IC1201, 1202)
65	VDDI	—	Power supply terminal (+2.5V)
66	VSS	—	Ground terminal
67, 68	D18, D17	I/O	Two-way data bus with the S-RAM (IC1602)
69, 70	A10, A9	O	Address signal output to the S-RAM (IC1602)
71	CAS	O	Column address strobe signal output terminal Not used (open)
72	RAS	O	Row address strobe signal output terminal Not used (open)
73	VDDI	—	Power supply terminal (+2.5V)
74	HDIN	I	Host serial data input from the system contrller (IC1703)
75	HCLK	I	Host clock signal input from the system contrller (IC1703)
76	HCS	I	Host chip select input from the system contrller (IC1703)
77, 78	A8, A7	O	Address signal output to the S-RAM (IC1602)
79	D16	I/O	Two-way data bus with the S-RAM (IC1602)
80	D15	I/O	Two-way data bus terminal Not used (open)
81	VSS	—	Ground terminal
82	HDOUT	O	Host serial data input from the system contrller (IC1703)
83	HACN	O	Host acknowledge signal output to the system controller (IC1703)
84	CSO	O	Chip select signal output to the S-RAM (IC1602)
85	WEO	O	Write enable signal output to the S-RAM (IC1602)
86	A6	O	Address signal output to the S-RAM (IC1602)
87 to 89	D14 to D12	I/O	Two-way data bus terminal Not used (open)
90	VDDE	—	Power supply terminal (+3.3V)
91	VSS	—	Ground terminal
92 to 94	D11 to D9	I/O	Two-way data bus terminal Not used (open)
95	A5	O	Address signal output to the S-RAM (IC1602)
96	VDDI	—	Power supply terminal (+2.5V)
97	TCK	I	Emulation clock signal input terminal Not used (open)
98	TDI	I	Emulation data input terminal Not used (open)
99	TDO	O	Emulation data input terminal Not used (open)
100	TMS	I	Emulation data input start/end select Not used (open)
101	XTRST	I	Emulation break signal input terminal Not used (open)
102	VSS	—	Ground terminal
103, 104	D8, D7	I/O	Two-way data bus terminal Not used (open)
105, 106	A4, A3	O	Address signal output to the S-RAM (IC1602)
107, 108	GP10, GP9	—	Not used (open)
109	VDDI	—	Power supply terminal (+2.5V)
110	GP8	—	Not used (open)
111	GP7	I	Serial clock signal input terminal
112	GP6	—	Not used (open)
113, 114	A2, A1	O	Address signal output to the S-RAM (IC1602)
115, 116	D6, D5	I/O	Two-way data bus terminal Not used (open)
117	VSS	—	Ground terminal
118, 119	GP5, GP4	—	Not used (open)

Pin No.	Pin Name	I/O	Description
120	GP3	O	Error signal output to the system controller (IC1703)
121	NC	—	Not used (open)
122	A0	O	Address signal output to the S-RAM (IC1602)
123 to 125	D4 to D2	I/O	Two-way data bus terminal Not used (open)
126	VDDE	—	Power supply terminal (+3.3V)
127	VSS	—	Ground terminal
128, 129	D1, D0	I/O	Two-way data bus terminal Not used (open)
130	GP2	—	Not used (open)
131	GP1	I	Clock signal input from the digital audio interface receiver (IC1408)
132	GP0	I	Serial clock signal input terminal
133	SDCLK	O	Not used (open)
134	CLKEN	O	Not used (open)
135	DQM	O	Not used (open)
136	EXLOCK	I	External lock signal input from the system controller (IC1703)
137	VDDI	—	Power supply terminal (+2.5V)
138	VSS	—	Ground terminal
139	MCLK2	O	System clock output terminal (13.5MHz)
140	PM	I	PLL initialize signal input from the system controller (IC1703)
141	BST	I	Boot strap signal input from the system controller (IC1703)
142	BOOT	I	Boot mode control signal input terminal Not used (fixed at “L”)
143	TST	I	Not used (fixed at “L”)
144	MCLK1	I	System clock output terminal (13.5MHz)

• DIGITAL BOARD IC1703 MB91154PMT2-G-102-E1 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	H.P IN	I	Headphone detect signal input from the HP jack (J749) “H”: active
2	SP A RY	O	Front speaker A relay drive signal output terminal “H”: relay on
3	H/P RY	O	Headphone relay drive signal output terminal “H”: relay on
4	WOOFER RY	O	Woofer speaker relay drive signal output terminal “H”: relay on
5	REAR RY	O	Rear speaker drive signal output terminal “H”: relay on
6	CENTER RY	O	Center and surround back speakers drive signal output terminal “H”: relay on
7	2ND AUDIO RY	O	2nd audio relay drive signal output terminal “H”: relay on
8	PRE RY	O	Pre relay drive signal output terminal “H”: relay on
9	VSS	—	Ground terminal
10	SB RY	I	Center and surround back speakers drive signal output terminal “H”: relay on
11	C.JOG	I	Jog dial pulse input from the RV1901 (jog dial) A phage input
12	C.JOG	I	Jog dial pulse input from the RV1901 (jog dial) B phage input
13	F.JOG	I	Jog dial pulse input from the RV1801 (FUNCTION) A phage input
14	F.JOG	I	Jog dial pulse input from the RV1801 (FUNCTION) B phage input
15	V.JOG	I	Jog dial pulse input from the RV1601 (MASTER VOLUME) A phage input
16	V.JOG	I	Jog dial pulse input from the RV1601 (MASTER VOLUME) B phage input
17	SP.SW	I	Speaker ON/OFF signal input terminal “L”: speaker on
18	POWER.RY	O	Power relay drive signal output terminal “H”: relay on
19	TUNER AUTO STOP	I	Tuned display auto stop detect signal input from the FM/AM tuner unit “L”: active
20	TUNER MUTE	O	Muitng control signal output to the FM/AM tuner unit “L”: muting
21	DATA	O	Serial data output to the FM/AM tuner unit, LED drive (IC1602), function switch (IC101, 102, 105, 201) and electrical volume (IC401, 501, 601, 701)
22	CLK	O	Serial data transfer clock signal output to the FM/AM tner unit, LED drive (IC1602), function switch (IC101, 102, 105, 201) and electrical volume (IC401, 501, 601, 701)
23	TUNER DATA IN	I	PLL data input from the FM/AM tuner unit
24	F. SW LAT	O	Serial data latch pulse output to the function switch (IC101, 102, 105, 201) and electrical volume (IC401, 501, 601, 701) “H”: active
25	TUNER STEREO	I	FM stereo detection signal input from the FM/AM tuner unit “L”: stereo
26	VSS	—	Ground terminal
27	VCC	—	Power supply terminal (+3.3V)
28	RDS DATA	O	RDS sireal data output to the RDS decoder (IC1303) (AEP, UK models only)
29	VIDEO SW1	O	Video select signal output to the video switch (IC308) and S-VIDEO switch (IC750, 752)
30	VIDEO SW2	O	Video select signal output to the video switch (IC308) and S-VIDEO switch (IC750, 752)
31	VIDEO SW3	O	Video select signal output to the video select switch (IC308) and S-VIDEO select switch (IC750, 752)
32	VIDEO SW4	O	Video select signal output to the video select switch (IC308) and S-VIDEO select switch (IC750, 752)
33	VSYNC	I	Vertical synchronized signal input from the LA7213 (IC309, 311) (DB1070: AEP, UK,E, Chinese models only)
34	P/N	O	NTSC/PAL select signal output terminal “L”: NTSC (DB1070: US, Canadian models) “H”: PAL (DB1070: AEP, UK,E, Chinese models)
35	HDOUT1	I	Host serial data input from the audio DSP1 (IC1501)
36, 37	OPT B, OPT A	O	Digital input select signal output to the select switch (IC1406)
38	LED CE	O	Chip enable signal output to the LED driver (IC1602)
39	LED CLR	O	Clear signal output to the LED driver (IC1602)
40	TUNER LAT	O	Tuner latch signal output to the FM/AM tuner unit

Pin No.	Pin Name	I/O	Description
41	M STATUS	O	STATUS (M BUS) control signal output to the select switch (IC751)
42	D.POWER	O	Power ON/OFF control signal output terminal (digital section power)
43	V.POWER	O	Power ON/OFF control signal output terminal (video section power)
44	VSS	—	Ground terminal
45, 46	NC	I	Not used (fixed at “L”)
47	ERROR	I	Error signal input from the audio DSP (IC1601)
48	NC	I	Not used (fixed at “L”)
49	SUB.T.PORT	O	Sub power transformer (T2) on/off signal output terminal
50	AUDIO SPLIT LED	O	LED drive signal output of AUDIO SPLIT indicator (D1801)
51	GND	—	Not used (fixed at “L”)
52	MD2	O	MD2 signal output terminal (fixed at “L”)
53	MD1	O	MD1 signal output terminal (fixed at “H”)
54	MD0	O	MD0 signal output terminal (fixed at “H”)
55	RSTX	I	System reset signal input from the reset signal generator (IC1702)
56	VCC	—	Power supply terminal (+3.3V)
57	X1	O	Main system clock output terminal (16.5MHz)
58	X0	I	Main system clock output terminal (16.5MHz)
59	VSS	—	Ground terminal
60	STOP	I	AC power check signal input terminal
61	RDS CLK	I	RDS serial data transfer clock signal input from the RDS decoder (IC1303)
62	POWER	I	Key input terminal I/⏻ key (S1704) input
63	MBUS TV	I	TV (M BUS) signal input from the TV jack (J755) (US, Canadian models only)
64	MBUS DVD	I	DVD (M BUS) signal input terminal (US, Canadian models only)
65	MBUS VIDEO	I	VIDEO (M BUS) input terminal (US, Canadian models only)
66	SIRCS	I	Sircs signal input from the remote control receiver (IC1701) and select switch (IC751)
67	DIR ERROR	I	Error signal input from the digital audio interface receiver (IC1408)
68	VCC	—	Power supply terminal (+3.3V)
69	XSTATE	I	Clock status flag signal input from the digital audio interface receiver (IC1408)
70	DATA0	I	Audio data input from the digital audio interface receiver (IC1408)
71	XMODE	O	Reset signal output to the digital audio interface receiver (IC1408) “L”: active
72	CKSEL1	O	System clock select 1 output to the digital audio interface receiver (IC1408)
73	CLK	O	Clock signal output to the digital audio interface receiver (IC1408)
74	CE	O	Chip enable signal output to the digital audio interface receiver (IC1408)
75	DI	O	Data output to the digital audio interface receiver (IC1408)
76	DO	I	Data input from the digital audio interface receiver (IC1408)
77	VCC	—	Power supply terminal (+3.3V)
78	BST	O	Booster control signal output to the audio DSP2 (IC1601)
79	PM2	O	PLL initialize signal output to the audio DSP2 (IC1601)
80	XRST2	O	Reset signal output to the audio DSP2 (IC1601)
81	HACN2	I	Host acknowledge signal input from the audio DSP2 (IC1601)
82	HCS2	O	Host chip select signal output to the audio DSP2 (IC1601)
83	GB9	I	Signal input from the audio DSP1 (IC1501)
84	BST1	O	Boot strap signal output to the audio DSP1 (IC1501)
85	HCS1	O	Host chip select signal output to the audio DSP1 (IC1501)
86	A1 IN	I	Audio bus input terminal (control A1)
87	A1 OUT	O	Audio bus output terminal (control A1)

Pin No.	Pin Name	I/O	Description
88	HACN1	I	Host acknowledge signal input from the audio DSP1(IC1501)
89	XRST1	O	Reset signal output to the audio DSP1 (IC1501)
90	PM1	O	PLL initialize signal output to the audio DSP1 (IC1501)
91	ADC : RST	O	Reset signal output to the A/D converter (IC1101)
92	DACINT	O	Reset signal output to the D/A converter (IC1201)
93	DA1LAT	O	Serial data latch pulse output to the D/A converter (IC1201)
94	(PG3) DACCLK	O	Serial data transfer clock signal output to the D/A converter (IC1201, 1202)
95	(PG4) DACDI	O	Serial data output to the D/A converter (IC1201, 1202)
96	(PG5) 2EXLOCK	O	External lock signal output to the audio DSP (IC1601)
97	VCC	—	Power supply terminal (+3.3V)
98	VSS	—	Ground terminal
99	EEPROM SDA	I/O	Two-way data bus with the EEPROM (IC1701)
100	EEPROM SCL	O	Serial data transfer clock signal output to the EEPROM (IC1701)
101	VSS	—	Ground terminal
102	HCLK	O	Host clock signal output to the audio DSP (IC1501, 1601)
103	HDIN	O	Host serial data output to the audio DSP (IC1501, 1601)
104	HDOUT2	I	Host serial data input from the audio DSP (IC1601)
105	CLK	O	OSD serial data transfer clock signal output to the select switch (IC307)
106	DATA	O	OSD serial data output to the select switch (IC307)
107	LAT	O	OSD serial data latch pulse output to the select switch (IC307)
108	DAIDO	I	Serial data input from the D/A converter (IC1201)
109	SOTI	O	UART signal output terminal Not used (fixed at “L”)
110	SIN1	I	UART signal input terminal Not used (fixed at “L”)
111	CLK	O	Serial data transfer clock signal output to the FL display driver (IC1601)
112	DIN	O	Serial data output to the FL display driver (IC1601)
113	LAT	O	Serial data latch pulse output to the FL display driver (IC1601)
114	CLR	O	Clear signal output to the FL display driver (IC1601)
115	VOL IC LAT	O	Serial data latch pulse output to the electrical volume (IC401, 501, 601, 701)
116	SYSTEM MUTE	O	System muting control signal output terminal
117	AC MUTE	O	Audio muting control signal output to the poweramp (IC403, 503, 603)
118	PROTECTOR	I	Over load detection signal input from the protect circuit “L”: protect detect
119	DA2LAT	O	Serial data latch pulse output to the A/D, D/A converter (IC1202)
120	CD DIRECT	O	CD direct relay drive signal output terminal “H”: relay on
121	ANALOG DIGITAL	O	Analog/digital select signal output to the TC7WH157FU (IC1407) “L”: analog, “H”: digital
122	VCC	—	Power supply terminal (+3.3V)
123	A. DIRECT	O	MULT/2CH DIRECT select signal output terminal Not used (open)
124	NC	—	Not used (open)
125	NC	—	Not used (open)
126	DAVS	—	Ground terminal (for digital)
127	DAVC	—	Power supply terminal (+3.3V) (for digital)
128	AVCC	—	Power supply terminal (+3.3V) (for analog)
129	AVRH	—	Reference voltage input (+3.3V) terminal (for analog)
130	AVRL	—	Connect to ground (for analog)
131	AVSS	—	Ground terminal (for terminal)

Pin No.	Pin Name	I/O	Description
132	AD1	I	Key input terminal (A/D input) S1702, 1703, 1941 to 1945 (DIMMER, DISPLAY, ON SCREEN (DB1070), FM/AM, SHIFT, PRESET TUNING – /+)
133	AD2	I	Key input terminal (A/D input) S1911 to 1918 (EQUALIZER, STREAM INFO (DB870)/ 2ND ROOM (DB1070), TEST TONE, TUNING +/–, SLEEP (US, Canadian, E, Chinese models)/RDS/PTY (AEP, UK models) FM MODE, MEMORY)
134	AD3	I	Key input terminal (A/D input) S1901 to 1908 (ENTER, >, <, LEVEL, SUR, EQ, NAME, SET UP)
135	AD4	I	Key input terminal (A/D input) S1921 to 1925 (6.1CH DECODING, CINEMA STUDIO EX, DIGITAL CONCERT HALL, 2CH, A.F.D.)
136	AD5	I	Key input terminal (A/D input) S1801 to 1803, 1931 to 1934 (INPUT MODE, AUDIO SPLIT, MUTING, MODE – , NIGHT MODE, MULTI/2CH A.DIRECT, MODE +)
137	VERSION1	I	Version setting signal input terminal
138	VERSION2	I	Version setting signal input terminal
139	RDS SIGNAL	I	FM IF signal input from the tuner unit (AEP, UK models only)
140	VCC2	—	Power supply terminal (+3.3V)
141	BACKUP	—	Power supply terminal (+3.3V) (for back up)
142	GND	—	Ground terminal
143	OPEN	—	Not used (open)
144	VSS	—	Ground terminal

• VIDEO BOARD IC307 MB90089F-G-238-BND (OSD DRIVER)

Pin No.	Pin Name	I/O	Description
1	YIN	I	Y (luminance) signal input from the Y switch (IC752)
2	CIN	I	C (color) signal input from the C switch (IC750)
3	VIN	I	Composite video signal input from the video select (IC308)
4	AVCC	—	Power supply terminal (+5V) (for analog)
5	FSCO	O	Internal color burst phase display signal output terminal Not used (open)
6	VBLK	O	Vertical blanking timing signal output terminal Not used (open)
7	VCC	—	Power supply terminal (+5V)
8	EXS	I	External clock generator circuit for color burst (NTSC: 14.31818MHz, PAL: 17.734475MHz)
9	XS	O	Clock signal output terminal for color burst Not used (open)
10	HSYNC	O	Horizontal synchronizing signal output terminal (for test)
11	VSYN	O	Vertical synchronizing signal output terminal (for test)
12	EXHSYN	I	External horizontal synchronizing signal input terminal Not used (open)
13	EXVSYN	I	External vertical synchronizing signal input terminal Not used (open)
14	VSS	—	Ground terminal
15	EXD	I	Dot clock generator connecting terminal for display
16	XD	O	Dot clock generator connecting terminal for display
17	VOB	O	Blanking signal output terminal Not used (open)
18	VOC2	O	color signal output terminal Not used (open)
19	VOC1	O	color signal output terminal Not used (open)
20	VOC0	O	color signal output terminal Not used (open)
21	TEST	I	Test signal input terminal “L”: test (normally: fixed at “H”)
22	SCLK	I	Serial data transfer shift clock signal input terminal
23	SIN	I	Serial data input terminal
24	CS	I	Chip select signal input terminal “L”: active
25	VOUT	O	Composite video signal output to the video buffer (IC305)
26	COUT	O	C (color) signal output to the video buffer (IC305)
27	YOUT	O	Y (luminance) signal output to the video buffer (IC305)
28	AVSS	—	Ground terminal (for analog)

SECTION 7

EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts

Example:

KNOB, BALANCE (WHITE) . . . (RED)

Parts Color Cabinet's Color

- Abbreviation

CH : Chinese model

CND : Canadian model

E2 : 120 V AC area in E model

E3 : 240 V AC area in E model

KR : Korean model

MY : Malaysia model

SP : Singapore model

TW : Taiwan model

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.


- Hardware (# mark) list and accessories are given in the last of the electrical parts list.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


以阴影和 $\triangle$ 标志来识别的零部件, 在安全方面具有关键性。因此只能以规定号码的零部件来更换。

7-1. CASE SECTION

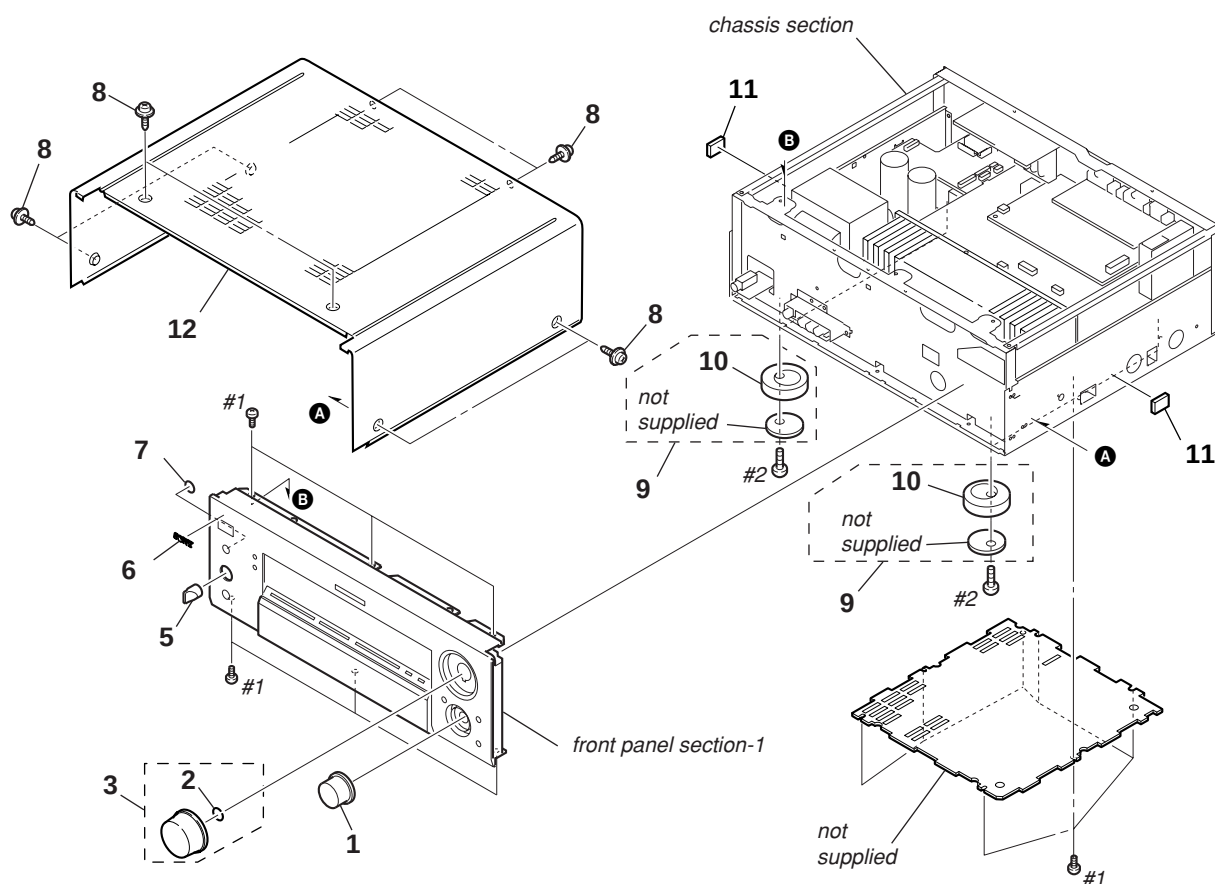


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-4948-601-1	KNOB (FUNC) ASSY (BLACK)		8	4-227-843-01	SCREW (TP), FLAT HEAD (BLACK)...(BLACK)	
1	X-4948-634-1	KNOB (FUNC) ASSY (GOLD)		8	4-227-843-11	SCREW (TP), FLAT HEAD (SILVER)...(SILVER, GOLD)	
1	X-4950-280-1	KNOB (FUNC) ASSY (SILVER)		9	X-4952-818-1	FOOT ASSY (F50180S) (US, CND)	
2	3-703-466-00	SPRING (6600)		9	X-4952-819-1	FOOT ASSY (F50180S) (EXCEPT US, CND/SILVER)	
3	X-4953-670-1	KNOB (VOL-E) ASSY (BLACK)		9	X-4952-820-1	FOOT ASSY (F50180S) (GOLD)	
3	X-4953-671-1	KNOB (VOL-E) ASSY (GOLD)		10	4-970-123-41	FOOT (F50180S) (US, CND)	
3	X-4953-672-1	KNOB (VOL-E) ASSY (SILVER)		10	4-970-123-51	FOOT (F50180S) (EXCEPT US, CND/SILVER)	
5	4-233-626-01	KNOB (F14B) (BLACK)		10	4-970-123-61	FOOT (F50180S) (GOLD)	
5	4-233-626-11	KNOB (F14B) (GOLD)		11	4-985-642-01	CUSHION	
5	4-233-626-21	KNOB (F14B) (SILVER)		* 12	X-4950-431-1	CASE ASSY (BLACK)	
6	4-942-568-41	EMBLEM (NO.5), SONY (BLACK)		* 12	X-4950-432-1	CASE ASSY (SILVER)	
6	4-942-568-51	EMBLEM (NO.5), SONY (GOLD)		* 12	X-4950-437-1	CASE ASSY (GOLD)	
6	4-942-568-61	EMBLEM (NO.5), SONY (SILVER)					
7	X-4953-000-1	WINDOW ASSY, REMOTE CONTROL					

7-2. FRONT PANEL SECTION-1

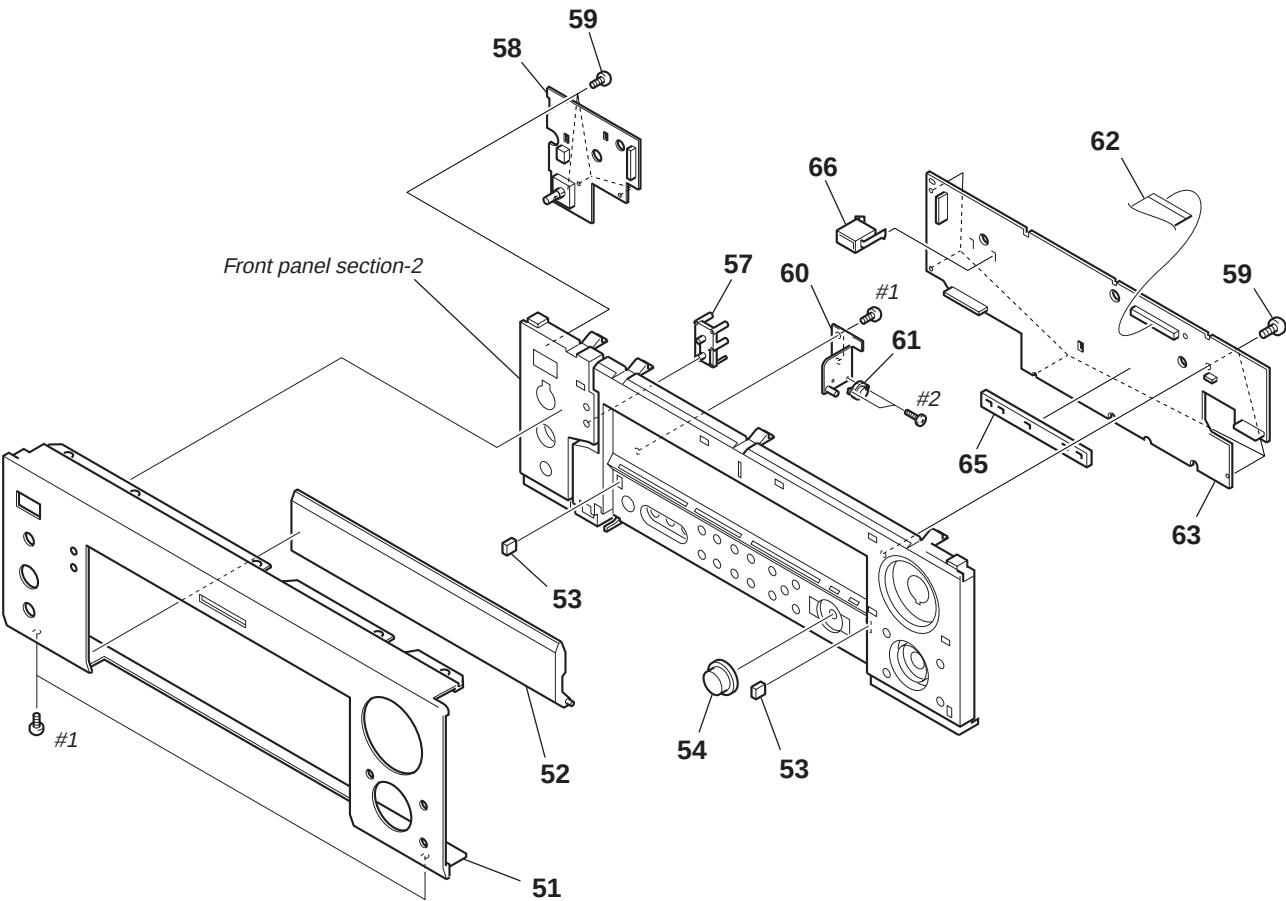


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-233-627-01	PANEL, FRONT (DB1070: CND, E2, E3, US)		54	4-217-729-01	KNOB (JOG) (BLACK)	
51	4-233-627-11	PANEL, FRONT (for BLACK) (DB1070: AEP, UK)		54	4-217-729-11	KNOB (JOG) (GOLD)	
51	4-233-627-21	PANEL, FRONT (for SILVER)	(DB1070: AEP, UK)	54	4-217-729-21	KNOB (JOG) (SILVER)	
51	4-233-627-31	PANEL, FRONT (CH, KR, MY, SP, TW)		57	4-227-138-01	BUTTON (DISPLAY) (BLACK)	
51	4-233-627-51	PANEL, FRONT (DB870: CND)		57	4-227-138-11	BUTTON (DISPLAY) (GOLD)	
51	4-233-627-61	PANEL, FRONT (for BLACK) (DB870: AEP, UK)		57	4-227-138-21	BUTTON (DISPLAY) (SILVER)	
51	4-233-627-71	PANEL, FRONT (for SILVER) (DB870: AEP, UK)		58	1-681-101-11	POWER BOARD	
52	A-2004-824-A	LID ASSY (for SILVER) (DB870: AEP, UK)		59	4-951-620-01	SCREW (2.6X8), +BVTP	
52	A-4412-934-A	LID ASSY (for BLACK) (DB870: AEP, CND, UK)		60	X-4952-753-1	BRACKET (DAMPER L) ASSY	
52	A-4412-938-A	LID ASSY (for BLACK)	(DB1070: AEP, CND, E2, E3, UK, US)	61	3-973-975-31	DAMPER, OIL	
52	A-4412-940-A	LID ASSY (CH, KR, MY, SP, TW)		62	1-765-352-11	WIRE (FLAT TYPE) (31 CORE)	
52	A-4412-942-A	LID ASSY (for SILVER) (DB1070: AEP, UK)		63	A-4476-467-A	DISP BOARD, COMPLETE (DB870)	
53	3-736-779-41	MAGNET (BLACK)		63	A-4476-500-A	DISP BOARD, COMPLETE (DB1070)	
53	3-736-779-71	MAGNET (SILVER)		65	4-227-153-01	SHEET (LIGHT INTERCEPTION)	
53	3-736-779-81	MAGNET (GOLD)		66	4-233-625-01	HOLDER (6.1CH)	

7-3. FRONT PANEL SECTION-2

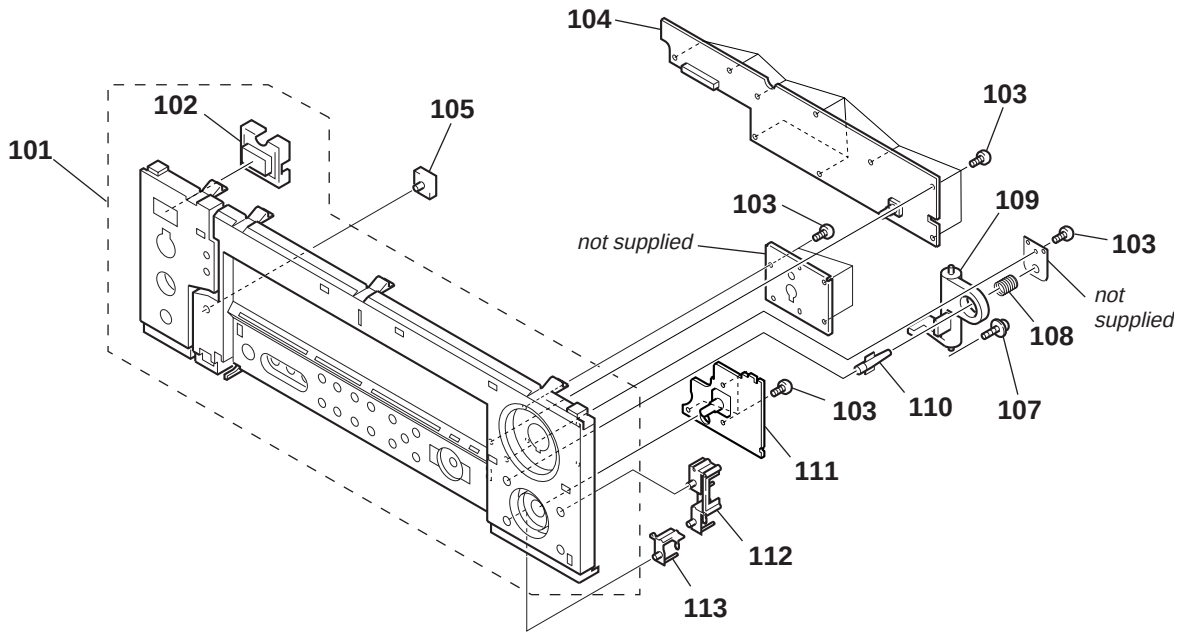


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	X-4953-673-1	BASE ASSY, PANEL (DB1070: CND, E2, E3, US)		105	4-233-621-11	BUTTON (ON SCREEN) (GOLD) (DB1070)	
101	X-4953-674-1	BASE ASSY, PANEL (for BLACK)		105	4-233-621-21	BUTTON (ON SCREEN) (SILVER)(DB1070)	
		(DB1070: AEP, UK)		107	4-913-587-81	BLACKET, YOKE	
101	X-4953-675-1	BASE ASSY, PANEL (for SILVER)		108	4-227-150-01	SPRING, COMPRESSION	
		(DB1070: AEP, UK)		109	4-227-143-01	LEVER (OPEN) (BLACK)	
101	X-4953-676-1	BASE ASSY, PANEL (CH, KR, MY, SP, TW)					
101	X-4953-677-1	BASE ASSY, PANEL (DB870: CND)		109	4-227-143-11	LEVER (OPEN) (GOLD)	
				109	4-227-143-21	LEVER (OPEN) (SILVER)	
101	X-4953-678-1	BASE ASSY, PANEL (for BLACK)		110	4-227-142-01	BUTTON (OPEN) (BLACK)	
		(DB870: AEP, UK)		110	4-227-142-11	BUTTON (OPEN) (GOLD)	
101	X-4953-741-1	BASE ASSY, PANEL (for SILVER)		110	4-227-142-21	BUTTON (OPEN) (SILVER)	
		(DB870: AEP, UK)					
102	4-998-592-01	BUTTON (POWER) (BLACK)		111	1-681-100-11	MUTING BOARD	
102	4-998-592-12	BUTTON (POWER) (GOLD)		112	X-4952-765-1	BUTTON (MUTING) ASSY (BLACK)	
102	4-998-592-23	BUTTON (POWER) (SILVER)		112	X-4952-766-1	BUTTON (MUTING) ASSY (GOLD)	
				112	X-4952-767-1	BUTTON (MUTING) ASSY (SILVER)	
103	4-951-620-01	SCREW (2.6X8), +BVTP		113	4-233-620-01	BUTTON (INPUT MODE) (BLACK)	
104	A-4476-470-A	SW BOARD, COMPLETE (DB870)					
104	A-4476-501-A	SW BOARD, COMPLETE (DB1070)		113	4-233-620-11	BUTTON (INPUT MODE) (GOLD)	
105	4-233-621-01	BUTTON (ON SCREEN) (BLACK) (DB1070)		113	4-233-620-21	BUTTON (INPUT MODE) (SILVER)	

7-4. CHASSIS SECTION-1

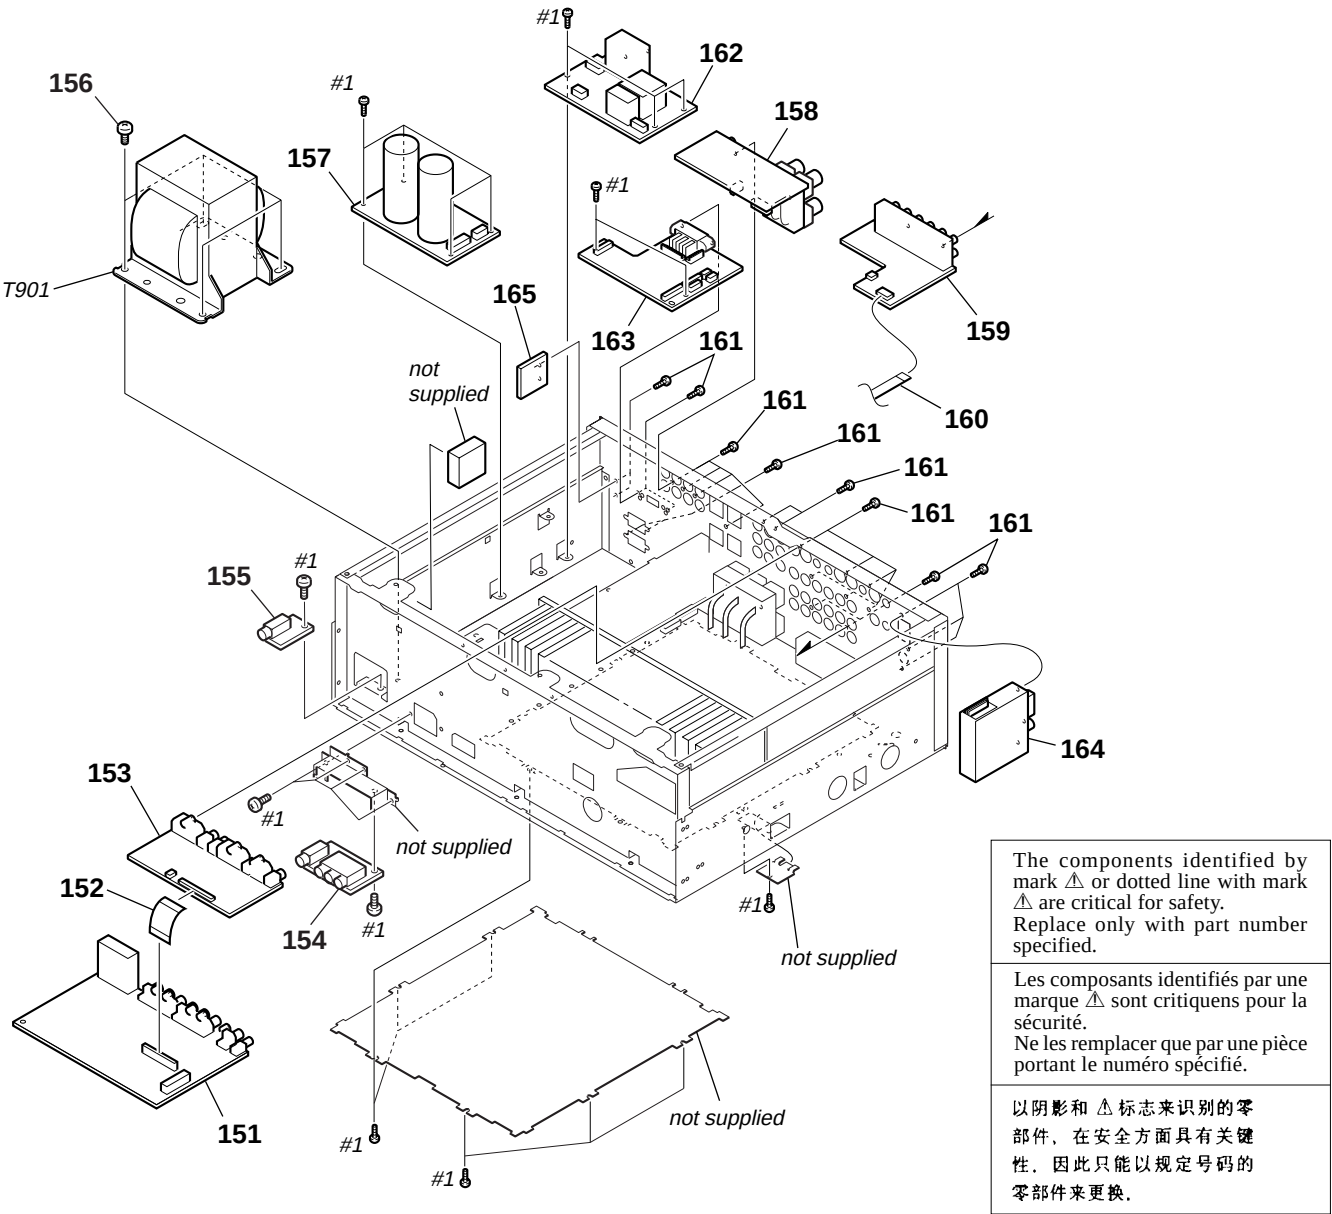

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	A-4476-492-A	VIDEO BOARD, COMPLETE (DB870: AEP, UK)		161	3-704-515-21	SCREW (BV/RING)	
151	A-4476-477-A	VIDEO BOARD, COMPLETE (DB870: CND)		162	1-681-091-11	AC BOARD	
151	A-4476-516-A	VIDEO BOARD, COMPLETE (DB1070: EXCEPT US, CND)		163	A-4726-835-A	DC 2 BOARD, COMPLETE (DB1070: CND)	
151	A-4476-505-A	VIDEO BOARD, COMPLETE (DB1070: CND, US)		163	A-4476-491-A	DC 2 BOARD, COMPLETE (DB870: AEP, UK)	
152	1-773-105-11	WIRE (FLAT TYPE) (19 CORE)		163	A-4476-476-A	DC 2 BOARD, COMPLETE (DB870: CND)	
153	A-4476-493-A	S-VIDEO BOARD, COMPLETE (DB870: AEP, UK)		163	A-4476-529-A	DC 2 BOARD, COMPLETE (DB1070: AEP, UK)	
153	A-4476-478-A	S-VIDEO BOARD, COMPLETE (DB870: CND)		163	A-4476-515-A	DC 2 BOARD, COMPLETE (CH, E2, E3, KR, MY, SP, TW)	
153	A-4476-517-A	S-VIDEO BOARD, COMPLETE (DB1070: EXCEPT US, CND)		163	A-4476-504-A	DC 2 BOARD, COMPLETE (US)	
153	A-4476-506-A	S-VIDEO BOARD, COMPLETE (DB1070: CND, US)		164	1-693-539-21	TUNER (DB870: CND/DB1070: CND, E2, E3, US)	
154	1-681-104-11	VIDEO 3 BOARD		164	1-693-540-21	TUNER (DB870: AEP, UK / DB1070: AEP, CH, KR, MY, SP, TW, UK)	
155	1-681-103-11	H.P BOARD		165	1-681-106-11	V.SWITCH BOARD (E2, E3)	
156	4-900-386-01	SCREW		Δ T901	1-437-324-11	TRANSFORMER, POWER (TW)	
157	1-681-092-11	DC1 BOARD		Δ T901	1-437-325-11	TRANSFORMER, POWER (CND, US)	
158	1-681-105-11	SP BOARD		Δ T901	1-437-327-11	TRANSFORMER, POWER (DB870: AEP, UK / DB1070: AEP, CH, KR, MY, SP, UK)	
159	1-681-096-11	VIDEO AU BOARD		Δ T901	1-437-328-11	TRANSFORMER, POWER (E2, E3)	
160	1-769-904-11	WIRE (FLAT TYPE) (9 CORE)					

7-5. CHASSIS SECTION-2

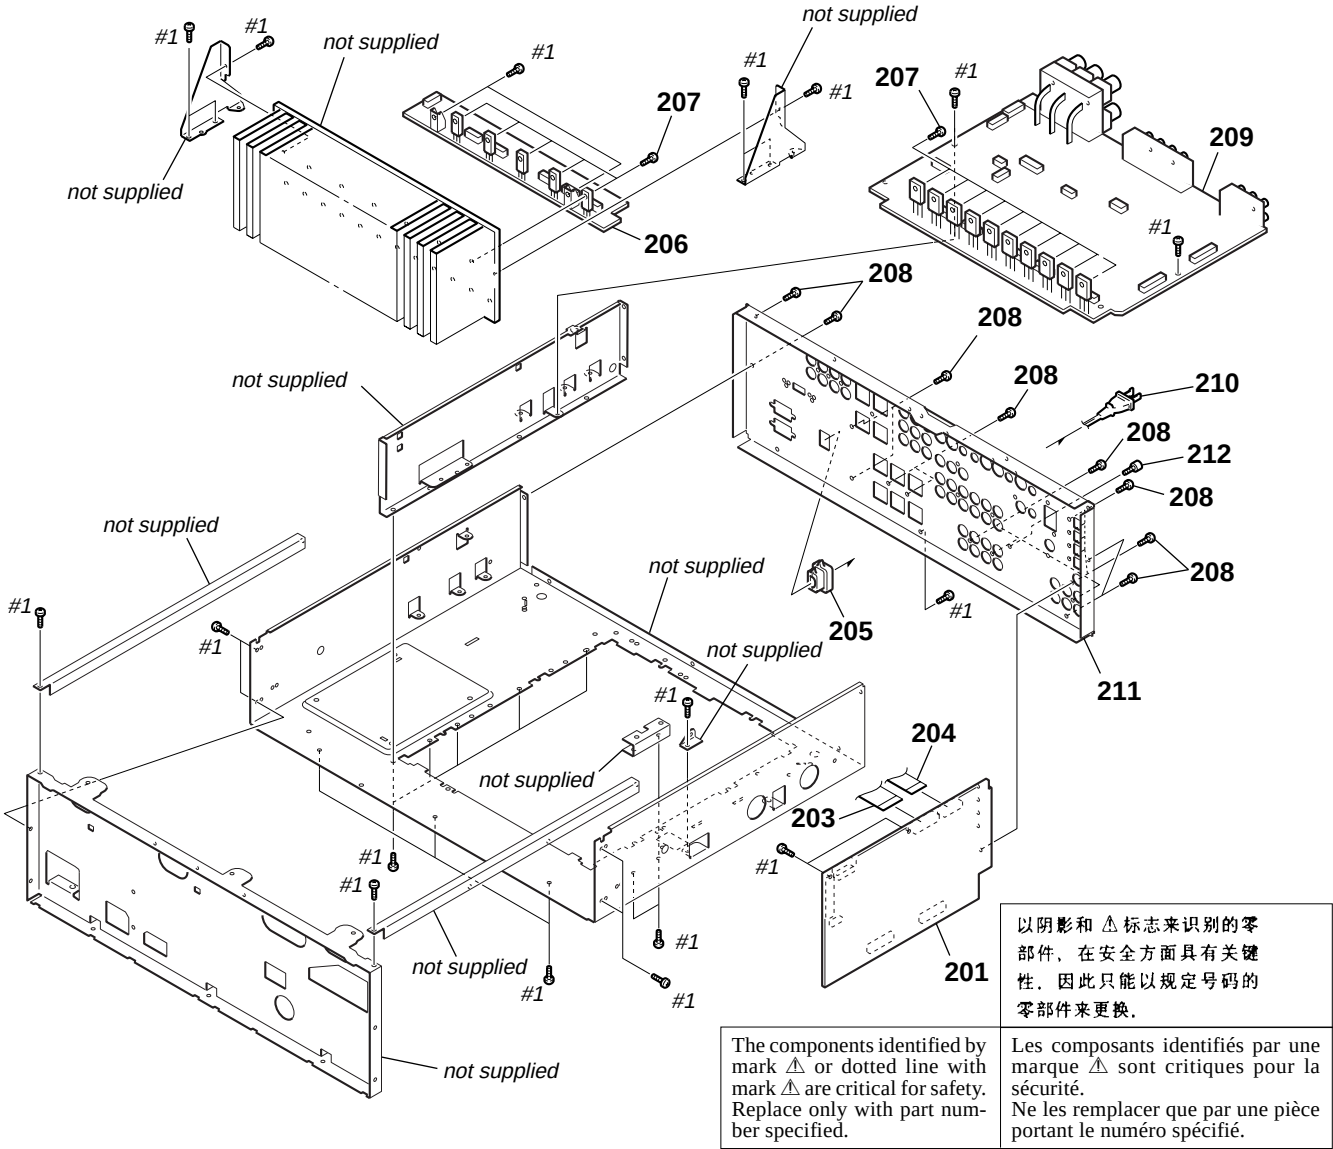

Ref. No.	Part No.	Description	Remark
201	A-4476-496-A	DIGITAL BOARD, COMPLETE (DB870: AEP, UK)	
201	A-4476-481-A	DIGITAL BOARD, COMPLETE (DB870: CND)	
201	A-4476-530-A	DIGITAL BOARD, COMPLETE (DB1070: AEP, UK)	
201	A-4476-508-A	DIGITAL BOARD, COMPLETE (DB1070: CND, US)	
201	A-4476-519-A	DIGITAL BOARD, COMPLETE (CH, KR, MY, SP, TW)	
201	A-4476-525-A	DIGITAL BOARD, COMPLETE (E2, E3)	
203	1-769-939-11	WIRE (FLAT TYPE) (11 CORE) (DB870: AEP, UK)	
203	1-773-001-11	WIRE (FLAT TYPE) (15 CORE) (DB1070: EXCEPT US, CND)	
203	1-773-143-11	WIRE (FLAT TYPE) (21 CORE) (CND, US)	
204	1-773-001-11	WIRE (FLAT TYPE) (15 CORE) (DB870)	
204	1-773-003-11	WIRE (FLAT TYPE) (15 CORE) (DB1070)	
* 205	3-703-244-00	BUSHING (2104), CORD	
206	A-4476-487-A	BIAS BOARD, COMPLETE (DB870: AEP, UK)	
206	A-4726-840-A	BIAS BOARD, COMPLETE (DB870: CND)	
206	A-4476-528-A	BIAS BOARD, COMPLETE (DB1070: AEP, UK)	
206	A-4476-841-A	BIAS BOARD, COMPLETE (DB1070: CND)	
206	A-4476-512-A	BIAS BOARD, COMPLETE (CH, E2, E3, KR, MY, SP, TW)	
206	A-4476-499-A	BIAS BOARD, COMPLETE (US)	
207	3-905-609-11	SCREW (TRANSISTOR)	
208	3-704-515-21	SCREW (BV/RING)	

Ref. No.	Part No.	Description	Remark
209	A-4476-486-A	MAIN BOARD, COMPLETE (DB870: AEP, UK)	
209	A-4476-485-A	MAIN BOARD, COMPLETE (DB870: CND)	
209	A-4476-527-A	MAIN BOARD, COMPLETE (DB1070: AEP, UK)	
209	A-4476-510-A	MAIN BOARD, COMPLETE (DB1070: CND)	
209	A-4476-511-A	MAIN BOARD, COMPLETE (CH, E2, E3, KR, MY, SP, TW)	
209	A-4476-498-A	MAIN BOARD, COMPLETE (US)	
△ 210	1-769-079-21	CORD, POWER (KR)	
△ 210	1-769-743-11	CORD, POWER (CND)	
△ 210	1-777-071-21	CORD, POWER (DB870: AEP, UK/ DB1070: AEP, E2, E3, MY, SP, TW, UK)	
△ 210	1-782-464-21	CORD, POWER (CH)	
△ 210	1-783-820-11	CORD, POWER (US)	
211	4-233-610-01	PANEL (B9), BACK (US)	
211	4-233-610-11	PANEL (B9), BACK (DB1070: CND)	
211	4-233-610-21	PANEL (B9), BACK (MY, SP)	
211	4-233-610-31	PANEL (B9), BACK (CH)	
211	4-233-610-51	PANEL (B9), BACK (DB1070: AEP, UK)	
211	4-233-610-71	PANEL (B9), BACK (E2, E3)	
211	4-233-610-81	PANEL (B9), BACK (TW)	
211	4-233-610-91	PANEL (B9), BACK (KR)	
211	4-233-630-11	PANEL (B8.E10), BACK (DB870: CND)	
211	4-233-630-21	PANEL (B8.E10), BACK (DB870: AEP, UK)	
212	4-947-010-01	SCREW, FEEDER FIXED	

SECTION 8
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
CH : Chinese model E3 : 240 V AC area in E model SP : Singapore model
CND : Canadian model KR : Korean model TW : Taiwan model
E2 : 120 V AC area in E model MY : Malaysia model
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . : μ A. . uPA. . : μ PA. .
uPB. . : μ PB. . uPC. . : μ PC. .
uPD. . : μ PD. .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 $\triangle$ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	1-681-091-11	AC BOARD *****		$\triangle$ F1	1-533-311-11	FUSE GLASS CYLINDRICAL (DIA.5) (8A/125V) (TW)	
	1-533-217-31	HOLDER, FUSE < CAPACITOR >		$\triangle$ F1	1-533-312-11	FUSE GLASS CYLINDRICAL (DIA.5) (10A/125V) (CND, US)	
C51	1-126-927-11	ELECT 2200uF 20% 10V		$\triangle$ F2	1-532-464-51	FUSE (T2.5AL/250V) (AEP, CH, KR, MY, SP, UK)	
C52	1-137-368-11	MYLAR 0.0047uF 5% 50V		$\triangle$ F2	1-533-312-11	FUSE GLASS CYLINDRICAL (DIA.5) (10A/125V) (CND, US)	
C53	1-137-465-11	MYLAR 0.056uF 5% 50V				< TRANSISTOR >	
C54	1-126-767-11	ELECT 1000uF 20% 16V		Q51	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C55	1-126-959-11	ELECT 0.47uF 20% 50V		Q52	8-729-201-53	TRANSISTOR 2SA1015-GR	
C56	1-128-817-11	CERAMIC 470PF 5% 50V		Q53	8-729-900-80	TRANSISTOR DTC124ES	
		< CONNECTOR >		Q54	8-729-119-78	TRANSISTOR 2SC2785-HFE	
* CN1	1-565-792-11	PIN, CONNECTOR 2P				< RESISTOR >	
CN2	1-564-321-00	PIN, CONNECTOR 2P		R1	1-219-237-11	SOLID 3.3M 20% 1/2W (CND, US)	
CN3	1-568-106-11	PIN, CONNECTOR 4P (E2, E3)		R51	1-249-421-11	CARBON 2.2K 5% 1/4W	
		< JACK >		R52	1-249-429-11	CARBON 10K 5% 1/4W	
$\triangle$ CNJ1	1-251-718-11	OUTLET (2 GANG) , AC (AC OUTLET) (CND, E2, E3, TW, US)		R53	1-249-415-11	CARBON 680 5% 1/4W	
$\triangle$ CNJ1	1-785-285-11	OUTLET, AC (1P) (AC OUTLET) (AEP, MY, SP, UK)		R54	1-249-437-11	CARBON 47K 5% 1/4W	
$\triangle$ CNJ1	1-815-076-11	OUTLET, AC 2P (AC OUTLET) (CH)		R55	1-249-435-11	CARBON 33K 5% 1/4W	
$\triangle$ CNJ1	1-815-751-11	OUTLET, AC 1P (AC OUTLET) (KR)		R56	1-249-429-11	CARBON 10K 5% 1/4W	
		< DIODE >		R57	1-249-429-11	CARBON 10K 5% 1/4W	
D51	8-719-911-19	DIODE 1SS199-25				< RELAY >	
D52	8-719-911-19	DIODE 1SS199-25		$\triangle$ RY1	1-755-439-11	RELAY	
D53	8-719-911-19	DIODE 1SS199-25				< TRANSFORMER >	
D54	8-719-210-21	DIODE 11EQS04		$\triangle$ T2	1-437-311-11	TRANSFORMER, POWER (TW)	
D55	8-719-210-21	DIODE 11EQS04		$\triangle$ T2	1-437-312-11	TRANSFORMER, POWER (US, CND)	
D56	8-719-210-21	DIODE 11EQS04		$\triangle$ T2	1-437-313-11	TRANSFORMER, POWER (AEP, CH, KR, MY, SP, UK)	
D57	8-719-210-21	DIODE 11EQS04		$\triangle$ T2	1-437-314-11	TRANSFORMER, POWER (E2, E3)	
D58	8-719-024-99	DIODE 11ES2-NTA2B				*****	
		< TERMINAL >					
* EB1	1-537-738-21	TERMINAL, EARTH (CND, US)					
* EB51	1-537-738-21	TERMINAL, EARTH					
		< FUSE >					
$\triangle$ F1	1-532-504-51	FUSE (T4AL/250V) (AEP, CH, E2, E3, KR, SP, UK)					

BIAS

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
A-4476-487-A	BIAS BOARD, COMPLETE (DB870: AEP, UK)			C663	1-128-813-11	CERAMIC 220PF 5% 50V	
A-4476-499-A	BIAS BOARD, COMPLETE (US)						(DB1070)
A-4476-512-A	BIAS BOARD, COMPLETE (CH, E2, E3, KR, MY, SP, TW)			C665	1-136-153-00	FILM 0.01uF 5% 50V	
A-4476-528-A	BIAS BOARD, COMPLETE (DB1070: AEP, UK)						(DB1070)
A-4476-840-A	BIAS BOARD, COMPLETE (DB870: CND)			C666	1-119-824-11	ELECT MELF 10uF 20% 50V	
							(DB1070: CH, CND, E, US)
A-4476-841-A	BIAS BOARD, COMPLETE (DB1070: CND)			C666	1-135-743-11	ELECT 10uF 50V	
	*****						(DB1070: AEP, UK)
	< CAPACITOR >			C690	1-128-840-11	ELECT 47uF 20% 16V	
							(DB1070: CH, CND, E, US)
C413	1-128-813-11	CERAMIC 220PF 5% 50V		C690	1-135-708-11	ELECT 47uF 16V	
C415	1-136-153-00	FILM 0.01uF 5% 50V					(DB1070: AEP, UK)
C416	1-119-824-11	ELECT MELF 10uF 20% 50V		C805	1-135-655-11	ELECT 470uF 6.3V	
							(DB1070: AEP, UK)
C416	1-135-743-11	ELECT 10uF 50V		C805	1-137-657-11	ELECT 470uF 20% 6.3V	
							(DB870/DB1070: CH, CND, E, US)
C440	1-128-840-11	ELECT 47uF 20% 16V		C806	1-128-805-11	CERAMIC 47PF 5% 50V	
				C807	1-126-965-11	ELECT 22uF 20% 50V	
C440	1-135-708-11	ELECT 47uF 16V		C808	1-128-805-11	CERAMIC 47PF 5% 50V	
C463	1-128-813-11	CERAMIC 220PF 5% 50V					< CONNECTOR >
C465	1-136-153-00	FILM 0.01uF 5% 50V		CN401	1-784-923-11	PIN, CONNECTOR 7P	
C466	1-119-824-11	ELECT MELF 10uF 20% 50V		CN451	1-784-923-11	PIN, CONNECTOR 7P	
				CN501	1-784-923-11	PIN, CONNECTOR 7P	
C466	1-135-743-11	ELECT 10uF 50V		CN551	1-784-923-11	PIN, CONNECTOR 7P	
				CN601	1-784-923-11	PIN, CONNECTOR 7P	
C490	1-128-840-11	ELECT 47uF 20% 16V		CN651	1-784-923-11	PIN, CONNECTOR 7P	
				CN809	1-779-977-11	PIN, CONNECTOR 6P	
C490	1-135-708-11	ELECT 47uF 16V					< DIODE >
C513	1-128-813-11	CERAMIC 220PF 5% 50V		D405	8-719-911-19	DIODE 1SS199-25	
C515	1-136-153-00	FILM 0.01uF 5% 50V		D406	8-719-911-19	DIODE 1SS199-25	
C516	1-119-824-11	ELECT MELF 10uF 20% 50V		D455	8-719-911-19	DIODE 1SS199-25	
				D456	8-719-911-19	DIODE 1SS199-25	
				D505	8-719-911-19	DIODE 1SS199-25	
C516	1-135-743-11	ELECT 10uF 50V					
				D506	8-719-911-19	DIODE 1SS199-25	
C540	1-128-840-11	ELECT 47uF 20% 16V		D555	8-719-911-19	DIODE 1SS199-25	
				D556	8-719-911-19	DIODE 1SS199-25	
C540	1-135-708-11	ELECT 47uF 16V		D605	8-719-911-19	DIODE 1SS199-25	
				D606	8-719-911-19	DIODE 1SS199-25	
C563	1-128-813-11	CERAMIC 220PF 5% 50V					
C565	1-136-153-00	FILM 0.01uF 5% 50V		D655	8-719-911-19	DIODE 1SS199-25 (DB1070)	
C566	1-119-824-11	ELECT MELF 10uF 20% 50V		D656	8-719-911-19	DIODE 1SS199-25 (DB1070)	
				D805	8-719-911-19	DIODE 1SS199-25	
C566	1-135-743-11	ELECT 10uF 50V		D806	8-719-911-19	DIODE 1SS199-25	
				D807	8-719-911-19	DIODE 1SS199-25	
C590	1-128-840-11	ELECT 47uF 20% 16V					
				D808	8-719-911-19	DIODE 1SS199-25	
C590	1-135-708-11	ELECT 47uF 16V		D817	8-719-911-19	DIODE 1SS199-25	
							< IC >
C613	1-128-813-11	CERAMIC 220PF 5% 50V		IC803	8-759-636-74	IC M5218AP-22	
C615	1-136-153-00	FILM 0.01uF 5% 50V					< TRANSISTOR >
C616	1-119-824-11	ELECT MELF 10uF 20% 50V					
				Q404	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
C616	1-135-743-11	ELECT 10uF 50V		Q405	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
				Q406	8-729-281-53	TRANSISTOR 2SC1815-GR	
C640	1-128-840-11	ELECT 47uF 20% 16V		Q440	8-729-026-08	TRANSISTOR 2SC4495	
				Q454	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
C640	1-135-708-11	ELECT 47uF 16V					
				Q455	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	

BIAS

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
Q456	8-729-281-53	TRANSISTOR	2SC1815-GR				R477	1-249-433-11	CARBON	22K	5%	1/4W	
Q490	8-729-026-08	TRANSISTOR	2SC4495				R490	1-249-425-11	CARBON	4.7K	5%	1/4W	
Q504	8-729-140-82	TRANSISTOR	2SA988-PAFAEA										
Q505	8-729-140-82	TRANSISTOR	2SA988-PAFAEA				R491	1-249-417-11	CARBON	1K	5%	1/4W	
							R492	1-249-429-11	CARBON	10K	5%	1/4W	
Q506	8-729-281-53	TRANSISTOR	2SC1815-GR				R515	1-249-425-11	CARBON	4.7K	5%	1/4W	
Q540	8-729-026-08	TRANSISTOR	2SC4495				△ R516	1-240-855-11	CARBON	6.2K	5%	1/4W	F
Q554	8-729-140-82	TRANSISTOR	2SA988-PAFAEA				R518	1-249-420-11	CARBON	1.8K	5%	1/4W	
Q555	8-729-140-82	TRANSISTOR	2SA988-PAFAEA										
Q556	8-729-281-53	TRANSISTOR	2SC1815-GR				R519	1-249-439-11	CARBON	68K	5%	1/4W	
							R520	1-249-431-11	CARBON	15K	5%	1/4W	
Q590	8-729-026-08	TRANSISTOR	2SC4495				R521	1-247-866-11	CARBON	30K	5%	1/4W	
Q604	8-729-140-82	TRANSISTOR	2SA988-PAFAEA				R522	1-247-843-11	CARBON	3.3K	5%	1/4W	
Q605	8-729-140-82	TRANSISTOR	2SA988-PAFAEA										(AEP, UK)
Q606	8-729-281-53	TRANSISTOR	2SC1815-GR				R522	1-249-425-11	CARBON	4.7K	5%	1/4W	
Q640	8-729-026-08	TRANSISTOR	2SC4495										(CND, US)
Q654	8-729-140-82	TRANSISTOR	2SA988-PAFAEA (DB1070)				R522	1-249-429-11	CARBON	10K	5%	1/4W	
Q655	8-729-140-82	TRANSISTOR	2SA988-PAFAEA (DB1070)										(CH, E)
Q656	8-729-281-53	TRANSISTOR	2SC1815-GR (DB1070)				R524	1-249-431-11	CARBON	15K	5%	1/4W	
Q690	8-729-026-08	TRANSISTOR	2SC4495 (DB1070)				R525	1-249-437-11	CARBON	47K	5%	1/4W	
Q801	8-729-140-82	TRANSISTOR	2SA988-PAFAEA				R526	1-249-437-11	CARBON	47K	5%	1/4W	
							R527	1-249-433-11	CARBON	22K	5%	1/4W	
Q802	8-729-119-78	TRANSISTOR	2SC2785-HFE				R540	1-249-425-11	CARBON	4.7K	5%	1/4W	
Q803	8-729-140-82	TRANSISTOR	2SA988-PAFAEA				R541	1-249-417-11	CARBON	1K	5%	1/4W	
Q804	8-729-900-36	TRANSISTOR	DTC124ES				R542	1-249-429-11	CARBON	10K	5%	1/4W	
Q805	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA				R565	1-249-425-11	CARBON	4.7K	5%	1/4W	
							△ R566	1-240-855-11	CARBON	6.2K	5%	1/4W	F
		< RESISTOR >											
R415	1-249-425-11	CARBON	4.7K	5%	1/4W		R568	1-249-420-11	CARBON	1.8K	5%	1/4W	
△ R416	1-240-855-11	CARBON	6.2K	5%	1/4W	F	R569	1-249-431-11	CARBON	15K	5%	1/4W	
R418	1-249-420-11	CARBON	1.8K	5%	1/4W		R570	1-249-439-11	CARBON	68K	5%	1/4W	
R419	1-249-431-11	CARBON	15K	5%	1/4W		R571	1-247-866-11	CARBON	30K	5%	1/4W	
R420	1-249-439-11	CARBON	68K	5%	1/4W		R572	1-247-843-11	CARBON	3.3K	5%	1/4W	
													(AEP, UK)
R421	1-247-866-11	CARBON	30K	5%	1/4W								
R422	1-247-843-11	CARBON	3.3K	5%	1/4W		R572	1-249-425-11	CARBON	4.7K	5%	1/4W	
					(AEP, UK)								(CND, US)
R422	1-249-425-11	CARBON	4.7K	5%	1/4W		R572	1-249-429-11	CARBON	10K	5%	1/4W	
					(CND, US)								(CH, E)
R422	1-249-429-11	CARBON	10K	5%	1/4W		R574	1-249-431-11	CARBON	15K	5%	1/4W	
					(CH, E)		R575	1-249-437-11	CARBON	47K	5%	1/4W	
R424	1-249-431-11	CARBON	15K	5%	1/4W		R576	1-249-437-11	CARBON	47K	5%	1/4W	
R425	1-249-437-11	CARBON	47K	5%	1/4W		R577	1-249-433-11	CARBON	22K	5%	1/4W	
R426	1-249-437-11	CARBON	47K	5%	1/4W		R590	1-249-425-11	CARBON	4.7K	5%	1/4W	
R427	1-249-433-11	CARBON	22K	5%	1/4W		R591	1-249-417-11	CARBON	1K	5%	1/4W	
R440	1-249-425-11	CARBON	4.7K	5%	1/4W		R592	1-249-429-11	CARBON	10K	5%	1/4W	
R441	1-249-417-11	CARBON	1K	5%	1/4W		R615	1-249-425-11	CARBON	4.7K	5%	1/4W	
R442	1-249-429-11	CARBON	10K	5%	1/4W		△ R616	1-240-855-11	CARBON	6.2K	5%	1/4W	F
R465	1-249-425-11	CARBON	4.7K	5%	1/4W		R618	1-249-420-11	CARBON	1.8K	5%	1/4W	
△ R466	1-240-855-11	CARBON	6.2K	5%	1/4W	F	R619	1-249-431-11	CARBON	15K	5%	1/4W	
R468	1-249-420-11	CARBON	1.8K	5%	1/4W		R620	1-249-439-11	CARBON	68K	5%	1/4W	
R469	1-249-431-11	CARBON	15K	5%	1/4W		R621	1-247-866-11	CARBON	30K	5%	1/4W	
R470	1-249-439-11	CARBON	68K	5%	1/4W		R622	1-247-843-11	CARBON	3.3K	5%	1/4W	
R471	1-247-866-11	CARBON	30K	5%	1/4W								(AEP, UK)
R472	1-247-843-11	CARBON	3.3K	5%	1/4W		R622	1-249-425-11	CARBON	4.7K	5%	1/4W	
					(AEP, UK)								(CND, US)
R472	1-249-425-11	CARBON	4.7K	5%	1/4W		R622	1-249-429-11	CARBON	10K	5%	1/4W	
					(CND, US)								(CH, E)
R472	1-249-429-11	CARBON	10K	5%	1/4W		R624	1-249-431-11	CARBON	15K	5%	1/4W	
					(CH, E)		R625	1-249-437-11	CARBON	47K	5%	1/4W	
R474	1-249-431-11	CARBON	15K	5%	1/4W		R626	1-249-437-11	CARBON	47K	5%	1/4W	
R475	1-249-437-11	CARBON	47K	5%	1/4W		R627	1-249-433-11	CARBON	22K	5%	1/4W	
R476	1-249-437-11	CARBON	47K	5%	1/4W		R640	1-249-425-11	CARBON	4.7K	5%	1/4W	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。
--	--	---

BIAS

DC1

DC2

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R641	1-249-417-11	CARBON	1K	5%	1/4W	C916	1-137-666-12	ELECT	15000uF	20%	71V
R642	1-249-429-11	CARBON	10K	5%	1/4W						(DB1070)
R665	1-249-425-11	CARBON	4.7K	5%	1/4W	C917	1-137-350-11	MYLAR	0.015uF	10%	100V
△ R666	1-240-855-11	CARBON	6.2K	5%	1/4W F						(AEP, CH, E, UK)
R668	1-249-420-11	CARBON	1.8K	5%	1/4W	C917	1-137-419-11	MYLAR	0.033uF	10%	100V
R669	1-249-431-11	CARBON	15K	5%	1/4W						(CND, US)
R670	1-249-439-11	CARBON	68K	5%	1/4W	C918	1-137-350-11	MYLAR	0.015uF	10%	100V
					(DB1070)						(AEP, CH, E, UK)
R671	1-247-866-11	CARBON	30K	5%	1/4W	C918	1-137-419-11	MYLAR	0.033uF	10%	100V
R672	1-247-843-11	CARBON	3.3K	5%	1/4W						(CND, US)
					(DB1070: AEP, UK)	C918	1-137-350-11	MYLAR	0.015uF	10%	100V
R672	1-249-425-11	CARBON	4.7K	5%	1/4W						(AEP, CH, E, UK)
					(DB1070: CND, US)	C918	1-137-419-11	MYLAR	0.033uF	10%	100V
R672	1-249-429-11	CARBON	10K	5%	1/4W						(CND, US)
					(DB1070: CH, E)	C919	1-104-999-11	MYLAR	0.1uF	10%	200V
R674	1-249-431-11	CARBON	15K	5%	1/4W						(AEP, CH, E, UK)
					(DB1070)						
R675	1-249-437-11	CARBON	47K	5%	1/4W			< DIODE >			
					(DB1070)	D914	8-719-072-05	DIODE RBV-602LF-A			
R676	1-249-437-11	CARBON	47K	5%	1/4W			< FUSE >			
					(DB1070)	△ F905	1-533-311-11	FUSE GLASS CYLINDRICAL (DIA.5)			(8A/125V)
R677	1-249-433-11	CARBON	22K	5%	1/4W						(CND, US)
					(DB1070)	△ F906	1-533-311-11	FUSE GLASS CYLINDRICAL (DIA.5)			(8A/125V)
R690	1-249-425-11	CARBON	4.7K	5%	1/4W						(CND, US)
R691	1-249-417-11	CARBON	1K	5%	1/4W			< RESISTOR >			
					(DB1070)	△ R913	1-249-407-11	CARBON	150	5%	1/4W F
R692	1-249-429-11	CARBON	10K	5%	1/4W						(AEP, CH, E, UK)
					(DB1070)						*****
R801	1-249-433-11	CARBON	22K	5%	1/4W			A-4476-476-A	DC2 BOARD, COMPLETE (DB870: CND)		
R802	1-249-417-11	CARBON	1K	5%	1/4W			A-4476-491-A	DC2 BOARD, COMPLETE (DB870: AEP, UK)		
R803	1-249-433-11	CARBON	22K	5%	1/4W			A-4476-504-A	DC2 BOARD, COMPLETE (US)		
					(DB870)			A-4476-515-A	DC2 BOARD, COMPLETE		
R803	1-249-435-11	CARBON	33K	5%	1/4W				(CH, E2, E3, KR, MY, SP, TW)		
					(DB1070)			A-4476-529-A	DC2 BOARD, COMPLETE (DB1070: AEP, UK)		
								A-4726-835-A	DC2 BOARD, COMPLETE (DB1070: CND)		

								1-533-217-31	HOLDER, FUSE		
								< CAPACITOR >			
R804	1-249-429-11	CARBON	10K	5%	1/4W	C901	1-104-660-11	ELECT	47uF	20%	16V
R805	1-249-429-11	CARBON	10K	5%	1/4W	C902	1-127-732-51	ELECT MELF	2200uF	20%	35V
R806	1-249-436-11	CARBON	39K	5%	1/4W						(DB870/DB1070: CH, CND, E, US)
R807	1-249-427-11	CARBON	6.8K	5%	1/4W	C902	1-135-781-51	ELECT	2200uF		35V
R819	1-249-429-11	CARBON	10K	5%	1/4W						(DB1070: AEP, UK)
R857	1-249-429-11	CARBON	10K	5%	1/4W	C903	1-127-731-51	ELECT MELF	1000uF	20%	35V
											(DB870/DB1070: CH, CND, E, US)
R858	1-247-895-00	CARBON	470K	5%	1/4W	C903	1-135-780-51	ELECT	1000uF		35V
R863	1-249-433-11	CARBON	22K	5%	1/4W						(DB1070: AEP, UK)

	1-681-092-11	DC1 BOARD				C904	1-126-967-11	ELECT	47uF	20%	50V
		*****				C905	1-104-660-11	ELECT	47uF	20%	16V
						C906	1-126-967-11	ELECT	47uF	20%	50V
	1-533-217-31	HOLDER, FUSE (CND, US)				C907	1-127-723-51	ELECT MELF	4700uF	20%	16V
											(DB870/DB1070: CH, CND, E, US)
		< CAPACITOR >				C907	1-135-696-11	ELECT	4700uF		16V
											(DB1070: AEP, UK)
C915	1-125-895-11	ELECT	12000uF	20%	71V	C908	1-126-767-11	ELECT	1000uF	20%	16V
					(DB870)	C909	1-128-554-11	ELECT	330uF	20%	63V
C915	1-137-666-12	ELECT	15000uF	20%	71V	C912	1-104-660-11	ELECT	47uF	20%	16V
					(DB1070)						
C916	1-125-895-11	ELECT	12000uF	20%	71V						
					(DB870)						

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

DC2

DIGITAL

Ref. No.	Part No.	Description	Remark
< CONNECTOR >			
CN904	1-784-922-11	PIN, CONNECTOR 5P	
CN905	1-785-101-11	PIN, CONNECTOR 3P	
CN906	1-691-768-11	PLUG (MICRO CONNECTOR) 6P	
CN907	1-564-506-11	PLUG, CONNECTOR 3P	
CN908	1-564-506-21	PLUG, CONNECTOR 3P	
CN909	1-785-103-11	PIN, CONNECTOR 5P	
< DIODE >			
D901	8-719-109-89	DIODE RD5.6ESB2	
D902	8-719-983-95	DIODE MTZJ-T-72-39	
D903	8-719-024-99	DIODE 11ES2-NTA2B	
D904	8-719-024-99	DIODE 11ES2-NTA2B	
D905	8-719-024-99	DIODE 11ES2-NTA2B	
D906	8-719-024-99	DIODE 11ES2-NTA2B	
D907	8-719-118-63	DIODE RD5.6F-T7B2	
D908	8-719-510-53	DIODE D4SB60L	
D912	8-719-024-99	DIODE 11ES2-NTA2B	
D913	8-719-024-99	DIODE 11ES2-NTA2B	
< FUSE >			
△ F903	1-532-504-51	FUSE (4A/250V) (EXPECT US, CND)	
△ F903	1-533-419-11	FUSE (4A/125V) (US, CND)	
△ F904	1-532-504-51	FUSE (4A/250V) (EXPECT US, CND)	
△ F904	1-533-419-11	FUSE (4A/125V) (US, CND)	
< TRANSISTOR >			
Q902	8-729-041-38	TRANSISTOR 2SB1241TV2Q	
Q903	8-729-051-94	TRANSISTOR 2SD1863TV2	
Q904	8-729-119-76	TRANSISTOR 2SA1115-EF	
Q905	8-729-119-76	TRANSISTOR 2SA1115-EF	
< RESISTOR >			
R902	1-249-433-11	CARBON 22K 5% 1/4W	
R903	1-249-421-11	CARBON 2.2K 5% 1/4W	
R904	1-249-429-11	CARBON 10K 5% 1/4W	
R905	1-249-429-11	CARBON 10K 5% 1/4W	
R906	1-249-421-11	CARBON 2.2K 5% 1/4W	
R908	1-249-429-11	CARBON 10K 5% 1/4W	
△ R909	1-212-974-00	RES, FUSE 47 5% 1/2W (CND)	
△ R909	1-249-385-11	CARBON 2.2 5% 1/6W F (EXCEPT CND)	
△ R910	1-212-974-00	RES, FUSE 47 5% 1/2W (CND)	
△ R910	1-249-385-11	CARBON 2.2 5% 1/6W F (EXCEPT CND)	
△ R911	1-216-349-00	METAL OXIDE 1 5% 1W F	
△ R912	1-216-349-00	METAL OXIDE 1 5% 1W F	
< SWITCH >			
△ S901	1-771-876-11	SWITCH, POWER (IMPEDANCE SELECTOR)	

Ref. No.	Part No.	Description	Remark
	A-4476-481-A	DIGITAL BOARD, COMPLETE (DB870: CND)	
	A-4476-496-A	DIGITAL BOARD, COMPLETE (DB870: AEP, UK)	
	A-4476-508-A	DIGITAL BOARD, COMPLETE (DB1070: CND, US)	
	A-4476-519-A	DIGITAL BOARD, COMPLETE (CH, KR, MY, SP, TW)	
	A-4476-525-A	DIGITAL BOARD, COMPLETE(E2, E3)	
	A-4476-530-A	DIGITAL BOARD, COMPLETE (DB1070: AEP, UK)	

*	3-309-144-21	HEAT SINK	
	7-685-872-09	SCREW +BVTT 3X8 (S)	
< CAPACITOR >			
C1101	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C1102	1-128-840-11	ELECT 47uF 20% 16V (DB870/DB1070: CH, CND, E, US)	
C1102	1-135-708-11	ELECT 47uF 16V (DB1070: AEP, UK)	
C1103	1-119-824-11	ELECT MELF 10uF 20% 50V (DB870/DB1070: CH, CND, E, US)	
C1103	1-135-743-11	ELECT 10uF 50V (DB1070: AEP, UK)	
C1104	1-119-823-11	ELECT 4.7uF 20% 50V (DB870/DB1070: CH, CND, E, US)	
C1104	1-135-742-11	ELECT 4.7uF 50V (DB1070: AEP, UK)	
C1105	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C1106	1-119-823-11	ELECT 4.7uF 20% 50V (DB870/DB1070: CH, CND, E, US)	
C1106	1-135-742-11	ELECT 4.7uF 50V (DB1070: AEP, UK)	
C1107	1-119-824-11	ELECT MELF 10uF 20% 50V (DB870/DB1070: CH, CND, E, US)	
C1107	1-135-743-11	ELECT 10uF 50V (DB1070: AEP, UK)	
C1108	1-163-133-00	CERAMIC CHIP 470PF 5% 50V	
C1109	1-128-840-11	ELECT 47uF 20% 16V (DB870/DB1070: CH, CND, E, US)	
C1109	1-135-708-11	ELECT 47uF 16V (DB1070: AEP, UK)	
C1110	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C1112	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C1113	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C1114	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C1115	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C1121	1-128-858-11	ELECT 22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	
C1121	1-135-744-11	ELECT 22uF 50V (DB1070: AEP, UK)	
C1131	1-128-858-11	ELECT 22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	
C1131	1-135-744-11	ELECT 22uF 50V (DB1070: AEP, UK)	
C1201	1-128-846-11	ELECT 330uF 20% 25V (DB870/DB1070: CH, CND, E, US)	
C1201	1-135-683-11	ELECT 330uF 25V (DB1070: AEP, UK)	
C1202	1-165-319-11	CERAMIC CHIP 0.1uF 50V	
C1203	1-165-319-11	CERAMIC CHIP 0.1uF 50V	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

DIGITAL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C1204	1-127-719-11	ELECT MELF	220uF 20% 16V (DB870/DB1070: CH, CND, E, US)	C1252	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V
C1204	1-135-710-11	ELECT	220uF 16V (DB1070: AEP, UK)	C1253	1-163-257-11	CERAMIC CHIP	180PF 5% 50V
C1205	1-119-824-11	ELECT MELF	10uF 20% 50V (DB1070: AEP, CH, E, UK)	C1254	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)
C1205	1-135-743-11	ELECT	10uF 50V (DB1070: AEP, UK)	C1254	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1206	1-165-319-11	CERAMIC CHIP	0.1uF 50V (DB1070)	C1261	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)
C1207	1-119-824-11	ELECT MELF	10uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1261	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1207	1-135-743-11	ELECT	10uF 50V (DB1070: AEP, UK)	C1262	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V
C1208	1-119-824-11	ELECT MELF	10uF 20% 50V (DB1070: US, CND, E, CH)	C1263	1-163-257-11	CERAMIC CHIP	180PF 5% 50V
C1208	1-135-743-11	ELECT	10uF 50V (DB1070: AEP, UK)	C1264	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)
C1210	1-165-319-11	CERAMIC CHIP	0.1uF 50V	C1264	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1211	1-165-319-11	CERAMIC CHIP	0.1uF 50V	C1271	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)
C1212	1-165-319-11	CERAMIC CHIP	0.1uF 50V (DB1070)	C1271	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1213	1-119-824-11	ELECT MELF	10uF 20% 50V (DB1070: US, CND, E, CH)	C1272	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V
C1213	1-135-743-11	ELECT	10uF 50V (DB1070: AEP, UK)	C1273	1-163-257-11	CERAMIC CHIP	180PF 5% 50V
C1214	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V	C1274	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)
C1221	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1274	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1221	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1281	1-128-858-11	ELECT	22uF 20% 50V (DB1070: CH, CND, E, US)
C1222	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V	C1281	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1223	1-163-257-11	CERAMIC CHIP	180PF 5% 50V	C1282	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V (DB1070)
C1224	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1283	1-163-257-11	CERAMIC CHIP	180PF 5% 50V (DB1070)
C1224	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1284	1-128-858-11	ELECT	22uF 20% 50V (DB1070: CH, CND, E, US)
C1231	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1284	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)
C1231	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1306	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C1232	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V	C1307	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C1233	1-163-257-11	CERAMIC CHIP	180PF 5% 50V	C1308	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C1234	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1309	1-127-718-11	ELECT MELF	100uF 20% 16V (DB870/DB1070: CH, CND, E, US)
C1234	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1309	1-135-709-11	ELECT	100uF 16V (DB1070: AEP, UK)
C1241	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1310	1-127-718-11	ELECT MELF	100uF 20% 16V (DB870/DB1070: CH, CND, E, US)
C1241	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1310	1-135-709-11	ELECT	100uF 16V (DB1070: AEP, UK)
C1242	1-163-012-00	CERAMIC CHIP	0.0018uF 5% 50V	C1313	1-163-243-11	CERAMIC CHIP	47PF 5% 50V (AEP, UK)
C1243	1-163-257-11	CERAMIC CHIP	180PF 5% 50V	C1314	1-163-249-11	CERAMIC CHIP	82PF 5% 50V (AEP, UK)
C1244	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1315	1-165-319-11	CERAMIC CHIP	0.1uF 50V (AEP, UK)
C1244	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1316	1-163-263-11	CERAMIC CHIP	330PF 5% 50V (AEP, UK)
C1251	1-128-858-11	ELECT	22uF 20% 50V (DB870/DB1070: CH, CND, E, US)	C1317	1-119-824-11	ELECT MELF	10uF 20% 50V (DB870: AEP, UK)
C1251	1-135-744-11	ELECT	22uF 50V (DB1070: AEP, UK)	C1317	1-135-743-11	ELECT	10uF 50V (DB1070: AEP, UK)

STR-DB870/DB1070

DIGITAL

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C1318	1-119-824-11	ELECT MELF	10uF	20%	50V	C1505	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB870: AEP, UK)	C1506	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1318	1-135-743-11	ELECT	10uF		50V	C1507	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB1070: AEP, UK)						
C1319	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V	C1508	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(AEP, UK)	C1509	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1320	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1510	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(AEP, UK)	C1511	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1401	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	C1512	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1402	1-165-319-11	CERAMIC CHIP	0.1uF		50V						
C1403	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1513	1-128-840-11	ELECT	47uF	20%	16V
											(DB870/DB1070: CH, CND, E, US)
C1404	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1513	1-135-708-11	ELECT	47uF		16V
C1405	1-165-319-11	CERAMIC CHIP	0.1uF		50V						(DB1070: AEP, UK)
C1406	1-128-858-11	ELECT	22uF	20%	50V	C1514	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB870/DB1070: CH, CND, E, US)	C1515	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1406	1-135-744-11	ELECT	22uF		50V	C1516	1-127-720-11	ELECT MELF	470uF	20%	16V
					(DB1070: AEP, UK)						(DB870/DB1070: CH, CND, E, US)
C1408	1-163-217-11	CERAMIC CHIP	1PF	0.25PF	50V	C1516	1-135-711-11	ELECT	470uF		16V
											(DB1070: AEP, UK)
C1409	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1517	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1410	1-127-720-11	ELECT MELF	470uF	20%	16V	C1601	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB870/DB1070: CH, CND, E, US)	C1602	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1410	1-135-711-11	ELECT	470uF		16V	C1603	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB1070: AEP, UK)						
C1411	1-119-824-11	ELECT MELF	10uF	20%	50V	C1604	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB870/DB1070: CH, CND, E, US)	C1605	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1411	1-135-743-11	ELECT	10uF		50V	C1606	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB1070: AEP, UK)	C1607	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
						C1608	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1412	1-165-319-11	CERAMIC CHIP	0.1uF		50V						
C1413	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1609	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1414	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1610	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1415	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	C1611	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1416	1-164-222-11	CERAMIC CHIP	0.22uF		25V	C1612	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
						C1613	1-128-840-11	ELECT	47uF	20%	16V
C1417	1-165-319-11	CERAMIC CHIP	0.1uF		50V						(DB870/DB1070: CH, CND, E, US)
C1418	1-128-840-11	ELECT	47uF	20%	16V						
					(DB870/DB1070: CH, CND, E, US)	C1613	1-135-708-11	ELECT	47uF		16V
C1418	1-135-708-11	ELECT	47uF		16V						(DB1070: AEP, UK)
					(DB1070: AEP, UK)	C1614	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1419	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1615	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1420	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V	C1616	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
						C1617	1-127-720-11	ELECT MELF	470uF	20%	16V
C1421	1-165-319-11	CERAMIC CHIP	0.1uF		50V						(DB870/DB1070: CH, CND, E, US)
C1422	1-165-319-11	CERAMIC CHIP	0.1uF		50V						
C1423	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1617	1-135-711-11	ELECT	470uF		16V
C1424	1-165-319-11	CERAMIC CHIP	0.1uF		50V						(DB1070: AEP, UK)
C1425	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C1618	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
						C1701	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1426	1-128-840-11	ELECT	47uF	20%	16V	C1702	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
					(DB870/DB1070: CH, CND, E, US)	C1705	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1426	1-135-708-11	ELECT	47uF		16V						
					(DB1070: AEP, UK)	C1706	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1427	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1707	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1428	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1708	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1429	1-163-231-11	CERAMIC CHIP	15PF	5%	50V	C1709	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
						C1710	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1430	1-163-231-11	CERAMIC CHIP	15PF	5%	50V						
C1431	1-127-719-11	ELECT MELF	220uF	20%	16V	C1711	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
					(DB870/DB1070: CH, CND, E, US)	C1712	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1431	1-135-710-11	ELECT	220uF		16V	C1713	1-119-824-11	ELECT MELF	10uF	20%	50V
					(DB1070: AEP, UK)						(DB870/DB1070: CH, CND, E, US)
C1501	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1713	1-135-743-11	ELECT	10uF		50V
C1502	1-165-319-11	CERAMIC CHIP	0.1uF		50V						(DB1070: AEP, UK)
						C1714	1-165-319-11	CERAMIC CHIP	0.1uF	50V	
C1503	1-165-319-11	CERAMIC CHIP	0.1uF		50V						
C1504	1-165-319-11	CERAMIC CHIP	0.1uF		50V	C1715	1-165-319-11	CERAMIC CHIP	0.1uF	50V	

75

DIGITAL

Ref. No.	Part No.	Description	Remark		
IC1803	8-759-450-47	IC BA05T			
IC1804	8-759-445-59	IC BA033T			
IC1805	8-759-835-63	IC NJM2391DL1-26-TE1			
IC1806	8-759-445-59	IC BA033T			
IC1807	8-759-231-53	IC TA7805S			
IC1808	8-759-231-53	IC TA7805S			
< JACK >					
J1401	1-794-972-11	JACK, PIN 1P (DIGITAL DVD/LD COAXIAL IN)	(DB870)		
J1401	1-794-973-11	JACK, PIN 1P (DIGITAL DVD/LD COAXIAL IN)	(DB1070)		
< SHORT >					
JW1001	1-211-950-11	SHORT	0		
JW1002	1-216-296-11	SHORT	0		
JW1003	1-216-296-11	SHORT	0		
JW1004	1-216-296-11	SHORT	0		
JW1005	1-216-296-11	SHORT	0		
JW1006	1-216-296-11	SHORT	0		
JW1101	1-216-295-11	SHORT	0 (CH, CND, E, US)		
JW1102	1-216-295-11	SHORT	0 (CH, CND, E, US)		
JW1103	1-216-295-11	SHORT	0 (CH, CND, E, US)		
JW1104	1-216-295-11	SHORT	0 (AEP, CH, E, UK)		
JW1105	1-216-295-11	SHORT	0 (AEP, CH, E, UK)		
L1201	1-216-295-11	SHORT	0 (AEP, UK)		
< TRANSISTOR >					
Q1401	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q1402	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q1701	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q1702	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q1703	8-729-027-43	TRANSISTOR	RT1N141C-TP-1		
Q1704	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q1705	8-729-230-49	TRANSISTOR	2SC2712-YG		
Q1801	8-729-140-93	TRANSISTOR	2SB733-34		
Q1802	8-729-027-43	TRANSISTOR	RT1N141C-TP-1		
Q1803	8-729-140-93	TRANSISTOR	2SB733-34		
Q1804	8-729-027-43	TRANSISTOR	RT1N141C-TP-1		
Q1810	8-729-048-78	TRANSISTOR	2SD1733-TL-QR		
Q1811	8-729-140-93	TRANSISTOR	2SB733-34		
Q1812	8-729-027-43	TRANSISTOR	RT1N141C-TP-1		
Q1813	8-729-140-93	TRANSISTOR	2SB733-34		
Q1814	8-729-027-43	TRANSISTOR	RT1N141C-TP-1		
< RESISTOR >					
R1101	1-216-025-11	RES-CHIP	100	5%	1/10W
R1121	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1122	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1124	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1131	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1132	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1134	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1201	1-216-025-11	RES-CHIP	100	5%	1/10W
R1202	1-216-025-11	RES-CHIP	100	5%	1/10W
R1203	1-216-025-11	RES-CHIP	100	5%	1/10W
R1204	1-216-073-00	RES-CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description	Remark			
R1212	1-216-025-11	RES-CHIP	100	5%	1/10W	(DB1070)
R1220	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R1221	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R1222	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1223	1-216-033-00	METAL CHIP	220	5%	1/10W	
R1224	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1230	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R1231	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R1232	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1233	1-216-033-00	METAL CHIP	220	5%	1/10W	
R1234	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1240	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R1241	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R1242	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1243	1-216-033-00	METAL CHIP	220	5%	1/10W	
R1244	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1250	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R1251	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R1252	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1253	1-216-033-00	METAL CHIP	220	5%	1/10W	
R1254	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1260	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R1261	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R1262	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1263	1-216-033-00	METAL CHIP	220	5%	1/10W	
R1264	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1270	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	
R1271	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R1272	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1273	1-216-033-00	METAL CHIP	220	5%	1/10W	
R1274	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1280	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	(DB1070)
R1281	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	(DB1070)
R1282	1-216-081-00	METAL CHIP	22K	5%	1/10W	(DB1070)
R1283	1-216-033-00	METAL CHIP	220	5%	1/10W	(DB1070)
R1284	1-216-097-11	RES-CHIP	100K	5%	1/10W	(DB1070)
R1303	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R1304	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	
R1307	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	(AEP, UK)
R1308	1-216-025-11	RES-CHIP	100	5%	1/10W	(AEP, UK)
R1401	1-216-022-00	METAL CHIP	75	5%	1/10W	
R1402	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1403	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R1404	1-216-115-00	METAL CHIP	560K	5%	1/10W	
R1405	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1406	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1407	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1408	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1409	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R1410	1-216-085-00	RES-CHIP	33K	5%	1/10W	
R1411	1-216-025-11	RES-CHIP	100	5%	1/10W	

DIGITAL

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R1412	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	R1667	1-216-295-11	SHORT	0		
R1413	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R1701	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1414	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1702	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1415	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1703	1-216-001-00	METAL CHIP	10	5%	1/10W
R1416	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1704	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1417	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1705	1-216-025-11	RES-CHIP	100	5%	1/10W
R1418	1-216-025-11	RES-CHIP	100	5%	1/10W	R1706	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1419	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1707	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1420	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1708	1-216-025-11	RES-CHIP	100	5%	1/10W
R1421	1-216-025-11	RES-CHIP	100	5%	1/10W	R1709	1-216-025-11	RES-CHIP	100	5%	1/10W
R1422	1-216-025-11	RES-CHIP	100	5%	1/10W	R1710	1-216-025-11	RES-CHIP	100	5%	1/10W
R1423	1-216-025-11	RES-CHIP	100	5%	1/10W	R1711	1-216-025-11	RES-CHIP	100	5%	1/10W
R1424	1-216-025-11	RES-CHIP	100	5%	1/10W	R1712	1-216-025-11	RES-CHIP	100	5%	1/10W
R1425	1-216-025-11	RES-CHIP	100	5%	1/10W	R1713	1-216-025-11	RES-CHIP	100	5%	1/10W
R1426	1-216-025-11	RES-CHIP	100	5%	1/10W	R1714	1-216-025-11	RES-CHIP	100	5%	1/10W
R1427	1-216-049-11	RES-CHIP	1K	5%	1/10W	R1715	1-216-025-11	RES-CHIP	100	5%	1/10W
R1428	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R1716	1-216-025-11	RES-CHIP	100	5%	1/10W
R1429	1-216-295-11	SHORT	0			R1717	1-216-025-11	RES-CHIP	100	5%	1/10W
R1430	1-216-025-11	RES-CHIP	100	5%	1/10W	R1718	1-216-025-11	RES-CHIP	100	5%	1/10W
R1431	1-216-121-11	RES-CHIP	1M	5%	1/10W	R1719	1-216-025-11	RES-CHIP	100	5%	1/10W
R1432	1-216-025-11	RES-CHIP	100	5%	1/10W	R1720	1-216-025-11	RES-CHIP	100	5%	1/10W
R1433	1-216-029-00	METAL CHIP	150	5%	1/10W	R1721	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R1434	1-216-025-11	RES-CHIP	100	5%	1/10W	R1722	1-216-025-11	RES-CHIP	100	5%	1/10W
R1435	1-216-025-11	RES-CHIP	100	5%	1/10W	R1723	1-216-025-11	RES-CHIP	100	5%	1/10W
R1436	1-216-025-11	RES-CHIP	100	5%	1/10W	R1724	1-216-025-11	RES-CHIP	100	5%	1/10W
R1437	1-216-033-00	METAL CHIP	220	5%	1/10W	R1725	1-216-025-11	RES-CHIP	100	5%	1/10W
R1501	1-216-025-11	RES-CHIP	100	5%	1/10W	R1726	1-216-025-11	RES-CHIP	100	5%	1/10W
R1502	1-216-025-11	RES-CHIP	100	5%	1/10W	R1727	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R1503	1-216-025-11	RES-CHIP	100	5%	1/10W	R1728	1-216-025-11	RES-CHIP	100	5%	1/10W
R1504	1-216-025-11	RES-CHIP	100	5%	1/10W	R1729	1-216-025-11	RES-CHIP	100	5%	1/10W
R1505	1-216-025-11	RES-CHIP	100	5%	1/10W	R1730	1-216-025-11	RES-CHIP	100	5%	1/10W
R1506	1-216-025-11	RES-CHIP	100	5%	1/10W	R1731	1-216-025-11	RES-CHIP	100	5%	1/10W
R1507	1-216-025-11	RES-CHIP	100	5%	1/10W	R1732	1-216-025-11	RES-CHIP	100	5%	1/10W
R1508	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1733	1-216-025-11	RES-CHIP	100	5%	1/10W
R1509	1-216-295-11	SHORT	0			R1734	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1510	1-216-025-11	RES-CHIP	100	5%	1/10W	R1735	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1512	1-216-025-11	RES-CHIP	100	5%	1/10W	R1736	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1513	1-216-025-11	RES-CHIP	100	5%	1/10W	R1737	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1566	1-216-025-11	RES-CHIP	100	5%	1/10W	R1738	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1601	1-216-025-11	RES-CHIP	100	5%	1/10W	R1739	1-216-025-11	RES-CHIP	100	5%	1/10W
R1602	1-216-025-11	RES-CHIP	100	5%	1/10W	R1740	1-216-025-11	RES-CHIP	100	5%	1/10W
R1603	1-216-073-00	RES-CHIP	10K	5%	1/10W	R1741	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1605	1-216-025-11	RES-CHIP	100	5%	1/10W	R1742	1-216-033-00	METAL CHIP	220	5%	1/10W
R1606	1-216-065-00	RES-CHIP	4.7K	5%	1/10W	R1743	1-216-025-11	RES-CHIP	100	5%	1/10W
R1607	1-216-025-11	RES-CHIP	100	5%	1/10W	R1744	1-216-025-11	RES-CHIP	100	5%	1/10W
R1608	1-216-295-11	SHORT	0			R1745	1-216-025-11	RES-CHIP	100	5%	1/10W
R1609	1-216-025-11	RES-CHIP	100	5%	1/10W	R1746	1-216-025-11	RES-CHIP	100	5%	1/10W
R1610	1-216-025-11	RES-CHIP	100	5%	1/10W						(CND, US)
R1611	1-216-025-11	RES-CHIP	100	5%	1/10W	R1747	1-216-025-11	RES-CHIP	100	5%	1/10W
R1612	1-216-033-00	METAL CHIP	220	5%	1/10W	R1748	1-216-025-11	RES-CHIP	100	5%	1/10W
R1650	1-216-025-11	RES-CHIP	100	5%	1/10W						(CND, US)
R1651	1-216-025-11	RES-CHIP	100	5%	1/10W	R1749	1-216-025-11	RES-CHIP	100	5%	1/10W
R1653	1-216-025-11	RES-CHIP	100	5%	1/10W	R1750	1-216-025-11	RES-CHIP	100	5%	1/10W
R1654	1-216-025-11	RES-CHIP	100	5%	1/10W	R1751	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1655	1-216-025-11	RES-CHIP	100	5%	1/10W	R1752	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1656	1-216-025-11	RES-CHIP	100	5%	1/10W	R1753	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1657	1-216-025-11	RES-CHIP	100	5%	1/10W	R1754	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1666	1-216-025-11	RES-CHIP	100	5%	1/10W						

STR-DB870/DB1070

DIGITAL

DISP

Ref. No.	Part No.	Description	Remark		
R1755	1-216-025-11	RES-CHIP	100	5%	1/10W
R1756	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1757	1-216-295-11	SHORT	0 (DB1070)		
R1758	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1759	1-216-057-00	METAL CHIP	2.2K	5%	1/10W (E2, E3)
R1759	1-216-073-00	RES-CHIP	10K	5%	1/10W (CH, KR, MY, SP, TW)
R1759	1-216-295-11	SHORT	0 (AEP, UK)		
R1760	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1761	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1762	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1763	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1764	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1765	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1766	1-216-025-11	RES-CHIP	100	5%	1/10W
R1767	1-216-049-11	RES-CHIP	1K	5%	1/10W (AEP, UK)
R1768	1-216-025-11	RES-CHIP	100	5%	1/10W
R1769	1-216-077-00	RES-CHIP	15K	5%	1/10W (DB1070)
R1770	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1771	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1772	1-216-033-00	METAL CHIP	220	5%	1/10W
R1773	1-216-025-11	RES-CHIP	100	5%	1/10W
R1774	1-216-033-00	METAL CHIP	220	5%	1/10W
R1775	1-216-025-11	RES-CHIP	100	5%	1/10W
R1776	1-216-025-11	RES-CHIP	100	5%	1/10W
R1777	1-216-025-11	RES-CHIP	100	5%	1/10W
R1778	1-216-033-00	METAL CHIP	220	5%	1/10W
R1779	1-216-025-11	RES-CHIP	100	5%	1/10W
R1780	1-216-025-11	RES-CHIP	100	5%	1/10W
R1781	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1782	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1783	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1784	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1785	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1786	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1787	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1788	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1789	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1790	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1791	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1792	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1793	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1794	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1795	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1796	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1797	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1798	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1799	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1800	1-216-033-00	METAL CHIP	220	5%	1/10W
R1801	1-216-045-00	METAL CHIP	680	5%	1/10W
R1802	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1803	1-216-045-00	METAL CHIP	680	5%	1/10W
R1804	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1805	1-216-045-00	METAL CHIP	680	5%	1/10W
R1806	1-216-073-00	RES-CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R1807	1-216-045-00	METAL CHIP	680	5%	1/10W
R1808	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1809	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1810	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1811	1-216-033-00	METAL CHIP	220	5%	1/10W
R1812	1-216-033-00	METAL CHIP	220	5%	1/10W (AEP, CH, E, UK)
R1813	1-216-033-00	METAL CHIP	220	5%	1/10W
R1814	1-216-033-00	METAL CHIP	220	5%	1/10W
R1815	1-216-025-11	RES-CHIP	100	5%	1/10W
< VIBRATOR >					
X1301	1-781-536-11	VIBRATOR, CRYSTAL (4.332MHz) (AEP, UK)			
X1401	1-795-219-21	VIBRATOR, CRYSTAL (24.576MHz)			
X1501	1-795-297-21	VIBRATOR, CERAMIC (13.5MHz)			
X1601	1-795-264-21	VIBRATOR, CERAMIC (13.5MHz)			
X1701	1-795-179-21	VIBRATOR, CERAMIC (16.5MHz)			

	A-4476-467-A	DISP BOARD, COMPLETE (DB870)			
	A-4476-500-A	DISP BOARD, COMPLETE (DB1070)			

*	4-921-941-01	CUSHION (FL)			
*	4-990-797-01	HOLDER (FL)			
< CAPACITOR >					
C1601	1-126-967-11	ELECT	47uF	20%	50V
C1602	1-164-159-11	CERAMIC	0.1uF		50V
C1603	1-164-159-11	CERAMIC	0.1uF		50V
C1607	1-164-159-11	CERAMIC	0.1uF		50V
C1608	1-164-159-11	CERAMIC	0.1uF		50V
C1609	1-164-159-11	CERAMIC	0.1uF		50V
C1610	1-164-159-11	CERAMIC	0.1uF		50V
C1611	1-164-159-11	CERAMIC	0.1uF		50V
C1612	1-164-159-11	CERAMIC	0.1uF		50V
C1613	1-164-159-11	CERAMIC	0.1uF		50V
C1614	1-164-159-11	CERAMIC	0.1uF		50V
C1615	1-164-159-11	CERAMIC	0.1uF		50V
C1616	1-164-159-11	CERAMIC	0.1uF		50V
C1617	1-162-282-31	CERAMIC	100PF	10%	50V
C1618	1-162-282-31	CERAMIC	100PF	10%	50V
C1619	1-162-282-31	CERAMIC	100PF	10%	50V
< CONNECTOR >					
CN1601	1-784-792-11	CONNECTOR, FFC 31P			
CN1602	1-770-553-11	CONNECTOR, BOARD TO BOARD 11P			
* CN1603	1-568-056-11	PIN, BOARD TO BOARD 8P			
CN1604	1-784-807-11	CONNECTOR, BOARD TO BOARD 13P			
< LED >					
D1601	8-719-075-60	LED	SELS5823C-TP15 (VIDEO 1)		
D1602	8-719-075-60	LED	SELS5823C-TP15 (VIDEO 2)		
D1603	8-719-075-60	LED	SELS5823C-TP15 (VIDEO 3)		
D1604	8-719-075-60	LED	SELS5823C-TP15 (DVD/LD)		
D1605	8-719-075-60	LED	SELS5823C-TP15 (TV/SAT)		
D1606	8-719-075-60	LED	SELS5823C-TP15 (MD/TAPE (DB870), TAPE (DB1070))		
D1607	8-719-075-60	LED	SELS5823C-TP15 (CD/SACD) (DB1070)		

DISP

H.P

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D1608	8-719-075-60	LED SELS5823C-TP15 (CD/SACD (DB870), MD/DAT (DB1070))				< ROTARY ENCODER >	
D1609	8-719-075-60	LED SELS5823C-TP15 (TUNER)		RV1601	1-418-773-11	ENCODER, ROTARY (MASTER VOLUME)	
D1610	8-719-075-60	LED SELS5823C-TP15 (PHONO)				*****	
D1611	8-719-313-50	LED SEL6810A-TH12 (DIMMER)		1-681-103-11	H.P BOARD		
D1612	8-719-075-59	LED SELS5B23C-TP15 (DIGITAL CINEMA SOUND)			*****		
D1613	8-719-075-59	LED SELS5B23C-TP15 (6.1CH DECODING)			< CONNECTOR >		
D1614	8-719-046-39	LED SEL5821A-TP15 (NIGHT MODE)		CN749	1-784-922-11	PIN, CONNECTOR 5P	
D1615	8-719-046-39	LED SEL5821A-TP15 (MULTI/2CH A.DIRECT)			< TERMINAL >		
D1616	8-719-046-39	LED SEL5821A-TP15 (2CH)		* EB749	1-537-738-21	TERMINAL, EARTH	
D1617	8-719-046-39	LED SEL5821A-TP15 (MODE)			< JACK >		
D1618	8-719-046-39	LED SEL5821A-TP15 (A.F.D.)		J749	1-815-313-21	JACK (PHONES)	
D1619	8-719-084-07	LED SEL5E20CTP15 (MULTI CHANNEL DECODING)			*****		
		< FLUORESCENT INDICATOR TUBE >			A-4476-485-A	MAIN BOARD, COMPLETE (DB870: CND)	
FL1601	1-518-737-11	INDICATOR TUBE, FLUORESCENT			A-4476-486-A	MAIN BOARD, COMPLETE (DB870: AEP, UK)	
		< IC >			A-4476-498-A	MAIN BOARD, COMPLETE (US)	
IC1601	8-759-679-75	IC ML9261MB			A-4476-510-A	MAIN BOARD, COMPLETE (DB1070: CND)	
IC1602	8-759-373-50	IC NJU3719L			A-4476-511-A	MAIN BOARD, COMPLETE (CH, E2, E3, KR, MY, SP, TW)	
IC1603	8-759-036-90	IC MC74ACT08N			A-4476-527-A	MAIN BOARD, COMPLETE (DB1070: AEP, UK)	
IC1610	8-759-036-90	IC MC74ACT08N			*****		
		< TRANSISTOR >		7-685-872-09	SCREW +BVTT 3X8 (S)		
Q1602	8-729-119-76	TRANSISTOR 2SA1175-HFE			< CAPACITOR >		
		< RESISTOR >		C107	1-128-825-11	CERAMIC 2200PF 5% 50V	
△R1601	1-249-381-11	CARBON 1 5% 1/4W F		C108	1-128-809-11	CERAMIC 100PF 5% 50V	
△R1602	1-249-381-11	CARBON 1 5% 1/4W F				(AEP, CH, E, UK)	
R1607	1-249-429-11	CARBON 10K 5% 1/4W		C109	1-128-813-11	CERAMIC 220PF 5% 50V	
R1608	1-249-429-11	CARBON 10K 5% 1/4W				(AEP, CH, E, UK)	
R1609	1-249-429-11	CARBON 10K 5% 1/4W		C110	1-119-821-11	ELECT MELF 2.2uF 20% 50V	
						(DB870/DB1070: CH, CND, E, US)	
R1610	1-249-429-11	CARBON 10K 5% 1/4W		C110	1-135-740-11	ELECT 2.2uF 50V	
R1617	1-249-429-11	CARBON 10K 5% 1/4W				(DB1070: AEP, UK)	
R1618	1-249-429-11	CARBON 10K 5% 1/4W		C111	1-128-832-11	ELECT 220uF 20% 10V	
R1629	1-249-437-11	CARBON 47K 5% 1/4W				(DB870/DB1070: CH, CND, E, US)	
R1630	1-249-437-11	CARBON 47K 5% 1/4W		C111	1-135-667-11	ELECT 220uF 10V	
						(DB1070: AEP, UK)	
R1631	1-249-409-11	CARBON 220 5% 1/4W		C112	1-128-809-11	CERAMIC 100PF 5% 50V	
R1632	1-249-411-11	CARBON 330 5% 1/4W				(AEP, CH, E, UK)	
R1633	1-249-411-11	CARBON 330 5% 1/4W		C113	1-125-896-11	MYLAR 0.0091uF 5% 50V	
R1634	1-249-411-11	CARBON 330 5% 1/4W		C114	1-136-159-00	MYLAR 0.033uF 5% 50V	
R1635	1-249-411-11	CARBON 330 5% 1/4W					
R1636	1-249-411-11	CARBON 330 5% 1/4W		C115	1-119-821-11	ELECT MELF 2.2uF 20% 50V	
R1637	1-249-402-11	CARBON 56 5% 1/4W				(DB870/DB1070: CH, CND, E, US)	
R1638	1-249-409-11	CARBON 220 5% 1/4W		C115	1-135-740-11	ELECT 2.2uF 50V	
R1640	1-249-429-11	CARBON 10K 5% 1/4W				(DB1070: AEP, UK)	
R1641	1-247-807-31	CARBON 100 5% 1/4W		C123	1-128-858-11	ELECT 22uF 20% 50V	
						(DB1070: CH, CND, E, US)	
R1642	1-247-807-31	CARBON 100 5% 1/4W		C123	1-135-744-11	ELECT 22uF 50V	
R1643	1-247-807-31	CARBON 100 5% 1/4W				(DB1070: AEP, UK)	
R1644	1-247-807-31	CARBON 100 5% 1/4W		C124	1-128-858-11	ELECT 22uF 20% 50V	
R1645	1-247-807-31	CARBON 100 5% 1/4W				(DB1070: CH, CND, E, US)	
R1646	1-247-807-31	CARBON 100 5% 1/4W		C124	1-135-744-11	ELECT 22uF 50V	
						(DB1070: AEP, UK)	
R1647	1-247-807-31	CARBON 100 5% 1/4W		C125	1-128-809-11	CERAMIC 100PF 5% 50V	
R1648	1-247-807-31	CARBON 100 5% 1/4W				(DB1070)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

STR-DB870/DB1070

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C126	1-128-825-11	CERAMIC	2200PF	5%	50V (DB1070)	C409	1-135-667-11	ELECT	220uF	10V (DB1070: AEP, UK)	
C127	1-128-825-11	CERAMIC	2200PF	5%	50V (DB1070)	C410	1-128-809-11	CERAMIC	100PF	5%	50V
C128	1-127-868-11	CERAMIC	2200PF	10%	50V	C411	1-107-597-11	CERAMIC	22PF	10%	500V
C129	1-127-868-11	CERAMIC	2200PF	10%	50V	C412	1-107-597-11	CERAMIC	22PF	10%	500V
C130	1-128-809-11	CERAMIC	100PF	5%	50V	C414	1-136-163-00	MYLAR	0.068uF	5%	50V
C131	1-127-868-11	CERAMIC	2200PF	10%	50V	C417	1-128-809-11	CERAMIC	100PF	5%	50V
C132	1-127-868-11	CERAMIC	2200PF	10%	50V	C419	1-128-840-11	ELECT	47uF	20%	16V
C133	1-128-809-11	CERAMIC	100PF	5%	50V	C419	1-135-708-11	ELECT	47uF	16V (DB870/DB1070: CH, CND, E, US)	
C134	1-128-809-11	CERAMIC	100PF	5%	50V (DB1070)	C420	1-128-809-11	CERAMIC	100PF	5%	50V
C136	1-128-825-11	CERAMIC	2200PF	5%	50V	C451	1-128-858-11	ELECT	22uF	20%	50V
C137	1-128-825-11	CERAMIC	2200PF	5%	50V (DB1070)	C451	1-135-744-11	ELECT	22uF	50V (DB870/DB1070: CH, CND, E, US)	
C138	1-127-876-11	CERAMIC	0.01uF	10%	50V					50V (DB1070: AEP, UK)	
C159	1-128-813-11	CERAMIC	220PF	5%	50V (AEP, CH, E, UK)	C452	1-128-813-11	CERAMIC	220PF	5%	50V
C160	1-119-821-11	ELECT MELF	2.2uF	20%	50V (DB870/DB1070: CH, CND, E, US)	C454	1-128-858-11	ELECT	22uF	20%	50V
C160	1-135-740-11	ELECT	2.2uF		50V (DB1070: AEP, UK)	C454	1-135-744-11	ELECT	22uF	50V (DB870/DB1070: CH, CND, E, US)	
C161	1-128-832-11	ELECT	220uF	20%	10V (DB870/DB1070: CH, CND, E, US)	C455	1-128-813-11	CERAMIC	220PF	5%	50V
C161	1-135-667-11	ELECT	220uF		10V (DB1070: AEP, UK)	C456	1-102-233-00	CERAMIC	33PF	10%	500V
C162	1-128-809-11	CERAMIC	100PF	5%	50V (AEP, CH, E, UK)	C457	1-136-163-00	MYLAR	0.068uF	5%	50V
C163	1-125-896-11	MYLAR	0.0091uF	5%	50V	C458	1-102-230-00	CERAMIC	4PF	0.25PF	500V
C164	1-136-159-00	MYLAR	0.033uF	5%	50V	C459	1-128-832-11	ELECT	220uF	20%	10V
C165	1-119-821-11	ELECT MELF	2.2uF	20%	50V (DB870/DB1070: CH, CND, E, US)	C459	1-135-667-11	ELECT	220uF	10V (DB870/DB1070: CH, CND, E, US)	
C165	1-135-740-11	ELECT	2.2uF		50V (DB1070: AEP, UK)	C460	1-128-809-11	CERAMIC	100PF	5%	50V
C173	1-128-858-11	ELECT	22uF	20%	50V (DB1070: CH, CND, E, US)	C461	1-107-597-11	CERAMIC	22PF	10%	500V
C173	1-135-744-11	ELECT	22uF		50V (DB1070: AEP, UK)	C462	1-107-597-11	CERAMIC	22PF	10%	500V
C174	1-128-858-11	ELECT	22uF	20%	50V (DB1070: CH, CND, E, US)	C464	1-136-163-00	MYLAR	0.068uF	5%	50V
C174	1-135-744-11	ELECT	22uF		50V (DB1070: AEP, UK)	C467	1-128-840-11	ELECT	47uF	20%	16V
C175	1-128-809-11	CERAMIC	100PF	5%	50V (DB1070)	C467	1-135-708-11	ELECT	47uF	16V (DB870/DB1070: CH, CND, E, US)	
C177	1-128-825-11	CERAMIC	2200PF	5%	50V (DB1070)					16V (DB1070: AEP, UK)	
C401	1-128-858-11	ELECT	22uF	20%	50V (DB870/DB1070: CH, CND, E, US)	C501	1-128-858-11	ELECT	22uF	20%	50V
C401	1-135-744-11	ELECT	22uF		50V (DB1070: AEP, UK)	C501	1-135-744-11	ELECT	22uF	50V (DB870/DB1070: CH, CND, E, US)	
C402	1-128-813-11	CERAMIC	220PF	5%	50V	C502	1-128-813-11	CERAMIC	220PF	5%	50V
C404	1-128-858-11	ELECT	22uF	20%	50V (DB870/DB1070: CH, CND, E, US)	C504	1-128-858-11	ELECT	22uF	20%	50V
C404	1-135-744-11	ELECT	22uF		50V (DB1070: AEP, UK)	C504	1-135-744-11	ELECT	22uF	50V (DB870/DB1070: CH, CND, E, US)	
C405	1-128-813-11	CERAMIC	220PF	5%	50V	C505	1-128-813-11	CERAMIC	220PF	5%	50V
C406	1-102-233-00	CERAMIC	33PF	10%	500V	C506	1-102-233-00	CERAMIC	33PF	10%	500V
C407	1-136-163-00	MYLAR	0.068uF	5%	50V	C507	1-128-809-11	CERAMIC	100PF	5%	50V
C408	1-102-230-00	CERAMIC	4PF	0.25PF	500V	C508	1-102-230-00	CERAMIC	4PF	0.25PF	500V
C409	1-128-832-11	ELECT	220uF	20%	10V (DB870/DB1070: CH, CND, E, US)	C509	1-128-832-11	ELECT	220uF	20%	10V
						C509	1-135-667-11	ELECT	220uF	10V (DB1070: AEP, UK)	
						C510	1-128-809-11	CERAMIC	100PF	5%	50V
						C511	1-107-597-11	CERAMIC	22PF	10%	500V
						C512	1-107-597-11	CERAMIC	22PF	10%	500V
						C514	1-136-163-00	MYLAR	0.068uF	5%	50V
						C517	1-128-809-11	CERAMIC	100PF	5%	50V
						C518	1-128-840-11	ELECT	47uF	20%	16V
										16V (DB870/DB1070: CH, CND, E, US)	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C518	1-135-708-11	ELECT	47uF	16V	(DB1070: AEP, UK)	C651	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)
C519	1-128-809-11	CERAMIC	100PF	5%	50V	C652	1-128-813-11	CERAMIC	220PF	5%	50V
C520	1-136-163-00	MYLAR	0.068uF	5%	50V	C654	1-128-858-11	ELECT	22uF	20%	50V
C551	1-128-858-11	ELECT	22uF	20%	50V	(DB1070: CH, CND, E, US)			C654	1-135-744-11	ELECT
			(DB870/DB1070: CH, CND, E, US)						22uF	50V	(DB1070: AEP, UK)
C551	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)	C655	1-128-813-11	CERAMIC	220PF	5%	50V
C552	1-128-813-11	CERAMIC	220PF	5%	50V	C656	1-102-233-00	CERAMIC	33PF	10%	500V
C554	1-128-858-11	ELECT	22uF	20%	50V	(DB1070: CH, CND, E, US)			C657	1-128-809-11	CERAMIC
			(DB870/DB1070: CH, CND, E, US)						100PF	5%	50V
C554	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)	C658	1-102-230-00	CERAMIC	4PF	0.25PF	500V
C555	1-128-813-11	CERAMIC	220PF	5%	50V	(DB1070: CH, CND, E, US)					
C556	1-102-233-00	CERAMIC	33PF	10%	500V	C659	1-128-832-11	ELECT	220uF	20%	10V
C557	1-128-809-11	CERAMIC	100PF	5%	50V	(DB1070: CH, CND, E, US)			C659	1-135-667-11	ELECT
C558	1-102-230-00	CERAMIC	4PF	0.25PF	500V				220uF	10V	(DB1070: AEP, UK)
C559	1-128-832-11	ELECT	220uF	20%	10V	C660	1-128-809-11	CERAMIC	100PF	5%	50V
			(DB870/DB1070: CH, CND, E, US)						22PF	10%	500V
C559	1-135-667-11	ELECT	220uF	10V	(DB1070: AEP, UK)	C661	1-107-597-11	CERAMIC	22PF	10%	500V
									22PF	10%	500V
C560	1-128-809-11	CERAMIC	100PF	5%	50V	(DB1070: CH, CND, E, US)			C662	1-107-597-11	CERAMIC
C561	1-107-597-11	CERAMIC	22PF	10%	500V				22PF	10%	500V
C562	1-107-597-11	CERAMIC	22PF	10%	500V	C664	1-136-163-00	MYLAR	0.068uF	5%	50V
C564	1-136-163-00	MYLAR	0.068uF	5%	50V	(DB1070: CH, CND, E, US)			47uF	20%	16V
C567	1-128-840-11	ELECT	47uF	20%	16V						
			(DB870/DB1070: CH, CND, E, US)			C667	1-128-840-11	ELECT	47uF	20%	16V
C567	1-135-708-11	ELECT	47uF	16V	(DB1070: AEP, UK)	(DB870/DB1070: CH, CND, E, US)			47uF	16V	(DB1070: AEP, UK)
C568	1-136-163-00	MYLAR	0.068uF	5%	50V	C667	1-135-708-11	ELECT	47uF	16V	(DB1070: AEP, UK)
C601	1-128-858-11	ELECT	22uF	20%	50V	C668	1-136-163-00	MYLAR	0.068uF	5%	50V
			(DB870/DB1070: CH, CND, E, US)						22uF	20%	50V
C601	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)	C701	1-128-858-11	ELECT	22uF	20%	50V
C602	1-128-813-11	CERAMIC	220PF	5%	50V	(DB1070: CH, CND, E, US)					
C604	1-128-858-11	ELECT	22uF	20%	50V	C701	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)
			(DB870/DB1070: CH, CND, E, US)						220PF	5%	50V
C604	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)	C702	1-128-813-11	CERAMIC	220PF	5%	50V
C605	1-128-813-11	CERAMIC	220PF	5%	50V	(DB1070: CH, CND, E, US)			C703	1-128-858-11	ELECT
C606	1-102-233-00	CERAMIC	33PF	10%	500V				22uF	20%	50V
C607	1-128-809-11	CERAMIC	100PF	5%	50V	C703	1-135-744-11	ELECT	22uF	50V	(DB1070: AEP, UK)
C608	1-102-230-00	CERAMIC	4PF	0.25PF	500V	(DB1070: CH, CND, E, US)			C704	1-128-809-11	CERAMIC
C609	1-128-832-11	ELECT	220uF	20%	10V				100PF	5%	50V
			(DB870/DB1070: CH, CND, E, US)								
C609	1-135-667-11	ELECT	220uF	10V	(DB1070: AEP, UK)	C718	1-128-840-11	ELECT	47uF	20%	16V
C610	1-128-809-11	CERAMIC	100PF	5%	50V	(DB1070: CH, CND, E, US)			47uF	16V	(DB1070: AEP, UK)
C611	1-107-597-11	CERAMIC	22PF	10%	500V	C718	1-135-708-11	ELECT	47uF	16V	(DB1070: AEP, UK)
C612	1-107-597-11	CERAMIC	22PF	10%	500V	C801	1-127-726-11	ELECT MELF	470uF	20%	25V
C614	1-136-163-00	MYLAR	0.068uF	5%	50V	(DB870/DB1070: CH, CND, E, US)			470uF	25V	(DB1070: AEP, UK)
C617	1-128-809-11	CERAMIC	100PF	5%	50V	C801	1-135-684-11	ELECT	470uF	25V	(DB1070: AEP, UK)
C618	1-128-840-11	ELECT	47uF	20%	16V						
			(DB870/DB1070: CH, CND, E, US)			C802	1-127-726-11	ELECT MELF	470uF	20%	25V
C618	1-135-708-11	ELECT	47uF	16V	(DB1070: AEP, UK)	(DB870/DB1070: CH, CND, E, US)			470uF	25V	(DB1070: AEP, UK)
C619	1-128-809-11	CERAMIC	100PF	5%	50V	C802	1-135-684-11	ELECT	470uF	25V	(DB1070: AEP, UK)
C620	1-136-163-00	MYLAR	0.068uF	5%	50V	C803	1-136-173-00	MYLAR	0.47uF	5%	50V
C651	1-128-858-11	ELECT	22uF	20%	50V	C804	1-136-173-00	MYLAR	0.47uF	5%	50V
			(DB870/DB1070: CH, CND, E, US)			C809	1-128-883-11	ELECT	22uF	20%	100V
						(DB870/DB1070: CH, CND, E, US)			22uF	100V	(DB1070: AEP, UK)
						C809	1-135-727-11	ELECT	22uF	100V	(DB1070: AEP, UK)

STR-DB870/DB1070

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C810	1-128-883-11	ELECT 22uF 20% 100V (DB870/DB1070: CH, CND, E, US)		IC602	8-759-636-74	IC M5218AP-22	
C810	1-135-727-11	ELECT 22uF 100V (DB1070: AEP, UK)		IC603	8-759-326-52	IC uPC2581V	
C811	1-128-560-11	ELECT 22uF 20% 100V		IC701	8-759-835-76	IC TC94A07P (DB1070)	
C812	1-127-888-11	CERAMIC 0.1uF 10% 50V		IC702	8-759-636-74	IC M5218AP-22 (DB1070)	
C813	1-127-888-11	CERAMIC 0.1uF 10% 50V		IC801	8-759-231-59	IC TA7815S	
C814	1-126-933-11	ELECT 100uF 20% 16V		IC802	8-759-245-87	IC TA7915S	
C815	1-126-933-11	ELECT 100uF 20% 16V		IC804	8-759-036-90	IC MC74ACT08N	
C816	1-127-880-11	CERAMIC 0.022uF 10% 50V		IC805	8-759-036-90	IC MC74ACT08N	
C817	1-135-775-11	ELECT 47uF 35V		< JACK >			
C818	1-128-858-11	ELECT 22uF 20% 25V (DB870/DB1070: CH, CND, E, US)		J301	1-794-981-11	JACK, PIN 4P (PHONO IN, CD/SACD IN) (DB870)	
C818	1-135-703-11	ELECT 22uF 25V (DB1070: AEP, UK)		J301	1-794-982-11	JACK, PIN 4P (PHONO IN, CD/SACD IN) (DB1070)	
C819	1-128-858-11	ELECT 22uF 20% 25V (DB870/DB1070: CH, CND, E, US)		J302	1-794-981-11	JACK, PIN 4P (MD/TAPE OUT, MD/TAPE IN) (DB870)	
C819	1-135-703-11	ELECT 22uF 25V (DB1070: AEP, UK)		J302	1-794-982-11	JACK, PIN 4P (MD/DAT OUT, MD/DAT IN) (DB1070)	
C824	1-127-876-11	CERAMIC 0.01uF 10% 50V		J303	1-794-984-11	JACK, PIN 6P (TAPE IN/OUT, 2ND ROOM OUT) (DB1070)	
< CONNECTOR >				J304	1-815-543-11	JACK, PIN 6P (MULTI CH IN 1 FRONT/ SURROUND/CENTER/SURROUND BACK) (DB1070)	
CN101	1-568-828-11	CONNECTOR, FFC 9P		J305	1-793-775-12	JACK, PIN 6P (MULTI CH IN FRONT/ SURROUND/CENTER/SUB WOOFER) (DB870)	
CN801	1-784-922-11	PIN, CONNECTOR 5P		J305	1-815-543-11	JACK, PIN 6P (MULTI CH IN 2 FRONT/ SURROUND/CENTER/SUB WOOFER) (DB1070)	
CN802	1-785-102-11	PIN, CONNECTOR 4P		J307	1-794-974-11	JACK, PIN 1P (SUB WOOFER) (DB1070)	
CN803	1-785-102-21	PIN, CONNECTOR 4P		< COIL >			
CN804	1-784-923-11	PIN, CONNECTOR 7P		L401	1-420-872-00	COIL, AIR-CORE	
CN805	1-784-926-11	PIN, CONNECTOR 11P		L451	1-420-872-00	COIL, AIR-CORE	
CN806	1-569-814-11	CONNECTOR, BOARD TO BOARD 21P		L501	1-420-872-00	COIL, AIR-CORE	
CN807	1-569-814-11	CONNECTOR, BOARD TO BOARD 21P		L551	1-420-872-00	COIL, AIR-CORE	
CN808	1-564-505-11	PLUG, CONNECTOR 2P		L601	1-420-872-00	COIL, AIR-CORE	
< DIODE >				L651	1-420-872-00	COIL, AIR-CORE (DB1070)	
D301	8-719-911-19	DIODE 1SS199-25 (DB1070)		< TRANSISTOR/IC >			
D801	8-719-911-19	DIODE 1SS199-25		Q301	8-729-119-79	TRANSISTOR 2SC2785-FEK (DB1070)	
D802	8-719-911-19	DIODE 1SS199-25		Q401	8-729-141-30	TRANSISTOR 2SC3623A-LK	
D803	8-719-911-19	DIODE 1SS199-25		Q402	8-729-051-92	TRANSISTOR 2SD2560 (DB1070)	
D809	8-719-911-19	DIODE 1SS199-25		Q402	8-749-010-25	IC MN2488-OPY-M (DB870)	
D810	8-719-911-19	DIODE 1SS199-25		Q403	8-729-051-93	TRANSISTOR 2SB1647 (DB1070)	
D811	8-719-911-19	DIODE 1SS199-25		Q403	8-749-010-26	IC MP1620-OPY-M (DB870)	
D813	8-719-911-19	DIODE 1SS199-25 (DB1070)		Q451	8-729-141-30	TRANSISTOR 2SC3623A-LK	
D814	8-719-911-19	DIODE 1SS199-25		Q452	8-729-051-92	TRANSISTOR 2SD2560 (DB1070)	
D815	8-719-985-88	DIODE HZS6B2LTA		Q452	8-749-010-25	IC MN2488-OPY-M (DB870)	
D816	8-719-911-19	DIODE 1SS199-25		Q453	8-729-051-93	TRANSISTOR 2SB1647 (DB1070)	
< IC >				Q453	8-749-010-26	IC MP1620-OPY-M (DB870)	
IC101	8-759-835-79	IC TC9274N-016		Q501	8-729-141-30	TRANSISTOR 2SC3623A-LK	
IC102	8-759-582-64	IC TC9273N-004		Q502	8-729-051-92	TRANSISTOR 2SD2560 (DB1070)	
IC103	8-759-636-74	IC M5218AP-22 (DB1070)		Q502	8-749-010-25	IC MN2488-OPY-M (DB870)	
IC104	8-759-636-74	IC M5218AP-22		Q503	8-729-051-93	TRANSISTOR 2SB1647 (DB1070)	
IC105	8-759-582-66	IC TC9273N-013 (DB1070)		Q503	8-749-010-26	IC MP1620-OPY-M (DB870)	
IC401	8-759-835-76	IC TC94A07P		Q551	8-729-141-30	TRANSISTOR 2SC3623A-LK	
IC402	8-759-636-74	IC M5218AP-22		Q552	8-729-051-92	TRANSISTOR 2SD2560 (DB1070)	
IC403	8-759-326-52	IC uPC2581V		Q552	8-749-010-25	IC MN2488-OPY-M (DB870)	
IC501	8-759-835-76	IC TC94A07P		Q553	8-729-051-93	TRANSISTOR 2SB1647 (DB1070)	
IC502	8-759-636-74	IC M5218AP-22		Q553	8-749-010-26	IC MP1620-OPY-M (DB870)	
IC503	8-759-326-52	IC uPC2581V					
IC601	8-759-835-76	IC TC94A07P					

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
Q601	8-729-141-30	TRANSISTOR	2SC3623A-LK			R134	1-247-887-00	CARBON	220K	5%	1/4W
Q602	8-729-051-92	TRANSISTOR	2SD2560 (DB1070)								(DB1070)
Q602	8-749-010-25	IC	MN2488-OPY-M (DB870)			R135	1-249-417-11	CARBON	1K	5%	1/4W
Q603	8-729-051-93	TRANSISTOR	2SB1647 (DB1070)			R151	1-249-417-11	CARBON	1K	5%	1/4W
											(DB1070)
Q603	8-749-010-26	IC	MP1620-OPY-M (DB870)			R152	1-249-417-11	CARBON	1K	5%	1/4W
Q651	8-729-141-30	TRANSISTOR	2SC3623A-LK								(DB1070)
Q652	8-729-051-92	TRANSISTOR	2SD2560 (DB1070)			R153	1-249-417-11	CARBON	1K	5%	1/4W
Q653	8-729-051-93	TRANSISTOR	2SB1647 (DB1070)								(DB1070)
Q701	8-729-141-30	TRANSISTOR	2SC3623ATP-LK (DB1070)			R154	1-249-417-11	CARBON	1K	5%	1/4W
											(DB1070)
Q806	8-729-119-78	TRANSISTOR	2SC2785-HFE			R155	1-249-417-11	CARBON	1K	5%	1/4W
Q807	8-729-119-79	TRANSISTOR	2SC2785-FEK								(DB1070)
Q808	8-729-119-79	TRANSISTOR	2SC2785-FEK			R156	1-249-417-11	CARBON	1K	5%	1/4W
Q809	8-729-119-79	TRANSISTOR	2SC2785-FEK								(DB1070)
Q810	8-729-900-63	TRANSISTOR	DTA124ES			R157	1-249-417-11	CARBON	1K	5%	1/4W
											(DB1070)
Q811	8-729-140-82	TRANSISTOR	2SA988-PAFAEA			R165	1-249-421-11	CARBON	2.2K	5%	1/4W
Q812	8-729-900-36	TRANSISTOR	DTC124ES								(AEP, CH, E, UK)
Q813	8-729-900-63	TRANSISTOR	DTA124ES			R166	1-249-441-11	CARBON	100K	5%	1/4W
Q815	8-729-119-79	TRANSISTOR	2SC2785-FEK (DB1070)			R167	1-249-440-11	CARBON	82K	5%	1/4W
Q823	8-729-119-79	TRANSISTOR	2SC2785-FEK			R168	1-249-408-11	CARBON	180	5%	1/4W
						R169	1-249-428-11	CARBON	8.2K	5%	1/4W
Q824	8-729-119-78	TRANSISTOR	2SC2785-HFE								
Q825	8-729-119-79	TRANSISTOR	2SC2785-FEK			R170	1-249-441-11	CARBON	100K	5%	1/4W
Q826	8-729-119-79	TRANSISTOR	2SC2785-FEK			R171	1-247-807-31	CARBON	100	5%	1/4W
< RESISTOR >						R172	1-249-413-11	CARBON	470	5%	1/4W
R101	1-249-417-11	CARBON	1K	5%	1/4W	R173	1-249-441-11	CARBON	100K	5%	1/4W
R102	1-249-417-11	CARBON	1K	5%	1/4W	R175	1-249-417-11	CARBON	1K	5%	1/4W
R103	1-249-417-11	CARBON	1K	5%	1/4W						
R104	1-249-417-11	CARBON	1K	5%	1/4W	R176	1-249-421-11	CARBON	2.2K	5%	1/4W
R105	1-249-417-11	CARBON	1K	5%	1/4W	R177	1-249-417-11	CARBON	1K	5%	1/4W
						R178	1-249-421-11	CARBON	2.2K	5%	1/4W
R106	1-249-417-11	CARBON	1K	5%	1/4W						(DB1070)
R113	1-249-417-11	CARBON	1K	5%	1/4W	R179	1-249-417-11	CARBON	1K	5%	1/4W
											(DB1070)
R114	1-249-417-11	CARBON	1K	5%	1/4W	R180	1-249-425-11	CARBON	4.7K	5%	1/4W
R115	1-249-421-11	CARBON	2.2K	5%	1/4W						(DB1070)
R116	1-249-441-11	CARBON	100K	5%	1/4W	R181	1-247-807-31	CARBON	100	5%	1/4W
											(DB1070)
R117	1-249-440-11	CARBON	82K	5%	1/4W	R182	1-249-437-11	CARBON	47K	5%	1/4W
R118	1-249-408-11	CARBON	180	5%	1/4W						(DB1070)
R119	1-249-428-11	CARBON	8.2K	5%	1/4W	R183	1-247-887-00	CARBON	220K	5%	1/4W
R120	1-249-441-11	CARBON	100K	5%	1/4W						(DB1070)
R121	1-247-807-31	CARBON	100	5%	1/4W	R184	1-247-887-00	CARBON	220K	5%	1/4W
											(DB1070)
R122	1-249-413-11	CARBON	470	5%	1/4W	△ R315	1-249-393-11	CARBON	10	5%	1/4W F
R123	1-249-441-11	CARBON	100K	5%	1/4W						(DB1070)
R125	1-249-417-11	CARBON	1K	5%	1/4W	R336	1-249-429-11	CARBON	10K	5%	1/4W
R126	1-249-421-11	CARBON	2.2K	5%	1/4W						(DB1070)
R127	1-249-417-11	CARBON	1K	5%	1/4W	R337	1-249-425-11	CARBON	4.7K	5%	1/4W
											(DB1070)
R128	1-249-421-11	CARBON	2.2K	5%	1/4W	R401	1-249-427-11	CARBON	6.8K	5%	1/4W
						R402	1-249-417-11	CARBON	1K	5%	1/4W
R129	1-249-417-11	CARBON	1K	5%	1/4W	R403	1-249-441-11	CARBON	100K	5%	1/4W
R130	1-249-425-11	CARBON	4.7K	5%	1/4W	R404	1-249-417-11	CARBON	1K	5%	1/4W
						R407	1-249-433-11	CARBON	22K	5%	1/4W
R131	1-247-807-31	CARBON	100	5%	1/4W	R408	1-249-417-11	CARBON	1K	5%	1/4W
						R409	1-249-439-11	CARBON	68K	5%	1/4W
R132	1-249-437-11	CARBON	47K	5%	1/4W	R410	1-249-422-11	CARBON	2.7K	5%	1/4W
											(EXCEPT DB1070: AEP, UK)
R133	1-247-887-00	CARBON	220K	5%	1/4W						
					(DB1070)	R410	1-249-683-31	CARBON	2.7K	5%	1/2W
											(DB1070: AEP, UK)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

MAIN

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
R411	1-249-439-11	CARBON	68K	5%	1/4W	(EXCEPT DB1070: AEP, UK)	△ R562	1-249-405-11	CARBON	100	5%	1/4W	F
R411	1-249-494-11	CARBON	68K	5%	1/2W	(DB1070: AEP, UK)	△ R563	1-249-405-11	CARBON	100	5%	1/4W	F
△ R412	1-249-405-11	CARBON	100	5%	1/4W	F	△ R564	1-234-182-11	ENCAPSULATED COMPONENT	0.22	5W	F	
△ R413	1-249-405-11	CARBON	100	5%	1/4W	F	△ R567	1-249-393-11	CARBON	10	5%	1/4W	F
△ R414	1-234-182-11	ENCAPSULATED COMPONENT	0.22	5W	F		△ R573	1-249-393-11	CARBON	10	5%	1/4W	F
△ R417	1-249-393-11	CARBON	10	5%	1/4W	F	R601	1-249-427-11	CARBON	6.8K	5%	1/4W	
R423	1-249-393-11	CARBON	10	5%	1/4W		R602	1-249-417-11	CARBON	1K	5%	1/4W	
R451	1-249-427-11	CARBON	6.8K	5%	1/4W		R603	1-249-441-11	CARBON	100K	5%	1/4W	
R452	1-249-417-11	CARBON	1K	5%	1/4W		R604	1-249-417-11	CARBON	1K	5%	1/4W	
R453	1-249-441-11	CARBON	100K	5%	1/4W		R607	1-249-433-11	CARBON	22K	5%	1/4W	
R458	1-249-417-11	CARBON	1K	5%	1/4W		R608	1-249-417-11	CARBON	1K	5%	1/4W	
R459	1-249-439-11	CARBON	68K	5%	1/4W		R609	1-249-439-11	CARBON	68K	5%	1/4W	
R460	1-249-422-11	CARBON	2.7K	5%	1/4W	(EXCEPT DB1070: AEP, UK)	R610	1-249-422-11	CARBON	2.7K	5%	1/4W	
R460	1-249-683-31	CARBON	2.7K	5%	1/2W	(DB1070: AEP, UK)	R610	1-249-683-31	CARBON	2.7K	5%	1/2W	(DB1070: AEP, UK)
R461	1-249-439-11	CARBON	68K	5%	1/4W	(EXCEPT DB1070: AEP, UK)	R611	1-249-439-11	CARBON	68K	5%	1/4W	(EXCEPT DB1070: AEP, UK)
R461	1-249-494-11	CARBON	68K	5%	1/2W	(DB1070: AEP, UK)	R611	1-249-494-11	CARBON	68K	5%	1/2W	(DB1070: AEP, UK)
△ R462	1-249-405-11	CARBON	100	5%	1/4W	F	△ R612	1-249-405-11	CARBON	100	5%	1/4W	F
△ R463	1-249-405-11	CARBON	100	5%	1/4W	F	△ R613	1-249-405-11	CARBON	100	5%	1/4W	F
△ R464	1-234-182-11	ENCAPSULATED COMPONENT	0.22	5W	F		△ R614	1-234-182-11	ENCAPSULATED COMPONENT	0.22	5W	F	
△ R467	1-249-393-11	CARBON	10	5%	1/4W	F	△ R617	1-249-393-11	CARBON	10	5%	1/4W	F
△ R473	1-249-393-11	CARBON	10	5%	1/4W	F	△ R623	1-249-393-11	CARBON	10	5%	1/4W	F
R501	1-249-427-11	CARBON	6.8K	5%	1/4W		R651	1-249-427-11	CARBON	6.8K	5%	1/4W	
R502	1-249-417-11	CARBON	1K	5%	1/4W		R652	1-249-417-11	CARBON	1K	5%	1/4W	
R503	1-249-441-11	CARBON	100K	5%	1/4W		R653	1-249-441-11	CARBON	100K	5%	1/4W	
R504	1-249-417-11	CARBON	1K	5%	1/4W		R658	1-249-417-11	CARBON	1K	5%	1/4W	(DB1070)
R507	1-249-433-11	CARBON	22K	5%	1/4W		R659	1-249-439-11	CARBON	68K	5%	1/4W	(DB1070)
R508	1-249-417-11	CARBON	1K	5%	1/4W		R660	1-249-422-11	CARBON	2.7K	5%	1/4W	(EXCEPT DB1070: AEP, UK)
R509	1-249-439-11	CARBON	68K	5%	1/4W		R660	1-249-683-31	CARBON	2.7K	5%	1/2W	(DB1070: AEP, UK)
R510	1-249-422-11	CARBON	2.7K	5%	1/4W	(EXCEPT DB1070: AEP, UK)	R661	1-249-439-11	CARBON	68K	5%	1/4W	(EXCEPT DB1070: AEP, UK)
R510	1-249-683-31	CARBON	2.7K	5%	1/2W	(DB1070: AEP, UK)	R661	1-249-494-11	CARBON	68K	5%	1/2W	(DB1070: AEP, UK)
R511	1-249-439-11	CARBON	68K	5%	1/4W	(EXCEPT DB1070: AEP, UK)	△ R662	1-249-405-11	CARBON	100	5%	1/4W	F
R511	1-249-494-11	CARBON	68K	5%	1/2W	(DB1070: AEP, UK)	△ R663	1-249-405-11	CARBON	100	5%	1/4W	F
△ R512	1-249-405-11	CARBON	100	5%	1/4W	F	△ R664	1-234-182-11	ENCAPSULATED COMPONENT	0.22	5W	F	(DB1070)
△ R513	1-249-405-11	CARBON	100	5%	1/4W	F	△ R667	1-249-393-11	CARBON	10	5%	1/4W	F
△ R514	1-234-182-11	ENCAPSULATED COMPONENT	0.22	5W	F		△ R673	1-249-393-11	CARBON	10	5%	1/4W	F
△ R517	1-249-393-11	CARBON	10	5%	1/4W	F	R701	1-249-427-11	CARBON	6.8K	5%	1/4W	(DB1070)
△ R523	1-249-393-11	CARBON	10	5%	1/4W	F	R702	1-249-417-11	CARBON	1K	5%	1/4W	(DB1070)
R551	1-249-427-11	CARBON	6.8K	5%	1/4W		R703	1-249-441-11	CARBON	100K	5%	1/4W	(DB1070)
R552	1-249-417-11	CARBON	1K	5%	1/4W		R704	1-249-417-11	CARBON	1K	5%	1/4W	(DB1070)
R553	1-249-441-11	CARBON	100K	5%	1/4W		R808	1-249-433-11	CARBON	22K	5%	1/4W	
R558	1-249-417-11	CARBON	1K	5%	1/4W		△ R809	1-215-887-00	METAL OXIDE	150	5%	2W	F
R559	1-249-439-11	CARBON	68K	5%	1/4W								(AEP, UK)
R560	1-249-422-11	CARBON	2.7K	5%	1/4W	(EXCEPT DB1070: AEP, UK)							
R560	1-249-683-31	CARBON	2.7K	5%	1/2W	(DB1070: AEP, UK)							
R561	1-249-439-11	CARBON	68K	5%	1/4W	(EXCEPT DB1070: AEP, UK)							
R561	1-249-494-11	CARBON	68K	5%	1/2W	(DB1070: AEP, UK)							

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。
--	--	---

MAIN

MUTING

POWER

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
△ R809	1-215-889-00	METAL OXIDE	330	5%	2W F (CND, US)		1-681-100-11	MUTING BOARD *****			
△ R809	1-215-890-11	METAL OXIDE	470	5%	2W F (CH, E)			< CONNECTOR >			
△ R810	1-249-381-11	CARBON	1	5%	1/4W F	* CN1801	1-695-808-11	CONNECTOR, PC BOARD 8P			
△ R811	1-249-381-11	CARBON	1	5%	1/4W F			< LED >			
R812	1-249-425-11	CARBON	4.7K	5%	1/4W						
R813	1-249-425-11	CARBON	4.7K	5%	1/4W						
R814	1-249-425-11	CARBON	4.7K	5%	1/4W	D1801	8-719-046-39	LED SEL5821A-TP15 (AUDIO SPLIT)			
								< RESISTOR >			
R815	1-249-429-11	CARBON	10K	5%	1/4W						
R816	1-249-429-11	CARBON	10K	5%	1/4W						
R817	1-249-429-11	CARBON	10K	5%	1/4W	R1801	1-249-417-11	CARBON	1K	5%	1/4W
R818	1-249-429-11	CARBON	10K	5%	1/4W	R1802	1-249-421-11	CARBON	2.2K	5%	1/4W
△ R820	1-249-393-11	CARBON	10	5%	1/4W F	R1803	1-249-409-11	CARBON	220	5%	1/4W
								< ROTARY ENCODER >			
△ R822	1-249-393-11	CARBON	10	5%	1/4W F						
△ R824	1-215-867-00	METAL OXIDE	470	5%	1W F						
△ R825	1-215-867-00	METAL OXIDE	470	5%	1W F	RV1801	1-467-808-21	ENCODER, ROTARY (FUNCTION)			
R826	1-247-903-00	CARBON	1M	5%	1/4W			< SWITCH >			
△ R830	1-249-393-11	CARBON	10	5%	1/4W F (DB1070)						
						S1801	1-762-875-21	SWITCH, KEYBOARD (INPUT MODE)			
R831	1-249-429-11	CARBON	10K	5%	1/4W (DB1070)	S1802	1-762-875-21	SWITCH, KEYBOARD (AUDIO SPLIT)			
R832	1-249-425-11	CARBON	4.7K	5%	1/4W (DB1070)	S1803	1-762-875-21	SWITCH, KEYBOARD (MUTING)			

R833	1-247-903-00	CARBON	1M	5%	1/4W		1-681-101-11	POWER BOARD			
R835	1-249-441-11	CARBON	100K	5%	1/4W			*****			
△ R841	1-249-399-11	CARBON	33	5%	1/4W F			< CAPACITOR >			
△ R846	1-249-399-11	CARBON	33	5%	1/4W F						
R847	1-249-425-11	CARBON	4.7K	5%	1/4W	C1701	1-104-660-11	ELECT	47uF	20%	16V
R848	1-249-429-11	CARBON	10K	5%	1/4W			< CONNECTOR >			
△ R849	1-249-393-11	CARBON	10	5%	1/4W F						
R850	1-249-417-11	CARBON	1K	5%	1/4W						
						CN1701	1-770-404-11	HOUSING, CONNECTOR (PC BOARD) 11P			
R851	1-249-425-11	CARBON	4.7K	5%	1/4W			< IC >			
R852	1-249-425-11	CARBON	4.7K	5%	1/4W						
R853	1-249-429-11	CARBON	10K	5%	1/4W						
△ R854	1-249-393-11	CARBON	10	5%	1/4W F	IC1701	8-759-459-85	IC NJL63H400A			
R855	1-249-429-11	CARBON	10K	5%	1/4W			(REMOTE CONTROL RECEIVER)			
								< RESISTOR >			
R856	1-249-429-11	CARBON	10K	5%	1/4W						
R859	1-249-421-11	CARBON	2.2K	5%	1/4W						
R860	1-249-429-11	CARBON	10K	5%	1/4W	R1701	1-247-807-31	CARBON	100	5%	1/4W
R864	1-249-437-11	CARBON	47K	5%	1/4W	R1702	1-249-393-11	CARBON	10	5%	1/4W
						R1703	1-249-433-11	CARBON	22K	5%	1/4W
						R1704	1-249-417-11	CARBON	1K	5%	1/4W
		< RELAY >						< SWITCH >			
RY301	1-515-793-11	RELAY (DB1070)									
RY801	1-515-920-11	RELAY (24V)									
RY803	1-515-920-11	RELAY (24V)				S1701	1-786-151-11	SWITCH, ROTARY (SPEAKERS)			
RY805	1-515-793-11	RELAY (DB1070)				S1702	1-762-875-21	SWITCH, KEYBOARD (DIMMER)			
RY806	1-515-793-11	RELAY				S1703	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)			
						S1704	1-762-875-21	SWITCH, KEYBOARD (I/O)			
RY807	1-515-793-11	RELAY				*****					
		< TERMINAL >									
TM501	1-694-837-11	TERMINAL BOARD (SP) (SURROUND/ CENTER/SURROUND BACK SPEAKERS)									
		(DB1070)									
TM501	1-694-839-11	TERMINAL BOARD (SP) (SURROUND/CENTER SPEAKERS) (DB870)									

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

S-VIDEO

Ref. No.	Part No.	Description	Remark			
	A-4476-478-A	S-VIDEO BOARD, COMPLETE (DB870: CND)				
	A-4476-493-A	S-VIDEO BOARD, COMPLETE (DB870: AEP, UK)				
	A-4476-506-A	S-VIDEO BOARD, COMPLETE (DB1070: CND, US)				
	A-4476-517-A	S-VIDEO BOARD, COMPLETE (DB1070: AEP, CH, E2, E3, KR, MY, SP, TW, UK)				

< CAPACITOR >						
C750	1-128-805-11	CERAMIC	47PF	5%	50V (DB870)	
C751	1-128-805-11	CERAMIC	47PF	5%	50V (DB870)	
C752	1-128-805-11	CERAMIC	47PF	5%	50V	
C753	1-128-805-11	CERAMIC	47PF	5%	50V	
C754	1-128-825-11	CERAMIC	2200PF	5%	50V	
C755	1-136-165-00	MYLAR	0.1uF	5%	50V	
C756	1-136-165-00	MYLAR	0.1uF	5%	50V	
C757	1-136-165-00	MYLAR	0.1uF	5%	50V	
C758	1-126-964-11	ELECT	10uF	20%	50V	
C759	1-126-964-11	ELECT	10uF	20%	50V	
C760	1-126-964-11	ELECT	10uF	20%	50V	
C761	1-128-825-11	CERAMIC	2200PF	5%	50V	
C762	1-128-825-11	CERAMIC	2200PF	5%	50V	
C763	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C764	1-136-165-00	MYLAR	0.1uF	5%	50V	
C765	1-128-817-11	CERAMIC	470PF	5%	50V (CND, US)	
C766	1-104-660-11	ELECT	47uF	20%	16V (CND, US)	
C767	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C768	1-128-817-11	CERAMIC	470PF	5%	50V (CND, US)	
C769	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C770	1-126-964-11	ELECT	10uF	20%	50V	
C772	1-127-888-11	CERAMIC	0.1uF	10%	50V	
< CONNECTOR >						
* CN751	1-573-828-11	CONNECTOR, BOARD TO BOARD 14P (DB1070: AEP, CH, E, UK)				
CN751	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P (DB870: AEP, UK)				
CN751	1-784-040-41	CONNECTOR, BOARD TO BOARD 19P (CND, US)				
* CN753	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P				
< DIODE >						
D750	8-719-911-19	DIODE 1SS199-25				
D751	8-719-911-19	DIODE 1SS199-25				
< IC >						
IC750	8-759-529-20	IC NJM2296D				
IC751	8-759-666-33	IC NJM2145D (CND, US)				
IC752	8-759-529-20	IC NJM2296D				
< JACK >						
J750	1-764-676-11	CONNECTOR (ROUND TYPE) (TV/SAT S-VIDEO IN, DVD/LD S-VIDEO IN) (DB870)				
J750	1-779-801-11	CONNECTOR (DIN) 2P (TV/SAT S-VIDEO IN, DVD/LD S-VIDEO IN) (DB1070)				

Ref. No.	Part No.	Description	Remark			
J751	1-537-943-11	CONNECTOR (DIN) 1P	(MONITOR S-VIDEO OUT) (DB870)			
J751	1-779-800-11	CONNECTOR (DIN) (MONITOR S-VIDEO OUT)				
J752	1-764-676-11	CONNECTOR (ROUND TYPE)	(VIDEO 1 S-VIDEO OUT) (DB870)			
J752	1-779-801-11	CONNECTOR (DIN) (VIDEO 1 S-VIDEO OUT)				
J753	1-563-330-11	JACK (MONITOR CTRL S IN) (CND, US)				
J754	1-563-330-11	JACK (TV/SAT CTRL S STATUS IN) (CND, US)				
J755	1-563-330-11	JACK (DVD/LD CTRL S OUT) (CND, US)				
J756	1-563-330-11	JACK (VIDEO 1 CTRL S OUT) (CND, US)				
< TRANSISTOR >						
Q750	8-729-900-80	TRANSISTOR	DTC124ES (CND, US)			
Q751	8-729-422-57	TRANSISTOR	UN4111 (CND, US)			
Q752	8-729-422-57	TRANSISTOR	UN4111 (CND, US)			
Q753	8-729-900-80	TRANSISTOR	DTC124ES (CND, US)			
< RESISTOR >						
R750	1-249-417-11	CARBON	1K	5%	1/4W	(CND, US)
R751	1-249-417-11	CARBON	1K	5%	1/4W	
R752	1-249-417-11	CARBON	1K	5%	1/4W	(CND, US)
R753	1-249-417-11	CARBON	1K	5%	1/4W	
R754	1-247-804-11	CARBON	75	5%	1/4W	(CND, US)
R755	1-247-804-11	CARBON	75	5%	1/4W	
R756	1-247-804-11	CARBON	75	5%	1/4W	(CND, US)
R757	1-247-804-11	CARBON	75	5%	1/4W	
R758	1-247-804-11	CARBON	75	5%	1/4W	(CND, US)
R759	1-247-804-11	CARBON	75	5%	1/4W	
R760	1-247-804-11	CARBON	75	5%	1/4W	(CND, US)
R761	1-247-804-11	CARBON	75	5%	1/4W	
R762	1-247-804-11	CARBON	75	5%	1/4W	(CND, US)
R763	1-247-804-11	CARBON	75	5%	1/4W	
R764	1-249-427-11	CARBON	6.8K	5%	1/4W	(CND, US)
R765	1-249-429-11	CARBON	10K	5%	1/4W	
R766	1-249-427-11	CARBON	6.8K	5%	1/4W	(CND, US)
R767	1-249-429-11	CARBON	10K	5%	1/4W	
R768	1-249-427-11	CARBON	6.8K	5%	1/4W	(CND, US)
R769	1-249-429-11	CARBON	10K	5%	1/4W	
R770	1-247-804-11	CARBON	75	5%	1/4W	(CND, US)
R771	1-247-804-11	CARBON	75	5%	1/4W	
R772	1-247-807-31	CARBON	100	5%	1/4W	(CND, US)
R773	1-249-429-11	CARBON	10K	5%	1/4W	
R774	1-247-807-31	CARBON	100	5%	1/4W	(CND, US)

SP

SW

Ref. No.	Part No.	Description	Remark			
	1-681-105-11	SP BOARD *****				
< CAPACITOR >						
C403	1-128-858-11	ELECT	22uF	20%	50V	
C421	1-128-809-11	CERAMIC	100PF	5%	50V	
C431	1-128-817-11	CERAMIC	470PF	5%	50V	
				(AEP, CH, E, UK)		
C436	1-128-809-11	CERAMIC	100PF	5%	50V	
C453	1-128-858-11	ELECT	22uF	20%	50V	
C471	1-128-809-11	CERAMIC	100PF	5%	50V	
C481	1-128-817-11	CERAMIC	470PF	5%	50V	
				(AEP, CH, E, UK)		
C503	1-128-858-11	ELECT	22uF	20%	50V	
C553	1-128-858-11	ELECT	22uF	20%	50V	
C603	1-128-858-11	ELECT	22uF	20%	50V	
C653	1-128-858-11	ELECT	22uF	20%	50V	
< JACK >						
J401	1-815-542-11	JACK, PIN 4P (PRE OUT SURROUND BACK/ SUB WOOFER) (DB1070)				
J402	1-779-902-21	JACK, PIN 4P (PRE OUT FRONT/SURROUND) (DB870)				
J402	1-815-541-11	JACK, PIN 4P (PRE OUT FRONT/SURROUND) (DB1070)				
J403	1-774-843-11	JACK, PIN 1P (PRE OUT CENTER)				
J701	1-793-777-12	JACK, PIN 2P (PRE OUT SUB WOOFER) (DB870)				
< RESISTOR >						
△ R431	1-249-393-11	CARBON	10	5%	1/4W F	
				(AEP, CH, E, UK)		
R433	1-249-417-11	CARBON	1K	5%	1/4W	
△ R481	1-249-393-11	CARBON	10	5%	1/4W F	
				(AEP, CH, E, UK)		
R483	1-249-417-11	CARBON	1K	5%	1/4W	
R533	1-249-417-11	CARBON	1K	5%	1/4W	
R583	1-249-417-11	CARBON	1K	5%	1/4W	
R633	1-249-417-11	CARBON	1K	5%	1/4W	
R683	1-249-417-11	CARBON	1K	5%	1/4W	
R733	1-249-417-11	CARBON	1K	5%	1/4W	
△ R821	1-249-393-11	CARBON	10	5%	1/4W F	
△ R834	1-249-393-11	CARBON	10	5%	1/4W F	
< RELAY >						
RY802	1-515-920-11	RELAY (24V)				
RY808	1-515-793-11	RELAY				
RY809	1-515-793-11	RELAY				
RY810	1-515-793-11	RELAY				
< TERMINALBOARD >						
TM502	1-694-842-12	TERMINAL BOARD (SP) (FRONT SPEAKERS)				

Ref. No.	Part No.	Description	Remark			
	A-4476-470-A	SW BOARD, COMPLETE (DB870)				
	A-4476-501-A	SW BOARD, COMPLETE (DB1070)				

< CONNECTOR >						
CN1901	1-784-806-11	HOUSING, CONNECTOR (PC BOARD)	13P			
< LED >						
D1901	8-719-032-98	LED	SEL5820A-TP15 (LEVEL)			
D1902	8-719-032-98	LED	SEL5820A-TP15 (SURR)			
D1903	8-719-032-98	LED	SEL5820A-TP15 (EQ)			
D1904	8-719-032-98	LED	SEL5820A-TP15 (NAME)			
D1905	8-719-032-98	LED	SEL5820A-TP15 (SET UP)			
< RESISTOR >						
R1902	1-249-417-11	CARBON	1K	5%	1/4W	
R1903	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1904	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1905	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1906	1-249-429-11	CARBON	10K	5%	1/4W	
R1907	1-249-433-11	CARBON	22K	5%	1/4W	
R1908	1-249-437-11	CARBON	47K	5%	1/4W	
R1912	1-249-417-11	CARBON	1K	5%	1/4W	
R1913	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1914	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1915	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1916	1-249-429-11	CARBON	10K	5%	1/4W	
R1917	1-249-433-11	CARBON	22K	5%	1/4W	
R1918	1-249-437-11	CARBON	47K	5%	1/4W	
R1922	1-249-417-11	CARBON	1K	5%	1/4W	
R1923	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1924	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1925	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1931	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1932	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1933	1-249-429-11	CARBON	10K	5%	1/4W	
R1934	1-249-433-11	CARBON	22K	5%	1/4W	
R1941	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1942	1-249-421-11	CARBON	2.2K	5%	1/4W	
R1943	1-249-425-11	CARBON	4.7K	5%	1/4W	
R1944	1-249-429-11	CARBON	10K	5%	1/4W	
R1945	1-249-433-11	CARBON	22K	5%	1/4W	
R1951	1-249-411-11	CARBON	330	5%	1/4W	
< ROTARY RESISTOR >						
RV1901	1-418-921-11	ENCODER, ENCODER (JOG DIAL)				
< SWITCH >						
S1901	1-762-875-21	SWITCH, KEYBOARD (ENTER)				
S1902	1-762-875-21	SWITCH, KEYBOARD (>)				
S1903	1-762-875-21	SWITCH, KEYBOARD (<)				
S1904	1-762-875-21	SWITCH, KEYBOARD (LEVEL)				
S1905	1-762-875-21	SWITCH, KEYBOARD (SURR)				
S1906	1-762-875-21	SWITCH, KEYBOARD (EQ)				
S1907	1-762-875-21	SWITCH, KEYBOARD (NAME)				
S1908	1-762-875-21	SWITCH, KEYBOARD (SET UP)				
S1911	1-762-875-21	SWITCH, KEYBOARD (EQUALIZER)				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

STR-DB870/DB1070

SW

VIDEO

Ref. No.	Part No.	Description	Remark
S1912	1-762-875-21	SWITCH, KEYBOARD (STREAM INFO (DB870), 2ND ROOM (DB1070))	
S1913	1-762-875-21	SWITCH, KEYBOARD (TEST TONE)	
S1914	1-762-875-21	SWITCH, KEYBOARD (PTY SELECT + (AEP, UK), TUNING +)	
S1915	1-762-875-21	SWITCH, KEYBOARD (TUNING -) (PTY SELECT - (AEP, UK), TUNING -)	
S1916	1-762-875-21	SWITCH, KEYBOARD (SLEEP (CH, CND, E, US), RDS/PTY (AEP, UK)	
S1917	1-762-875-21	SWITCH, KEYBOARD (FM MODE)	
S1918	1-762-875-21	SWITCH, KEYBOARD (MEMORY)	
S1921	1-762-875-21	SWITCH, KEYBOARD (6.1CH DECODING)	
S1922	1-762-875-21	SWITCH, KEYBOARD (CINEMA STUDIO EX)	
S1923	1-762-875-21	SWITCH, KEYBOARD (DIGITAL CONCERT HALL)	
S1924	1-762-875-21	SWITCH, KEYBOARD (2CH)	
S1925	1-762-875-21	SWITCH, KEYBOARD (A.F.D.)	
S1931	1-762-875-21	SWITCH, KEYBOARD (MODE -)	
S1932	1-762-875-21	SWITCH, KEYBOARD (NIGHT MODE)	
S1933	1-762-875-21	SWITCH, KEYBOARD (MULTI/2CH A.DIRECT)	
S1934	1-762-875-21	SWITCH, KEYBOARD (MODE +)	
S1941	1-762-875-21	SWITCH, KEYBOARD (ON SCREEN) (DB1070)	
S1942	1-762-875-21	SWITCH, KEYBOARD (FM/AM)	
S1943	1-762-875-21	SWITCH, KEYBOARD (SHIFT)	
S1944	1-762-875-21	SWITCH, KEYBOARD (PRESET TUNING -)	
S1945	1-762-875-21	SWITCH, KEYBOARD (PRESET TUNING +)	

A-4476-477-A VIDEO BOARD, COMPLETE (DB870: CND)
A-4476-492-A VIDEO BOARD, COMPLETE (DB870: AEP, UK)
A-4476-505-A VIDEO BOARD, COMPLETE
(DB1070: CND, US)
A-4476-516-A VIDEO BOARD, COMPLETE (DB1070: AEP, CH,
E2, E3, KR, MY, SP, CH, TW, UK)

< CAPACITOR >

C301	1-126-935-11	ELECT	470uF	20%	10V (CND, US)
C302	1-126-935-11	ELECT	470uF	20%	10V (CND, US)
C303	1-126-935-11	ELECT	470uF	20%	10V (CND, US)
C304	1-128-803-11	CERAMIC	33PF	5%	50V (CND, US)
C305	1-128-803-11	CERAMIC	33PF	5%	50V (CND, US)
C307	1-128-803-11	CERAMIC	33PF	5%	50V (CND, US)
C308	1-126-964-11	ELECT	10uF	20%	50V (CND, US)
C309	1-126-964-11	ELECT	10uF	20%	50V (CND, US)
C310	1-126-964-11	ELECT	10uF	20%	50V (CND, US)
C311	1-126-964-11	ELECT	10uF	20%	50V (CND, US)
C312	1-126-964-11	ELECT	10uF	20%	50V (CND, US)
C313	1-126-964-11	ELECT	10uF	20%	50V (CND, US)

Ref. No.	Part No.	Description	Remark
C314	1-126-935-11	ELECT	470uF 20% 10V (DB1070)
C315	1-126-935-11	ELECT	470uF 20% 10V (DB1070)
C316	1-162-199-31	CERAMIC	10PF 5% 50V (DB1070: AEP, CH, E, UK)
C318	1-126-960-11	ELECT	1uF 20% 50V (DB1070)
C319	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C320	1-128-802-11	CERAMIC	27PF 5% 50V (DB1070: AEP, CH, E, UK)
C322	1-162-199-31	CERAMIC	10PF 5% 50V (DB1070)
C323	1-128-802-11	CERAMIC	27PF 5% 50V (DB1070)
C324	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C325	1-128-803-11	CERAMIC	33PF 5% 50V (DB1070)
C326	1-162-205-31	CERAMIC	18PF 5% 50V (DB1070)
C328	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C329	1-128-809-11	CERAMIC	100PF 5% 50V (DB1070)
C330	1-126-964-11	ELECT	10uF 20% 50V (DB1070)
C331	1-126-964-11	ELECT	10uF 20% 50V (DB1070)
C332	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070: AEP, CH, E, UK)
C333	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C335	1-128-805-11	CERAMIC	47PF 5% 50V
C336	1-128-805-11	CERAMIC	47PF 5% 50V
C337	1-128-805-11	CERAMIC	47PF 5% 50V
C339	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C340	1-126-927-11	ELECT	2200uF 20% 10V (DB1070)
C341	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C342	1-128-805-11	CERAMIC	47PF 5% 50V
C343	1-128-805-11	CERAMIC	47PF 5% 50V
C344	1-128-805-11	CERAMIC	47PF 5% 50V
C345	1-128-805-11	CERAMIC	47PF 5% 50V
C346	1-126-964-11	ELECT	10uF 20% 50V
C347	1-126-964-11	ELECT	10uF 20% 50V
C348	1-126-964-11	ELECT	10uF 20% 50V
C349	1-126-964-11	ELECT	10uF 20% 50V
C350	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)
C351	1-127-868-11	CERAMIC	2200PF 10% 50V
C352	1-127-868-11	CERAMIC	2200PF 10% 50V
C353	1-127-868-11	CERAMIC	2200PF 10% 50V
C354	1-127-888-11	CERAMIC	0.1uF 10% 50V
C355	1-126-964-11	ELECT	10uF 20% 50V (DB1070)
C358	1-127-888-11	CERAMIC	0.1uF 10% 50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C359	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070: AEP, CH, E, UK)	D304	8-719-911-19	DIODE 1SS199-25	
C360	1-127-888-11	CERAMIC	0.1uF 10% 50V			< FERRITE BEAD/NOISE FILTER >	
C361	1-126-916-11	ELECT	1000uF 20% 6.3V (DB1070: AEP, CH, E, UK)	FB303	1-412-911-11	FERRITE 0uH (DB1070)	
C362	1-126-964-11	ELECT	10uF 20% 50V (DB1070)	FL301	1-424-543-11	FERRITE 0uH (DB1070: AEP, CH, E, UK)	
C363	1-126-964-11	ELECT	10uF 20% 50V	FL302	1-424-543-11	FERRITE 0uH (DB1070)	
C364	1-127-888-11	CERAMIC	0.1uF 10% 50V	FL303	1-424-543-11	FERRITE 0uH (DB1070: AEP, CH, E, UK)	
C365	1-127-888-11	CERAMIC	0.1uF 10% 50V	FL304	1-416-300-21	FILTER, NOISE (DB1070)	
C366	1-126-964-11	ELECT	10uF 20% 50V (DB1070)	FL305	1-416-300-21	FILTER, NOISE (DB1070)	
C367	1-127-888-11	CERAMIC	0.1uF 10% 50V			< IC >	
C368	1-126-960-11	ELECT	1uF 20% 50V (DB1070: AEP, CH, E, UK)	IC301	6-700-051-01	IC OPA2652 (CND, US)	
C369	1-128-805-11	CERAMIC	47PF 5% 50V	IC302	6-700-051-01	IC OPA2652 (CND, US)	
C370	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070: AEP, CH, E, UK)	IC303	8-759-231-66	IC TC74HC4053AP (CND, US)	
C372	1-126-916-11	ELECT	1000uF 20% 6.3V (DB1070: AEP, CH, E, UK)	IC304	8-759-917-18	IC SN74HCU04AN (DB1070)	
C373	1-127-888-11	CERAMIC	0.1uF 10% 50V	IC305	8-759-666-34	IC BA7622 (DB1070)	
C374	1-127-888-11	CERAMIC	0.1uF 10% 50V	IC306	8-759-232-01	IC TC74HC00AP (DB1070: AEP, CH, E, UK)	
C375	1-126-964-11	ELECT	10uF 20% 50V (DB1070)	IC307	6-700-367-01	IC MB90089F-G-238-BND (DB1070)	
C376	1-126-960-11	ELECT	1uF 20% 50V (DB1070: AEP, CH, E, UK)	IC308	8-759-529-20	IC NJM2296D	
C377	1-127-888-11	CERAMIC	0.1uF 10% 50V (DB1070)	IC309	8-759-822-05	IC LA7213 (DB1070: AEP, CH, E, UK)	
C378	1-127-888-11	CERAMIC	0.1uF 10% 50V	IC310	8-759-036-90	IC MC74ACT08N (DB1070)	
C379	1-127-888-11	CERAMIC	0.1uF 10% 50V (CND, US)	IC311	8-759-822-05	IC LA7213 (DB1070: AEP, CH, E, UK)	
C380	1-127-888-11	CERAMIC	0.1uF 10% 50V (CND, US)	IC312	8-759-036-90	IC MC74ACT08N	
C381	1-127-888-11	CERAMIC	0.1uF 10% 50V (CND, US)			< JACK >	
C382	1-127-888-11	CERAMIC	0.1uF 10% 50V (CND, US)	J301	1-794-313-11	JACK, PIN (BLOCK) 9P (COMPONENT VIDEO MONITOR OUT, TV/SAT IN, DVD/LD IN) (DB1070: CND, US)	
		< CONNECTOR >		J301	1-815-573-11	JACK, PIN BLOCK 9P (COMPONENT VIDEO MONITOR OUT, TV/SAT IN, DVD/LD IN)	
CN301	1-573-846-11	CONNECTOR, BOARD TO BOARD 14P (DB1070: AEP, CH, E, UK)		J302	1-794-970-11	JACK, PIN 1P (MONITOR OUT VIDEO) (DB870)	
CN301	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P (DB870: AEP, UK)		J302	1-794-971-11	JACK, PIN 1P (MONITOR OUT VIDEO) (DB1070)	
CN301	1-784-039-21	CONNECTOR, BOARD TO BOARD 19P (CND, US)		J303	1-563-330-11	JACK (CONTROL A1 II)	
CN302	1-564-505-11	PLUG, CONNECTOR 2P		J304	1-794-978-11	JACK, PIN 3P (VIDEO 2 IN VIDEO, VIDEO 1 IN/OUT VIDEO) (DB870)	
CN303	1-568-830-11	CONNECTOR, FFC 11P (DB870: AEP, UK)		J304	1-794-979-11	JACK, PIN 3P (VIDEO 2 IN VIDEO, VIDEO 1 IN/OUT VIDEO) (DB1070)	
CN303	1-568-838-11	CONNECTOR, FFC 21P (CND, US)		J305	1-794-978-11	JACK, PIN 3P (TV/SAT IN VIDEO, DVD/LD IN VIDEO, VIDEO OUT 2 VIDEO) (DB870)	
CN303	1-784-776-11	CONNECTOR, FFC 15P (DB1070: AEP, CH, E, UK)		J305	1-794-979-11	JACK, PIN 3P (TV/SAT IN VIDEO, DVD/LD IN VIDEO, VIDEO OUT 2 VIDEO) (DB1070)	
* CN306	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P (DB1070)				< COIL >	
		< TRIMMER >		L301	1-410-973-11	INDUCTOR 22uH (DB1070)	
CT301	1-141-442-11	CAP, CERAMIC TRIMMER 20PF (DB1070: AEP, CH, E, UK)				< TRANSISTOR >	
CT302	1-141-442-11	CAP, CERAMIC TRIMMER 20PF (DB1070)		Q302	8-729-900-80	TRANSISTOR DTC124ES (CND, US)	
CT303	1-141-442-11	CAP, CERAMIC TRIMMER 20PF (DB1070)		Q304	8-729-119-79	TRANSISTOR 2SC2785-FEK (DB1070)	
		< DIODE >		Q305	8-729-119-79	TRANSISTOR 2SC2785-FEK (DB1070)	
D301	8-719-911-19	DIODE 1SS199-25 (DB1070)				< RESISTOR >	
D303	8-719-911-19	DIODE 1SS199-25		R301	1-247-804-11	CARBON 75 5% 1/4W (CND, US)	
				R302	1-247-804-11	CARBON 75 5% 1/4W (CND, US)	
				R303	1-247-804-11	CARBON 75 5% 1/4W (CND, US)	

VIDEO

VIDEO 3

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R304	1-247-804-11	CARBON	75	5%	1/4W (CND, US)	R335	1-247-804-11	CARBON	75	5%	1/4W (DB1070: AEP, CH, E, UK)
R305	1-247-804-11	CARBON	75	5%	1/4W (CND, US)	R336	1-247-804-11	CARBON	75	5%	1/4W (DB1070: AEP, CH, E, UK)
R306	1-247-804-11	CARBON	75	5%	1/4W (CND, US)	R337	1-249-411-11	CARBON	330	5%	1/4W (CND, US)
R307	1-247-804-11	CARBON	75	5%	1/4W (CND, US)	R338	1-247-804-11	CARBON	75	5%	1/4W
R308	1-249-417-11	CARBON	1K	5%	1/4W (CND, US)	R339	1-247-804-11	CARBON	75	5%	1/4W
R309	1-247-804-11	CARBON	75	5%	1/4W (CND, US)	R340	1-247-804-11	CARBON	75	5%	1/4W
R310	1-247-804-11	CARBON	75	5%	1/4W (CND, US)	R341	1-247-804-11	CARBON	75	5%	1/4W
R311	1-249-417-11	CARBON	1K	5%	1/4W (CND, US)	R342	1-247-804-11	CARBON	75	5%	1/4W
R312	1-249-417-11	CARBON	1K	5%	1/4W (CND, US)	R343	1-249-437-11	CARBON	47K	5%	1/4W (DB1070)
R313	1-249-411-11	CARBON	330	5%	1/4W (CND, US)	R344	1-247-804-11	CARBON	75	5%	1/4W
R314	1-249-433-11	CARBON	22K	5%	1/4W (CND, US)	R345	1-249-437-11	CARBON	47K	5%	1/4W (DB1070)
R315	1-249-411-11	CARBON	330	5%	1/4W (CND, US)	R346	1-247-804-11	CARBON	75	5%	1/4W
R316	1-249-433-11	CARBON	22K	5%	1/4W (CND, US)	R347	1-249-424-11	CARBON	3.9K	5%	1/4W (DB1070)
R317	1-247-903-00	CARBON	1M	5%	1/4W (DB1070: AEP, CH, E, UK)	R348	1-249-437-11	CARBON	47K	5%	1/4W (DB1070)
R318	1-247-804-11	CARBON	75	5%	1/4W (DB1070: AEP, CH, E, UK)	R349	1-249-418-11	CARBON	1.2K	5%	1/4W (DB1070)
R319	1-249-411-11	CARBON	330	5%	1/4W (DB1070: AEP, CH, E, UK)	R350	1-249-437-11	CARBON	47K	5%	1/4W (DB1070)
R320	1-249-417-11	CARBON	1K	5%	1/4W (DB1070)	R351	1-247-804-11	CARBON	75	5%	1/4W
R321	1-249-417-11	CARBON	1K	5%	1/4W (DB1070)	R352	1-249-411-11	CARBON	330	5%	1/4W (DB1070: AEP, CH, E, UK)
R322	1-249-417-11	CARBON	1K	5%	1/4W (DB1070)	R353	1-247-883-00	CARBON	150K	5%	1/4W (DB1070: AEP, CH, E, UK)
R323	1-247-804-11	CARBON	75	5%	1/4W (DB1070: AEP, CH, E, UK)	R354	1-249-411-11	CARBON	330	5%	1/4W (CND, US)
R324	1-247-903-00	CARBON	1M	5%	1/4W (DB1070)	R355	1-249-411-11	CARBON	330	5%	1/4W (DB1070: AEP, CH, E, UK)
R325	1-249-429-11	CARBON	10K	5%	1/4W (CND, US)	R356	1-247-883-00	CARBON	150K	5%	1/4W (DB1070: AEP, CH, E, UK)
R326	1-249-411-11	CARBON	330	5%	1/4W (CND, US)	R357	1-247-807-31	CARBON	100	5%	1/4W (CND, US)
R327	1-249-411-11	CARBON	330	5%	1/4W (DB1070)	R358	1-249-433-11	CARBON	22K	5%	1/4W (CND, US)
R328	1-247-807-31	CARBON	100	5%	1/4W (DB1070)	R359	1-249-411-11	CARBON	330	5%	1/4W (CND, US)
R329	1-249-393-11	CARBON	10	5%	1/4W (DB1070)	< VIBRATOR >					
R330	1-249-393-11	CARBON	10	5%	1/4W (DB1070)	X301	1-781-820-21	VIBRATOR, CRYSTAL (17.34MHz) (DB1070: AEP, CH, E, UK)			
R331	1-249-417-11	CARBON	1K	5%	1/4W (DB1070)	X302	1-781-821-21	VIBRATOR, CRYSTAL (14MHz) (DB1070)			
R332	1-247-807-31	CARBON	100	5%	1/4W (DB1070: AEP, CH, E, UK)	*****					
R333	1-249-425-11	CARBON	4.7K	5%	1/4W (DB1070)	1-681-104-11	VIDEO 3 BOARD *****				
R334	1-247-807-31	CARBON	100	5%	1/4W (DB1070: CND, US)	< CAPACITOR >					
R335	1-249-417-11	CARBON	1K	5%	1/4W (DB1070)	C293	1-162-302-11	CERAMIC	0.0022uF	30%	16V
R336	1-247-807-31	CARBON	100	5%	1/4W (DB1070: AEP, CH, E, UK)	C294	1-162-302-11	CERAMIC	0.0022uF	30%	16V
R337	1-249-425-11	CARBON	4.7K	5%	1/4W (DB1070)	< CONNECTOR >					
R338	1-247-807-31	CARBON	100	5%	1/4W (DB1070: CND, US)	CN299	1-784-923-11	PIN, CONNECTOR 7P			
R339	1-247-807-31	CARBON	100	5%	1/4W (DB1070: CND, US)	* EB299	1-537-738-21	TERMINAL, EARTH			

VIDEO 3

VIDEO AU

V.SWITCH

Ref. No.	Part No.	Description	Remark			
		< JACK >				
J298	1-770-571-11	JACK BLOCK, PIN (L TYPE) 3P (VIDEO 3 INPUT VIDEO/AUDIO)				
J299	1-784-808-11	TERMINAL, S (VIDEO 3 INPUT S-VIDEO)				
		< RESISTOR >				
R298	1-249-417-11	CARBON	1K	5%	1/4W	
R299	1-249-417-11	CARBON	1K	5%	1/4W	

	1-681-096-11	VIDEO AU BOARD				

		< CAPACITOR >				
C201	1-127-868-11	CERAMIC	2200PF	10%	50V	
C202	1-127-868-11	CERAMIC	2200PF	10%	50V	
C211	1-127-868-11	CERAMIC	2200PF	10%	50V	
C212	1-127-868-11	CERAMIC	2200PF	10%	50V	
C213	1-128-809-11	CERAMIC	100PF	5%	50V	
		< CONNECTOR >				
CN201	1-568-441-11	SOCKET, CONNECTOR 9P				
* CN202	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P				
		< IC >				
IC201	8-759-582-65	IC TC9273N-014				
		< JACK >				
J201	1-774-411-11	JACK, PIN 6P (TV/SAT AUDIO IN, DVD/LD AUDIO IN, VIDEO 2 AUDIO OUT) (DB870)				
J201	1-794-984-11	JACK, PIN 6P (TV/SAT AUDIO IN, DVD/LD AUDIO IN, VIDEO 2 AUDIO OUT) (DB1070)				
J202	1-774-411-11	JACK, PIN 6P (VIDEO 2 AUDIO IN, VIDEO 1 AUDIO IN/OUT) (DB870)				
J202	1-794-984-11	JACK, PIN 6P (VIDEO 2 AUDIO IN, VIDEO 1 AUDIO IN/OUT) (DB1070)				
		< RESISTOR >				
R201	1-249-417-11	CARBON	1K	5%	1/4W	
R202	1-249-417-11	CARBON	1K	5%	1/4W	
R203	1-249-421-11	CARBON	2.2K	5%	1/4W	
R204	1-249-417-11	CARBON	1K	5%	1/4W	
R205	1-249-421-11	CARBON	2.2K	5%	1/4W	
R206	1-249-417-11	CARBON	1K	5%	1/4W	
R211	1-249-417-11	CARBON	1K	5%	1/4W	
R251	1-249-417-11	CARBON	1K	5%	1/4W	
R252	1-249-417-11	CARBON	1K	5%	1/4W	
R253	1-249-421-11	CARBON	2.2K	5%	1/4W	
R254	1-249-417-11	CARBON	1K	5%	1/4W	
R255	1-249-421-11	CARBON	2.2K	5%	1/4W	
R256	1-249-417-11	CARBON	1K	5%	1/4W	

Ref. No.	Part No.	Description	Remark
	1-681-106-11	V.SWITCH BOARD (E2, E3) *****	
	1-533-217-31	HOLDER, FUSE	
		< CONNECTOR >	
CN49	1-568-106-11	PIN, CONNECTOR 4P	
		< FUSE >	
△F49	1-532-504-51	FUSE (T4AL/250V)	
		< SWITCH >	
△VS49	1-571-437-21	SWITCH, POWER VOLTAGE CHANGE (VOLTAGE SELECTOR)	

		MISCELLANEOUS	

62	1-765-352-11	WIRE (FLAT TYPE) (31 CORE)	
64	1-773-105-11	WIRE (FLAT TYPE) (19 CORE) (CND, US)	
160	1-769-904-11	WIRE (FLAT TYPE) (9 CORE)	
164	1-693-539-21	TUNER (DB870: CND/DB1070: CND, E2, E3, US)	
164	1-693-540-21	TUNER(DB870: AEP, UK/ DB1070: AEP, CH, KR, MY, SP, TW, UK)	
203	1-773-143-11	WIRE (FLAT TYPE) (21 CORE) (CND, US)	
204	1-773-001-11	WIRE (FLAT TYPE) (15 CORE) (DB870)	
204	1-773-003-11	WIRE (FLAT TYPE) (15 CORE) (DB1070)	
△210	1-769-079-21	CORD, POWER (KR)	
△210	1-769-743-11	CORD, POWER (CND)	
△210	1-777-071-21	CORD, POWER (DB870: AEP, UK/ DB1070: AEP, E2, E3, MY, SP, TW, UK)	
△210	1-782-464-21	CORD, POWER (CH)	
△210	1-783-820-11	CORD, POWER (US)	
△T901	1-437-324-11	TRANSFORMER, POWER (TW)	
△T901	1-437-325-11	TRANSFORMER, POWER (CND, US)	
△T901	1-437-327-11	TRANSFORMER, POWER (DB870: AEP, UK / DB1070: AEP, CH, KR, MY, SP, TW, UK)	
△T901	1-437-328-11	TRANSFORMER, POWER (E2)	

		HARDWARE LIST	

#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#2	7-685-885-09	SCREW +BVTT 4X16 (S)	

		ACCESSORIES	

△	1-569-008-21	ADAPTOR, CONVERSION (E2, E3, TW)	
△	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (UK)	
	1-476-552-21	COMMANDER, STANDARD (RM-U305A) (DB870: AEP, UK)	
	1-476-606-11	REMOTE COMMANDER (RM-PP505) (DB870: CND)	
	1-476-607-11	REMOTE COMMANDER (RM-PP505L) (DB1070: CND, US)	
	1-476-645-11	REMOTE COMMANDER (RM-LP205) (DB1070: AEP, CH, E2, E3, KR, MY, SP, TW, UK)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

STR-DB870/DB1070

Ver. 1.6

Ref. No.	Part No.	Description	Remark
	1-501-374-11	ANTENNA, LOOP (AM)	
	1-501-594-11	ANTENNA (FM)	
	1-777-172-11	CORD, CONNECTION (CONTROL S CONNECTING CORD) (CND,US)	
	1-777-560-11	CORD, CONNECTION (AUDIO/VIDEO/ CONTROL S CONNECTING CORD) (CND, US)	
	1-793-184-21	CONNECTOR (F TYPE ADAPTOR) (CND, E2, E3, US)	
	4-228-696-01	COVER, BATTERY (for RM-U305A) (DB870: AEP, UK)	
	4-983-536-01	COVER, BATTERY (for RM-PP505, RM-PP505L) (DB870: CND/DB1070: US, CND)	
	4-210-990-01	LID, BATTERY CASE (for RM-LP205) (DB1070: AEP, UK, E2, E3, KR, SP, MY, TW, CH)	
	4-235-985-11	MANUAL, INSTRUCTION (ENGLISH)	
	4-235-985-21	MANUAL, INSTRUCTION (FRENCH) (DB870: AEP, CND/ DB1070: AEP, CND, E2, E3, MY, SP)	
	4-235-985-31	MANUAL, INSTRUCTION (SPANISH) (DB870: AEP/DB1070: AEP, E2, E3, MY, SP)	
	4-235-985-41	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DB1070: E3, KR, MY, SP, TW)	
	4-235-985-51	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (CH)	
	4-235-985-61	MANUAL, INSTRUCTION (KOREAN) (KR)	
	4-235-985-71	MANUAL, INSTRUCTION (GERMAN, DUTCH, SWEDISH) (AEP)	
	4-235-985-81	MANUAL, INSTRUCTION (ITALIAN, POLISH) (AEP)	
	4-236-327-11	MANUAL, INSTRUCTION (for RM-PP505) (ENGLISH) (DB870: CND)	
	4-236-327-21	MANUAL, INSTRUCTION (for RM-PP505) (FRENCH) (DB870: CND)	
	4-236-328-11	MANUAL, INSTRUCTION (for RM-PP505L) (ENGLISH) (DB1070: US, CND)	
	4-236-328-21	MANUAL, INSTRUCTION (for RM-PP505L) (FRENCH) (DB1070: CND)	
	4-236-383-11	MANUAL, INSTRUCTION (for RM-LP205) (ENGLISH) (DB1070: AEP, CH, E2, E3, MY, SP, TW, UK)	
	4-236-383-21	MANUAL, INSTRUCTION (for RM-LP205) (FRENCH, SPANISH) (DB1070: AEP, E2, E3, MY, SP, TW)	
	4-236-383-31	MANUAL, INSTRUCTION (for RM-LP205) (TRADITIONAL CHINESE) (E3, MY, SP, TW)	
	4-236-383-41	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (CH)	
	4-236-383-51	MANUAL, INSTRUCTION (for RM-LP205) (KOREAN) (KR)	
	4-236-383-61	MANUAL, INSTRUCTION (for RM-LP205) (GERMAN, DUTCH, SWEDISH, ITALIAN, POLISH) (DB1070: AEP)	

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]