

STR-K1500

SERVICE MANUAL

Ver. 1.2 2006.07

*E Model
Australian Model*



- STR-K1500 is the tuner and the amplifier section in HT-DDW1500.

Manufactured under license from Dolby Laboratories.
“Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories.
“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

SPECIFICATIONS

Amplifier section

Models of area code SP, SP6, MX, E51

Power Output¹⁾

6 ohms 1 kHz, THD 10%

FRONT ²⁾	: 140 W/ch
CENTER ²⁾	: 140 W
SUR ²⁾	: 140 W/ch
SUR BACK ²⁾	: 140 W

Music power output

FRONT ²⁾	: 185 W/ch
CENTER ²⁾	: 185 W
SUR ²⁾	: 185 W/ch
SUR BACK ²⁾	: 185 W

Models of area code AUS

Power Output¹⁾

6 ohms 120 Hz – 20 kHz, THD 0.09%

FRONT ²⁾	: 75 W/ch
CENTER ²⁾	: 75 W
SUR ²⁾	: 75 W/ch
SUR BACK ²⁾	: 75 W

6 ohms 1 kHz, THD 0.7%

FRONT ²⁾	: 100 W/ch
CENTER ²⁾	: 100 W
SUR ²⁾	: 100 W/ch
SUR BACK ²⁾	: 100 W

6 ohms 1 kHz, THD 10%

FRONT ²⁾	: 140 W/ch
CENTER ²⁾	: 140 W
SUR ²⁾	: 140 W/ch
SUR BACK ²⁾	: 140 W

Music power output

FRONT ²⁾	: 185 W/ch
CENTER ²⁾	: 185 W
SUR ²⁾	: 185 W/ch
SUR BACK ²⁾	: 185 W

Model of area code AR

Power Output^{1) 3)}

6 ohms 1 kHz, THD 10%

FRONT ²⁾	: 140W/ch ¹⁾ , 135 W/ch ³⁾
CENTER ²⁾	: 140W ¹⁾ , 135 W ³⁾
SUR ²⁾	: 140W/ch ¹⁾ , 135 W/ch ³⁾
SUR BACK ²⁾	: 140W ¹⁾ , 135 W ³⁾

Music power output

FRONT ²⁾	: 185W/ch ¹⁾ , 180 W/ch ³⁾
CENTER ²⁾	: 185W ¹⁾ , 180 W ³⁾
SUR ²⁾	: 185W/ch ¹⁾ , 180 W/ch ³⁾
SUR BACK ²⁾	: 185W ¹⁾ , 180 W ³⁾

1) Measured under the following conditions:

Area code	Power requirements
SP, SP6	230 V AC, 50 Hz
AUS, E51	240 V AC, 50 Hz
MX	127 V AC, 60 Hz
AR	230 V AC, 50 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

3) Measured under the following conditions:

Area code	Power requirements
AR	220 V AC, 50 Hz

Inputs (Analog)

MULTI CH IN, SA-CD/CD, MD/TAPE, DVD, VIDEO 1, 2, 3	Sensitivity: 800 mV Impedance: 50 kohms
--	--

Inputs (Digital)

DVD (Coaxial)	Sensitivity: – Impedance: 75 ohms
VIDEO 1, 2 (Optical)	Sensitivity: – Impedance: –

Outputs (Analog)

MD/TAPE (OUT), VIDEO 1 (AUDIO OUT)	Voltage: 800 mV Impedance: 10 kohms
SUB WOOFER	Voltage: 2 V Impedance: 1 kohm

Reproduction frequency range:
28 – 20,000 Hz

Tone

Gain levels ±6 dB, 1 dB step

— Continued on next page —

MULTI CHANNEL AV RECEIVER

SONY®

9-887-157-03
2006G16-1
© 2006.07

Sony Corporation
Home Audio Division
Published by Sony Techno Create Corporation

STR-K1500
Ver. 1.2

FM tuner section

Tuning range 87.5 - 108.0 MHz
Antenna FM wire antenna
Antenna terminals 75 ohms, unbalanced
Intermediate frequency 10.7 MHz


AM tuner section

Tuning range
Models of area code SP, SP6, AUS
With 9-kHz tuning scale:
531 – 1,602 kHz
Models of area code E51
With 10-kHz tuning scale:
530 – 1,610 kHz⁴⁾
With 9-kHz tuning scale:
531 – 1,602 kHz⁴⁾
Models of area code MX, AR
With 10-kHz tuning scale:
530 – 1,610 kHz
Antenna Loop antenna
Intermediate frequency 450 kHz

4) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down TUNING MODE, press I/⏻. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

- Abbreviation
AR : Argentitna model
AUS : Australian model
E51 : Chilean and Peruvian models
MX : Mexican model
SP : Singapore model
SP6 : Singapore and Malaysia models

MODEL IDENTIFICATION
– Rear Panel –

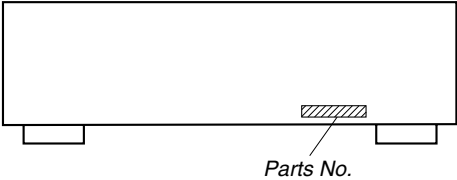

Model	Part No.
E51 model	2-663-099-2□
SP, SP6 models	2-663-099-3□
AUS model	2-663-099-4□
MX model	2-663-099-5□
AR model	2-663-099-9□

Video section

Inputs/Outputs
Video: 1 Vp-p, 75 ohms
COMPONENT VIDEO:
Y: 1 Vp-p, 75 ohms
P_B/C_B/B-Y: 0.7 Vp-p, 75 ohms
P_R/C_R/R-Y: 0.7 Vp-p, 75 ohms
80 MHz HD Pass Through


General

Area code	Power requirements
SP, SP6	230 – 240 V AC, 50/60 Hz
AUS	240 V AC, 50 Hz
MX	127 V AC, 60 Hz
E51	120/220/240 V AC, 50/60 Hz
AR	220 – 230 V AC, 50/60 Hz

Power consumption 200 W
Power consumption (during standby mode) 0.2 W
Dimensions (w/h/d) (Approx.) 430 × 157.5 × 316 mm including projecting parts and controls
Mass (Approx.) 8.0 kg

About area codes

The area code of the receiver you purchased is shown on the lower right portion of the rear panel (see the illustration below).

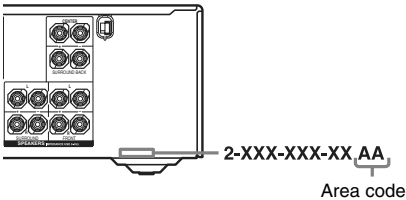

Any differences in operation, according to the area code, are clearly indicated in the text, for example, “Models of area code AA only”.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

**LEAD FREE MARK**

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


TABLE OF CONTENTS

1. GENERAL	4
2. TEST MODE	12
3. DIAGRAMS	14
3-1. Block Diagram – MAIN Section –	16
3-2. Block Diagram – DISPLAY/POWER Section –	17
3-3. Printed Wiring Board – DIGITAL Board (Side A) –	18
3-4. Printed Wiring Board – DIGITAL Board (Side B) –	19
3-5. Schematic Diagram – DIGITAL Board (1/5) –	20
3-6. Schematic Diagram – DIGITAL Board (2/5) –	21
3-7. Schematic Diagram – DIGITAL Board (3/5) –	22
3-8. Schematic Diagram – DIGITAL Board (4/5) –	23
3-9. Schematic Diagram – DIGITAL Board (5/5) –	24
3-10. Printed Wiring Board – MAIN Board –	25
3-11. Schematic Diagram – MAIN Board (1/3) –	26
3-12. Schematic Diagram – MAIN Board (2/3) –	27
3-13. Schematic Diagram – MAIN Board (3/3) –	28
3-14. Printed Wiring Boards – DISPLAY Board, POWER Board –	29
3-15. Schematic Diagram – DISPLAY Board, POWER Board –	30
3-16. Printed Wiring Boards – STANDBY Board, AC SELECT Board –	31
3-17. Printed Wiring Board – SPEAKER C/SB Board –	32
3-18. Schematic Diagram – SPEAKER C/SB Board, STANDBY Board, AC SELECT Board –	33
3-19. Printed Wiring Boards – ADCC Board, VIDEO 3 Board –	34
3-20. Schematic Diagram – ADCC Board, VIDEO 3 Board –	35
3-21. Printed Wiring Boards – VIDEO Board, HEADPHONE Board –	36
3-22. Schematic Diagram – VIDEO Board, HEADPHONE Board –	37
3-23. Printed Wiring Board – HDMI Board –	38
3-24. Schematic Diagram – HDMI Board –	39
4. EXPLODED VIEWS	
4-1. Front Panel Section	47
4-2. Chassis Section	48
5. ELECTRICAL PARTS LIST	49

This section is extracted from instruction manual.

Receiver

Front panel

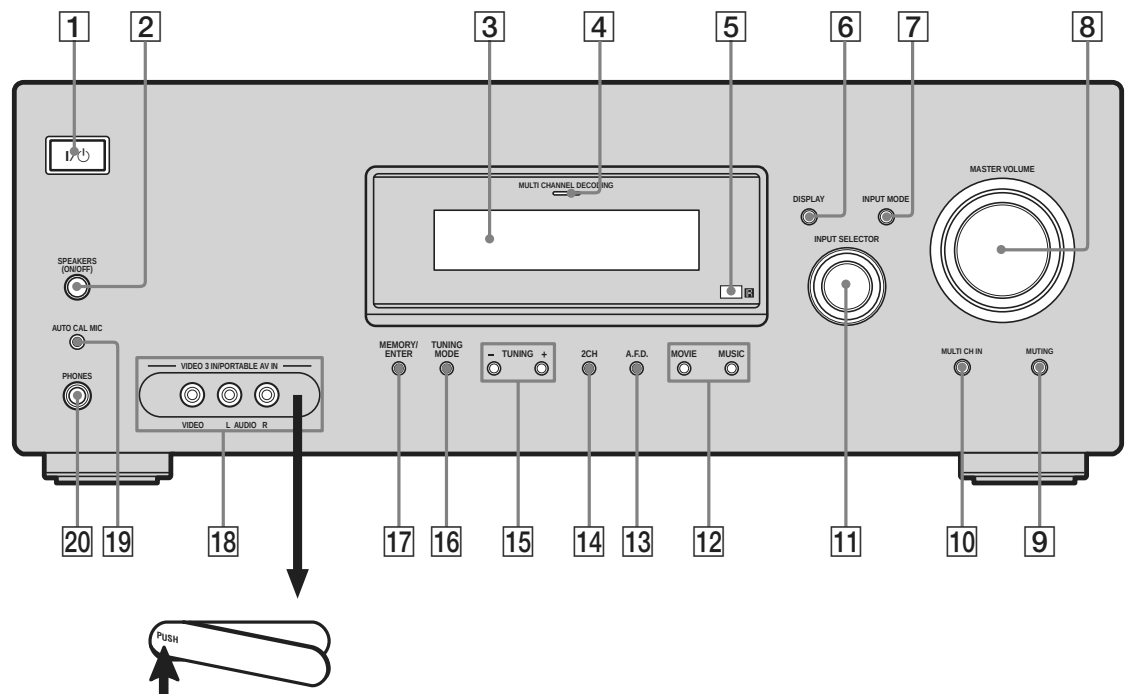


To remove the cover

Press PUSH.
When you remove the cover, keep it out of reach from children.

Name	Function
1 I/O	Press to turn the receiver on or off.
2 SPEAKERS (ON/OFF)	Press to turn the speakers and sub woofers on or off.
3 Display	The current status of the selected component or a list of selectable items appears here.
4 MULTI CHANNEL DECODING lamp	Lights up when multi channel audio is decoded.
5 Remote sensor	Receives signals from remote commander.
6 DISPLAY	Press to select information displayed on the display.
7 INPUT MODE	Press to select the input mode when the same components are connected to both digital and analog jacks.
8 MASTER VOLUME	Turn to adjust the volume level of all speakers at the same time.

Name	Function
9 MUTING	Press to mute the sound.
10 MULTI CH IN	Press to select the audio directly from the components connected to the MULTI CH IN jacks.
11 INPUT SELECTOR	Turn to select the input source to playback.
12 MOVIE, MUSIC	Press to select sound fields (MOVIE, MUSIC).
13 A.F.D.	Press to select A.F.D. mode.
14 2CH	Press to select 2CH STEREO mode.
15 TUNING +/-	Press to scan a station.
16 TUNING MODE	Press to select the tuning mode.
17 MEMORY/ENTER	Press to store a station or enter the selection when selecting the settings.
18 VIDEO 3 IN/ PORTABLE AV IN jacks	To connect a camcorder or video game.
19 AUTO CAL MIC jack	Connects to the supplied ECM-AC2 optimizer microphone for the Auto Calibration function.
20 PHONES jack	Connects to a headphone.

About the indicators on the display

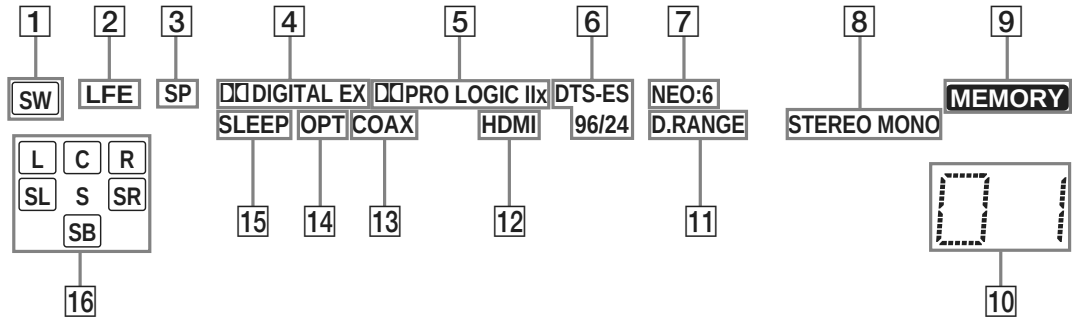

Name	Function
1 SW	Lights up when the audio signal is output from the SUB WOOFER jack.
2 LFE	Lights up when the disc being played back contains an LFE (Low Frequency Effect) channel and the LFE channel signal is actually being reproduced.
3 SP	Lights up according to the speaker used. However, this indicator do not light up if the speaker output is turned off or if a headphone is connected.
4 DIGITAL (EX)	Lights up when Dolby Digital signals are input. “DIGITAL EX” lights up when Dolby Digital Surround EX signals are decoded. Note When playing a Dolby Digital format disc, be sure that you have made digital connections and that INPUT MODE is not set to “ANALOG”.


Name	Function
5 PRO LOGIC (II)/ (IIx)	“PRO LOGIC” lights up when the receiver applies Pro Logic processing to 2 channel signals in order to output the center and surround channel signals. “PRO LOGIC II” lights up when the Pro Logic II Movie/Music/Game decoder is activated. “PRO LOGIC IIx” lights up when the Pro Logic IIx Movie/Music/Game decoder is activated. Note Dolby Pro Logic IIx decoding does not function for DTS format signals or for signals with a sampling frequency of more than 48 kHz.
6 DTS (-ES)/ (96/24)	“DTS” lights up when DTS signals are input. “DTS-ES” lights up when DTS-ES signals are input. “DTS 96/24” lights up when the receiver is decoding DTS 96 kHz/24 bit signals. Note When playing a DTS format disc, be sure that you have made digital connections and that INPUT MODE is not set to “ANALOG”.
7 NEO:6	Lights up when DTS Neo:6 Cinema/Music decoder is activated.
8 Tuner indicators	Lights up when using the receiver to tune in radio stations, etc.

Name	Function
9 MEMORY	Lights up when a memory function, such as Preset Memory, etc., is activated.
10 Preset station indicators	Lights up when using the receiver to tune in radio stations you have preset. For details on presetting radio stations.
11 D.RANGE	Lights up when dynamic range compression is activated.
12 HDMI*	Flashes when you select "HDMI A." in the VIDEO menu .
13 COAX	Lights up when INPUT MODE is set to "AUTO" and the source signal is a digital signal being input through the COAXIAL jack, or when INPUT MODE is set to "COAX IN".
14 OPT	Lights up when INPUT MODE is set to "AUTO" and the source signal is a digital signal being input through the OPTICAL jack, or when INPUT MODE is set to "OPT IN" .
15 SLEEP	Lights up when the Sleep Timer function is activated.

Name	Function
16 Playback channel indicators	The letters (L, C, R, etc.) indicate the channels being played back. The boxes around the letters vary to show how the receiver downmixes the source sound.
L	Front Left
R	Front Right
C	Center (monaural)
SL	Surround Left
SR	Surround Right
S	Surround (monaural or the surround components obtained by Pro Logic processing)
SB	Surround back (the surround back components obtained by 6.1 channel decoding)
	Example: Recording format (Front/Surround): 3/2.1 Sound Field: A.F.D. AUTO
	SW L C R SL SR

* Except for models of area code MX, E51, AR.

Rear panel

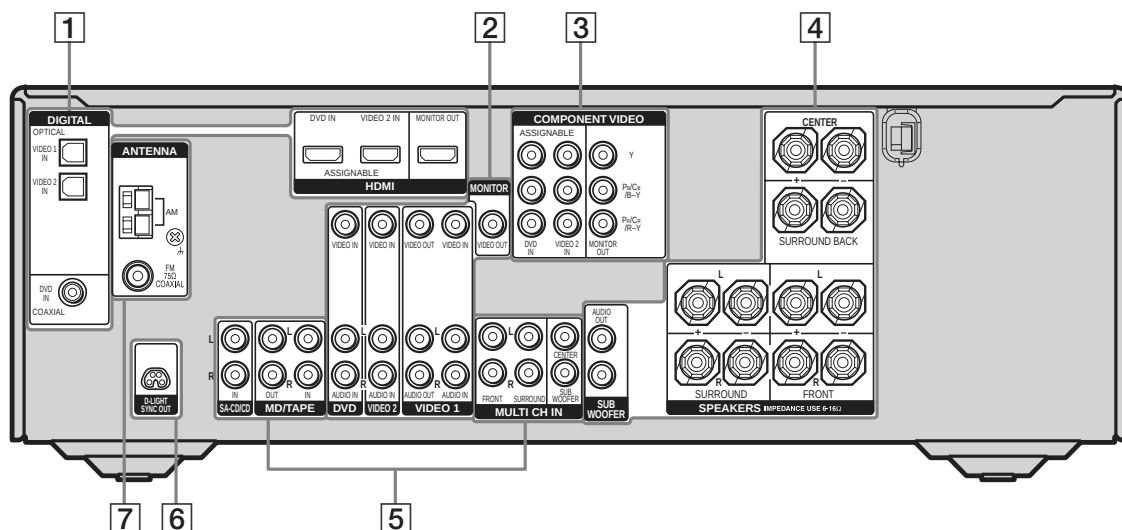

1 DIGITAL INPUT/OUTPUT section

	OPTICAL IN jack	Connects to a DVD player, etc. The COAXIAL jack provides a better quality of loud sound.
	COAXIAL IN jack	
	HDMI IN/ MONITOR OUT jack ^{a)b)}	Connects to a DVD player, or a satellite tuner. The image and the sound are output to a TV or a projector.

2 VIDEO/AUDIO INPUT/OUTPUT section

	White (L) AUDIO IN/ OUT jack	Connects the video and audio jacks of a VCR or a DVD player.
	Red (R) AUDIO IN/ OUT jack	
	Yellow VIDEO IN/ OUT jack ^{a)}	

3 COMPONENT VIDEO INPUT/ OUTPUT section

	Green COMPONENT VIDEO INPUT/ OUTPUT jack ^{a)}	Connects to a DVD player, TV, or a satellite tuner. You can enjoy high quality image.
	Blue COMPONENT VIDEO INPUT/ OUTPUT jack ^{a)}	
	Red COMPONENT VIDEO INPUT/ OUTPUT jack ^{a)}	

4 SPEAKER section

	Connects to the speakers.
	Connects to the sub woofers.

5 AUDIO INPUT/OUTPUT section

	White (L) AUDIO IN/ OUT jack	Connects to an MD deck or CD player, etc.
	Red (R) AUDIO IN/ OUT jack	
	White (L) MULTI CHANNEL INPUT jack	Connects to a Super Audio CD player or DVD player which has an analog audio jack for 5.1 channel sound.
	Red (R) MULTI CHANNEL INPUT jack	
	Black MULTI CHANNEL INPUT jack	

6 D-LIGHT SYNC OUT section



D-LIGHT
SYNC OUT
jack

Connects to a
lighting device.

7 ANTENNA section



FM
ANTENNA

Connects to the
FM wire antenna
supplied with this
receiver.



AM
ANTENNA


Connects to the
AM loop antenna
supplied with this
receiver .

a) You can watch the selected input image when you connect the MONITOR OUT jack to a TV monitor.

b) Except for models of area code MX, E51, AR.

Remote commander

You can use the supplied remote RM-AAP013 to operate the receiver and to control the Sony audio/video components that the remote is assigned to operate. You can also program the remote to control non-Sony audio/video components. For details, see “Programming the remote”.

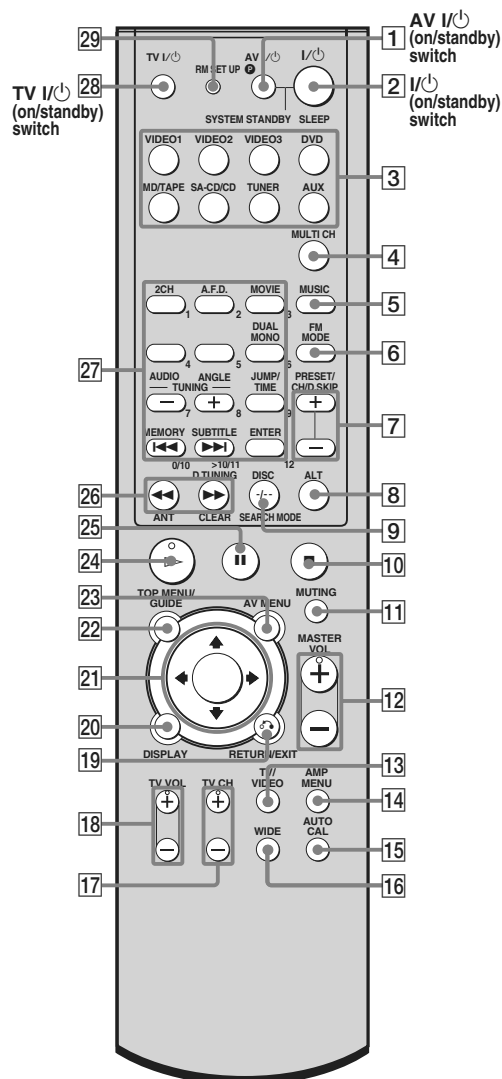

Name	Function
1 AV I/⏻	Press to turn on or off the audio/video components that the remote is programmed to operate. If you press I/⏻ (2) at the same time, it will turn off the receiver and other components (SYSTEM STANDBY). Note The function of the AV I/⏻ switch changes automatically each time you press the input buttons (3).
2 I/⏻	Press to turn the receiver on or off. To turn off all components, press I/⏻ and AV I/⏻ (1) at the same time (SYSTEM STANDBY).
SLEEP	Press ALT (8) and then press SLEEP to activate the Sleep Timer function and the duration which the receiver turns off automatically.
3 Input buttons	Press one of the buttons to select the component you want to use. When you press any of the input buttons, the receiver turns on. The buttons are factory assigned to control Sony components as follows. You can program the remote to control non-Sony components following the steps in "Programming the remote".
Button	Assigned Sony component
VIDEO1	VCR (VTR mode 3)
VIDEO2	VCR (VTR mode 1)
VIDEO3	VCR (VTR mode 2)
DVD	DVD player
MD/TAPE	MD deck
SA-CD/CD	Super Audio CD/CD player
TUNER	Built-in tuner
AUX*	Not assigned

* The AUX button is not available for receiver operation.

Name	Function
4 MULTI CH	Press to select the audio directly from the components connected to the MULTI CH IN jacks.
5 MUSIC	Press to select sound fields (MUSIC).
6 FM MODE	Press to select FM monaural or stereo reception.
7 PRESET/CH/D.SKIP +/-	Press to – select preset stations. – select preset channels of the TV, VCR, satellite tuner, Blu-ray disc recorder, or hard disc recorder. – skip disc of the CD player, VCD player, DVD player, MD deck, or LD player (multi-disc changer only).
8 ALT	Press to light up the button. It changes the remote key function to activate the buttons with orange printing.
9 -/--	Press to select the channel entry mode, either one or two digit of the TV, Blu-ray disc recorder, hard disc recorder, PSX, or satellite tuner.
DISC	Press to select a disc directly of the CD player or VCD player (multi-disc change only).
SEARCH MODE	Press to select the searching mode or unit for search (track, index, etc.) of the DVD player.
10 ■	Press to stop playback of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc recorder, hard disc recorder, or PSX.
11 MUTE	Press to mute the sound.
12 MASTER VOL + ^a /-	Press to adjust the volume level of all speakers at the same time.
13 TV/VIDEO	Press to select the input signal (TV input or video input).

Name	Function
[14] AMP MENU	Press to display the menu of the receiver. Then, use the control buttons to perform menu operations.
[15] AUTO CAL	Press to activate the Auto Calibration function.
[16] WIDE	Press ALT ([8]) and then press WIDE to select the wide picture mode.
[17] TV CH +^a/-	Press to select preset TV channels.
[18] TV VOL +^a/-	Press to adjust the TV volume level.
[19] RETURN/EXIT ↶	Press to – return to the previous menu. – exit the menu while the menu or on-screen guide of the VCD player, LD player, DVD player, Blu-ray disc recorder, hard disc recorder, PSX, or satellite tuner is displayed on the TV screen.
[20] DISPLAY	Press to select information displayed on the TV screen of the TV, VCR, VCD player, LD player, DVD player, CD player, MD deck, Blu-ray disc recorder, hard disc recorder, PSX, or satellite tuner.
[21] Control buttons	After pressing AMP MENU ([14]), TOP MENU/GUIDE ([22]), or AV MENU ([23]), press the control button  ,  ,  , or  to select the settings. When you press TOP MENU/GUIDE or AV MENU, press the control button to enter the selection.
[22] TOP MENU/GUIDE	Press to display – DVD title. – menu or on-screen guide of the satellite tuner, Blu-ray disc recorder, hard disc recorder, or PSX on the TV screen. Then, use the control buttons to perform menu operations.

Name	Function
[23] AV MENU	Press to display the menus of the VCR, DVD player, satellite tuner, Blu-ray disc recorder, hard disc recorder, or PSX on the TV screen. Then, use the control buttons to perform menu operations.
[24] ▷^a	Press to start playback of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc recorder, hard disc recorder, or PSX.
[25] 	Press to pause playback or recording of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc recorder, hard disc recorder, or PSX. (Also starts recording with components in recording standby.)
[26] ◀▶	Press to – search tracks in the forward/backward direction of the CD player, VCD player, LD player, DVD player, MD deck, Blu-ray disc recorder, hard disc recorder, or PSX. – fastforward/rewind of the VCR, DAT deck, or tape deck.
D. TUNING	Press to enter direct tuning mode.
ANT	Press ALT ([8]) and then press ANT to select the signal output from the antenna terminal of the VCR or satellite tuner (TV signal or video signal).
CLEAR	Press ALT ([8]) and then press CLEAR to – clear a mistake when you press the incorrect numeric button. – return to continuous playback, etc. of the CD player, DVD player, Blu-ray disc recorder, PSX, or satellite tuner.

Name	Function
27 TUNING +/-	Press to scan a station.
◀◀/▶▶	Press to skip tracks of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc recorder, hard disc recorder, or PSX.
2CH	Press to select 2CH STEREO mode.
A.F.D.	Press to select A.F.D. mode.
MOVIE	Press to select sound fields (MOVIE).
DUAL MONO	Press to select the language you want during digital broadcast.
AUDIO	Press to change the sound to Multiplex, Bilingual or Multi channel TV sound of the TV, VCR, DVD player, satellite tuner, Blu-ray disc recorder, hard disc recorder, or PSX.
ANGLE	Press to select the viewing angle or change the angles of the DVD player or Blu-ray disc recorder.
JUMP/TIME	Press to – toggle between the previous and the current channels of the satellite tuner, TV, or Blu-ray disc recorder. – show the time or display the playing time of a disc, etc. of the CD player, MD deck, VCD player, or DVD player.
MEMORY	Press to store a station.
SUBTITLE	Press ALT ([8]) and then press SUBTITLE to change the subtitles of the DVD player.
ENTER	Press ALT ([8]) and then press ENTER to enter the value after selecting a channel, disc or track using the numeric buttons.

Name	Function
27 Numeric buttons	Press ALT ([8]) and then press the numeric buttons to – preset/tune to preset stations. – select track numbers of the CD player, VCD player, LD player, DVD player, MD deck, DAT deck, or tape deck. Press 0/10 to select track number 10. – select channel numbers of the TV, VCR, satellite tuner, Blu-ray disc recorder, hard disc recorder, or PSX.
>10/11	Press ALT ([8]) and then press >10/11 to select track numbers over 10 of the VCR, CD player, VCD player, LD player, MD deck, tape deck, Blu-ray disc recorder, hard disc recorder, satellite tuner, TV, or PSX.
28 TV II/⏻	Press to turn the TV on or off.
29 RM SET UP	Press to set up the remote.

- a) The MASTER VOL +, TV VOL +, TV CH +, and ▷ buttons have tactile dots. Use the tactile dots as references when operating the receiver.

Notes

The AUX and 12 buttons on the remote are not available for receiver operation.

Some functions explained in this section may not work depending on the model.

The above explanation is intended to serve as an example only. Therefore, depending on the component, the above operation may not be possible or may operate differently than described.

SECTION 2

TEST MODE

FACTORY PRESET MODE

All preset contents are reset to the default setting.

Procedure:

1. While depressing the **[SPEAKERS (ON/OFF)]** and the **[MOVIE]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power.
2. The message "FACTORY" appears and the present contents are reset to the default values. (5 second)

AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE

Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

Procedure:

1. Set the FUNCTION to AM. Turn off the main power.
2. While depressing the **[TUNING MODE]** button, press the power **[I/⏻]** button to turn on the main power.
3. Either the message "9 k STEP" or "10 kSTEP" appears. Select the desired step.

FLUORESCENT INDICATOR TUBE TEST MODE


All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.

Procedure:


1. While depressing the **[TUNING MODE]** and the **[DISPLAY]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power.
2. All segments turn on.



3. Turn the **[INPUT SELECTOR]** dial.

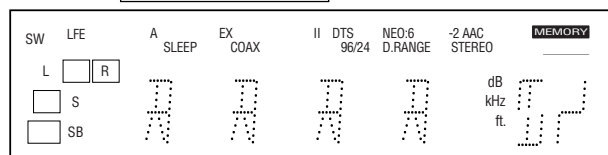

4. Turn the **[INPUT SELECTOR]** dial once again.

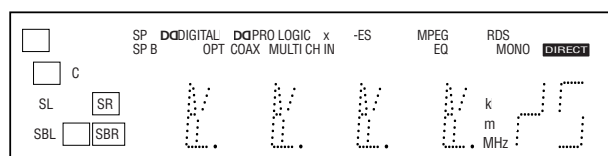

5. Turn the **[INPUT SELECTOR]** dial once again. All segments turn off.
6. Every turning of the **[INPUT SELECTOR]** dial turns on each segment one after another in the same order.

SOUND FIELD CLEAR MODE

The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

Procedure:

1. While depressing the **[2CH]** button, press the power **[I/⏻]** button to turn on the main power.
2. The message "SF. CLR." appears and initialization is performed. (5 second)

SOFTWARE VERSION DISPLAY MODE

The software version is displayed.

Procedure:

1. While depressing the **[SPEAKERS (ON/OFF)]** and the **[DISPLAY]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power.
2. The model name, destination and the software version are displayed. (7 second)

KEY CHECK MODE

Button check

Procedure:

1. While depressing the **[SPEAKERS (ON/OFF)]** and the **[2CH]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power. "REST 13" appears.
2. Every pressing of any button other than **[I/⏻]** counts down the buttons. The buttons which are already counted once are not counted again.
3. When all buttons are pressed "REST 00" appears.

CHANGE COMMON MODE

This mode is command mode changed to AV 1 or AV2.

Procedure:

1. While depressing the **[INPUT MODE]** button, press the power **[I/⏻]** button to turn on the main power.
2. Either the message "C.MODE.AV 1" or "C.MODE.AV 2" appears. (3 second)

SHIPMENT MODE

All preset contents are reset to the default setting.

Procedure:

1. While depressing the **[SPEAKERS (ON/OFF)]** and the **[MUSIC]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power.
2. "CLEARED" appears and switch off the set.

PROTECTOR

Procedure:

1. While depressing the **[TUNING MODE]** and the **[A.F.D.]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power.
2. "PROT. EVER" appears. (3 second)

DECODE AUTO ALL

Procedure:

1. While depressing the **[TUNING MODE]** and the **[MOVIE]** buttons simultaneously, press the power **[I/⏻]** button to turn on the main power.
2. "DEC. TEST" appears. (10 second)

VACS CONTROL

Procedure:

1. While depressing the **TUNING MODE** and the **MUSIC** buttons simultaneously, press the power **I/⏻** button to turn on the main power.
2. "VACS OFF" appears. (10 second)

SWAP ALL MODE


Procedure:

1. While depressing the **SPEAKERS (ON/OFF)** and the **A.F.D.** buttons simultaneously, press the power **I/⏻** button to turn on the main power.
2. "SWP.ALL" appears. (No change while displayed.)


DCAC FACTORY TEST MODE

DCAC Factory Test mode have two stages:

1. DCAC DSP Data Line Checking
2. DCAC AUTO CAL MIC board Checking

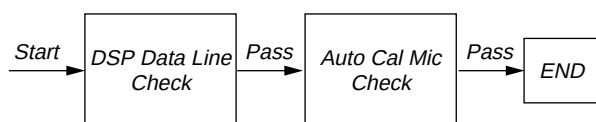

Factory Test System Setup

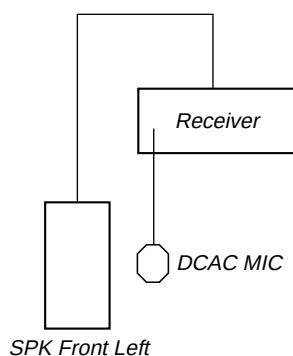

1. When power off :
Press the three buttons **TUNING +** + **MOVIE** + **I/⏻**.
"DCAC□FTM" appears.
Afterward, press the **TUNING MODE** to start DCAC factory test mode.

1. DCAC DSP Data Line Checking

After press the **TUNING MODE**, DCAC Factory test mode will start, below display will show:

"DCAC□□□x" x = 1, 2, 3, 4

If there is error happen, below display will show:

"ERR□SD0x" x = 1 → D1501 or R1530 or C1512 problem
 x = 2 → D1502 problem
 x = 3 → D1503 problem
 x = 4 → D1504 problem

2. DCAC AUTO CAL MIC board Checking

Connect front left speaker of the receiver and AUTO CAL microphone. Turn **MASTER VOLUME** jog, there will be test tone sound output from front left speaker, and the display will change accordingly.

"AD□-□xxx" xxx = 0 to 255 (depends on loudness of test tone)

SECTION 3 DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For Schematic Diagrams.

Note:

- All capacitors are in μF unless otherwise noted. (p: pF)
50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

-  : B+ Line.
-  : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
No mark : FM
- Voltages are taken with a VOM (Input impedance $10\text{ M}\Omega$).
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
 -  : FM
 -  : ANALOG
 -  : DIGITAL
 -  : VIDEO
- Abbreviation
 - AR : Argentina model
 - AUS : Australian model.
 - E51 : Chilean and Peruvian models.
 - MX : Mexican model.
 - SP : Singapore model.
 - SP6 : Singapore and Malaysia models.

For Printed Wiring Boards.



Note:

-  : parts extracted from the component side.
-  : Through hole.
- Δ : internal component.
-  : Pattern from the side which enables seeing.


Caution:

Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.
Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.

 - Indication of transistor.

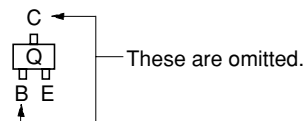


• Circuit Boards Location

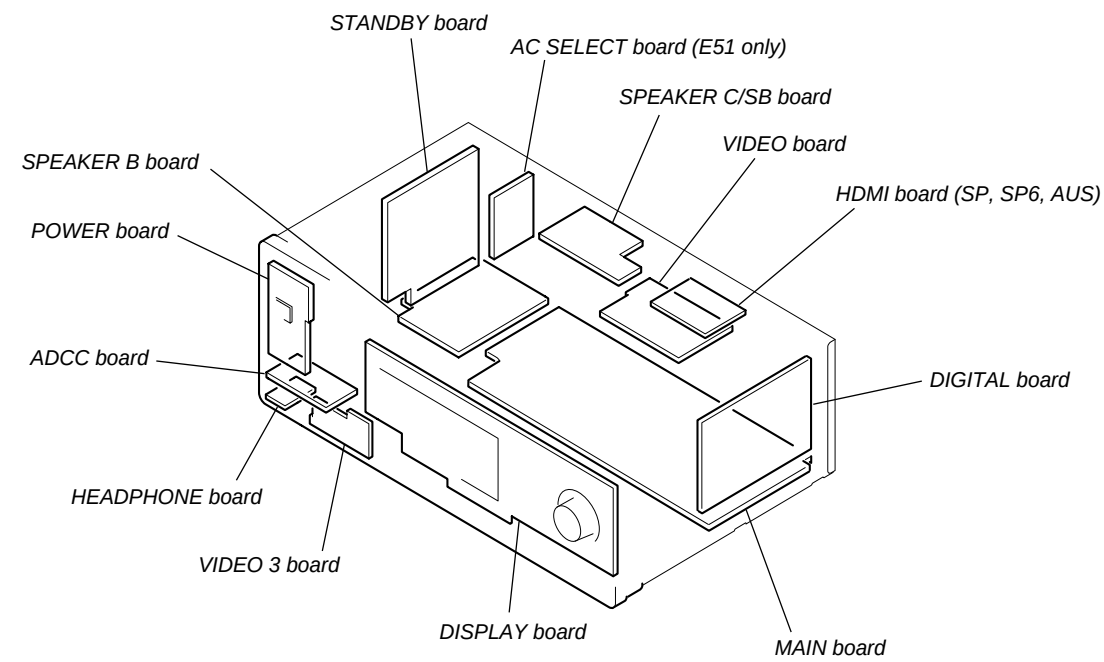


• Waveforms

– DIGITAL Board –

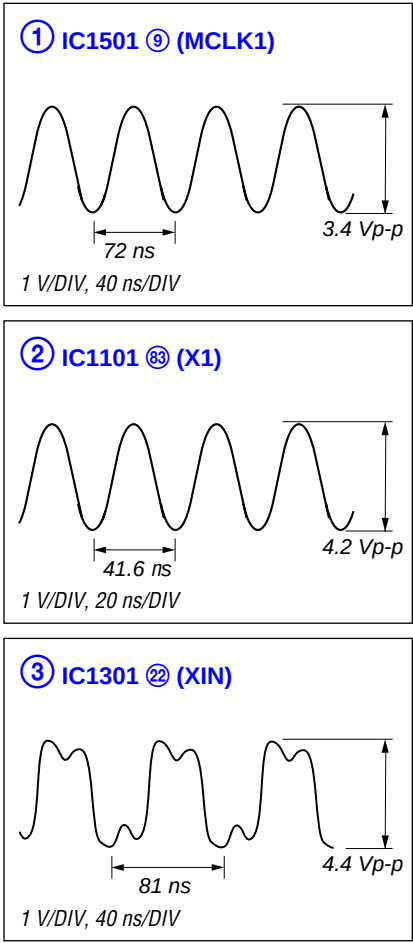


STR-K1500


3-1. BLOCK DIAGRAM – MAIN SECTION –

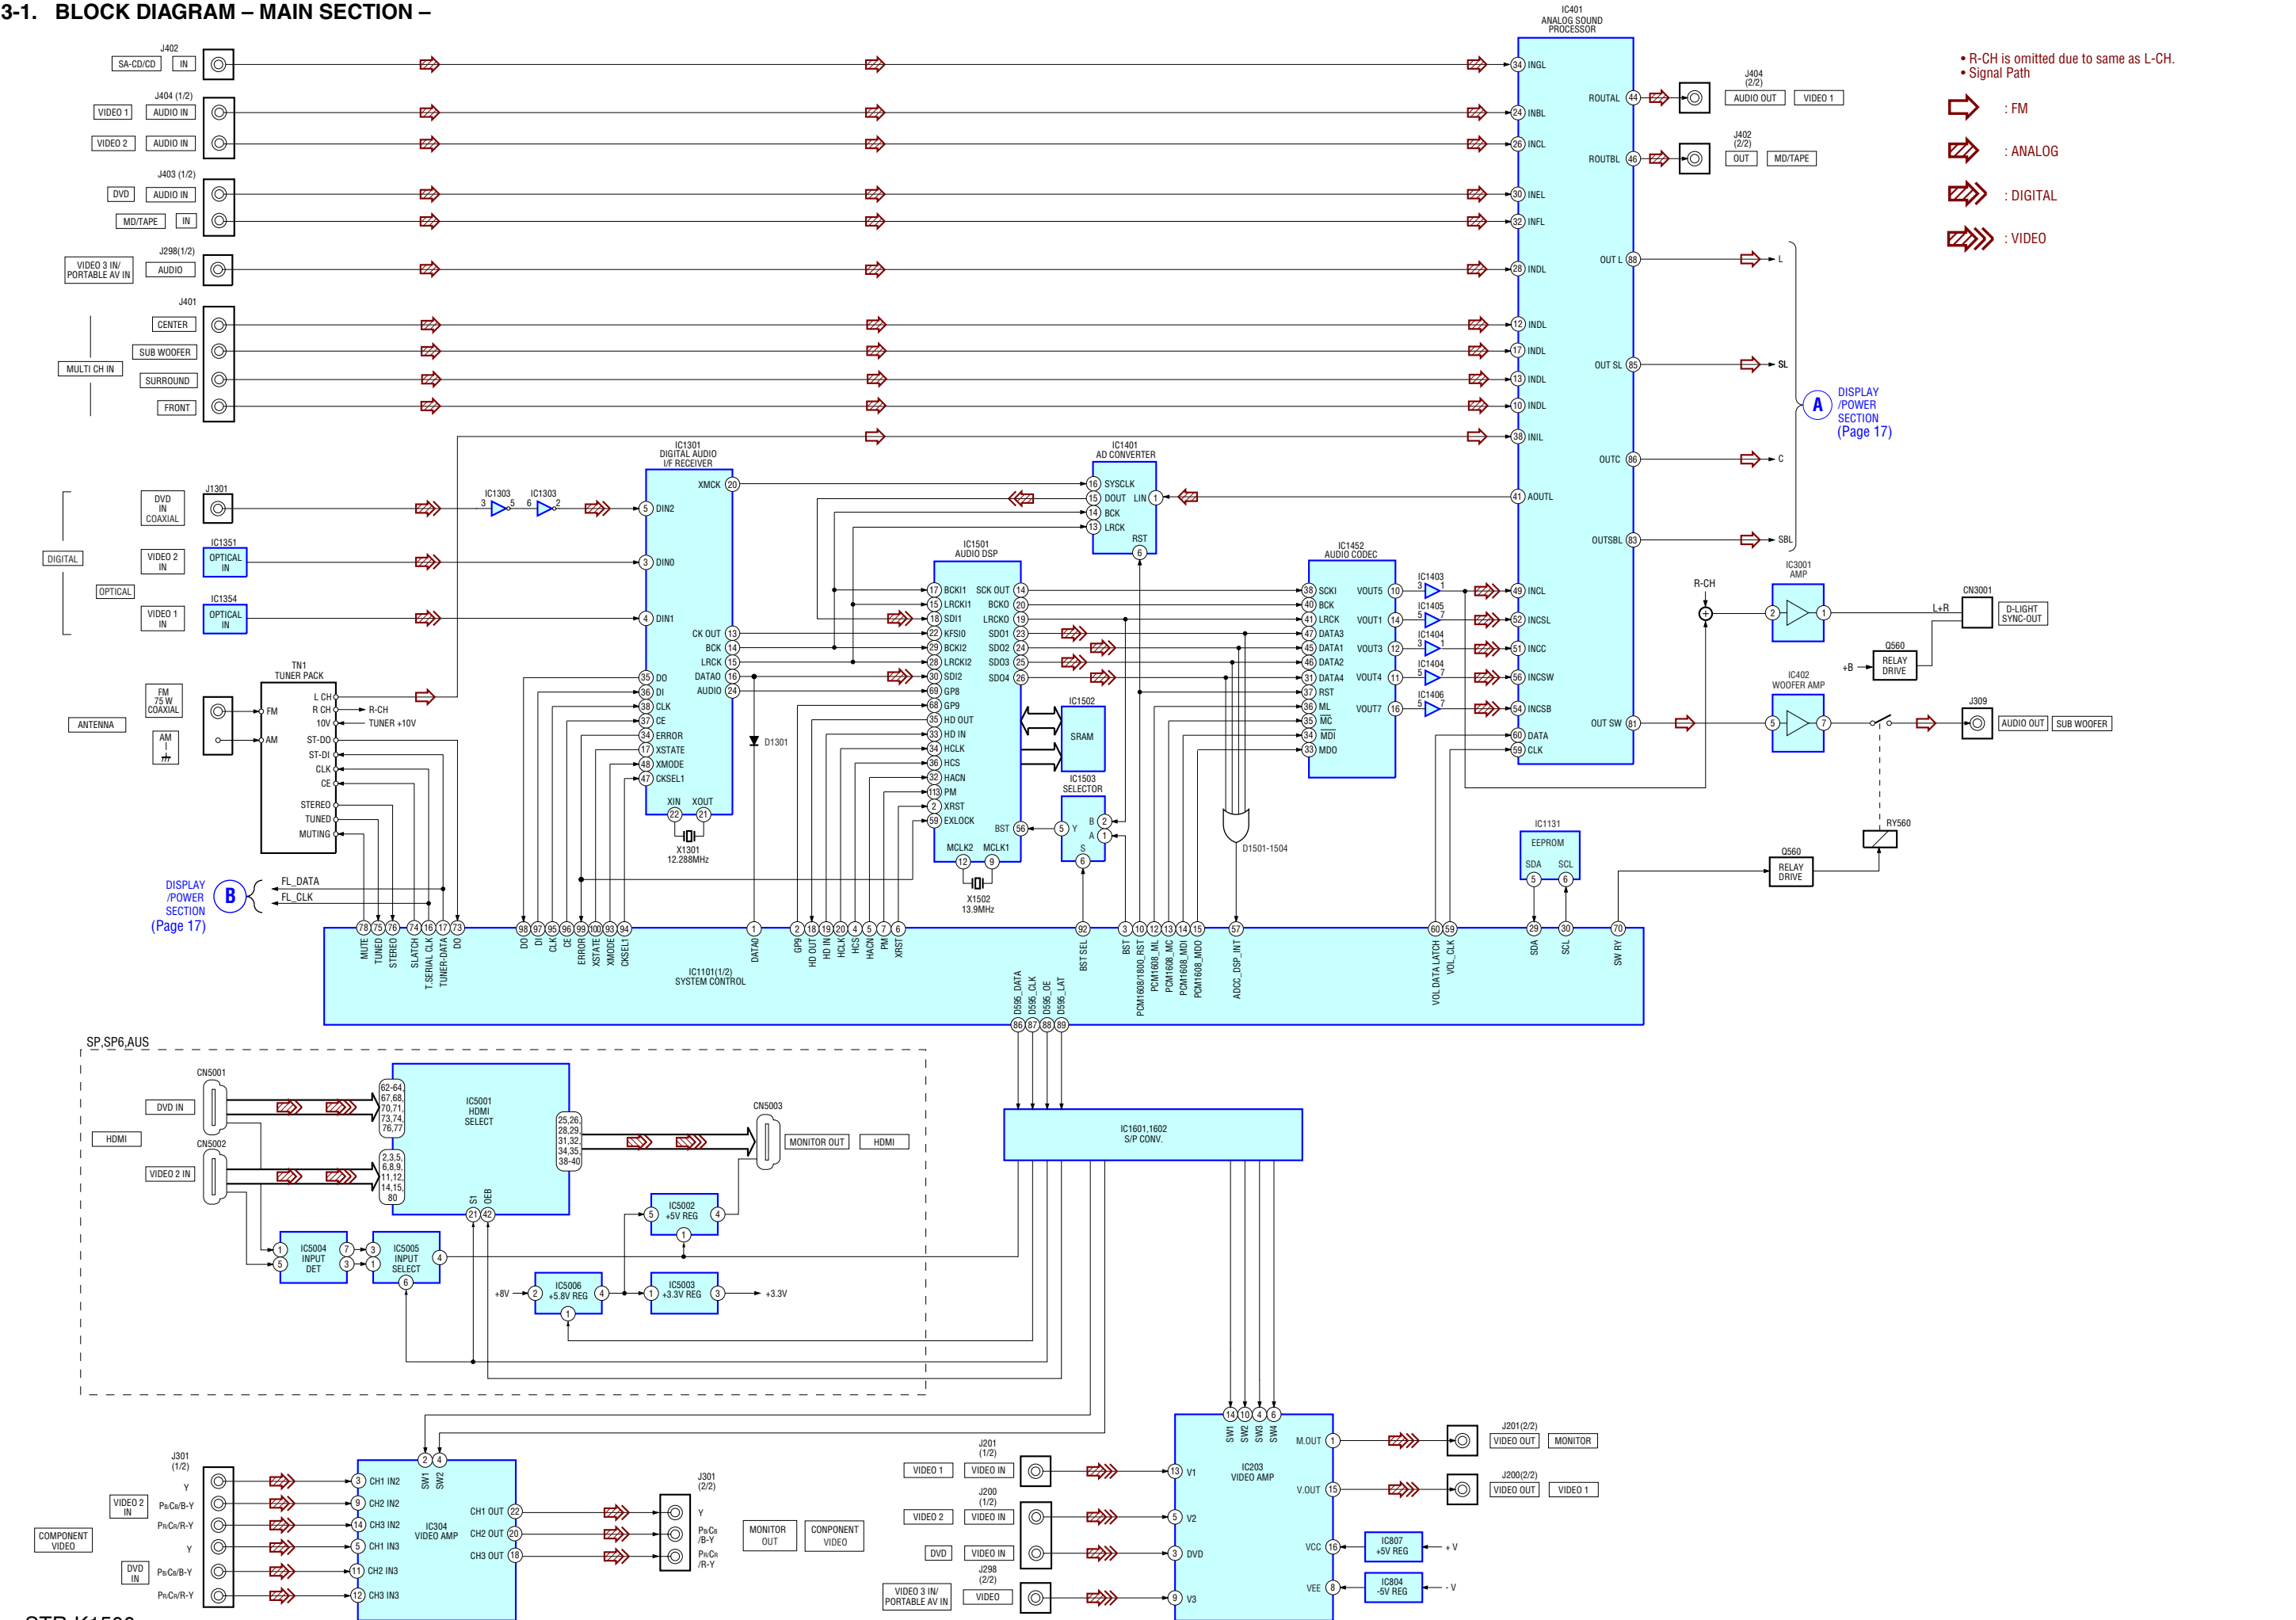

3-2. BLOCK DIAGRAM – DISPLAY/POWER SECTION –

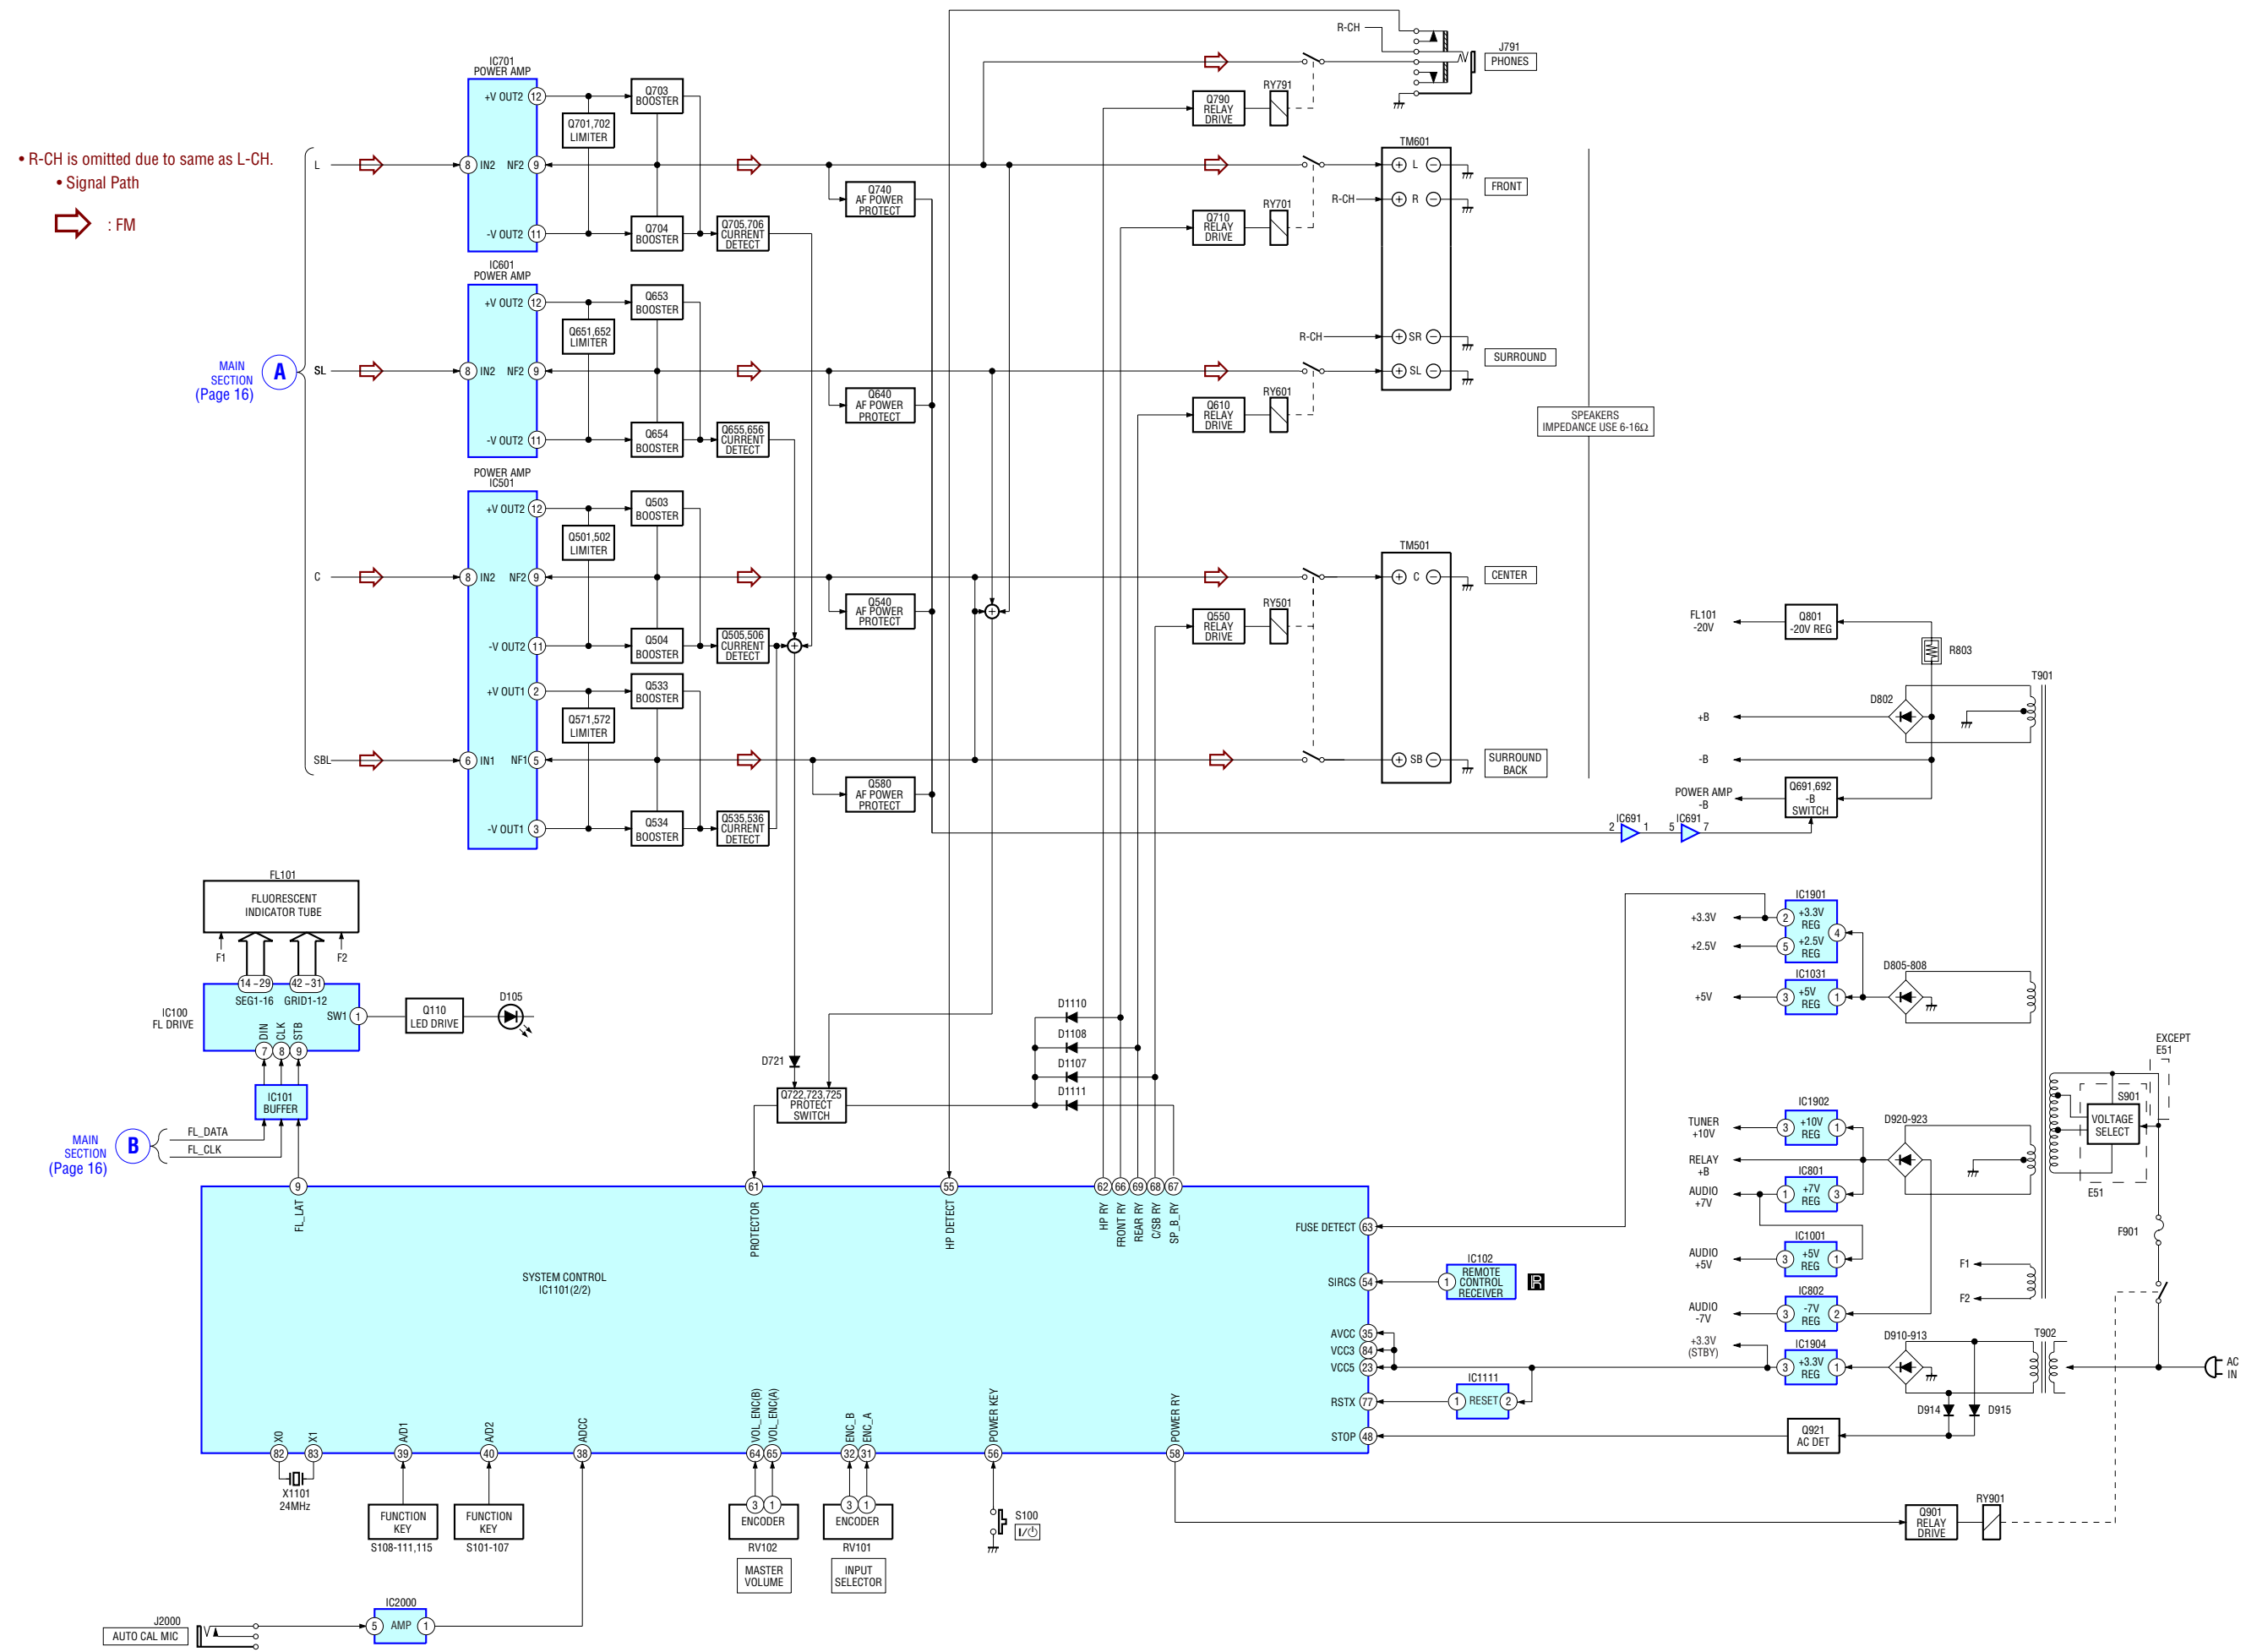


3-3. PRINTED WIRING BOARD – DIGITAL BOARD (SIDE A) – • See page 15 for Circuit Boards Location.  :Uses unleaded solder.

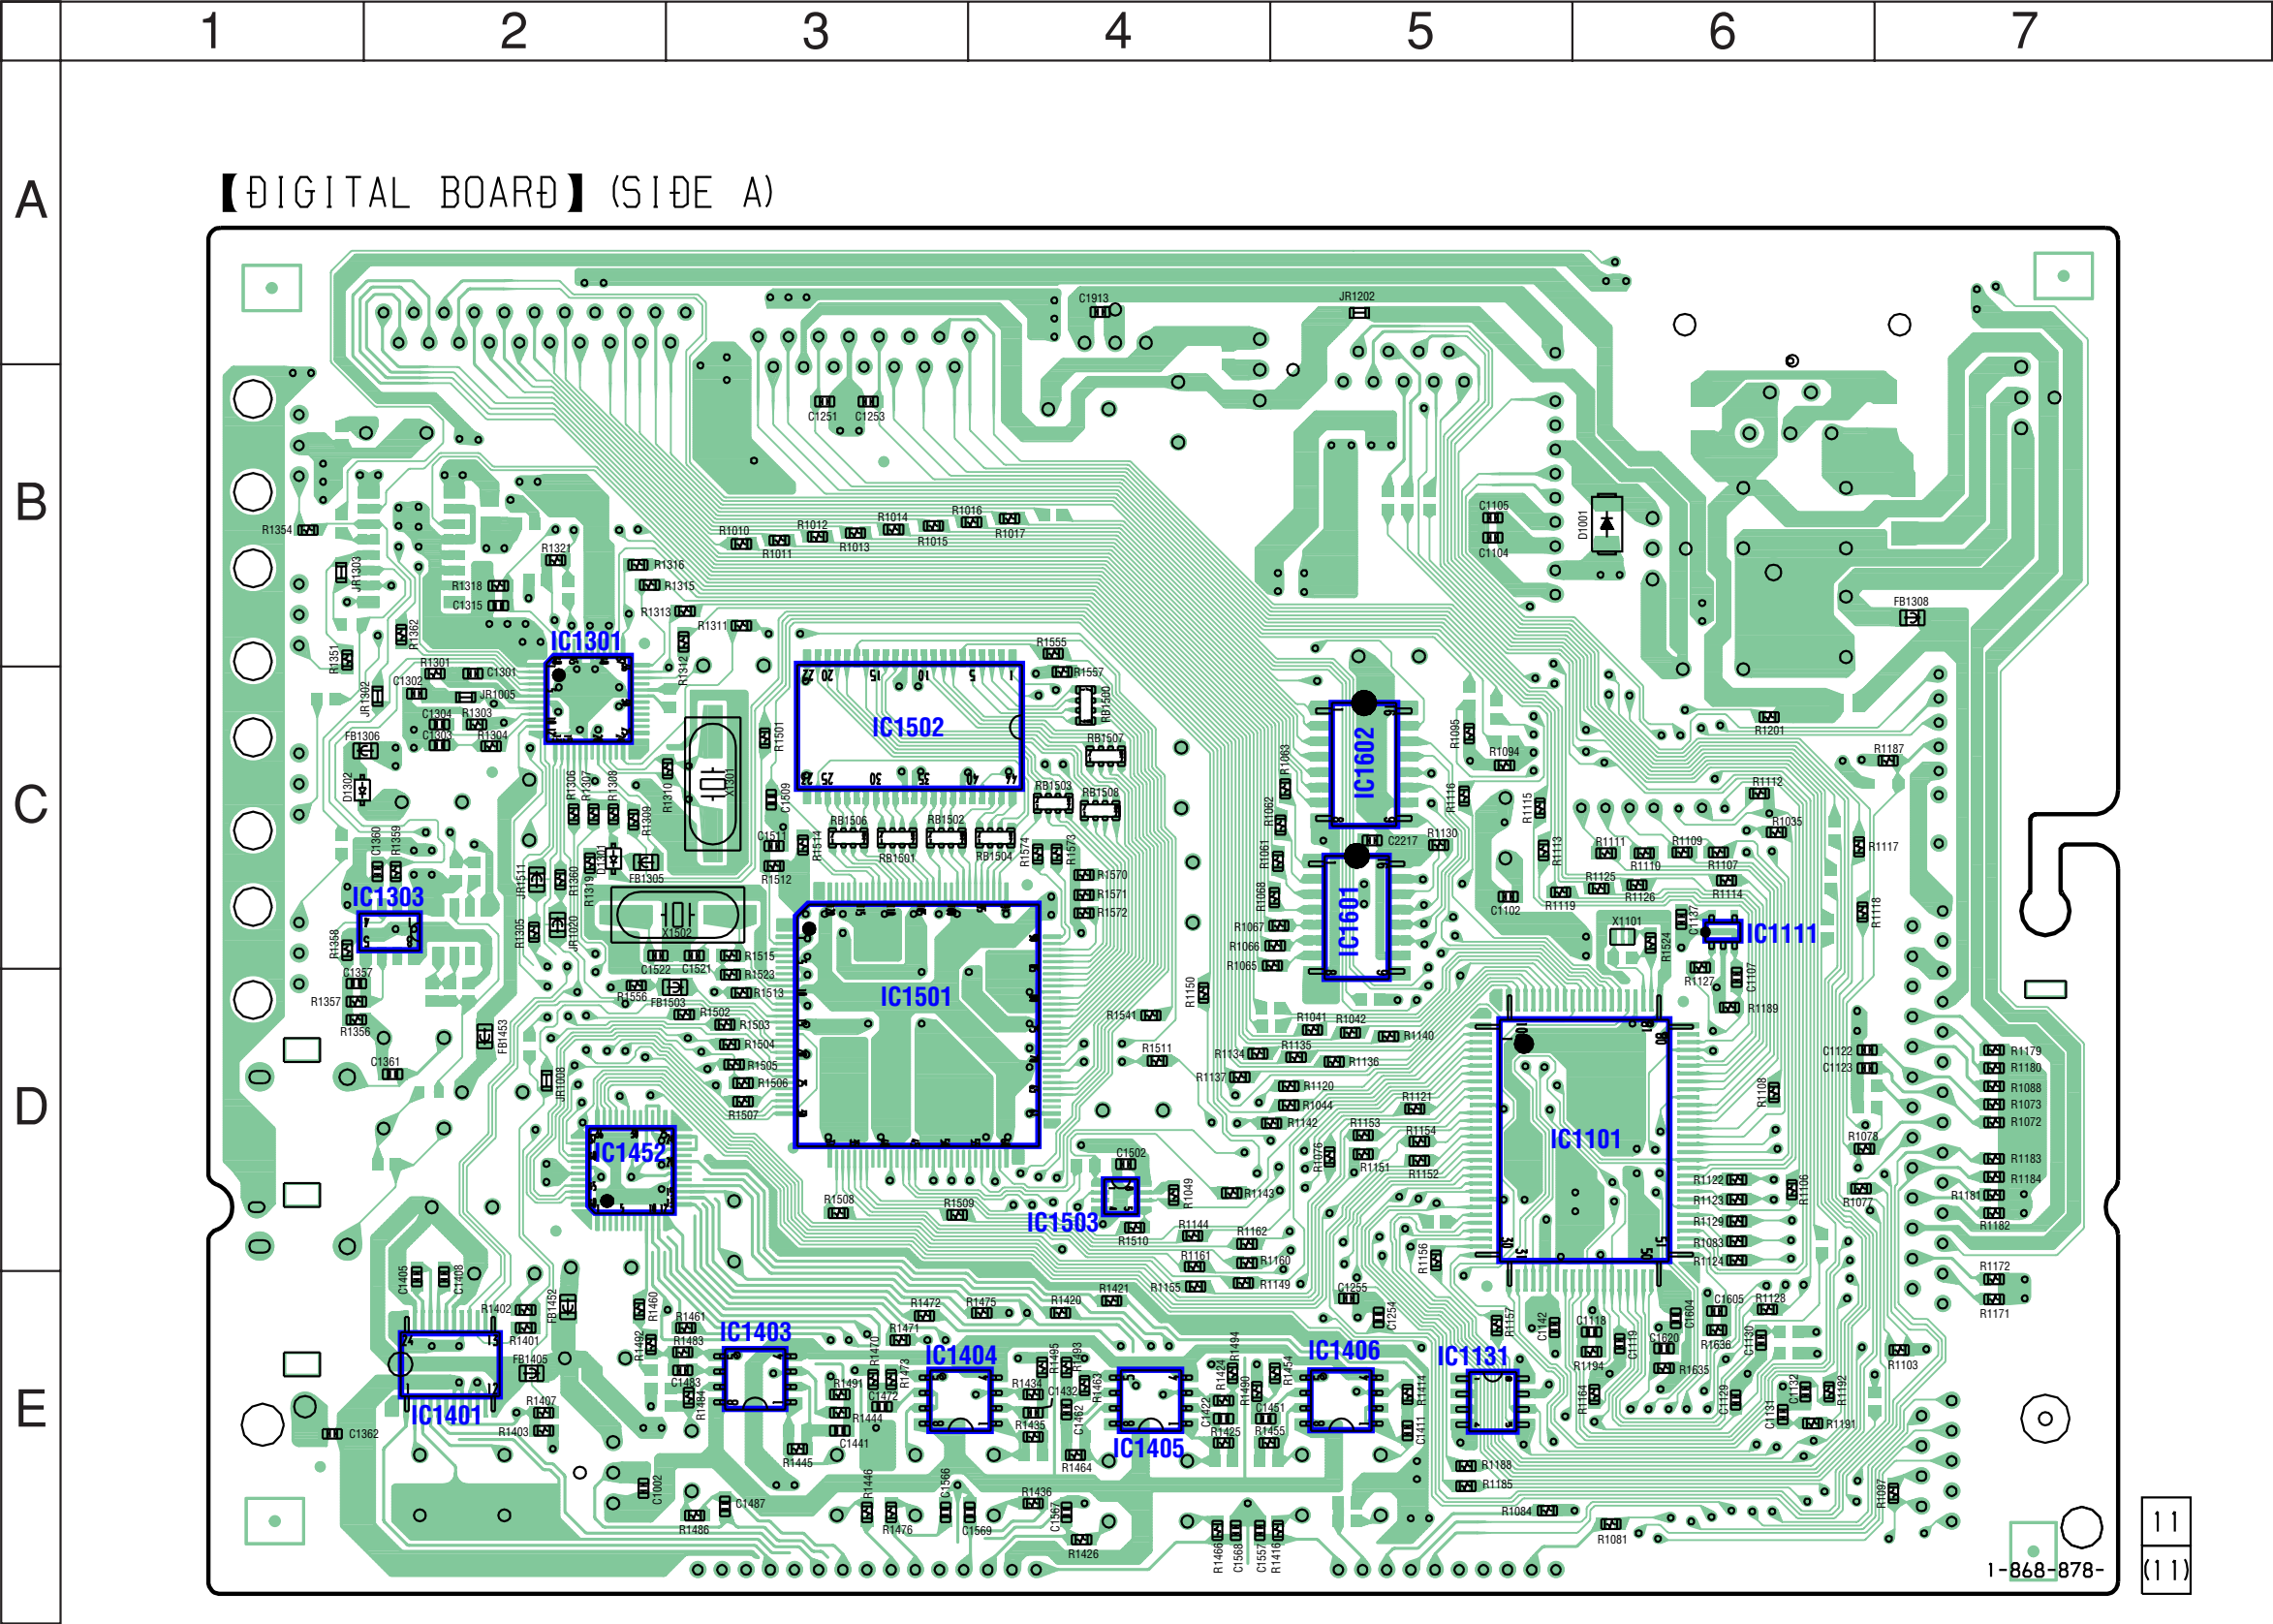


• Semiconductor Location

Ref. No.	Location
D1001	B-6
D1301	C-2
D1302	C-1
D1501	D-6
D1502	D-6
IC1101	D-5
IC1111	C-6
IC1131	E-5
IC1301	B-2
IC1303	C-2
IC1401	E-2
IC1403	E-3
IC1404	E-3
IC1405	E-4
IC1406	E-5
IC1452	D-2
IC1501	D-3
IC1502	C-3
IC1503	D-4

 
3-4. PRINTED WIRING BOARD – DIGITAL BOARD (SIDE B) – • See page 15 for Circuit Boards Location. :Uses unleaded solder.

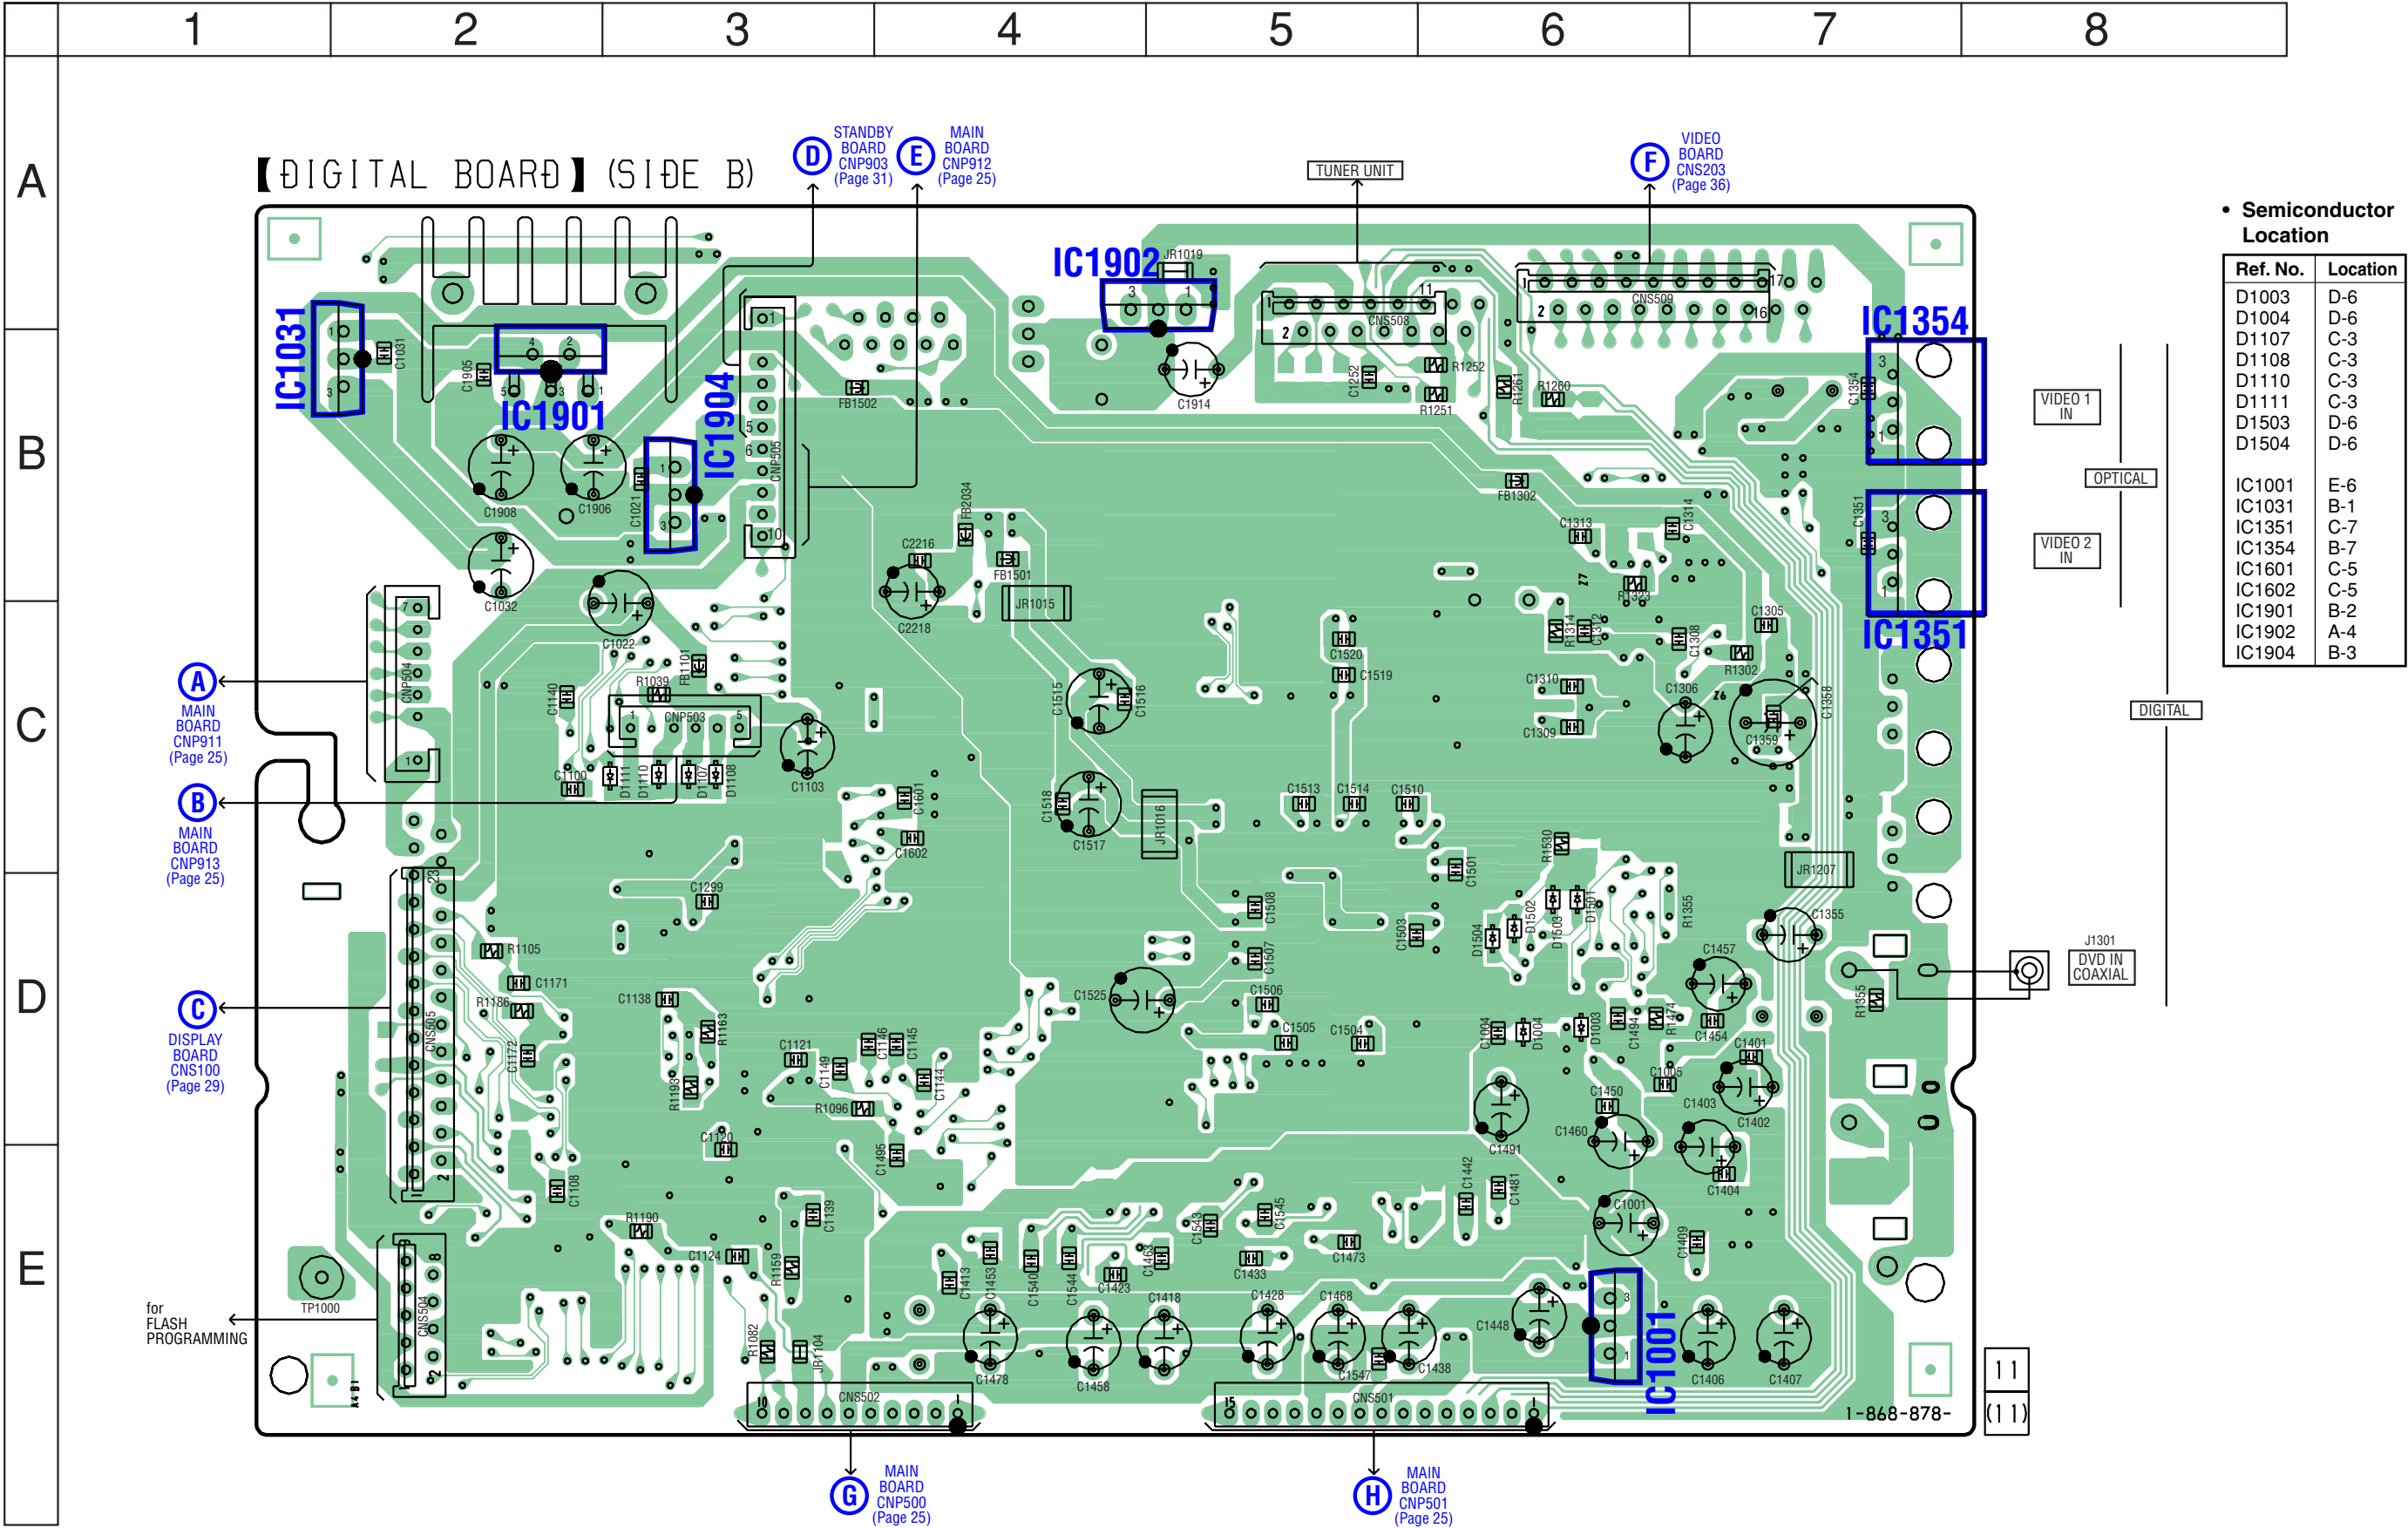




21


9
DIGITAL
BOARD
(5/5)
(Page 24)

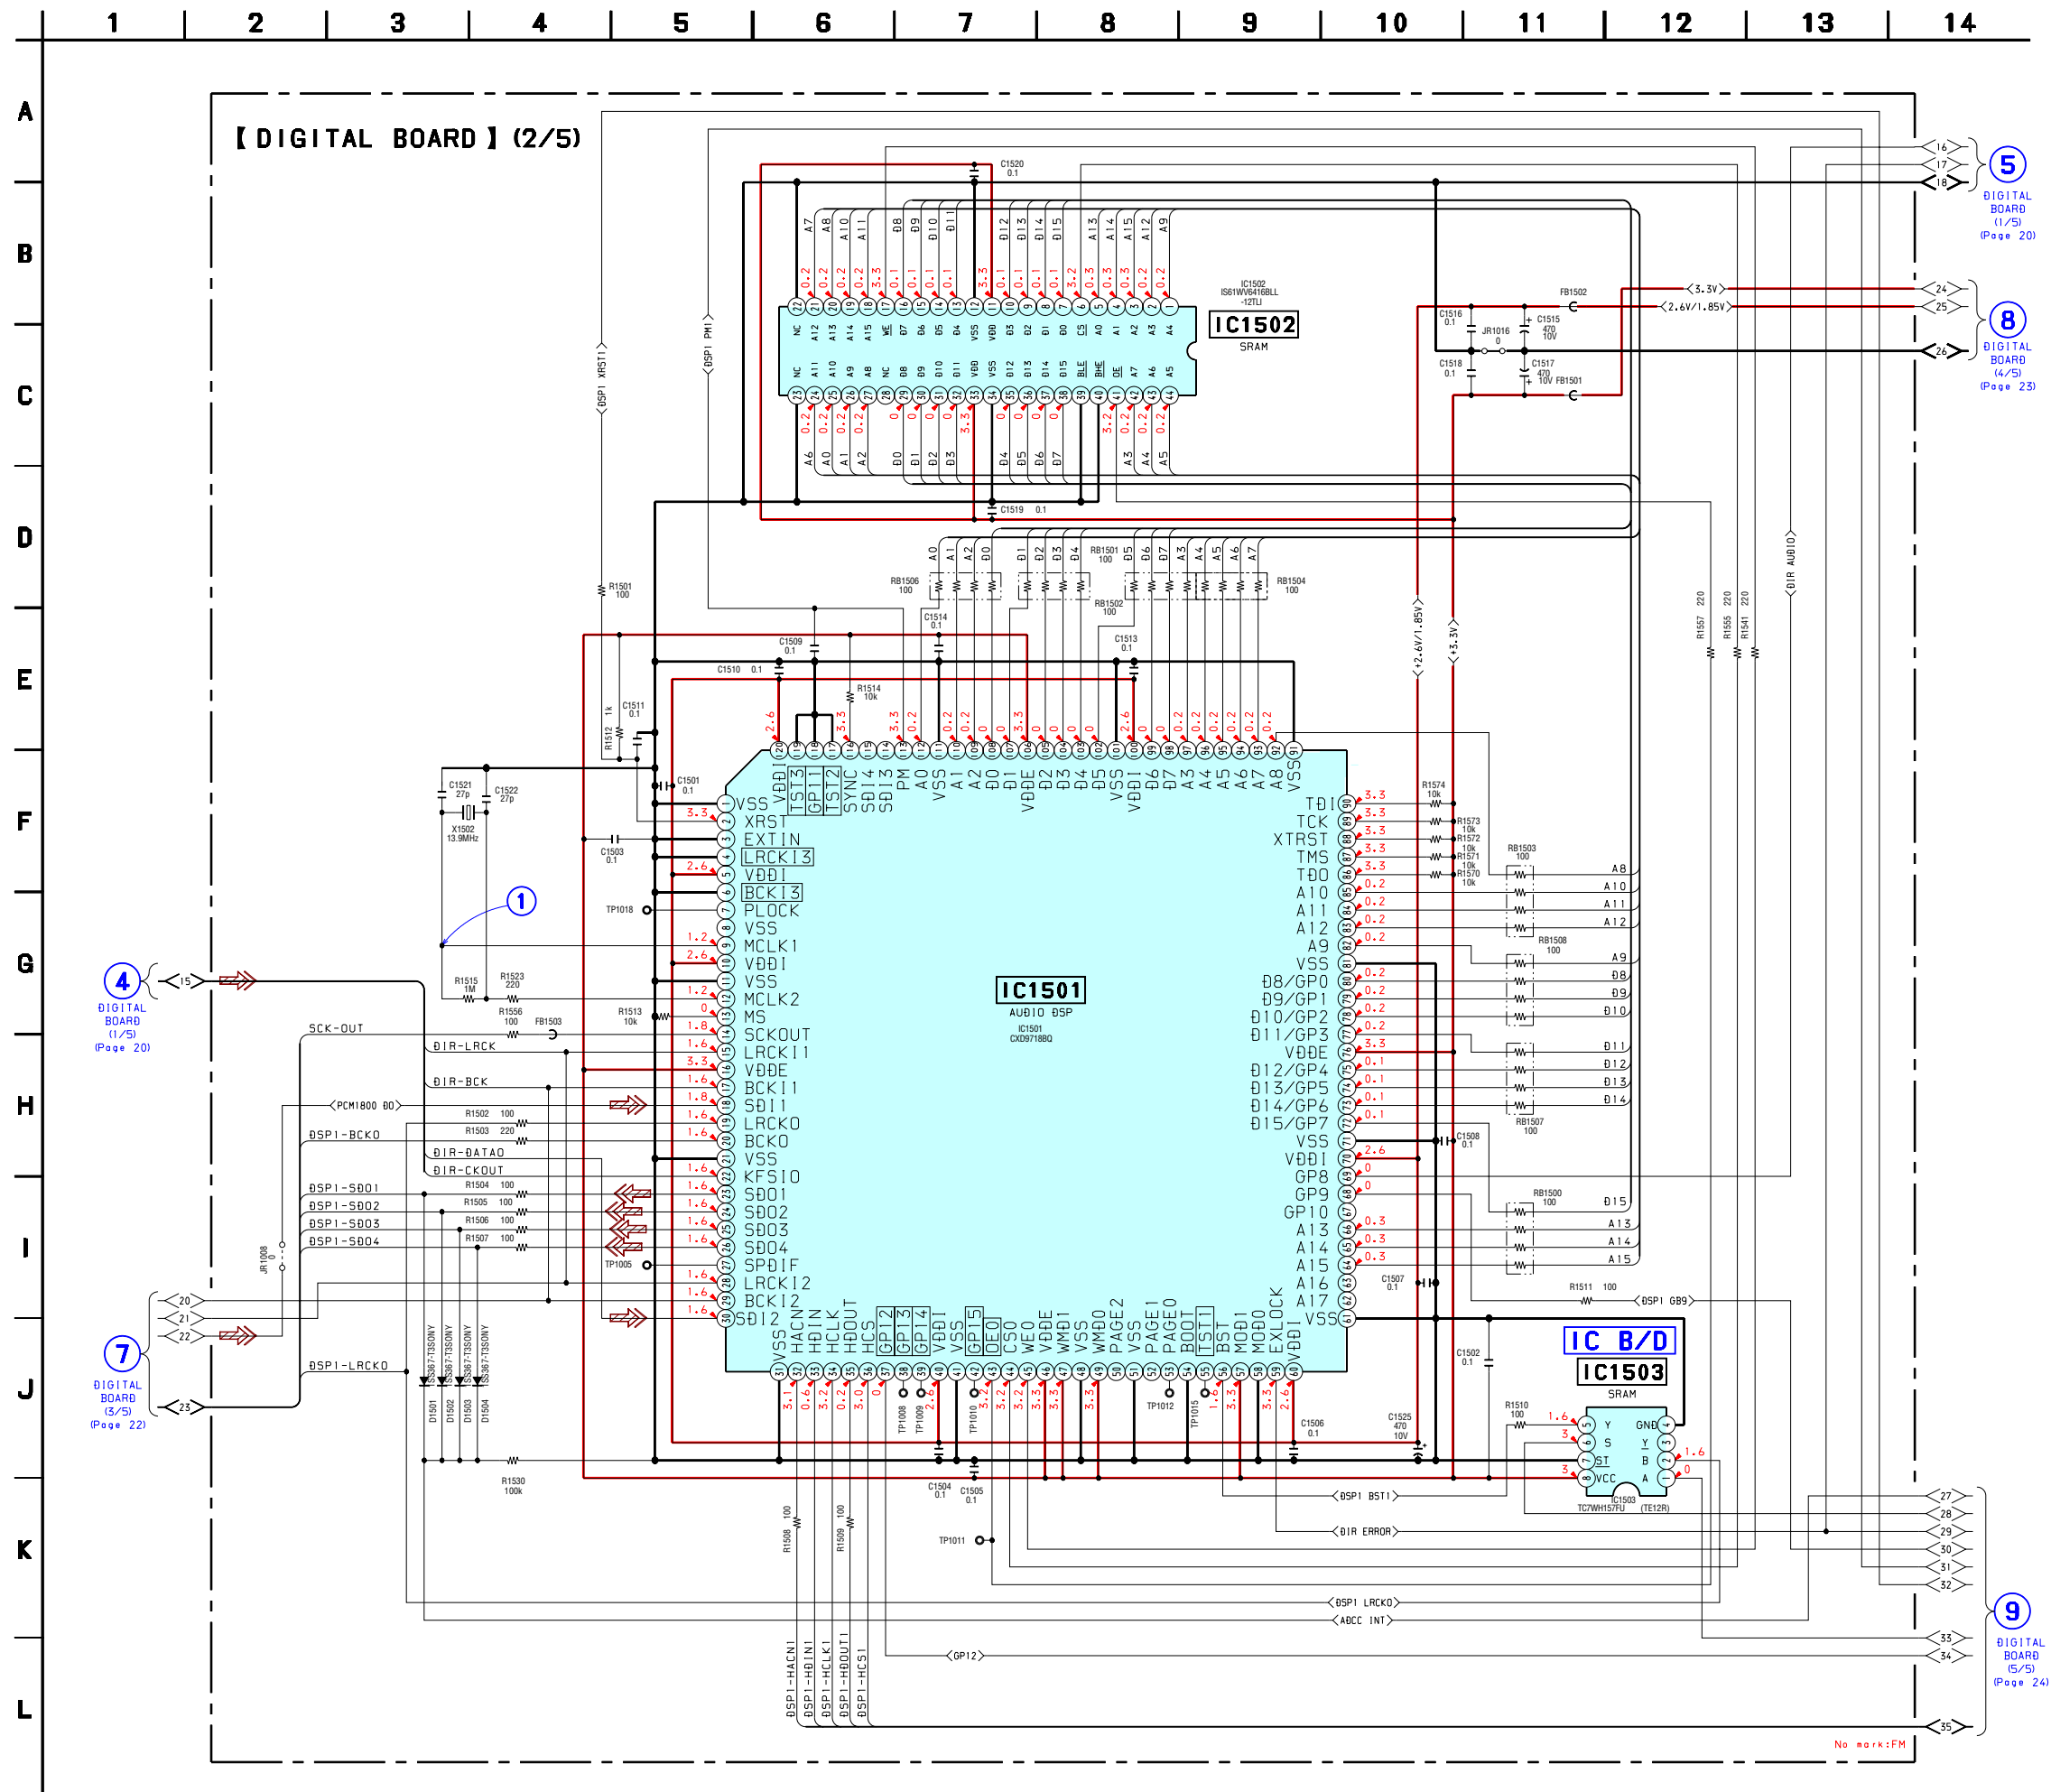




3-8. SCHEMATIC DIAGRAM – DIGITAL BOARD (4/5) – • See page 40 for IC Block Diagrams.

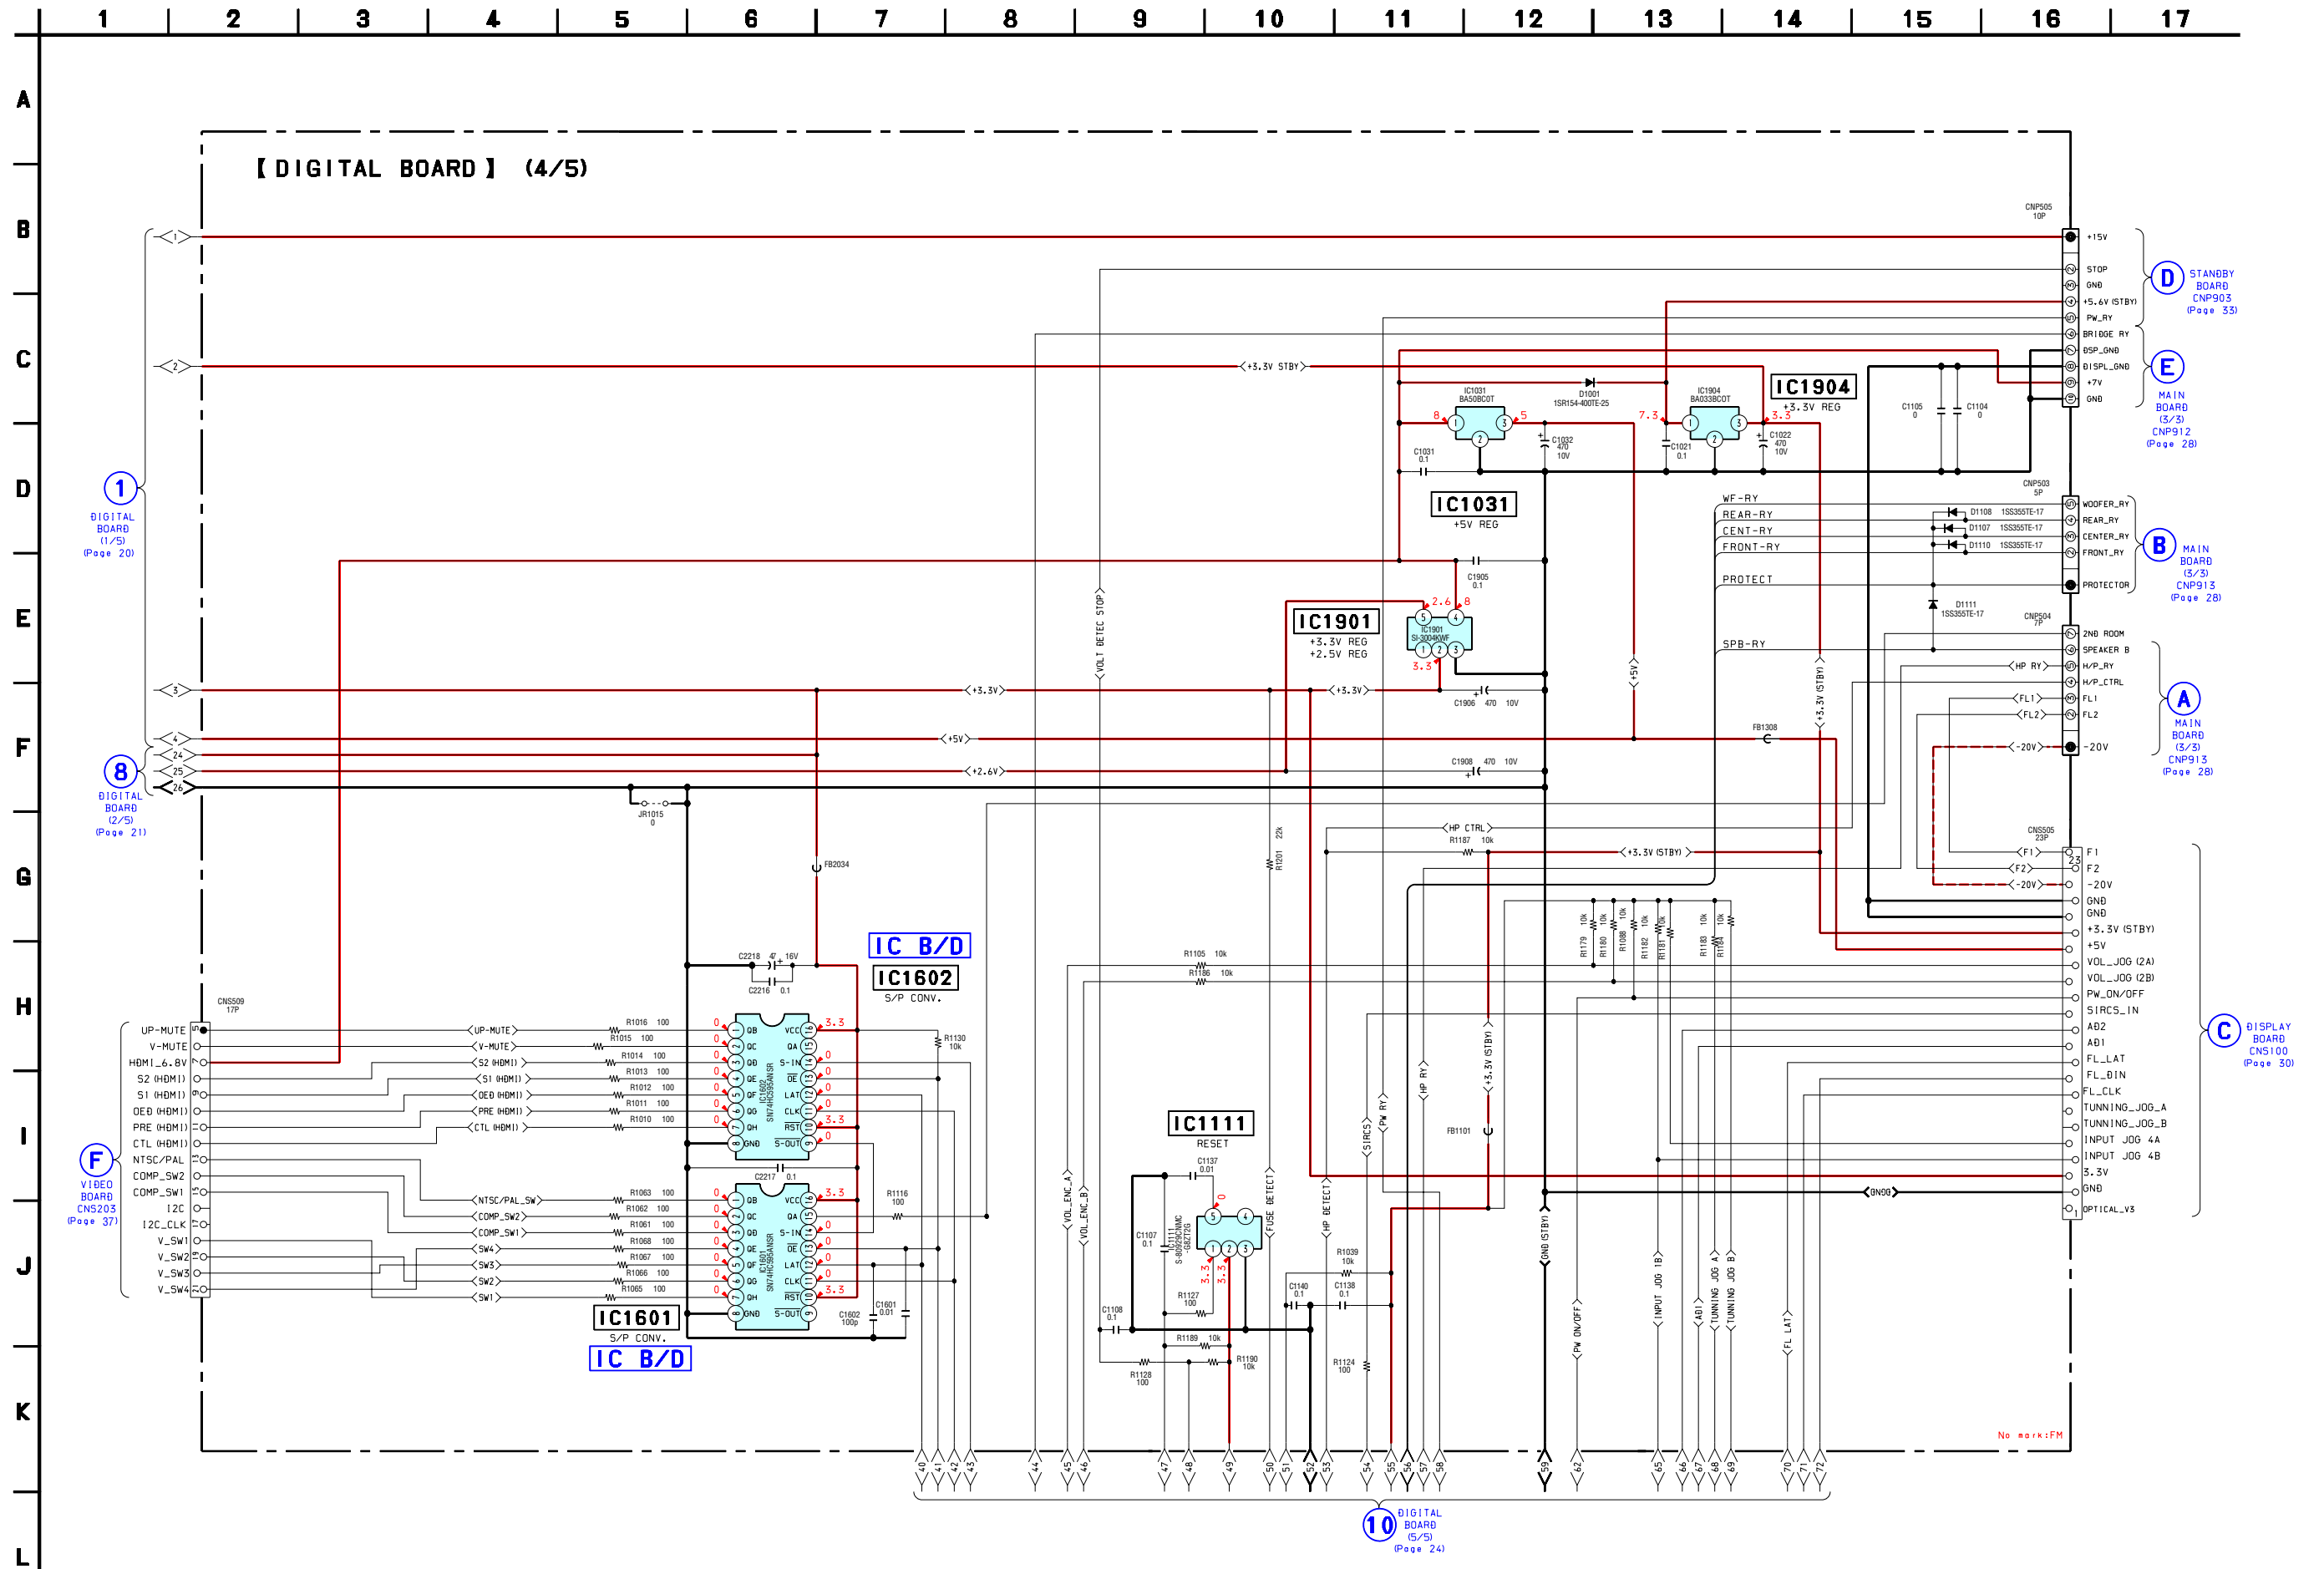


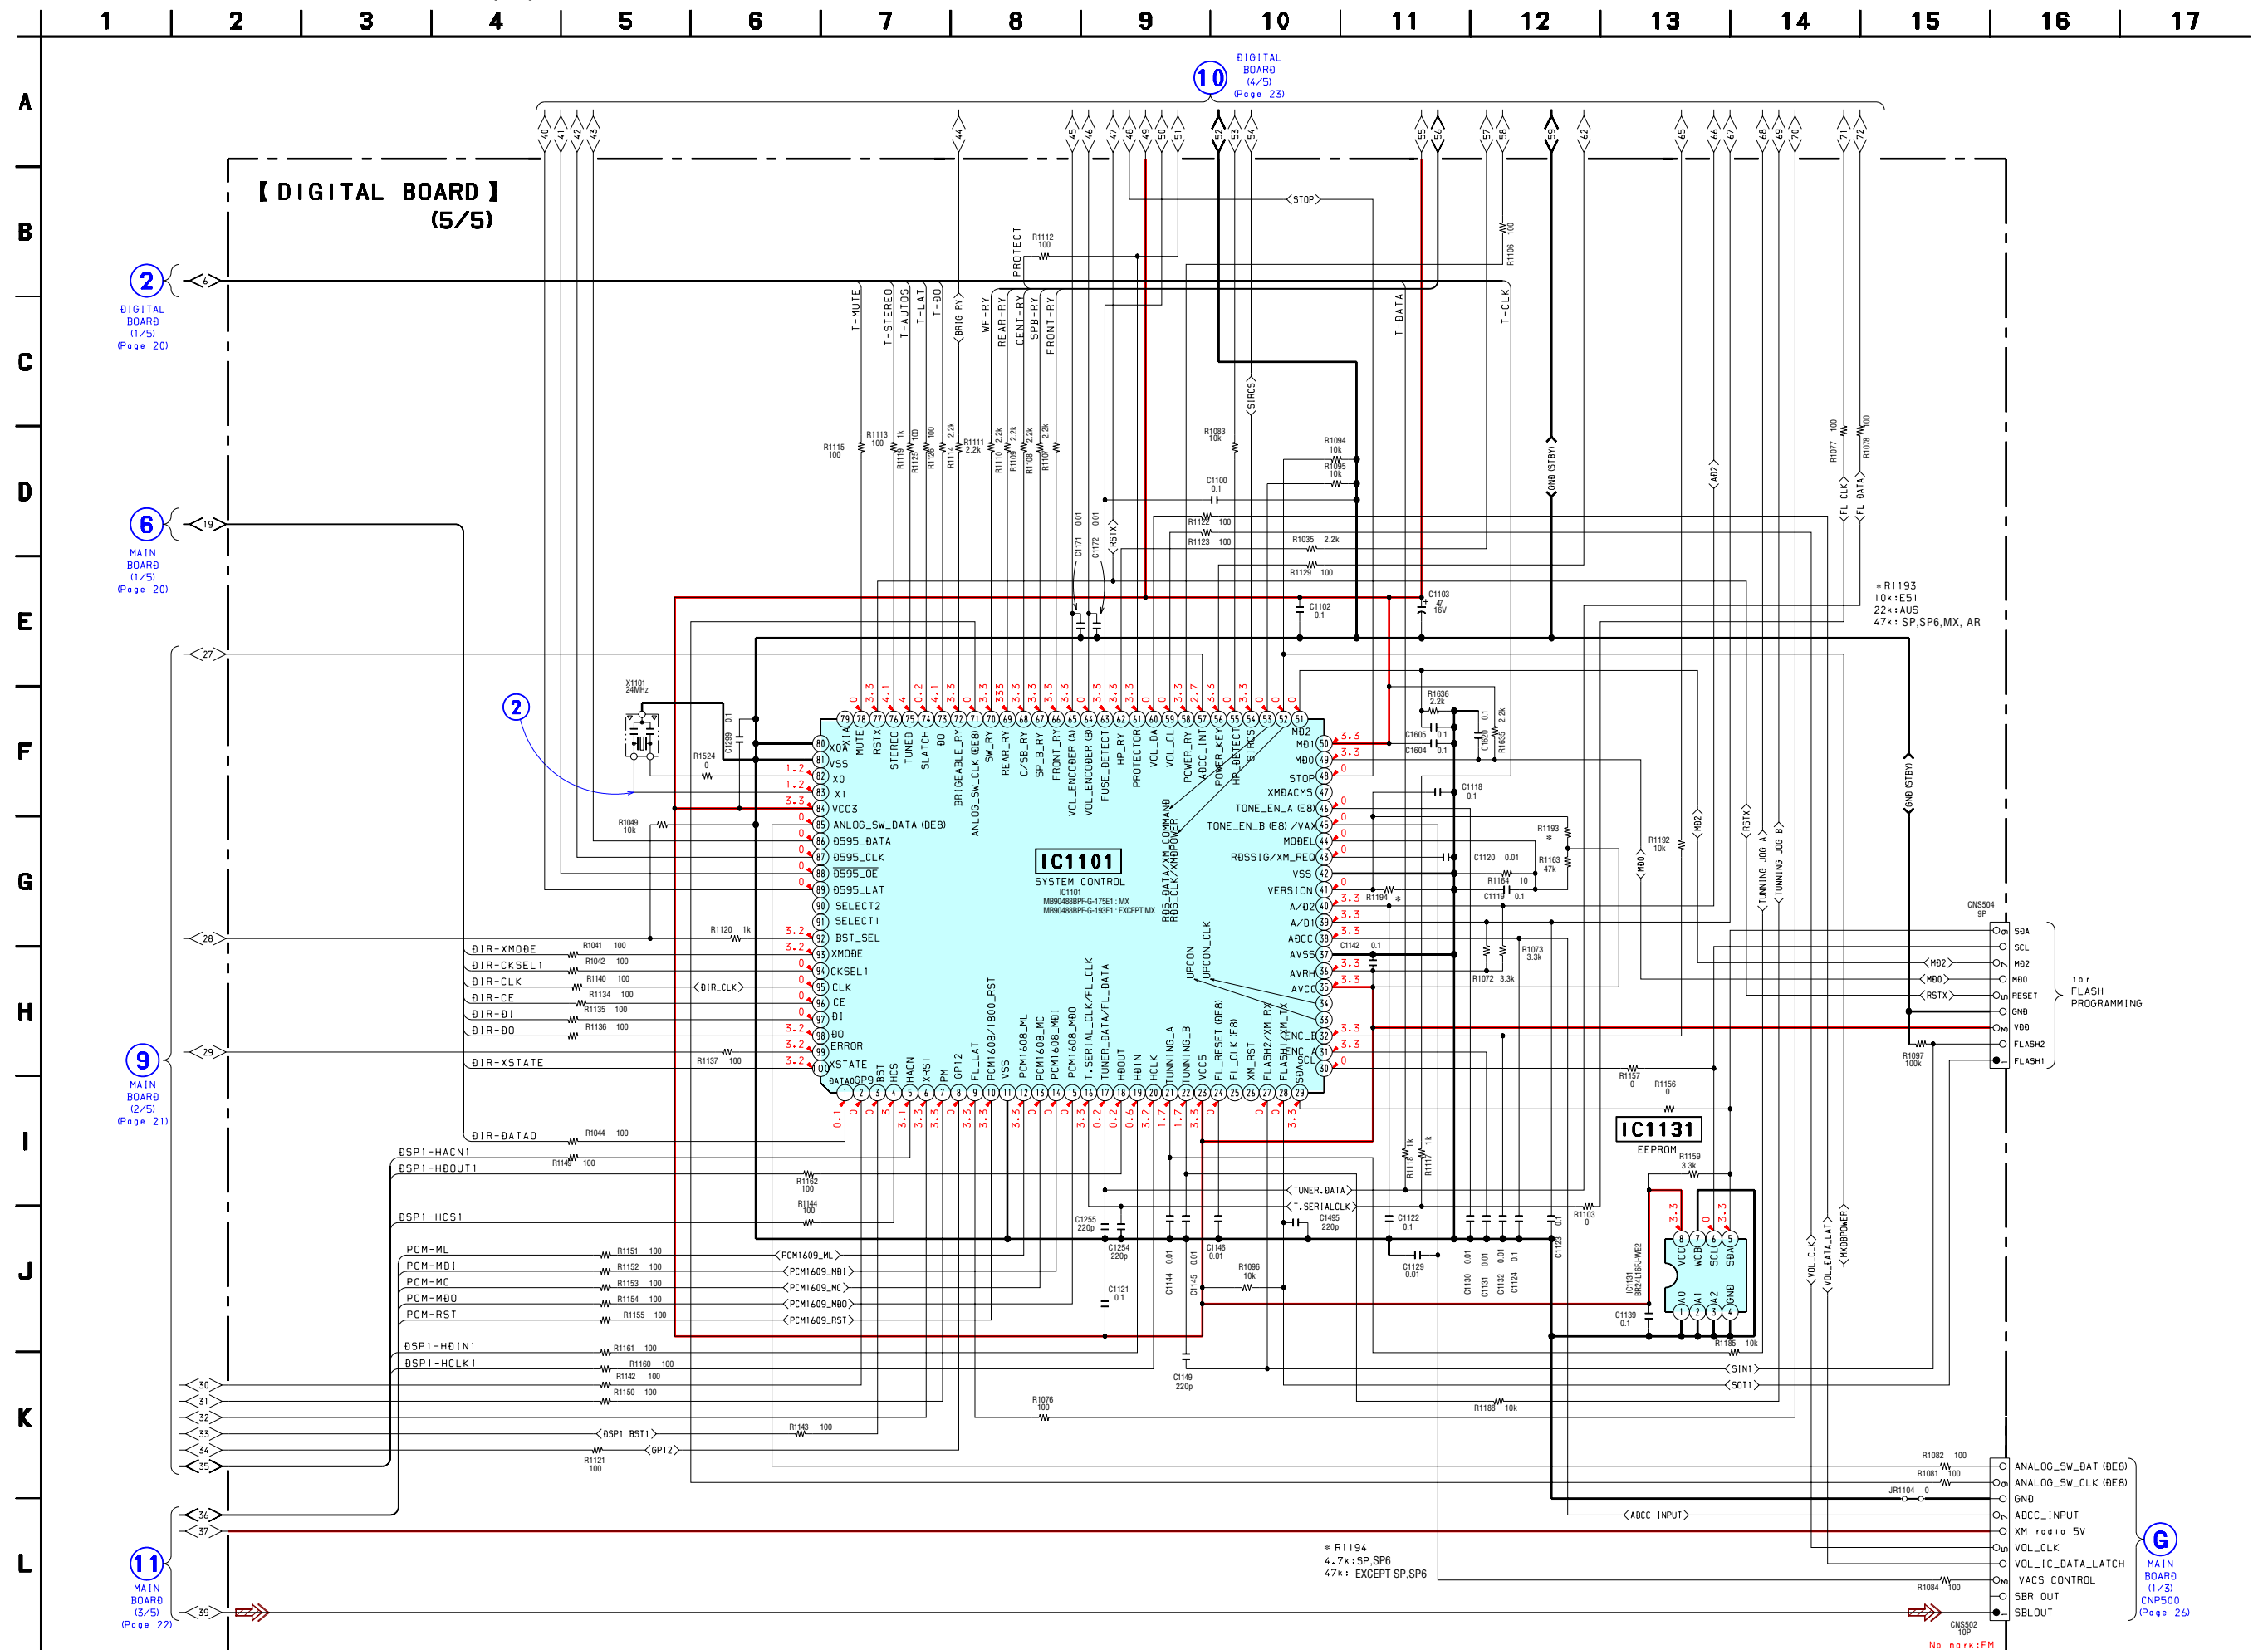


• Semiconductor Location											
Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D529	F-5	D729	F-6	IC401	E-4	Q535	G-4	Q654	H-9	Q725	F-12
D540	G-4	D732	F-12	IC402	F-4	Q536	G-3	Q655	G-9	Q740	G-6
D560	D-8	D740	G-6	IC501	F-4	Q540	G-4	Q656	G-10	Q750	G-10
D580	G-2	D749	F-6	IC601	F-8	Q560	D-8	Q680	G-11	Q751	G-10
D585	G-3	D750	G-10	IC691	E-8	Q571	G-2	Q691	F-10	Q752	H-11
D605	G-13	D765	G-11	IC701	F-6	Q572	H-3	Q692	E-9	Q753	H-10
D610	D-9	D791	F-14	IC801	D-7	Q580	G-2	Q693	E-9	Q754	H-11
D640	G-9	D801	E-14	IC802	E-7	Q601	H-12	Q694	E-9	Q755	G-11
D665	G-10	D802	D-14	IC3001	B-2	Q602	H-12	Q695	E-10	Q756	G-12
D680	G-11	D804	F-13			Q603	H-12	Q701	G-6	Q790	F-14
D690	E-9	D805	E-14	Q501	G-4	Q604	H-13	Q702	H-7	Q793	F-12
D691	E-9	D806	E-14	Q502	H-5	Q605	G-13	Q703	H-6	Q795	F-11
D692	E-9	D807	D-14	Q503	H-5	Q606	G-13	Q704	H-7	Q801	F-13
D693	E-9	D808	D-14	Q504	H-6	Q610	D-9	Q705	G-8	Q3001	B-3
D705	G-7	D841	F-2	Q505	G-6	Q640	G-8	Q706	G-7		
D710	D-10	D896	E-7	Q506	G-5	Q651	G-8	Q710	D-10		
D721	F-11	D3001	B-3	Q533	H-3	Q652	H-9	Q722	F-12		
D722	F-11			Q534	H-4	Q653	H-8	Q723	F-12		

 

3-13. SCHEMATIC DIAGRAM – MAIN BOARD (3/3) –

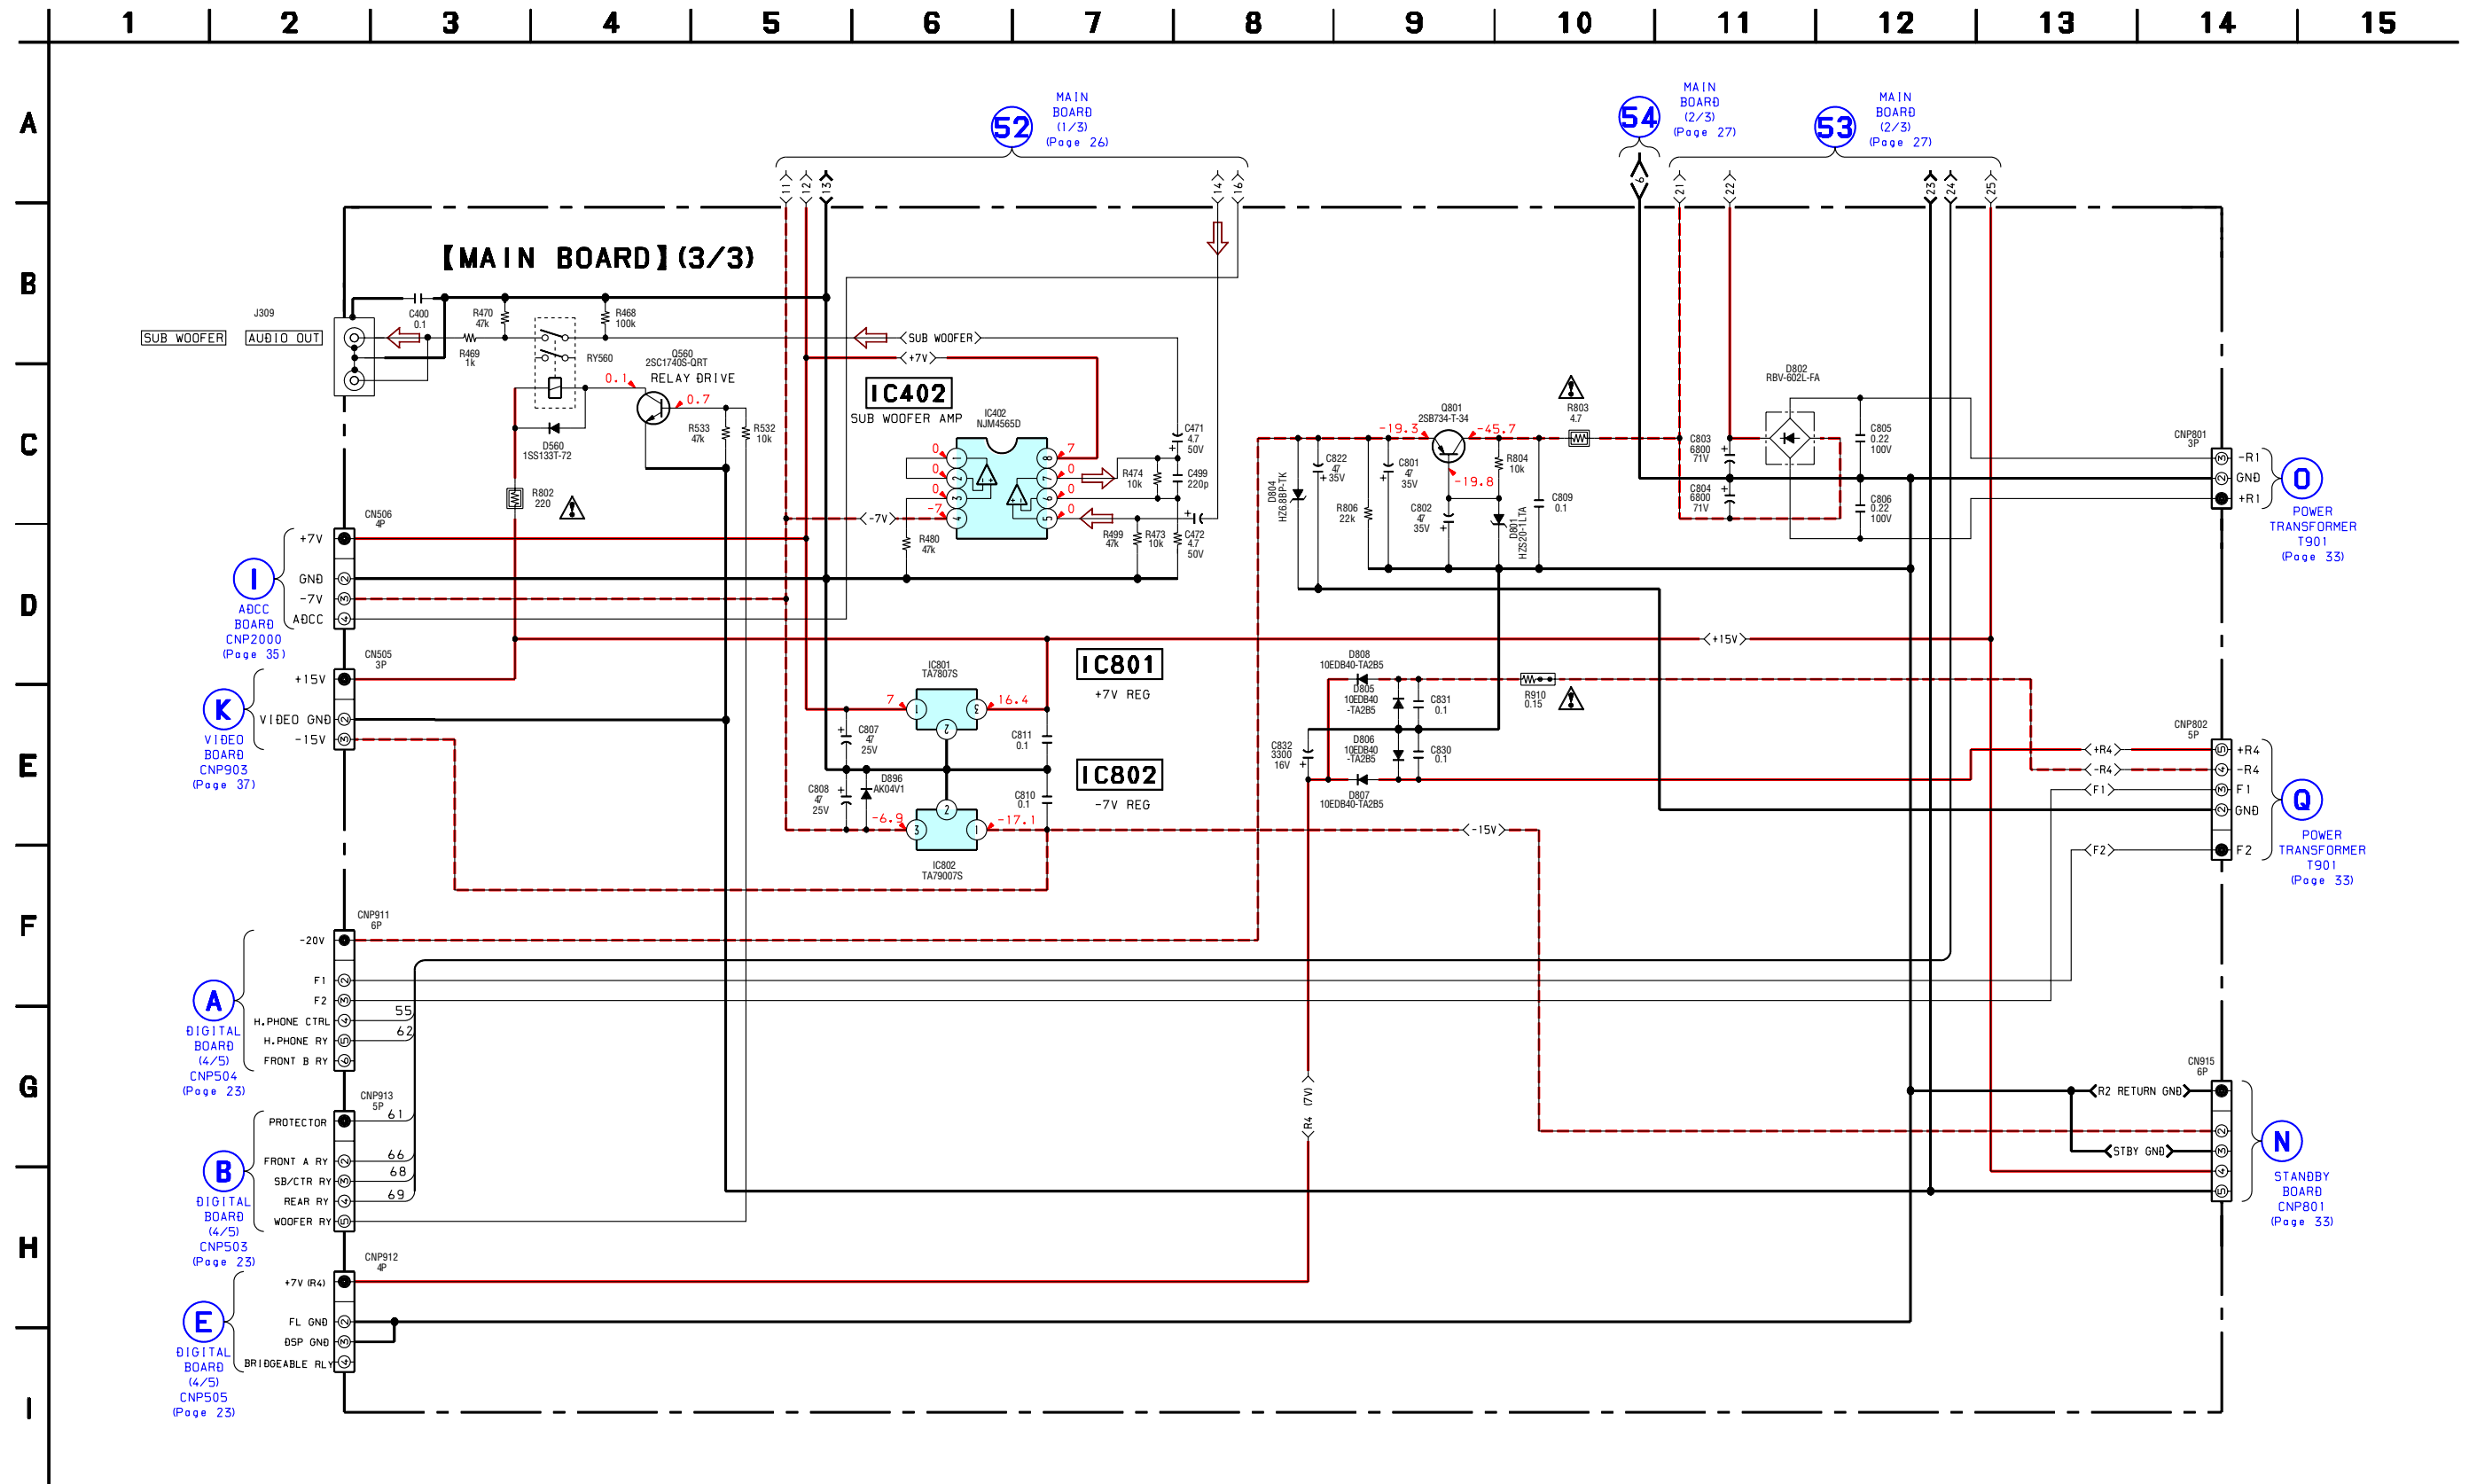


3-14. PRINTED WIRING BOARDS – DISPLAY BOARD, POWER BOARD – • See page 15 for Circuit Boards Location. :Uses unleaded solder.

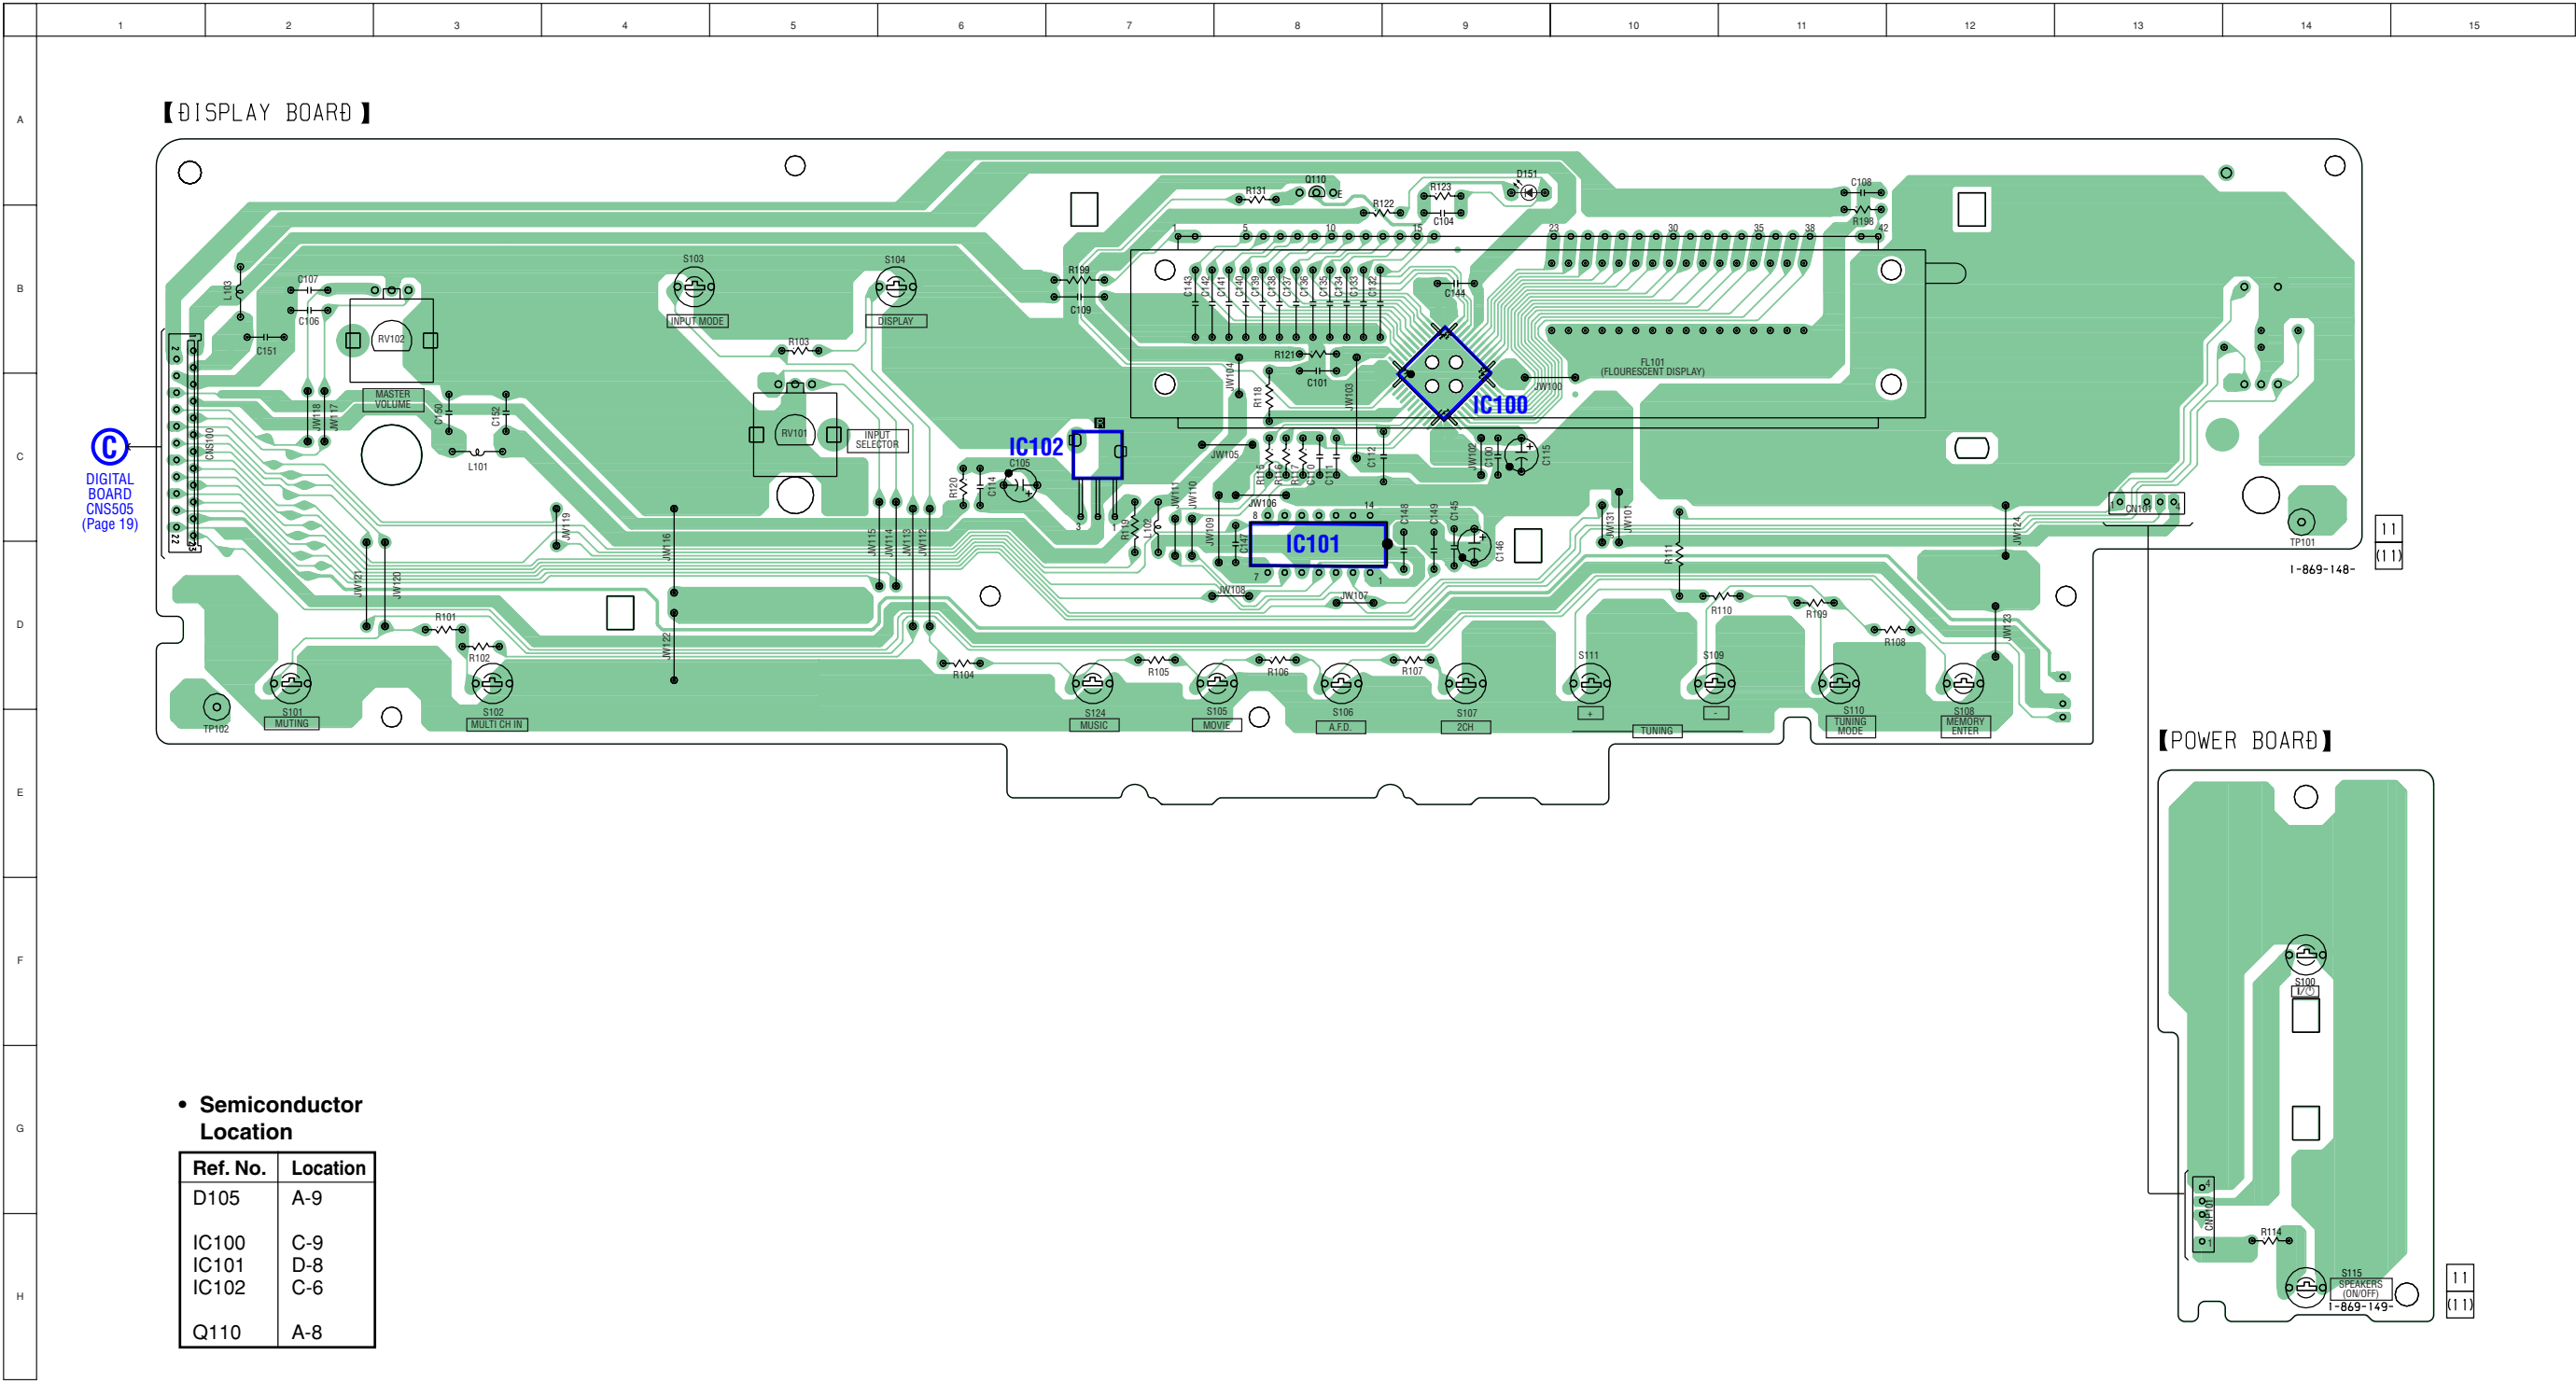




3-16. PRINTED WIRING BOARDS – STANDBY BOARD, AC SELECT BOARD – • See page 15 for Circuit Boards Location. :Uses unleaded solder.

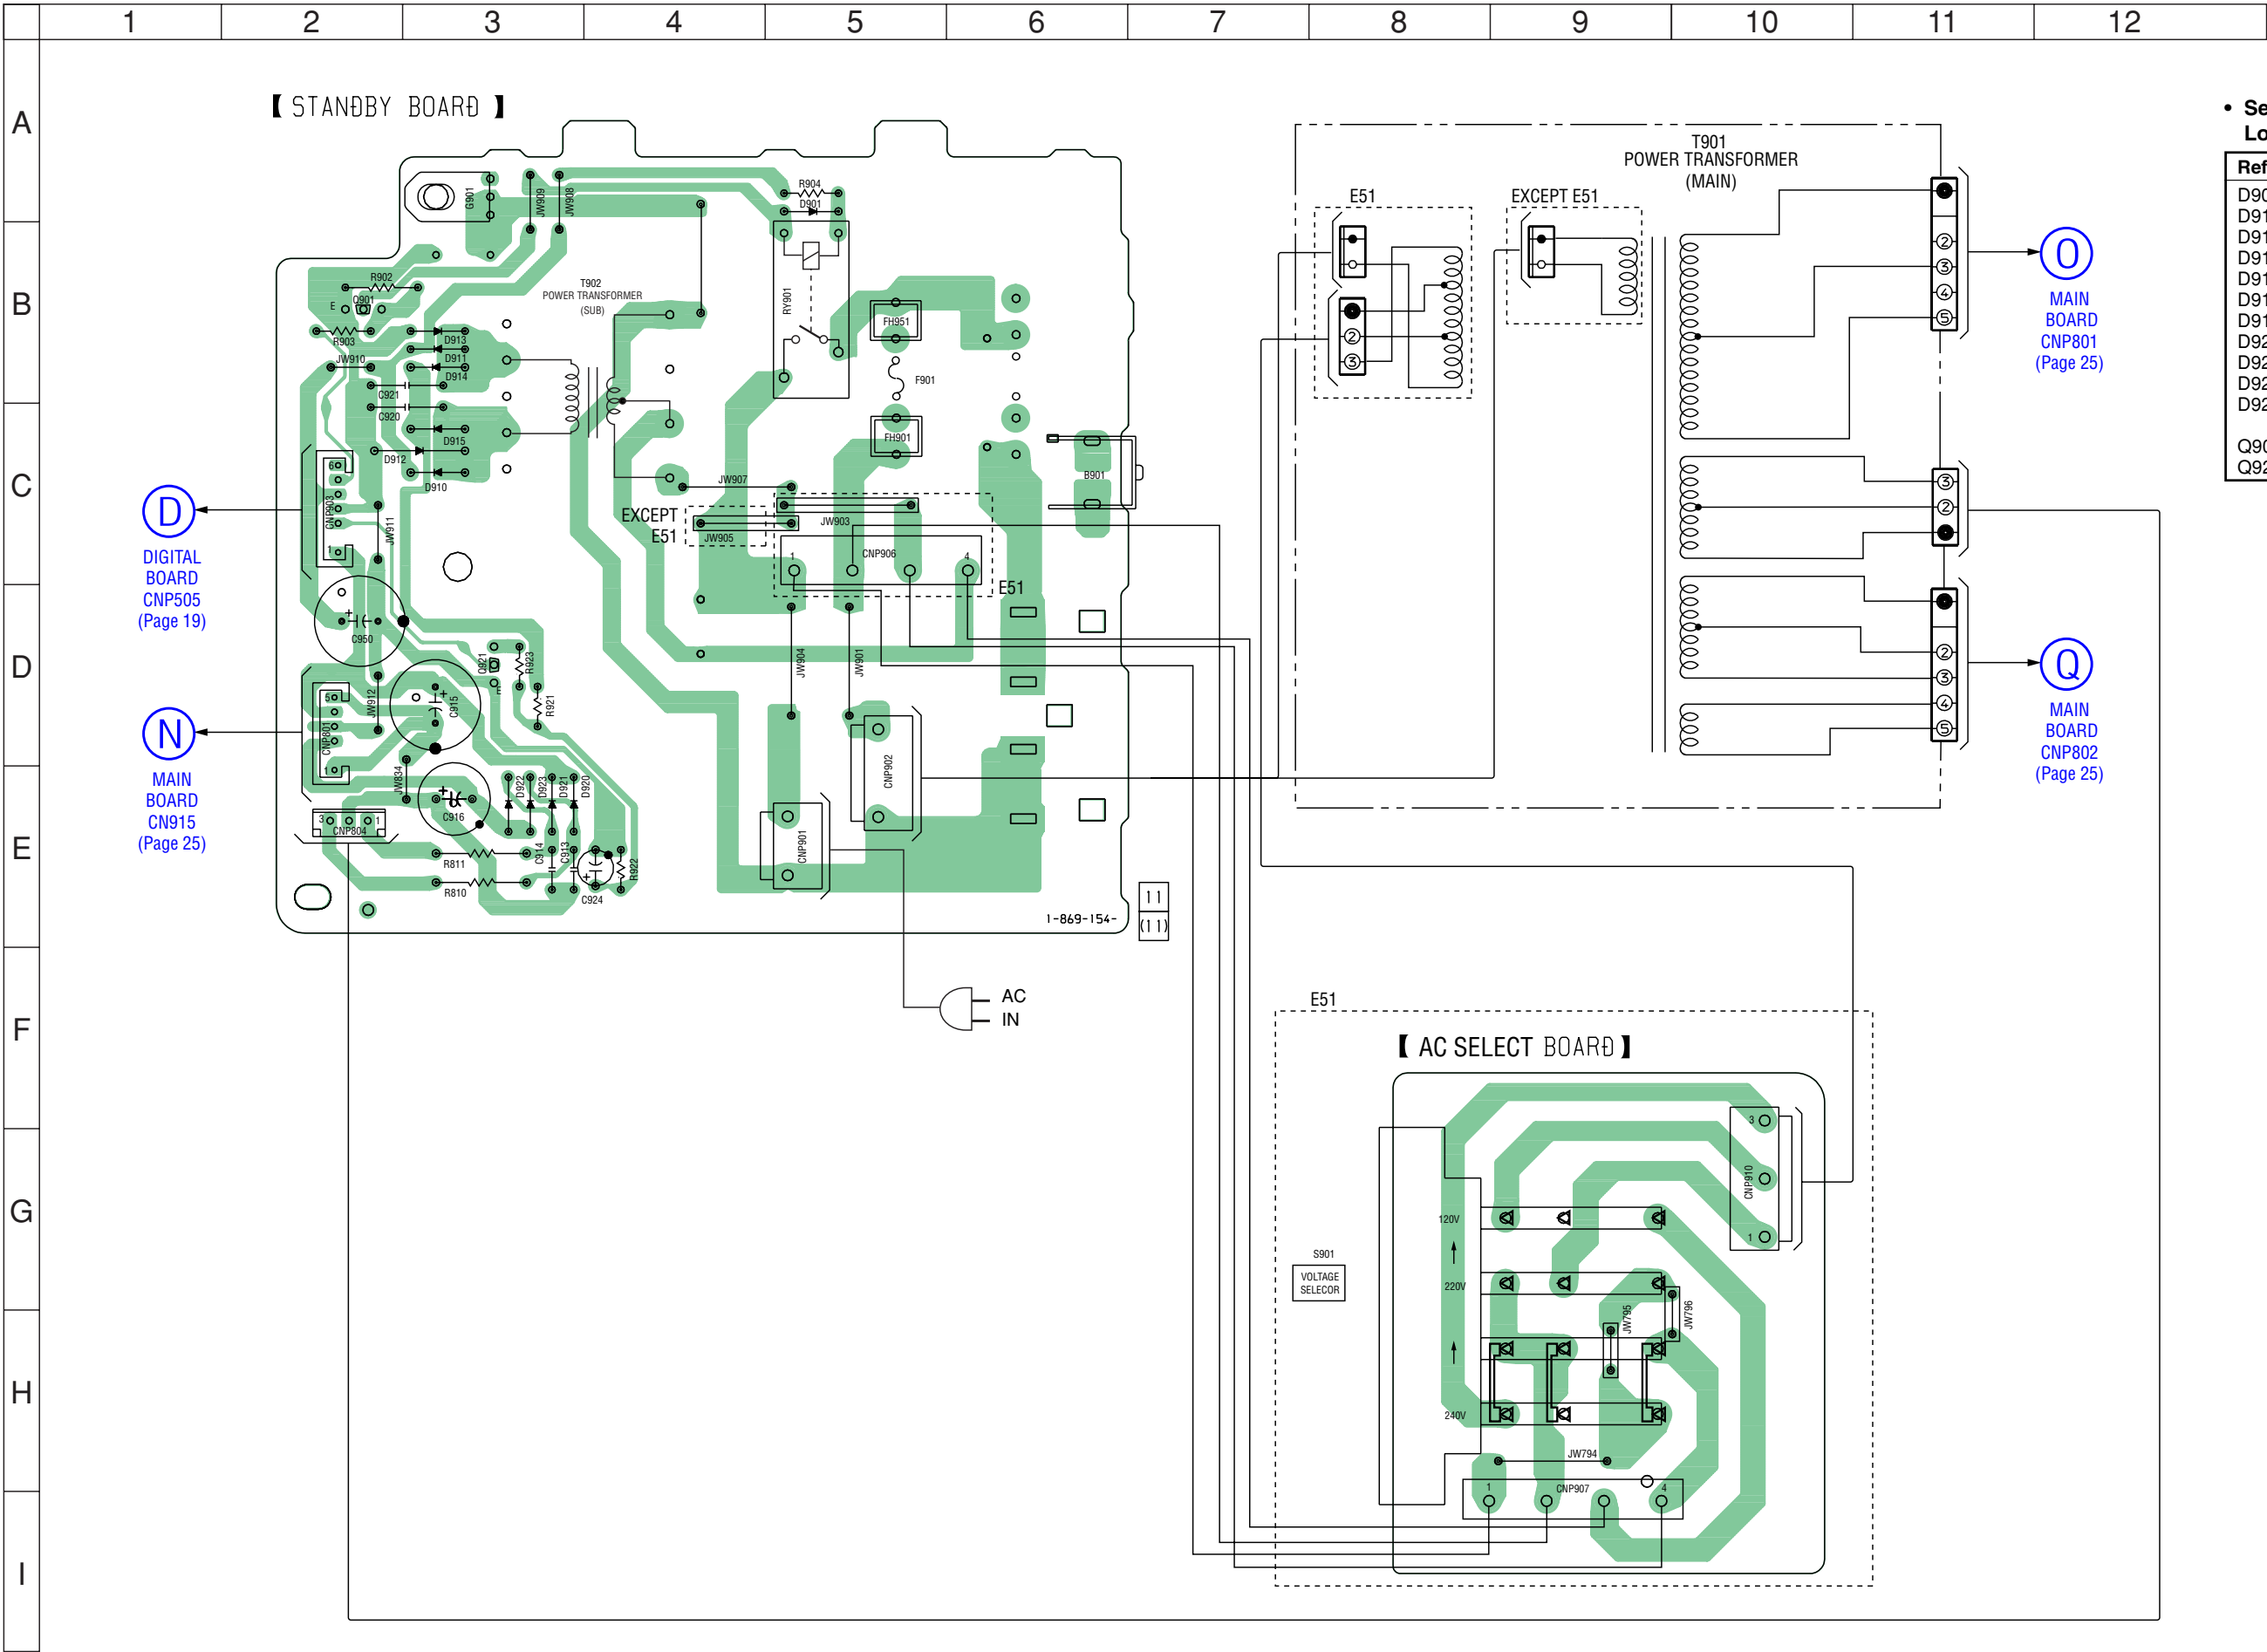


• Semiconductor Location

Ref. No.	Location
D901	A-5
D910	C-3
D911	B-3
D912	C-2
D913	B-3
D914	B-3
D915	C-3
D920	E-3
D921	E-3
D922	E-3
D923	E-3
Q901	B-2
Q921	D-3

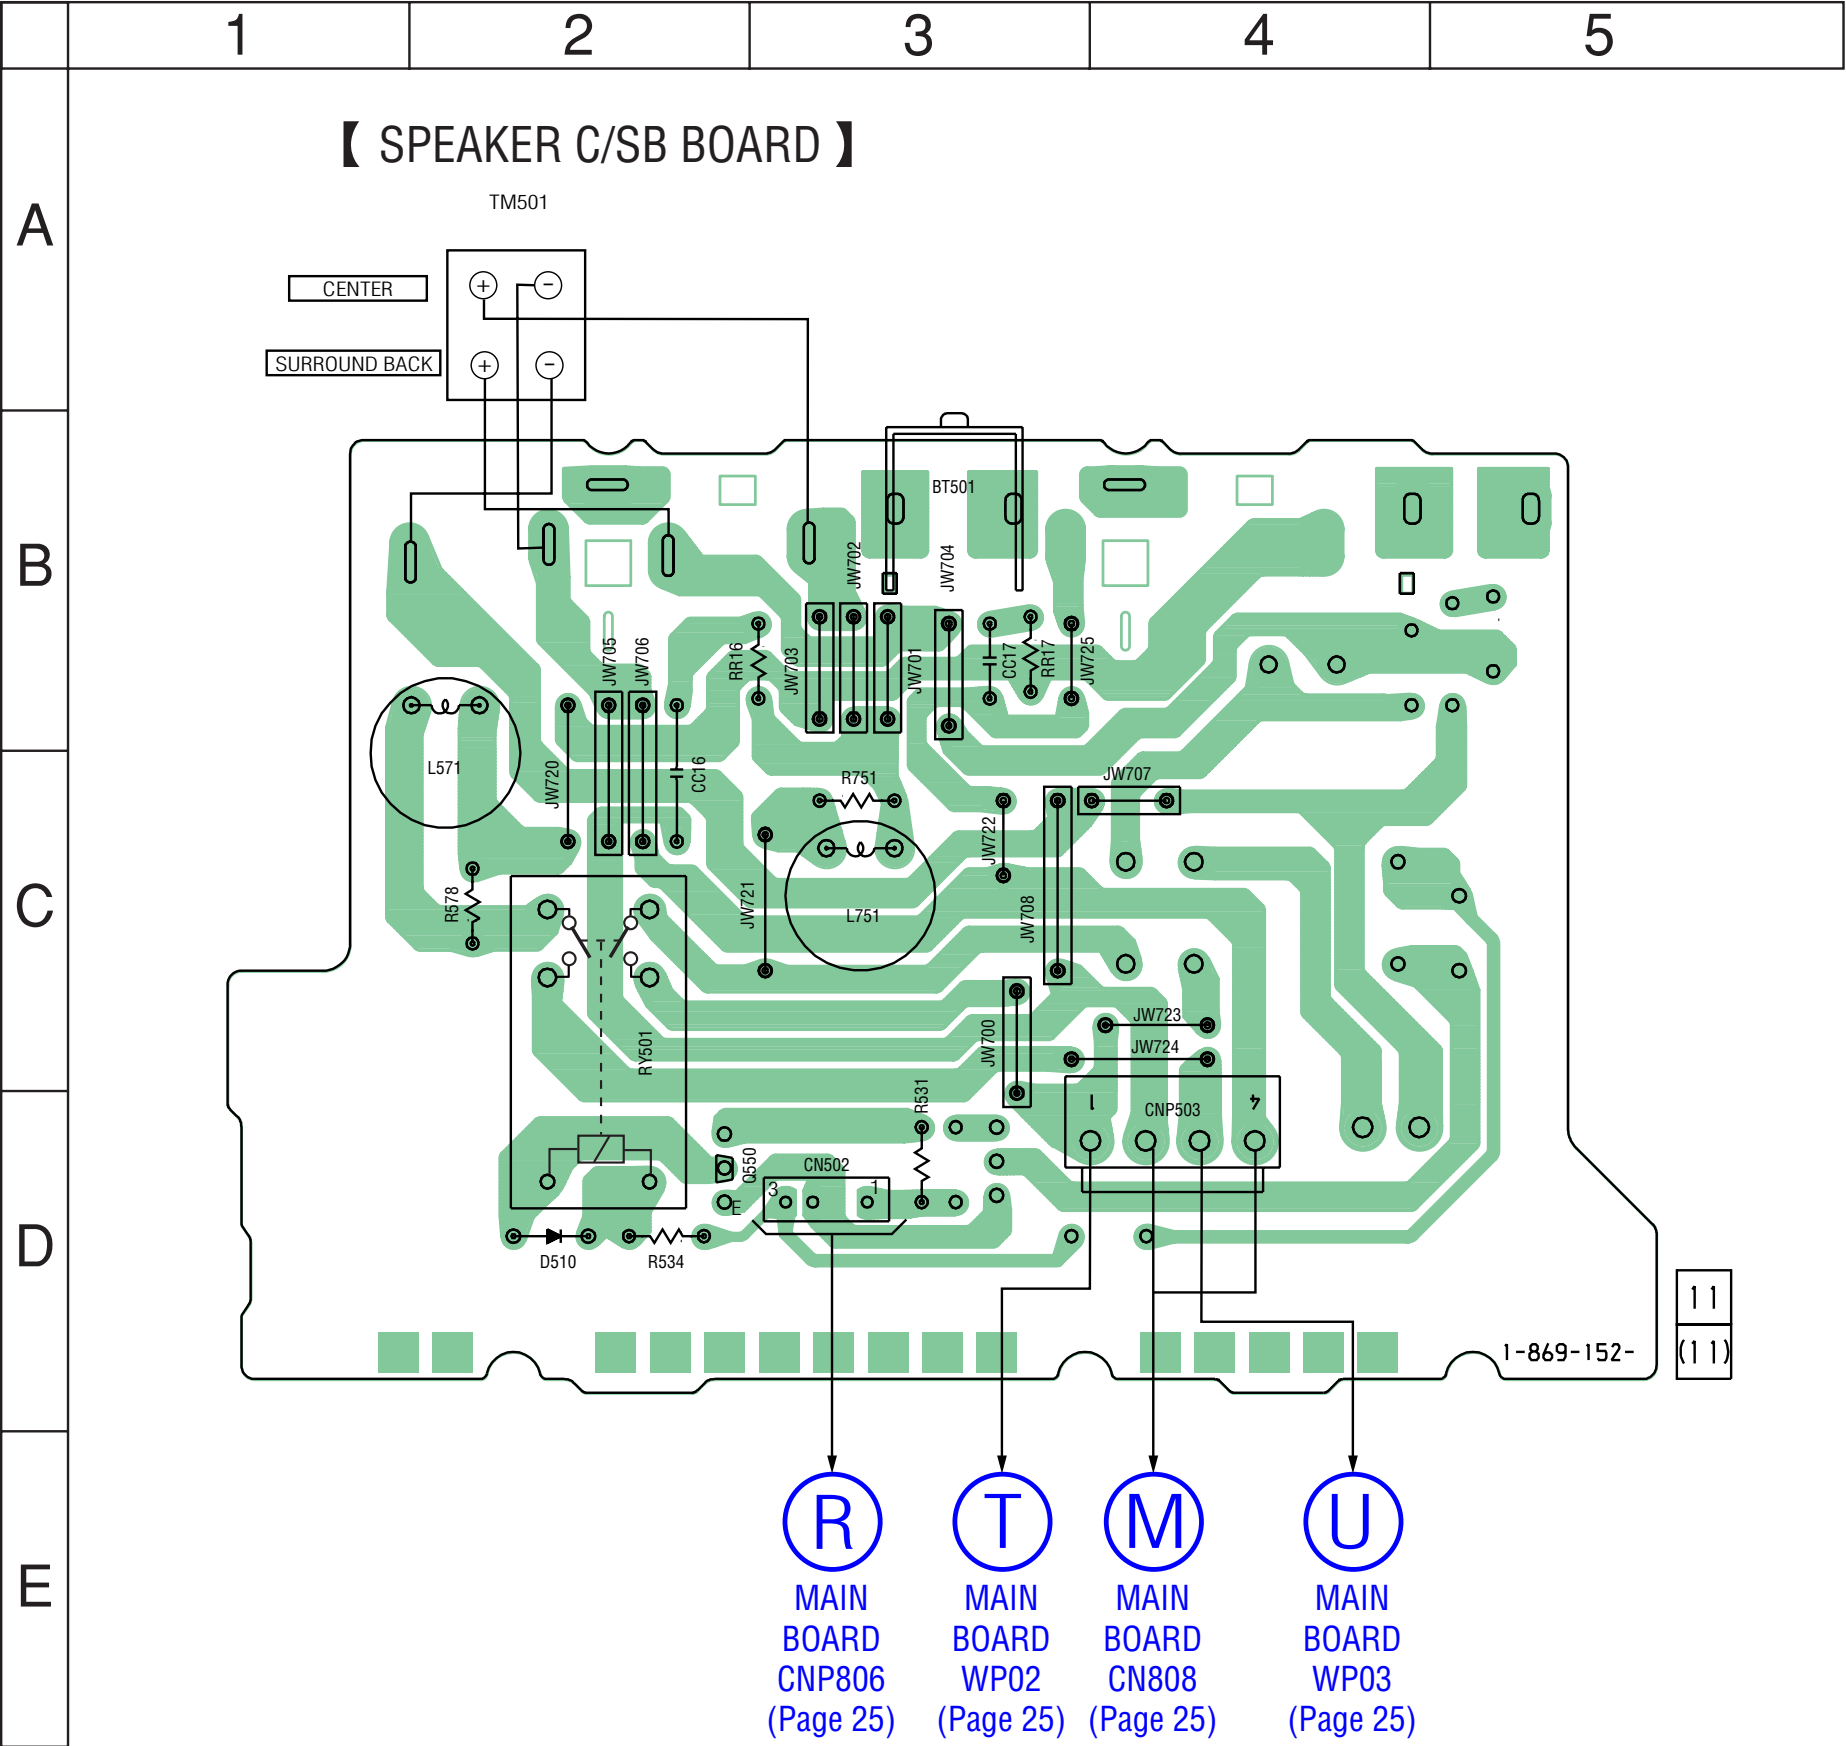



3-18. SCHEMATIC DIAGRAM – SPEAKER C/SB BOARD, STANDBY BOARD, AC SELECT BOARD –

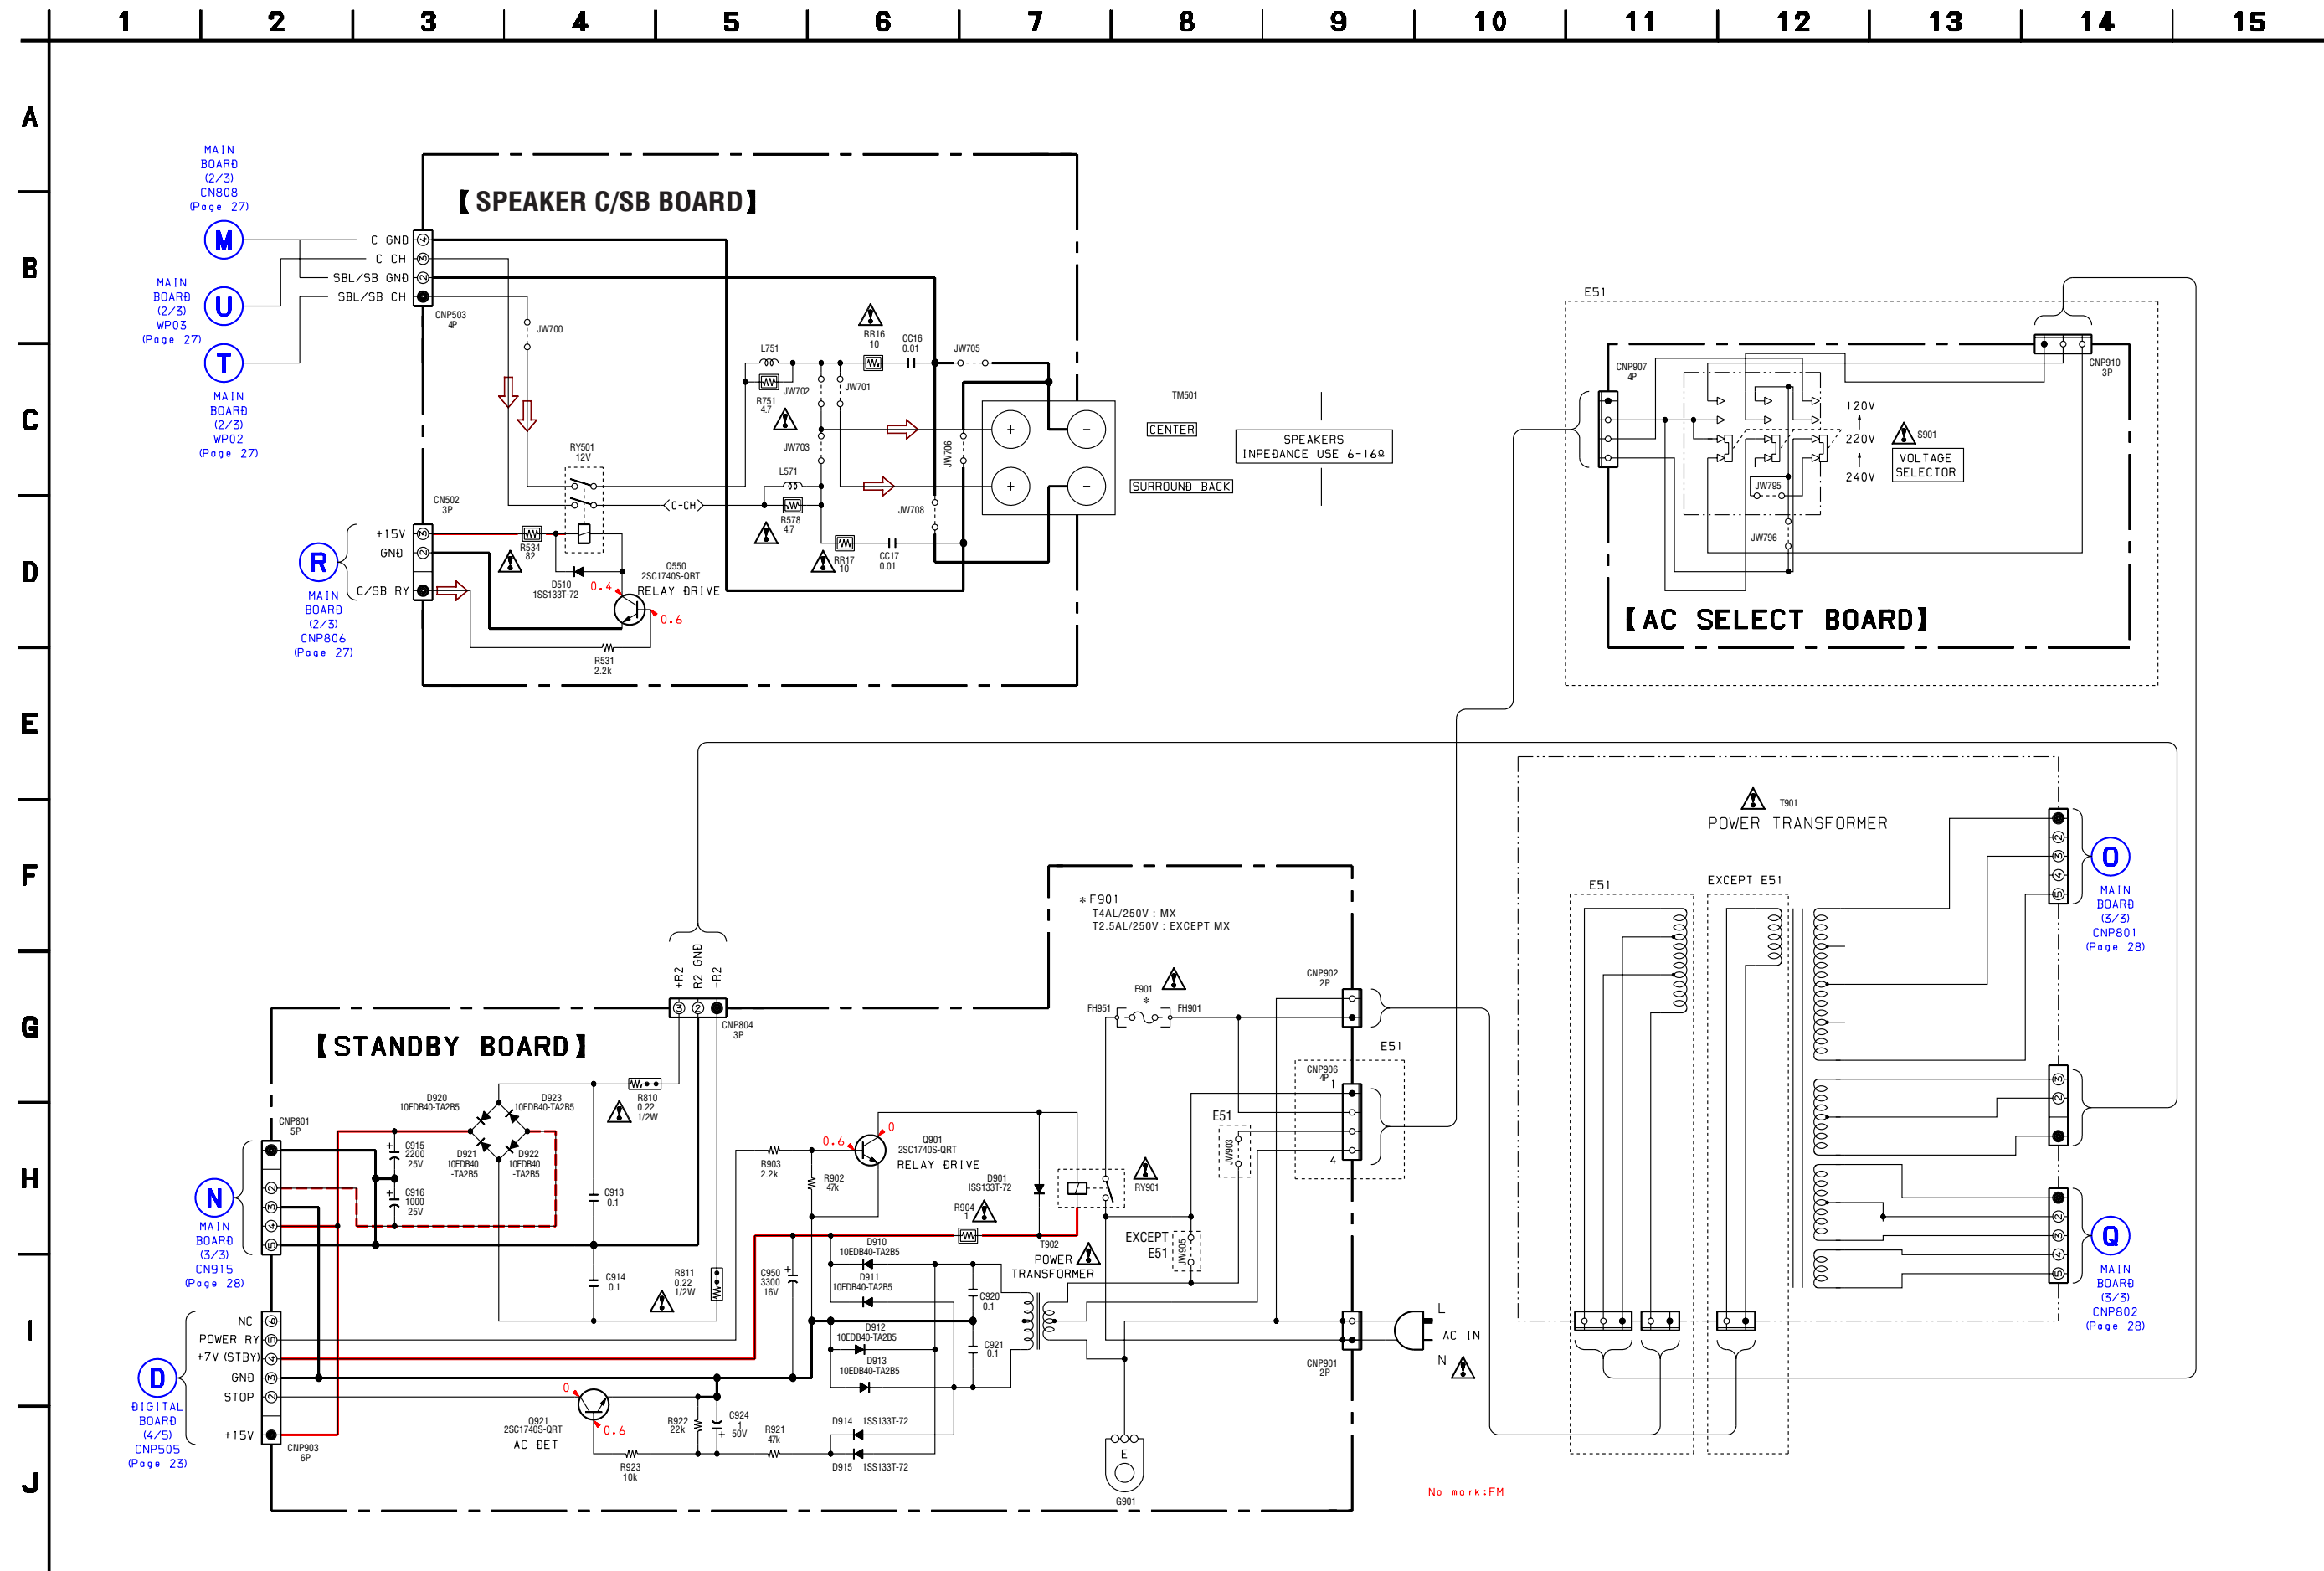





3-20. SCHEMATIC DIAGRAM – ADCC BOARD, VIDEO 3 BOARD –

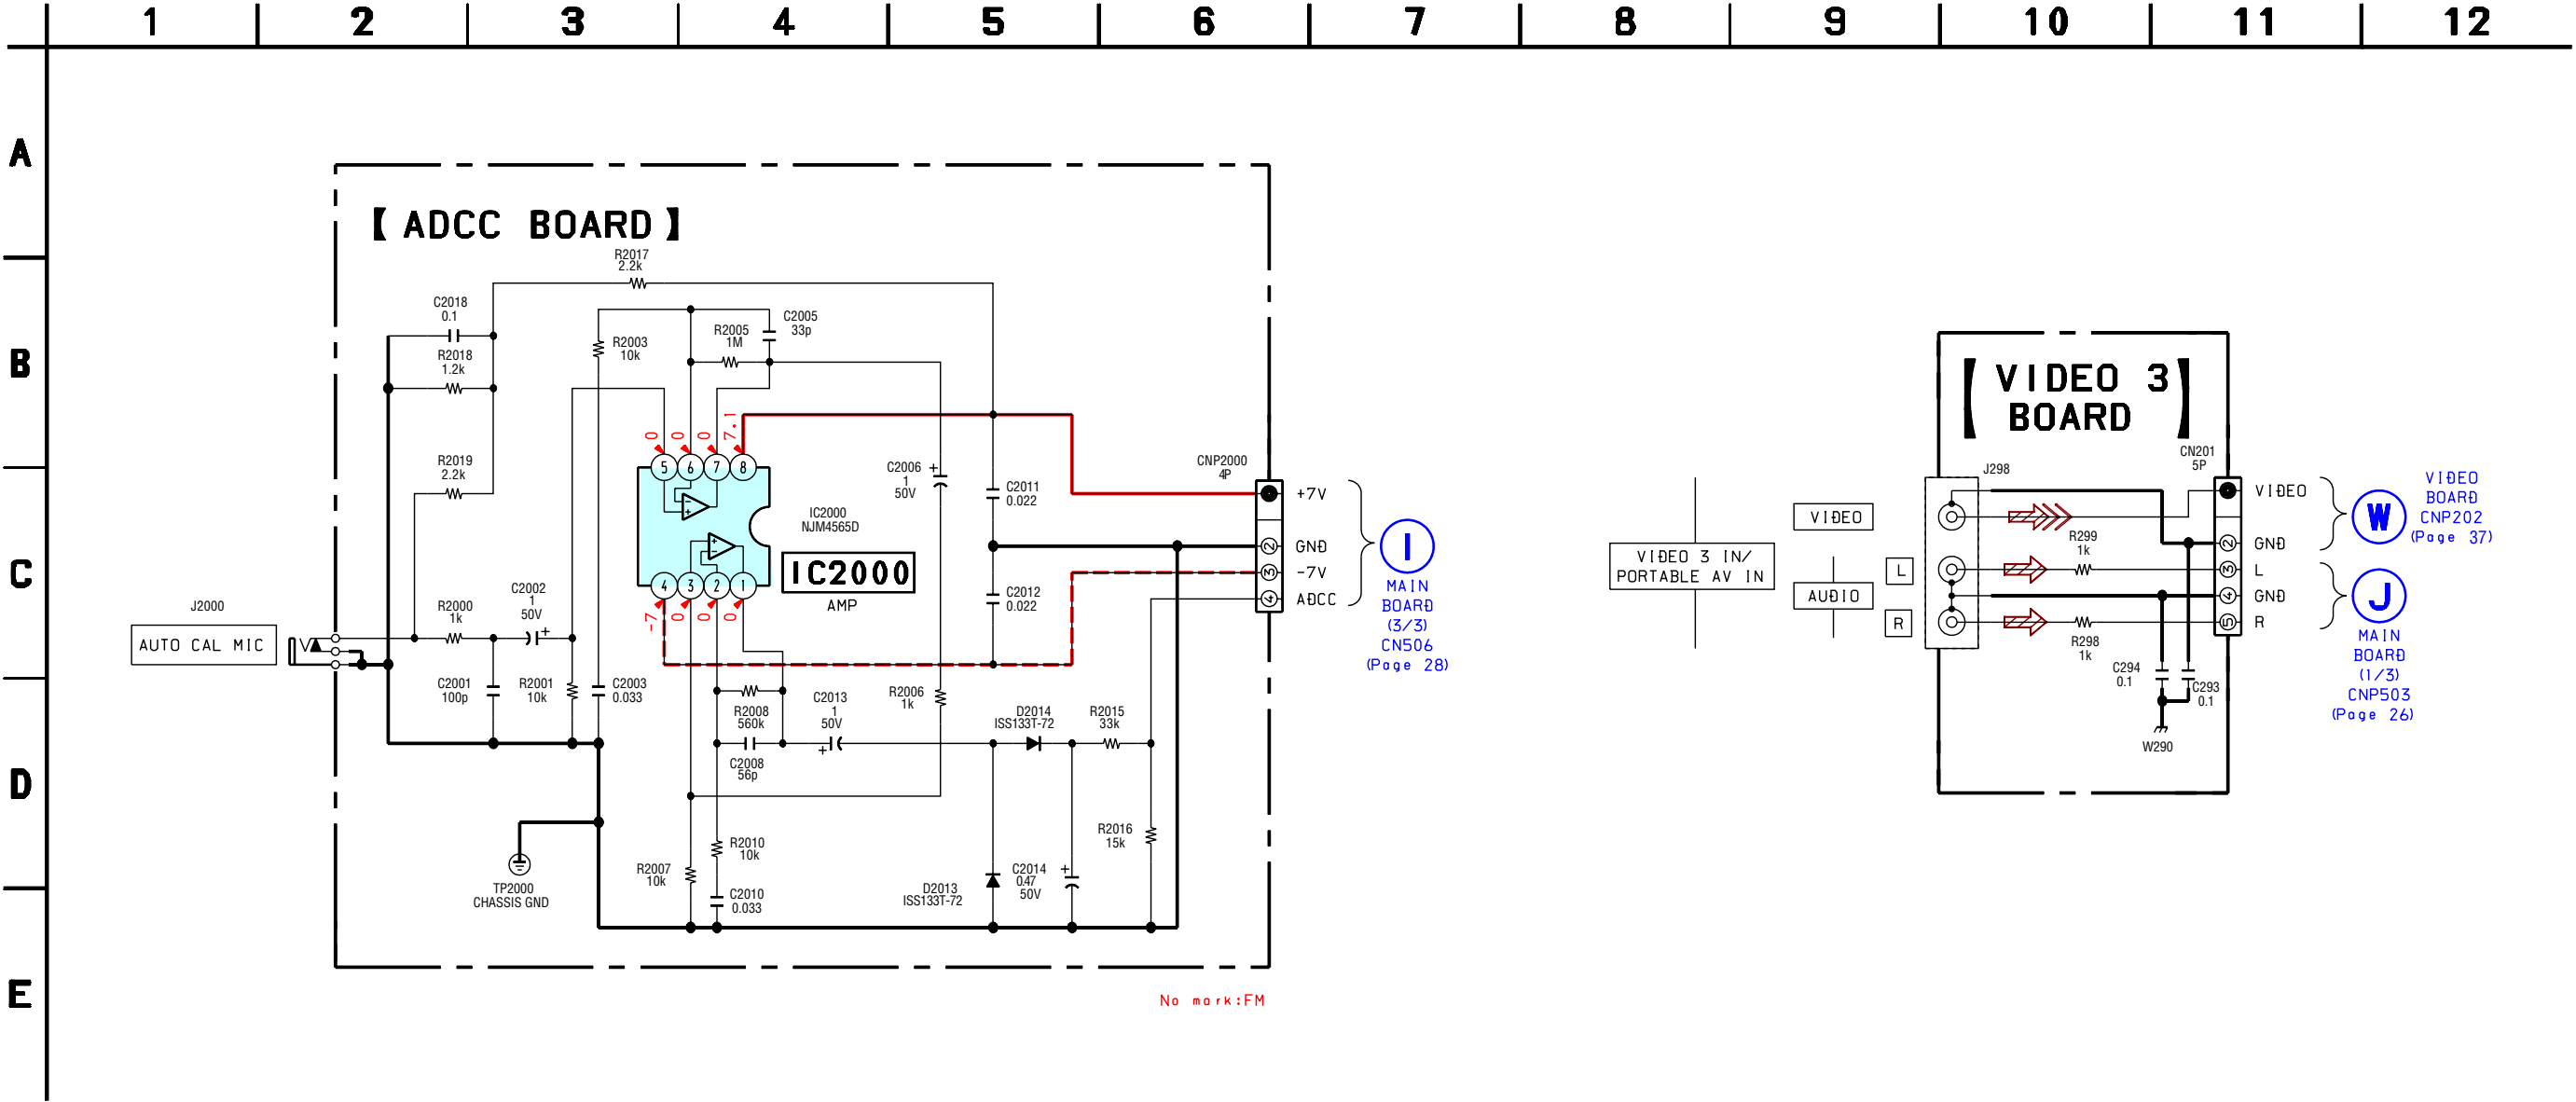

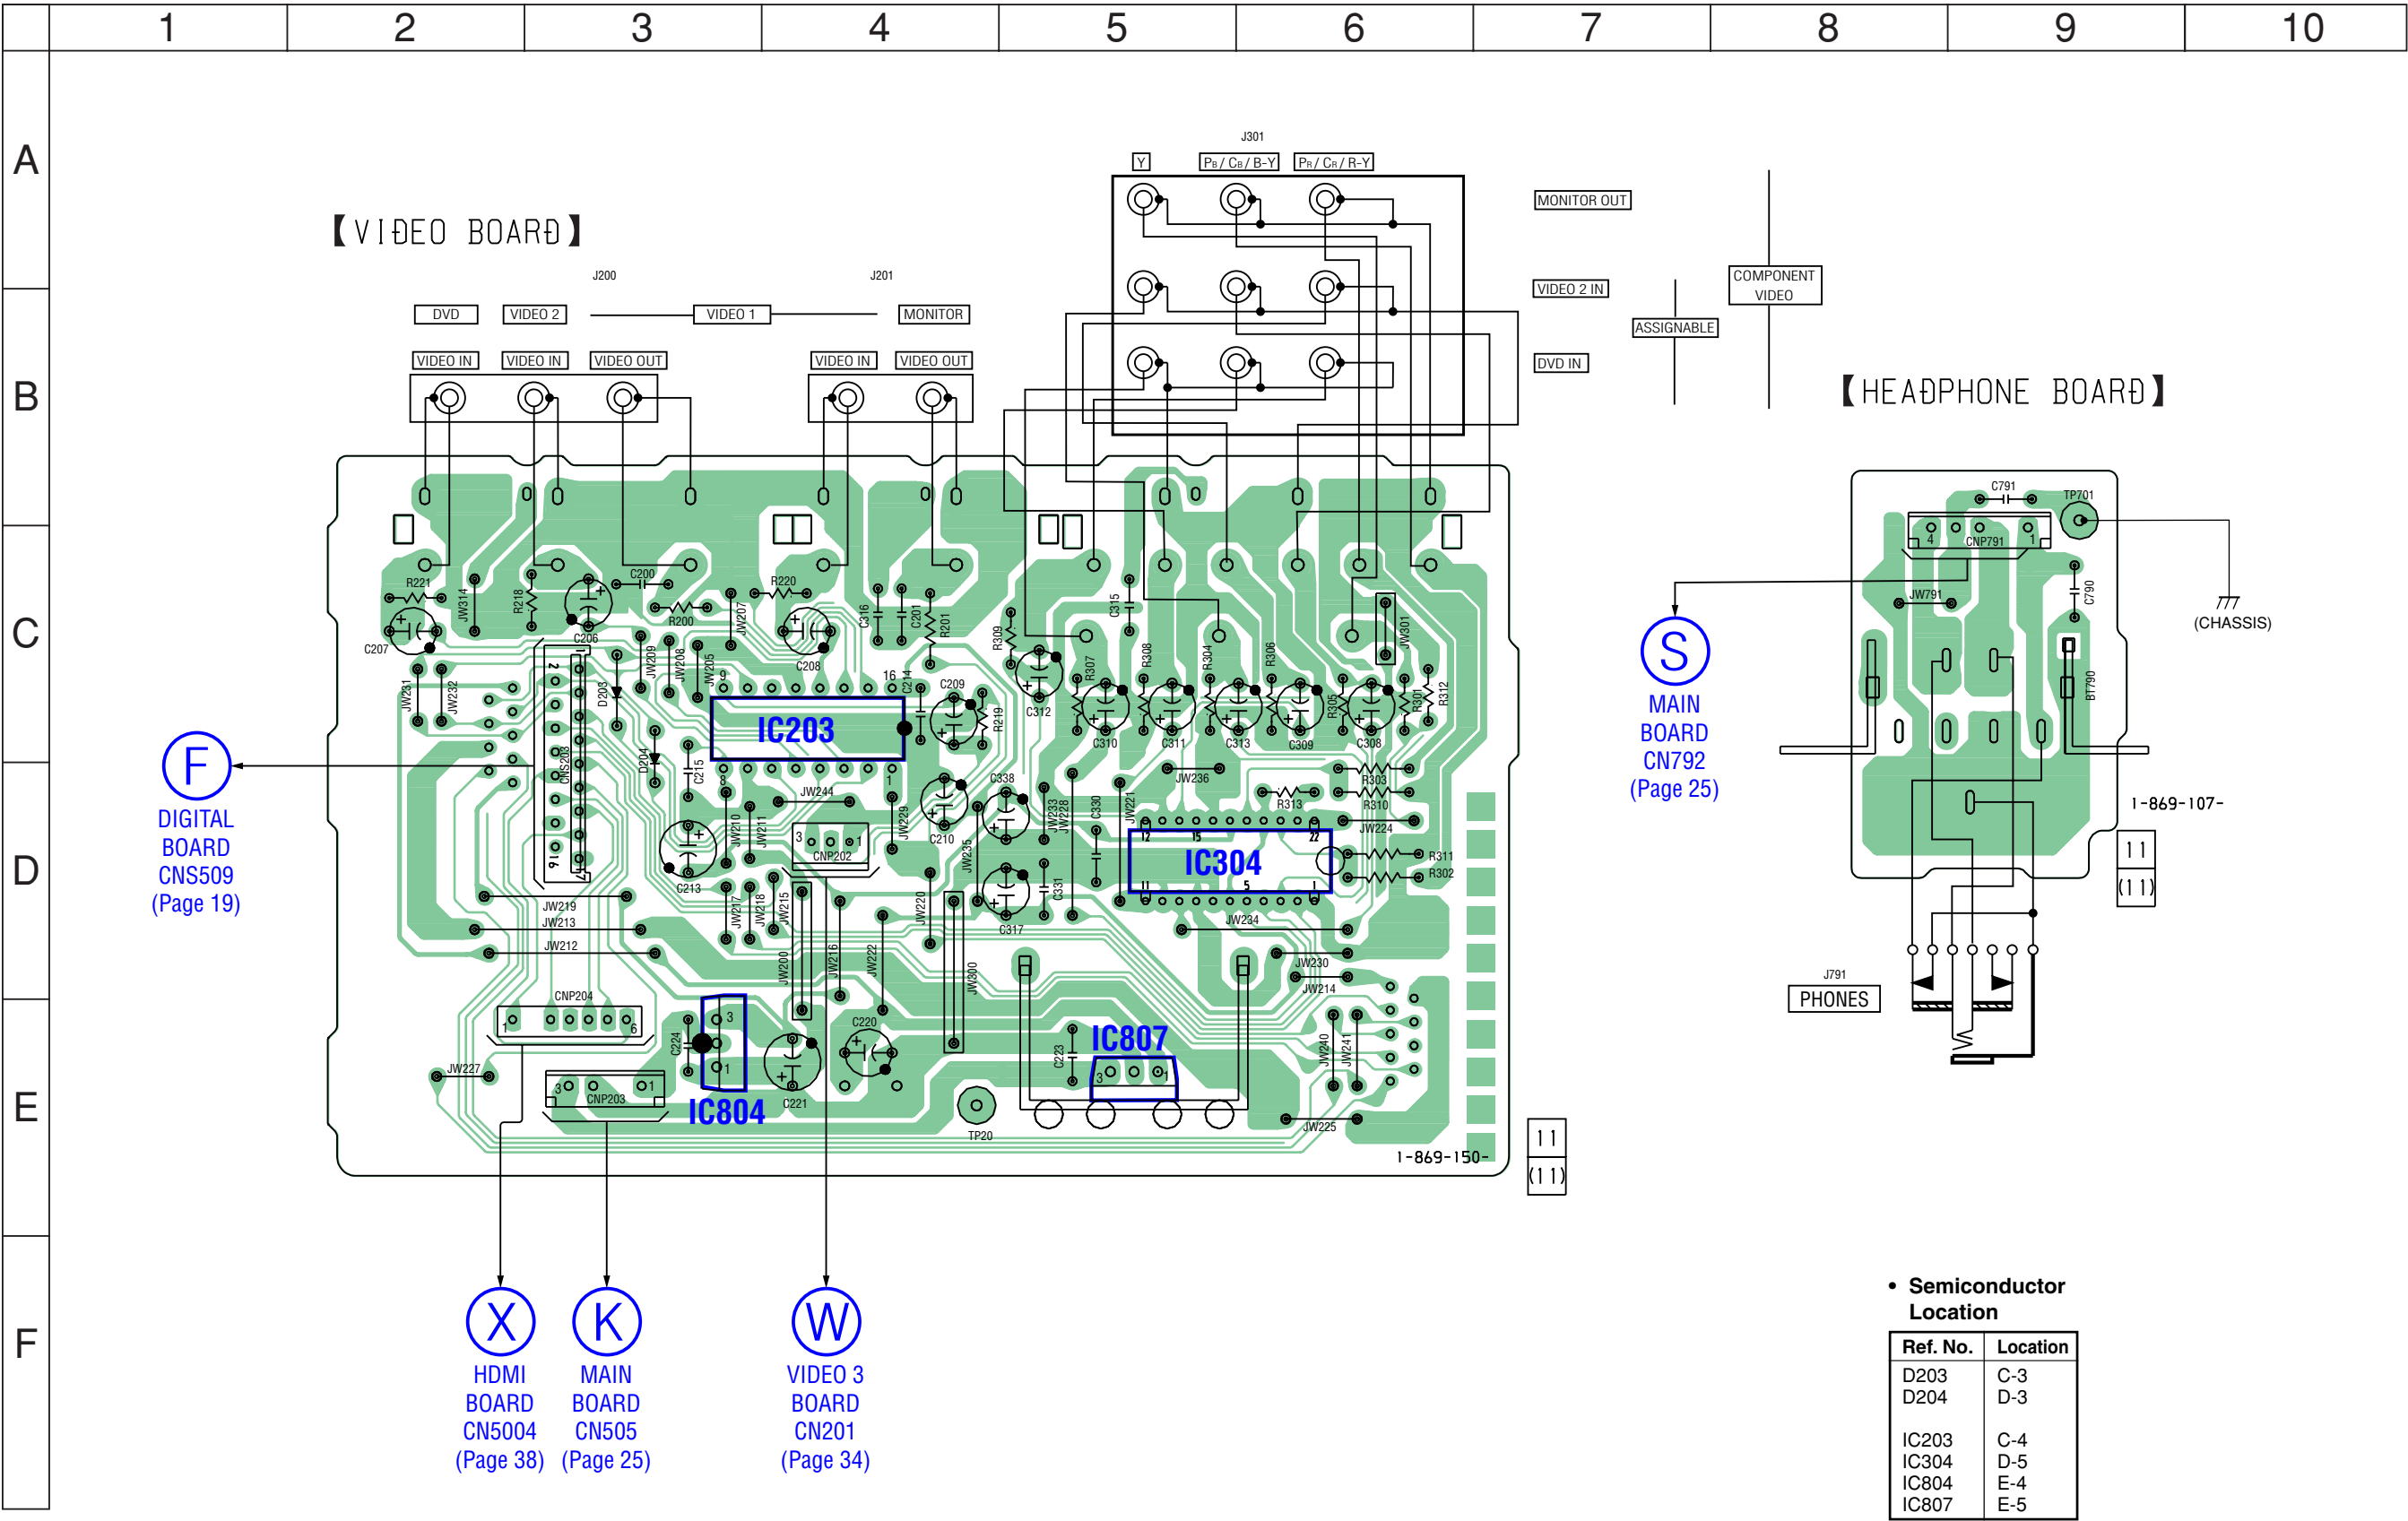


3-22. SCHEMATIC DIAGRAM – VIDEO BOARD, HEADPHONE BOARD – • See page 43 for IC Block Diagrams.

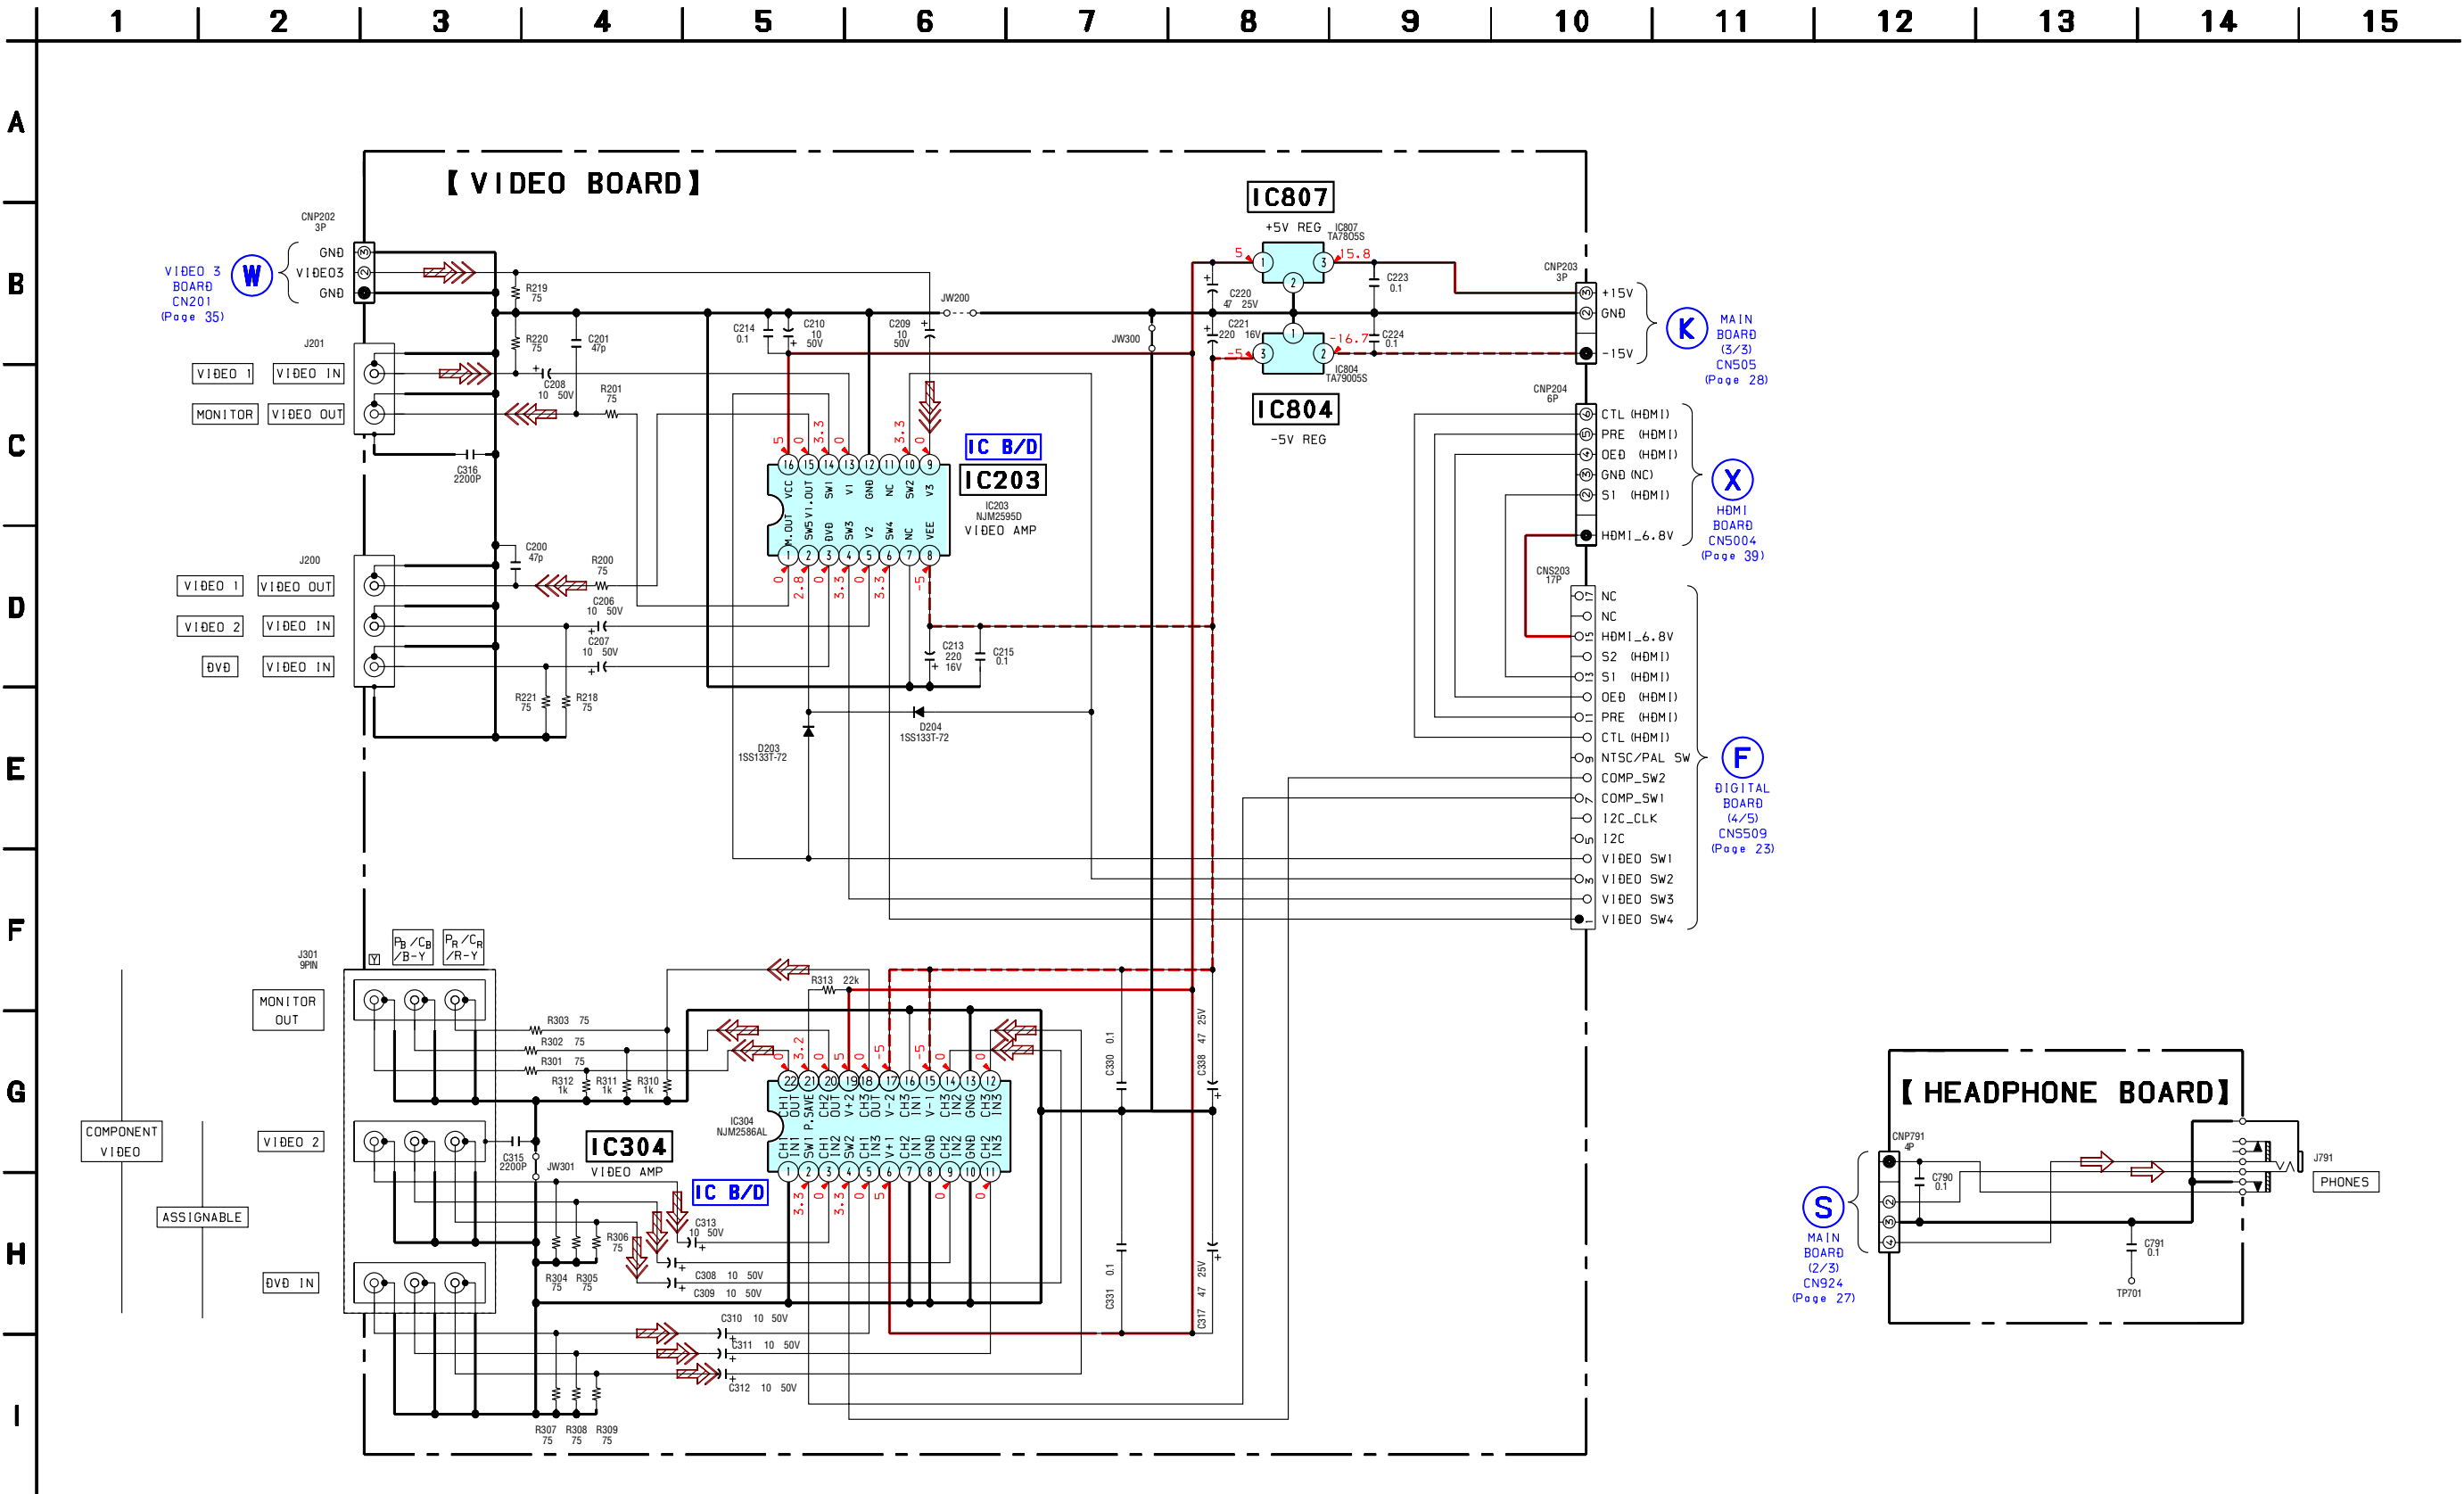

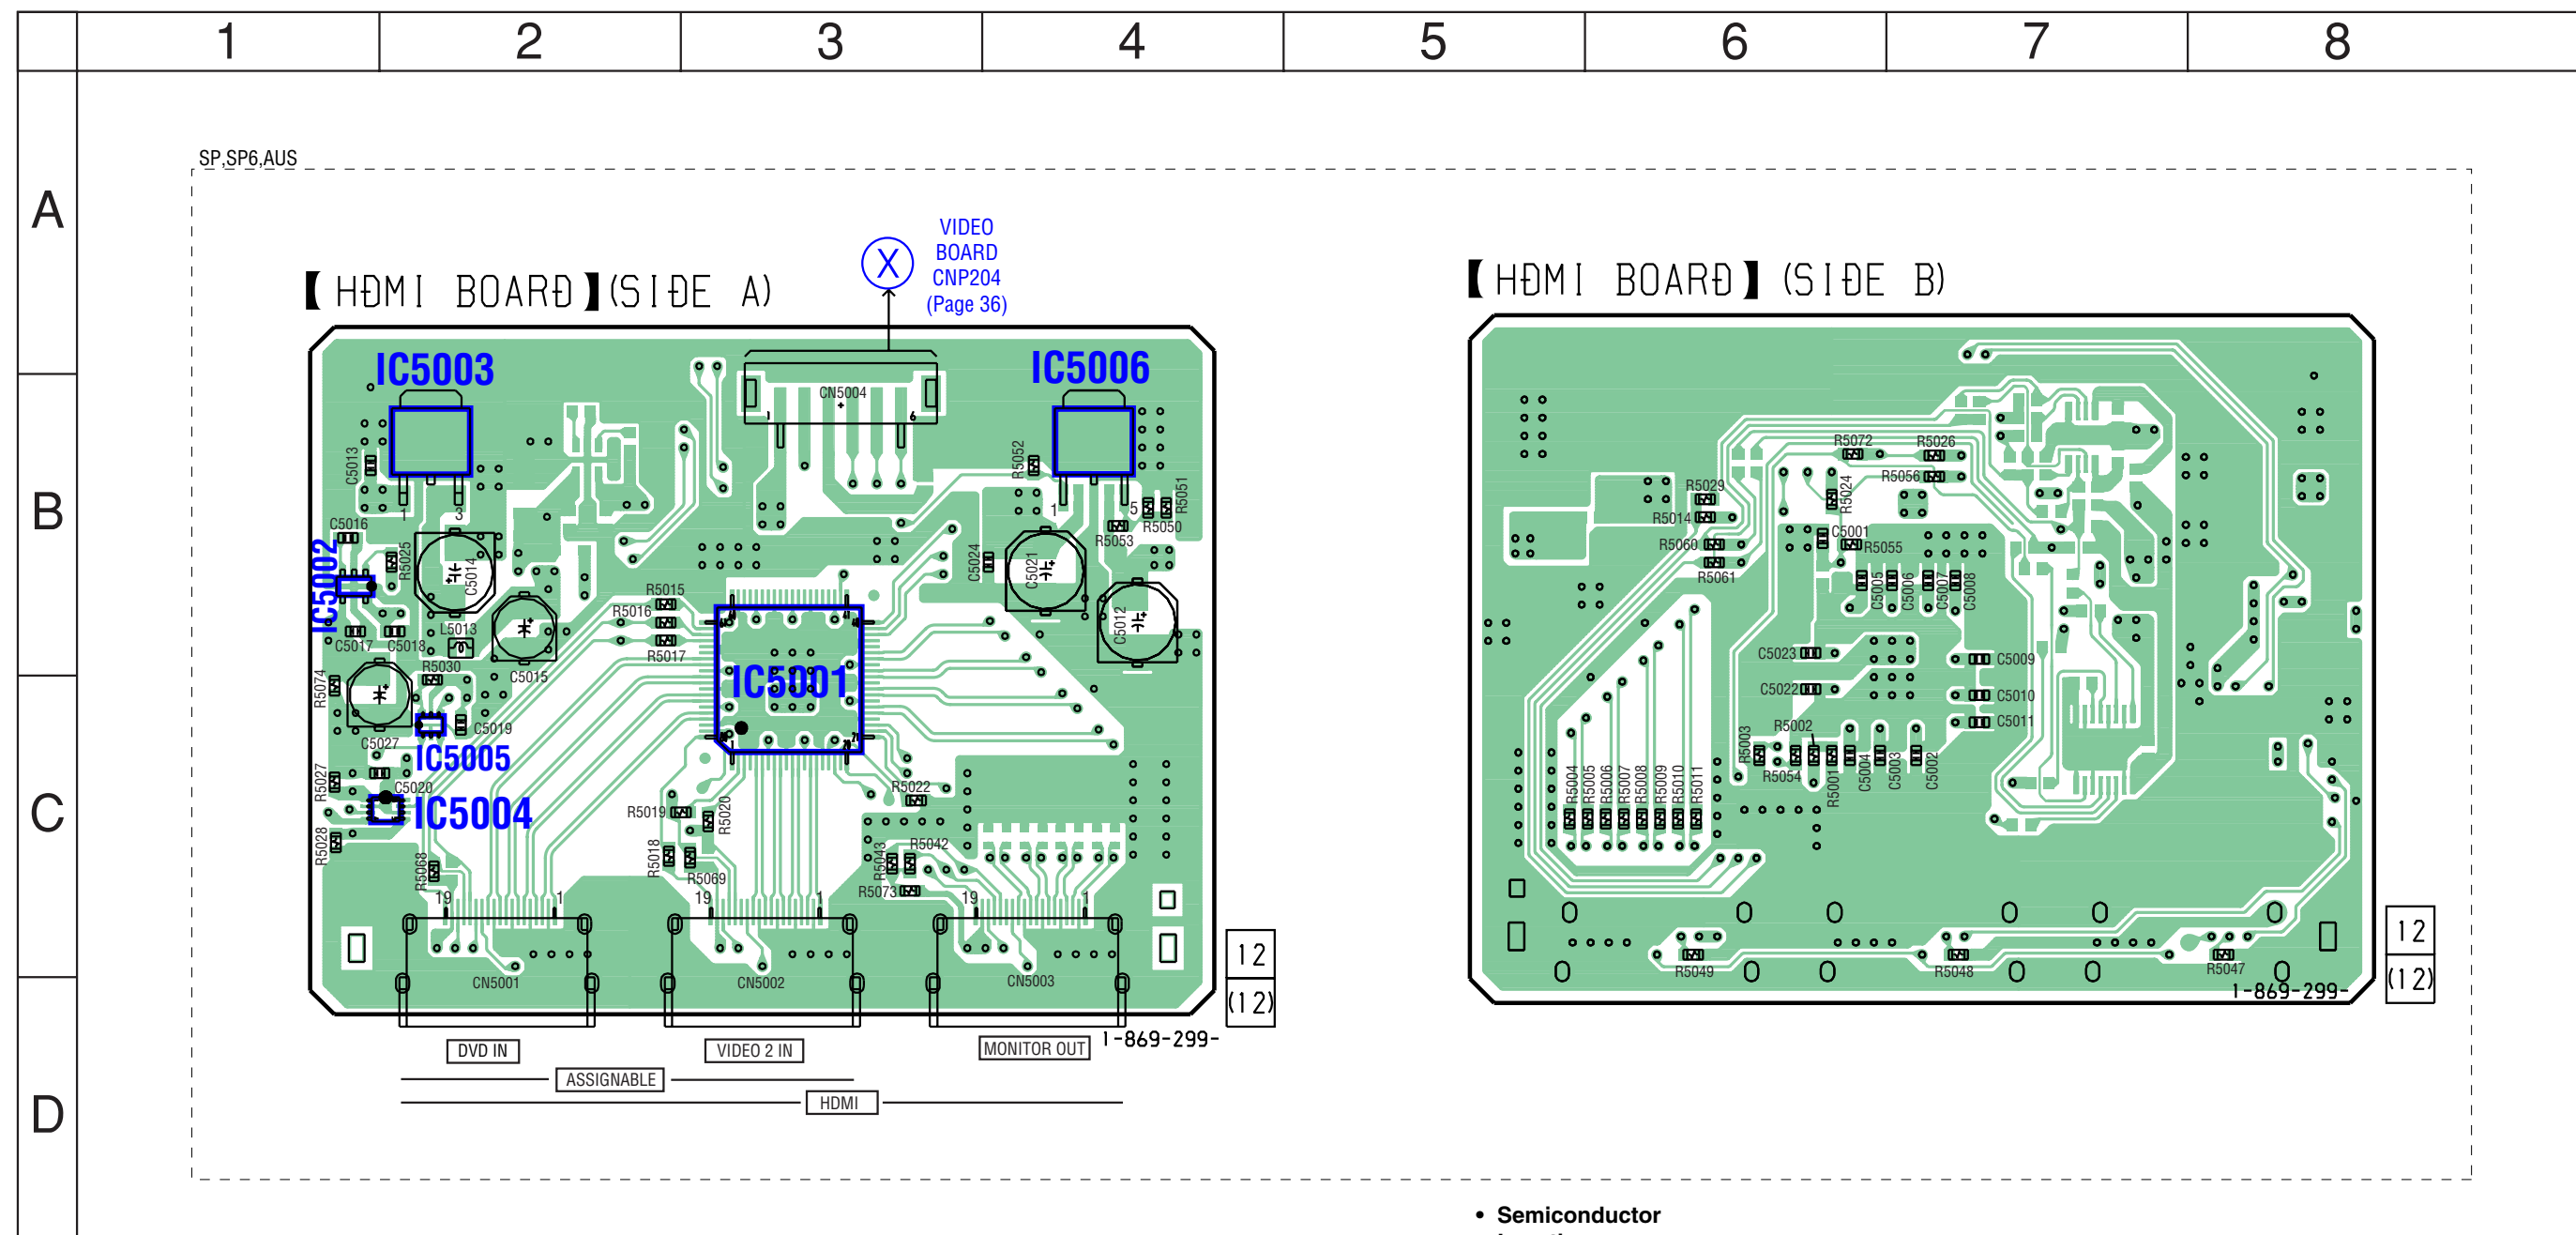


- **Semiconductor Location**

Ref. No.	Location
IC5001	B-3
IC5002	B-1
IC5003	B-2
IC5004	C-2
IC5005	C-2
IC5006	A-4

 


- IC Block Diagrams
- DIGITAL Board -


IC1301 LC89056W-E

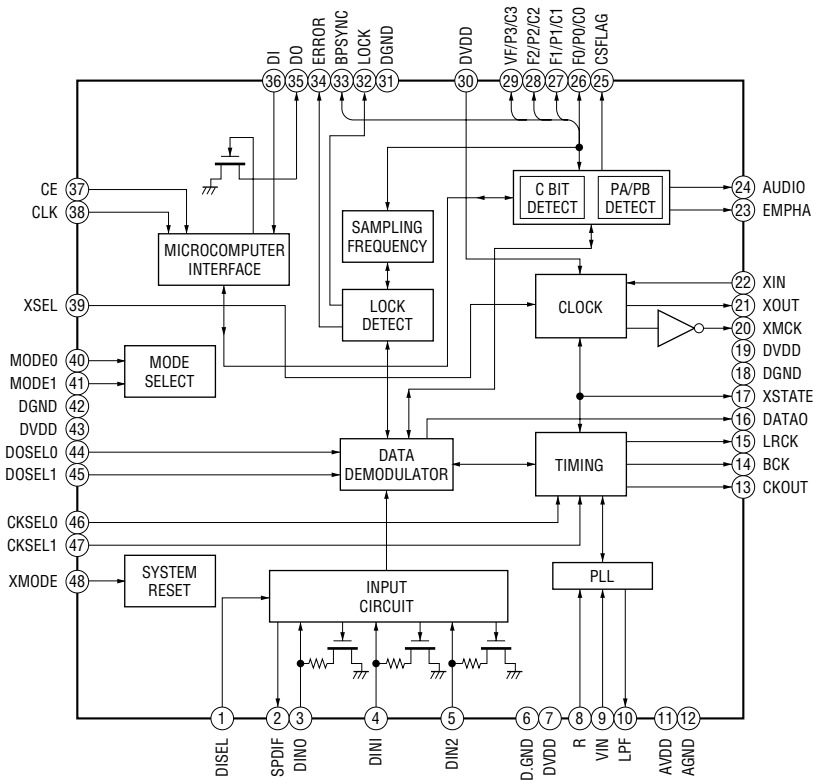


IC1401 PCM1800E

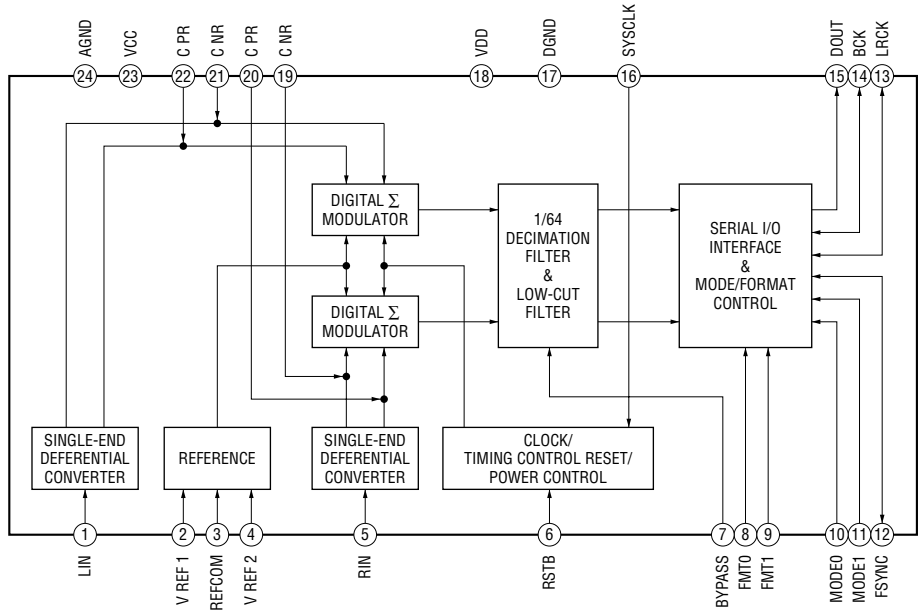


IC1601, IC1602 SN74HC595ANSR

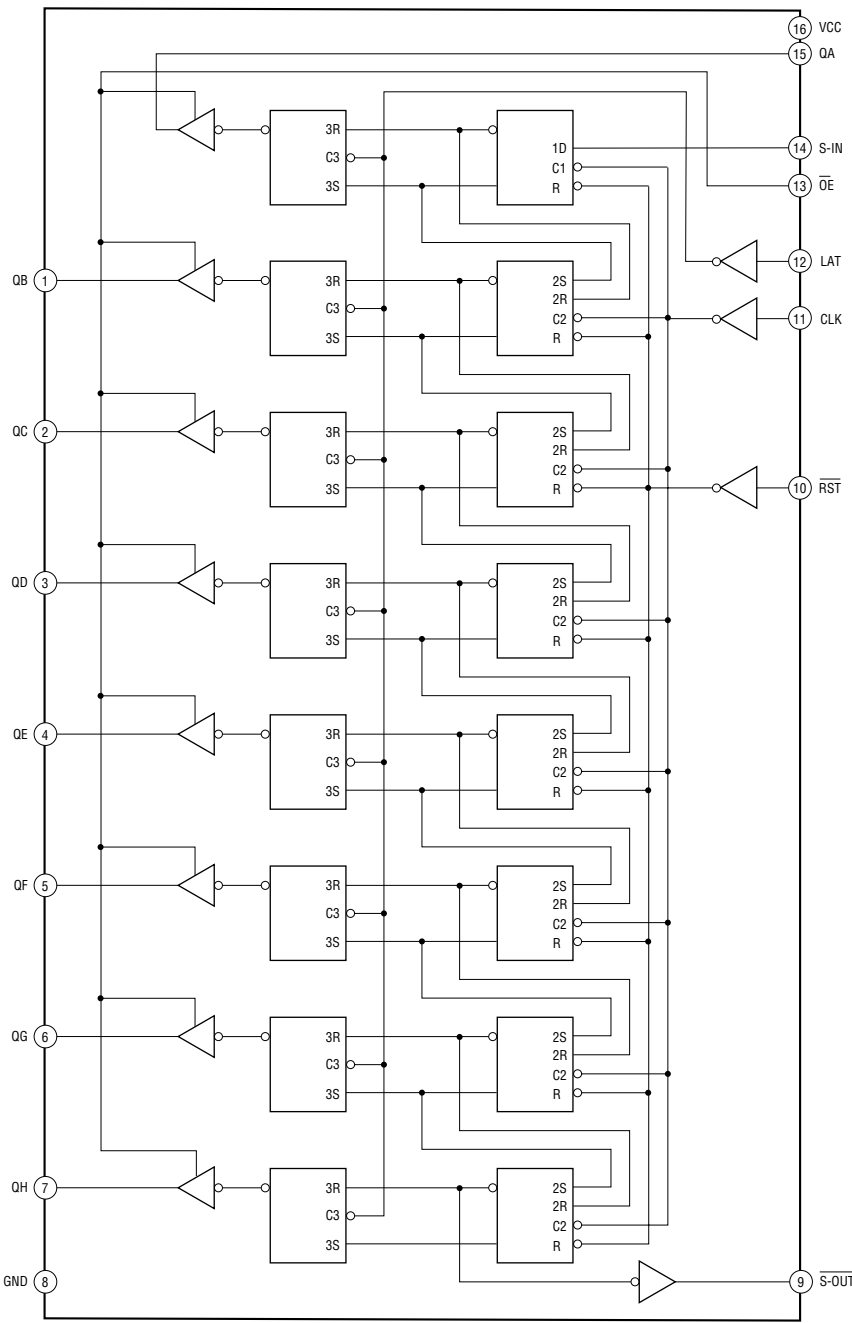

IC1503 TC7WH157FU

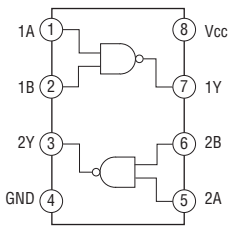


IC1452 PCM1609APT

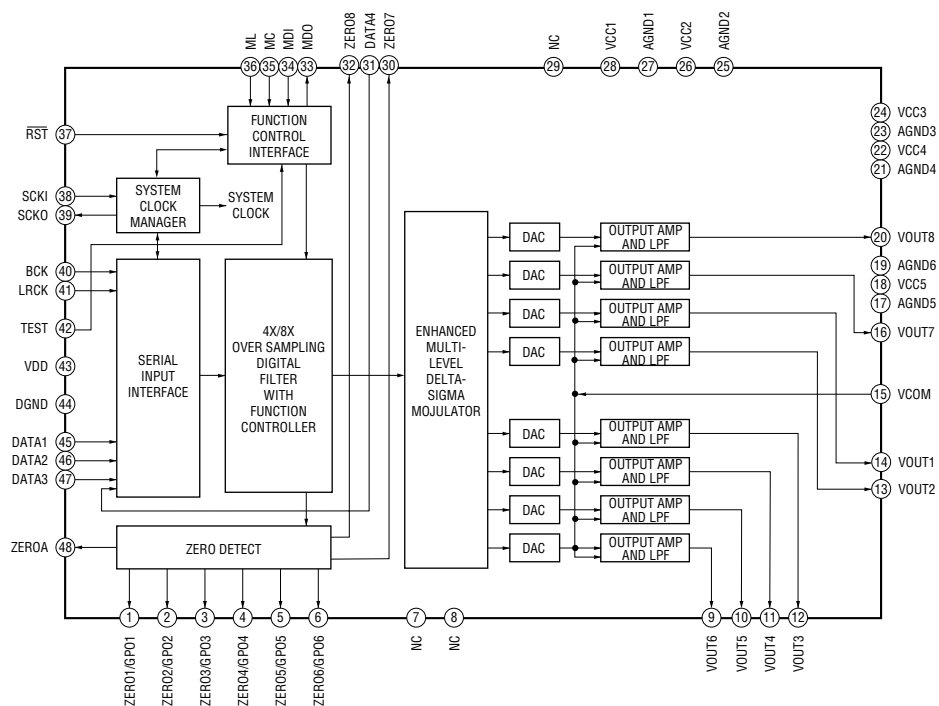


- MAIN Board -

IC501, IC601, IC701 uPC2581V-S

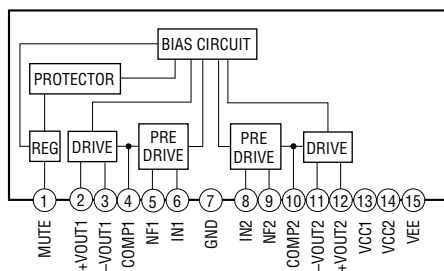


- DISPLAY Board -

IC101 MC74ACT08N

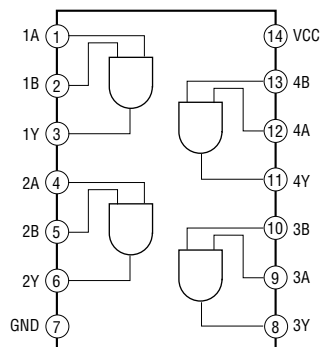


IC100 PT6315

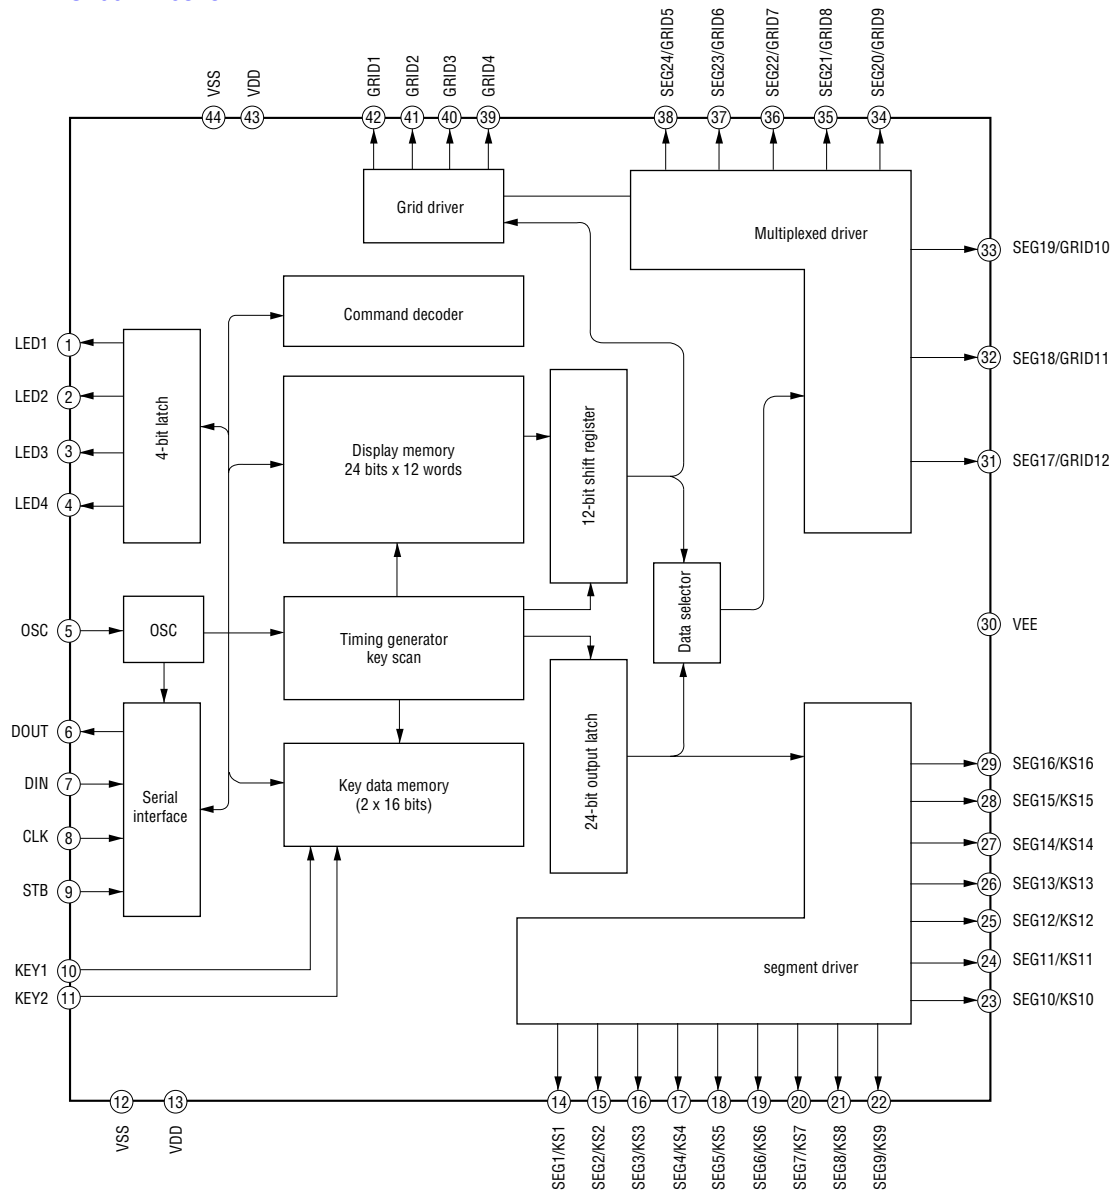


- HDMI Board -

IC5005 SN74LVC1G3157DCKR

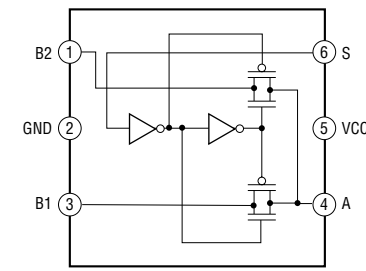


– VIDEO Board –

IC203 NJM2595D

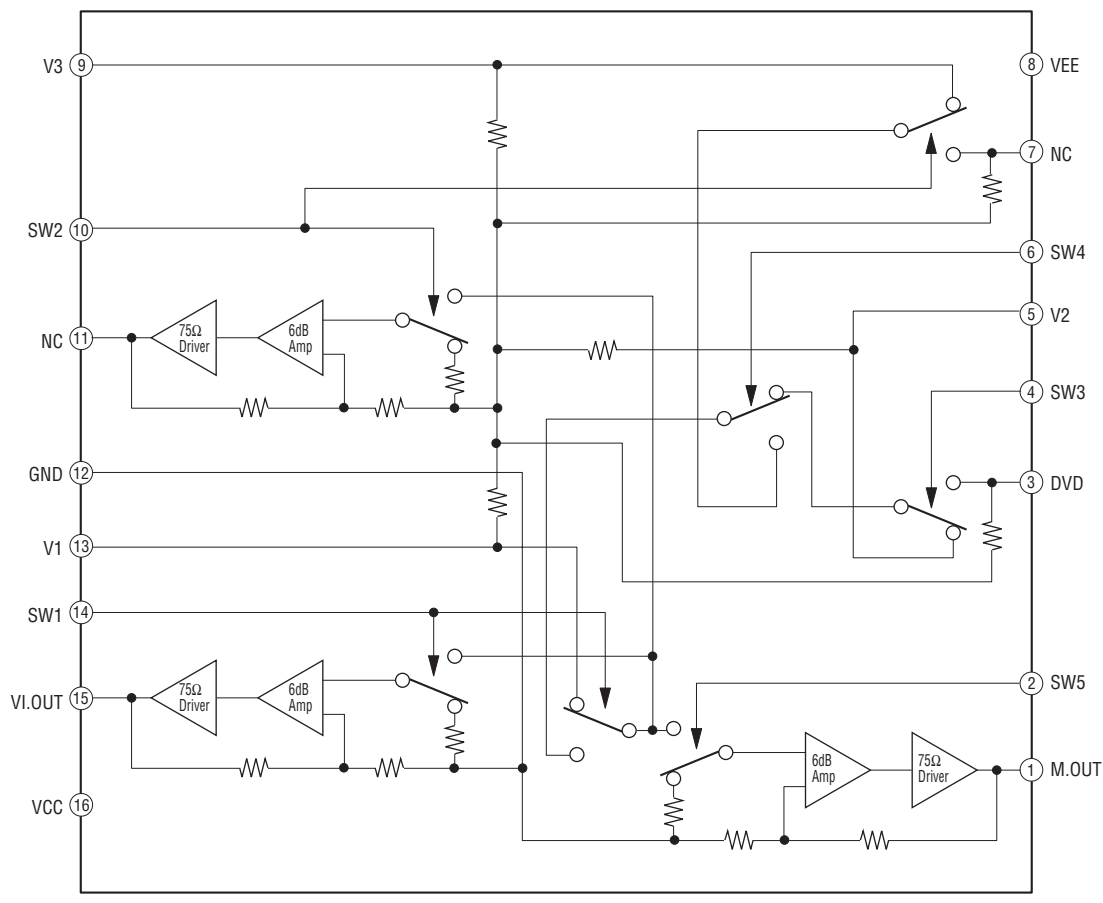

IC304 NJM2586AL

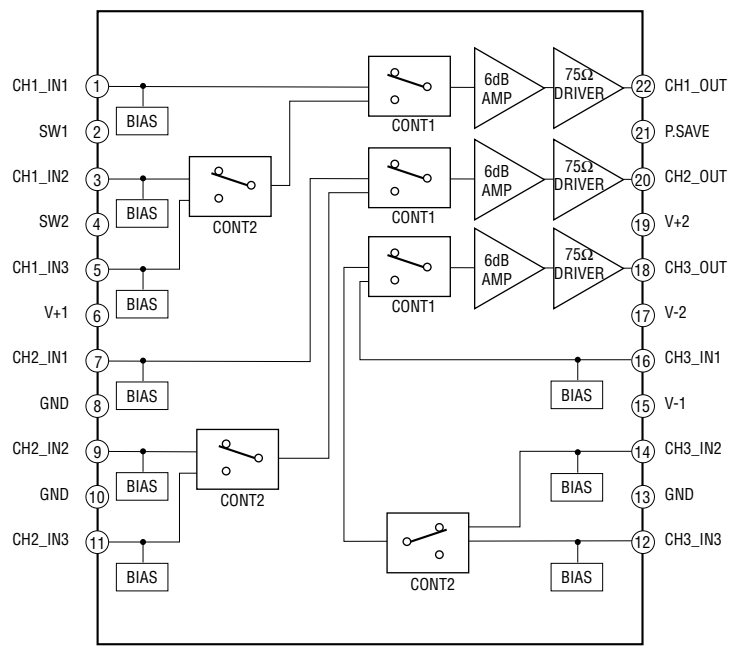

• IC Pin Function Description

DIGITAL BOARD IC1101 MB90488BPF-G-175E1:MX, MB90488BPF-G-193E1: EXCEPT MX (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Description
1	DATAO	I	Audio data signal input from DIR
2	GP9	I	GP9 signal input from DSP
3	BST	O	BST signal output to DSP
4	HCS	O	HCS signal output to DSP
5	HACN	I	HACN signal input from DSP
6	XRST	O	Reset signal output to DSP
7	PM	O	PM signal output to DSP
8	GP12	O	GP12 signal output to DSP
9	FL_LAT	O	FL driver latch signal output
10	PCM1608_RST	O	IC reset signal output to DAC
11	VSS	—	Ground terminal
12	PCM1608_ML	O	Latch signal output to DAC
13	PCM1608_MC	O	Clock signal output to DAC
14	PCM1608_MDI	O	IC data output to DAC
15	PCM1608_MDO	I	IC data input from DAC
16	T.SERIAL_CLK	O	Tuner clock signal output terminal
17	TUNER_DATA	O	Tuner data signal output terminal
18	HDOUT	I	HDOUT signal input from DSP
19	HDIN	O	HDIN signal output to DSP
20	HCLK	O	Clock signal output to DSP
21	TUNING_A	—	Tuning data output (not used)
22	TUNING_B	—	Tuning data output (not used)
23	VCC5	—	Power supply (+3.3V)
24	FL_RESET	O	FL driver reset signal output
25	FL_CLK	O	Not used
26	XM_RST	—	FL driver clock signal output terminal (not used)
27	FLASH2	O	FLASH2 signal output (not used)
28	FLASH1	O	FLASH1 signal output (not used)
29	SDA	I	EEPROM data signal input terminal
30	SCL	O	EEPROM clock signal output terminal
31	ENC_A	I	Input Encoder (A) signal input
32	ENC_B	I	Input Encoder (B) signal input
33	UPCON	—	Not used
34	UPCON_CLK	—	Not used
35	AVCC	—	Analog power supply (+3.3V)
36	AVRH	I	Analog reference voltage input (+3.3V)
37	AVSS	—	Analog ground terminal
38	ADCC	I	ADCC signal input
39	A/D1	I	Function key push signal input
40	A/D2	I	Function key push signal input
41	VERSION	I	Version setting input terminal (DESTINATION)
42	VSS	—	Ground terminal
43	RDS_SIG	I	RDS signal detect input (connected to ground terminal) (not used)
44	MODEL	I	MODEL select input
45	TONE_EN_B	I	Tone control input from rotary encoder.
46	TONE_EN_A	I	Tone control input from rotary encoder.
47	XMDACMS	O	Not used

Pin No.	Pin Name	I/O	Description
48	STOP	I	AC off detect signal input
49	MD0	I	Operation mode setting input
50	MD1	I	Operation mode setting input
51	MD2	I	Operation mode setting input
52	RDS_CLOCK	I	RDS clock signal input (Short to ground terminal)
53	RDS_DATA	I	RDS data signal input (Short to ground terminal)
54	SIRCS	I	Data signal input from the remote control sensor
55	HP_DETECT	I	Headphone signal input
56	POWER_KEY	I	Power switch key detect signal input
57	ADCC_DSP_INT	I	ADCC DSP interrept input
58	POWER_RY	O	Power relay control signal output
59	VOL_CL	O	Volume IC clock signal output
60	VOL_DA	O	Volume IC data and latch signal output
61	PROTECTOR	I	Protector status detect signal input
62	HP_RY	O	Headphone relay control signal output
63	FUSE_DETECT	I	Fuse detect signal input
64	VOL_ENC (B)	I	Volume signal input from rotary encoder
65	VOL_ENC (A)	I	Volume signal input from rotary encoder
66	FRONT_RY	O	Front A speaker relay control signal output
67	SP_B_RY	O	Front B speaker control signal output
68	C/SB_RY	O	Center speaker relay control signal output
69	REAR_RY	O	Rear speaker control signal output
70	SW_RY	O	Sub woofer control signal output
71	ANALOG_SW_CLK	O	Analog switch IC clock signal output
72	BRIGEABLE_RY	O	Brigeable relay control output
73	DO	I	Frequency data signal input from the tuner
74	SLATCH	O	Latch signal output to the tuner
75	TUNED	I	Tuning a frequency signal input from the tuner
76	STEREO	I	Stereo tuning signal input from the tuner
77	RSTX	I	System reset input
78	MUTE	O	Muting signal output to the tuner
79	X1A	—	Not used
80	X0A	—	Ground terminal
81	VSS	—	Ground terminal
82	X0	—	Connection for a crystal resonator
83	X1	—	Connection for a crystal resonator
84	VCC3	—	Power supply (+3.3V)
85	ANALOG_SW_DATA	O	Analog switch IC data output
86	D595_DATA	O	I/O expander data output
87	D595_CLK	O	I/O expander clock output
88	D595_OE	O	I/O expander O/P enable output
89	D595_LAT	O	I/O expander latch signal output
90	SELECT 2	—	Not used
91	SELECT 1	—	Not used
92	BST_SEL	O	BST signal output terminal
93	XMODE	O	Reset signal output to DIR
94	CKSEL 1	O	CKSEL control signal output to DIR
95	CLK	O	Clock signal output to DIR
96	CE	O	Chip enable signal output to DIR

STR-K1500

Pin No.	Pin Name	I/O	Description
97	DI	O	Data signal output to DIR
98	DO	I	Data signal input from DIR
99	ERROR	I	PLL error muting signal input from DIR
100	XSTATE	I	XSTATE data signal input from DIR

SECTION 4 EXPLODED VIEWS


NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Abbreviation
AR : Argentina model
AUS : Australian model.
E51 : Chilean and Peruvian models.
MX : Mexican model.
SP : Singapore model.
SP6 : Singapore and Malaysia models.


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

4-1. FRONT PANEL SECTION

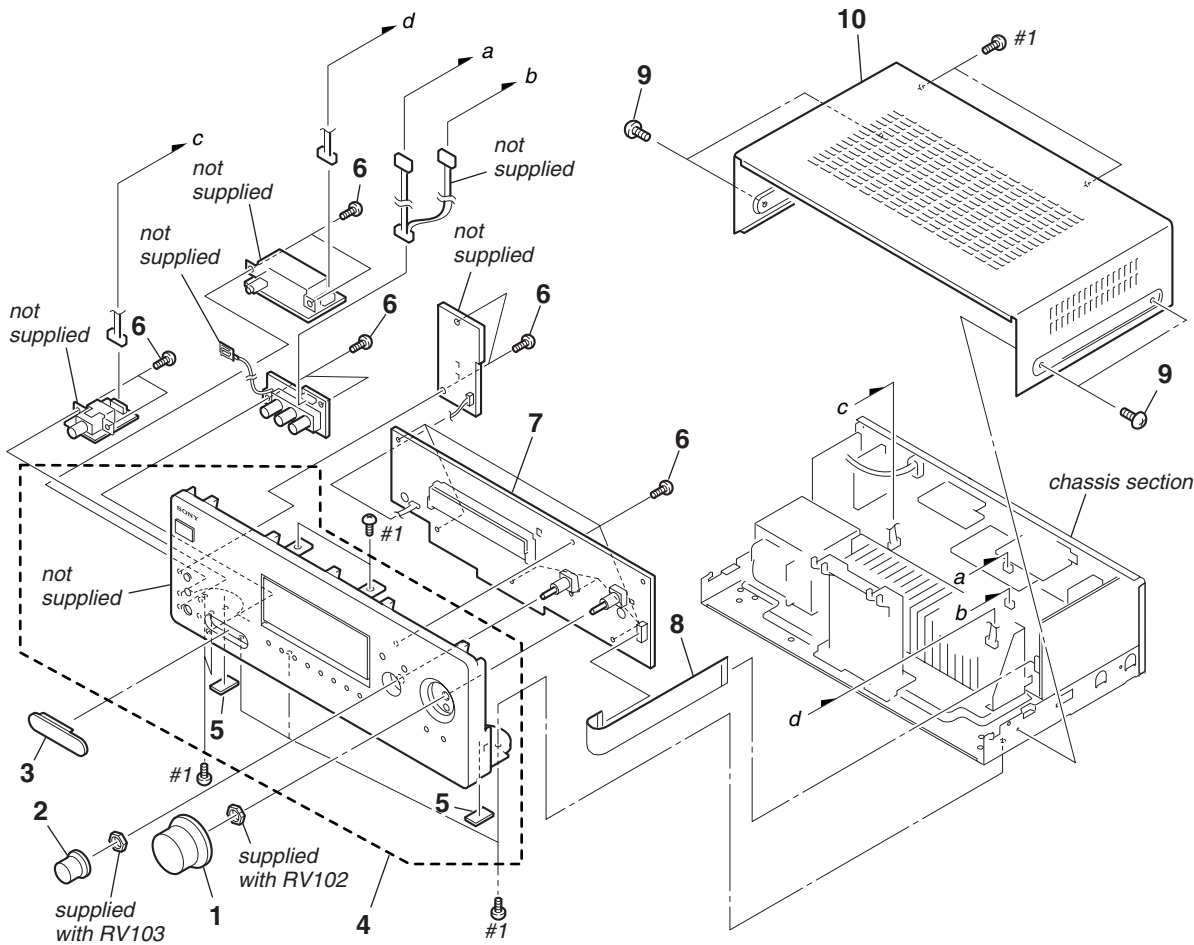

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	2-661-142-11	VOLUME KNOB		7	A-1158-388-A	DISPLAY BOARD, COMPLETE	
2	2-661-141-11	MENU KNOB		8	1-829-023-11	WIRE (FLAT TYPE) (23 CORE)	
3	2-666-844-11	LID		9	3-363-099-11	SCREW (CASE 3 TP2)	
4	X-2103-652-1	FRONT PANEL ASSY (SP, SP6, AUS)		10	2-661-145-31	CASE	
4	X-2109-043-1	FRONT PANEL ASSY (E51, MX, AR)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
5	4-977-358-01	CUSHION					
6	3-087-053-01	+BVTP2.6 (3CR)					

4-2. CHASSIS SECTION

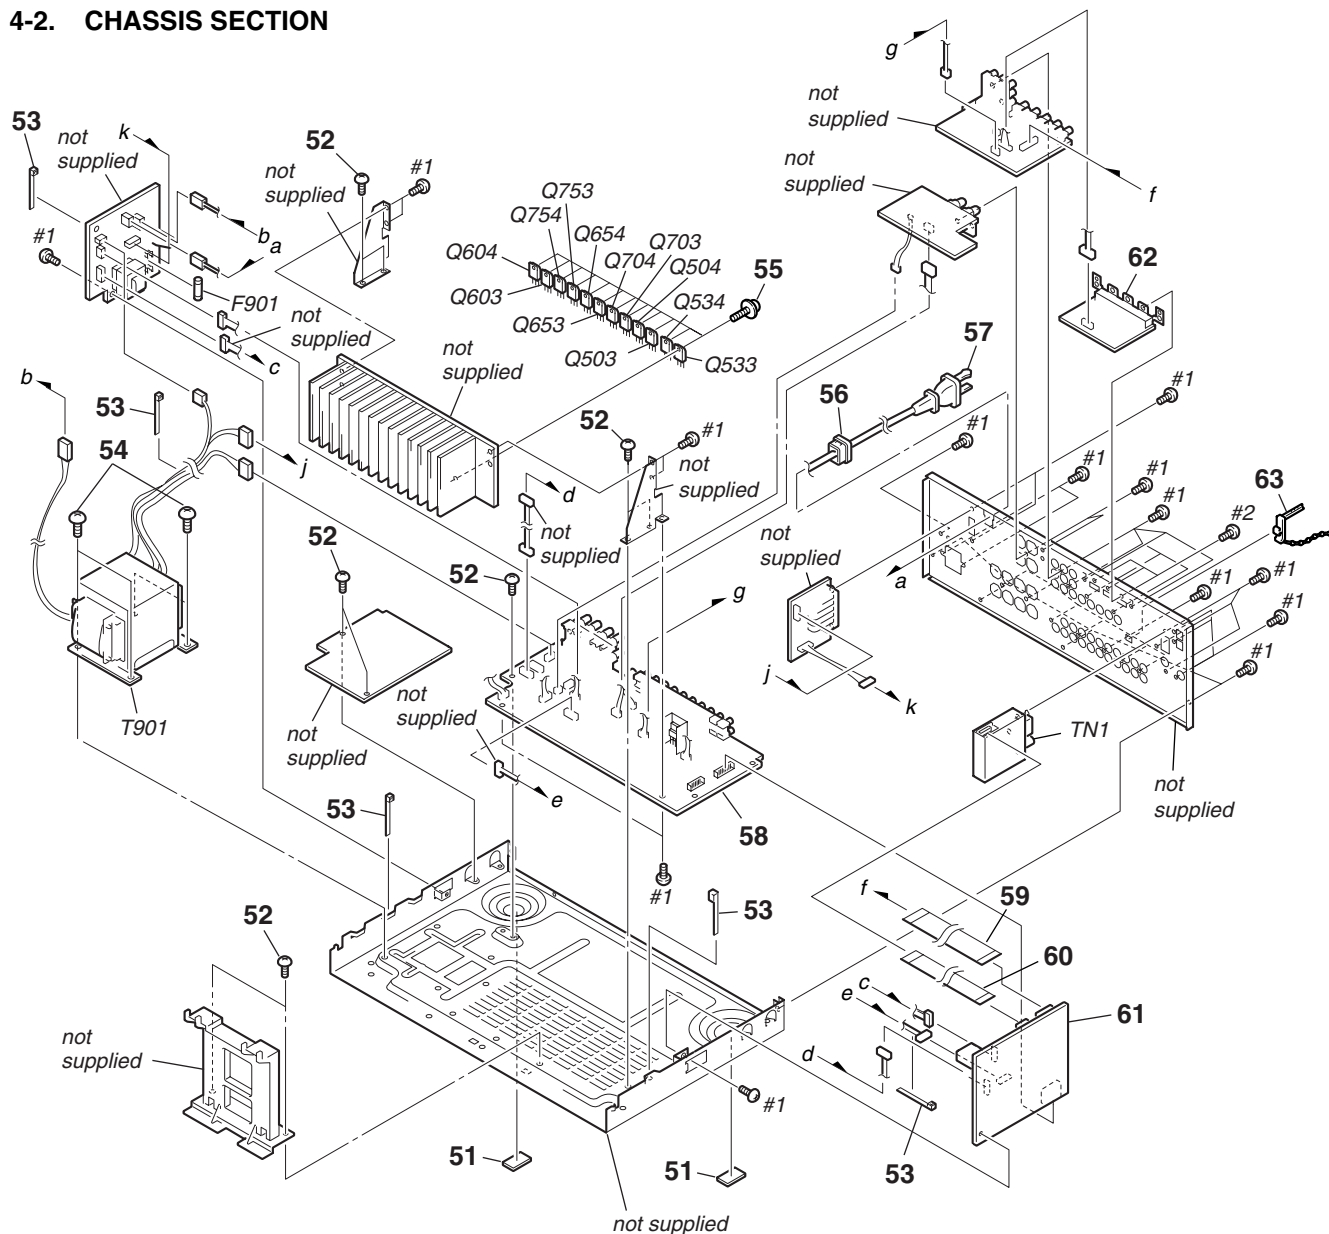

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-977-358-01	CUSHION		△F901	1-532-350-00	FUSE, TIME-LAG (T4AL/250V)(MX)	
52	3-077-331-21	+BV3 (3-CR)		△F901	1-532-464-33	FUSE (T2.5AL/250V)(EXCEPT MX)	
53	3-701-748-00	CLAMP		Q503	6-702-390-01	IC MN2488-OPY-MK	
54	4-249-675-02	+BV SUMITITE S 4X6 ROUND		Q504	6-702-391-01	IC MP1620-OPY-MK	
55	3-905-609-01	SCREW (TRANSISTOR)					
* 56	3-703-244-00	BUSHING (2104), CORD		Q533	6-702-390-01	IC MN2488-OPY-MK	
△ 57	1-696-847-11	CORD, POWER (AUS)		Q534	6-702-391-01	IC MP1620-OPY-MK	
△ 57	1-777-071-22	CORD, POWER (E51)		Q603	6-702-390-01	IC MN2488-OPY-MK	
△ 57	1-777-071-83	CORD, POWER (SP, SP6, AR)		Q604	6-702-391-01	IC MP1620-OPY-MK	
△ 57	1-829-627-11	POWER-SUPPLY CORD (MX)		Q653	6-702-390-01	IC MN2488-OPY-MK	
58	A-1161-241-A	MAIN BOARD, COMPLETE (SP, SP6, AUS, AR)		Q654	6-702-391-01	IC MP1620-OPY-MK	
58	A-1161-602-A	MAIN BOARD, COMPLETE (E51, MX)		Q703	6-702-390-01	IC MN2488-OPY-MK	
59	1-828-993-11	WIRE (FLAT TYPE) (17 CORE)		Q704	6-702-391-01	IC MP1620-OPY-MK	
60	1-828-963-11	WIRE (FLAT TYPE) (11 CORE)		Q753	6-702-390-01	IC MN2488-OPY-MK	
61	A-1158-877-A	DIGITAL BOARD, COMPLETE (SP, SP6)		Q754	6-702-391-01	IC MP1620-OPY-MK	
61	A-1158-878-A	DIGITAL BOARD, COMPLETE (AUS)		△ T901	1-443-523-11	POWER TRANSFORMER (MX)	
61	A-1158-879-A	DIGITAL BOARD, COMPLETE (E51)		△ T901	1-443-525-11	POWER TRANSFORMER (SP, SP6, AUS, AR)	
61	A-1158-880-A	DIGITAL BOARD, COMPLETE (MX)		△ T901	1-443-526-11	POWER TRANSFORMER (E51)	
61	A-1206-653-A	DIGITAL BOARD, COMPLETE (AR)		TN1	1-693-675-11	TUNER (E51, MX)	
62	A-1158-394-A	HDMI BOARD, COMPLETE (SP, SP6, AUS)		TN2	1-693-678-11	TUNER (SP, SP6, AUS, AR)	
63	4-956-370-12	BAND, PLUG FIXED (AUS)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
				#2	7-682-547-04	SCREW +B 3X6 (SP, SP6, AUS)	

SECTION 5
ELECTRICAL PARTS LIST

AC SELECT

ADCC

DIGITAL

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- COILS
uH: μ H

- CAPACITORS
uF: μ F
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . : μ A. . uPA. . : μ PA. .
uPB. . : μ PB. . uPC. . : μ PC. .
uPD. . : μ PD. .

When indicating parts by reference number, please include the board name.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

- Abbreviation
AR : Argentina model.
AUS : Australian model.
E51 : Chilean and Peruvian models.
MX : Mexican model.
SP : Singapore model.
SP6 : Singapore and Malaysia models.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		AC SELECT BOARD (E51)		R2003	1-249-429-11	CARBON 10K 5%	1/4W
		*****		R2005	1-247-903-00	CARBON 1M 5%	1/4W
		< CONNECTOR >		R2006	1-247-831-91	CARBON 1K 5%	1/4W
* CNP910	1-564-687-11	PIN, CONNECTOR (3.96mm PITCH) 3P		R2007	1-249-429-11	CARBON 10K 5%	1/4W
		< SWITCH >		R2008	1-247-897-11	CARBON 560K 5%	1/4W
$\triangle$ S901	1-571-437-21	SWITCH, POWER VOLTAGE CHANGE (VOLTAGE SELECTOR)		R2010	1-249-429-11	CARBON 10K 5%	1/4W
		*****		R2015	1-249-435-11	CARBON 33K 5%	1/4W
		ADCC BOARD		R2016	1-249-431-11	CARBON 15K 5%	1/4W
		*****		R2017	1-249-421-11	CARBON 2.2K 5%	1/4W
		< CAPACITOR >		R2018	1-249-418-11	CARBON 1.2K 5%	1/4W
C2001	1-128-809-11	CERAMIC 100PF 5% 50V		R2019	1-249-421-11	CARBON 2.2K 5%	1/4W
C2002	1-126-160-11	ELECT 1uF 20% 50V				*****	
C2003	1-127-882-31	CERAMIC 0.033uF 10% 50V		A-1158-877-A	DIGITAL BOARD, COMPLETE (SP, SP6)		
C2005	1-128-803-11	CERAMIC 33PF 5% 50V		A-1158-878-A	DIGITAL BOARD, COMPLETE (AUS)		
C2006	1-126-160-11	ELECT 1uF 20% 50V		A-1158-879-A	DIGITAL BOARD, COMPLETE (E51)		
C2008	1-128-806-11	CERAMIC 56PF 5% 50V		A-1158-880-A	DIGITAL BOARD, COMPLETE (MX)		
C2010	1-127-882-31	CERAMIC 0.033uF 10% 50V		A-1206-653-A	DIGITAL BOARD, COMPLETE (AR)		
C2011	1-127-880-11	CERAMIC 0.022uF 10% 50V				*****	
C2012	1-127-880-11	CERAMIC 0.022uF 10% 50V		7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3		
C2013	1-126-160-11	ELECT 1uF 20% 50V				< CAPACITOR >	
C2014	1-124-465-00	ELECT 0.47uF 20% 50V		C1001	1-126-925-91	ELECT 470uF 20% 10V	
C2018	1-127-888-11	CERAMIC 0.1uF 10% 50V		C1002	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
		< CONNECTOR >		C1004	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
CNP2000	1-784-921-11	PIN, CONNECTOR 4P		C1005	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
		< DIODE >		C1021	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
D2013	8-719-991-33	DIODE 1SS133T-72		C1022	1-126-925-91	ELECT 470uF 20% 10V	
D2014	8-719-991-33	DIODE 1SS133T-72		C1031	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
		< IC >		C1032	1-126-925-91	ELECT 470uF 20% 10V	
IC2000	8-759-167-88	IC NJM4565D		C1100	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
		< JACK >		C1102	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
J2000	1-820-056-11	SMALL TYPE JACK (AUTO CAL MIC)		C1103	1-126-947-11	ELECT 47uF 20% 35V	
		< RESISTOR >		C1104	1-216-864-11	SHORT CHIP 0	
R2000	1-247-831-91	CARBON 1K 5% 1/4W		C1105	1-216-864-11	SHORT CHIP 0	
R2001	1-249-429-11	CARBON 10K 5% 1/4W		C1107	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1108	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1118	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1119	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1120	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C1121	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1122	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1123	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1124	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C1129	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C1130	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
				C1131	1-162-974-11	CERAMIC CHIP 0.01uF 50V	

DIGITAL

Ref. No.	Part No.	Description	Remark		Ref. No.	Part No.	Description	Remark	
C1132	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1441	1-162-963-11	CERAMIC CHIP	680PF	10% 50V
C1137	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V	C1442	1-162-961-11	CERAMIC CHIP	330PF	10% 50V
C1138	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V					
C1139	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1448	1-126-964-11	ELECT	10uF	20% 50V
C1140	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1450	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
					C1451	1-162-963-11	CERAMIC CHIP	680PF	10% 50V
C1142	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1453	1-162-961-11	CERAMIC CHIP	330PF	10% 50V
C1144	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1454	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1145	1-162-974-11	CERAMIC CHIP	0.01uF	50V					
C1146	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1457	1-126-964-11	ELECT	10uF	20% 50V
C1149	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	C1458	1-126-964-11	ELECT	10uF	20% 50V
					C1460	1-126-964-11	ELECT	10uF	20% 50V
C1171	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1462	1-162-963-11	CERAMIC CHIP	680PF	10% 50V
C1172	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1463	1-162-961-11	CERAMIC CHIP	330PF	10% 50V
C1251	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V					
C1252	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1468	1-126-964-11	ELECT	10uF	20% 50V
C1253	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1472	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
					C1473	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1254	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	C1478	1-126-964-11	ELECT	10uF	20% 50V
C1255	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	C1481	1-162-961-11	CERAMIC CHIP	330PF	10% 50V
C1299	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V					
C1301	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1483	1-162-963-11	CERAMIC CHIP	680PF	10% 50V
C1302	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1487	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
					C1491	1-126-964-11	ELECT	10uF	20% 50V
C1303	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1494	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1304	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1495	1-162-960-11	CERAMIC CHIP	220PF	10% 50V
C1305	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V					
C1306	1-126-947-11	ELECT	47uF	20% 35V	C1501	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1308	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1502	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
					C1503	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1309	1-162-918-11	CERAMIC CHIP	18PF	5% 50V	C1504	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1310	1-162-918-11	CERAMIC CHIP	18PF	5% 50V	C1505	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1312	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V					
C1313	1-162-927-11	CERAMIC CHIP	100PF	5% 50V	C1506	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1314	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1507	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
					C1508	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1315	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1509	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1351	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1510	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1354	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V					
C1355	1-104-662-91	ELECT	22uF	20% 25V	C1511	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1357	1-162-905-11	CERAMIC CHIP	1PF	0.25PF 50V	C1513	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
					C1514	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1358	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1515	1-126-925-91	ELECT	470uF	20% 10V
C1359	1-126-916-11	ELECT	1000uF	20% 6.3V	C1516	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1360	1-162-923-11	CERAMIC CHIP	47PF	5% 50V					
C1361	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1517	1-126-925-91	ELECT	470uF	20% 10V
C1362	1-162-974-11	CERAMIC CHIP	0.01uF	50V	C1518	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
					C1519	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1401	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1520	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1402	1-126-947-11	ELECT	47uF	20% 35V	C1521	1-162-920-11	CERAMIC CHIP	27PF	5% 50V
C1403	1-126-964-11	ELECT	10uF	20% 50V					
C1404	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1522	1-162-920-11	CERAMIC CHIP	27PF	5% 50V
C1405	1-162-962-11	CERAMIC CHIP	470PF	10% 50V	C1525	1-126-925-91	ELECT	470uF	20% 10V
					C1540	1-216-833-11	METAL CHIP	10K	5% 1/10W
C1406	1-126-963-11	ELECT	4.7uF	20% 50V	C1543	1-216-833-11	METAL CHIP	10K	5% 1/10W
C1407	1-126-963-11	ELECT	4.7uF	20% 50V	C1544	1-216-833-11	METAL CHIP	10K	5% 1/10W
C1408	1-162-962-11	CERAMIC CHIP	470PF	10% 50V					
C1409	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V	C1545	1-216-833-11	METAL CHIP	10K	5% 1/10W
C1411	1-162-963-11	CERAMIC CHIP	680PF	10% 50V	C1547	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
					C1557	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
C1413	1-162-961-11	CERAMIC CHIP	330PF	10% 50V	C1566	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
C1418	1-126-964-11	ELECT	10uF	20% 50V	C1567	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
C1422	1-162-963-11	CERAMIC CHIP	680PF	10% 50V					
C1423	1-162-961-11	CERAMIC CHIP	330PF	10% 50V	C1568	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
C1428	1-126-964-11	ELECT	10uF	20% 50V	C1569	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V
					C1601	1-162-974-11	CERAMIC CHIP	0.01uF	50V
C1432	1-162-963-11	CERAMIC CHIP	680PF	10% 50V	C1602	1-162-927-11	CERAMIC CHIP	100PF	5% 50V
C1433	1-162-961-11	CERAMIC CHIP	330PF	10% 50V	C1604	1-100-566-91	CERAMIC CHIP	0.1uF	10% 25V
C1438	1-126-964-11	ELECT	10uF	20% 50V					

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C1605	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	IC1301	8-759-825-15	IC LC89056W-E			
C1620	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	IC1303	8-759-242-70	IC TC7WU04F (TE12R)			
C1905	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	IC1351	6-600-466-01	IC TORX147L (VIDEO 2/OPTICAL)			
C1906	1-126-925-91	ELECT	470uF	20%	10V	IC1354	6-600-466-01	IC TORX147L (VIDEO 1/OPTICAL)			
C1908	1-126-925-91	ELECT	470uF	20%	10V						
C1913	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	IC1401	8-759-560-56	IC PCM1800E/2K			
C1914	1-126-947-11	ELECT	47uF	20%	35V	IC1403	8-759-710-97	IC NJM4565M (TE2)			
C2216	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	IC1404	8-759-710-97	IC NJM4565M (TE2)			
C2217	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	IC1405	8-759-710-97	IC NJM4565M (TE2)			
C2218	1-126-947-11	ELECT	47uF	20%	35V	IC1406	8-759-710-97	IC NJM4565M (TE2)			
< CONNECTOR >						IC1452	6-708-785-01	IC PCM1609APT			
CNP503	1-784-922-11	PIN, CONNECTOR 5P				IC1501	6-705-900-01	IC CXD9718BQ			
CNP504	1-784-923-11	PIN, CONNECTOR 7P				IC1502	6-709-278-01	IC IS61WV6416BLL-12TLI			
CNP505	1-784-925-11	PIN, CONNECTOR 10P				IC1503	8-759-546-74	IC TC7WH157FU (TE12R)			
CNS501	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P				IC1601	8-759-268-29	IC SN74HC595ANSR			
CNS502	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P									
CNS504	1-568-828-11	CONNECTOR, FFC 9P				IC1602	8-759-268-29	IC SN74HC595ANSR			
CNS505	1-784-784-11	CONNECTOR, FFC 23P				IC1901	6-701-887-02	IC SI-3004KWf			
CNS508	1-568-830-11	CONNECTOR, FFC 11P				IC1902	6-703-550-01	IC TA7809LS			
CNS509	1-784-778-11	CONNECTOR, FFC 17P				IC1904	6-705-463-01	IC BA33BC0T			
< DIODE >						< JACK >					
D1001	8-719-053-18	DIODE 1SR154-400TE-25				J1301	1-794-972-11	JACK, PIN 1P (DVD IN/COAXIAL)			
D1003	8-719-049-09	DIODE 1SS367-T3SONY				< JUMPER RESISTOR >					
D1004	8-719-049-09	DIODE 1SS367-T3SONY				JR1005	1-216-864-11	SHORT CHIP	0		
D1107	8-719-988-61	DIODE 1SS355TE-17				JR1008	1-216-864-11	SHORT CHIP	0		
D1108	8-719-988-61	DIODE 1SS355TE-17				JR1015	1-211-950-11	SHORT CHIP	0		
D1110	8-719-988-61	DIODE 1SS355TE-17				JR1016	1-211-950-11	SHORT CHIP	0		
D1111	8-719-988-61	DIODE 1SS355TE-17				JR1019	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
D1301	8-719-988-61	DIODE 1SS355TE-17				JR1020	1-216-864-11	SHORT CHIP	0		
D1302	8-719-988-61	DIODE 1SS355TE-17				JR1104	1-216-864-11	SHORT CHIP	0		
D1501	8-719-049-09	DIODE 1SS367-T3SONY				JR1202	1-216-864-11	SHORT CHIP	0		
D1502	8-719-049-09	DIODE 1SS367-T3SONY				JR1207	1-211-950-11	SHORT CHIP	0		
D1503	8-719-049-09	DIODE 1SS367-T3SONY				JR1302	1-216-864-11	SHORT CHIP	0		
D1504	8-719-049-09	DIODE 1SS367-T3SONY				JR1303	1-216-864-11	SHORT CHIP	0		
< FERRITE BEAD >						JR1511	1-469-710-21	FERRITE, EMI (SMD) (2012)			
FB1101	1-469-710-21	FERRITE, EMI (SMD) (2012)				< RESISTOR >					
FB1302	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1010	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1305	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1011	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1306	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1012	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1308	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1013	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1405	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1014	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1452	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1015	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1453	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1016	1-216-809-11	METAL CHIP	100	5%	1/10W
FB1501	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1035	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
FB1502	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1039	1-216-833-11	METAL CHIP	10K	5%	1/10W
FB1503	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1041	1-216-809-11	METAL CHIP	100	5%	1/10W
FB2034	1-469-710-21	FERRITE, EMI (SMD) (2012)				R1042	1-216-809-11	METAL CHIP	100	5%	1/10W
< IC >						R1044	1-216-809-11	METAL CHIP	100	5%	1/10W
IC1001	8-759-231-53	IC TA7805S				R1049	1-216-833-11	METAL CHIP	10K	5%	1/10W
IC1031	6-705-464-01	IC BA50BC0T				R1061	1-216-809-11	METAL CHIP	100	5%	1/10W
IC1101	6-806-144-01	IC MB90488BPF-G-175E1 (MX)				R1062	1-216-809-11	METAL CHIP	100	5%	1/10W
IC1101	6-806-529-01	IC MB90488BPF-G-193E1 (EXCEPT MX)				R1063	1-216-809-11	METAL CHIP	100	5%	1/10W
IC1111	6-702-913-01	IC S-80929CNMC-G82T2G				R1065	1-216-809-11	METAL CHIP	100	5%	1/10W
IC1131	6-705-866-01	IC BR24L16FJ-WE2				R1066	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1067	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1068	1-216-809-11	METAL CHIP	100	5%	1/10W

STR-K1500

Ver. 1.2

DIGITAL

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R1072	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R1159	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1073	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R1160	1-216-809-11	METAL CHIP	100	5%	1/10W
R1076	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1077	1-216-809-11	METAL CHIP	100	5%	1/10W	R1161	1-216-809-11	METAL CHIP	100	5%	1/10W
R1078	1-216-809-11	METAL CHIP	100	5%	1/10W	R1162	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1163	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1081	1-216-809-11	METAL CHIP	100	5%	1/10W	R1164	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1082	1-216-809-11	METAL CHIP	100	5%	1/10W	R1179	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1083	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R1084	1-216-809-11	METAL CHIP	100	5%	1/10W	R1180	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1088	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1181	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1182	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1094	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1183	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1095	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1184	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1096	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R1097	1-216-845-11	METAL CHIP	100K	5%	1/10W	R1185	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1103	1-216-864-11	SHORT CHIP	0			R1186	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1187	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1188	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1106	1-216-809-11	METAL CHIP	100	5%	1/10W	R1189	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1107	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R1108	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1190	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1109	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1191	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1192	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1110	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1193	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1111	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R1112	1-216-809-11	METAL CHIP	100	5%	1/10W	R1193	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1113	1-216-809-11	METAL CHIP	100	5%	1/10W						(E51)
R1114	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						(AUS)
R1115	1-216-809-11	METAL CHIP	100	5%	1/10W	R1193	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1116	1-216-809-11	METAL CHIP	100	5%	1/10W						(SP, SP6, MX, AR)
R1117	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1194	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1118	1-216-821-11	METAL CHIP	1K	5%	1/10W						(SP, SP6)
R1119	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1194	1-216-841-11	METAL CHIP	47K	5%	1/10W
											(EXCEPT SP, SP6)
R1120	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1201	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1121	1-216-809-11	METAL CHIP	100	5%	1/10W	R1251	1-216-840-11	METAL CHIP	39K	5%	1/10W
R1122	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1123	1-216-809-11	METAL CHIP	100	5%	1/10W	R1252	1-216-840-11	METAL CHIP	39K	5%	1/10W
R1124	1-216-809-11	METAL CHIP	100	5%	1/10W	R1260	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R1261	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1125	1-216-809-11	METAL CHIP	100	5%	1/10W	R1301	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R1126	1-216-809-11	METAL CHIP	100	5%	1/10W	R1302	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1127	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1128	1-216-809-11	METAL CHIP	100	5%	1/10W	R1303	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1129	1-216-809-11	METAL CHIP	100	5%	1/10W	R1304	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1305	1-216-819-11	METAL CHIP	680	5%	1/10W
R1130	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1306	1-216-801-11	METAL CHIP	22	5%	1/10W
R1134	1-216-809-11	METAL CHIP	100	5%	1/10W	R1307	1-216-809-11	METAL CHIP	100	5%	1/10W
R1135	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1136	1-216-809-11	METAL CHIP	100	5%	1/10W	R1308	1-216-809-11	METAL CHIP	100	5%	1/10W
R1137	1-216-809-11	METAL CHIP	100	5%	1/10W	R1309	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1310	1-216-857-11	METAL CHIP	1M	5%	1/10W
R1140	1-216-809-11	METAL CHIP	100	5%	1/10W	R1311	1-216-809-11	METAL CHIP	100	5%	1/10W
R1142	1-216-809-11	METAL CHIP	100	5%	1/10W	R1312	1-216-809-11	METAL CHIP	100	5%	1/10W
R1143	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1144	1-216-809-11	METAL CHIP	100	5%	1/10W	R1313	1-216-809-11	METAL CHIP	100	5%	1/10W
R1149	1-216-809-11	METAL CHIP	100	5%	1/10W	R1314	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1315	1-216-809-11	METAL CHIP	100	5%	1/10W
R1150	1-216-809-11	METAL CHIP	100	5%	1/10W	R1316	1-216-809-11	METAL CHIP	100	5%	1/10W
R1151	1-216-809-11	METAL CHIP	100	5%	1/10W	R1318	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1152	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1153	1-216-809-11	METAL CHIP	100	5%	1/10W	R1319	1-216-864-11	SHORT CHIP	0		
R1154	1-216-809-11	METAL CHIP	100	5%	1/10W	R1321	1-216-864-11	SHORT CHIP	0		
						R1323	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1155	1-216-809-11	METAL CHIP	100	5%	1/10W	R1351	1-216-809-11	METAL CHIP	100	5%	1/10W
R1156	1-216-864-11	SHORT CHIP	0			R1354	1-216-809-11	METAL CHIP	100	5%	1/10W
R1157	1-216-864-11	SHORT CHIP	0								
						R1355	1-218-285-11	METAL CHIP	75	5%	1/10W

DIGITAL

DISPLAY

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R1356	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1513	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1357	1-216-837-11	METAL CHIP	22K	5%	1/10W	R1514	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1358	1-216-854-11	METAL CHIP	560K	5%	1/10W	R1515	1-216-857-11	METAL CHIP	1M	5%	1/10W
R1359	1-216-809-11	METAL CHIP	100	5%	1/10W	R1523	1-216-813-11	METAL CHIP	220	5%	1/10W
R1360	1-216-809-11	METAL CHIP	100	5%	1/10W	R1524	1-216-864-11	SHORT CHIP	0		
R1362	1-216-809-11	METAL CHIP	100	5%	1/10W	R1530	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1401	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1541	1-216-813-11	METAL CHIP	220	5%	1/10W
R1402	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1555	1-216-813-11	METAL CHIP	220	5%	1/10W
R1403	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1556	1-216-809-11	METAL CHIP	100	5%	1/10W
R1407	1-216-809-11	METAL CHIP	100	5%	1/10W	R1557	1-216-813-11	METAL CHIP	220	5%	1/10W
R1414	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R1570	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1416	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1571	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1420	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	R1572	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1421	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R1573	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1424	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R1574	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1425	1-216-864-11	SHORT CHIP	0			R1635	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1426	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1636	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1434	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	< COMPOSITION CIRCUIT BLOCK >					
R1435	1-216-864-11	SHORT CHIP	0			RB1500	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1436	1-216-821-11	METAL CHIP	1K	5%	1/10W	RB1501	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1444	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	RB1502	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1445	1-216-864-11	SHORT CHIP	0			RB1503	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1446	1-216-821-11	METAL CHIP	1K	5%	1/10W	RB1504	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1454	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	RB1506	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1455	1-216-864-11	SHORT CHIP	0			RB1507	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1460	1-216-864-11	SHORT CHIP	0			RB1508	1-233-576-11	RES, CHIP NETWORK	100	(3216)	
R1461	1-216-864-11	SHORT CHIP	0			< VIBRATOR >					
R1463	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	X1101	1-813-448-21	PIEZOELECTRIC OSCILLATOR (24MHz)			
R1464	1-216-864-11	SHORT CHIP	0			X1301	1-795-126-21	VIBRATOR, CRYSTAL (12.288MHz)			
R1466	1-216-821-11	METAL CHIP	1K	5%	1/10W	X1502	1-813-276-21	QUARTZ CRYSTAL (13.9MHz)			
R1470	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	*****					
R1471	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	A-1158-388-A	DISPLAY BOARD, COMPLETE				
R1472	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	*****					
R1473	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	< CAPACITOR >					
R1474	1-216-833-11	METAL CHIP	10K	5%	1/10W	C100	1-127-888-11	CERAMIC	0.1uF	10%	50V
R1475	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C101	1-127-888-11	CERAMIC	0.1uF	10%	50V
R1476	1-216-821-11	METAL CHIP	1K	5%	1/10W	C104	1-113-342-11	CERAMIC	0.1uF		50V
R1483	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C105	1-126-795-11	ELECT	10uF	20%	50V
R1484	1-216-864-11	SHORT CHIP	0			C106	1-127-868-11	CERAMIC	2200PF	10%	50V
R1486	1-216-821-11	METAL CHIP	1K	5%	1/10W	C107	1-127-868-11	CERAMIC	2200PF	10%	50V
R1490	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C108	1-127-888-11	CERAMIC	0.1uF	10%	50V
R1491	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C109	1-127-888-11	CERAMIC	0.1uF	10%	50V
R1492	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C110	1-162-286-31	CERAMIC	220PF	10%	50V
R1493	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C111	1-162-286-31	CERAMIC	220PF	10%	50V
R1494	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C112	1-162-286-31	CERAMIC	220PF	10%	50V
R1495	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C114	1-135-798-11	CERAMIC	0.22uF		50V
R1501	1-216-809-11	METAL CHIP	100	5%	1/10W	C115	1-126-795-11	ELECT	10uF	20%	50V
R1502	1-216-809-11	METAL CHIP	100	5%	1/10W	C132	1-162-286-31	CERAMIC	220PF	10%	50V
R1503	1-216-813-11	METAL CHIP	220	5%	1/10W	C133	1-162-286-31	CERAMIC	220PF	10%	50V
R1504	1-216-809-11	METAL CHIP	100	5%	1/10W	C134	1-162-286-31	CERAMIC	220PF	10%	50V
R1505	1-216-809-11	METAL CHIP	100	5%	1/10W	C135	1-162-286-31	CERAMIC	220PF	10%	50V
R1506	1-216-809-11	METAL CHIP	100	5%	1/10W	C136	1-162-286-31	CERAMIC	220PF	10%	50V
R1507	1-216-809-11	METAL CHIP	100	5%	1/10W	C137	1-162-286-31	CERAMIC	220PF	10%	50V
R1508	1-216-809-11	METAL CHIP	100	5%	1/10W	C138	1-162-286-31	CERAMIC	220PF	10%	50V
R1509	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1510	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1511	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1512	1-216-821-11	METAL CHIP	1K	5%	1/10W						

STR-K1500

Ver. 1.1

DISPLAY HDMI

Ref. No.	Part No.	Description	Remark		
C139	1-162-286-31	CERAMIC	220PF	10%	50V
C140	1-162-286-31	CERAMIC	220PF	10%	50V
C141	1-162-286-31	CERAMIC	220PF	10%	50V
C142	1-162-286-31	CERAMIC	220PF	10%	50V
C143	1-162-286-31	CERAMIC	220PF	10%	50V
C144	1-127-888-11	CERAMIC	0.1uF	10%	50V
C145	1-127-888-11	CERAMIC	0.1uF	10%	50V
C146	1-126-795-11	ELECT	10uF	20%	50V
C147	1-162-286-31	CERAMIC	220PF	10%	50V
C148	1-162-286-31	CERAMIC	220PF	10%	50V
C149	1-162-286-31	CERAMIC	220PF	10%	50V
C150	1-127-888-11	CERAMIC	0.1uF	10%	50V
C151	1-127-888-11	CERAMIC	0.1uF	10%	50V
C152	1-127-888-11	CERAMIC	0.1uF	10%	50V
< CONNECTOR >					
CNS100	1-784-784-11	CONNECTOR, FFC 23P			
< DIODE >					
D105	6-500-647-01	DIODE SEL5E20C-STP15			
< FLUORESCENT INDICATOR TUBE >					
FL101	1-519-866-01	VACUUM FLOURESCENT DISPLAYS			
< IC >					
IC100	8-759-643-83	IC PT6315			
IC101	8-759-036-90	IC MC74ACT08N			
IC102	6-600-174-01	IC RPM7240-H4			
< TRANSISTOR >					
Q110	8-729-119-78	TRANSISTOR	2SC1740S-QRT		
< RESISTOR >					
R101	1-249-409-11	CARBON	220	5%	1/4W
R102	1-249-411-11	CARBON	330	5%	1/4W
R103	1-249-413-11	CARBON	470	5%	1/4W
R104	1-249-415-11	CARBON	680	5%	1/4W
R105	1-247-831-91	CARBON	1K	5%	1/4W
R106	1-249-419-11	CARBON	1.5K	5%	1/4W
R107	1-249-421-11	CARBON	2.2K	5%	1/4W
R108	1-249-409-11	CARBON	220	5%	1/4W
R109	1-249-411-11	CARBON	330	5%	1/4W
R110	1-249-413-11	CARBON	470	5%	1/4W
R111	1-249-415-11	CARBON	680	5%	1/4W
R115	1-247-807-31	CARBON	100	5%	1/4W
R116	1-247-807-31	CARBON	100	5%	1/4W
R117	1-247-807-31	CARBON	100	5%	1/4W
R118	1-249-440-11	CARBON	82K	5%	1/4W
R119	1-247-807-31	CARBON	100	5%	1/4W
△R120	1-249-393-11	CARBON	10	5%	1/4W
R121	1-249-393-11	CARBON	10	5%	1/4W
R122	1-247-804-11	CARBON	75	5%	1/4W
R123	1-249-429-11	CARBON	10K	5%	1/4W
R131	1-249-421-11	CARBON	2.2K	5%	1/4W
△R198	1-249-381-11	CARBON	1	5%	1/4W
△R199	1-249-381-11	CARBON	1	5%	1/4W

Ref. No.	Part No.	Description	Remark		
< VARIABLE RESISTOR >					
RV101	1-418-817-11	ENCODER, ROTARY (INPUT SELECTOR)			
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE)	(MASTER VOLUME)		
< SWITCH >					
S101	1-771-410-21	SWITCH, TACTILE (MUTING)			
S102	1-771-410-21	SWITCH, TACTILE (MULTI CH IN)			
S103	1-771-410-21	SWITCH, TACTILE (INPUT MODE)			
S104	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
S105	1-771-410-21	SWITCH, TACTILE (MOVIE)			
S106	1-771-410-21	SWITCH, TACTILE (A. F. D.)			
S107	1-771-410-21	SWITCH, TACTILE (2CH)			
S108	1-771-410-21	SWITCH, TACTILE (MEMORY/ ENTER)			
S109	1-771-410-21	SWITCH, TACTILE (TUNING -)			
S110	1-771-410-21	SWITCH, TACTILE (TUNING MODE)			
S111	1-771-410-21	SWITCH, TACTILE (TUNING +)			
S124	1-771-410-21	SWITCH, TACTILE (MUSIC)			

A-1158-394-A		HDMI BOARD, COMPLETE (SP, SP6, AUS)			

< CAPACITOR >					
C5001	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5002	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5003	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5004	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5005	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5006	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5007	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5008	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5009	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5010	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5011	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5012	1-117-681-11	ELECT CHIP	100uF	20%	16V
C5013	1-128-934-91	CERAMIC CHIP	0.33uF	20%	10V
C5014	1-126-246-11	ELECT CHIP	220uF	20%	4V
C5015	1-128-994-21	ELECT CHIP	47uF	20%	10V
C5016	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5017	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5018	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5019	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5020	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5021	1-117-681-11	ELECT CHIP	100uF	20%	16V
C5022	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5023	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5024	1-128-934-91	CERAMIC CHIP	0.33uF	20%	10V
C5027	1-128-994-21	ELECT CHIP	47uF	20%	10V
< CONNECTOR >					
CN5001	1-818-086-41	HDMI CONNECTOR (DVD IN/ASSIGNABLE)			
CN5002	1-818-086-41	HDMI CONNECTOR (VIDEO 2 IN/ASSIGNABLE)			
CN5003	1-818-086-41	HDMI CONNECTOR (MONITOR OUT)			
* CN5004	1-770-470-21	PIN, CONNECTOR (PC BOARD) 6P			

HDMI

HEADPHONE

MAIN

Ref. No.	Part No.	Description	Remark			
		< IC >				
IC5001	6-709-221-01	IC TMD5341PFCR				
IC5002	6-705-337-01	IC TK11150CSCL-G				
IC5003	6-705-468-01	IC BA33BC0FP-E2				
IC5004	6-704-351-01	IC SN74LVC2G08DCUR				
IC5005	6-707-207-01	IC SN74LVC1G3157DCKR				
IC5006	6-706-740-01	IC BA00BC0WFP-E2				
		< COIL >				
L5013	1-400-862-11	BEAD, FERRITE				
		< RESISTOR >				
R5001	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W	
R5002	1-218-844-11	METAL CHIP	750	0.5%	1/10W	
R5003	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5004	1-216-864-11	SHORT CHIP	0			
R5005	1-216-864-11	SHORT CHIP	0			
R5006	1-216-864-11	SHORT CHIP	0			
R5007	1-216-864-11	SHORT CHIP	0			
R5008	1-216-864-11	SHORT CHIP	0			
R5009	1-216-864-11	SHORT CHIP	0			
R5010	1-216-864-11	SHORT CHIP	0			
R5011	1-216-864-11	SHORT CHIP	0			
R5014	1-216-864-11	SHORT CHIP	0			
R5015	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R5016	1-216-864-11	SHORT CHIP	0			
R5017	1-216-864-11	SHORT CHIP	0			
R5018	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R5019	1-216-864-11	SHORT CHIP	0			
R5020	1-216-864-11	SHORT CHIP	0			
R5022	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5024	1-216-864-11	SHORT CHIP	0			
R5025	1-216-864-11	SHORT CHIP	0			
R5026	1-216-809-11	METAL CHIP	100	5%	1/10W	
R5027	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5028	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5029	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R5030	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5042	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R5043	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R5047	1-216-864-11	SHORT CHIP	0			
R5048	1-216-864-11	SHORT CHIP	0			
R5049	1-216-864-11	SHORT CHIP	0			
R5050	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R5051	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R5052	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R5053	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R5054	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5055	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5056	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R5060	1-216-864-11	SHORT CHIP	0			
R5061	1-216-864-11	SHORT CHIP	0			
R5068	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R5069	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R5072	1-216-809-11	METAL CHIP	100	5%	1/10W	
R5073	1-216-864-11	SHORT CHIP	0			
R5074	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	

Ref. No.	Part No.	Description	Remark			
		HEADPHONE BOARD				

		< CAPACITOR >				
C790	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C791	1-127-888-11	CERAMIC	0.1uF	10%	50V	
		< CONNECTOR >				
CNP791	1-691-766-11	PLUG (MICRO CONNECTOR) 4P				
		< JACK >				
J791	1-815-314-21	JACK (PHONES)				
		< TEST PIN >				
* TP701	1-690-880-31	LEAD (WITH CONNECTOR)				

	A-1161-241-A	MAIN BOARD, COMPLETE (SP, SP6, AUS, AR)				
	A-1161-602-A	MAIN BOARD, COMPLETE (E51, MX)				

	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3				
		< CAPACITOR >				
C400	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C403	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C408	1-126-963-11	ELECT	4.7uF	20%	50V	
C409	1-126-963-11	ELECT	4.7uF	20%	50V	
C444	1-127-868-11	CERAMIC	2200PF	10%	50V	
C445	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C453	1-162-286-31	CERAMIC	220PF	10%	50V	
C458	1-126-963-11	ELECT	4.7uF	20%	50V	
C459	1-126-963-11	ELECT	4.7uF	20%	50V	
C463	1-162-286-31	CERAMIC	220PF	10%	50V	
C464	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C468	1-162-282-31	CERAMIC	100PF	10%	50V	
C469	1-162-282-31	CERAMIC	100PF	10%	50V	
C471	1-126-963-11	ELECT	4.7uF	20%	50V	
C472	1-126-963-11	ELECT	4.7uF	20%	50V	
C481	1-126-964-11	ELECT	10uF	20%	50V	
C484	1-126-964-11	ELECT	10uF	20%	50V	
C485	1-126-964-11	ELECT	10uF	20%	50V	
C488	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C490	1-126-964-11	ELECT	10uF	20%	50V	
C492	1-126-964-11	ELECT	10uF	20%	50V	
C493	1-126-964-11	ELECT	10uF	20%	50V	
C495	1-126-964-11	ELECT	10uF	20%	50V	
C499	1-162-286-31	CERAMIC	220PF	10%	50V	
C501	1-126-963-11	ELECT	4.7uF	20%	50V	
C503	1-104-658-91	ELECT	100uF	20%	10V	
C504	1-107-585-11	CERAMIC	5PF	0.25PF	500V	
C505	1-102-233-00	CERAMIC	33PF	10%	500V	
C506	1-162-282-31	CERAMIC	100PF	10%	50V	
C507	1-162-282-31	CERAMIC	100PF	10%	50V	
C510	1-126-947-11	ELECT	47uF	20%	35V	
C511	1-136-157-00	FILM	0.022uF	5%	50V	

STR-K1500

Ver. 1.2

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C516	1-162-815-11	CERAMIC	47PF	5%	500V	C721	1-126-923-91	ELECT	220uF	20%	10V
C517	1-162-815-11	CERAMIC	47PF	5%	500V	C722	1-126-964-11	ELECT	10uF	20%	50V
C519	1-162-286-31	CERAMIC	220PF	10%	50V	C729	1-127-876-11	CERAMIC	0.01uF	10%	50V
C529	1-127-876-11	CERAMIC	0.01uF	10%	50V	C732	1-128-582-11	ELECT	10uF	20%	100V
C531	1-136-157-00	FILM	0.022uF	5%	50V	C733	1-128-582-11	ELECT	10uF	20%	100V
C539	1-162-286-31	CERAMIC	220PF	10%	50V	C740	1-126-964-11	ELECT	10uF	20%	50V
C540	1-126-964-11	ELECT	10uF	20%	50V	C741	1-128-579-11	ELECT	2.2uF	20%	100V
C541	1-127-876-11	CERAMIC	0.01uF	10%	50V	C742	1-127-876-11	CERAMIC	0.01uF	10%	50V
C553	1-104-658-91	ELECT	100uF	20%	10V	C743	1-128-579-11	ELECT	2.2uF	20%	100V
C554	1-107-585-11	CERAMIC	5PF	0.25PF	500V	C744	1-128-579-11	ELECT	2.2uF	20%	100V
C561	1-126-963-11	ELECT	4.7uF	20%	50V	C749	1-127-876-11	CERAMIC	0.01uF	10%	50V
C565	1-102-233-00	CERAMIC	33PF	10%	500V	C750	1-126-964-11	ELECT	10uF	20%	50V
C566	1-162-282-31	CERAMIC	100PF	10%	50V	C751	1-126-963-11	ELECT	4.7uF	20%	50V
C567	1-162-282-31	CERAMIC	100PF	10%	50V	C752	1-127-876-11	CERAMIC	0.01uF	10%	50V
C570	1-126-947-11	ELECT	47uF	20%	35V	C753	1-165-722-11	ELECT	100uF	20%	10V
C576	1-162-815-11	CERAMIC	47PF	5%	500V	C754	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C577	1-162-815-11	CERAMIC	47PF	5%	500V	C755	1-102-233-00	CERAMIC	33PF	10%	500V
C580	1-126-964-11	ELECT	10uF	20%	50V	C756	1-162-282-31	CERAMIC	100PF	10%	50V
C581	1-127-876-11	CERAMIC	0.01uF	10%	50V	C757	1-162-282-31	CERAMIC	100PF	10%	50V
C601	1-126-963-11	ELECT	4.7uF	20%	50V	C760	1-126-947-11	ELECT	47uF	20%	35V
C603	1-104-658-91	ELECT	100uF	20%	10V	C761	1-136-157-00	FILM	0.022uF	5%	50V
C604	1-107-583-11	CERAMIC	3PF	0.25PF	500V	C762	1-126-964-11	ELECT	10uF	20%	50V
C605	1-102-233-00	CERAMIC	33PF	10%	500V	C766	1-162-815-11	CERAMIC	47PF	5%	500V
C606	1-162-282-31	CERAMIC	100PF	10%	50V	C767	1-162-815-11	CERAMIC	47PF	5%	500V
C607	1-162-282-31	CERAMIC	100PF	10%	50V	C770	1-162-286-31	CERAMIC	220PF	10%	50V
C610	1-126-947-11	ELECT	47uF	20%	35V	C791	1-126-923-91	ELECT	220uF	20%	10V
C611	1-136-157-00	FILM	0.022uF	5%	50V	C801	1-126-947-11	ELECT	47uF	20%	35V
C619	1-162-286-31	CERAMIC	220PF	10%	50V	C802	1-126-947-11	ELECT	47uF	20%	35V
C620	1-162-815-11	CERAMIC	47PF	5%	500V	C803	1-165-960-11	ELECT (BLOCK)	6800uF	20%	71V
C621	1-162-815-11	CERAMIC	47PF	5%	500V	C804	1-165-960-11	ELECT (BLOCK)	6800uF	20%	71V
C640	1-126-964-11	ELECT	10uF	20%	50V	C805	1-135-851-21	MYLAR	0.22uF		100V
C642	1-127-876-11	CERAMIC	0.01uF	10%	50V	C806	1-135-851-21	MYLAR	0.22uF		100V
C651	1-126-963-11	ELECT	4.7uF	20%	50V	C807	1-126-947-11	ELECT	47uF	20%	35V
C653	1-165-722-11	ELECT	100uF	20%	10V	C808	1-126-947-11	ELECT	47uF	20%	35V
C654	1-107-583-11	CERAMIC	3PF	0.25PF	500V	C809	1-127-888-11	CERAMIC	0.1uF	10%	50V
C655	1-102-233-00	CERAMIC	33PF	10%	500V	C810	1-127-888-11	CERAMIC	0.1uF	10%	50V
C656	1-162-282-31	CERAMIC	100PF	10%	50V	C811	1-127-888-11	CERAMIC	0.1uF	10%	50V
C657	1-162-282-31	CERAMIC	100PF	10%	50V	C822	1-126-947-11	ELECT	47uF	20%	35V
C660	1-126-947-11	ELECT	47uF	20%	35V	C830	1-127-888-11	CERAMIC	0.1uF	10%	50V
C661	1-136-157-00	FILM	0.022uF	5%	50V	C831	1-127-888-11	CERAMIC	0.1uF	10%	50V
C666	1-162-815-11	CERAMIC	47PF	5%	500V	C832	1-126-936-11	ELECT	3300uF	20%	16V
C669	1-162-815-11	CERAMIC	47PF	5%	500V	C842	1-126-947-11	ELECT	47uF	20%	35V
C670	1-162-286-31	CERAMIC	220PF	10%	50V	C3003	1-128-805-11	CERAMIC	47PF	5%	50V
C680	1-126-964-11	ELECT	10uF	20%	50V	C3005	1-126-963-11	ELECT	4.7uF	20%	50V
C681	1-127-876-11	CERAMIC	0.01uF	10%	50V	C3007	1-127-888-11	CERAMIC	0.1uF	10%	50V
C691	1-127-888-11	CERAMIC	0.1uF	10%	50V	C3008	1-126-947-11	ELECT	47uF	20%	35V
C701	1-126-963-11	ELECT	4.7uF	20%	50V	C3009	1-126-947-11	ELECT	47uF	20%	35V
C702	1-126-964-11	ELECT	10uF	20%	50V	C3012	1-127-888-11	CERAMIC	0.1uF	10%	50V
C703	1-165-722-11	ELECT	100uF	20%	10V	C3013	1-127-888-11	CERAMIC	0.1uF	10%	50V
C704	1-107-583-11	CERAMIC	3PF	0.25PF	500V	CC02	1-162-282-31	CERAMIC	100PF	10%	50V
C705	1-102-233-00	CERAMIC	33PF	10%	500V						(SP, SP6, AUS, AR)
C706	1-162-282-31	CERAMIC	100PF	10%	50V	CC04	1-162-282-31	CERAMIC	100PF	10%	50V
C707	1-162-282-31	CERAMIC	100PF	10%	50V						(SP, SP6, AUS, AR)
C710	1-126-947-11	ELECT	47uF	20%	35V	CC05	1-162-282-31	CERAMIC	100PF	10%	50V
C711	1-136-157-00	FILM	0.022uF	5%	50V						(SP, SP6, AUS, AR)
C716	1-162-815-11	CERAMIC	47PF	5%	500V	CC06	1-162-282-31	CERAMIC	100PF	10%	50V
C717	1-162-815-11	CERAMIC	47PF	5%	500V						(SP, SP6, AUS, AR)
C720	1-162-286-31	CERAMIC	220PF	10%	50V	CC07	1-162-282-31	CERAMIC	100PF	10%	50V
											(SP, SP6, AUS, AR)

57

STR-K1500

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
Q505	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R433	1-247-831-91	CARBON	1K	5%	1/4W
Q506	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R434	1-247-831-91	CARBON	1K	5%	1/4W
Q535	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R435	1-247-831-91	CARBON	1K	5%	1/4W
						R436	1-247-831-91	CARBON	1K	5%	1/4W
Q536	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP								
Q540	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2			R452	1-247-831-91	CARBON	1K	5%	1/4W
Q560	8-729-119-78	TRANSISTOR	2SC1740S-QRT			R454	1-247-831-91	CARBON	1K	5%	1/4W
Q571	8-729-119-76	TRANSISTOR	2SA1115TP-EF			R455	1-247-831-91	CARBON	1K	5%	1/4W
Q572	8-729-141-30	TRANSISTOR	2SC3623ATP-LK			R456	1-247-831-91	CARBON	1K	5%	1/4W
						R457	1-247-831-91	CARBON	1K	5%	1/4W
Q580	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2								
Q601	8-729-119-76	TRANSISTOR	2SA1115TP-EF			R458	1-247-831-91	CARBON	1K	5%	1/4W
Q602	8-729-141-30	TRANSISTOR	2SC3623ATP-LK			R459	1-247-831-91	CARBON	1K	5%	1/4W
Q605	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R468	1-247-879-91	CARBON	100K	5%	1/4W
Q606	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R469	1-247-831-91	CARBON	1K	5%	1/4W
						R470	1-247-871-91	CARBON	47K	5%	1/4W
Q610	8-729-119-78	TRANSISTOR	2SC1740S-QRT								
Q640	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2			R473	1-249-429-11	CARBON	10K	5%	1/4W
Q651	8-729-119-76	TRANSISTOR	2SA1115TP-EF			R474	1-249-429-11	CARBON	10K	5%	1/4W
Q652	8-729-141-30	TRANSISTOR	2SC3623ATP-LK			R475	1-249-429-11	CARBON	10K	5%	1/4W
Q655	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R476	1-249-429-11	CARBON	10K	5%	1/4W
						R480	1-247-871-91	CARBON	47K	5%	1/4W
Q656	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP								
Q680	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2			R499	1-247-871-91	CARBON	47K	5%	1/4W
Q691	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2			R501	1-247-831-91	CARBON	1K	5%	1/4W
Q692	8-729-029-40	TRANSISTOR	DTA124ESA-TP			R502	1-249-439-11	CARBON	68K	5%	1/4W
Q693	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2			R503	1-249-421-11	CARBON	2.2K	5%	1/4W
						R505	1-249-439-11	CARBON	68K	5%	1/4W
Q694	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2								
Q695	8-729-119-76	TRANSISTOR	2SA1115TP-EF			R510	1-249-421-11	CARBON	2.2K	5%	1/4W
Q701	8-729-119-76	TRANSISTOR	2SA1115TP-EF			R511	1-249-440-11	CARBON	82K	5%	1/4W
Q702	8-729-141-30	TRANSISTOR	2SC3623ATP-LK			R513	1-249-414-11	CARBON	560	5%	1/4W
Q705	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			△ R514	1-249-399-11	CARBON	33	5%	1/4W
						△ R515	1-249-399-11	CARBON	33	5%	1/4W
Q706	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP								
Q710	8-729-119-78	TRANSISTOR	2SC1740S-QRT			△ R516	1-234-182-11	ENCAPSULATED COMPONENT			
Q722	8-729-140-84	TRANSISTOR	2SC1841TP-PAFAEA			△ R517	1-249-393-11	CARBON	10	5%	1/4W
Q723	8-729-119-78	TRANSISTOR	2SC1740S-QRT			R520	1-247-847-91	CARBON	4.7K	5%	1/4W
Q725	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			△ R521	1-240-855-81	CARBON	6.2K	5%	1/4W
						R522	1-249-419-11	CARBON	1.5K	5%	1/4W
Q740	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2								
Q750	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2			R523	1-247-871-91	CARBON	47K	5%	1/4W
Q751	8-729-119-76	TRANSISTOR	2SA1115TP-EF			R524	1-249-431-11	CARBON	15K	5%	1/4W
Q752	8-729-141-30	TRANSISTOR	2SC3623ATP-LK			R525	1-249-439-11	CARBON	68K	5%	1/4W
Q755	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			△ R526	1-234-182-11	ENCAPSULATED COMPONENT			
						R529	1-249-429-11	CARBON	10K	5%	1/4W
Q756	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP								
Q790	8-729-119-78	TRANSISTOR	2SC1740S-QRT			R530	1-247-847-91	CARBON	4.7K	5%	1/4W
Q793	8-729-119-78	TRANSISTOR	2SC1740S-QRT			△ R531	1-240-855-81	CARBON	6.2K	5%	1/4W
Q795	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			R532	1-249-429-11	CARBON	10K	5%	1/4W
Q801	8-729-140-97	TRANSISTOR	2SB734-T-34			R533	1-247-871-91	CARBON	47K	5%	1/4W
						R534	1-249-431-11	CARBON	15K	5%	1/4W
Q3001	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2								
		< RESISTOR >				R535	1-249-439-11	CARBON	68K	5%	1/4W
						△ R537	1-249-393-11	CARBON	10	5%	1/4W
R402	1-247-831-91	CARBON	1K	5%	1/4W	R539	1-247-879-91	CARBON	100K	5%	1/4W
R404	1-247-831-91	CARBON	1K	5%	1/4W	R540	1-247-863-91	CARBON	22K	5%	1/4W
R405	1-247-831-91	CARBON	1K	5%	1/4W	R546	1-249-431-11	CARBON	15K	5%	1/4W
R406	1-247-831-91	CARBON	1K	5%	1/4W						
R407	1-247-831-91	CARBON	1K	5%	1/4W	R553	1-249-421-11	CARBON	2.2K	5%	1/4W
						R554	1-249-439-11	CARBON	68K	5%	1/4W
R408	1-247-831-91	CARBON	1K	5%	1/4W	R555	1-247-847-91	CARBON	4.7K	5%	1/4W
R409	1-247-831-91	CARBON	1K	5%	1/4W	R556	1-247-871-91	CARBON	47K	5%	1/4W
R428	1-247-831-91	CARBON	1K	5%	1/4W	R557	1-249-431-11	CARBON	15K	5%	1/4W
R429	1-247-831-91	CARBON	1K	5%	1/4W						
R431	1-247-831-91	CARBON	1K	5%	1/4W	R561	1-247-831-91	CARBON	1K	5%	1/4W
						R562	1-249-439-11	CARBON	68K	5%	1/4W
R432	1-247-831-91	CARBON	1K	5%	1/4W	R570	1-249-421-11	CARBON	2.2K	5%	1/4W
						R571	1-249-440-11	CARBON	82K	5%	1/4W

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R572	1-249-419-11	CARBON	1.5K	5%	1/4W	R681	1-249-431-11	CARBON	15K	5%	1/4W
R573	1-247-871-91	CARBON	47K	5%	1/4W	R689	1-249-429-11	CARBON	10K	5%	1/4W
△ R574	1-249-399-11	CARBON	33	5%	1/4W	R690	1-247-887-00	CARBON	220K	5%	1/4W
△ R575	1-249-399-11	CARBON	33	5%	1/4W	R691	1-215-888-00	METAL OXIDE	220	5%	2W
R576	1-249-414-11	CARBON	560	5%	1/4W	R692	1-215-888-00	METAL OXIDE	220	5%	2W
R580	1-247-863-91	CARBON	22K	5%	1/4W	R693	1-249-429-11	CARBON	10K	5%	1/4W
R585	1-247-847-91	CARBON	4.7K	5%	1/4W	R694	1-249-429-11	CARBON	10K	5%	1/4W
R586	1-247-871-91	CARBON	47K	5%	1/4W	R695	1-249-429-11	CARBON	10K	5%	1/4W
R587	1-249-431-11	CARBON	15K	5%	1/4W	R696	1-247-871-91	CARBON	47K	5%	1/4W
R588	1-249-431-11	CARBON	15K	5%	1/4W	R697	1-247-871-91	CARBON	47K	5%	1/4W
R601	1-247-831-91	CARBON	1K	5%	1/4W	R698	1-249-429-11	CARBON	10K	5%	1/4W
R602	1-249-439-11	CARBON	68K	5%	1/4W	R699	1-247-895-00	CARBON	470K	5%	1/4W
R603	1-249-421-11	CARBON	2.2K	5%	1/4W	R700	1-249-429-11	CARBON	10K	5%	1/4W
R604	1-249-439-11	CARBON	68K	5%	1/4W	R701	1-247-831-91	CARBON	1K	5%	1/4W
R610	1-249-421-11	CARBON	2.2K	5%	1/4W	R702	1-249-439-11	CARBON	68K	5%	1/4W
R611	1-249-440-11	CARBON	82K	5%	1/4W	R703	1-249-421-11	CARBON	2.2K	5%	1/4W
R613	1-249-414-11	CARBON	560	5%	1/4W	R704	1-249-439-11	CARBON	68K	5%	1/4W
△ R614	1-249-399-11	CARBON	33	5%	1/4W	R705	1-247-895-00	CARBON	470K	5%	1/4W
△ R615	1-249-399-11	CARBON	33	5%	1/4W	R706	1-215-888-00	METAL OXIDE	220	5%	2W
△ R616	1-234-182-11	ENCAPSULATED COMPONENT				R710	1-249-421-11	CARBON	2.2K	5%	1/4W
△ R617	1-249-393-11	CARBON	10	5%	1/4W	R711	1-249-440-11	CARBON	82K	5%	1/4W
△ R618	1-249-389-11	CARBON	4.7	5%	1/4W	R713	1-249-414-11	CARBON	560	5%	1/4W
R620	1-247-847-91	CARBON	4.7K	5%	1/4W	△ R714	1-249-399-11	CARBON	33	5%	1/4W
△ R621	1-240-855-81	CARBON	6.2K	5%	1/4W	△ R715	1-249-399-11	CARBON	33	5%	1/4W
R622	1-249-419-11	CARBON	1.5K	5%	1/4W	△ R716	1-234-182-11	ENCAPSULATED COMPONENT			
R623	1-247-871-91	CARBON	47K	5%	1/4W	△ R717	1-249-393-11	CARBON	10	5%	1/4W
R624	1-249-431-11	CARBON	15K	5%	1/4W	△ R718	1-249-389-11	CARBON	4.7	5%	1/4W
R625	1-249-439-11	CARBON	68K	5%	1/4W	R719	1-247-847-91	CARBON	4.7K	5%	1/4W
R631	1-249-421-11	CARBON	2.2K	5%	1/4W	△ R721	1-240-855-81	CARBON	6.2K	5%	1/4W
△ R634	1-249-404-00	CARBON	82	5%	1/4W	R722	1-249-419-11	CARBON	1.5K	5%	1/4W
R638	1-249-439-11	CARBON	68K	5%	1/4W	R723	1-247-871-91	CARBON	47K	5%	1/4W
R640	1-247-863-91	CARBON	22K	5%	1/4W	R724	1-249-431-11	CARBON	15K	5%	1/4W
R648	1-249-431-11	CARBON	15K	5%	1/4W	R725	1-249-439-11	CARBON	68K	5%	1/4W
R651	1-247-831-91	CARBON	1K	5%	1/4W	R729	1-249-429-11	CARBON	10K	5%	1/4W
R652	1-249-439-11	CARBON	68K	5%	1/4W	R731	1-249-421-11	CARBON	2.2K	5%	1/4W
R653	1-249-421-11	CARBON	2.2K	5%	1/4W	△ R732	1-249-381-11	CARBON	1	5%	1/4W
R654	1-249-439-11	CARBON	68K	5%	1/4W	△ R733	1-249-381-11	CARBON	1	5%	1/4W
R655	1-247-847-91	CARBON	4.7K	5%	1/4W	△ R734	1-249-404-00	CARBON	82	5%	1/4W
R656	1-247-871-91	CARBON	47K	5%	1/4W	R735	1-249-427-11	CARBON	6.8K	5%	1/4W
R657	1-249-431-11	CARBON	15K	5%	1/4W	R736	1-247-831-91	CARBON	1K	5%	1/4W
R660	1-249-421-11	CARBON	2.2K	5%	1/4W	R737	1-249-436-11	CARBON	39K	5%	1/4W
R661	1-249-440-11	CARBON	82K	5%	1/4W	R739	1-247-879-91	CARBON	100K	5%	1/4W
R663	1-249-414-11	CARBON	560	5%	1/4W	R740	1-247-863-91	CARBON	22K	5%	1/4W
△ R664	1-249-399-11	CARBON	33	5%	1/4W	R741	1-249-431-11	CARBON	15K	5%	1/4W
△ R665	1-249-399-11	CARBON	33	5%	1/4W	R743	1-249-431-11	CARBON	15K	5%	1/4W
△ R666	1-234-182-11	ENCAPSULATED COMPONENT				R744	1-249-431-11	CARBON	15K	5%	1/4W
△ R667	1-249-393-11	CARBON	10	5%	1/4W	R745	1-247-847-91	CARBON	4.7K	5%	1/4W
△ R668	1-249-389-11	CARBON	4.7	5%	1/4W	R746	1-247-871-91	CARBON	47K	5%	1/4W
R669	1-247-847-91	CARBON	4.7K	5%	1/4W	R747	1-249-431-11	CARBON	15K	5%	1/4W
△ R671	1-240-855-81	CARBON	6.2K	5%	1/4W	R748	1-249-431-11	CARBON	15K	5%	1/4W
R672	1-249-419-11	CARBON	1.5K	5%	1/4W	R749	1-249-429-11	CARBON	10K	5%	1/4W
R673	1-247-871-91	CARBON	47K	5%	1/4W	R750	1-247-863-91	CARBON	22K	5%	1/4W
R674	1-249-431-11	CARBON	15K	5%	1/4W	R751	1-247-831-91	CARBON	1K	5%	1/4W
R675	1-247-847-91	CARBON	4.7K	5%	1/4W	R752	1-249-439-11	CARBON	68K	5%	1/4W
R676	1-247-871-91	CARBON	47K	5%	1/4W	R753	1-249-421-11	CARBON	2.2K	5%	1/4W
R677	1-249-431-11	CARBON	15K	5%	1/4W	R754	1-249-439-11	CARBON	68K	5%	1/4W
R680	1-247-863-91	CARBON	22K	5%	1/4W	R755	1-247-847-91	CARBON	4.7K	5%	1/4W
						R756	1-247-871-91	CARBON	47K	5%	1/4W

STR-K1500

Ver. 1.2

MAIN	POWER	SPEAKER C/SB	STANDBY
------	-------	--------------	---------

Ref. No.	Part No.	Description			Remark
R757	1-249-431-11	CARBON	15K	5%	1/4W
R758	1-249-431-11	CARBON	15K	5%	1/4W
R759	1-247-879-91	CARBON	100K	5%	1/4W
R760	1-249-421-11	CARBON	2.2K	5%	1/4W
R761	1-249-440-11	CARBON	82K	5%	1/4W
R763	1-249-414-11	CARBON	560	5%	1/4W
△ R764	1-249-399-11	CARBON	33	5%	1/4W
△ R765	1-249-399-11	CARBON	33	5%	1/4W
△ R766	1-234-182-11	ENCAPSULATED COMPONENT			
△ R767	1-249-393-11	CARBON	10	5%	1/4W
△ R768	1-249-389-11	CARBON	4.7	5%	1/4W
R769	1-247-847-91	CARBON	4.7K	5%	1/4W
△ R771	1-240-855-81	CARBON	6.2K	5%	1/4W
R772	1-249-419-11	CARBON	1.5K	5%	1/4W
R773	1-247-871-91	CARBON	47K	5%	1/4W
R775	1-249-439-11	CARBON	68K	5%	1/4W
R778	1-249-431-11	CARBON	15K	5%	1/4W
R780	1-249-429-11	CARBON	10K	5%	1/4W
R791	1-249-421-11	CARBON	2.2K	5%	1/4W
R792	1-215-868-00	METAL OXIDE	680	5%	1W
△ R793	1-249-404-00	CARBON	82	5%	1/4W
R794	1-215-868-00	METAL OXIDE	680	5%	1W
△ R802	1-249-409-11	CARBON	220	5%	1/4W
△ R803	1-249-389-11	CARBON	4.7	5%	1/4W
R804	1-249-429-11	CARBON	10K	5%	1/4W
R806	1-247-863-91	CARBON	22K	5%	1/4W
R840	1-249-427-11	CARBON	6.8K	5%	1/4W
R844	1-247-863-91	CARBON	22K	5%	1/4W
△ R910	1-240-877-11	FUSIBLE	0.15	5%	1/2W
R3001	1-247-863-91	CARBON	22K	5%	1/4W
R3002	1-247-863-91	CARBON	22K	5%	1/4W
R3003	1-247-863-91	CARBON	22K	5%	1/4W
R3005	1-249-421-11	CARBON	2.2K	5%	1/4W
R3006	1-249-429-11	CARBON	10K	5%	1/4W
R3007	1-249-414-11	CARBON	560	5%	1/4W
△ R3008	1-249-393-11	CARBON	10	5%	1/4W
△ RR11	1-249-393-11	CARBON	10	5%	1/4W (SP, SP6, AUS, AR)
△ RR12	1-249-393-11	CARBON	10	5%	1/4W (SP, SP6, AUS, AR)
△ RR13	1-249-393-11	CARBON	10	5%	1/4W (SP, SP6, AUS, AR)
△ RR14	1-249-393-11	CARBON	10	5%	1/4W (SP, SP6, AUS, AR)
< RELAY >					
RY560	1-755-267-11	RELAY			
RY601	1-755-170-11	RELAY (12V)			
RY701	1-755-170-11	RELAY (12V)			
RY791	1-755-170-11	RELAY (12V)			
< TERMINAL >					
TM601	1-780-364-11	TERMINAL BOARD (SP) (8P) (SURROUND,FRONT/SPEAKERS IMPEDANCE 6-16Ω)			

Ref. No.	Part No.	Description	Remark		
POWER BOARD					

< RESISTOR >					
R114	1-247-831-91	CARBON	1K	5%	1/4W
< SWITCH >					
S100	1-771-410-21	SWITCH, TACTILE (I/⏏)			
S115	1-771-410-21	SWITCH, TACTILE (SPEAKERS/ON/OFF)			

SPEAKER C/SB BOARD					

< CAPACITOR >					
CC16	1-127-876-11	CERAMIC	0.01uF	10%	50V
CC17	1-127-876-11	CERAMIC	0.01uF	10%	50V
< CONNECTOR >					
* CNP503	1-564-241-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
< DIODE >					
D510	8-719-991-33	DIODE	1SS133T-72		
< COIL >					
L571	1-420-872-52	COIL, AIR-CORE			
L751	1-420-872-52	COIL, AIR-CORE			
< TRANSISTOR >					
Q550	8-729-119-78	TRANSISTOR	2SC1740S-QRT		
< RESISTOR >					
R531	1-249-421-11	CARBON	2.2K	5%	1/4W
△ R534	1-249-404-00	CARBON	82	5%	1/4W
△ R578	1-249-389-11	CARBON	4.7	5%	1/4W
△ R751	1-249-389-11	CARBON	4.7	5%	1/4W
△ RR16	1-249-393-11	CARBON	10	5%	1/4W
△ RR17	1-249-393-11	CARBON	10	5%	1/4W
< RELAY >					
RY501	1-755-170-11	RELAY (12V)			
< TERMINAL >					
TM501	1-780-365-11	TERMINAL BOARD (SP) (4P)			
(SURROUND BACK,CENTER)					

STANDBY BOARD					

< CAPACITOR >					
C913	1-127-888-11	CERAMIC	0.1uF	10%	50V
C914	1-127-888-11	CERAMIC	0.1uF	10%	50V
C915	1-126-943-11	ELECT	2200uF	20%	25V
C916	1-126-942-61	ELECT	1000uF	20%	25V
C920	1-127-888-11	CERAMIC	0.1uF	10%	50V

Ref. No.	Part No.	Description	Remark		
C921	1-127-888-11	CERAMIC	0.1uF	10%	50V
C924	1-126-960-11	ELECT	1uF	20%	50V
C950	1-126-936-11	ELECT	3300uF	20%	16V
< CONNECTOR >					
CNP801	1-784-922-11	PIN, CONNECTOR 5P			
CNP804	1-564-506-11	PLUG, CONNECTOR 3P			
CNP901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			
CNP902	1-794-577-21	PIN, CONNECTOR (POWER)			
CNP903	1-779-977-11	PIN, CONNECTOR 6P			
CNP906	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P (E51)			
< DIODE >					
D901	8-719-991-33	DIODE 1SS133T-72			
D910	6-500-522-11	DIODE 10EDB40-TA2B5			
D911	6-500-522-11	DIODE 10EDB40-TA2B5			
D912	6-500-522-11	DIODE 10EDB40-TA2B5			
D913	6-500-522-11	DIODE 10EDB40-TA2B5			
D914	8-719-991-33	DIODE 1SS133T-72			
D915	8-719-991-33	DIODE 1SS133T-72			
D920	6-500-522-11	DIODE 10EDB40-TA2B5			
D921	6-500-522-11	DIODE 10EDB40-TA2B5			
D922	6-500-522-11	DIODE 10EDB40-TA2B5			
D923	6-500-522-11	DIODE 10EDB40-TA2B5			
< FUSE HOLDER >					
FH901	1-533-217-41	HOLDER, FUSE			
FH951	1-533-217-41	HOLDER, FUSE			
< GROUND TERMINAL >					
G901	1-537-738-21	TERMINAL, GROUND			
< TRANSISTOR >					
Q901	8-729-119-78	TRANSISTOR 2SC1740S-QRT			
Q921	8-729-119-78	TRANSISTOR 2SC1740S-QRT			
< RESISTOR >					
△ R810	1-243-634-91	FUSIBLE	0.22	5%	1/2W
△ R811	1-243-634-91	FUSIBLE	0.22	5%	1/2W
R902	1-247-871-91	CARBON	47K	5%	1/4W
R903	1-249-421-11	CARBON	2.2K	5%	1/4W
△ R904	1-249-381-11	CARBON	1	5%	1/4W
R921	1-247-871-91	CARBON	47K	5%	1/4W
R922	1-247-863-91	CARBON	22K	5%	1/4W
R923	1-249-429-11	CARBON	10K	5%	1/4W
< RELAY >					
△ RY901	1-755-541-11	RELAY			
< TRANSFORMER >					
△ T902	1-443-517-11	POWER TRANSFORMER (SP, AUS, AR)			
△ T902	1-443-518-11	POWER TRANSFORMER (MX)			
△ T902	1-443-520-11	POWER TRANSFORMER (E51)			

Ref. No.	Part No.	Description	Remark		
		VIDEO BOARD			

< CAPACITOR >					
C200	1-128-805-11	CERAMIC	47PF	5%	50V
C201	1-128-805-11	CERAMIC	47PF	5%	50V
C206	1-126-964-11	ELECT	10uF	20%	50V
C207	1-126-964-11	ELECT	10uF	20%	50V
C208	1-126-964-11	ELECT	10uF	20%	50V
C209	1-126-964-11	ELECT	10uF	20%	50V
C210	1-126-964-11	ELECT	10uF	20%	50V
C213	1-126-934-11	ELECT	220uF	20%	16V
C214	1-127-888-11	CERAMIC	0.1uF	10%	50V
C215	1-127-888-11	CERAMIC	0.1uF	10%	50V
C220	1-126-947-11	ELECT	47uF	20%	35V
C221	1-126-934-11	ELECT	220uF	20%	16V
C223	1-127-888-11	CERAMIC	0.1uF	10%	50V
C224	1-127-888-11	CERAMIC	0.1uF	10%	50V
C308	1-126-964-11	ELECT	10uF	20%	50V
C309	1-126-964-11	ELECT	10uF	20%	50V
C310	1-126-964-11	ELECT	10uF	20%	50V
C311	1-126-964-11	ELECT	10uF	20%	50V
C312	1-126-964-11	ELECT	10uF	20%	50V
C313	1-126-964-11	ELECT	10uF	20%	50V
C314	1-127-868-11	CERAMIC	2200PF	10%	50V
C315	1-127-868-11	CERAMIC	2200PF	10%	50V
C316	1-127-868-11	CERAMIC	2200PF	10%	50V
C317	1-126-947-11	ELECT	47uF	20%	35V
C330	1-127-888-11	CERAMIC	0.1uF	10%	50V
C331	1-127-888-11	CERAMIC	0.1uF	10%	50V
C338	1-126-947-11	ELECT	47uF	20%	35V
< CONNECTOR >					
CNP202	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P			
CNP203	1-691-765-11	PLUG (MICRO CONNECTOR) 3P			
CNS250	1-784-778-11	CONNECTOR, FFC 17P			
< DIODE >					
D203	8-719-991-33	DIODE 1SS133T-72			
D204	8-719-991-33	DIODE 1SS133T-72			
< IC >					
IC203	6-701-890-01	IC NJM2595D			
IC304	6-707-363-01	IC NJM2586AL			
IC804	8-759-245-79	IC TA79005S			
IC807	8-759-231-53	IC TA7805S			
< JACK >					
J200	1-794-978-11	JACK, PIN 3P (VIDEO 1/VIDEO OUT, VIDEO 2/VIDEO IN, DVD/VIDEO IN)			
J201	1-815-043-11	JACK, PIN 2P (VIDEO 1/VIDEO IN, MONITOR/VIDEO OUT)			
J301	1-816-592-11	JACK, PIN 9P (COMPONENT VIDEO)			
< RESISTOR >					
R200	1-247-804-11	CARBON	75	5%	1/4W
R201	1-247-804-11	CARBON	75	5%	1/4W
R218	1-247-804-11	CARBON	75	5%	1/4W

STR-K1500

Ver. 1.2

VIDEO VIDEO 3

Ref. No.	Part No.	Description	Remark		
R219	1-247-804-11	CARBON	75	5%	1/4W
R220	1-247-804-11	CARBON	75	5%	1/4W
R221	1-247-804-11	CARBON	75	5%	1/4W
R301	1-247-804-11	CARBON	75	5%	1/4W
R302	1-247-804-11	CARBON	75	5%	1/4W
R303	1-247-804-11	CARBON	75	5%	1/4W
R304	1-247-804-11	CARBON	75	5%	1/4W
R305	1-247-804-11	CARBON	75	5%	1/4W
R306	1-247-804-11	CARBON	75	5%	1/4W
R307	1-247-804-11	CARBON	75	5%	1/4W
R308	1-247-804-11	CARBON	75	5%	1/4W
R309	1-247-804-11	CARBON	75	5%	1/4W
R310	1-247-831-91	CARBON	1K	5%	1/4W
R311	1-247-831-91	CARBON	1K	5%	1/4W
R312	1-247-831-91	CARBON	1K	5%	1/4W
R313	1-247-863-91	CARBON	22K	5%	1/4W

VIDEO 3 BOARD

< CAPACITOR >

C293	1-127-888-11	CERAMIC	0.1uF	10%	50V
C294	1-127-888-11	CERAMIC	0.1uF	10%	50V

< CONNECTOR >

CN201	1-784-922-11	PIN, CONNECTOR 5P			
-------	--------------	-------------------	--	--	--

< JACK >

J298	1-819-187-11	PIN JACK 3P (VIDEO,AUDIO/VIDEO 3 IN/PORTABLE)			
------	--------------	--	--	--	--

< RESISTOR >

R298	1-247-831-91	CARBON	1K	5%	1/4W
R299	1-247-831-91	CARBON	1K	5%	1/4W

< LEAD >

* W290	1-690-880-31	LEAD (WITH CONNECTOR)			
--------	--------------	-----------------------	--	--	--

MISCELLANEOUS

8	1-829-023-11	WIRE (FLAT TYPE) (23 CORE)			
△ 57	1-696-847-11	CORD, POWER (AUS)			
△ 57	1-777-071-22	CORD, POWER (E51)			
△ 57	1-777-071-83	CORD, POWER (SP, SP6, AR)			
△ 57	1-829-627-11	POWER-SUPPLY CORD (MX)			
59	1-828-993-11	WIRE (FLAT TYPE) (17 CORE)			
60	1-828-963-11	WIRE (FLAT TYPE) (11 CORE)			
△ F901	1-532-350-00	FUSE, TIME-LAG (T4AL/250V)(MX)			
△ F901	1-532-464-33	FUSE (T2.5AL/250V)(EXCEPT MX)			
Q503	6-702-390-01	IC MN2488-OPY-MK			
Q504	6-702-391-01	IC MP1620-OPY-MK			
Q533	6-702-390-01	IC MN2488-OPY-MK			
Q534	6-702-391-01	IC MP1620-OPY-MK			
Q603	6-702-390-01	IC MN2488-OPY-MK			
Q604	6-702-391-01	IC MP1620-OPY-MK			

Ref. No.	Part No.	Description	Remark
Q653	6-702-390-01	IC MN2488-OPY-MK	
Q654	6-702-391-01	IC MP1620-OPY-MK	
Q703	6-702-390-01	IC MN2488-OPY-MK	
Q704	6-702-391-01	IC MP1620-OPY-MK	
Q753	6-702-390-01	IC MN2488-OPY-MK	
Q754	6-702-391-01	IC MP1620-OPY-MK	
△ T901	1-443-523-11	POWER TRANSFORMER (MX)	
△ T901	1-443-525-11	POWER TRANSFORMER (SP, SP6, AUS, AR)	
△ T901	1-443-526-11	POWER TRANSFORMER (E51)	
TN1	1-693-675-11	TUNER (E51, MX)	
TN1	1-693-678-11	TUNER (SP, SP6, AUS, AR)	

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]