

STR-K5900P/K9900P

SERVICE MANUAL

Ver. 1.0 2005. 03

US Model
STR-K5900P/K9900P
Canadian Model
STR-K5900P



Photo: STR-K9900P

- STR-K5900P/K9900P are the FM/AM receiver section in HT-5950DP/6900DP/9900M.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. "DTS", "DTS-ES", "Neo:6" and "DTS 96/24" are trademarks of Digital Theater Systems, Inc.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

(Models of area code US only)

With 6 ohm loads, both channels driven, from 120 – 20,000 Hz; rated 90 watts (STR-K9900P)/ 70 watts (STR-K5900P) per channel minimum RMS power, with no more than 0.7 % total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Power Output ¹⁾

Model of area code US

(6 ohms 1 kHz, THD 10 %)

STR-K9900P:

FRONT ²⁾ : 140 W/ch
CENTER ²⁾ : 140 W
SURR ²⁾ : 140 W/ch
SURR BACK ²⁾ : 140 W
FRONT ²⁾ : 110 W/ch
CENTER ²⁾ : 110 W
SURR ²⁾ : 110 W/ch
SURR BACK ²⁾ : 110 W

STR-K5900P:

Model of area code Canadian

(6 ohms 1 kHz, THD 0.7 %)

STR-K5900P:

FRONT ²⁾ : 70 W/ch
CENTER ²⁾ : 70 W
SURR ²⁾ : 70 W/ch
SURR BACK ²⁾ : 70 W

(6 ohms 1 kHz, THD 10 %)

STR-K5900P:

FRONT ²⁾ : 110 W/ch
CENTER ²⁾ : 110 W
SURR ²⁾ : 110 W/ch
SURR BACK ²⁾ : 110 W

1) Measured under the following conditions:

Area code	Power requirements
US, Canadian	120 V AC, 60 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

– Continued on next page –

FM STEREO/FM-AM RECEIVER

9-879-562-01

2005C04-1

© 2005. 03

Sony Corporation

Audio Group

Published by Sony Engineering Corporation

SONY®

STR-K5900P/K9900P

Inputs (Analog)	
MULTI CH IN*, SA-CD/CD, MD/TAPE, DVD, VIDEO 1, 2, 3	Sensitivity: 800 mV Impedance: 50 k ohms

* STR-K9900P only.

Inputs (Digital)	
DVD (Coaxial)	Sensitivity: – Impedance: 75 ohms
VIDEO 2, SA-CD/CD (Optical)	Sensitivity: – Impedance: –

Outputs (Analog)	
MD/TAPE (OUT), VIDEO 1 (AUDIO OUT)	Voltage: 800 mV Impedance: 10 k ohms
SUB WOOFER	Voltage: 2 V Impedance: 1 k ohm

Reproduction frequency range:
28 – 20,000 Hz

Tone	
Gain levels	±6 dB, 1 dB step

FM tuner section

Tuning range	87.5 – 108.0 MHz
Antenna	FM wire antenna
Antenna terminals	75 ohms, unbalanced
Intermediate frequency	10.7 MHz

AM tuner section

Tuning range	
Model of area code US, Canadian	
With 10-kHz tuning scale:	530 – 1,710 kHz ³⁾
With 9-kHz tuning scale:	531 – 1,710 kHz ³⁾
Antenna	Loop antenna
Intermediate frequency	450 kHz

3) You can change the AM tuning scale to 9 kHz or 10 kHz.
After tuning in any AM station, turn off the receiver. While holding down PRESET TUNING + or TUNING +, press I/⏻. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

Video section

Inputs/Outputs	
Video:	1 Vp-p, 75 ohms
COMPONENT VIDEO:	Y: 1 Vp-p, 75 ohms Pb/Cb/B-Y: 0.7 Vp-p, 75 ohms Pr/Cr/R-Y: 0.7 Vp-p, 75 ohms 80 MHz HD Pass Through

General

Power requirements	
Area code	Power requirements
US, Canadian	120 V AC, 60 Hz

Power consumption	
Area code	Power consumption
US (STR-K9900P)	190 W
US (STR-K5900P)	140 W
Canadian	200 VA

Power consumption (during standby mode)
0.2 W

Dimensions (w/h/d) (Approx.)
430 × 157.5 × 310 mm
(16 ⁷/₈ × 6 ²/₈ × 12 ²/₈ inches) including projecting parts and controls

Mass (Approx.)
8.0 kg (17 lb 11 oz)

Design and specifications are subject to change without notice.

SAFETY CHECK-OUT (US MODEL)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:


Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage.

Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

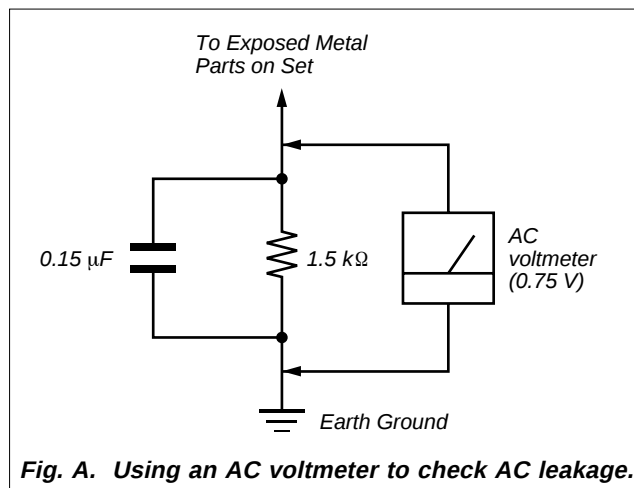
**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MODEL IDENTIFICATION
— BACK PANEL —

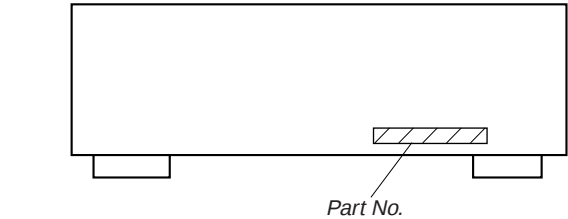

MODEL	PART No.
STR-K5900P: US	2-546-121-0□
STR-K9900P: US	2-546-121-1□
STR-K5900P: CND	2-546-121-7□

- Abbreviation
CND: Canadian model

TABLE OF CONTENTS

1. GENERAL	
Main unit	5
Remote button description	6
2. DISASSEMBLY	
2-1. Case	7
2-2. Front Panel Section	8
2-3. Back Panel Section	8
2-4. Digital Board	9
2-5. Standby Board	9
2-6. Main Board	10
3. TEST MODE	11
4. DIAGRAMS	
4-1. Circuit Boards Location	12
4-2. Block Diagram – Tuner/Audio Section –	13
4-3. Block Diagram – Digital Section –	14
4-4. Block Diagram – Video Section –	15
4-5. Block Diagram – Key/Display Section –	16
4-6. Block Diagram – Power Section –	17
4-7. Printed Wiring Boards – Main Section –	19
4-8. Schematic Diagram – Main Section (1/2) –	20
4-9. Schematic Diagram – Main Section (2/2) –	21
4-10. Printed Wiring Board – Digital Section (1/2) –	22
4-11. Printed Wiring Board – Digital Section (2/2) –	23
4-12. Schematic Diagram – Digital Section (1/4) –	24
4-13. Schematic Diagram – Digital Section (2/4) –	25
4-14. Schematic Diagram – Digital Section (3/4) –	26
4-15. Schematic Diagram – Digital Section (4/4) –	27
4-16. Printed Wiring Boards – Speaker Section –	28
4-17. Schematic Diagram – Speaker Section –	29
4-18. Printed Wiring Boards – Video Section –	30
4-19. Schematic Diagram – Video Section –	31
4-20. Printed Wiring Boards – Panel Section –	32
4-21. Schematic Diagram – Panel Section –	33
4-22. Printed Wiring Board – Power Section –	34
4-23. Schematic Diagram – Power Section –	35
5. EXPLODED VIEWS	
5-1. Case Section	42
5-2. Front Panel Section	43
5-3. Back Panel Section	44
5-4. Chassis Section	45
6. ELECTRICAL PARTS LIST	46

SECTION 1
GENERAL

This section is extracted
from instruction manual.

List of button locations and reference pages

How to use this page	
Use this page to find the location of buttons that are mentioned in the text.	
Illustration number	
↓	
DISPLAY 3 (26, 54)	
↑	
Name of button/part	Reference page

Main unit

ALPHABETICAL ORDER

A - H

A.F.D. (button/indicator) 11 (30, 32, 53)
AM 21 (23, 24, 25, 40)
DIMMER 4 (26)
DISPLAY 3 (26, 54)
Display 7 (27)
DVD 25 (23)
ENTER 15 (18, 40)
FM 22 (23, 24, 25, 40)
FM MODE 32 (24)

I - O

Input buttons 20 (23, 35, 39, 40, 54)
INPUT MODE 17 (35)
IR (receptor) 5 (43, 54)

MAIN MENU 8 (19, 36, 37, 40)
MASTER VOLUME +/- 16 (18, 22, 23, 53)
MD/TAPE 24 (23)
MEMORY 34 (25)
MOVIE (button/indicator) 12 (31, 32, 53)
MULTI CHANNEL DECODING (indicator) 6 (24)
MULTI CH IN* 9 (24)
MUSIC (button/indicator) 13 (32, 53)

P - Z

PHONES (jack) 33 (23, 53)
PRESET TUNING +/- 29 (25, 56)
SA-CD/CD 23 (23)
SLEEP** 9 (40)
SPEAKERS (OFF/A/B/A+B)* 2 (16, 41, 53)


SPEAKERS (ON/OFF)** 2 (16, 41, 53)
SURR BACK DECODING 14 (33)
TUNING +/- 30 (24, 56)
VIDEO 1 28 (23)
VIDEO 2 27 (23)
VIDEO 3 26 (23)
VIDEO 3 IN/PORTABLE AV IN (jacks) 31 (13)

NUMBERS AND SYMBOLS

2CH (button/indicator) 10 (29, 32, 37)
I/⏻ (power) 1 (18, 19, 37, 56)
</> 19 (19, 36, 37, 40)
+/- 18 (19, 36, 38, 40)

* HT-9900M and HT-6900DP only.
** HT-5950DP only.

Additional Information

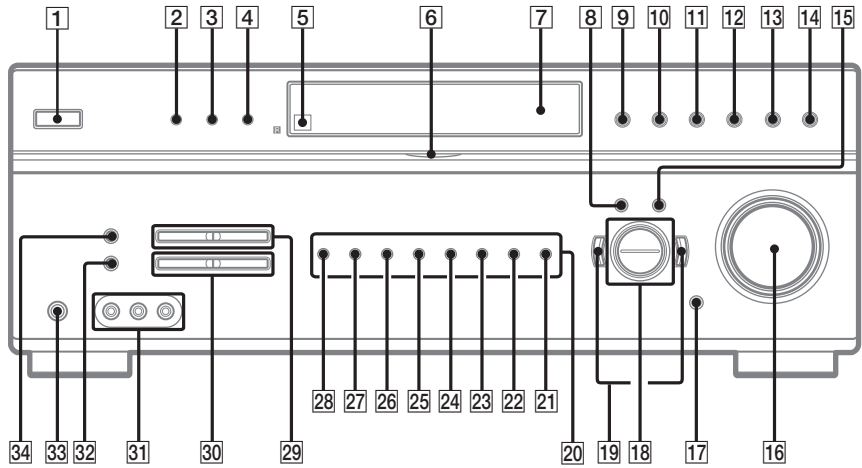


Operations Using the Remote RM-AAP001

You can use the remote RM-AAP001 to operate the components in your system.

Before you use your remote

Inserting batteries into the remote

Insert R6 (size-AA) batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor  on the receiver.

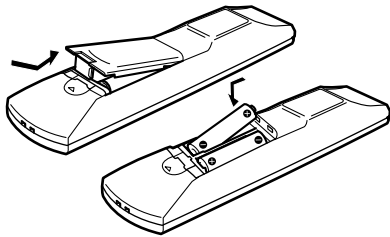


Tip
Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all batteries with new ones.

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Remote button description

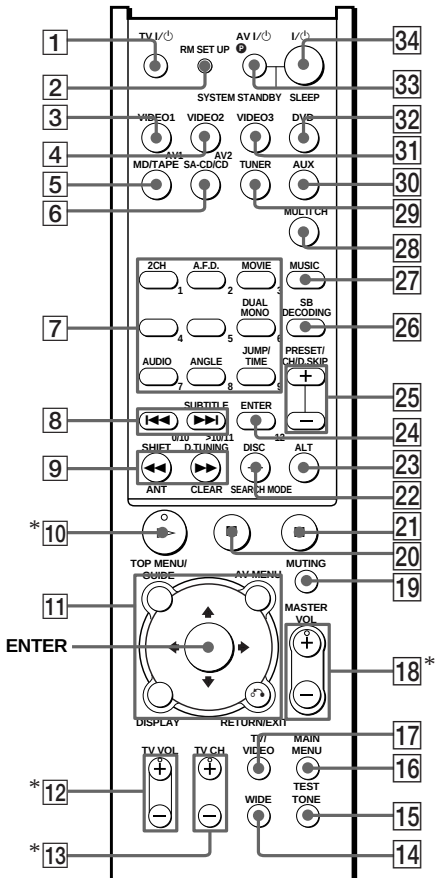


Operations Using the Remote RM-AAP001

* The , TV VOL +, TV CH + and MASTER VOL + buttons have a tactile dot. Use the tactile dot as a reference when operating the receiver and other audio/video components.


SECTION 2 DISASSEMBLY

Note : This set can be disassemble according to the following sequence.

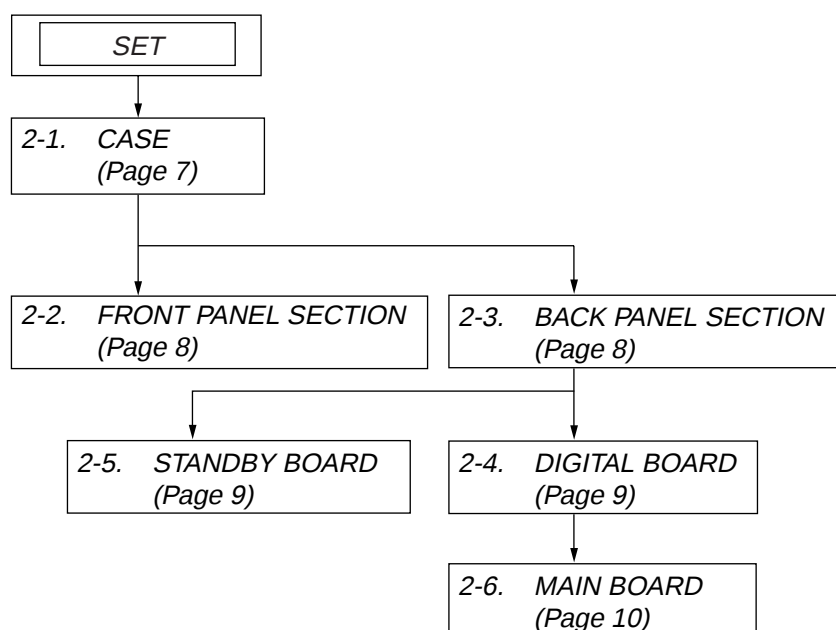


Note : Follow the disassembly procedure in the numerical order given.


2-1. CASE

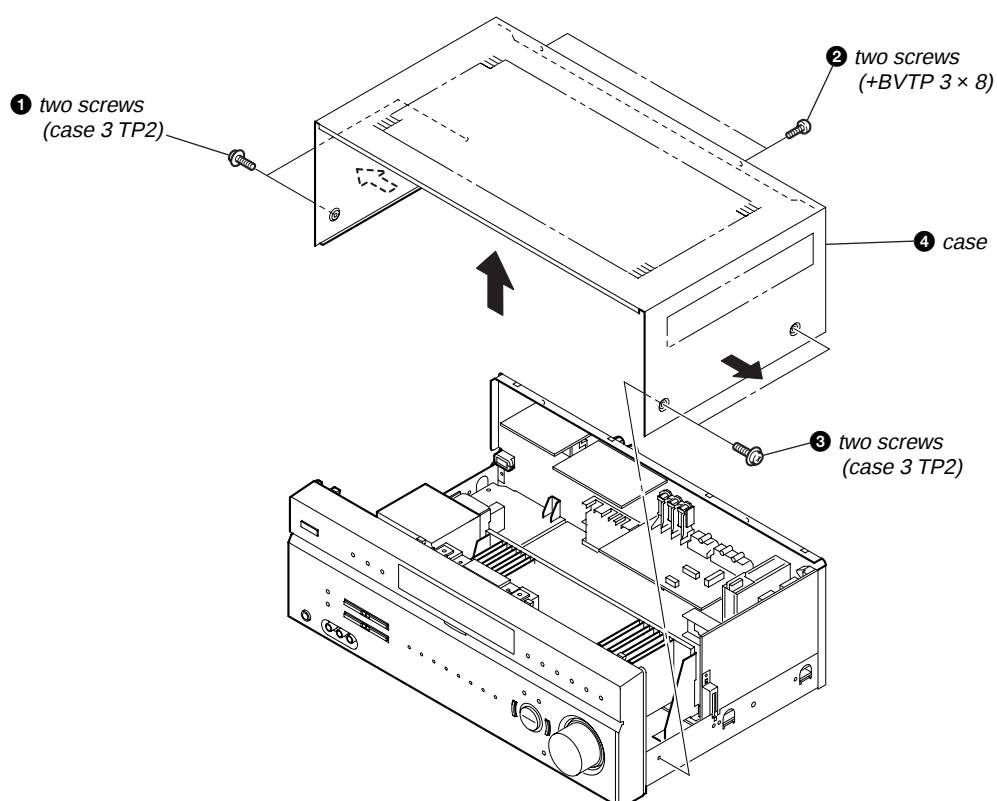


2-2. FRONT PANEL SECTION

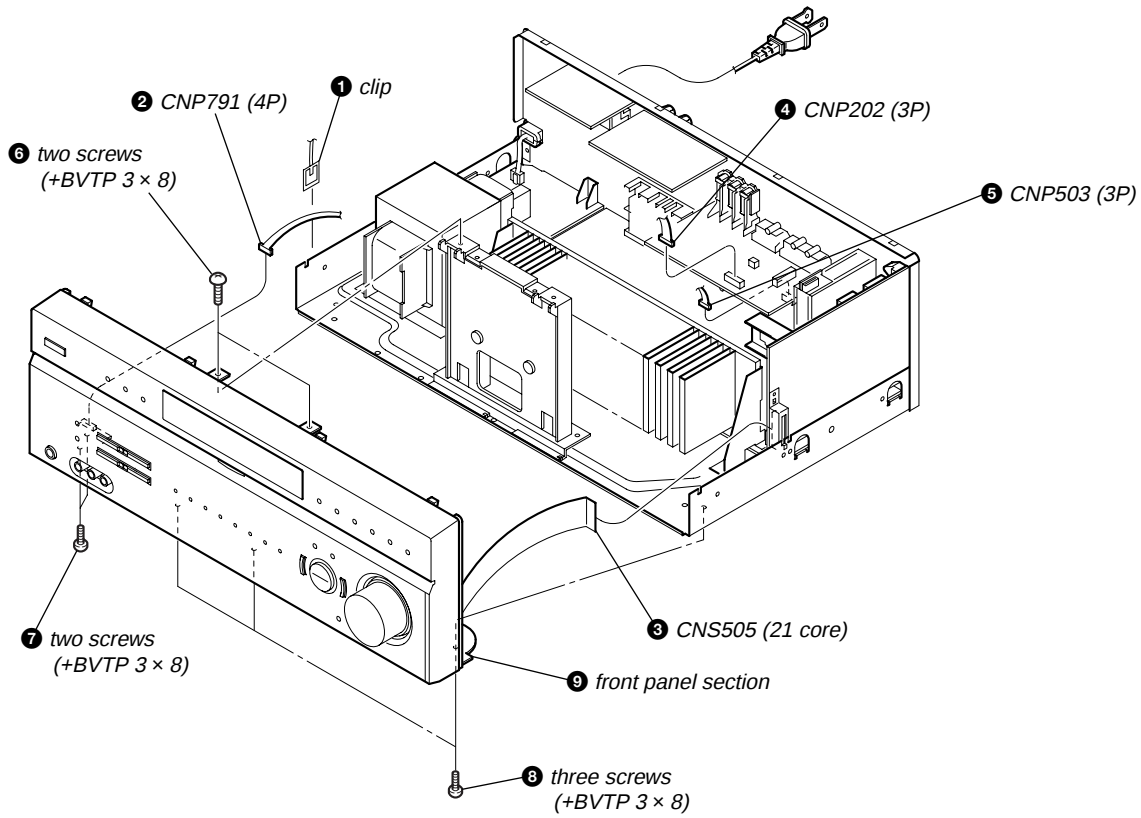


2-3. BACK PANEL SECTION

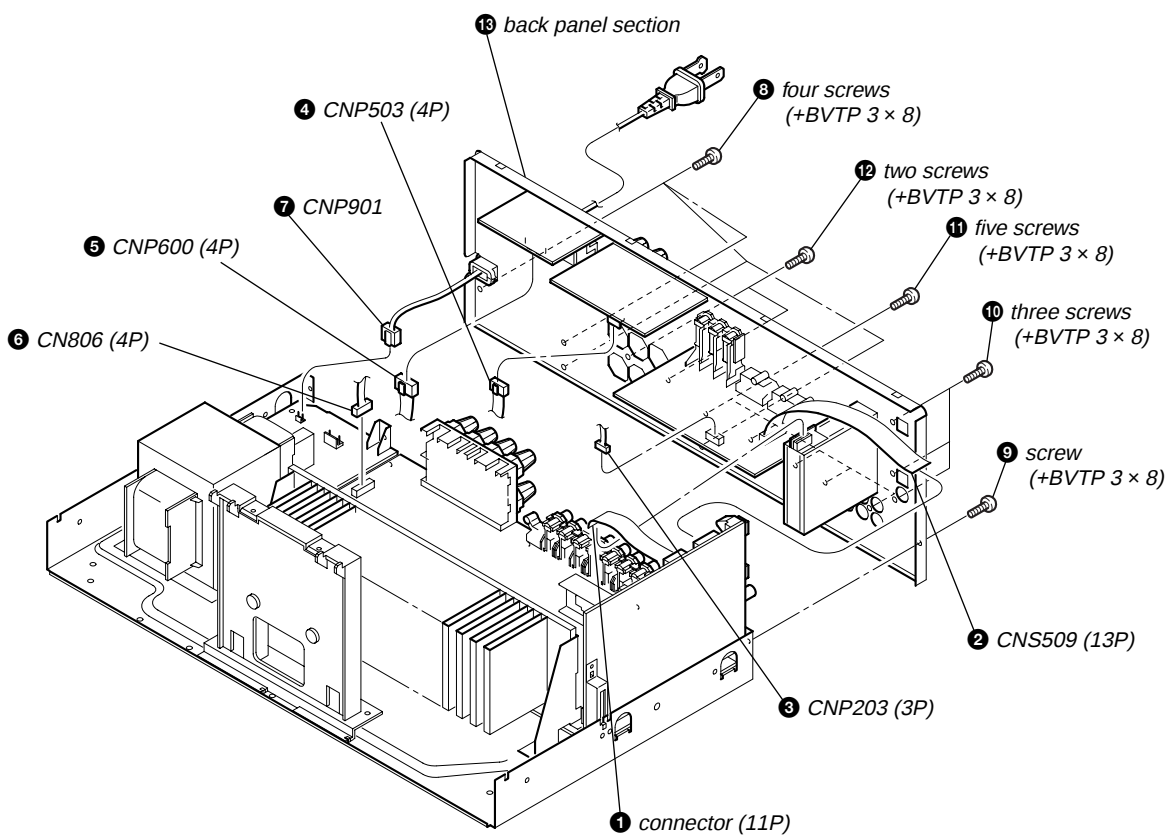


2-4. DIGITAL BOARD

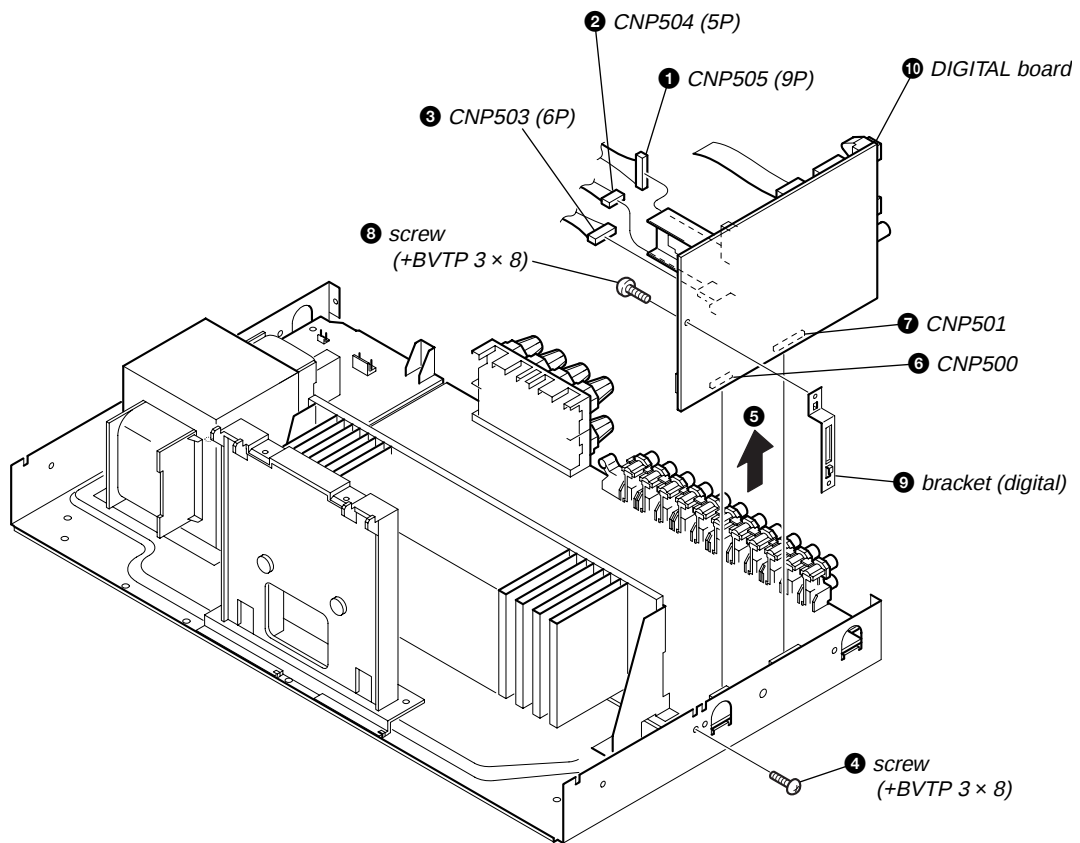

2-5. STANDBY BOARD

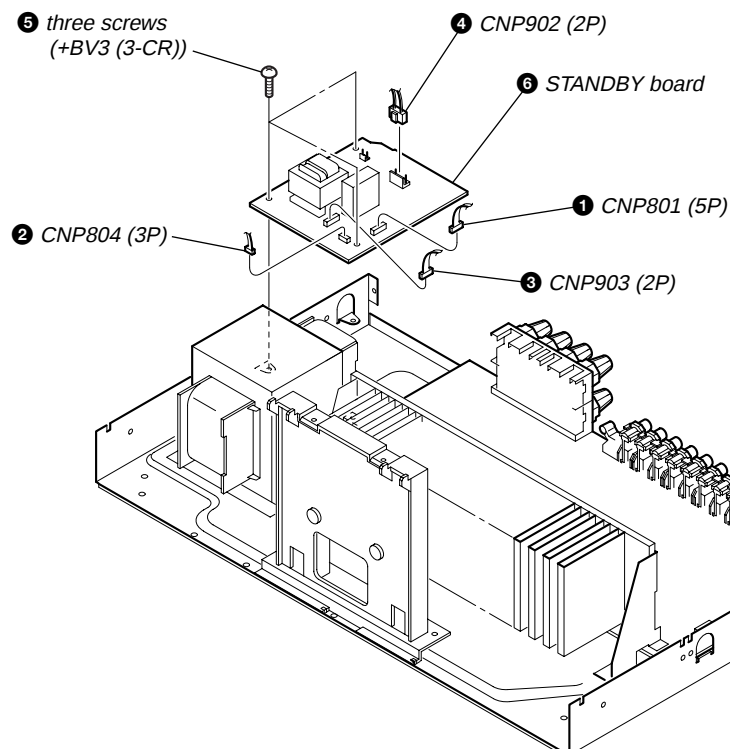

2-6. MAIN BOARD

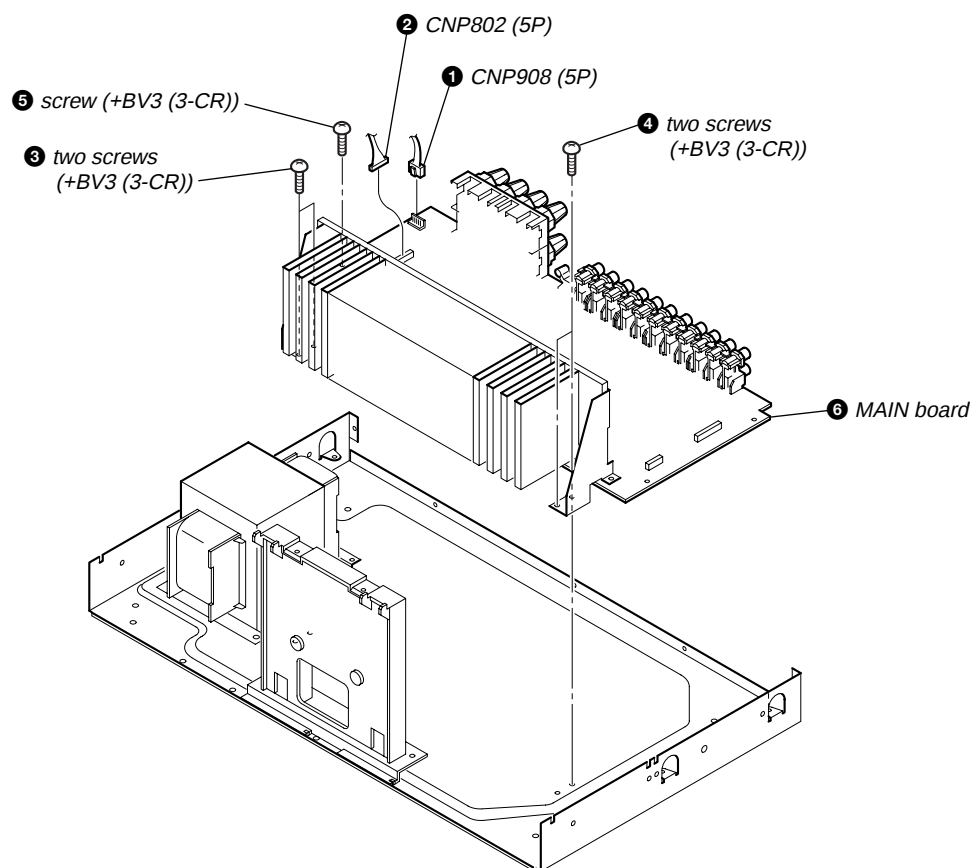

SECTION 3

TEST MODE

FACTORY PRESET MODE

- * All preset contents are reset to the default setting.
- * Procedure:
While depressing the **[FM MODE]** and the **[DISPLAY]** buttons simultaneously, press the **[I/⏻]** button to turn on the main power. The message “FACTORY” appears for a moment and the present contents are reset to the default values.

AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE (US, Canadian model only)

- * Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
- * Procedure:
Press the **[AM]** button to set AM and press the **[I/⏻]** button to turn off the main power.
While depressing the **[PRESET TUNING +]** button or the **[TUNING +]** button, press the **[I/⏻]** button to turn on the main power.
Either the message “9k STEP” or “10k STEP” appears for a moment and select the desired step.

SPEAKER SIZE SELECTION MODE

- * Either the normal speaker or micro satellite speaker can be selected.
- * Procedure:
While depressing the **[DIMMER]** button, press the **[I/⏻]** button to turn on the main power.
Either the message “NORM. SP.” or “MICRO SP.” appears for a moment and select the desired speaker size.

FLUORESCENT INDICATOR TUBE TEST MODE


- * All fluorescent segments are tested.
When this test is activated, all segments light on at the same time, then each segment lights on one after another.
- * Procedure:
While depressing the **[TUNING -]** and the **[SPEAKERS (OFF/A/B/A+B)]** buttons simultaneously, press the **[I/⏻]** button to turn on the main power.

1. ALL segments light on.




[2CH], **[A.F.D.]**, **[MOVIE]**, **[MUSIC]** and **[MULTI CHANNEL DECODING]** LED light on.

2. Press the **[VIDEO 1]** button, confirm display.

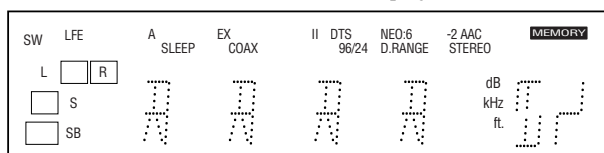

[A.F.D.] and **[MUSIC]** LED light on.

3. Press the **[VIDEO 1]** button, confirm display.

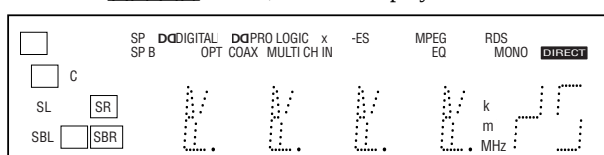

[2CH], **[MOVIE]** and **[MULTI CHANNEL DECODING]** LED light on.

4. Press the **[VIDEO 1]** button, all segments and all LEDs light off.
5. Every pressing the **[VIDEO 1]** button turns on each segment and LED one after another in the same order.
(Not only the **[VIDEO 1]** button, but also the other buttons such as **[VIDEO 2]**, **[VIDEO 3]**, **[DVD]**, **[MD/TAPE]**, **[SA-CD/CD]**, **[FM]** and **[AM]** can be used.)

SOUND FIELD CLEAR MODE

- * The preset sound field is cleared when this mode is activated.
Use this mode before returning the product to clients upon completion of repair.
- * Procedure:
While depressing the **[2CH]** button, press the **[I/⏻]** button to turn on the main power.
The message “SF. CLR.” appears for a moment and initialization is performed.

SOFTWARE VERSION DISPLAY MODE

- * The software version is displayed.
- * Procedure:
While depressing the **[TUNING -]** and the **[DISPLAY]** buttons simultaneously, press the **[I/⏻]** button to turn on the main power. The model name, destination and the software version are displayed for a moment.

KEY CHECK MODE


- * Button check
- * Procedure:
While depressing the **[TUNING -]** and the **[MAIN MENU]** buttons simultaneously, press the **[I/⏻]** button to turn on the main power. Either the message “REST 30” appears.
Every pressing of any button other than the **[I/⏻]** counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed “REST 00” appears.

COMMAND MODE SELECTION MODE


- * The command mode (AV1 or AV2) of the remote commander can be selected.
- * Procedure:
While depressing the **[ENTER]** button, press the **[I/⏻]** button to turn on the main power.
Either the message “C.MODE.AV 1” or “C.MODE.AV 2” appears for a moment and select the desired mode.

SECTION 4 DIAGRAMS


4-1. CIRCUIT BOARDS LOCATION

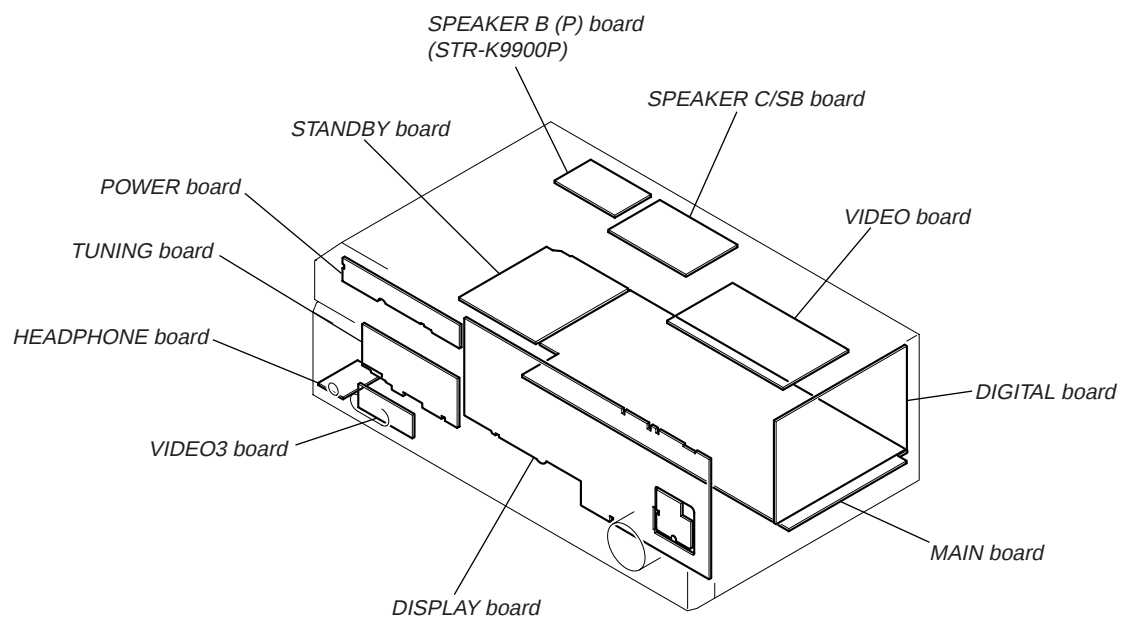


4-2. BLOCK DIAGRAM — TUNER/AUDIO SECTION —

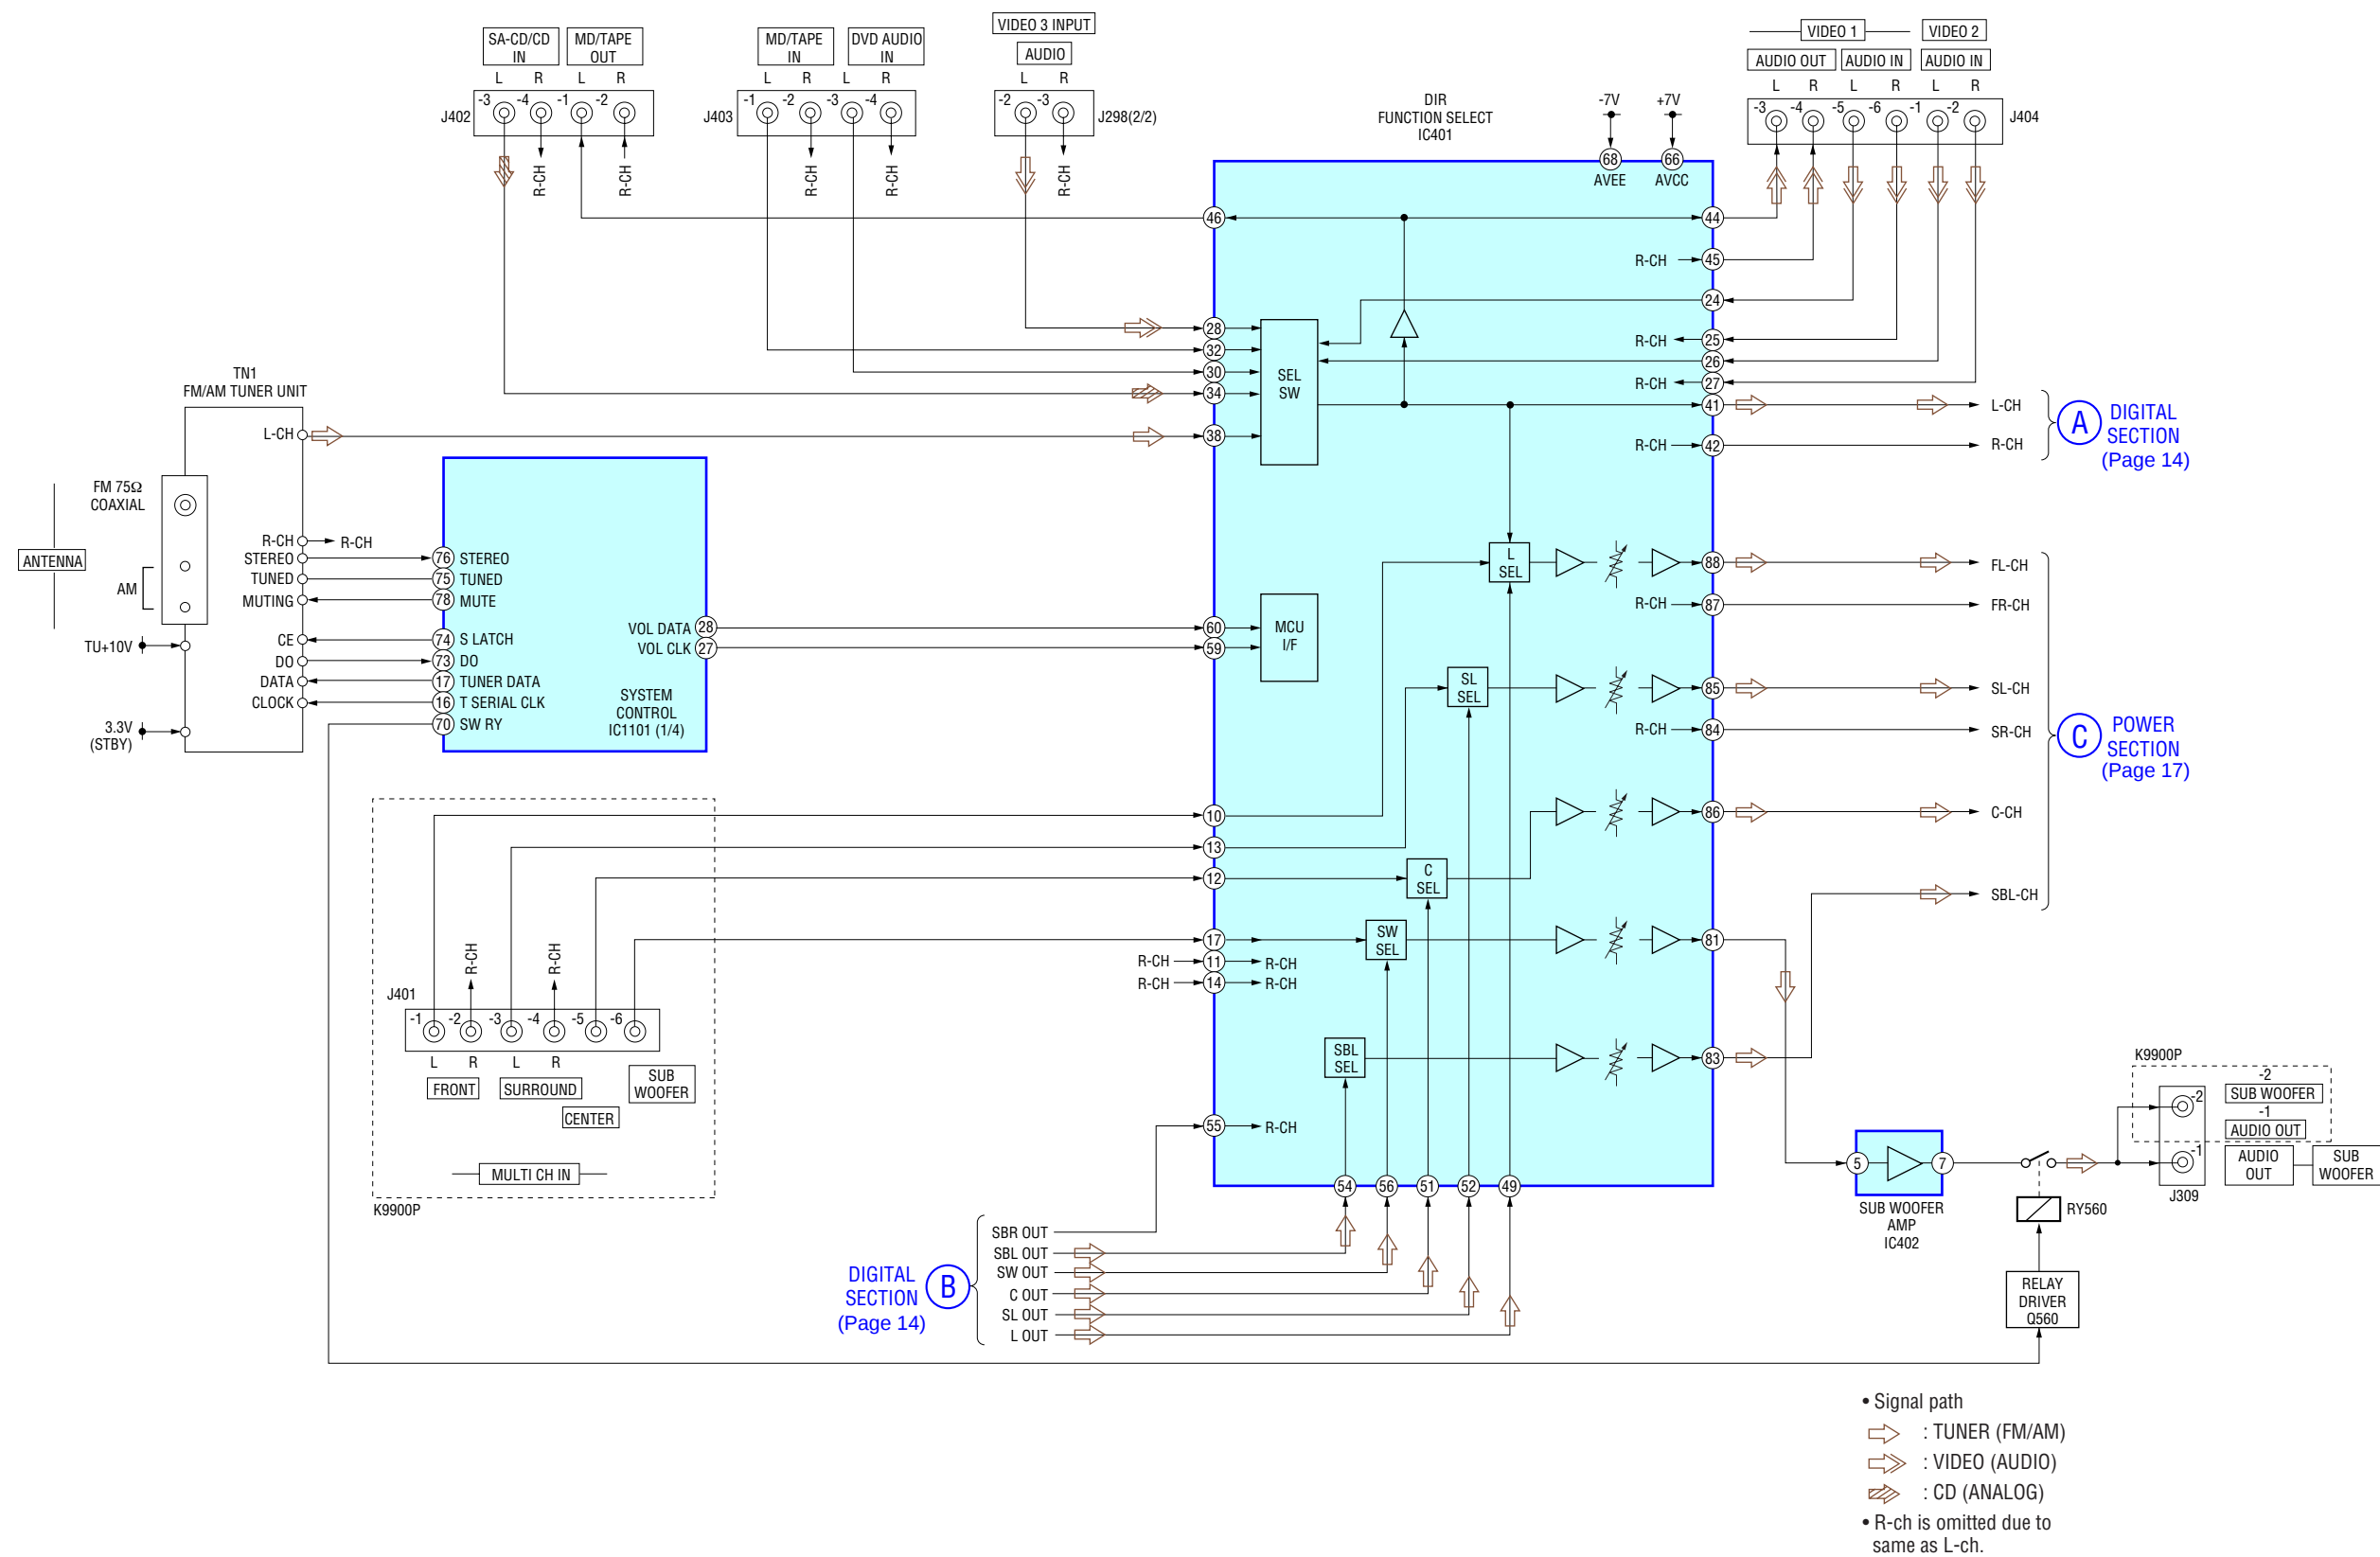


4-3. BLOCK DIAGRAM — DIGITAL SECTION —

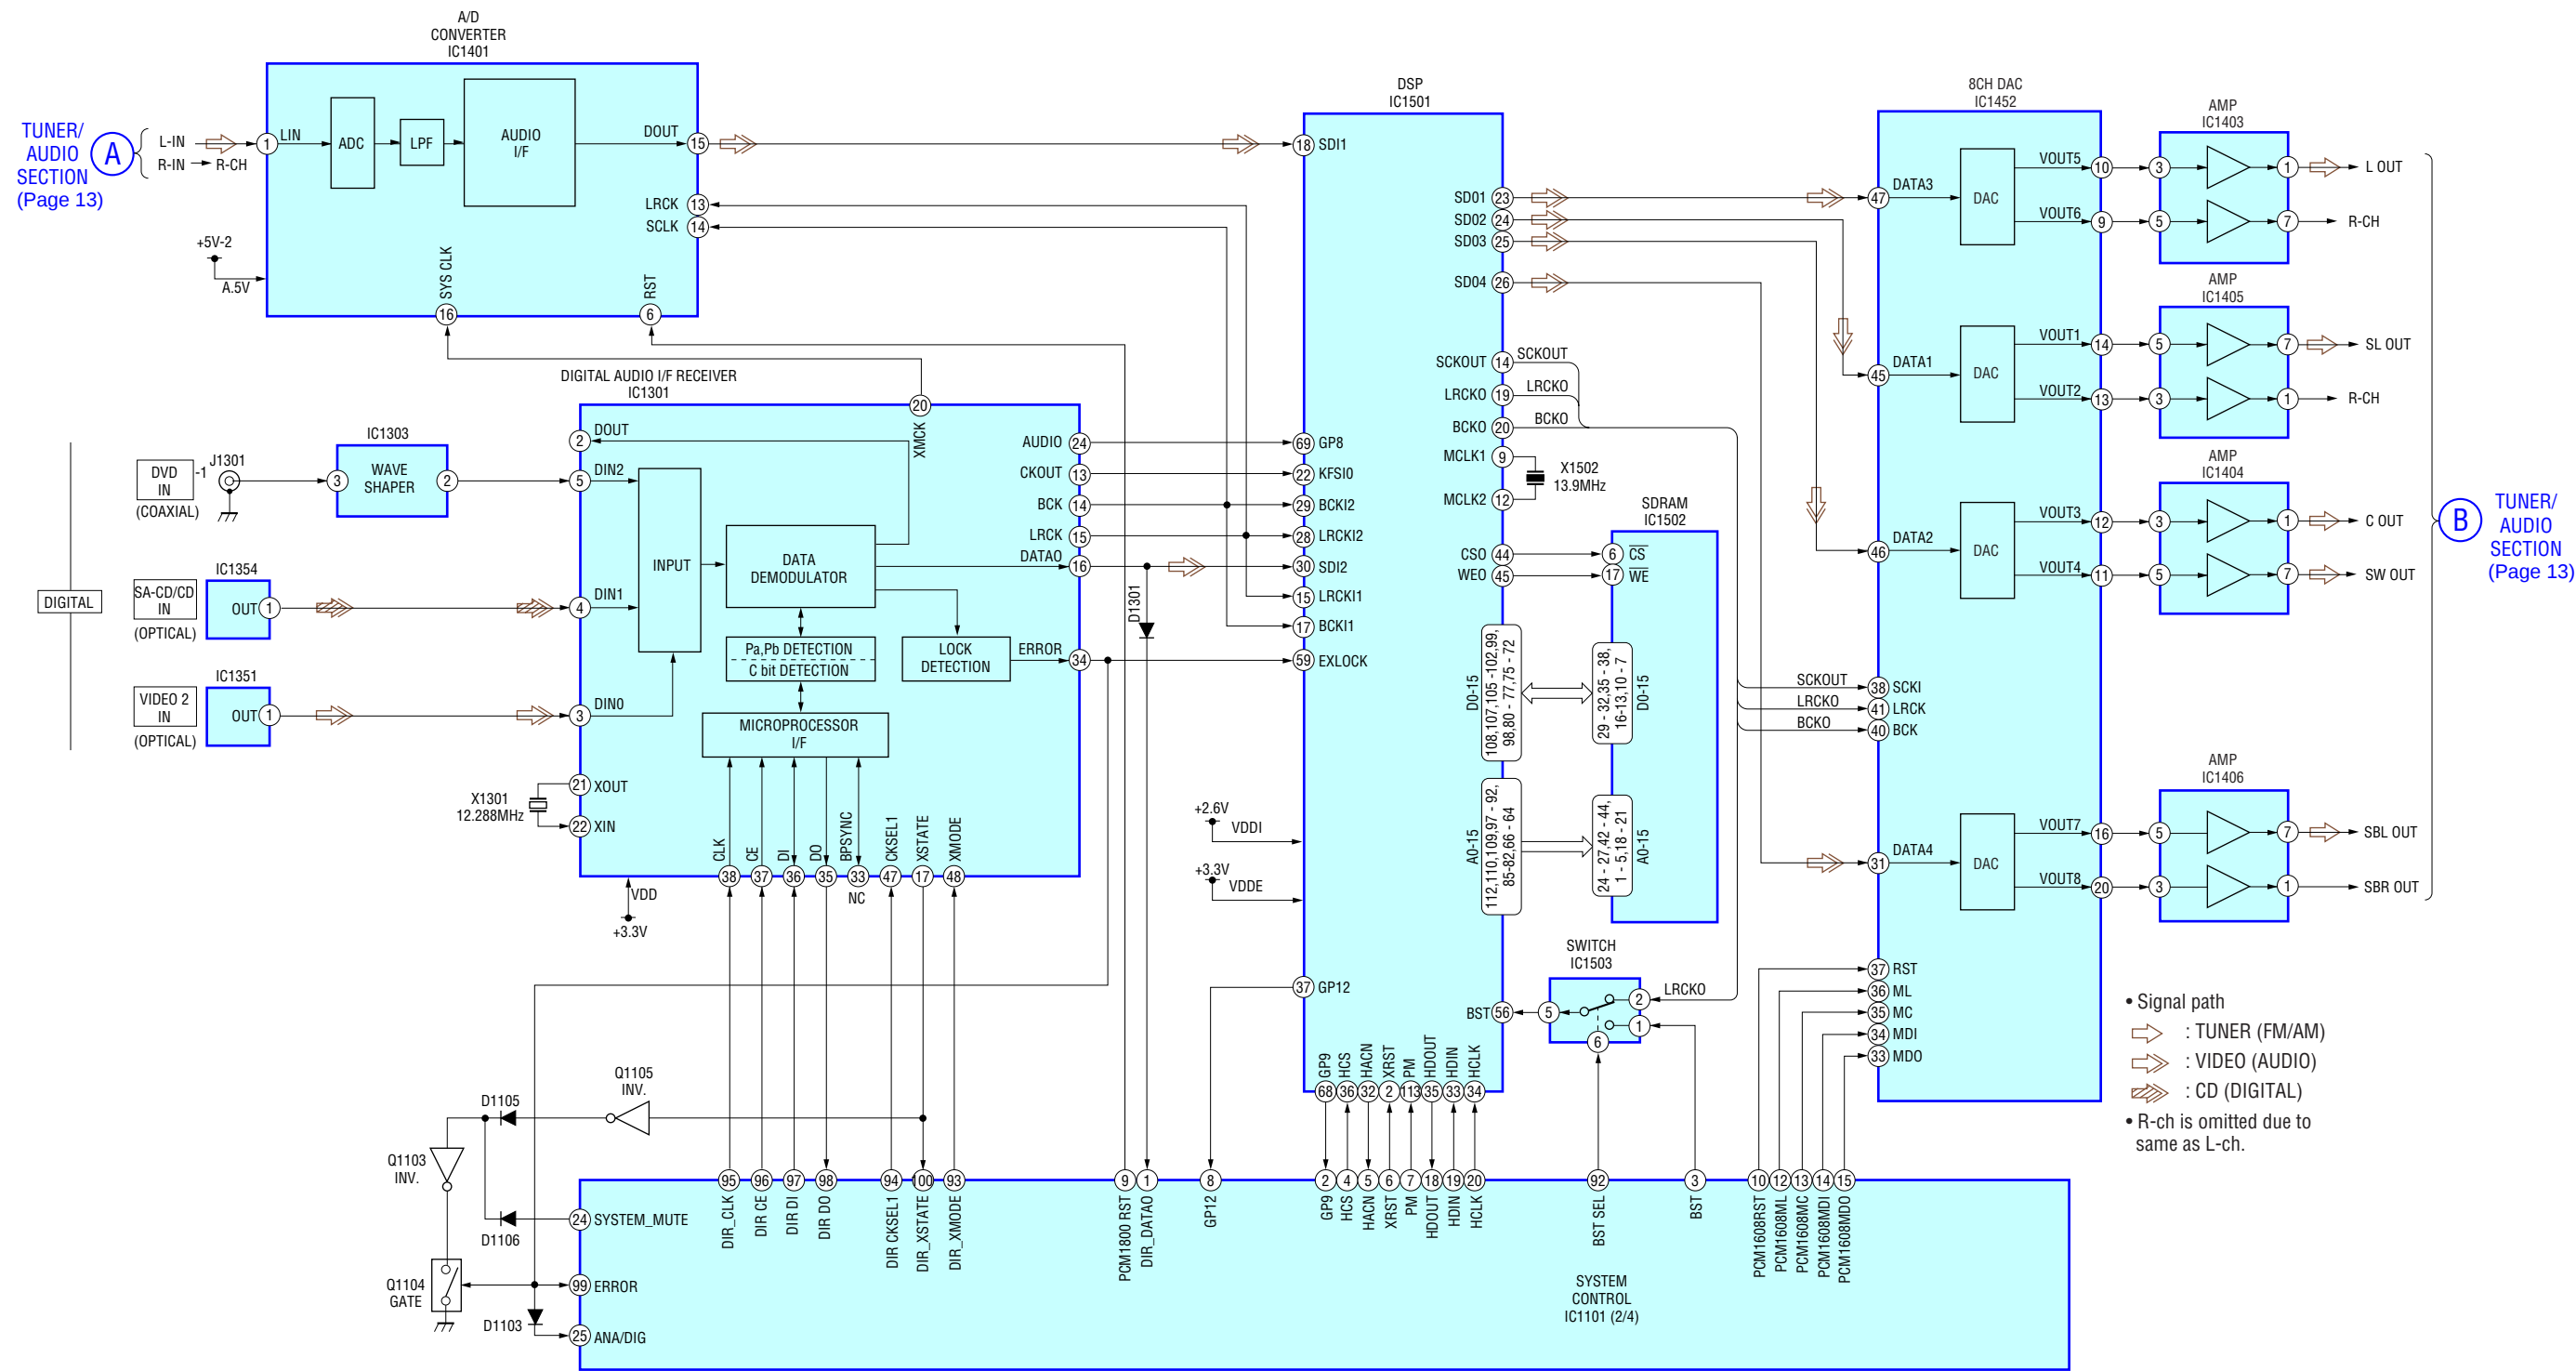


4-4. BLOCK DIAGRAM — VIDEO SECTION —

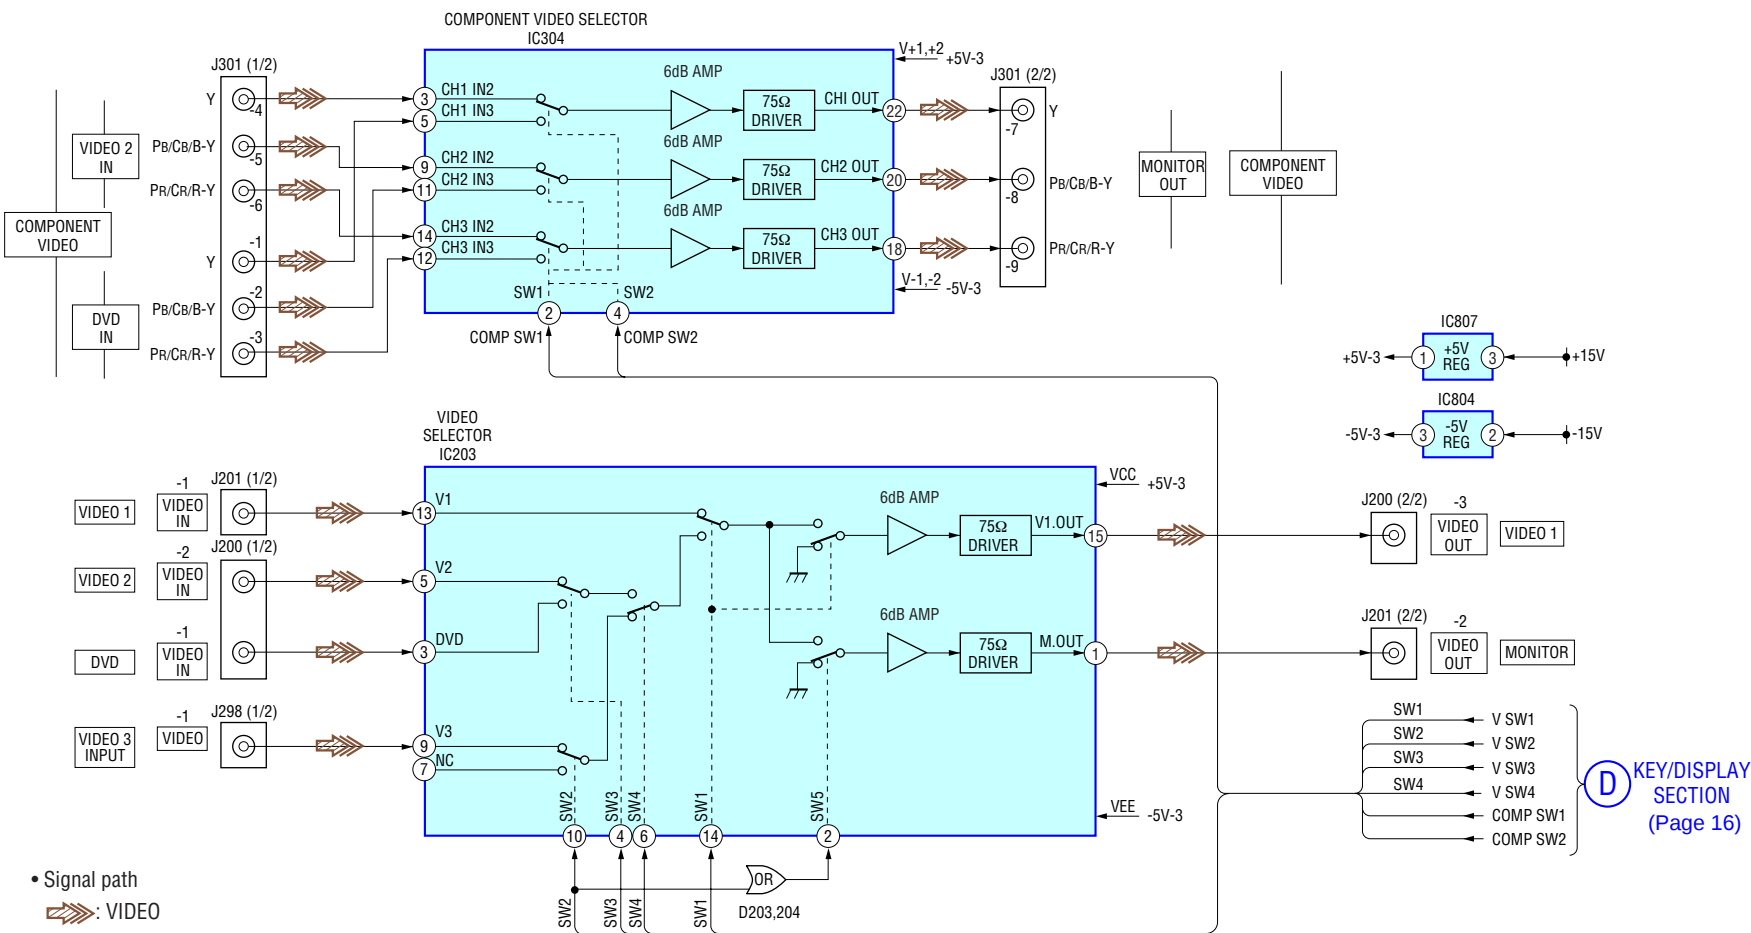

4-5. BLOCK DIAGRAM — KEY/DISPLAY SECTION —

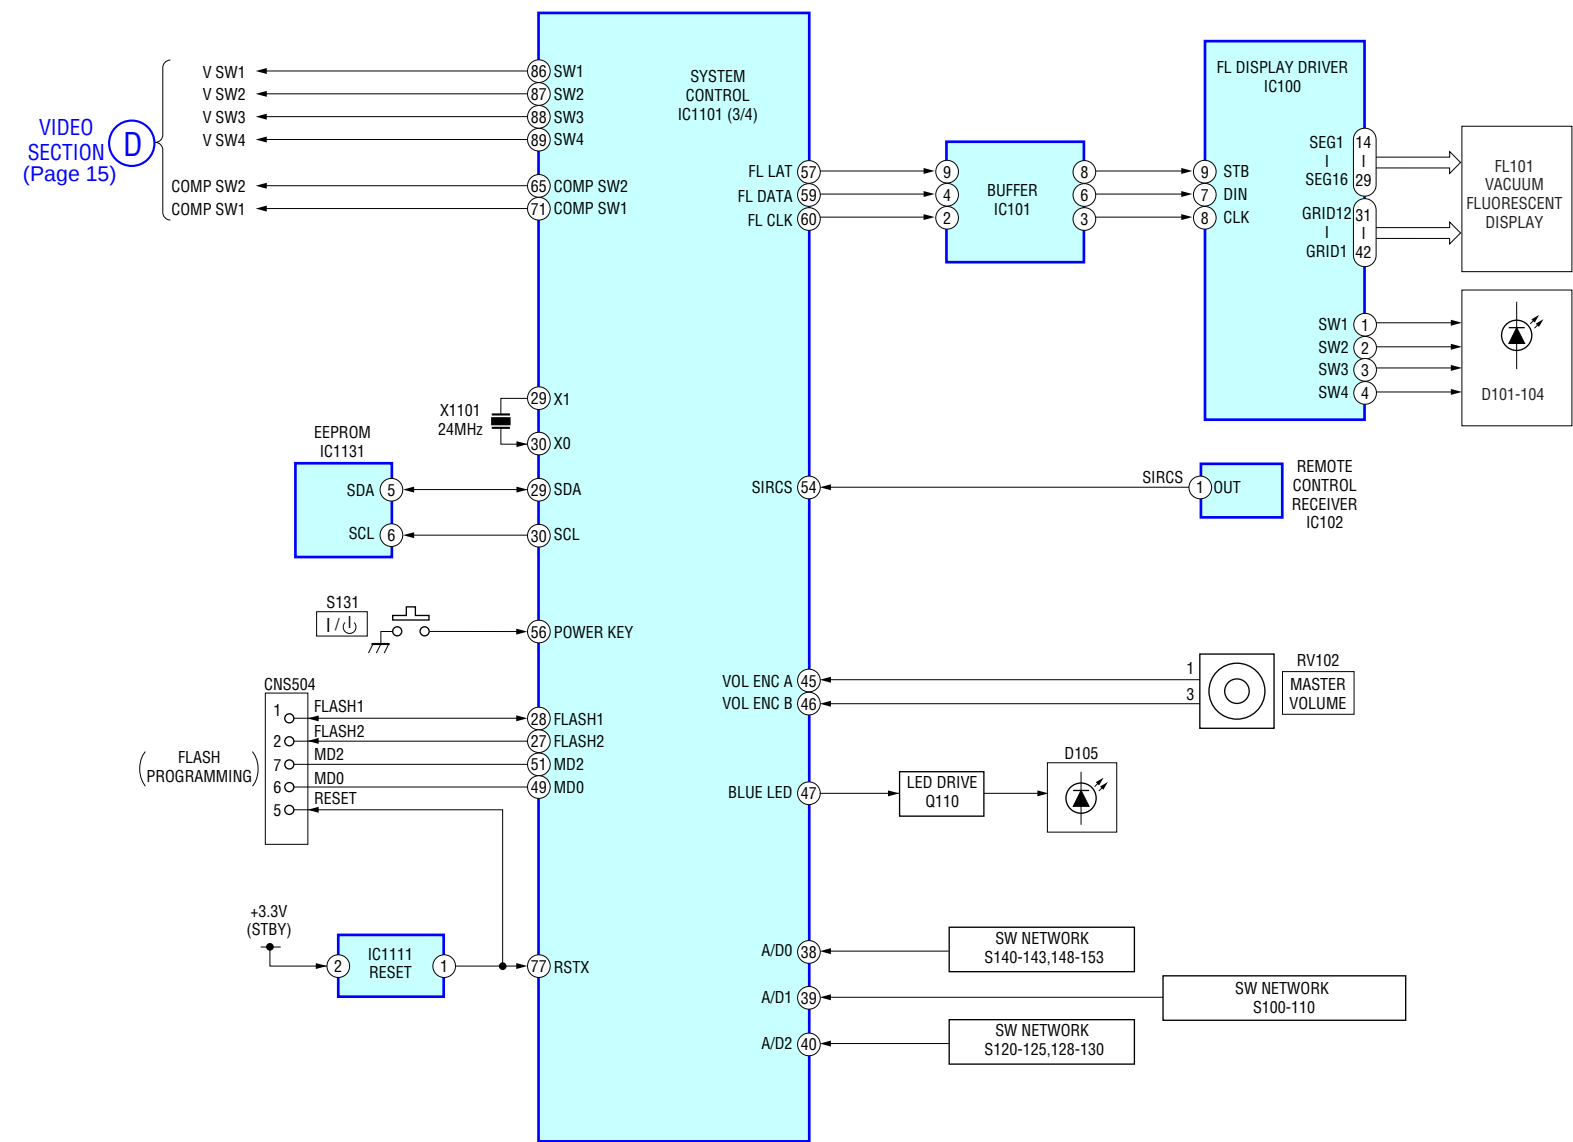

4-6. BLOCK DIAGRAM — POWER SECTION —

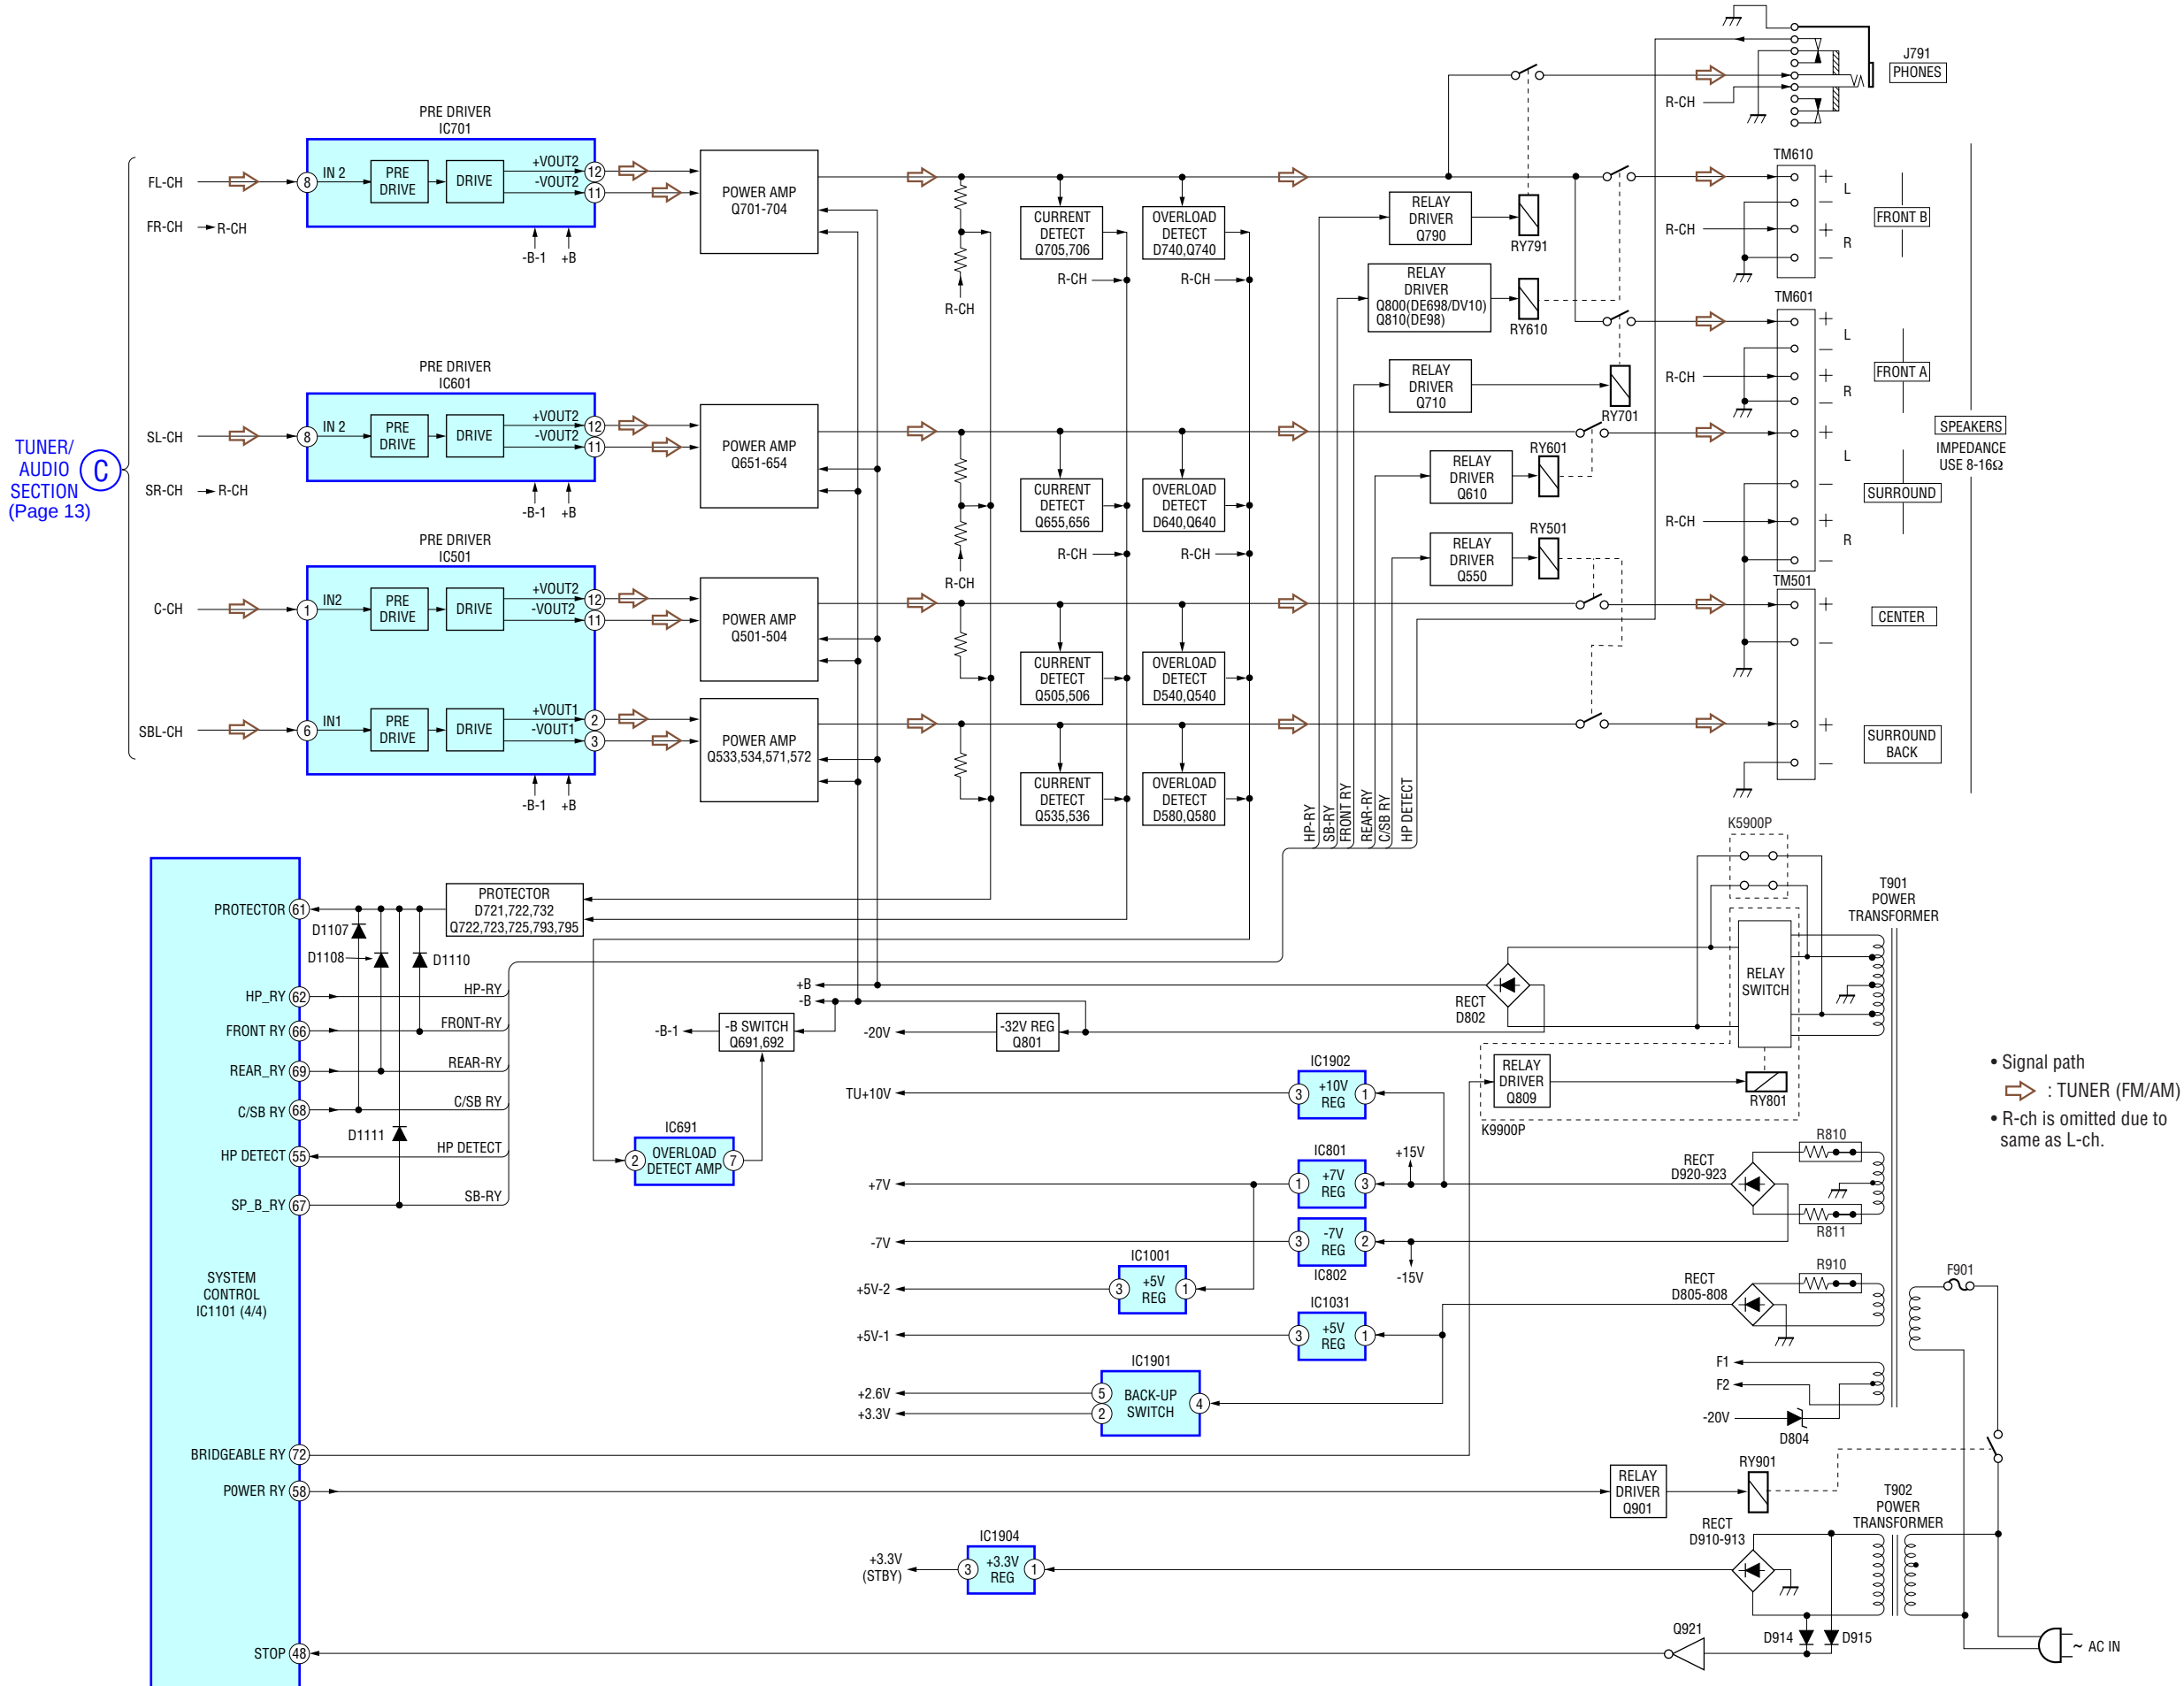

THIS NOTE IS COMMON FOR PRINTED WIRING
BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is
printed in each block.)

for schematic diagram:

- All capacitors are in μF unless otherwise noted. (p: pF)
50 WV or less are not indicated except for electrolytics
and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise
specified.
- $\triangle$: internal component.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.

Note:
The components identi-
fied by mark $\triangle$ or dotted
line with mark $\triangle$ are criti-
cal for safety.
Replace only with part
number specified.


Note:
Les composants identifiés par
une marque $\triangle$ sont critiques
pour la sécurité.
Ne les remplacer que par une
pièce portant le numéro
spécifié.

-  : B+ Line.
-  : B- Line.
- Voltage and waveforms are dc with respect to ground
under no-signal (detuned) conditions.
no mark : FM
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal produc-
tion tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal produc-
tion tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 : TUNER (FM/AM)
 : VIDEO (AUDIO)
 : VIDEO
 : CD (ANALOG)
 : CD (DIGITAL)


for printed wiring boards:

-  : parts extracted from the component side.
- $\triangle$: internal component.
-  : Pattern from the side which enables seeing.


Caution:
Pattern face side: Parts on the pattern face side seen from the
(Side B) pattern face are indicated.
Parts face side: Parts on the parts face side seen from the
(Side A) parts face are indicated.

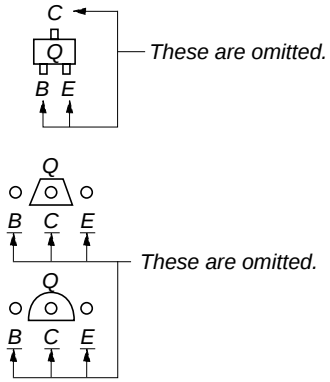


• Waveforms
— DIGITAL Board —

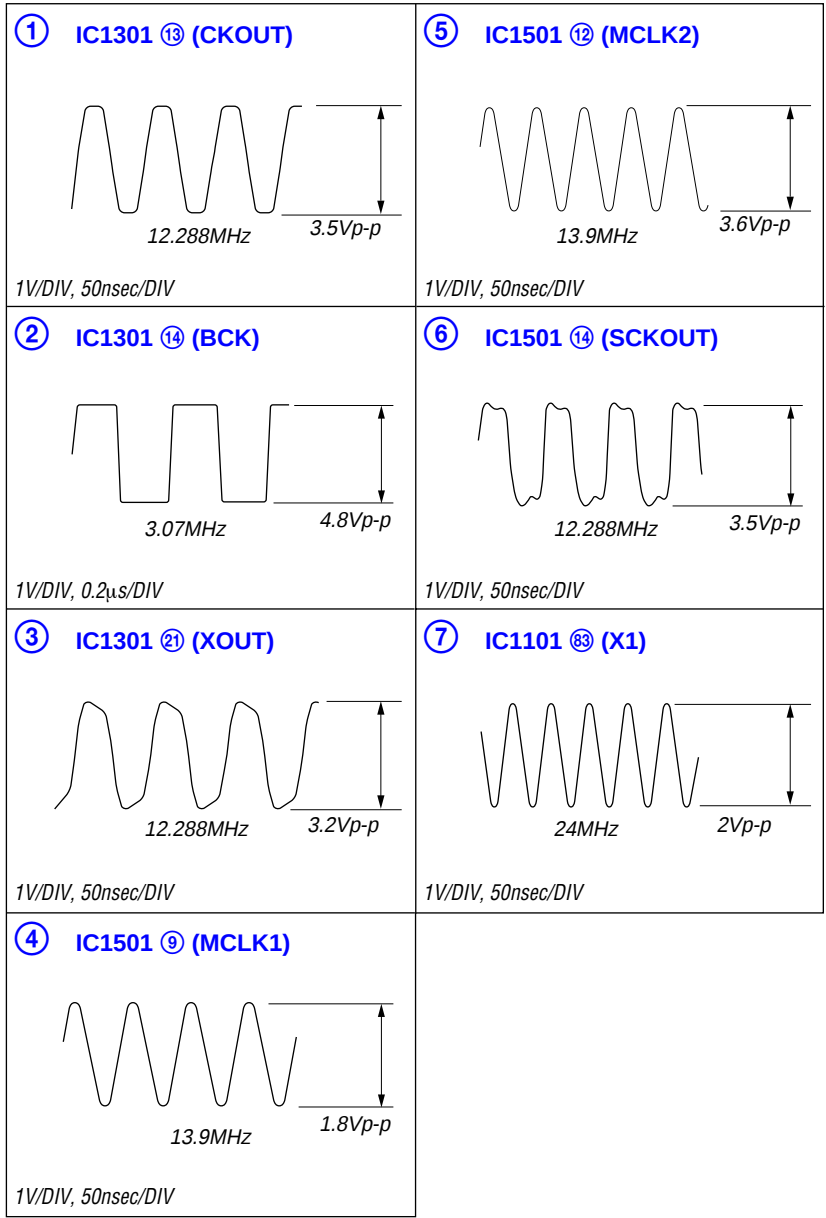


4-7. PRINTED WIRING BOARDS — MAIN SECTION — • Refer to page 12 for Circuit Boards Location.

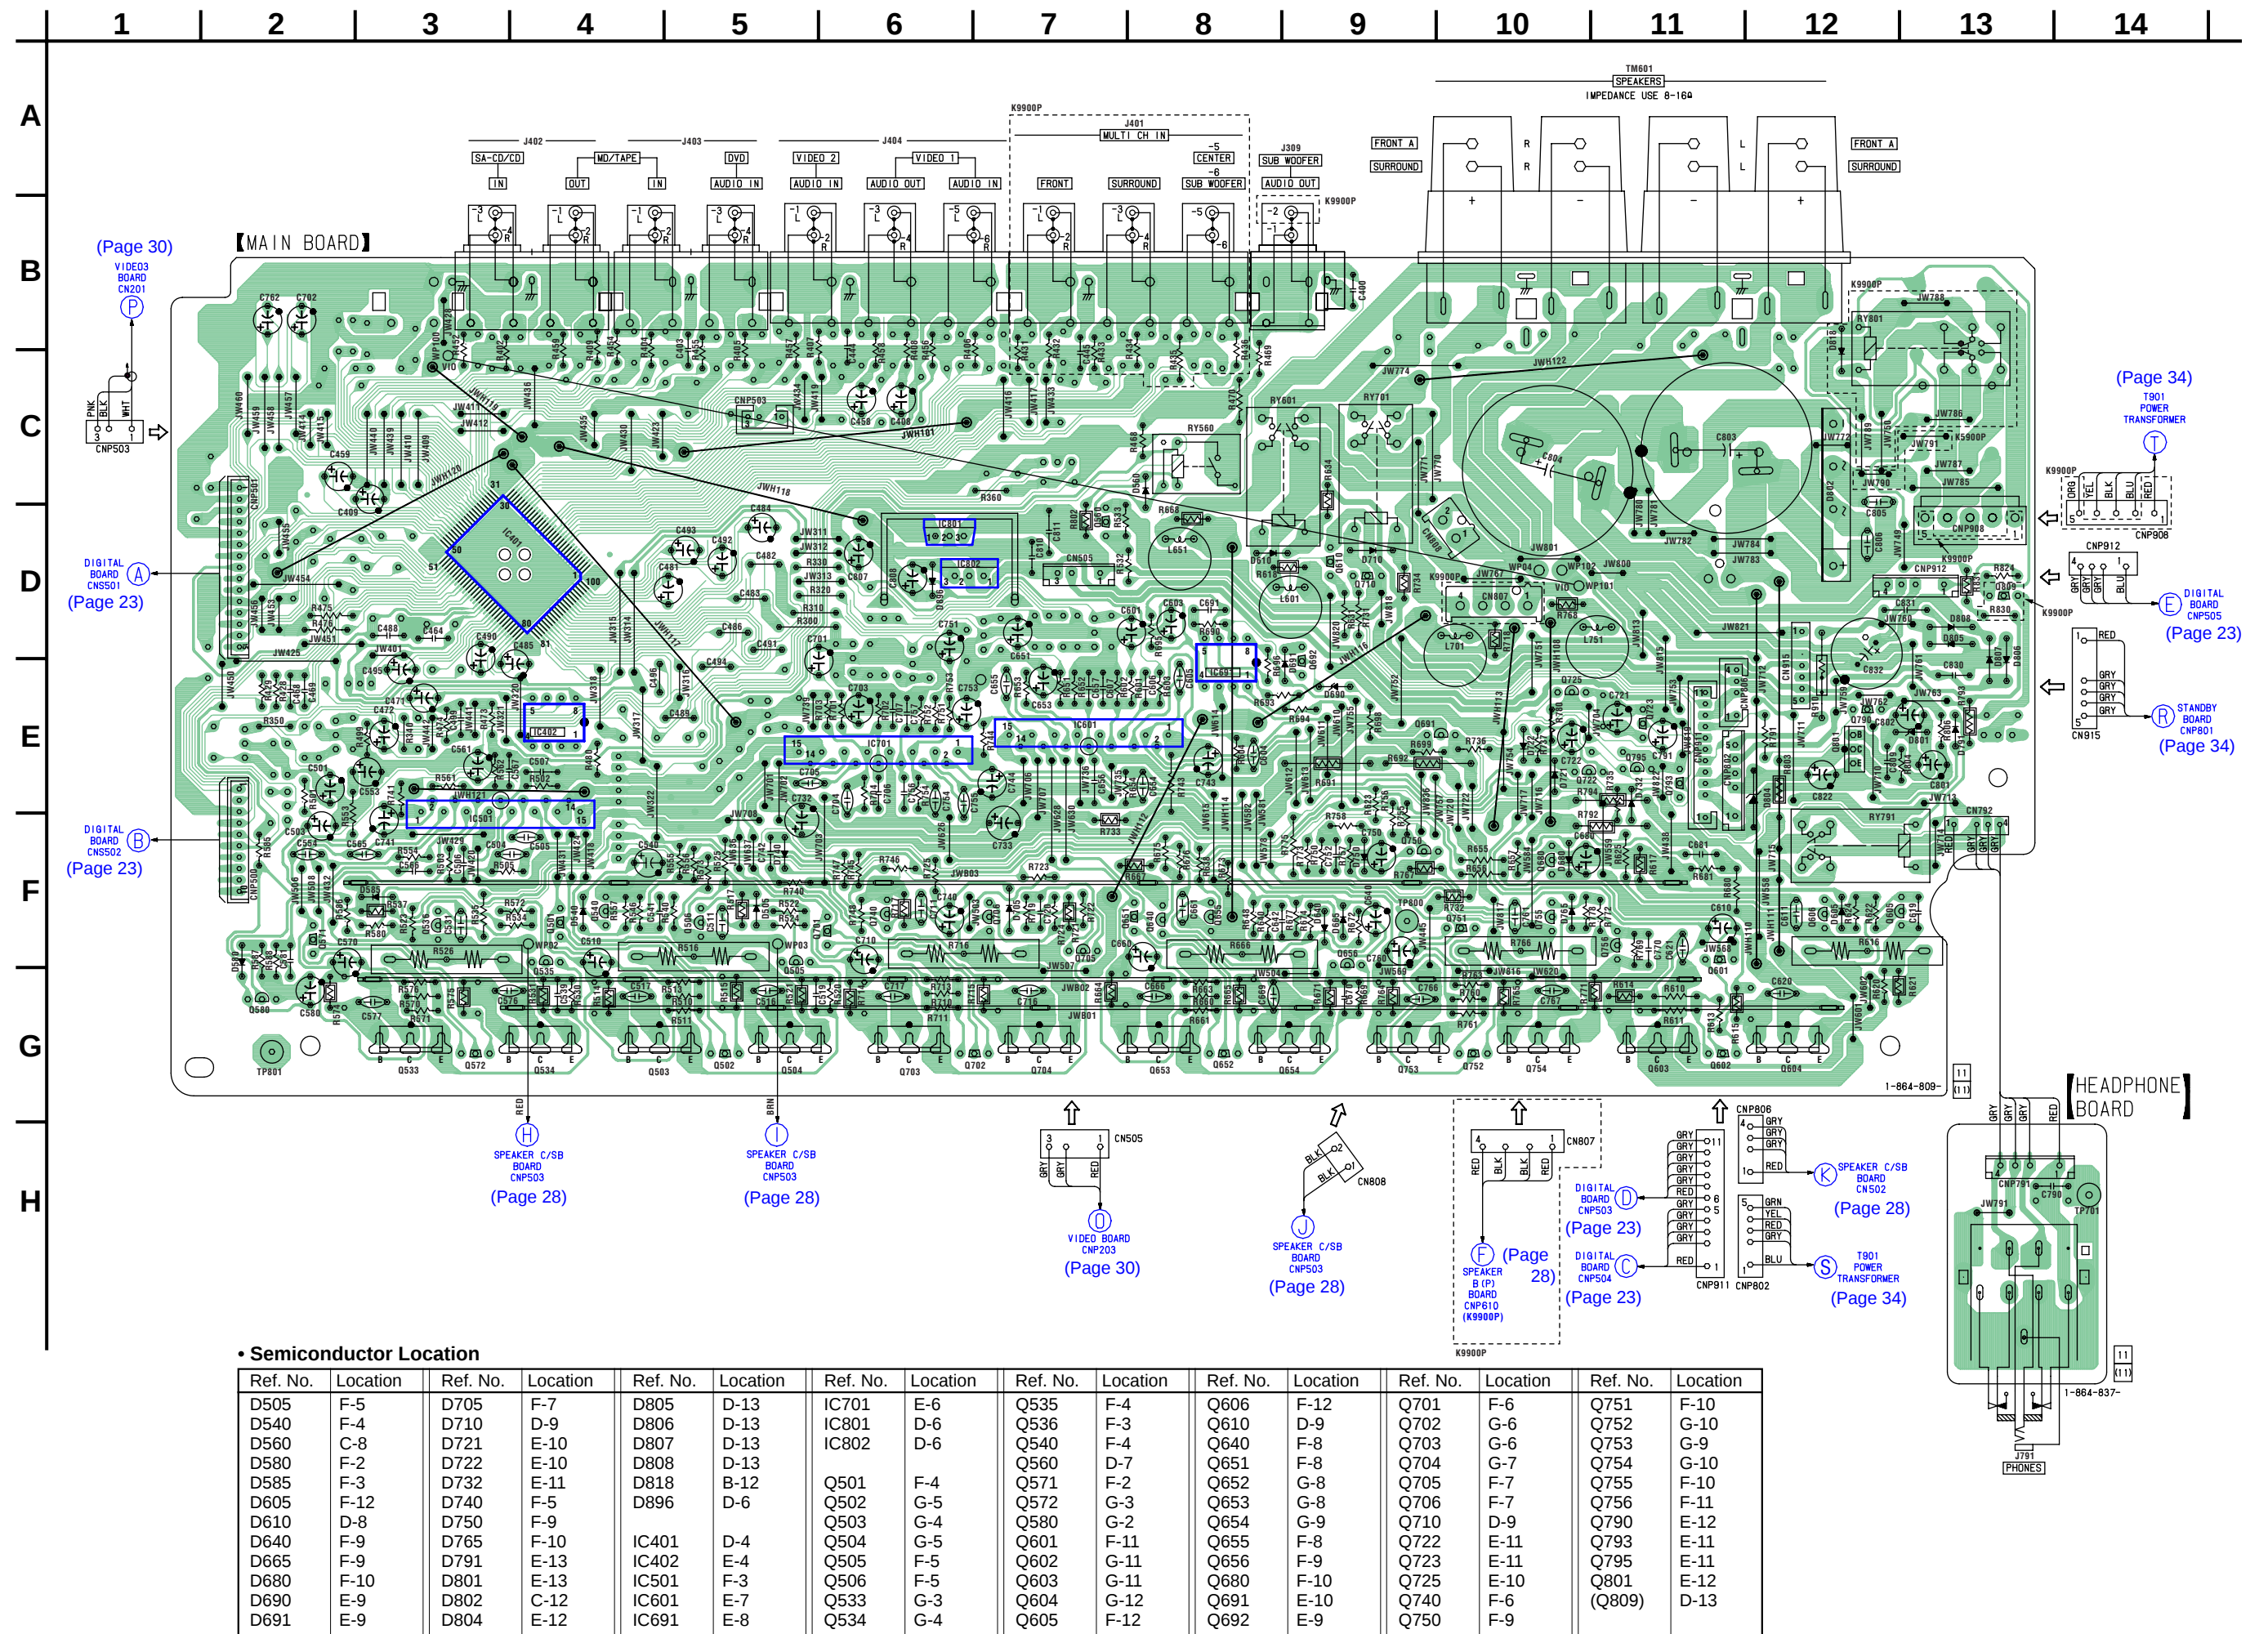


4-8. SCHEMATIC DIAGRAM — MAIN SECTION (1/2) —

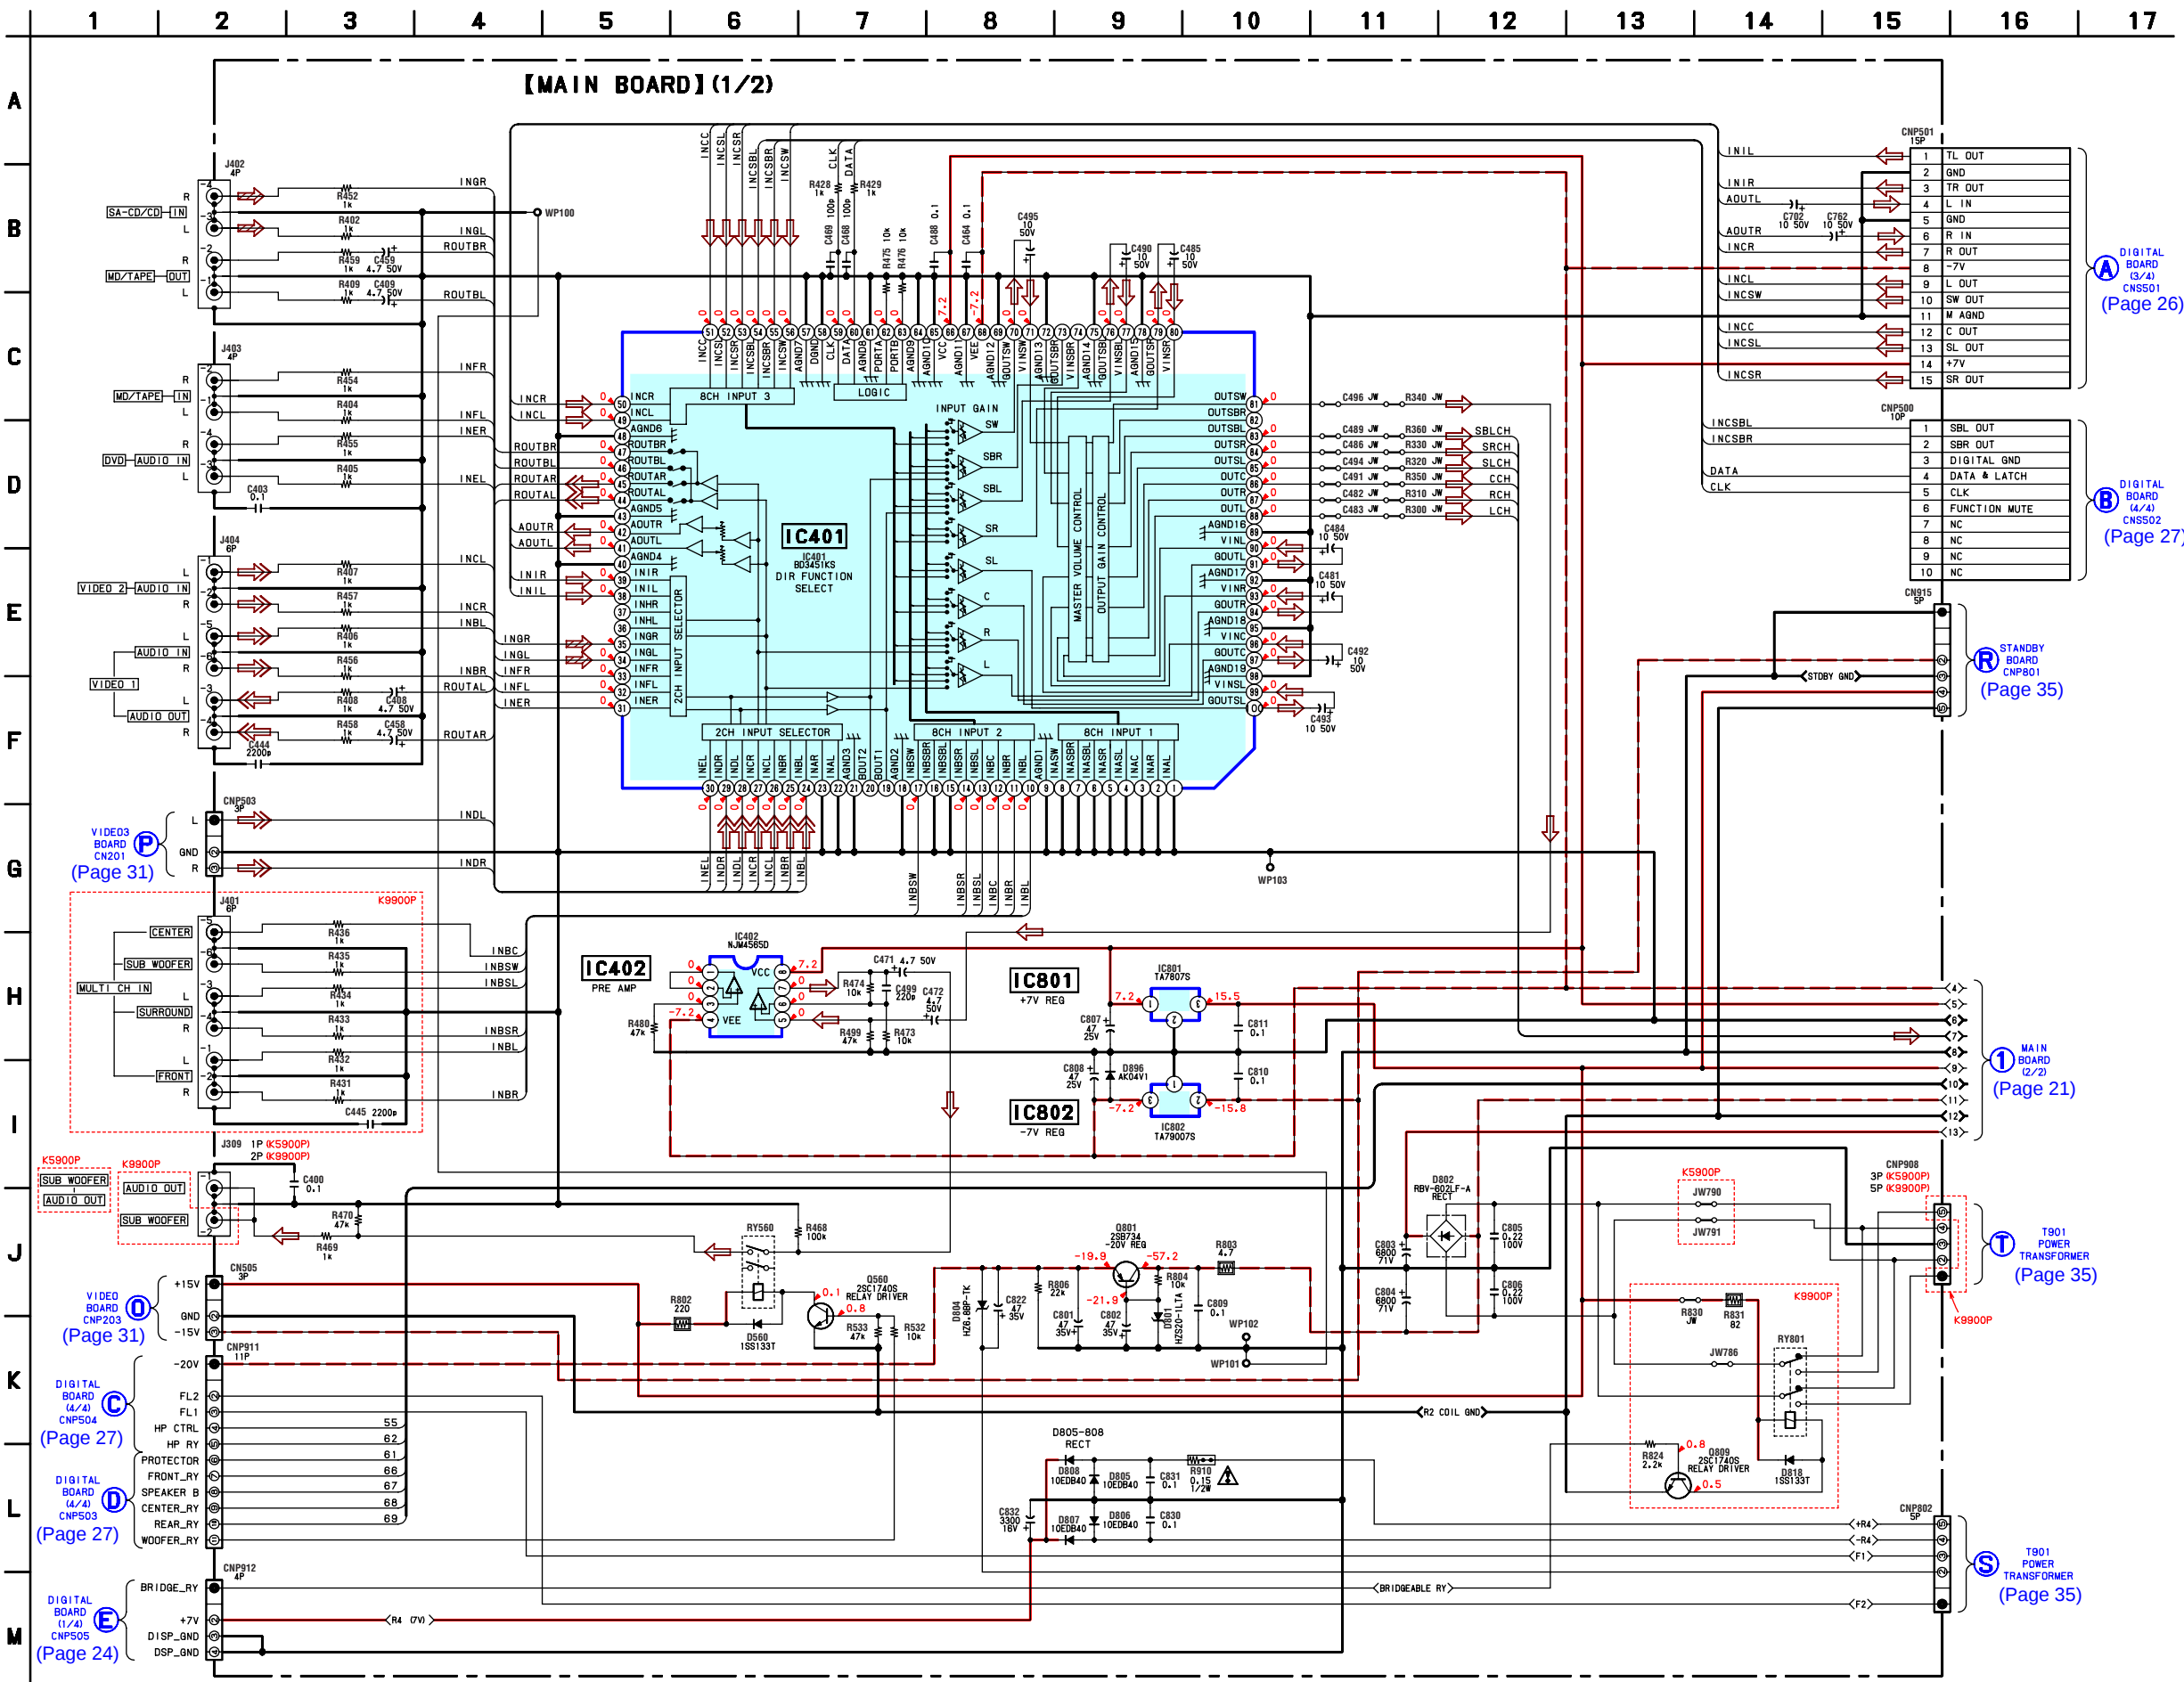


4-9. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 36 for IC Block Diagrams.

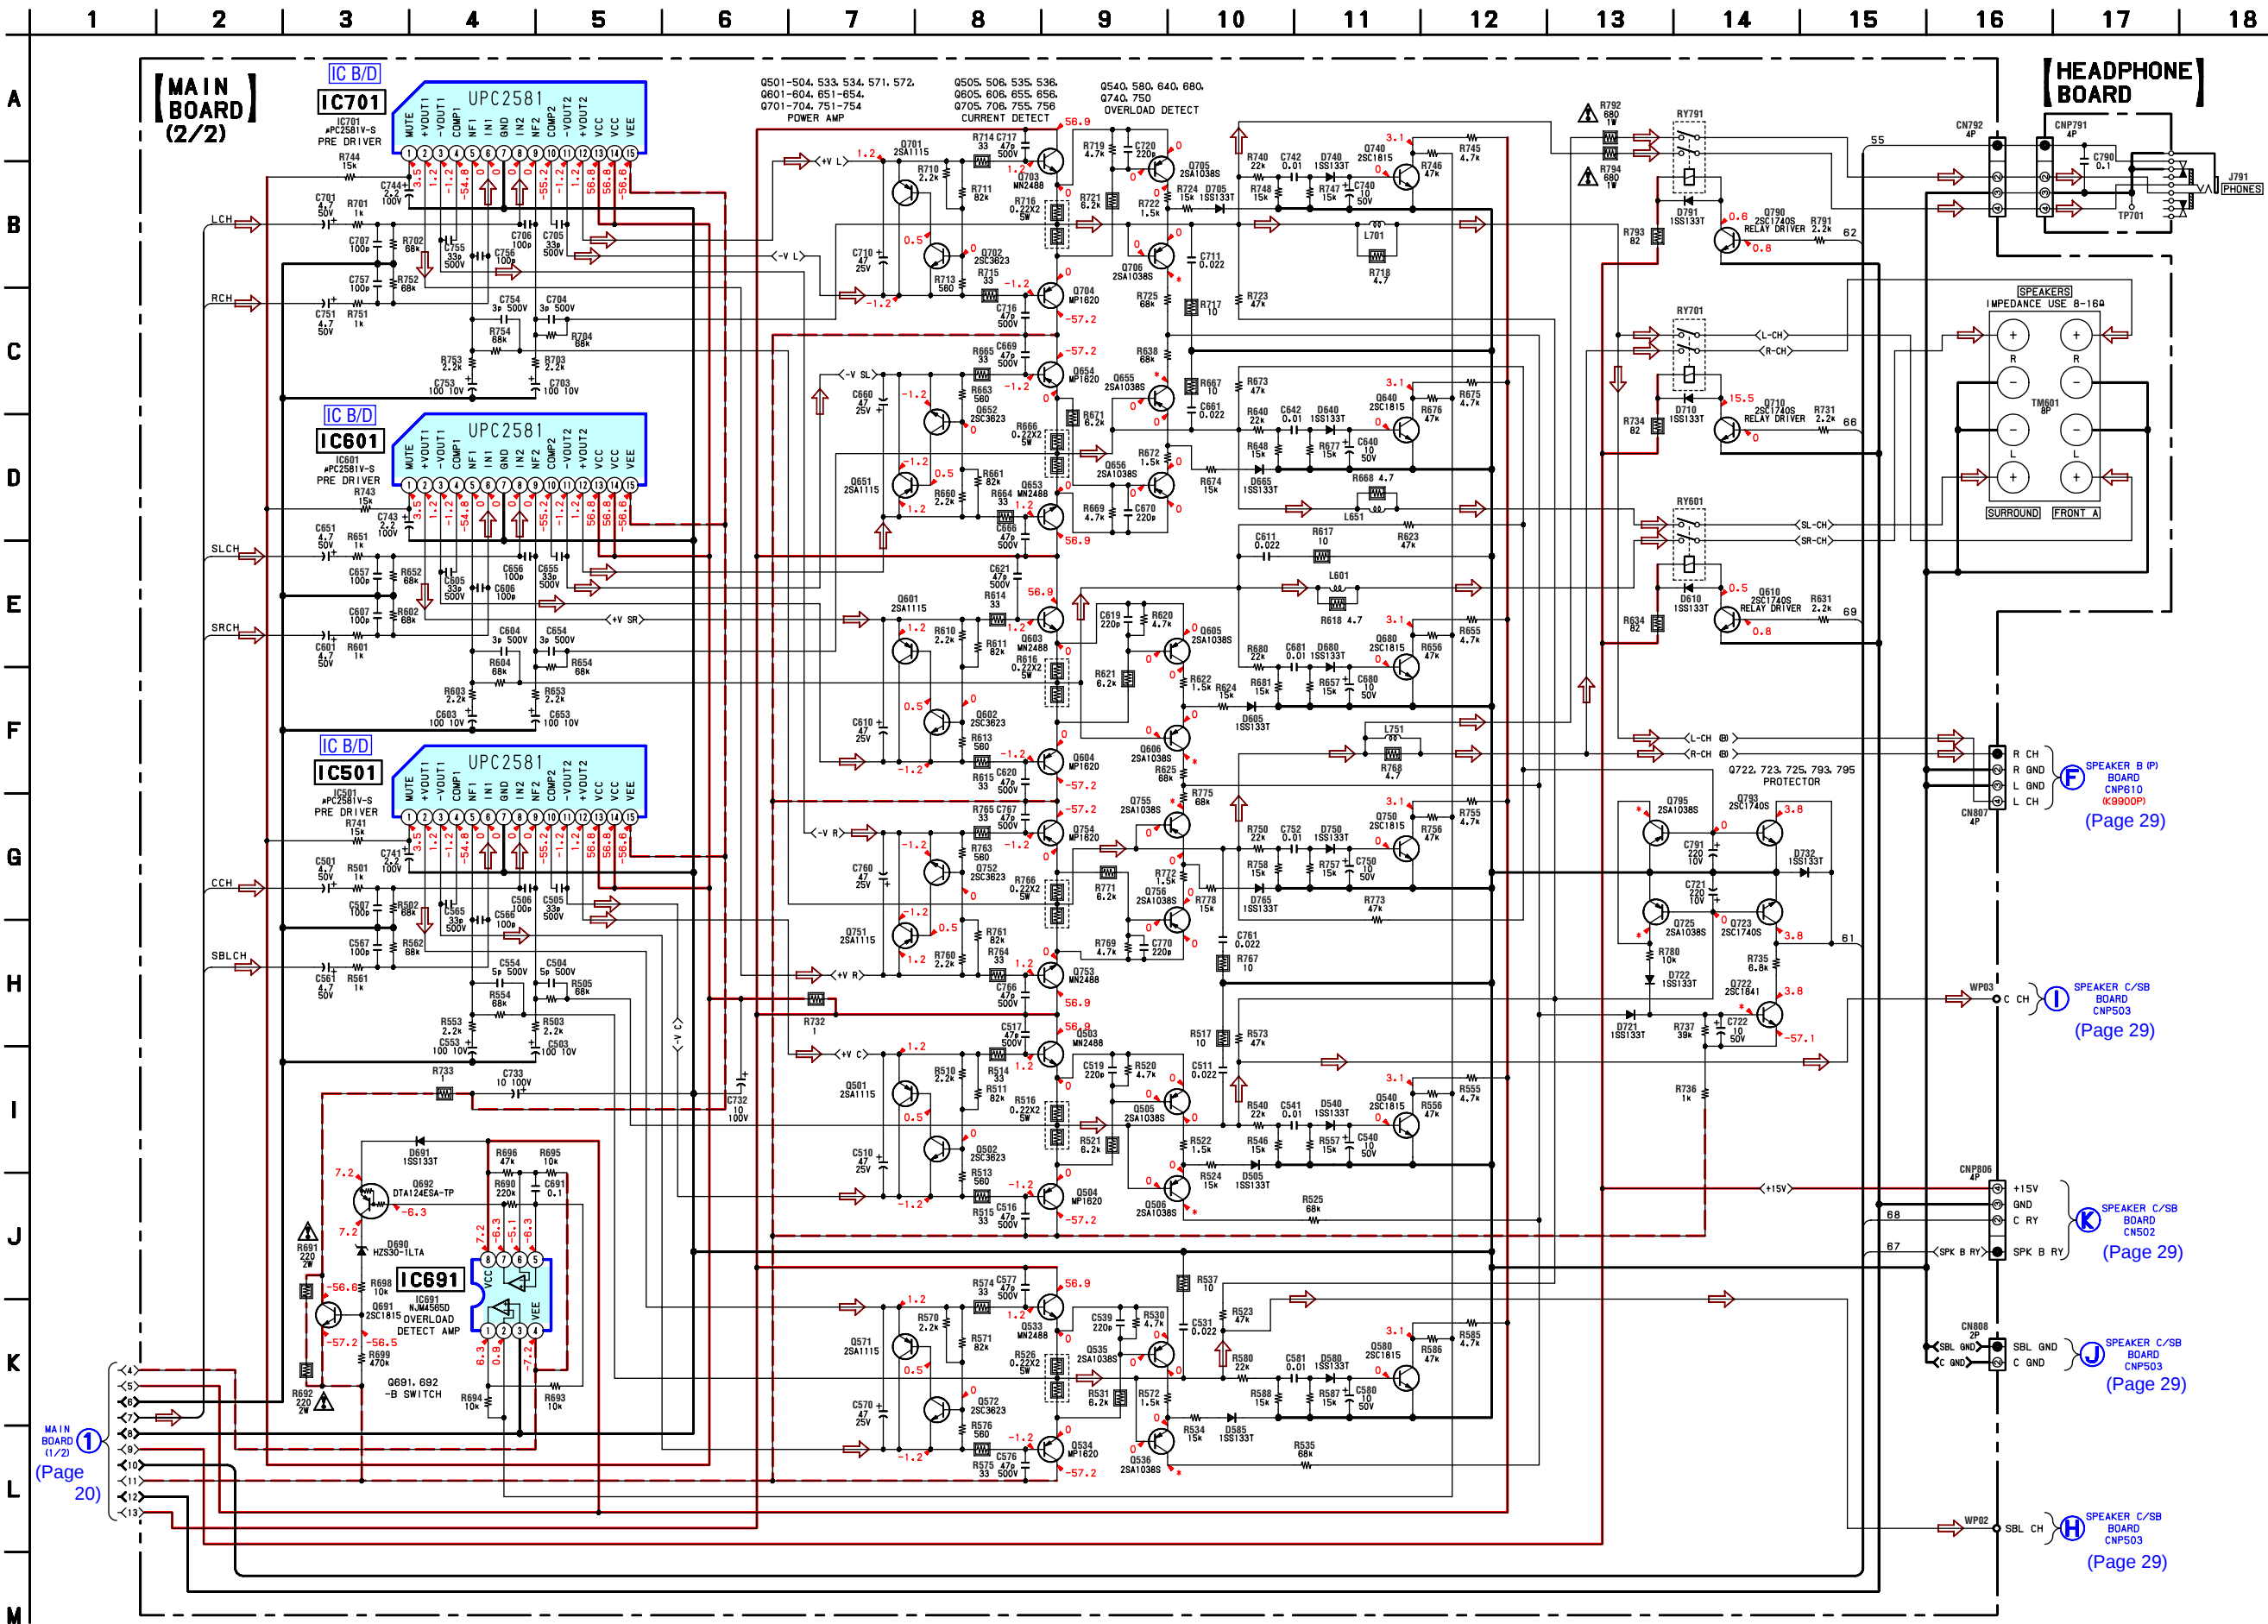

4-10. PRINTED WIRING BOARD — DIGITAL SECTION (1/2) — • Refer to page 12 for Circuit Boards Location.

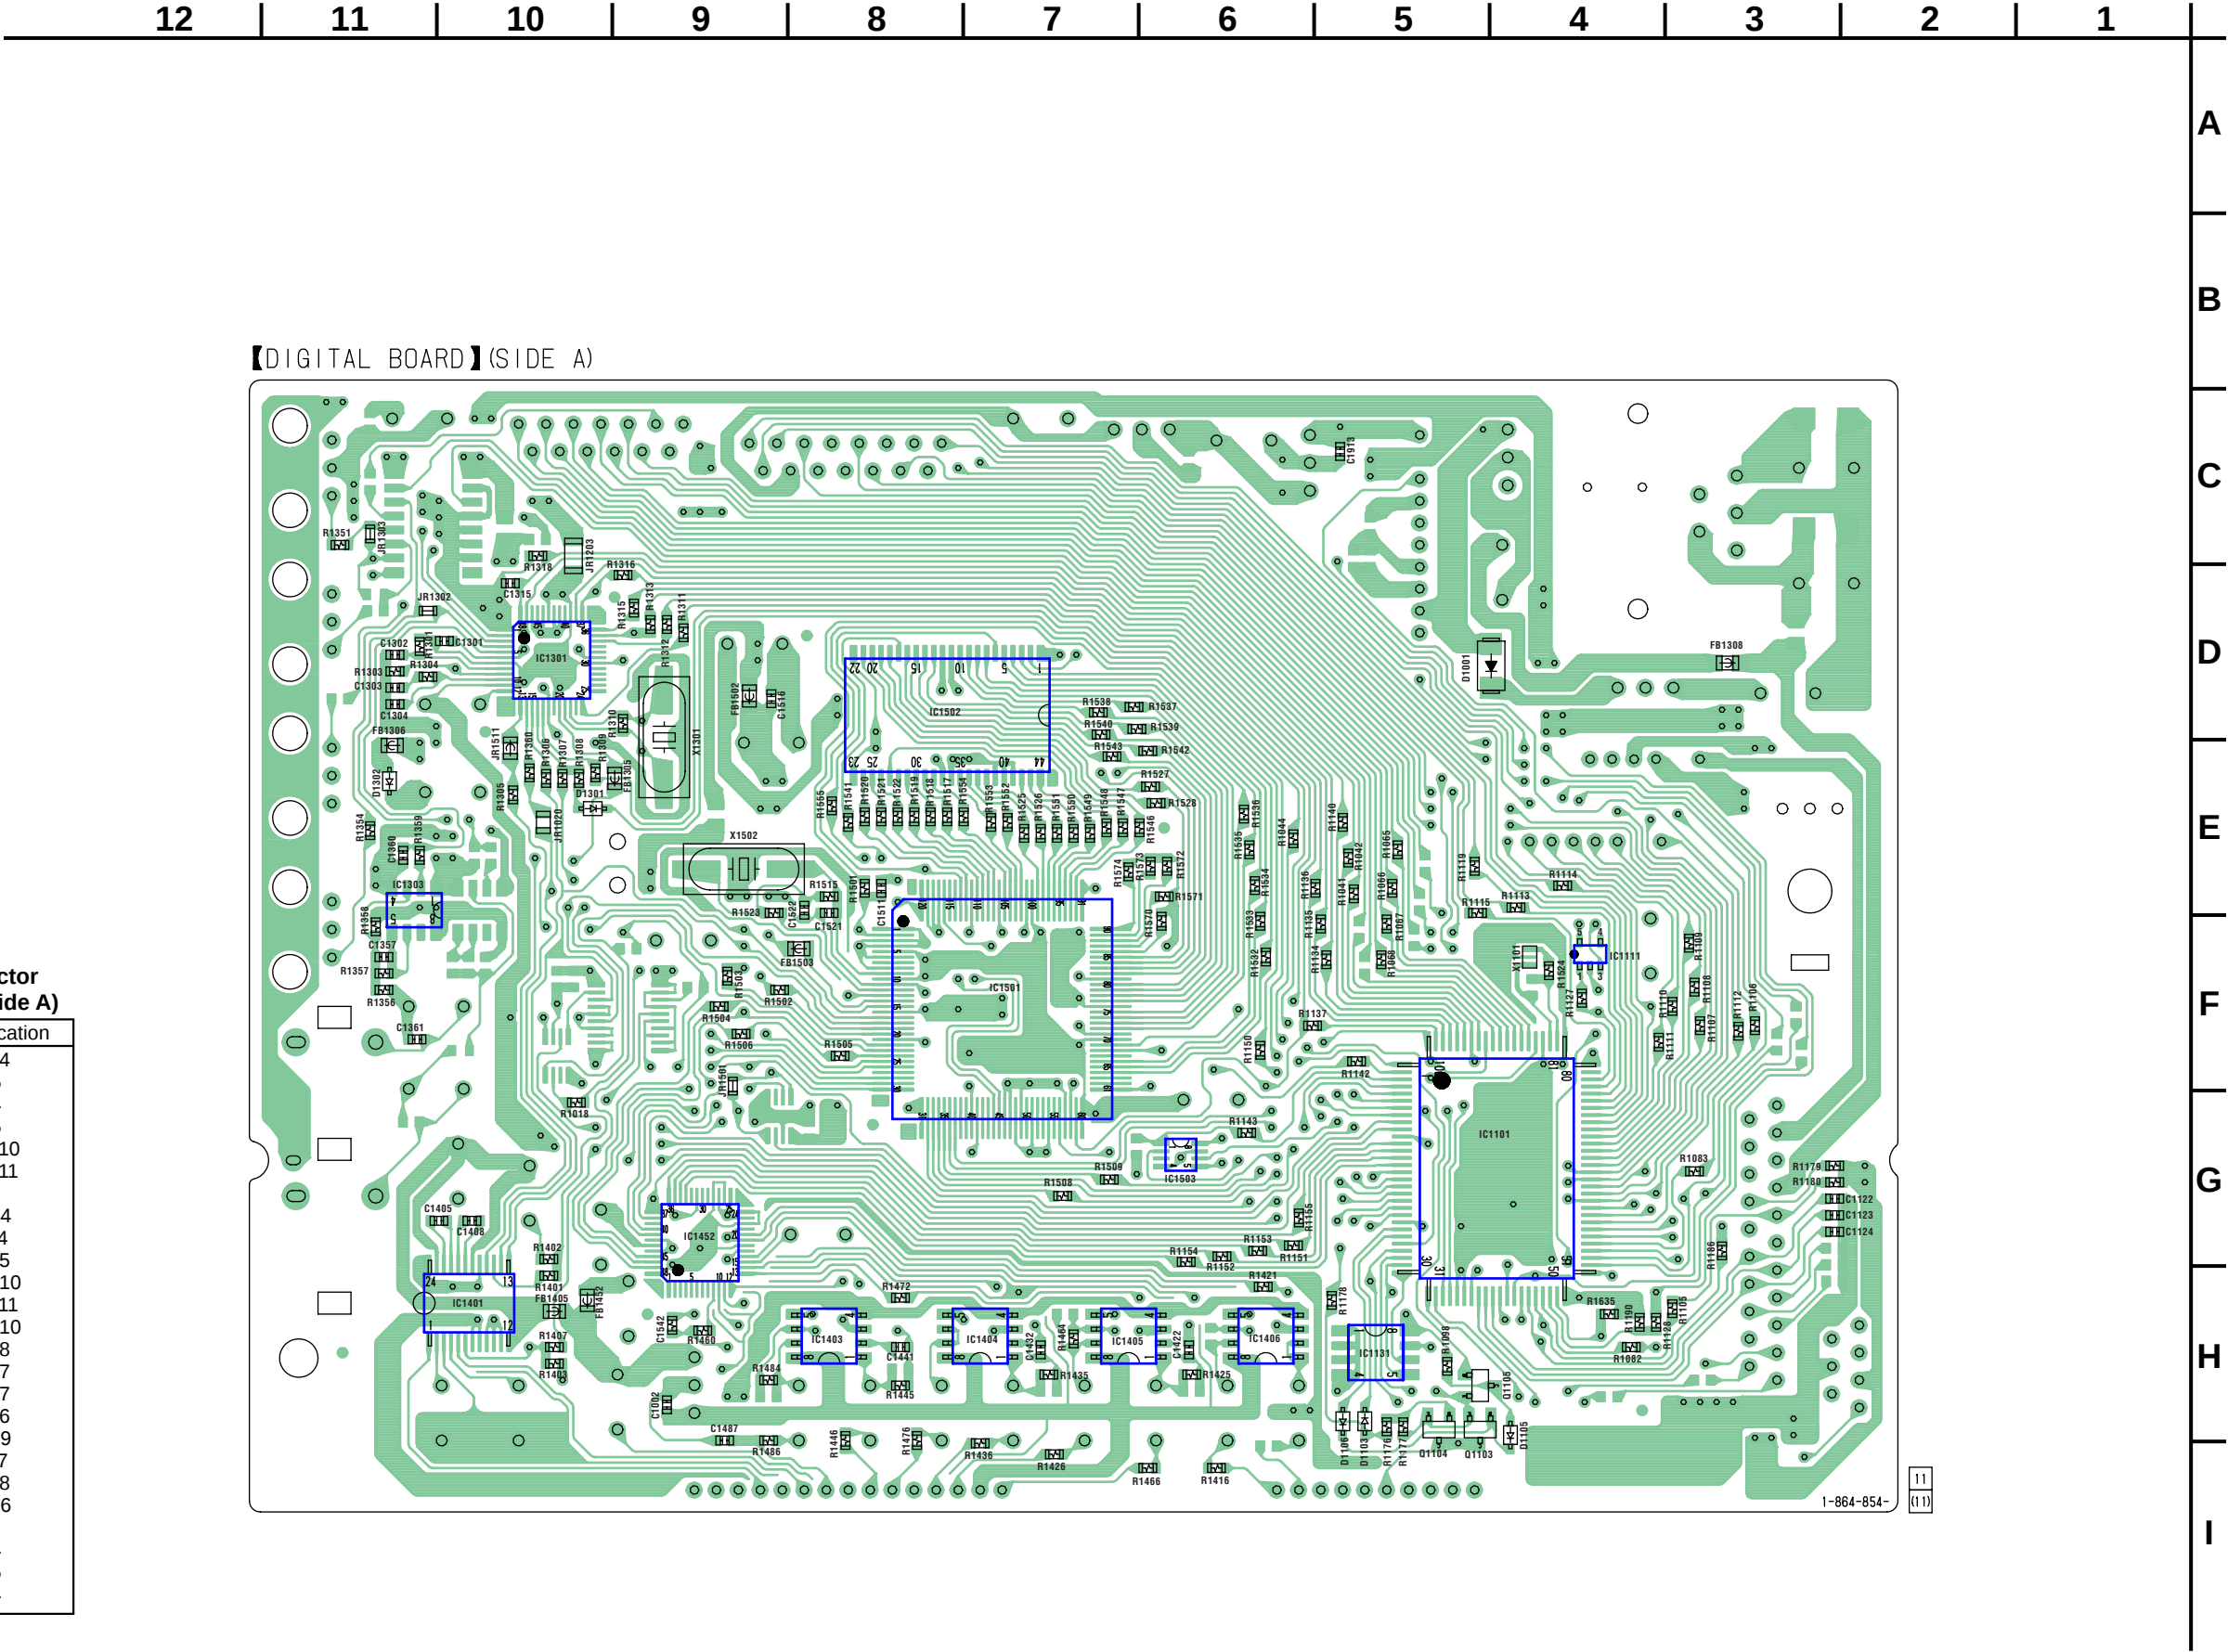


4-11. PRINTED WIRING BOARD — DIGITAL SECTION (2/2) — • Refer to page 12 for Circuit Boards Location.

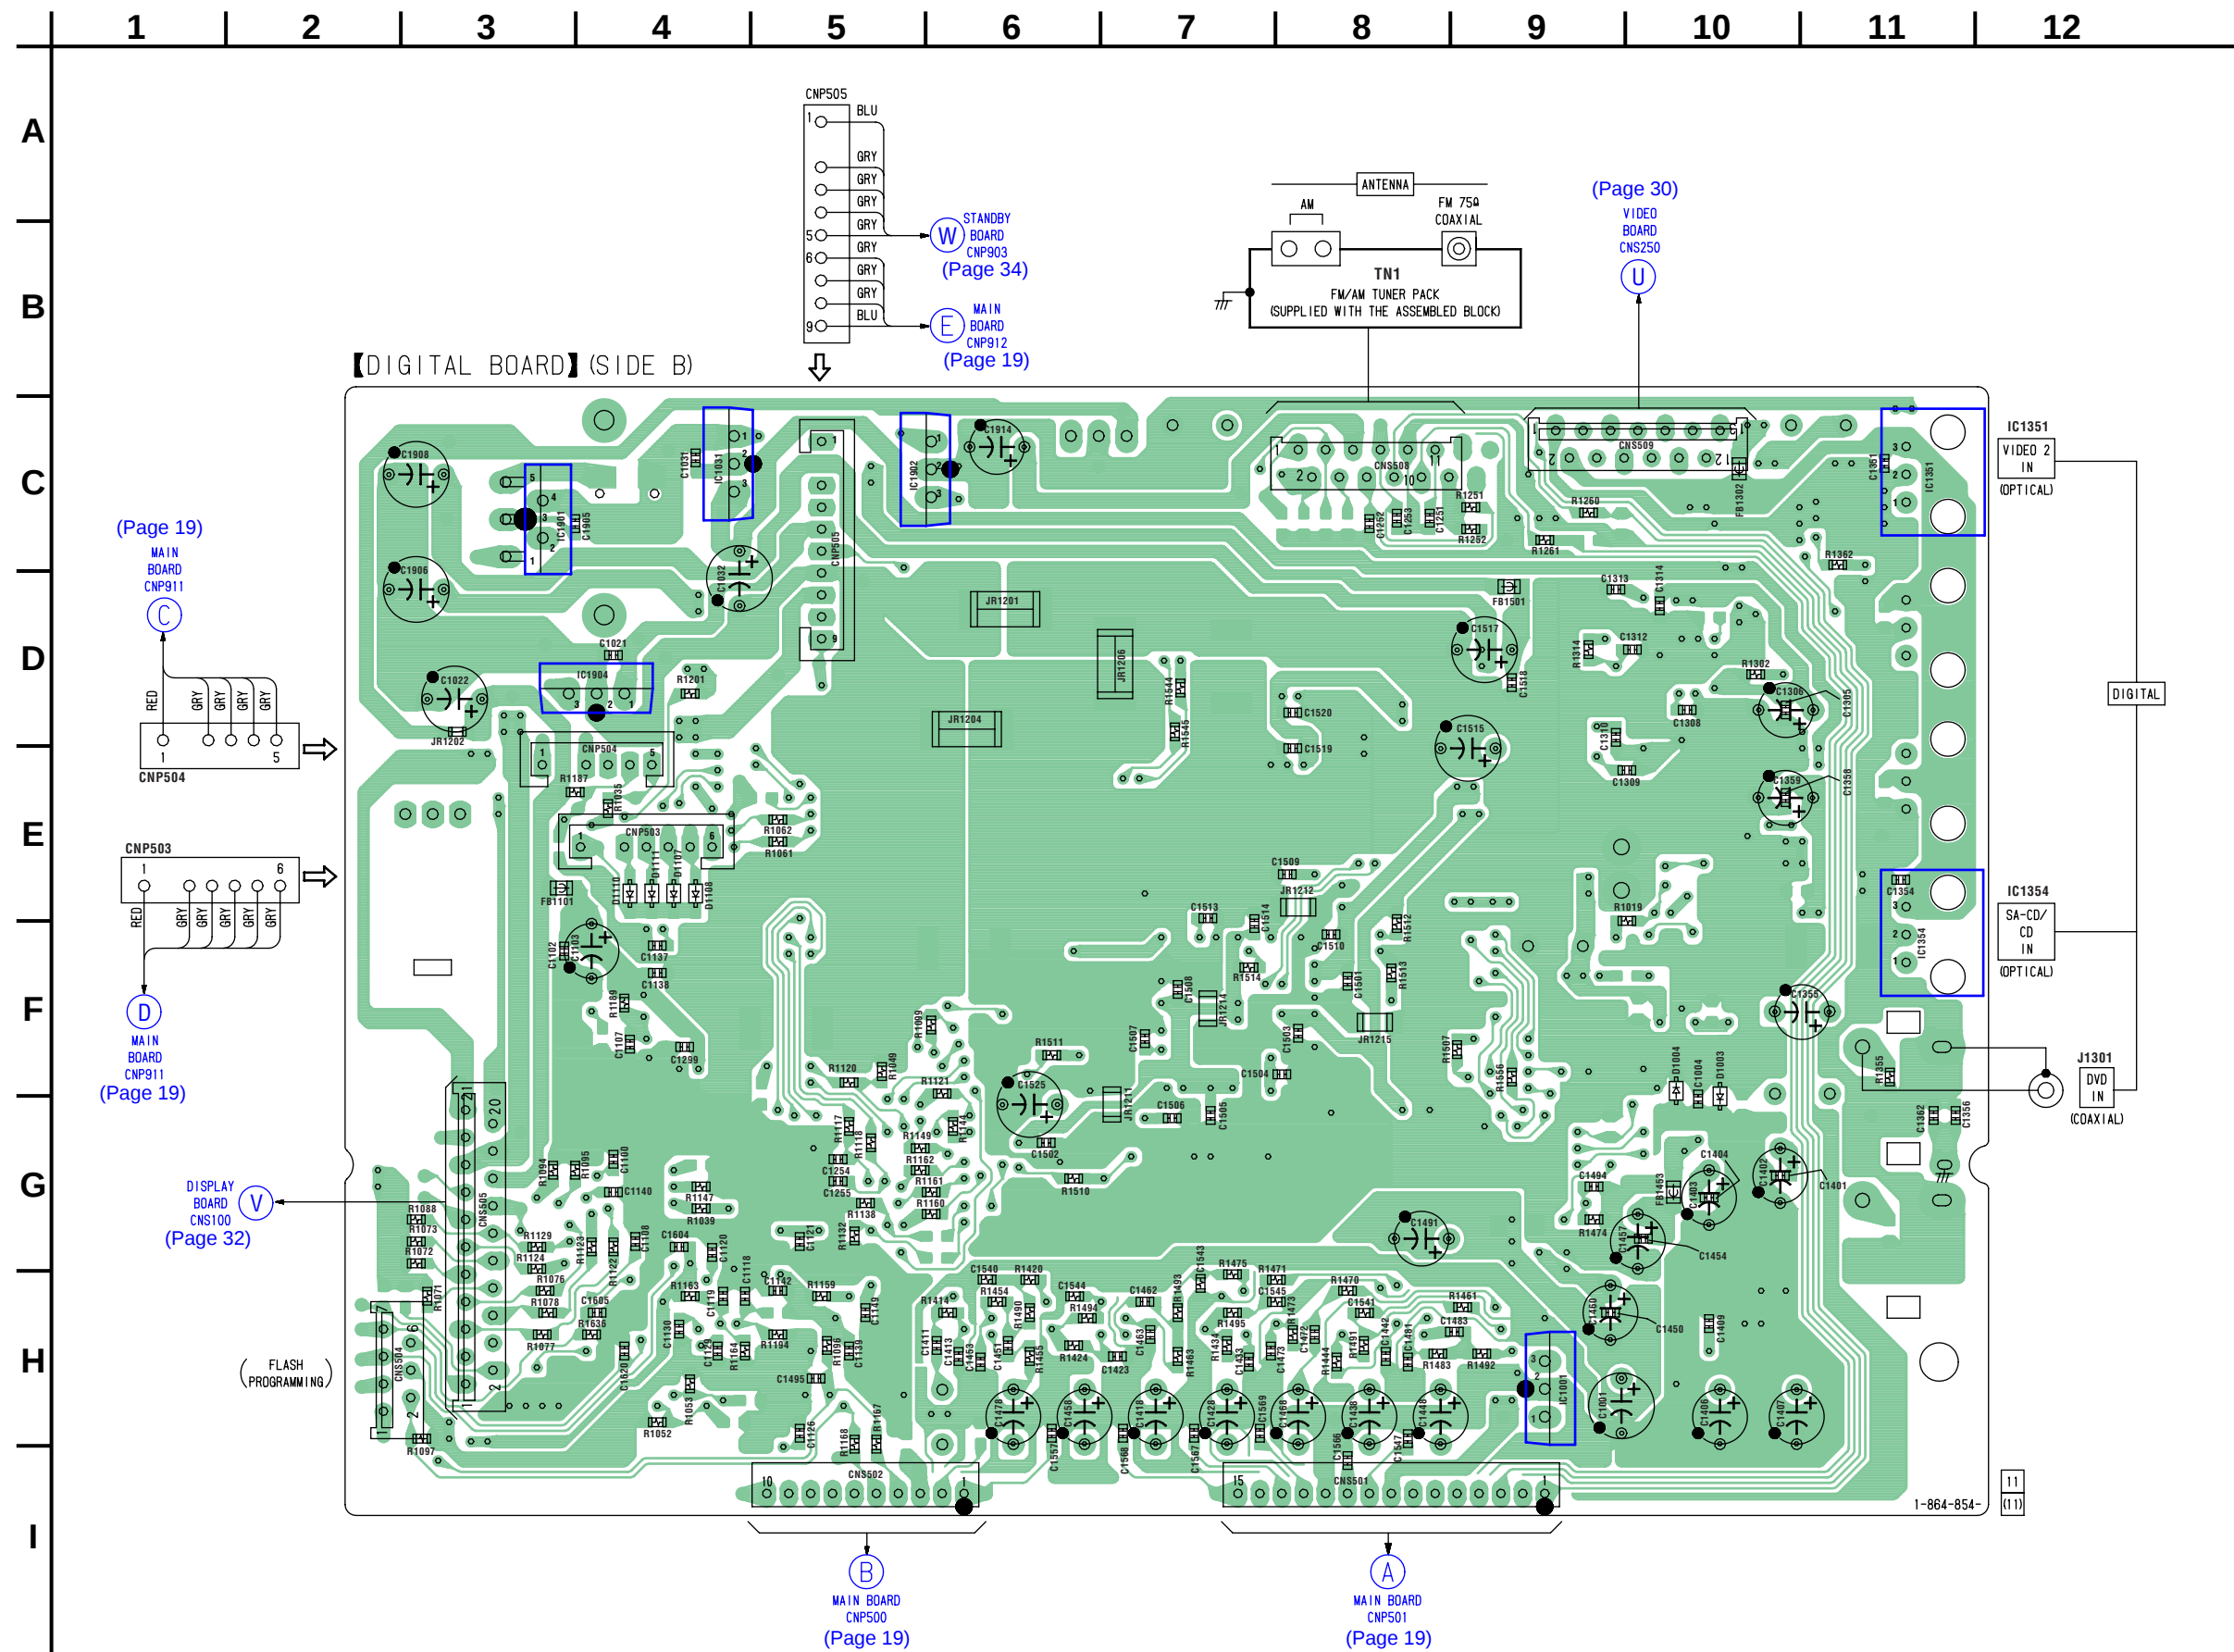


Semiconductor Location (Side B)	
Ref. No.	Location
D1003	F-10
D1004	F-10
D1107	E-4
D1108	E-4
D1110	E-4
D1111	E-4
IC1001	H-9
IC1031	C-4
IC1351	C-11
IC1354	F-11
IC1901	C-3
IC1902	C-6
IC1904	D-4

4-12. SCHEMATIC DIAGRAM — DIGITAL SECTION (1/4) — • Refer to page 18 for Waveforms and page 36 for IC Block Diagrams.

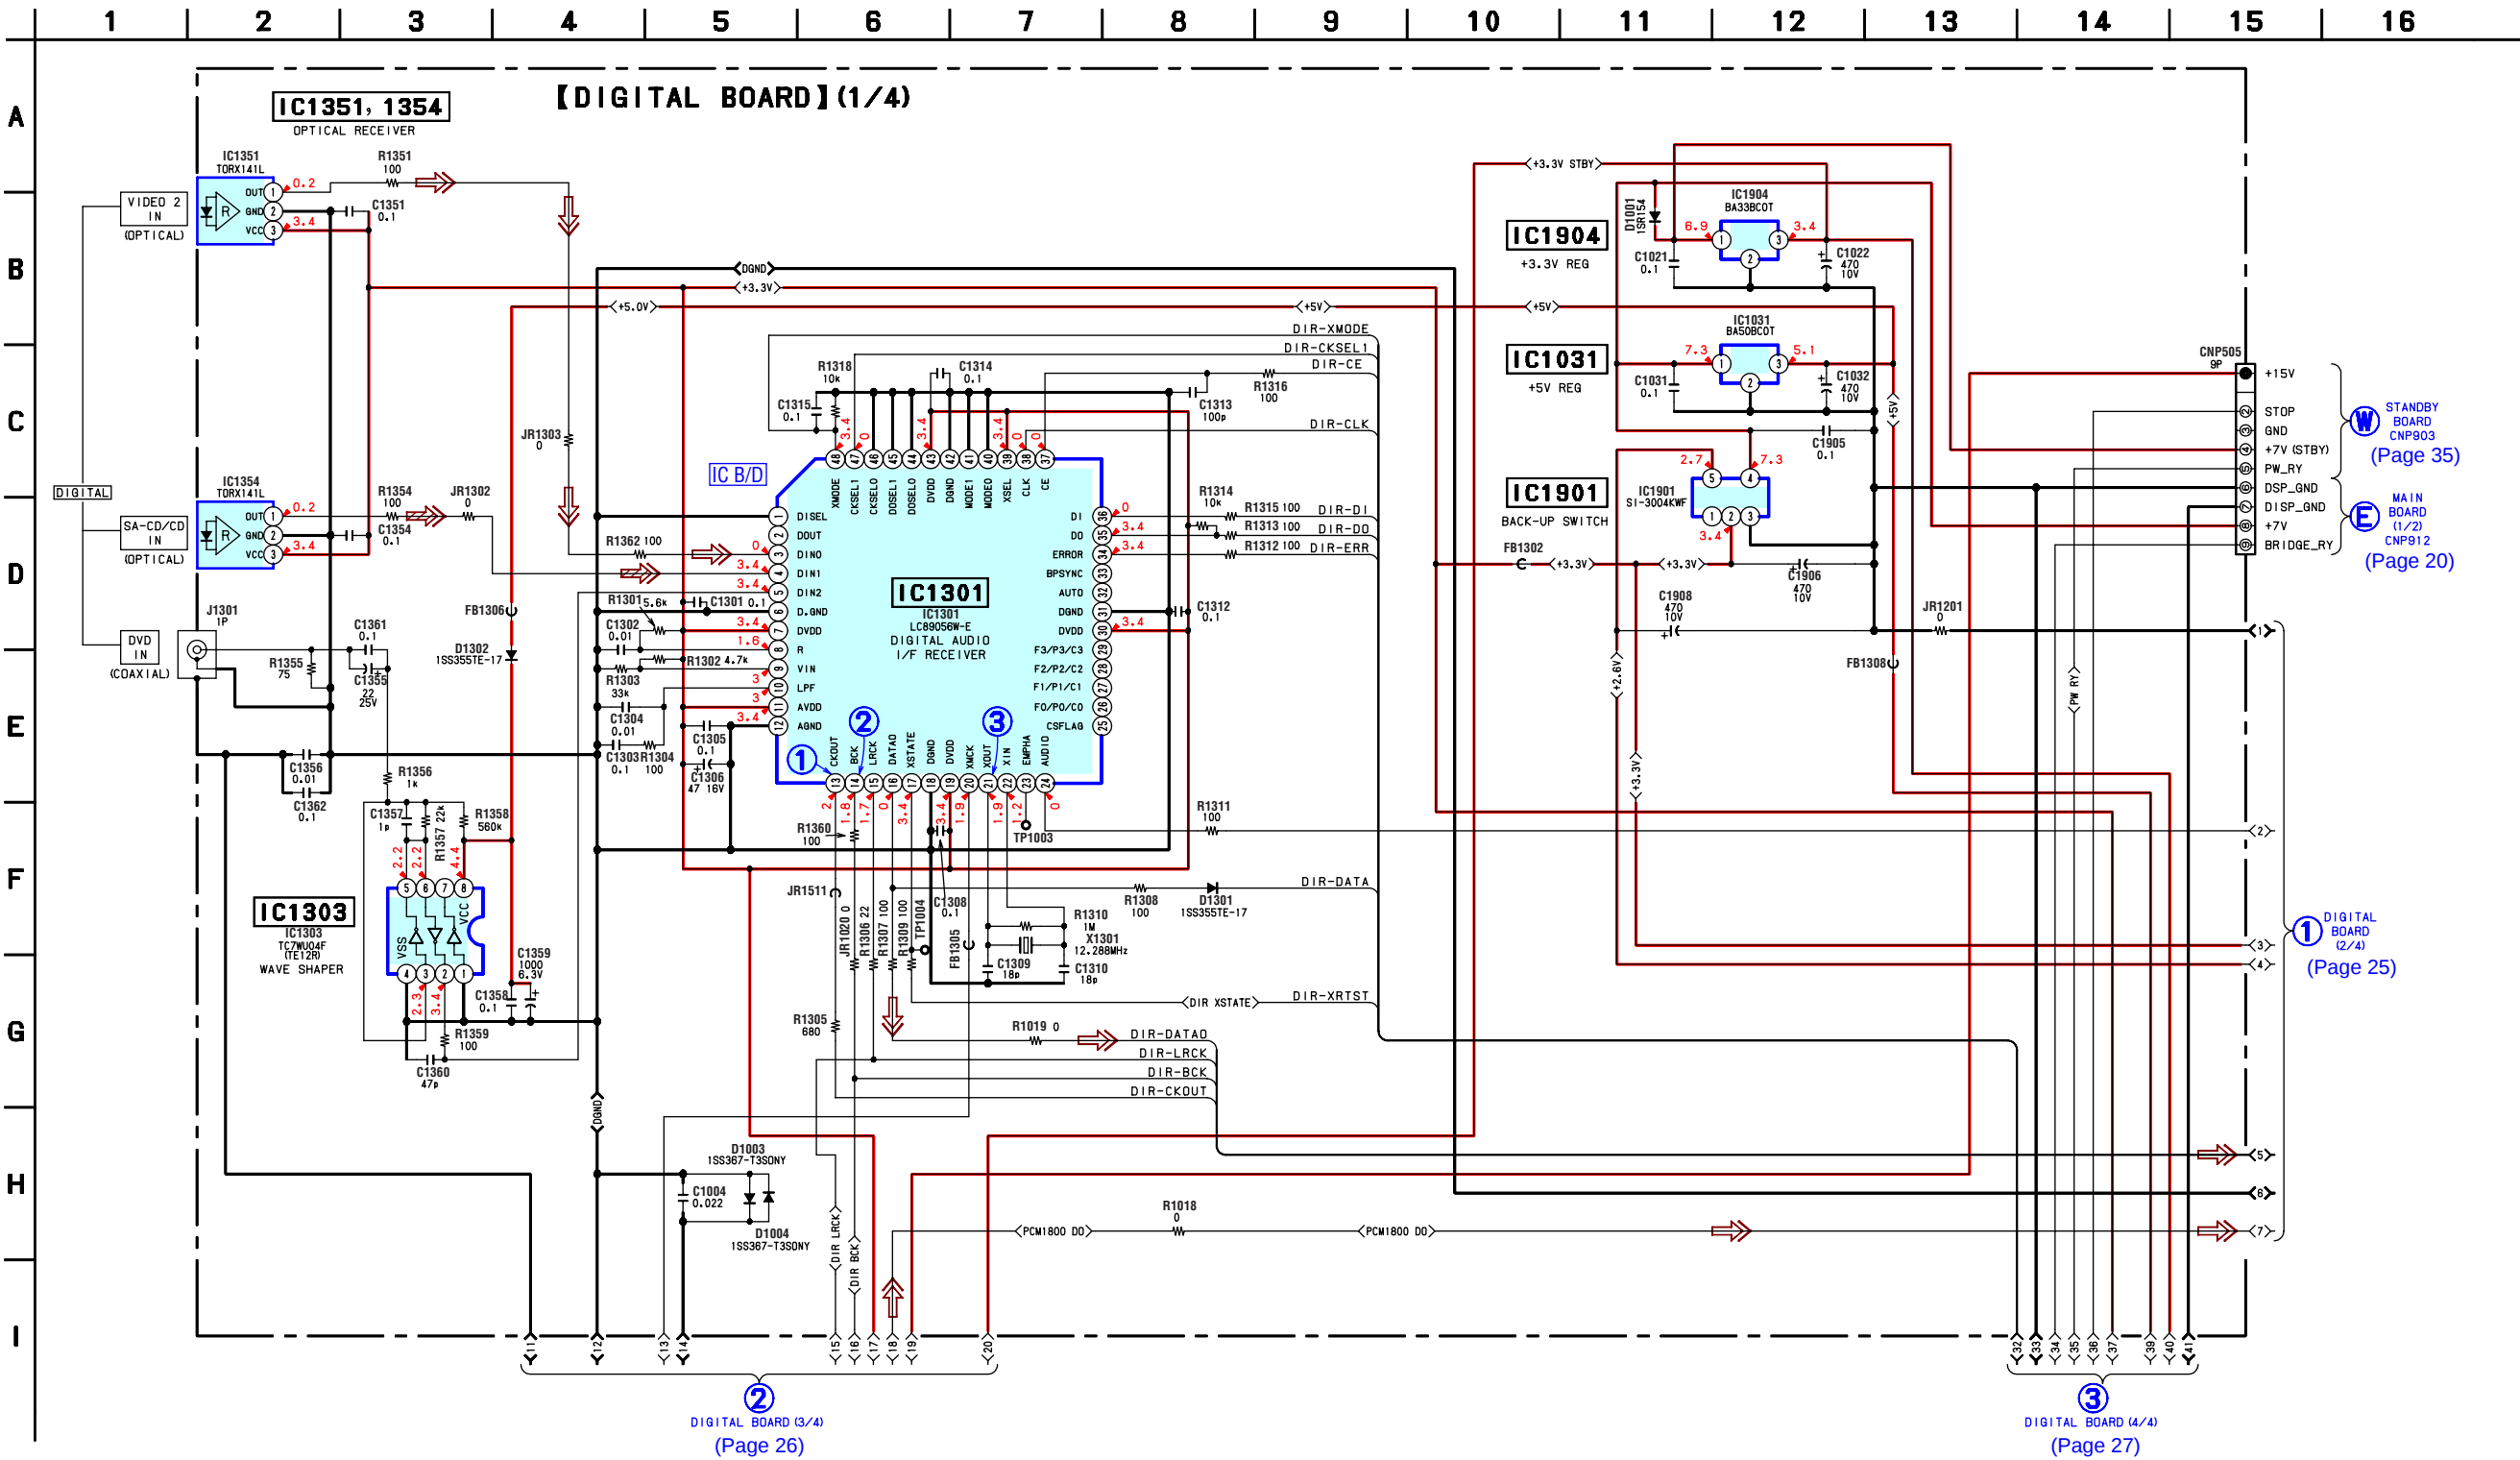


4-13. SCHEMATIC DIAGRAM — DIGITAL SECTION (2/4) — • Refer to page 18 for Waveforms. • Refer to page 38 for IC Pin Descriptions.

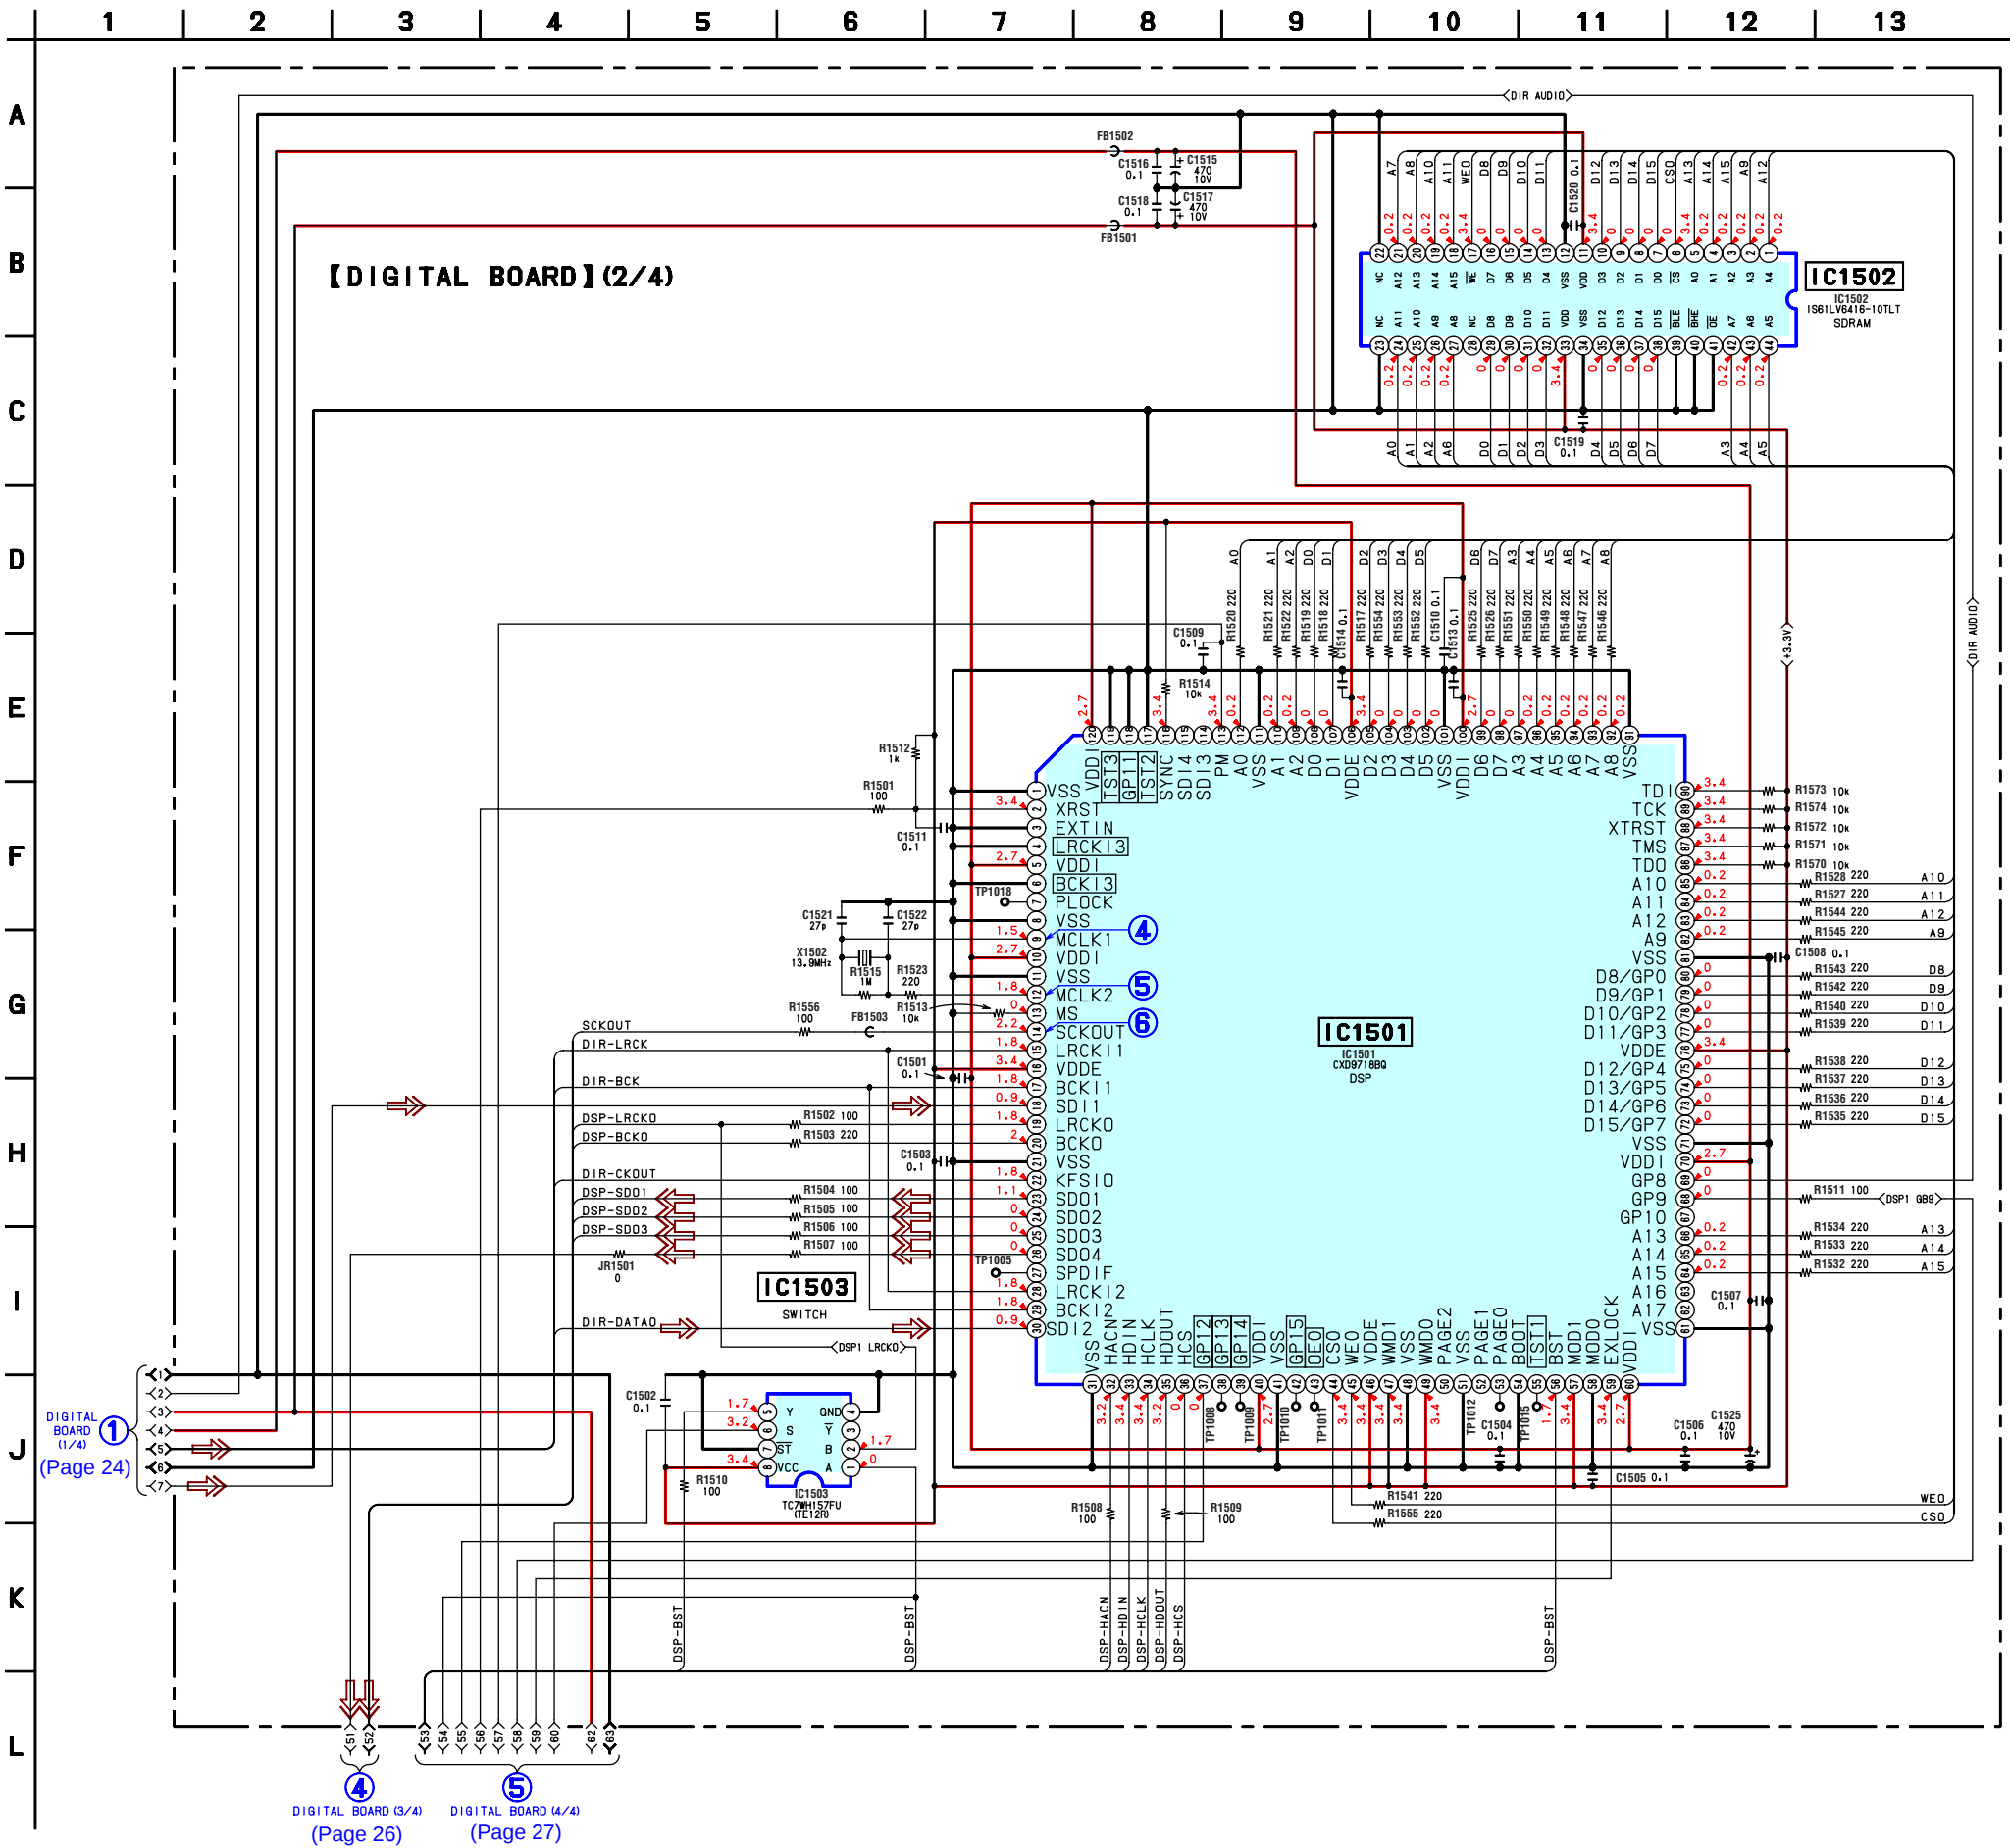


26




4-15. SCHEMATIC DIAGRAM — DIGITAL SECTION (4/4) — • Refer to page 18 for Waveforms. • Refer to page 40 for IC Pin Descriptions.

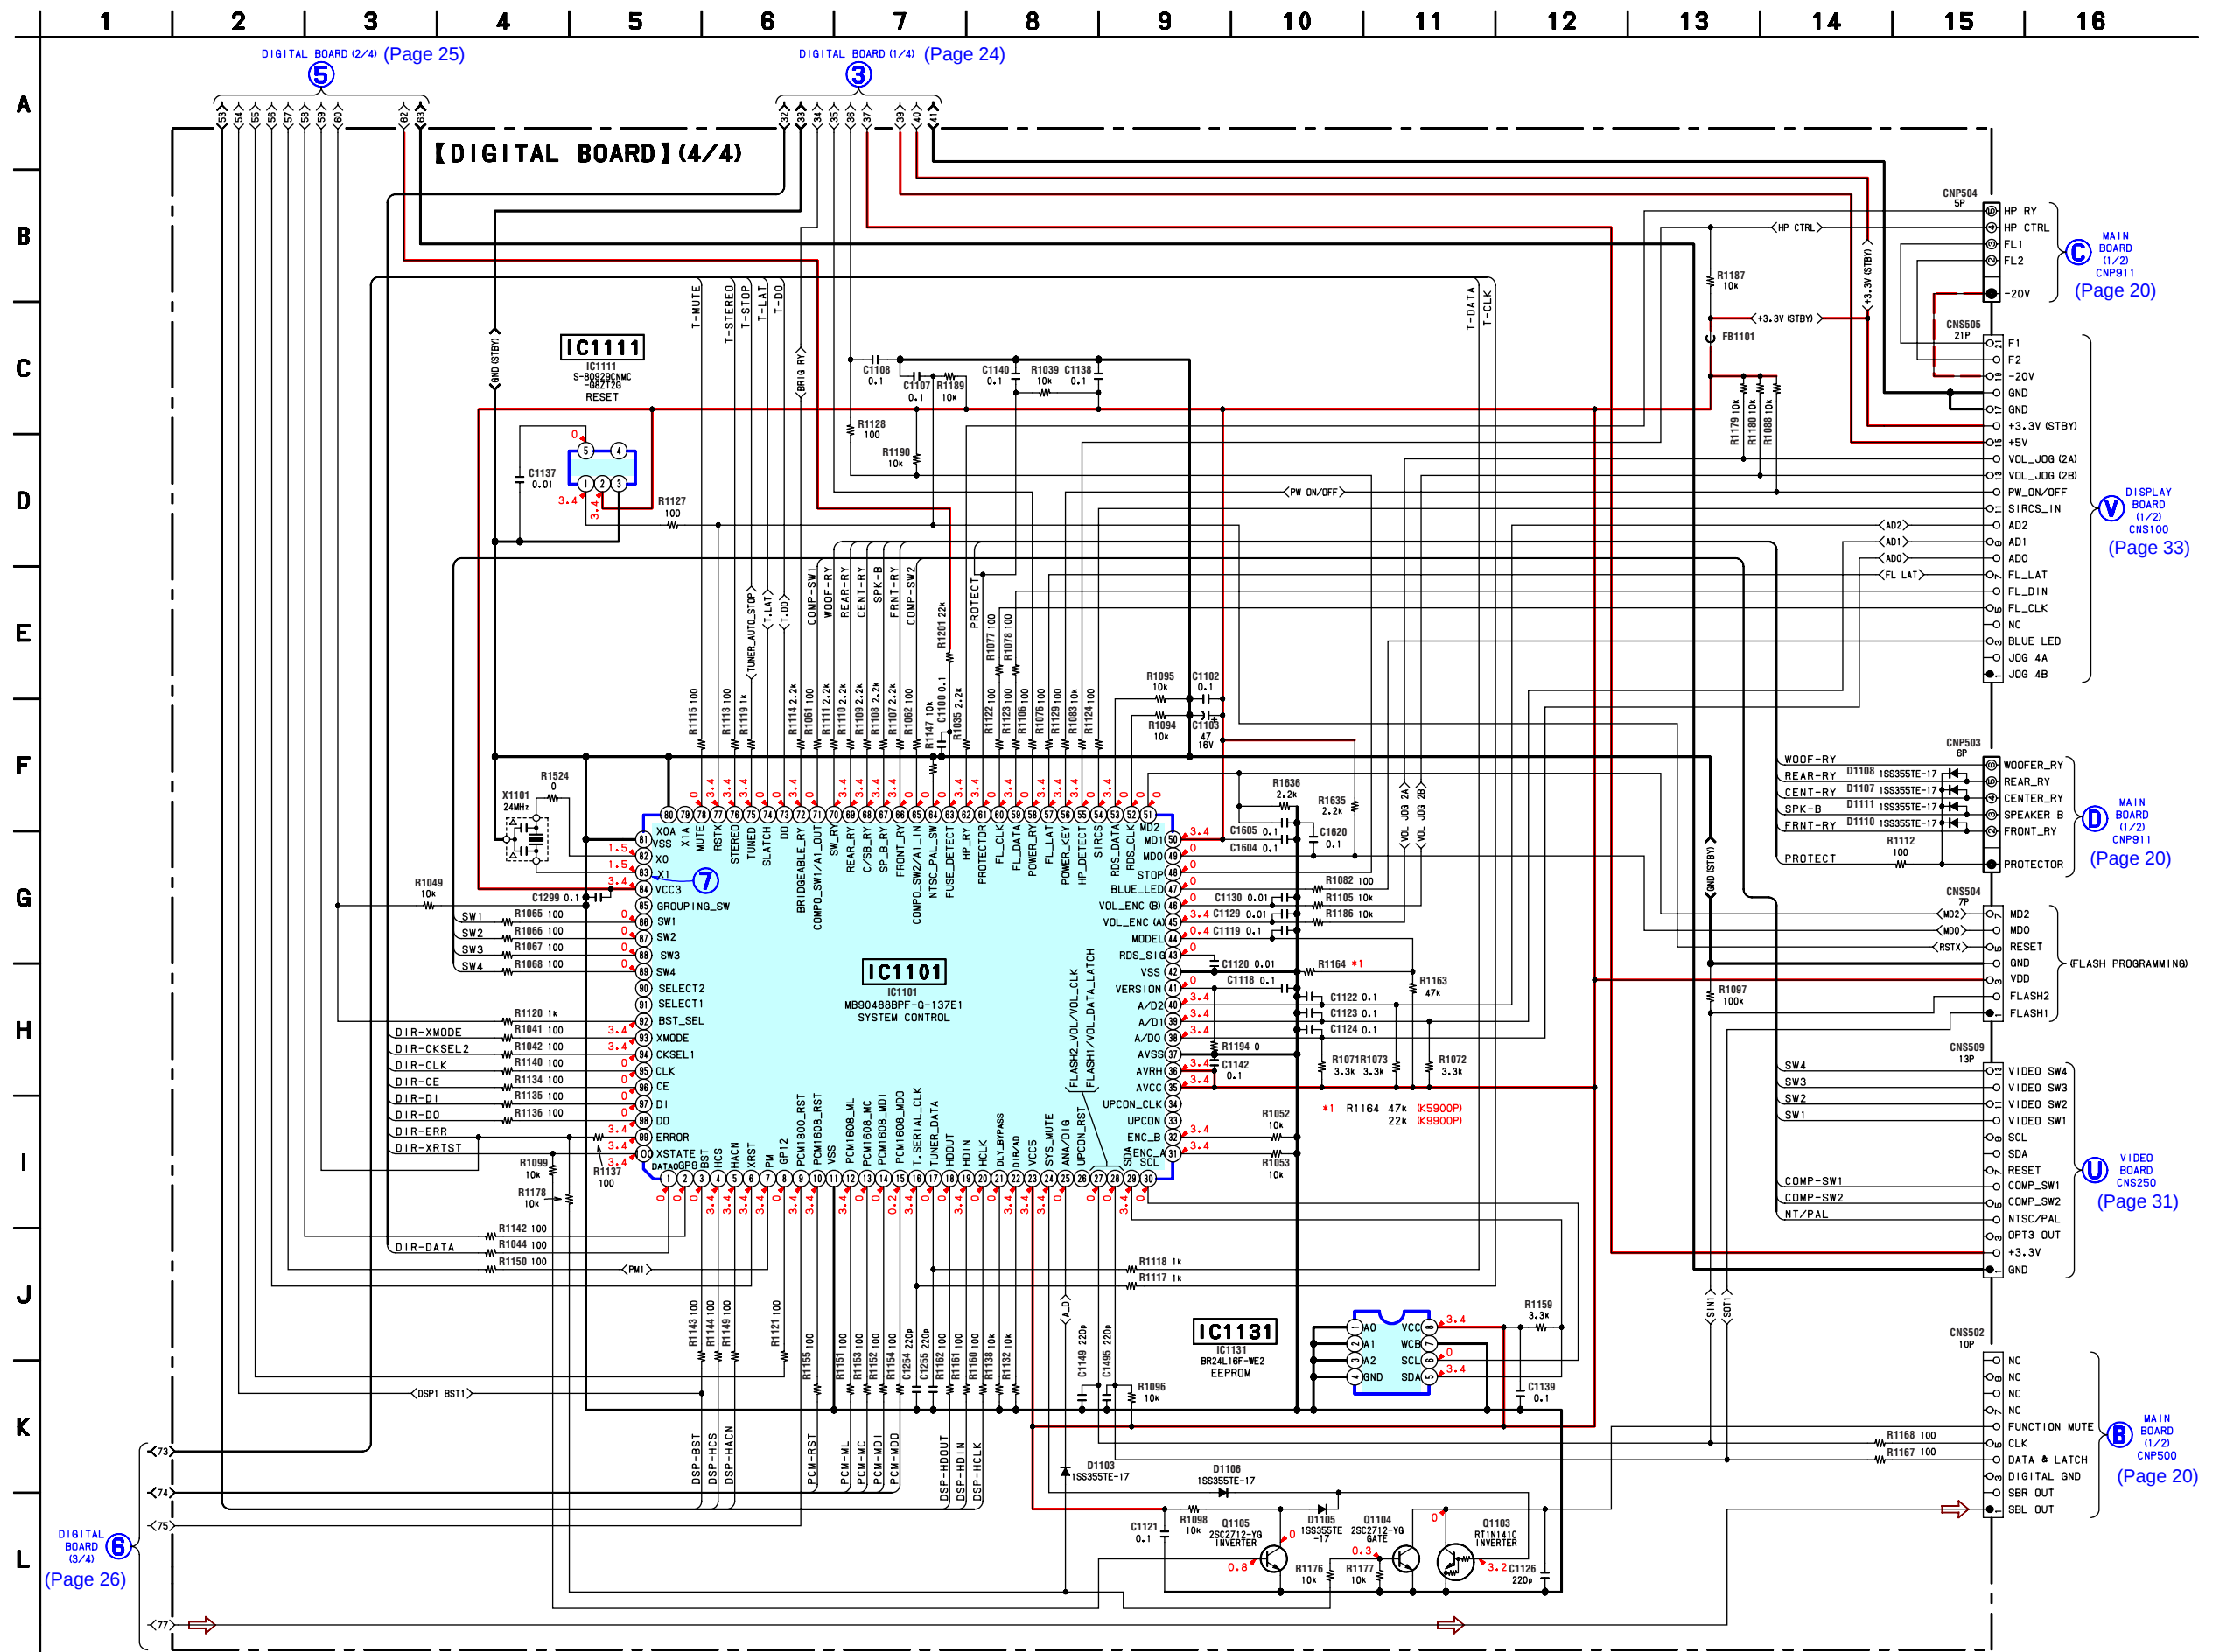

4-16. PRINTED WIRING BOARDS — SPEAKER SECTION — • Refer to page 12 for Circuit Boards Location.

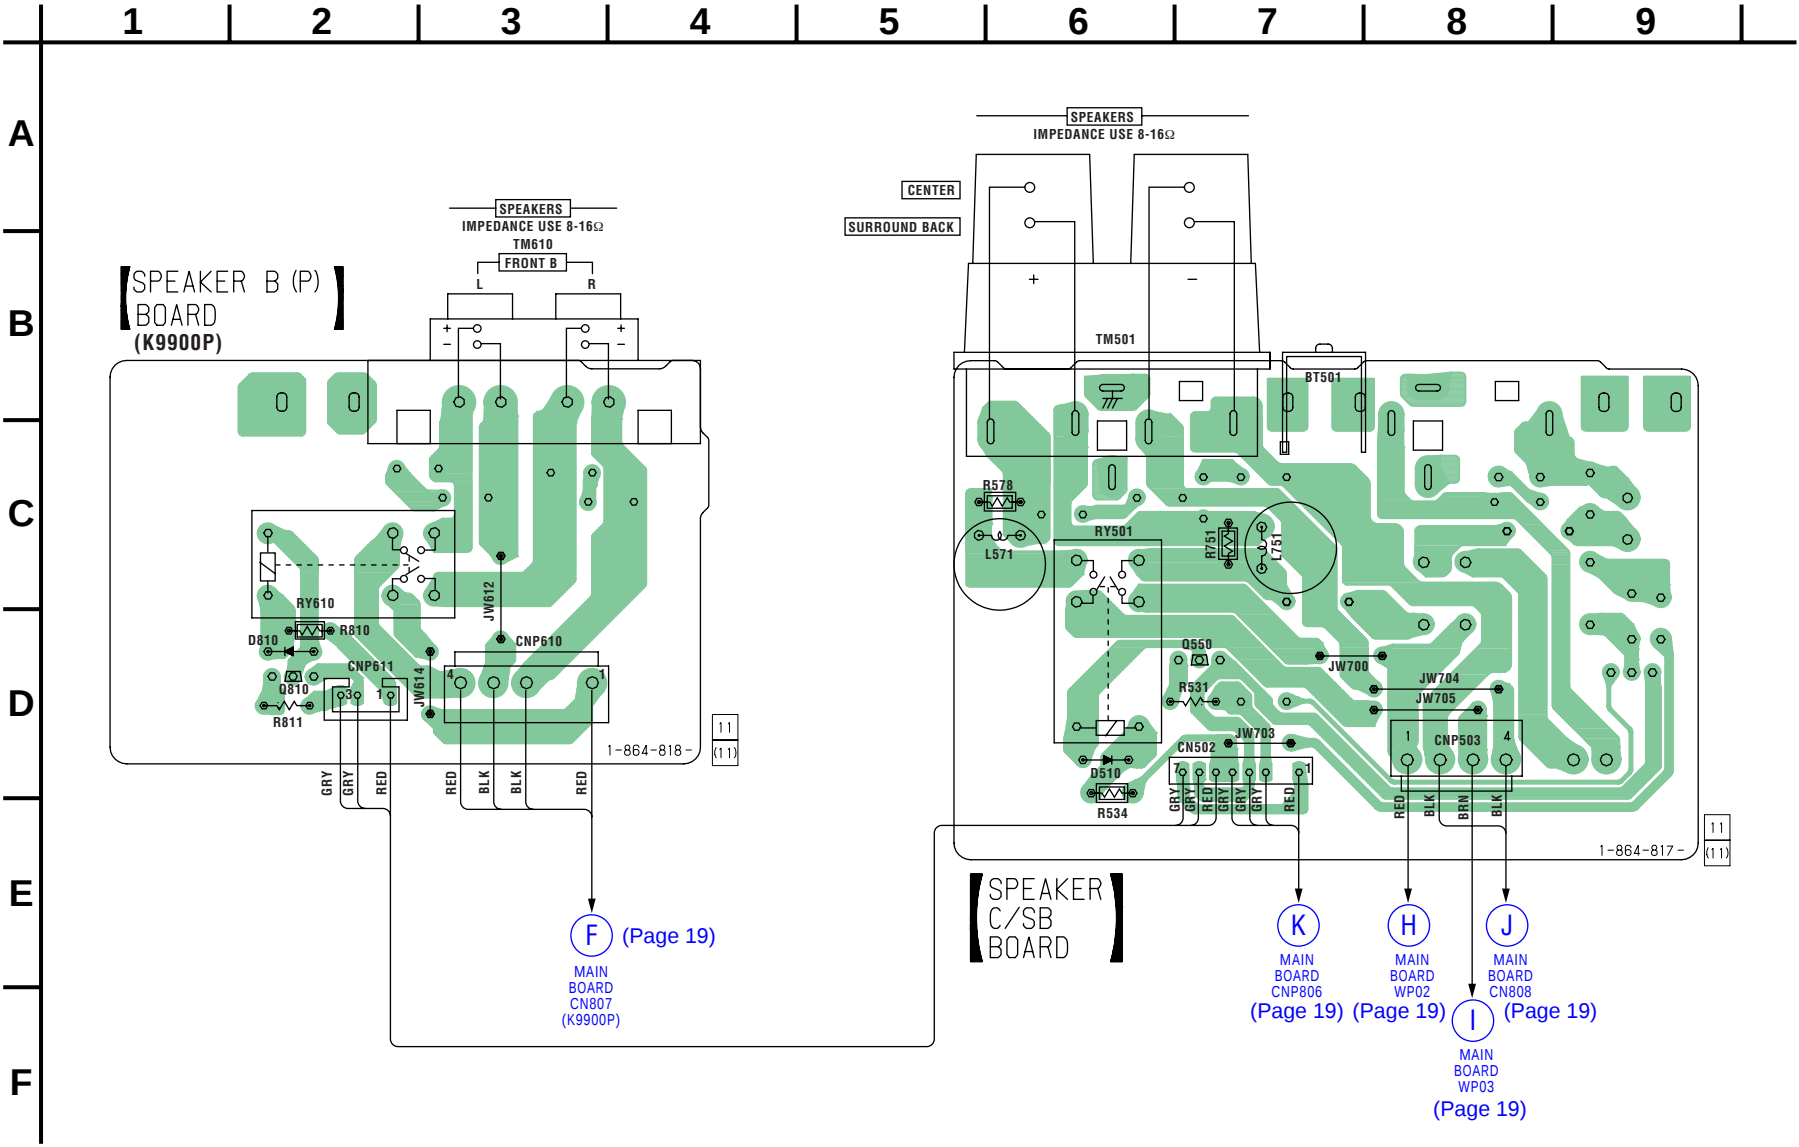

4-17. SCHEMATIC DIAGRAM — SPEAKER SECTION —

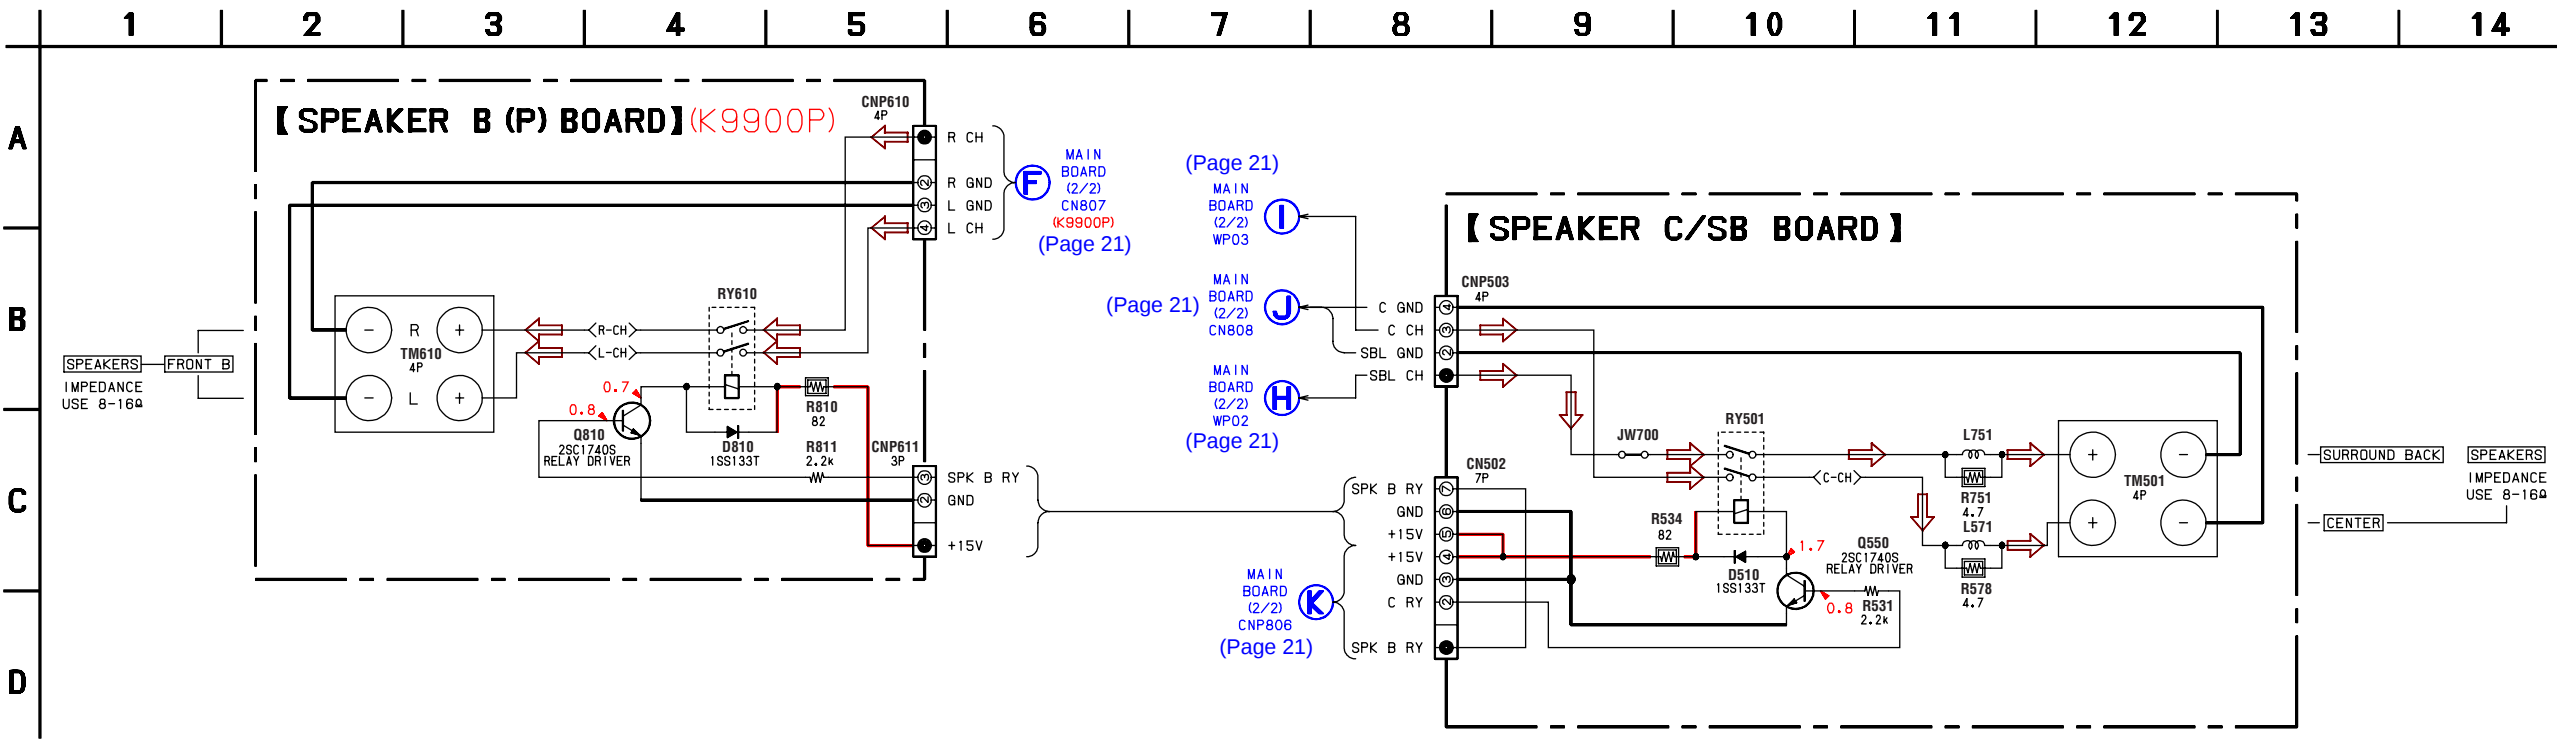


30




31




A

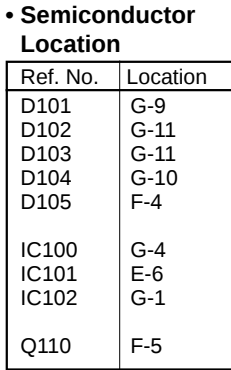

4-21. SCHEMATIC DIAGRAM — PANEL SECTION —

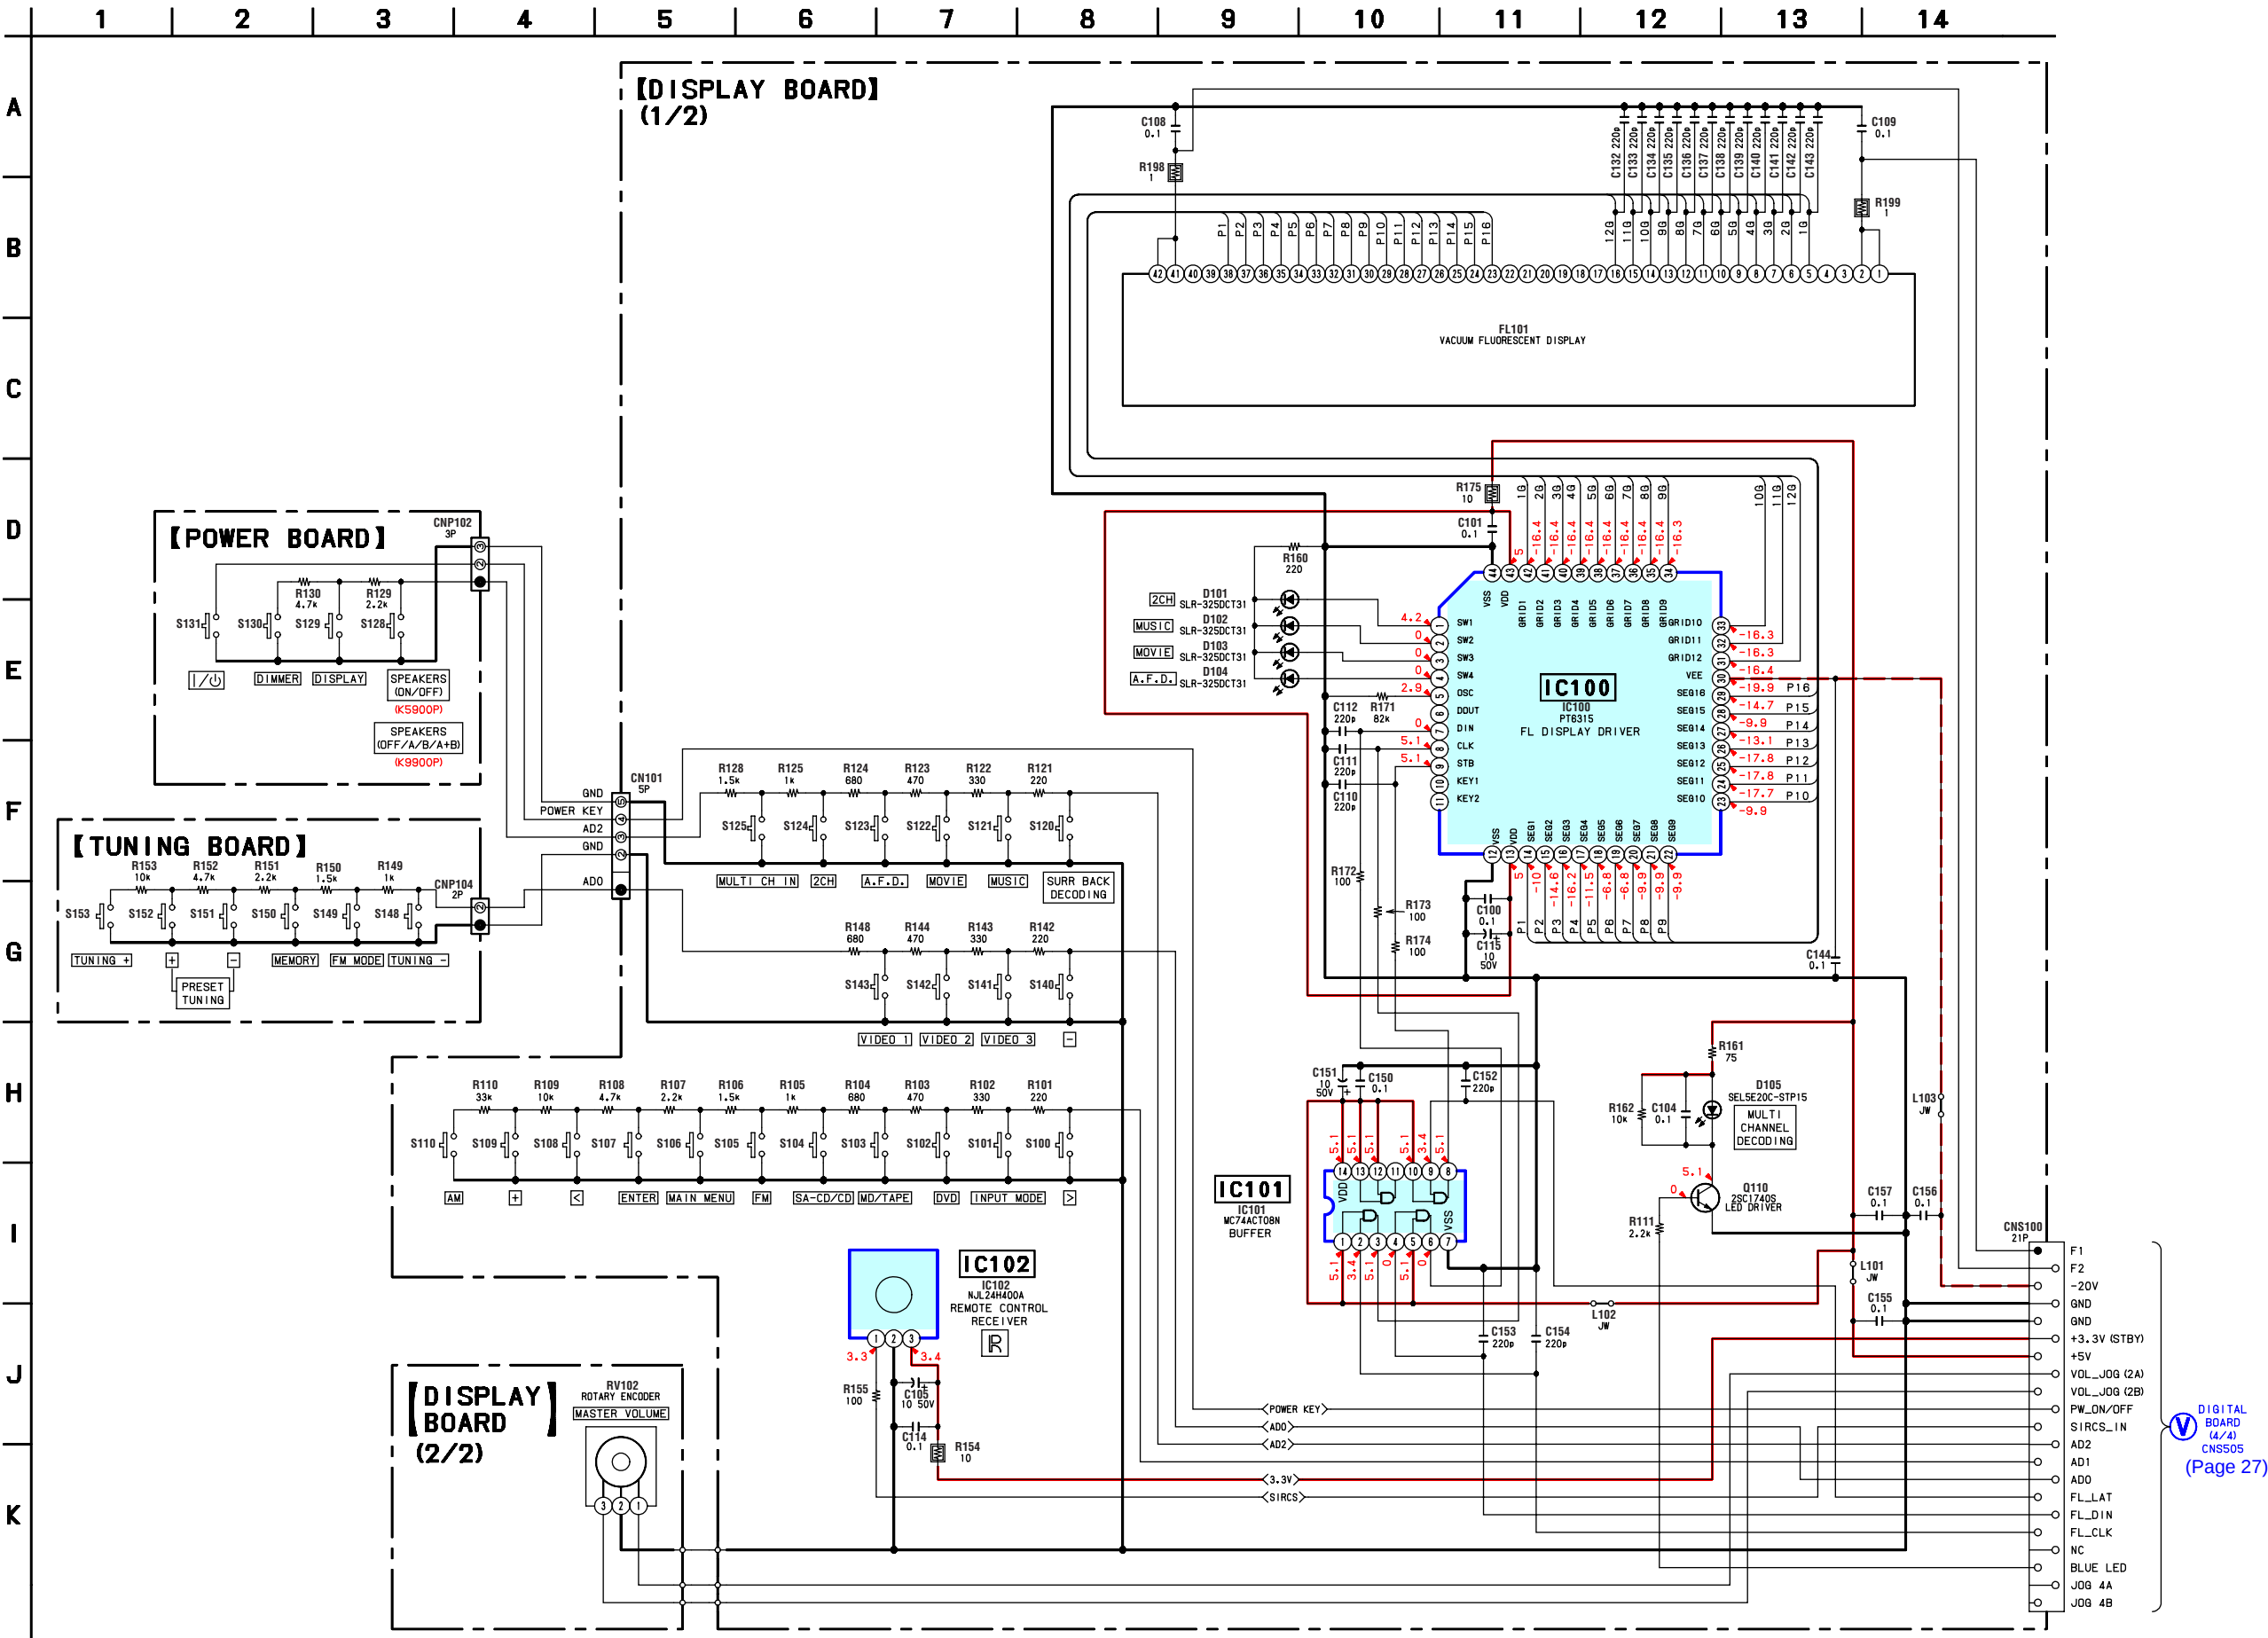


4-22. PRINTED WIRING BOARD — POWER SECTION — • Refer to page 12 for Circuit Boards Location.

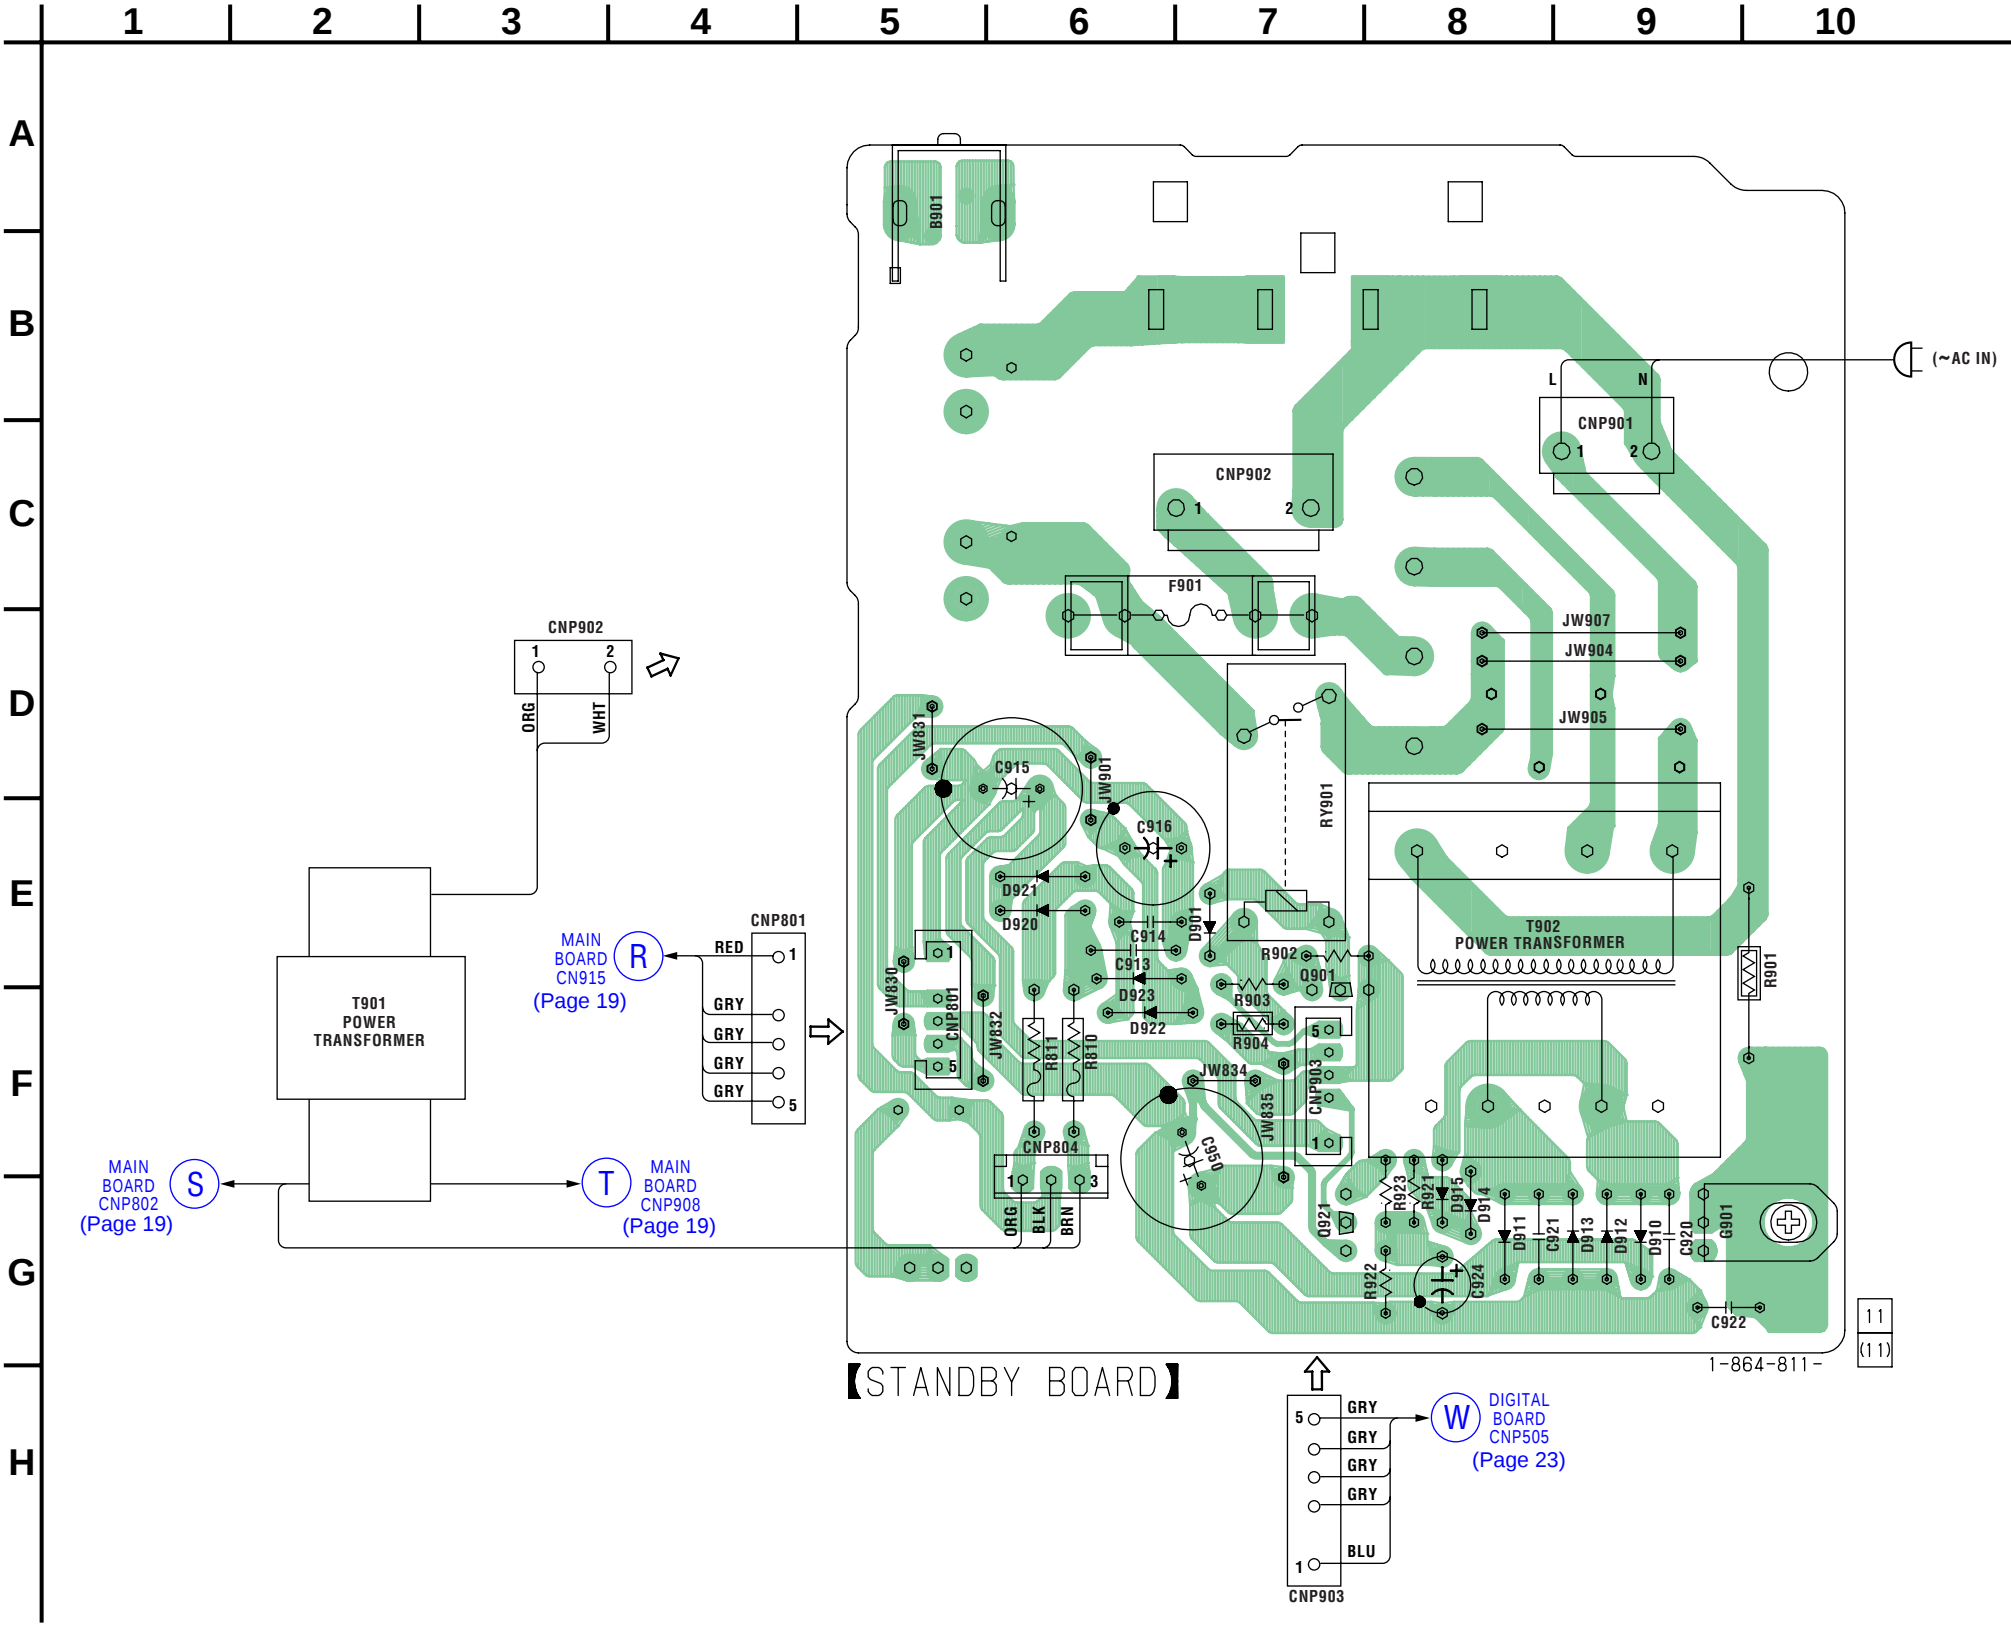

• Semiconductor Location


Ref. No.	Location
D901	E-7
D910	G-9
D911	G-8
D912	G-9
D913	G-9
D914	G-8
D915	G-8
D920	E-6
D921	E-6
D922	E-6
D923	F-6
Q901	E-7
Q921	G-7

4-23. SCHEMATIC DIAGRAM — POWER SECTION —

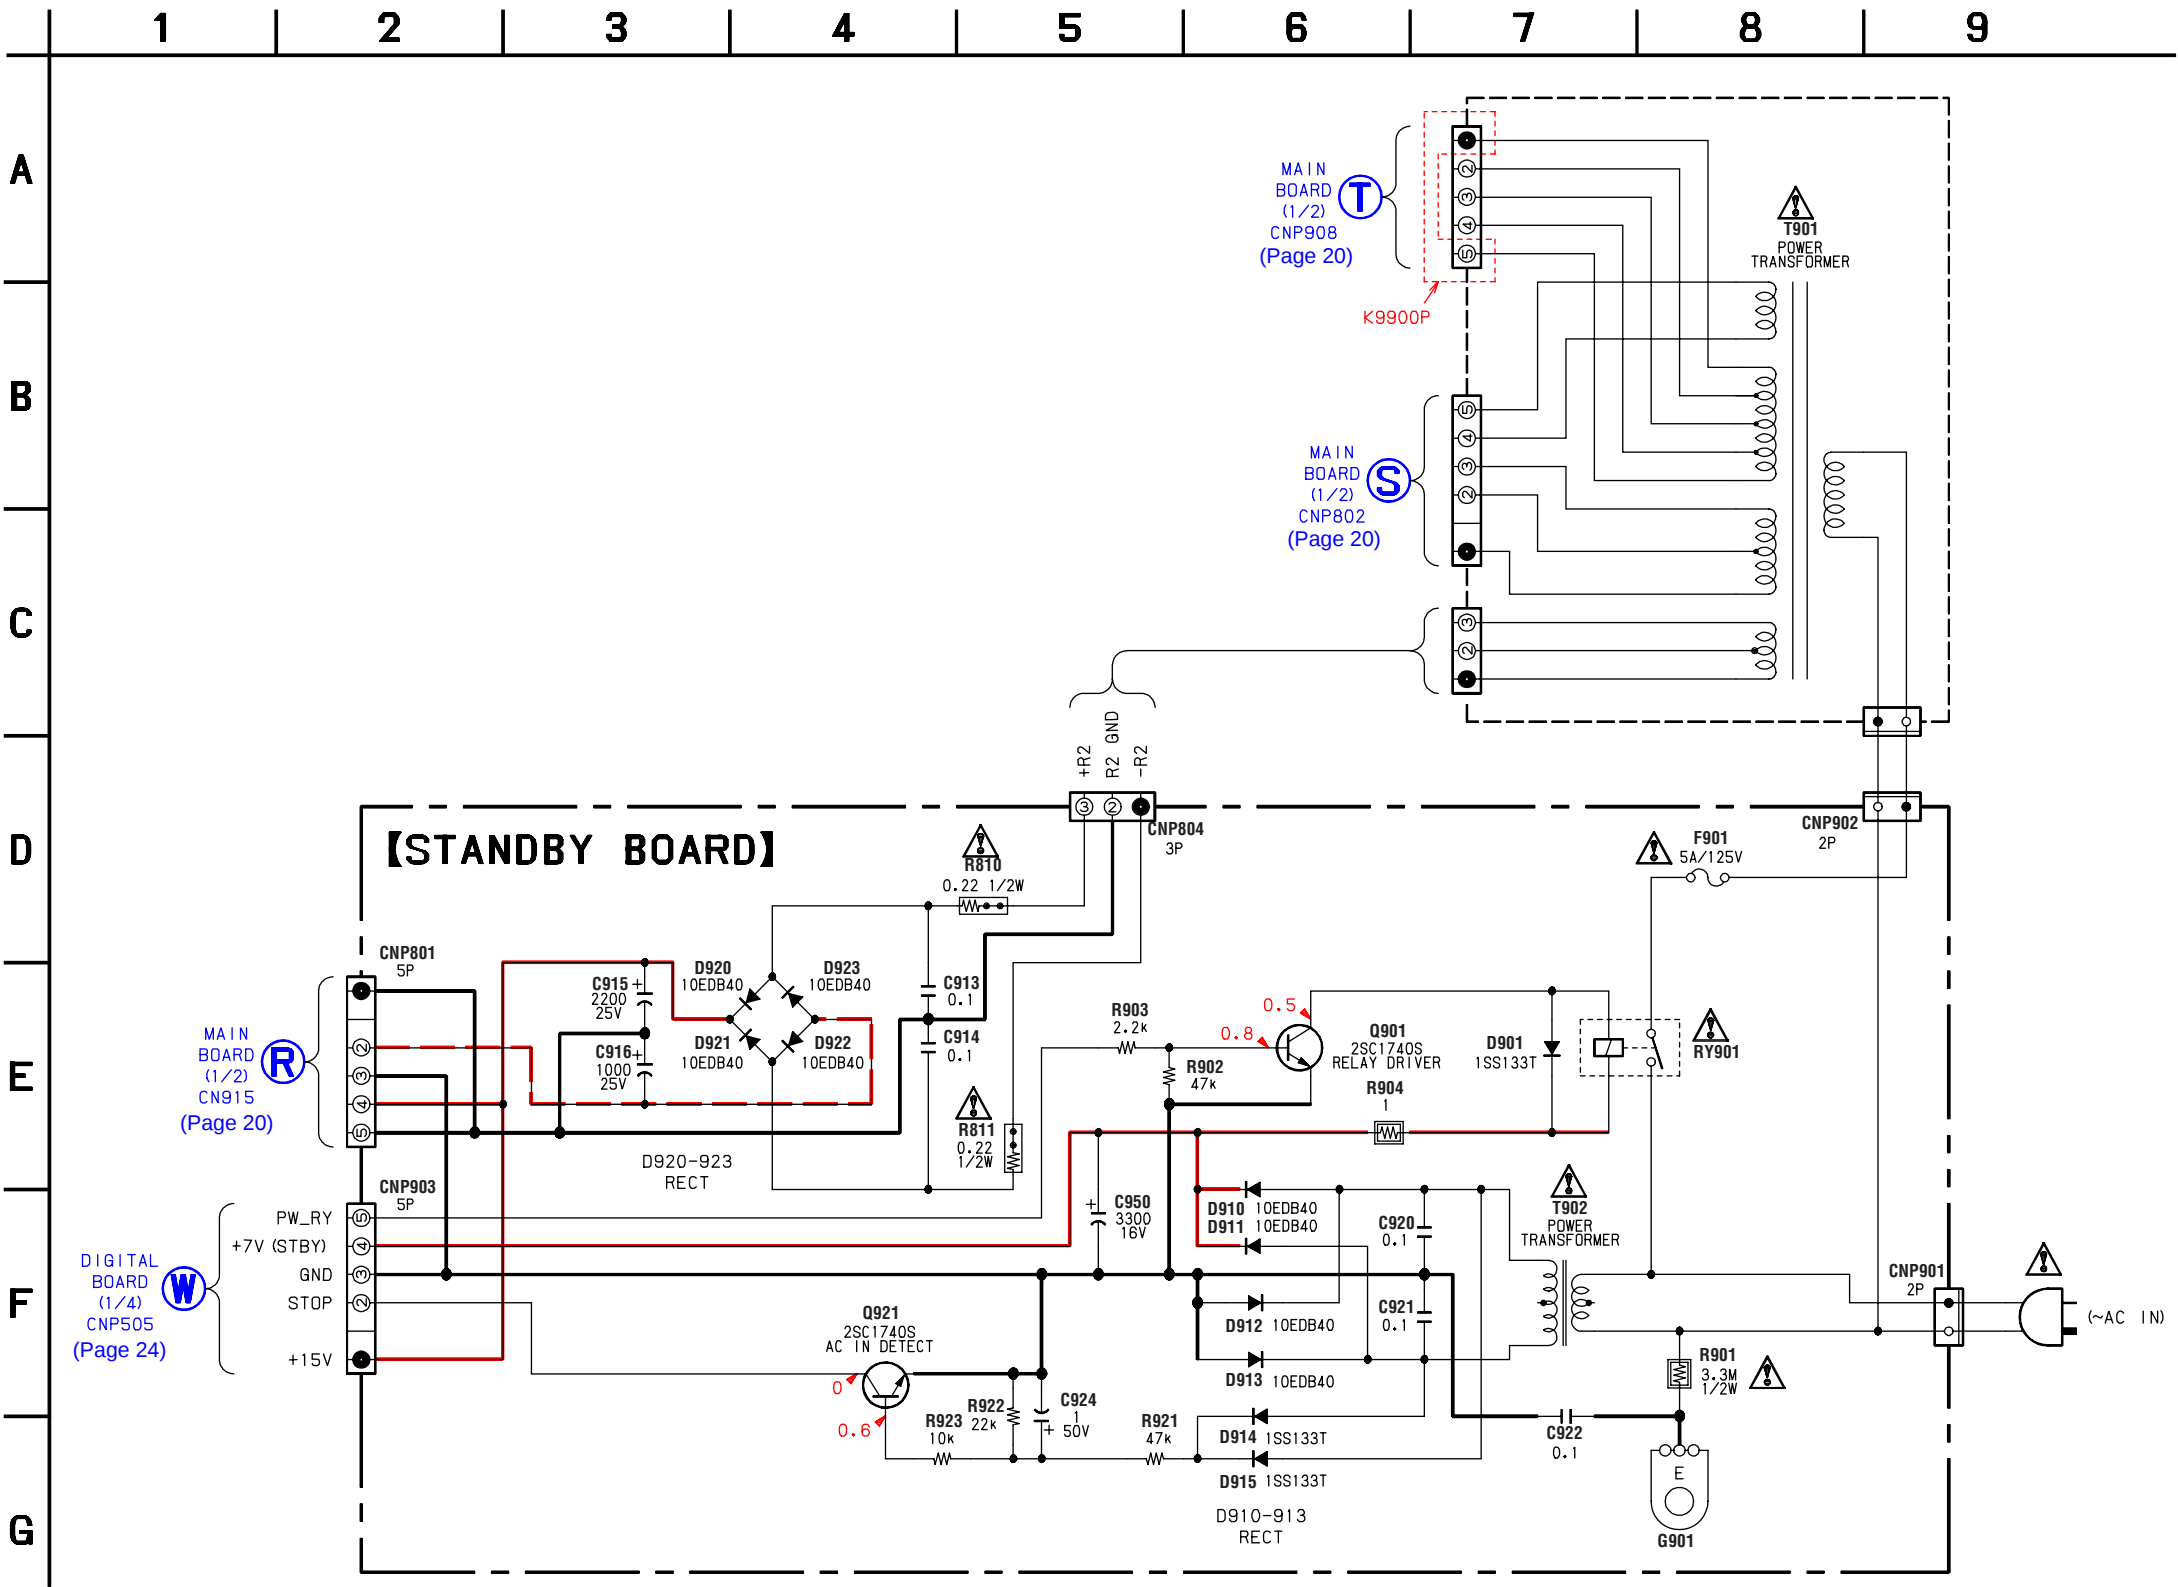


• IC Block Diagrams


IC501 μ PC2581V-S (MAIN BOARD (2/2))
IC601 μ PC2581V-S (MAIN BOARD (2/2))
IC701 μ PC2581V-S (MAIN BOARD (2/2))

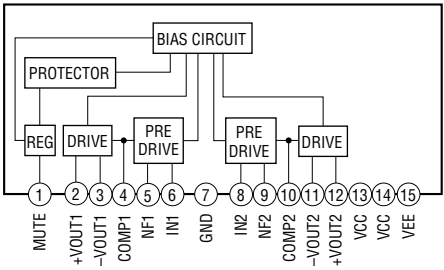


IC1301 LC89056W-E (DIGITAL BOARD (1/4))

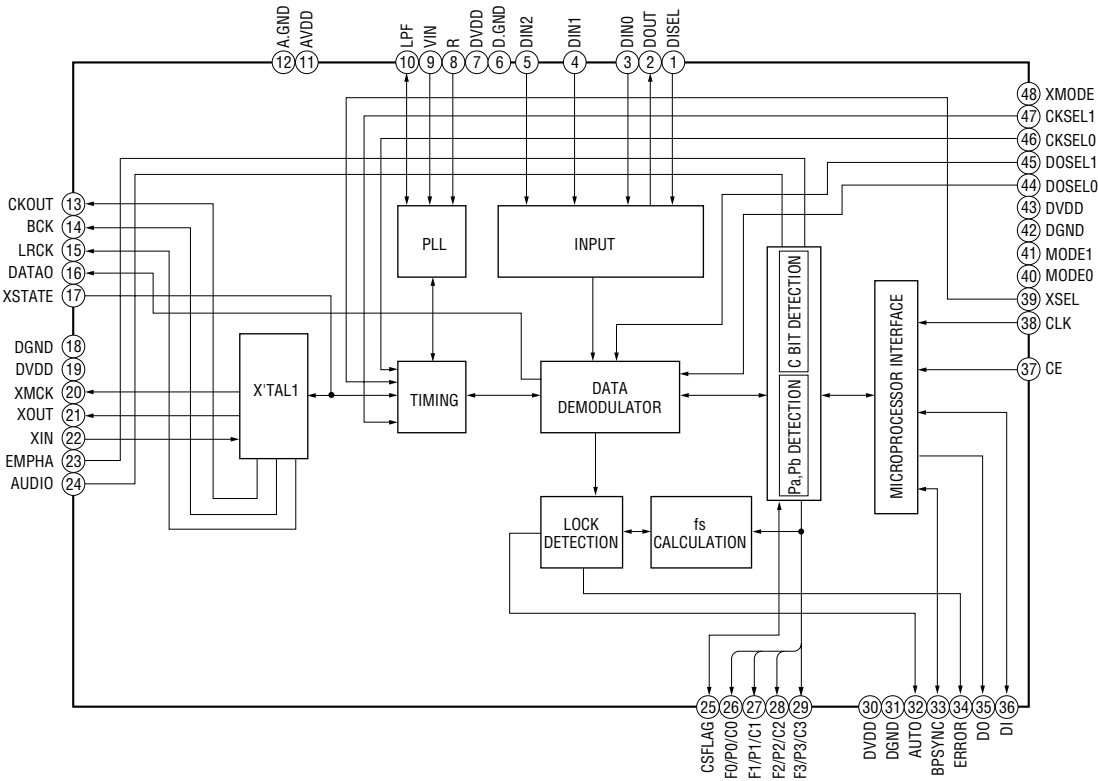


IC1401 PCM1800E/2K (DIGITAL BOARD (3/4))

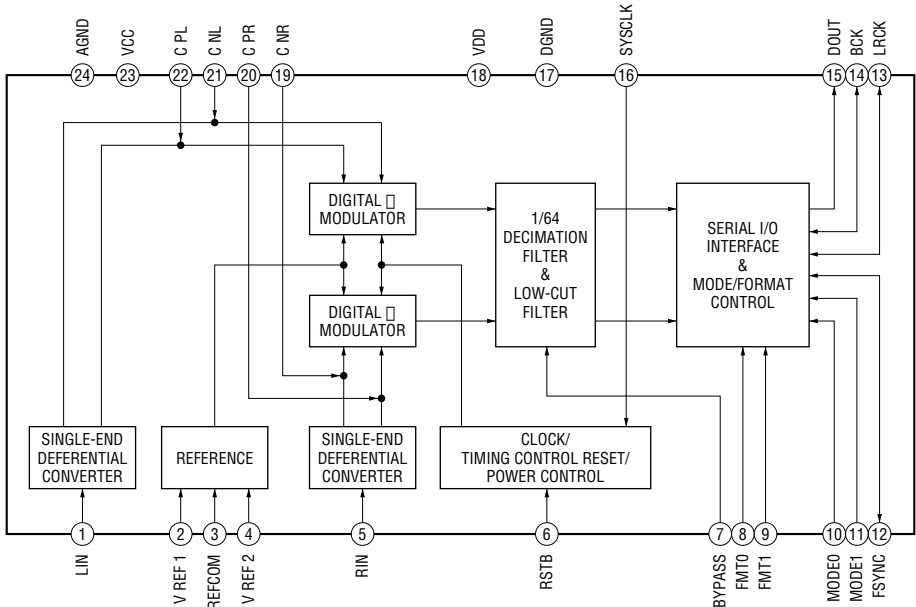

IC1452 PCM1609KPTR (DIGITAL BOARD (3/4))

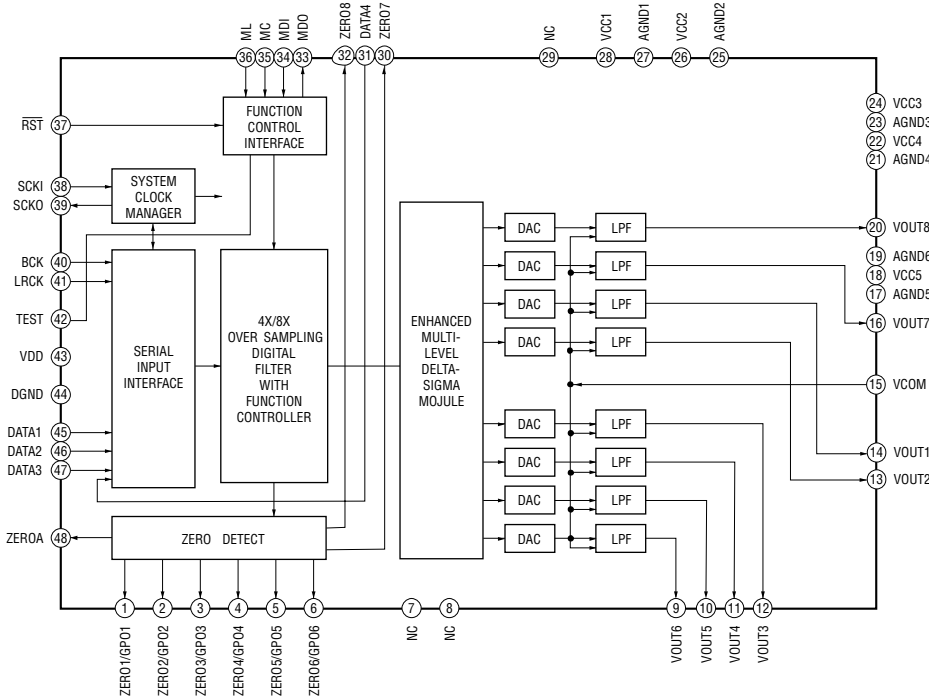

IC203 NJM2595D (VIDEO BOARD)

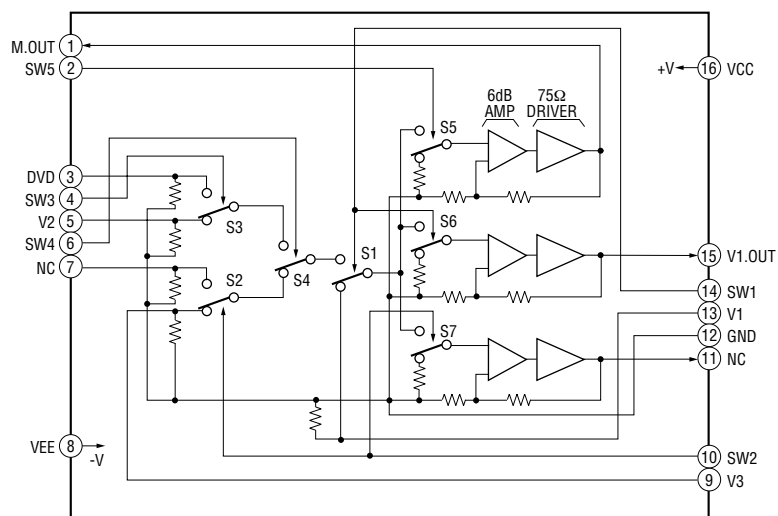

• IC Pin Descriptions

IC1501 CXD9718BQ (DSP) (DIGITAL Board (2/4))

Pin No.	Pin Name	I/O	Pin Description
1	VSS	—	Ground
2	XRST	I	Reset signal input from SYSTEM CONTROL IC
3	EXTIN	I	Not used (Connect to ground)
4	LRCKI3	I	Not used (Connect to ground)
5	VDDI	I	Power supply pin (+2.7 V)
6	BCKI3	I	Not used (Connect to ground)
7	PLOCK	O	Not used (Open)
8	VSS	—	Ground
9	MCLK1	I	Clock signal input (13.9 MHz)
10	VDDI	I	Power supply pin (+2.7 V)
11	VSS	—	Ground
12	MCLK2	O	Clock signal output (13.9 MHz)
13	MS	I	Not used (Fixed at L)
14	SCKOUT	O	Internal system clock signal output for 8CH DAC IC
15	LRCKI1	I	Sampling clock signal input from ADC IC
16	VDDE	I	Power supply pin (+3.4 V)
17	BCKI1	I	Bit clock signal input from ADC IC
18	SDI1	I	Audio IF data input from ADC IC
19	LRCKO	O	Sampling clock signal output for 8CH DAC IC
20	BCKO	O	Bit clock signal output for 8CH DAC IC
21	VSS	—	Ground
22	KFSIO	I/O	Audio clock signal (384fs/256fs) input/output for DIR IC
23 to 26	SDO1 to SDO4	O	Digital audio serial data output for 8CH DAC IC
27	SPDIF	O	Not used (Open)
28	LRCKI2	I	Sampling clock signal input from ADC IC
29	BCKI2	I	Bit clock signal input from ADC IC
30	SDI2	I	Digital audio serial data input from DIR IC
31	VSS	—	Ground
32	HACN	O	Acknowledge signal output for SYSTEM CONTROL IC
33	HDIN	I	Serial data input from SYSTEM CONTROL IC
34	HCLK	I	Clock signal input from SYSTEM CONTROL IC
35	HDOUT	O	Serial data output for SYSTEM CONTROL IC
36	HCS	I	Chip select signal input from SYSTEM CONTROL IC
37	GP12	I	GP12 signal input from SYSTEM CONTROL IC
38, 39	GP13, GP14	O	Not used (Open)
40	VDDI	I	Power supply pin (+2.7 V)
41	VSS	—	Ground
42	GP15	O	Not used (Open)
43	OE0	O	Not used (Open)
44	CS0	O	External memory chip select signal output for D/A converter IC (SDRAM)
45	WE0	O	SDRAM write enable signal output for D/A converter IC (SDRAM)
46	VDDE	I	Power supply pin (+3.4 V)
47	WMD1	I	Not used (Fixed at H)
48	VSS	—	Ground
49	WMD0	I	Not used (Fixed at H)
50	PAGE2	O	Not used (Open)
51	VSS	—	Ground
52, 53	PAGE1, PAGE0	O	Not used (Open)
54	BOOT	I	Not used (Connect to ground)
55	TST1	O	Not used (Open)
56	BST	I	Boot stop signal input from SYSTEM CONTROL IC

Pin No.	Pin Name	I/O	Pin Description
57	MOD1	I	Operation mode signal input (L: 386fs, H: 256fs) (Fixed at H)
58	MOD0	I	Operation mode signal input (L: single chip mode, H: use prohibited) (Fixed at L)
59	EXLOCK	I	Error detection signal input from DIR IC
60	VDDI	I	Power supply pin (+2.7 V)
61	VSS	—	Ground
62, 63	A17, A16	O	Not used (Open)
64 to 66	A15 to A13	O	External memory address signal output for D/A converter IC (SDRAM)
67	GP10	O	Not used (Open)
68	GP9	O	GP9 signal output for SYSTEM CONTROL IC
69	GP8	I	Audio signal input from DIR IC
70	VDDI	I	Power supply pin (+2.7 V)
71	VSS	—	Ground
72 to 75	D15/GP7 to D12/GP4	I/O	External memory data input/output for D/A converter IC (general port)
76	VDDE	I	Power supply pin (+3.4 V)
77 to 80	D11/GP3 to D8/GP0	I/O	External memory data input/output for D/A converter IC (general port)
81	VSS	—	Ground
82	A9	O	External memory address signal output for D/A converter IC (SDRAM)
83 to 85	A12 to A10	O	External memory address signal output for D/A converter IC (SDRAM)
86	TDO	O	Not used (Fixed at H)
87	TMS	I	Not used (Fixed at H)
88	XTRST	I	Not used (Fixed at H)
89	TCK	I	Not used (Fixed at H)
90	TDI	I	Not used (Fixed at H)
91	VSS	—	Ground
92 to 97	A8 to A3	O	External memory address signal output for D/A converter IC (SDRAM)
98, 99	D7, D6	I/O	External memory data input/output for D/A converter IC (SDRAM)
100	VDDI	I	Power supply pin (+2.7 V)
101	VSS	—	Ground
102 to 105	D5 to D2	I/O	External memory data input/output for D/A converter IC (SDRAM)
106	VDDE	I	Power supply pin (+3.4 V)
107, 108	D1, D0	I/O	External memory data input/output for D/A converter IC (SDRAM)
109, 110	A2, A1	O	External memory address signal output for D/A converter IC (SDRAM)
111	VSS	—	Ground
112	A0	O	External memory address signal output for D/A converter IC (SDRAM)
113	PM	I	PLL initialization signal input from SYSTEM CONTROL IC
114, 115	SDI3, SDI4	I	Not used (Open)
116	SYNC	I	Sync/async select signal input (L: sync, H: async) (Fixed at H)
117	TST2	I	Not used (Connect to ground)
118	GP11	I	Not used (Connect to ground)
119	TST3	I	Not used (Connect to ground)
120	VDDI	I	Power supply pin (+2.7 V)

IC1101 MB90488BPF-G-137E1 (SYSTEM CONTROL) (DIGITAL Board (4/4))

Pin No.	Pin Name	I/O	Pin Description
1	DATAO	I	Serial data line signal input from DIR IC
2	GP9	I	GP9 signal input from DSP IC
3	BST	O	Boot stop control signal output for DSP IC
4	HCS	O	Chip select signal output for DSP IC
5	HACN	I	Acknowledge signal input from DSP IC
6	XRST	O	Reset signal output for DSP IC
7	PM	O	PLL control signal output for DSP IC
8	GP12	O	GP12 signal output for DSP IC
9	PCM1800_RST	O	Reset signal output for ADC IC
10	PCM1608_RST	O	Reset signal output for 8CH DAC IC
11	VSS	—	Ground
12	PCM1608_ML	O	Serial latch signal output for 8CH DAC IC
13	PCM1608_MC	O	Serial clock signal output for 8CH DAC IC
14	PCM1608_MDI	O	Serial data output for 8CH DAC IC
15	PCM1608_MDO	I	Serial data input from 8CH DAC IC
16	T.SERIAL_CLK	O	Serial clock signal output for tuner pack
17	TUNER_DATA	O	Serial data output for tuner pack
18	HDOUT	I	Serial data input from DSP IC
19	HDIN	O	Serial data output for DSP IC
20	HCLK	O	Serial data clock signal output for DSP IC
21	DLY_BYPASS	O	Not used (Fixed at L)
22	DIR/AD	O	Not used (Fixed at L)
23	VCC5	—	Power supply pin (+3.4 V)
24	SYS_MUTE	O	System mute control signal output
25	ANA/DIG	O	Analog/Digital port signal output
26	UPCON_RST	O	Not used (Open)
27	FLASH2_VOL/VOL_CLK	O	Flash programming signal output 2/Volume clock signal output
28	FLASH1/VOL_DATA_LATCH	O	Flash programming signal output 1/Volume data latch signal output
29	SDA	I/O	Serial data input/output for EEPROM IC
30	SCL	O	Clock signal output for EEPROM IC
31	ENC_A	O	Not used (Fixed at L)
32	ENC_B	O	Not used (Fixed at L)
33	UPCON	O	Not used (Open)
34	UPCON_CLK	O	Not used (Open)
35	AVCC	—	Power supply pin (+3.4 V)
36	AVRH	—	Power supply pin (+3.4 V)
37	AVSS	—	Ground
38 to 40	A/D0 to A/D2	I	Key signal input (A/D port)
41	VERSION	I	Destination detection signal input (Fixed at L)
42	VSS	—	Ground
43	RDS_SIG	I	Not used (Fixed at L)
44	MODEL	I	Model detection signal input (Fixed at L)
45	VOL_ENC (A)	I	Volume encoder (A) signal input
46	VOL_ENC (B)	I	Volume encoder (B) signal input
47	BLUE_LED	O	LED (MULTI CHANNEL DECODING) driver signal output
48	STOP	I	AC off detection signal input
49	MOD0	—	Selection of micon operation mode
50	MOD1	—	Not used (Connect to AVCC)
51	MOD2	—	Selection of micon operation mode
52	RDS_CLK	I	Not used (Fixed at L)
53	RDS_DATA	I	Not used (Fixed at L)
54	SIRCS	I	SIRCS signal input

Pin No.	Pin Name	I/O	Pin Description
55	HP_DETECT	I	Headphones detection signal input
56	POWER_KEY	I	Power key detection signal input
57	FL_LAT	O	Latch signal output for FL driver IC
58	POWER_RY	O	Power relay driver control signal output
59	FL_DATA	O	Serial data output for FL driver IC
60	FL_CLK	O	Clock signal output for FL driver IC
61	PROTECTOR	I	Protector detection signal input
62	HP_RY	O	Headphones relay driver control signal output
63	FUSE_DETECT	I	Fuse open detection signal input
64	NTSC_PAL_SW	O	Not used (Fixed at L)
65	COMPO_SW2/A1_IN	O	COMPONENT VIDEO switch 2 signal output
66	FRONT_RY	O	Front speaker A relay driver control signal output
67	SP_B_RY	O	Front speaker B relay driver control signal output
68	C/SB_RY	O	Center speaker relay driver control signal output
69	REAR_RY	O	Surround speaker relay driver control signal output
70	SW_RY	O	Sub woofer relay driver control signal output
71	COMPO_SW1/A1_OUT	O	COMPONENT VIDEO switch 1 signal output
72	BRIDGEABLE_RY	O	Bridgeable relay driver control signal output
73	DO	I	Tuner serial data input
74	SLATCH	O	Tuner latch signal output
75	TUNED	I	Tuned signal detection input
76	STEREO	I	Stereo signal detection input
77	RSTX	I	Reset signal input
78	MUTE	O	Tuner mute signal output
79	X1A	—	Not used (Open)
80	X0A	—	Not used (Connect to VSS)
81	VSS	—	Ground
82	X0	—	Clock signal input (24 MHz)
83	X1	—	Clock signal output (24 MHz)
84	VCC3	—	Power supply pin (+3.4 V)
85	GROUPING_SW	O	Not used (Open)
86 to 89	SW1 to SW4	O	Video select signal output
90	SELECT2	O	Not used (Open)
91	SELECT1	O	Not used (Open)
92	BST_SEL	O	96/24 signal output for DSP IC
93	XMODE	O	Xmode signal output for DIR IC
94	CKSEL1	O	Clock select signal output for DIR IC
95	CLK	O	Data clock signal output for DIR IC
96	CE	O	Latch signal output for DIR IC
97	DI	O	Data output for DIR IC
98	DO	I	Data input from DIR IC
99	ERROR	I	Error detection signal input from DIR IC
100	XSTATE	I	Xstate signal input from DIR IC

SECTION 5

EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
CND : Canadian model

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example :

KNOB, BALANCE (WHITE) ... (RED)


↑
 Parts Color

↑
 Cabinet's Color
- Accessories are given in the last of this parts list.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une
marque  sont critiques pour
la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

5-1. CASE SECTION

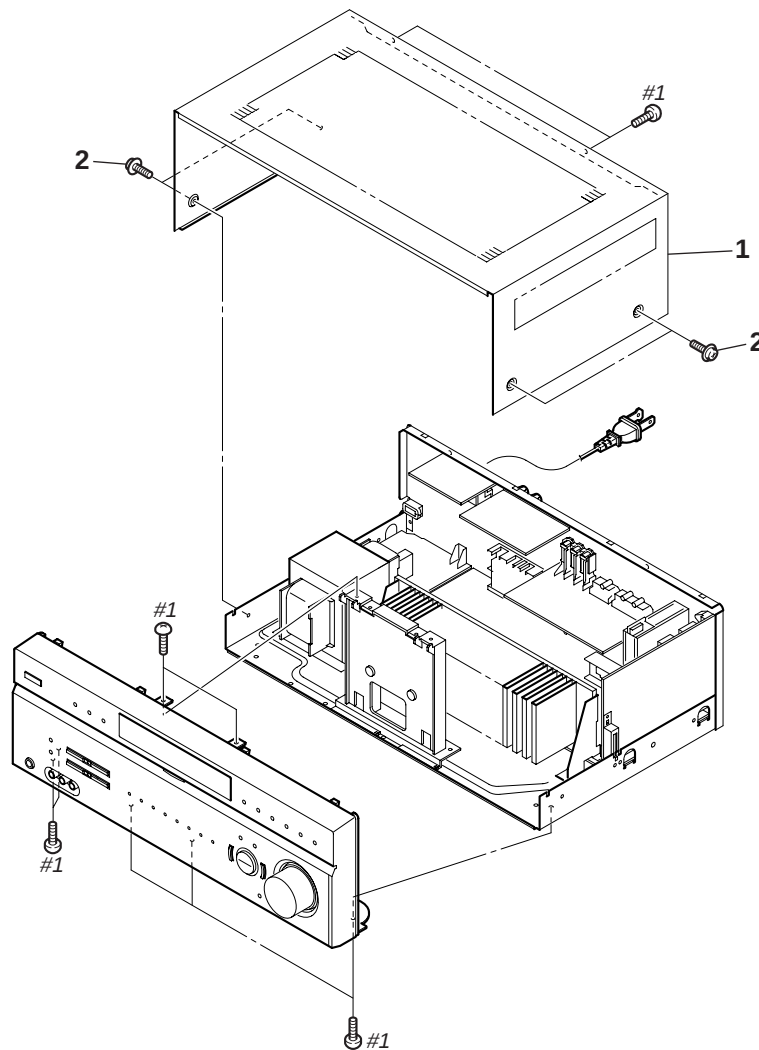


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-232-418-02	CASE (BLACK)...(BLACK)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
1	4-232-418-61	CASE (SILVER)...(SILVER)					
2	3-070-883-41	SCREW, TAPPING (SILVER)...(SILVER)					
2	3-363-099-02	SCREW (CASE 3 TP2) (BLACK)...(BLACK)					

5-2. FRONT PANEL SECTION

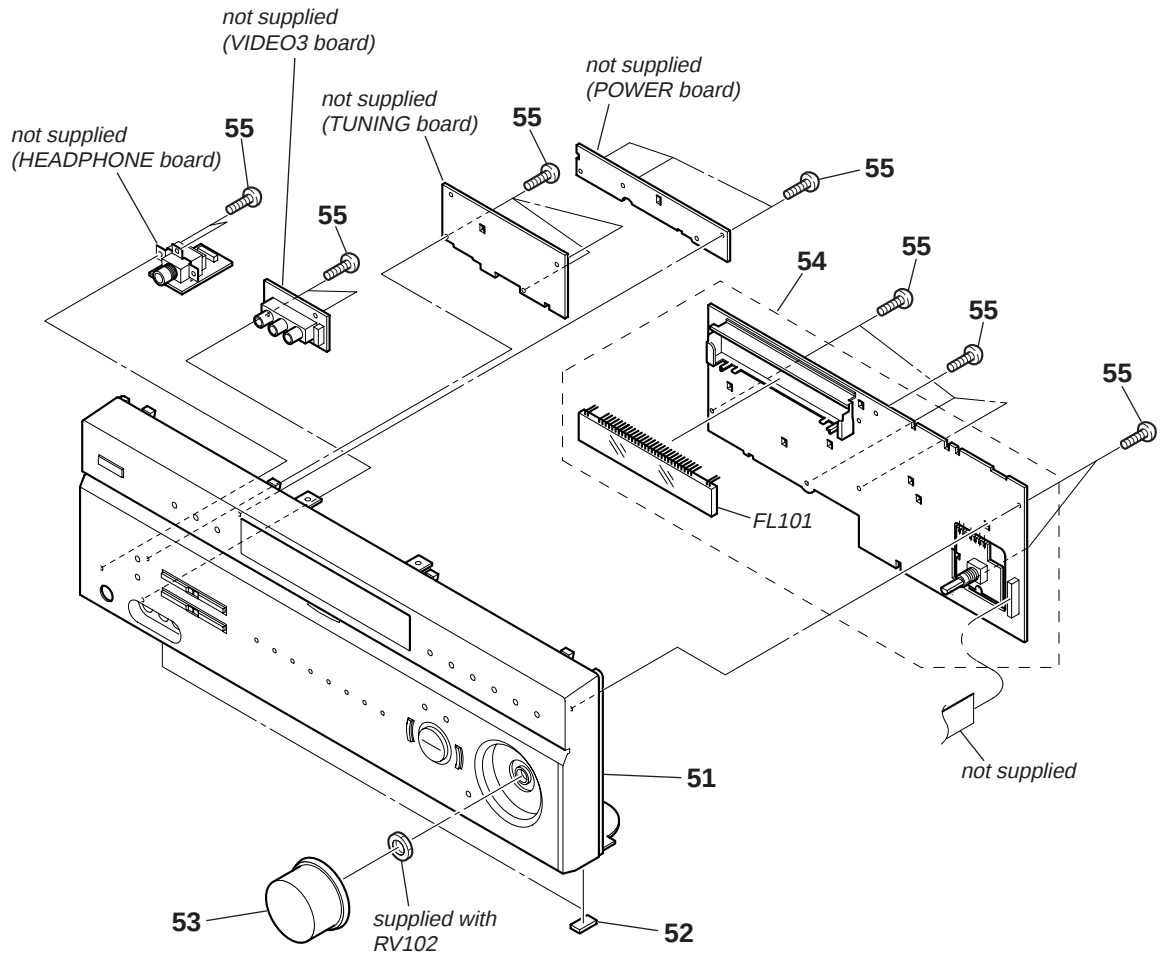

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
51	X-2025-214-1	FRONT PANEL ASSY (SILVER)...(SILVER)		52	4-977-358-01	CUSHION	
			(K9900P)	53	4-232-113-01	KNOB (VOL) (BLACK)...(BLACK)	
51	X-2025-521-1	FRONT PANEL ASSY (SILVER)...(SILVER)		53	4-232-113-31	KNOB (VOL) (SILVER)...(SILVER)	
			(K5900P:US)	54	A-1084-338-A	DISPLAY BOARD, COMPLETE	
51	X-2048-484-1	FRONT PANEL ASSY (BLACK)...(BLACK)		55	3-087-053-01	+BVTP 2.6 (3CR)	
			(K9900P)				
51	X-2055-153-1	FRONT PANEL ASSY (SILVER)...(SILVER)		FL101	1-518-966-11	VACUUM FLUORESCENT DISPLAY	
			(K5900P:CND)				


5-3. BACK PANEL SECTION

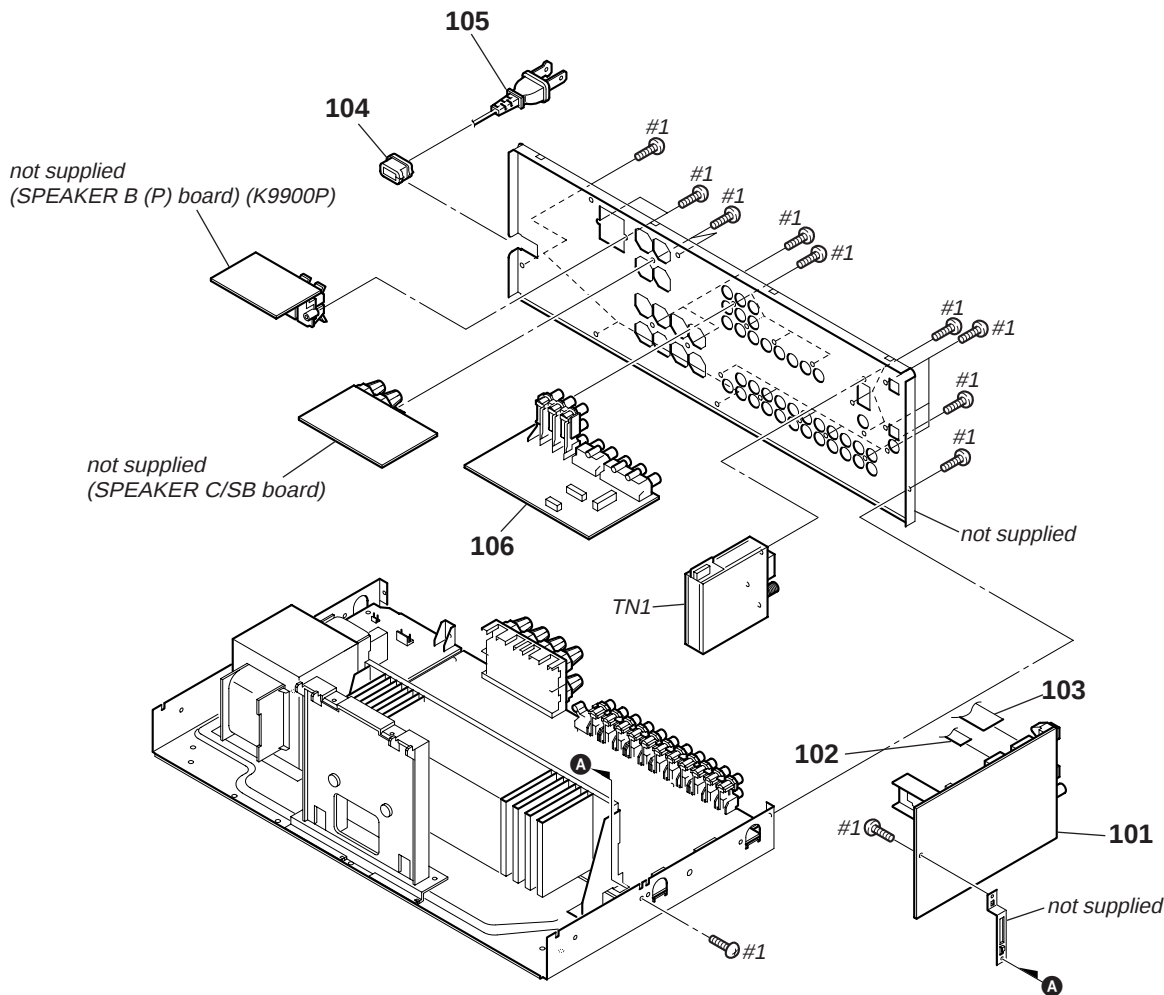

Ref. No.	Part No.	Description	Remark
101	A-1087-685-A	DIGITAL BOARD, COMPLETE (K5900P)	
101	A-1091-819-A	DIGITAL BOARD, COMPLETE (K9900P)	
102	1-828-963-11	WIRE (FLAT TYPE) (11 CORE)	
103	1-828-972-11	WIRE (FLAT TYPE) (13 CORE)	
* 104	3-703-244-00	BUSHING (2104), CORD	
⚠ 105	1-783-820-11	CORD, POWER	

Ref. No.	Part No.	Description	Remark
106	A-1084-344-A	VIDEO BOARD, COMPLETE	
TN1	1-693-675-11	TUNER PACK (ANTENNA)	(EXCEPT K5900P:SILVER)
TN1	1-693-675-21	TUNER PACK (ANTENNA) (K5900P:SILVER)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

5-4. CHASSIS SECTION

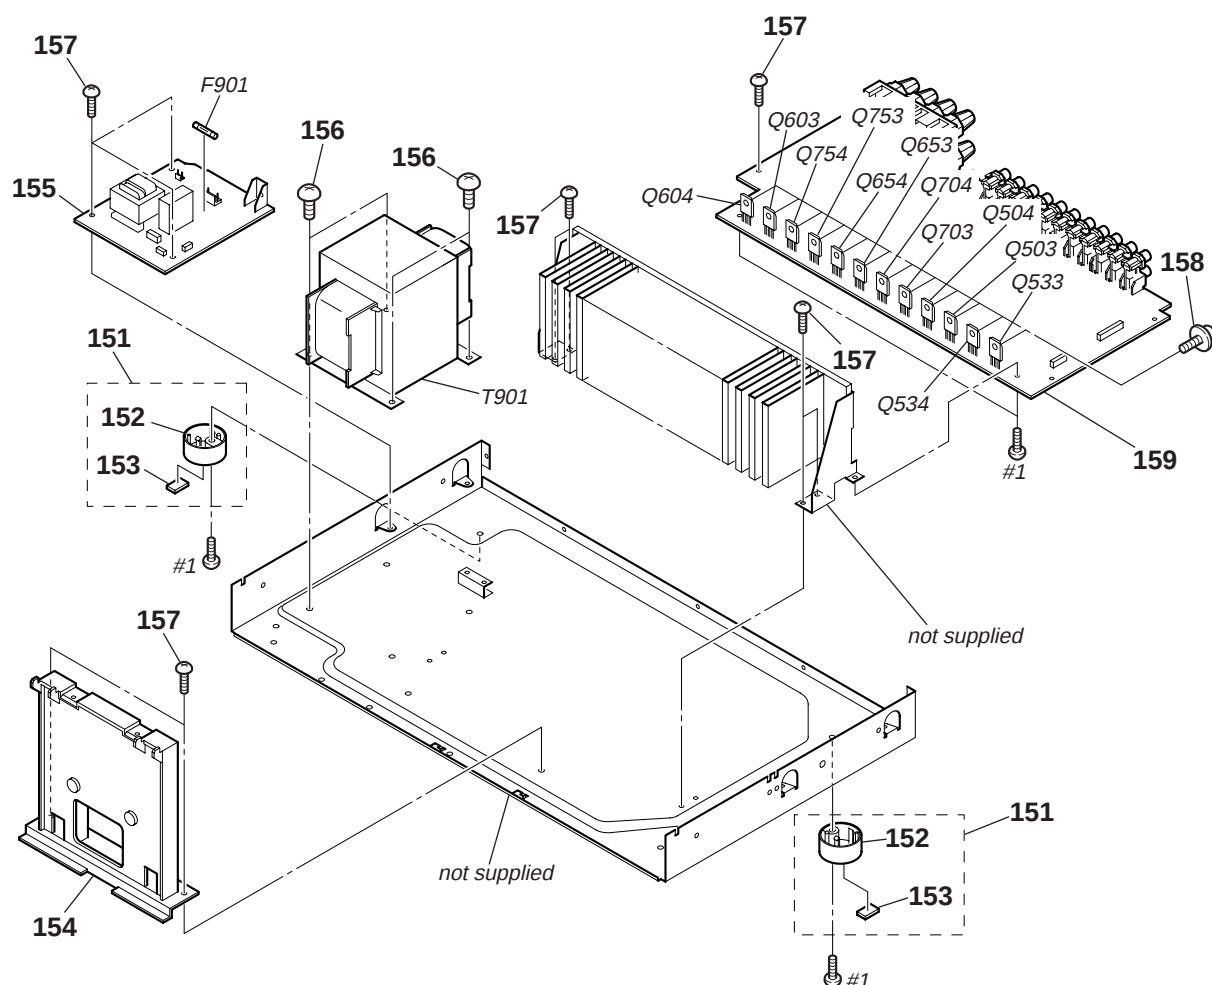

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-4953-448-1	FOOT ASSY		Q533	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
152	4-232-237-01	FOOT (DIA. 30)		Q534	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
153	4-977-358-01	CUSHION		Q603	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
154	4-233-263-01	SUB MOLD (DE9)		Q604	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
155	A-1084-334-A	STANDBY BOARD, COMPLETE		Q653	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
156	4-249-675-01	+BV SUMITITE S 4X6 ROUND		Q654	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
157	3-077-331-21	+BV3 (3-CR)		Q703	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
158	3-905-609-01	SCREW (TRANSISTOR)		Q704	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
159	A-1088-011-A	MAIN BOARD, COMPLETE (K9900P)		Q753	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
159	A-1090-297-A	MAIN BOARD, COMPLETE (K5900P)		Q754	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
△ F901	1-533-453-12	FUSE, GLASS TUBE (DIA. 5) (5A/125V)		△ T901	1-443-524-11	TRANSFORMER, POWER (K9900P)	
Q503	6-702-390-01	TRANSISTOR MN2488-OPY-MK		△ T901	1-443-628-11	TRANSFORMER, POWER (K5900P)	
Q504	6-702-391-01	TRANSISTOR MP1620-OPY-MK		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

SECTION 6
ELECTRICAL PARTS LIST

DIGITAL

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..
• CAPACITORS
uF : μ F
• COILS
uH : μ H

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-1087-685-A	DIGITAL BOARD, COMPLETE (K5900P)		C1305	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
	A-1091-819-A	DIGITAL BOARD, COMPLETE (K9900P)		C1306	1-126-947-11	ELECT 47uF 20% 35V	
		*****		C1308	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3		C1309	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
		< CAPACITOR >		C1310	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
C1001	1-126-925-11	ELECT 470uF 20% 10V		C1312	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1002	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1313	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C1004	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V		C1314	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1021	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1315	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1022	1-126-925-11	ELECT 470uF 20% 10V		C1351	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1031	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1354	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1032	1-126-925-11	ELECT 470uF 20% 10V		C1355	1-104-662-11	ELECT 22uF 20% 25V	
C1100	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1356	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C1102	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1357	1-162-905-11	CERAMIC CHIP 1PF 0.25PF 50V	
C1103	1-126-947-11	ELECT 47uF 20% 35V		C1358	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1107	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1359	1-126-916-11	ELECT 1000uF 20% 6.3V	
C1108	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1360	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
C1118	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1361	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1119	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1362	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1120	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C1401	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1121	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1402	1-126-947-11	ELECT 47uF 20% 35V	
C1122	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1403	1-126-964-11	ELECT 10uF 20% 50V	
C1123	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1404	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1124	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1405	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C1126	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		C1406	1-126-963-11	ELECT 4.7uF 20% 50V	
C1129	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C1407	1-126-963-11	ELECT 4.7uF 20% 50V	
C1130	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C1408	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C1137	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C1409	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1138	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1411	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C1139	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1413	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C1140	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1418	1-126-964-11	ELECT 10uF 20% 50V	
C1142	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1422	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C1149	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		C1423	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C1251	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1428	1-126-964-11	ELECT 10uF 20% 50V	
C1252	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1432	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C1253	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1433	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C1254	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		C1438	1-126-964-11	ELECT 10uF 20% 50V	
C1255	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		C1441	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C1299	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1442	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C1301	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1448	1-126-964-11	ELECT 10uF 20% 50V	
C1302	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C1450	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
C1303	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V		C1451	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C1304	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C1453	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
				C1454	1-100-566-11	CERAMIC CHIP 0.1uF 10% 25V	
				C1457	1-126-964-11	ELECT 10uF 20% 50V	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C1458	1-126-964-11	ELECT	10uF 20% 50V	< CONNECTOR >			
C1460	1-126-964-11	ELECT	10uF 20% 50V	CNP503	1-779-977-11	PIN, CONNECTOR 6P	
C1462	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	CNP504	1-784-922-11	PIN, CONNECTOR 5P	
C1463	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	CNP505	1-779-799-11	PIN, CONNECTOR 9P	
C1468	1-126-964-11	ELECT	10uF 20% 50V	CNS501	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P	
C1472	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	CNS502	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P	
C1473	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	CNS504	1-568-826-11	CONNECTOR, FFC 7P	
C1478	1-126-964-11	ELECT	10uF 20% 50V	CNS505	1-568-838-11	CONNECTOR, FFC 21P	
C1481	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	CNS508	1-568-830-11	CONNECTOR, FFC 11P	
C1483	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	CNS509	1-784-774-11	CONNECTOR, FFC 13P	
C1487	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	< DIODE >			
C1491	1-126-964-11	ELECT	10uF 20% 50V	D1001	8-719-053-18	DIODE 1SR154-400TE-25	
C1494	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1003	8-719-049-09	DIODE 1SS367-T3SONY	
C1495	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	D1004	8-719-049-09	DIODE 1SS367-T3SONY	
C1501	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1103	8-719-988-61	DIODE 1SS355TE-17	
C1502	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1105	8-719-988-61	DIODE 1SS355TE-17	
C1503	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1106	8-719-988-61	DIODE 1SS355TE-17	
C1504	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1107	8-719-988-61	DIODE 1SS355TE-17	
C1505	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1108	8-719-988-61	DIODE 1SS355TE-17	
C1506	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1110	8-719-988-61	DIODE 1SS355TE-17	
C1507	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1111	8-719-988-61	DIODE 1SS355TE-17	
C1508	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1301	8-719-988-61	DIODE 1SS355TE-17	
C1509	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	D1302	8-719-988-61	DIODE 1SS355TE-17	
C1510	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	< FERRITE BEAD >			
C1511	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1101	1-400-862-11	BEAD, FERRITE	
C1513	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1302	1-400-862-11	BEAD, FERRITE	
C1514	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1305	1-400-862-11	BEAD, FERRITE	
C1515	1-126-925-11	ELECT	470uF 20% 10V	FB1306	1-400-862-11	BEAD, FERRITE	
C1516	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1308	1-400-862-11	BEAD, FERRITE	
C1517	1-126-925-11	ELECT	470uF 20% 10V	FB1405	1-400-862-11	BEAD, FERRITE	
C1518	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1452	1-400-862-11	BEAD, FERRITE	
C1519	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1453	1-400-862-11	BEAD, FERRITE	
C1520	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	FB1501	1-400-862-11	BEAD, FERRITE	
C1521	1-162-920-11	CERAMIC CHIP	27PF 5% 50V	FB1502	1-400-862-11	BEAD, FERRITE	
C1522	1-162-920-11	CERAMIC CHIP	27PF 5% 50V	FB1503	1-400-862-11	BEAD, FERRITE	
C1525	1-126-925-11	ELECT	470uF 20% 10V	< IC >			
C1540	1-216-833-11	METAL CHIP	10K 5% 1/10W	IC1001	8-759-231-53	IC TA7805S	
C1541	1-216-833-11	METAL CHIP	10K 5% 1/10W	IC1031	6-705-464-01	IC BA50BC0T	
C1542	1-216-833-11	METAL CHIP	10K 5% 1/10W	IC1101	6-805-148-01	IC MB90488BPF-G-137E1	
C1543	1-216-833-11	METAL CHIP	10K 5% 1/10W	IC1111	6-702-913-01	IC S-80929CNMC-G8ZT2G	
C1544	1-216-833-11	METAL CHIP	10K 5% 1/10W	IC1131	6-704-004-01	IC BR24L16F-WE2	
C1545	1-216-833-11	METAL CHIP	10K 5% 1/10W	IC1301	8-759-825-15	IC LC89056W-E	
C1547	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	IC1303	8-759-242-70	IC TC7WU04F	
C1557	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	IC1351	6-600-014-01	IC TORX141L (DIGITAL VIDEO 2 IN (OPTICAL))	
C1566	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	IC1354	6-600-014-01	IC TORX141L (DIGITAL SA-CD/CD IN (OPTICAL))	
C1567	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	IC1401	8-759-560-56	IC PCM1800E/2K	
C1568	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	IC1403	8-759-710-97	IC NJM4565M-D	
C1569	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	IC1404	8-759-710-97	IC NJM4565M-D	
C1604	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC1405	8-759-710-97	IC NJM4565M-D	
C1605	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC1406	8-759-710-97	IC NJM4565M-D	
C1620	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC1452	6-703-787-01	IC PCM1609KPTR	
C1905	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	IC1501	6-705-900-01	IC CXD9718BQ	
C1906	1-126-925-11	ELECT	470uF 20% 10V				
C1908	1-126-925-11	ELECT	470uF 20% 10V				
C1913	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V				
C1914	1-126-947-11	ELECT	47uF 20% 35V				

STR-K5900P/K9900P

DIGITAL

Ref. No.	Part No.	Description	Remark			
IC1502	6-704-037-01	IC IC61LV6416-15TG				
IC1503	8-759-546-74	IC TC7WH157FU(TE12R)				
IC1901	6-701-887-02	IC SI-3004KWF				
IC1902	6-703-550-01	IC TA7809LS				
IC1904	6-705-463-01	IC BA33BC0T				
< JACK >						
J1301	1-794-972-11	JACK, PIN 1P (DIGITAL DVD IN (COAXIAL))				
< JUMPER RESISTOR >						
JR1020	1-216-864-11	SHORT CHIP	0			
JR1201	1-211-950-11	SHORT CHIP	0			
JR1202	1-216-864-11	SHORT CHIP	0			
JR1203	1-216-296-11	SHORT CHIP	0			
JR1204	1-211-950-11	SHORT CHIP	0			
JR1206	1-211-950-11	SHORT CHIP	0			
JR1211	1-216-296-11	SHORT CHIP	0			
JR1212	1-216-296-11	SHORT CHIP	0			
JR1214	1-216-296-11	SHORT CHIP	0			
JR1215	1-216-296-11	SHORT CHIP	0			
JR1302	1-216-864-11	SHORT CHIP	0			
JR1303	1-216-864-11	SHORT CHIP	0			
JR1501	1-216-864-11	SHORT CHIP	0			
JR1511	1-400-862-11	BEAD, FERRITE				
< TRANSISTOR >						
Q1103	8-729-027-43	TRANSISTOR DTC114EKA-T146				
Q1104	8-729-230-49	TRANSISTOR 2SC2712-YG				
Q1105	8-729-230-49	TRANSISTOR 2SC2712-YG				
< RESISTOR >						
R1018	1-216-864-11	SHORT CHIP	0			
R1019	1-216-864-11	SHORT CHIP	0			
R1035	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1039	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1041	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1042	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1044	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1049	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1052	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1053	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1061	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1062	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1065	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1066	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1067	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1068	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1071	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
R1072	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
R1073	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
R1076	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1077	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1078	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1082	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1083	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1088	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1094	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1095	1-216-833-11	METAL CHIP	10K	5%	1/10W	

Ref. No.	Part No.	Description	Remark			
R1096	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1097	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R1098	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1099	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1106	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1107	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1108	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1109	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1110	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1111	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1112	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1113	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1114	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R1115	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1117	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1118	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1119	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1120	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1121	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1122	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1123	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1124	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1127	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1128	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1129	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1132	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1134	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1135	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1136	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1137	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1138	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1140	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1142	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1143	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1144	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1147	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1149	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1150	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1151	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1152	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1153	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1154	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1155	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1159	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
R1160	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1161	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1162	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1163	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R1164	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	(K5900P)
R1164	1-216-837-11	METAL CHIP	22K	5%	1/10W	(K9900P)
R1167	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1168	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1176	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1177	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1178	1-216-833-11	METAL CHIP	10K	5%	1/10W	

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
R1179	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1461	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V	
R1180	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1463	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1186	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1464	1-216-864-11	SHORT CHIP	0			
R1187	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1466	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1189	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1470	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	
R1190	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1471	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V	
R1194	1-216-864-11	SHORT CHIP	0				R1472	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V	
R1201	1-216-837-11	METAL CHIP	22K	5%	1/10W		R1473	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	
R1251	1-216-840-11	METAL CHIP	39K	5%	1/10W		R1474	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1252	1-216-840-11	METAL CHIP	39K	5%	1/10W		R1475	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V	
R1260	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1476	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1261	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1483	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1301	1-216-830-11	METAL CHIP	5.6K	5%	1/10W		R1484	1-216-864-11	SHORT CHIP	0			
R1302	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R1486	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1303	1-216-839-11	METAL CHIP	33K	5%	1/10W		R1490	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1304	1-216-809-11	METAL CHIP	100	5%	1/10W		R1491	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1305	1-216-819-11	METAL CHIP	680	5%	1/10W		R1492	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1306	1-216-801-11	METAL CHIP	22	5%	1/10W		R1493	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1307	1-216-809-11	METAL CHIP	100	5%	1/10W		R1494	1-216-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1308	1-216-809-11	METAL CHIP	100	5%	1/10W		R1495	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	
R1309	1-216-809-11	METAL CHIP	100	5%	1/10W		R1501	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1310	1-216-857-11	METAL CHIP	1M	5%	1/10W		R1502	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1311	1-216-809-11	METAL CHIP	100	5%	1/10W		R1503	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1312	1-216-809-11	METAL CHIP	100	5%	1/10W		R1504	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1313	1-216-809-11	METAL CHIP	100	5%	1/10W		R1505	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1314	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1506	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1315	1-216-809-11	METAL CHIP	100	5%	1/10W		R1507	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1316	1-216-809-11	METAL CHIP	100	5%	1/10W		R1508	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1318	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1509	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1351	1-216-809-11	METAL CHIP	100	5%	1/10W		R1510	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1354	1-216-809-11	METAL CHIP	100	5%	1/10W		R1511	1-216-809-11	METAL CHIP	100	5%	1/10W	
R1355	1-218-285-11	METAL CHIP	75	5%	1/10W		R1512	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R1356	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1513	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1357	1-216-837-11	METAL CHIP	22K	5%	1/10W		R1514	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R1358	1-216-854-11	METAL CHIP	560K	5%	1/10W		R1515	1-216-857-11	METAL CHIP	1M	5%	1/10W	
R1359	1-216-809-11	METAL CHIP	100	5%	1/10W		R1517	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1360	1-216-809-11	METAL CHIP	100	5%	1/10W		R1518	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1362	1-216-809-11	METAL CHIP	100	5%	1/10W		R1519	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1401	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1520	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1402	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		R1521	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1403	1-216-833-11	METAL CHIP	10K	5%	1/10W		R1522	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1407	1-216-809-11	METAL CHIP	100	5%	1/10W		R1523	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1414	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R1524	1-216-864-11	SHORT CHIP	0			
R1416	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1525	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1420	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V		R1526	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1421	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R1527	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1424	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R1528	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1425	1-216-864-11	SHORT CHIP	0				R1532	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1426	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1533	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1434	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R1534	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1435	1-216-864-11	SHORT CHIP	0				R1535	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1436	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1536	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1444	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R1537	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1445	1-216-864-11	SHORT CHIP	0				R1538	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1446	1-216-821-11	METAL CHIP	1K	5%	1/10W		R1539	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1454	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R1540	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1455	1-216-864-11	SHORT CHIP	0				R1541	1-216-813-11	METAL CHIP	220	5%	1/10W	
R1460	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V		R1542	1-216-813-11	METAL CHIP	220	5%	1/10W	

STR-K5900P/K9900P

DIGITAL

DISPLAY

Ref. No.	Part No.	Description			Remark
R1543	1-216-813-11	METAL CHIP	220	5%	1/10W
R1544	1-216-813-11	METAL CHIP	220	5%	1/10W
R1545	1-216-813-11	METAL CHIP	220	5%	1/10W
R1546	1-216-813-11	METAL CHIP	220	5%	1/10W
R1547	1-216-813-11	METAL CHIP	220	5%	1/10W
R1548	1-216-813-11	METAL CHIP	220	5%	1/10W
R1549	1-216-813-11	METAL CHIP	220	5%	1/10W
R1550	1-216-813-11	METAL CHIP	220	5%	1/10W
R1551	1-216-813-11	METAL CHIP	220	5%	1/10W
R1552	1-216-813-11	METAL CHIP	220	5%	1/10W
R1553	1-216-813-11	METAL CHIP	220	5%	1/10W
R1554	1-216-813-11	METAL CHIP	220	5%	1/10W
R1555	1-216-813-11	METAL CHIP	220	5%	1/10W
R1556	1-216-809-11	METAL CHIP	100	5%	1/10W
R1570	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1571	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1572	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1573	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1574	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1635	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1636	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
< VIBRATOR >					
X1101	1-813-448-21	OSCILLATOR, PIEZOELECTRIC (24MHz)			
X1301	1-795-126-21	VIBRATOR, CRYSTAL (12.288MHz)			
X1502	1-813-276-21	QUARTZ, CRYSTAL (13.9MHz)			

A-1084-338-A		DISPLAY BOARD, COMPLETE			

< CAPACITOR >					
C100	1-127-888-11	CERAMIC	0.1uF	10%	50V
C101	1-127-888-11	CERAMIC	0.1uF	10%	50V
C104	1-113-342-11	CERAMIC	0.1uF		50V
C105	1-126-795-11	ELECT	10uF	20%	50V
C108	1-127-888-11	CERAMIC	0.1uF	10%	50V
C109	1-127-888-11	CERAMIC	0.1uF	10%	50V
C110	1-162-286-31	CERAMIC	220PF	10%	50V
C111	1-162-286-31	CERAMIC	220PF	10%	50V
C112	1-162-286-31	CERAMIC	220PF	10%	50V
C114	1-127-888-11	CERAMIC	0.1uF	10%	50V
C115	1-126-795-11	ELECT	10uF	20%	50V
C132	1-162-286-31	CERAMIC	220PF	10%	50V
C133	1-162-286-31	CERAMIC	220PF	10%	50V
C134	1-162-286-31	CERAMIC	220PF	10%	50V
C135	1-162-286-31	CERAMIC	220PF	10%	50V
C136	1-162-286-31	CERAMIC	220PF	10%	50V
C137	1-162-286-31	CERAMIC	220PF	10%	50V
C138	1-162-286-31	CERAMIC	220PF	10%	50V
C139	1-162-286-31	CERAMIC	220PF	10%	50V
C140	1-162-286-31	CERAMIC	220PF	10%	50V
C141	1-162-286-31	CERAMIC	220PF	10%	50V
C142	1-162-286-31	CERAMIC	220PF	10%	50V
C143	1-162-286-31	CERAMIC	220PF	10%	50V
C144	1-127-888-11	CERAMIC	0.1uF	10%	50V
C150	1-127-888-11	CERAMIC	0.1uF	10%	50V
C151	1-126-795-11	ELECT	10uF	20%	50V

Ref. No.	Part No.	Description	Remark		
C152	1-162-286-31	CERAMIC	220PF	10%	50V
C153	1-162-286-31	CERAMIC	220PF	10%	50V
C154	1-162-286-31	CERAMIC	220PF	10%	50V
C155	1-127-888-11	CERAMIC	0.1uF	10%	50V
C156	1-127-888-11	CERAMIC	0.1uF	10%	50V
C157	1-127-888-11	CERAMIC	0.1uF	10%	50V
< CONNECTOR >					
CNS100	1-568-838-11	CONNECTOR, FFC 21P			
< DIODE >					
D101	8-719-061-96	LED SLR-325DCT31 (2CH)			
D102	8-719-061-96	LED SLR-325DCT31 (MUSIC)			
D103	8-719-061-96	LED SLR-325DCT31 (MOVIE)			
D104	8-719-061-96	LED SLR-325DCT31 (A.F.D.)			
D105	6-500-647-01	LED SEL5E20C-STP15	(MULTI CHANNEL DECODING)		
< VACUUM FLUORESCENT DISPLAY >					
FL101	1-518-966-11	VACUUM FLUORESCENT DISPLAY			
< IC >					
IC100	8-759-643-83	IC uPD16315GB-3BS			
IC101	8-759-036-90	IC MC74ACT08N			
IC102	6-600-349-31	IC NJL24H400A (IR)			
< TRANSISTOR >					
Q110	8-729-119-78	TRANSISTOR 2SC2785-HFE			
< RESISTOR >					
R101	1-249-409-11	CARBON	220	5%	1/4W
R102	1-249-411-11	CARBON	330	5%	1/4W
R103	1-249-413-11	CARBON	470	5%	1/4W
R104	1-249-415-11	CARBON	680	5%	1/4W
R105	1-247-831-00	CARBON	1K	5%	1/4W
R106	1-249-419-11	CARBON	1.5K	5%	1/4W
R107	1-249-421-11	CARBON	2.2K	5%	1/4W
R108	1-247-847-00	CARBON	4.7K	5%	1/4W
R109	1-249-429-11	CARBON	10K	5%	1/4W
R110	1-249-435-11	CARBON	33K	5%	1/4W
R111	1-249-421-11	CARBON	2.2K	5%	1/4W
R121	1-249-409-11	CARBON	220	5%	1/4W
R122	1-249-411-11	CARBON	330	5%	1/4W
R123	1-249-413-11	CARBON	470	5%	1/4W
R124	1-249-415-11	CARBON	680	5%	1/4W
R125	1-247-831-00	CARBON	1K	5%	1/4W
R128	1-249-419-11	CARBON	1.5K	5%	1/4W
R142	1-249-409-11	CARBON	220	5%	1/4W
R143	1-249-411-11	CARBON	330	5%	1/4W
R144	1-249-413-11	CARBON	470	5%	1/4W
R148	1-249-415-11	CARBON	680	5%	1/4W
R154	1-249-393-11	CARBON	10	5%	1/4W F
R155	1-247-807-31	CARBON	100	5%	1/4W
R160	1-249-409-11	CARBON	220	5%	1/4W
R161	1-247-804-11	CARBON	75	5%	1/4W
R162	1-249-429-11	CARBON	10K	5%	1/4W
R171	1-249-440-11	CARBON	82K	5%	1/4W

DISPLAY

HEADPHONE

MAIN

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark										
R172	1-247-807-31	CARBON	100	5%	1/4W		C409	1-126-963-11	ELECT	4.7uF	20%	50V											
R173	1-247-807-31	CARBON	100	5%	1/4W		C444	1-127-868-11	CERAMIC	0.0022uF	10%	50V											
R174	1-247-807-31	CARBON	100	5%	1/4W		C445	1-128-825-11	CERAMIC	0.0022uF	5%	50V											
R175	1-249-393-11	CARBON	10	5%	1/4W	F							(K9900P)										
R198	1-249-381-11	CARBON	1	5%	1/4W	F	C458	1-126-963-11	ELECT	4.7uF	20%	50V											
							C459	1-126-963-11	ELECT	4.7uF	20%	50V											
R199	1-249-381-11	CARBON	1	5%	1/4W	F																	
		< ROTARY ENCODER >																					
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE)																					
		(MASTER VOLUME)																					
		< SWITCH >																					
S100	1-771-410-21	SWITCH, TACTILE (>)																					
S101	1-771-410-21	SWITCH, TACTILE (INPUT MODE)																					
S102	1-771-410-21	SWITCH, TACTILE (DVD)																					
S103	1-771-410-21	SWITCH, TACTILE (MD/TAPE)																					
S104	1-771-410-21	SWITCH, TACTILE (SA-CD/CD)																					
S105	1-771-410-21	SWITCH, TACTILE (FM)																					
S106	1-771-410-21	SWITCH, TACTILE (MAIN MENU)																					
S107	1-771-410-21	SWITCH, TACTILE (ENTER)																					
S108	1-771-410-21	SWITCH, TACTILE (<)																					
S109	1-771-410-21	SWITCH, TACTILE (+)																					
S110	1-771-410-21	SWITCH, TACTILE (AM)																					
S120	1-771-410-21	SWITCH, TACTILE (SURR BACK DECODING)																					
S121	1-771-410-21	SWITCH, TACTILE (MUSIC)																					
S122	1-771-410-21	SWITCH, TACTILE (MOVIE)																					
S123	1-771-410-21	SWITCH, TACTILE (A.F.D.)																					
S124	1-771-410-21	SWITCH, TACTILE (2CH)																					
S125	1-771-410-21	SWITCH, TACTILE (MULTI CH IN)																					
S140	1-771-410-21	SWITCH, TACTILE (-)																					
S141	1-771-410-21	SWITCH, TACTILE (VIDEO 3)																					
S142	1-771-410-21	SWITCH, TACTILE (VIDEO 2)																					
S143	1-771-410-21	SWITCH, TACTILE (VIDEO 1)																					

HEADPHONE BOARD																							

< CAPACITOR >																							
C790	1-127-888-11	CERAMIC	0.1uF	10%	50V		C503	1-104-658-11	ELECT	100uF	20%	10V											
		< CONNECTOR >																					
CNP791	1-691-766-11	PLUG (MICRO CONNECTOR) 4P																					
		< JACK >																					
J791	1-815-314-21	JACK (PHONES)																					

	A-1088-011-A	MAIN BOARD, COMPLETE (K9900P)																					
	A-1090-297-A	MAIN BOARD, COMPLETE (K5900P)																					

	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3																					
		< CAPACITOR >																					
C400	1-127-888-11	CERAMIC	0.1uF	10%	50V		C601	1-126-963-11	ELECT	4.7uF	20%	50V											
C403	1-127-888-11	CERAMIC	0.1uF	10%	50V		C603	1-104-658-11	ELECT	100uF	20%	10V											
C408	1-126-963-11	ELECT	4.7uF	20%	50V		C604	1-107-583-11	CERAMIC	3PF	0.25PF	500V											
							C605	1-102-233-00	CERAMIC	33PF	10%	500V											
							C606	1-162-282-31	CERAMIC	100PF	10%	50V											
							C607	1-162-282-31	CERAMIC	100PF	10%	50V											
							C610	1-126-947-11	ELECT	47uF	20%	35V											
							C611	1-136-157-00	FILM	0.022uF	5%	50V											
							C619	1-162-286-31	CERAMIC	220PF	10%	50V											
							C620	1-162-815-11	CERAMIC	47PF	5%	500V											
							C621	1-162-815-11	CERAMIC	47PF	5%	500V											
							C640	1-126-964-11	ELECT	10uF	20%	50V											

STR-K5900P/K9900P

MAIN

Ref. No.	Part No.	Description	Remark		
C642	1-127-876-11	CERAMIC	0.01uF	10%	50V
C651	1-126-963-11	ELECT	4.7uF	20%	50V
C653	1-104-658-11	ELECT	100uF	20%	10V
C654	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C655	1-102-233-00	CERAMIC	33PF	10%	500V
C656	1-162-282-31	CERAMIC	100PF	10%	50V
C657	1-162-282-31	CERAMIC	100PF	10%	50V
C660	1-126-947-11	ELECT	47uF	20%	35V
C661	1-136-157-00	FILM	0.022uF	5%	50V
C666	1-162-815-11	CERAMIC	47PF	5%	500V
C669	1-162-815-11	CERAMIC	47PF	5%	500V
C670	1-162-286-31	CERAMIC	220PF	10%	50V
C680	1-126-964-11	ELECT	10uF	20%	50V
C681	1-127-876-11	CERAMIC	0.01uF	10%	50V
C691	1-127-888-11	CERAMIC	0.1uF	10%	50V
C701	1-126-963-11	ELECT	4.7uF	20%	50V
C702	1-126-964-11	ELECT	10uF	20%	50V
C703	1-104-658-11	ELECT	100uF	20%	10V
C704	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C705	1-102-233-00	CERAMIC	33PF	10%	500V
C706	1-162-282-31	CERAMIC	100PF	10%	50V
C707	1-162-282-31	CERAMIC	100PF	10%	50V
C710	1-126-947-11	ELECT	47uF	20%	35V
C711	1-136-157-00	FILM	0.022uF	5%	50V
C716	1-162-815-11	CERAMIC	47PF	5%	500V
C717	1-162-815-11	CERAMIC	47PF	5%	500V
C720	1-162-286-31	CERAMIC	220PF	10%	50V
C721	1-126-923-11	ELECT	220uF	20%	10V
C722	1-126-964-11	ELECT	10uF	20%	50V
C732	1-128-582-11	ELECT	10uF	20%	100V
C733	1-128-582-11	ELECT	10uF	20%	100V
C740	1-126-964-11	ELECT	10uF	20%	50V
C741	1-128-579-11	ELECT	2.2uF	20%	100V
C742	1-127-876-11	CERAMIC	0.01uF	10%	50V
C743	1-128-579-11	ELECT	2.2uF	20%	100V
C744	1-128-579-11	ELECT	2.2uF	20%	100V
C750	1-126-964-11	ELECT	10uF	20%	50V
C751	1-126-963-11	ELECT	4.7uF	20%	50V
C752	1-127-876-11	CERAMIC	0.01uF	10%	50V
C753	1-104-658-11	ELECT	100uF	20%	10V
C754	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C755	1-102-233-00	CERAMIC	33PF	10%	500V
C756	1-162-282-31	CERAMIC	100PF	10%	50V
C757	1-162-282-31	CERAMIC	100PF	10%	50V
C760	1-126-947-11	ELECT	47uF	20%	35V
C761	1-136-157-00	FILM	0.022uF	5%	50V
C762	1-126-964-11	ELECT	10uF	20%	50V
C766	1-162-815-11	CERAMIC	47PF	5%	500V
C767	1-162-815-11	CERAMIC	47PF	5%	500V
C770	1-162-286-31	CERAMIC	220PF	10%	50V
C791	1-126-923-11	ELECT	220uF	20%	10V
C801	1-126-947-11	ELECT	47uF	20%	35V
C802	1-126-947-11	ELECT	47uF	20%	35V
C803	1-165-946-11	ELECT	6800uF	20%	71V
C804	1-165-946-11	ELECT	6800uF	20%	71V
C805	1-135-851-21	MYLAR	0.22uF		100V
C806	1-135-851-21	MYLAR	0.22uF		100V
C807	1-126-947-11	ELECT	47uF	20%	35V

Ref. No.	Part No.	Description	Remark		
C808	1-126-947-11	ELECT	47uF	20%	35V
C809	1-127-888-11	CERAMIC	0.1uF	10%	50V
C810	1-127-888-11	CERAMIC	0.1uF	10%	50V
C811	1-127-888-11	CERAMIC	0.1uF	10%	50V
C822	1-126-947-11	ELECT	47uF	20%	35V
C830	1-127-888-11	CERAMIC	0.1uF	10%	50V
C831	1-127-888-11	CERAMIC	0.1uF	10%	50V
C832	1-126-936-11	ELECT	3300uF	20%	16V
< CONNECTOR >					
CNP500	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P			
CNP501	1-573-847-11	CONNECTOR, BOARD TO BOARD 15P			
CNP503	1-779-978-11	PIN, CONNECTOR 3P			
CNP802	1-691-767-11	PLUG (MICRO CONNECTOR) 5P			
CNP806	1-784-921-11	PIN, CONNECTOR 4P			
* CNP908	1-564-104-00	PIN, CONNECTOR (3.96mm PITCH) 3P			(K5900P)
* CNP908	1-564-242-00	PIN, CONNECTOR (3.96mm PITCH) 5P			(K9900P)
CNP911	1-784-926-11	PIN, CONNECTOR 11P			
CNP912	1-691-766-11	PLUG (MICRO CONNECTOR) 4P			
< DIODE >					
D505	8-719-991-33	DIODE 1SS133T-77			
D540	8-719-991-33	DIODE 1SS133T-77			
D560	8-719-991-33	DIODE 1SS133T-77			
D580	8-719-991-33	DIODE 1SS133T-77			
D585	8-719-991-33	DIODE 1SS133T-77			
D605	8-719-991-33	DIODE 1SS133T-77			
D610	8-719-991-33	DIODE 1SS133T-77			
D640	8-719-991-33	DIODE 1SS133T-77			
D665	8-719-991-33	DIODE 1SS133T-77			
D680	8-719-991-33	DIODE 1SS133T-77			
D690	8-719-934-21	DIODE HZS30-1L			
D691	8-719-991-33	DIODE 1SS133T-77			
D705	8-719-991-33	DIODE 1SS133T-77			
D710	8-719-991-33	DIODE 1SS133T-77			
D721	8-719-991-33	DIODE 1SS133T-77			
D722	8-719-991-33	DIODE 1SS133T-77			
D732	8-719-991-33	DIODE 1SS133T-77			
D740	8-719-991-33	DIODE 1SS133T-77			
D750	8-719-991-33	DIODE 1SS133T-77			
D765	8-719-991-33	DIODE 1SS133T-77			
D791	8-719-991-33	DIODE 1SS133T-77			
D801	8-719-933-95	DIODE HZS20-1L			
D802	8-719-072-05	DIODE RBV-602LF-A			
D804	8-719-068-28	DIODE HZ6.8BP-TK			
D805	6-500-522-11	DIODE 10EDB40-TA2B5			
D806	6-500-522-11	DIODE 10EDB40-TA2B5			
D807	6-500-522-11	DIODE 10EDB40-TA2B5			
D808	6-500-522-11	DIODE 10EDB40-TA2B5			
D818	8-719-991-33	DIODE 1SS133T-77 (K9900P)			
D896	8-719-043-76	DIODE AK04V0			
< IC >					
IC401	6-707-362-01	IC BD3451KS			
IC402	8-759-167-88	IC NJM4565D			
IC501	6-700-943-01	IC uPC2581V-S			
IC601	6-700-943-01	IC uPC2581V-S			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
IC691	8-759-167-88	IC NJM4565D		Q751	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC701	6-700-943-01	IC uPC2581V-S		Q752	8-729-141-30	TRANSISTOR 2SC3623A-LK	
IC801	8-759-071-48	IC TA7807S		Q755	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
IC802	8-759-071-47	IC TA79007S		Q756	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
		< JACK >		Q790	8-729-119-78	TRANSISTOR 2SC2785-HFE	
J309	1-770-377-21	JACK, PIN 1P (SUB WOOFER AUDIO OUT)	(K5900P)	Q793	8-729-119-78	TRANSISTOR 2SC2785-HFE	
J309	1-793-777-12	JACK, PIN 2P (AUDIO OUT,SUB WOOFER)	(K9900P)	Q795	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
J401	1-793-775-12	JACK, PIN 6P (MULTI CH IN FRONT,SURROUND,CENTER,SUB WOOFER)	(K9900P)	Q801	8-729-140-97	TRANSISTOR 2SB734-34	
		< COIL >		Q809	8-729-119-78	TRANSISTOR 2SC2785-HFE (K9900P)	
J402	1-770-614-11	JACK, PIN 4P (MD/TAPE OUT,SA-CD/CD IN)				< RESISTOR >	
J403	1-770-614-11	JACK, PIN 4P (MD/TAPE IN,DVD AUDIO IN)		R402	1-247-831-00	CARBON 1K 5% 1/4W	
J404	1-774-411-11	JACK, PIN 6P (VIDEO 2 AUDIO IN, VIDEO 1 AUDIO OUT/IN)		R404	1-247-831-00	CARBON 1K 5% 1/4W	
		< TRANSISTOR >		R405	1-247-831-00	CARBON 1K 5% 1/4W	
L601	1-420-872-52	COIL, AIR-CORE		R406	1-247-831-00	CARBON 1K 5% 1/4W	
L651	1-420-872-52	COIL, AIR-CORE		R407	1-247-831-00	CARBON 1K 5% 1/4W	
L701	1-420-872-52	COIL, AIR-CORE		R408	1-247-831-00	CARBON 1K 5% 1/4W	
L751	1-420-872-52	COIL, AIR-CORE		R409	1-247-831-00	CARBON 1K 5% 1/4W	
		< TRANSISTOR >		R428	1-247-831-00	CARBON 1K 5% 1/4W	
Q501	8-729-119-76	TRANSISTOR 2SA1175-HFE		R429	1-247-831-00	CARBON 1K 5% 1/4W	
Q502	8-729-141-30	TRANSISTOR 2SC3623A-LK		R431	1-247-831-00	CARBON 1K 5% 1/4W	(K9900P)
Q505	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R432	1-247-831-00	CARBON 1K 5% 1/4W	(K9900P)
Q506	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R433	1-247-831-00	CARBON 1K 5% 1/4W	(K9900P)
Q535	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R434	1-247-831-00	CARBON 1K 5% 1/4W	(K9900P)
Q536	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R435	1-247-831-00	CARBON 1K 5% 1/4W	(K9900P)
Q540	8-729-281-53	TRANSISTOR 2SC1815-GR		R436	1-247-831-00	CARBON 1K 5% 1/4W	(K9900P)
Q560	8-729-119-78	TRANSISTOR 2SC2785-HFE		R452	1-247-831-00	CARBON 1K 5% 1/4W	
Q571	8-729-119-76	TRANSISTOR 2SA1175-HFE		R454	1-247-831-00	CARBON 1K 5% 1/4W	
Q572	8-729-141-30	TRANSISTOR 2SC3623A-LK		R455	1-247-831-00	CARBON 1K 5% 1/4W	
Q580	8-729-281-53	TRANSISTOR 2SC1815-GR		R456	1-247-831-00	CARBON 1K 5% 1/4W	
Q601	8-729-119-76	TRANSISTOR 2SA1175-HFE		R457	1-247-831-00	CARBON 1K 5% 1/4W	
Q602	8-729-141-30	TRANSISTOR 2SC3623A-LK		R458	1-247-831-00	CARBON 1K 5% 1/4W	
Q605	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R459	1-247-831-00	CARBON 1K 5% 1/4W	
Q606	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R468	1-247-879-00	CARBON 100K 5% 1/4W	
Q610	8-729-119-78	TRANSISTOR 2SC2785-HFE		R469	1-247-831-00	CARBON 1K 5% 1/4W	
Q640	8-729-281-53	TRANSISTOR 2SC1815-GR		R470	1-247-871-00	CARBON 47K 5% 1/4W	
Q651	8-729-119-76	TRANSISTOR 2SA1175-HFE		R473	1-249-429-11	CARBON 10K 5% 1/4W	
Q652	8-729-141-30	TRANSISTOR 2SC3623A-LK		R474	1-249-429-11	CARBON 10K 5% 1/4W	
Q655	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R475	1-249-429-11	CARBON 10K 5% 1/4W	
Q656	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R476	1-249-429-11	CARBON 10K 5% 1/4W	
Q680	8-729-281-53	TRANSISTOR 2SC1815-GR		R480	1-247-871-00	CARBON 47K 5% 1/4W	
Q691	8-729-281-53	TRANSISTOR 2SC1815-GR		R499	1-247-871-00	CARBON 47K 5% 1/4W	
Q692	8-729-029-40	TRANSISTOR DTA124ESA		R501	1-247-831-00	CARBON 1K 5% 1/4W	
Q701	8-729-119-76	TRANSISTOR 2SA1175-HFE		R502	1-249-439-11	CARBON 68K 5% 1/4W	
Q702	8-729-141-30	TRANSISTOR 2SC3623A-LK		R503	1-249-421-11	CARBON 2.2K 5% 1/4W	
Q705	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R505	1-249-439-11	CARBON 68K 5% 1/4W	
Q706	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R510	1-249-421-11	CARBON 2.2K 5% 1/4W	
Q710	8-729-119-78	TRANSISTOR 2SC2785-HFE		R511	1-249-440-11	CARBON 82K 5% 1/4W	
Q722	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA		R513	1-249-414-11	CARBON 560 5% 1/4W	
Q723	8-729-119-78	TRANSISTOR 2SC2785-HFE		R514	1-249-399-11	CARBON 33 5% 1/4W	F
Q725	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP		R515	1-249-399-11	CARBON 33 5% 1/4W	F
Q740	8-729-281-53	TRANSISTOR 2SC1815-GR		R516	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W	
Q750	8-729-281-53	TRANSISTOR 2SC1815-GR		R517	1-249-393-11	CARBON 10 5% 1/4W	F

STR-K5900P/K9900P

MAIN

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
R520	1-247-847-00	CARBON	4.7K	5%	1/4W		R651	1-247-831-00	CARBON	1K	5%	1/4W	
R521	1-240-855-81	CARBON	6.2K	5%	1/4W	F	R652	1-249-439-11	CARBON	68K	5%	1/4W	
R522	1-249-419-11	CARBON	1.5K	5%	1/4W		R653	1-249-421-11	CARBON	2.2K	5%	1/4W	
R523	1-247-871-00	CARBON	47K	5%	1/4W		R654	1-249-439-11	CARBON	68K	5%	1/4W	
R524	1-249-431-11	CARBON	15K	5%	1/4W		R655	1-247-847-00	CARBON	4.7K	5%	1/4W	
R525	1-249-439-11	CARBON	68K	5%	1/4W		R656	1-247-871-00	CARBON	47K	5%	1/4W	
R526	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W					R657	1-249-431-11	CARBON	15K	5%	1/4W	
R530	1-247-847-00	CARBON	4.7K	5%	1/4W		R660	1-249-421-11	CARBON	2.2K	5%	1/4W	
R531	1-240-855-81	CARBON	6.2K	5%	1/4W	F	R661	1-249-440-11	CARBON	82K	5%	1/4W	
R532	1-249-429-11	CARBON	10K	5%	1/4W		R663	1-249-414-11	CARBON	560	5%	1/4W	
R533	1-247-871-00	CARBON	47K	5%	1/4W		R664	1-249-399-11	CARBON	33	5%	1/4W	F
R534	1-249-431-11	CARBON	15K	5%	1/4W		R665	1-249-399-11	CARBON	33	5%	1/4W	F
R535	1-249-439-11	CARBON	68K	5%	1/4W		R666	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W				
R537	1-249-393-11	CARBON	10	5%	1/4W	F	R667	1-249-393-11	CARBON	10	5%	1/4W	F
R540	1-247-863-00	CARBON	22K	5%	1/4W		R668	1-249-389-11	CARBON	4.7	5%	1/4W	F
R546	1-249-431-11	CARBON	15K	5%	1/4W		R669	1-247-847-00	CARBON	4.7K	5%	1/4W	
R553	1-249-421-11	CARBON	2.2K	5%	1/4W		R671	1-240-855-81	CARBON	6.2K	5%	1/4W	F
R554	1-249-439-11	CARBON	68K	5%	1/4W		R672	1-249-419-11	CARBON	1.5K	5%	1/4W	
R555	1-247-847-00	CARBON	4.7K	5%	1/4W		R673	1-247-871-00	CARBON	47K	5%	1/4W	
R556	1-247-871-00	CARBON	47K	5%	1/4W		R674	1-249-431-11	CARBON	15K	5%	1/4W	
R557	1-249-431-11	CARBON	15K	5%	1/4W		R675	1-247-847-00	CARBON	4.7K	5%	1/4W	
R561	1-247-831-00	CARBON	1K	5%	1/4W		R676	1-247-871-00	CARBON	47K	5%	1/4W	
R562	1-249-439-11	CARBON	68K	5%	1/4W		R677	1-249-431-11	CARBON	15K	5%	1/4W	
R570	1-249-421-11	CARBON	2.2K	5%	1/4W		R680	1-247-863-00	CARBON	22K	5%	1/4W	
R571	1-249-440-11	CARBON	82K	5%	1/4W		R681	1-249-431-11	CARBON	15K	5%	1/4W	
R572	1-249-419-11	CARBON	1.5K	5%	1/4W		R690	1-247-887-00	CARBON	220K	5%	1/4W	
R573	1-247-871-00	CARBON	47K	5%	1/4W		△ R691	1-215-888-00	METAL OXIDE	220	5%	2W	F
R574	1-249-399-11	CARBON	33	5%	1/4W	F	△ R692	1-215-888-00	METAL OXIDE	220	5%	2W	F
R575	1-249-399-11	CARBON	33	5%	1/4W	F	R693	1-249-429-11	CARBON	10K	5%	1/4W	
R576	1-249-414-11	CARBON	560	5%	1/4W		R694	1-249-429-11	CARBON	10K	5%	1/4W	
R580	1-247-863-00	CARBON	22K	5%	1/4W		R695	1-249-429-11	CARBON	10K	5%	1/4W	
R585	1-247-847-00	CARBON	4.7K	5%	1/4W		R696	1-247-871-00	CARBON	47K	5%	1/4W	
R586	1-247-871-00	CARBON	47K	5%	1/4W		R698	1-249-429-11	CARBON	10K	5%	1/4W	
R587	1-249-431-11	CARBON	15K	5%	1/4W		R699	1-247-895-00	CARBON	470K	5%	1/4W	
R588	1-249-431-11	CARBON	15K	5%	1/4W		R701	1-247-831-00	CARBON	1K	5%	1/4W	
R601	1-247-831-00	CARBON	1K	5%	1/4W		R702	1-249-439-11	CARBON	68K	5%	1/4W	
R602	1-249-439-11	CARBON	68K	5%	1/4W		R703	1-249-421-11	CARBON	2.2K	5%	1/4W	
R603	1-249-421-11	CARBON	2.2K	5%	1/4W		R704	1-249-439-11	CARBON	68K	5%	1/4W	
R604	1-249-439-11	CARBON	68K	5%	1/4W		R710	1-249-421-11	CARBON	2.2K	5%	1/4W	
R610	1-249-421-11	CARBON	2.2K	5%	1/4W		R711	1-249-440-11	CARBON	82K	5%	1/4W	
R611	1-249-440-11	CARBON	82K	5%	1/4W		R713	1-249-414-11	CARBON	560	5%	1/4W	
R613	1-249-414-11	CARBON	560	5%	1/4W		R714	1-249-399-11	CARBON	33	5%	1/4W	F
R614	1-249-399-11	CARBON	33	5%	1/4W	F	R715	1-249-399-11	CARBON	33	5%	1/4W	F
R615	1-249-399-11	CARBON	33	5%	1/4W	F	R716	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W				
R616	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W					R717	1-249-393-11	CARBON	10	5%	1/4W	F
R617	1-249-393-11	CARBON	10	5%	1/4W	F	R718	1-249-389-11	CARBON	4.7	5%	1/4W	F
R618	1-249-389-11	CARBON	4.7	5%	1/4W	F	R719	1-247-847-00	CARBON	4.7K	5%	1/4W	
R620	1-247-847-00	CARBON	4.7K	5%	1/4W		R721	1-240-855-81	CARBON	6.2K	5%	1/4W	F
R621	1-240-855-81	CARBON	6.2K	5%	1/4W	F	R722	1-249-419-11	CARBON	1.5K	5%	1/4W	
R622	1-249-419-11	CARBON	1.5K	5%	1/4W		R723	1-247-871-00	CARBON	47K	5%	1/4W	
R623	1-247-871-00	CARBON	47K	5%	1/4W		R724	1-249-431-11	CARBON	15K	5%	1/4W	
R624	1-249-431-11	CARBON	15K	5%	1/4W		R725	1-249-439-11	CARBON	68K	5%	1/4W	
R625	1-249-439-11	CARBON	68K	5%	1/4W		R731	1-249-421-11	CARBON	2.2K	5%	1/4W	
R631	1-249-421-11	CARBON	2.2K	5%	1/4W		R732	1-249-381-11	CARBON	1	5%	1/4W	F
R634	1-249-404-00	CARBON	82	5%	1/4W	F	R733	1-249-381-11	CARBON	1	5%	1/4W	F
R638	1-249-439-11	CARBON	68K	5%	1/4W		R734	1-249-404-00	CARBON	82	5%	1/4W	F
R640	1-247-863-00	CARBON	22K	5%	1/4W		R735	1-249-427-11	CARBON	6.8K	5%	1/4W	
R648	1-249-431-11	CARBON	15K	5%	1/4W		R736	1-247-831-00	CARBON	1K	5%	1/4W	

MAIN

POWER

SPEAKER C/SB

SPEAKER B (P)

Ref. No.	Part No.	Description			Remark
R737	1-249-436-11	CARBON	39K	5%	1/4W
R740	1-247-863-00	CARBON	22K	5%	1/4W
R741	1-249-431-11	CARBON	15K	5%	1/4W
R743	1-249-431-11	CARBON	15K	5%	1/4W
R744	1-249-431-11	CARBON	15K	5%	1/4W
R745	1-247-847-00	CARBON	4.7K	5%	1/4W
R746	1-247-871-00	CARBON	47K	5%	1/4W
R747	1-249-431-11	CARBON	15K	5%	1/4W
R748	1-249-431-11	CARBON	15K	5%	1/4W
R750	1-247-863-00	CARBON	22K	5%	1/4W
R751	1-247-831-00	CARBON	1K	5%	1/4W
R752	1-249-439-11	CARBON	68K	5%	1/4W
R753	1-249-421-11	CARBON	2.2K	5%	1/4W
R754	1-249-439-11	CARBON	68K	5%	1/4W
R755	1-247-847-00	CARBON	4.7K	5%	1/4W
R756	1-247-871-00	CARBON	47K	5%	1/4W
R757	1-249-431-11	CARBON	15K	5%	1/4W
R758	1-249-431-11	CARBON	15K	5%	1/4W
R760	1-249-421-11	CARBON	2.2K	5%	1/4W
R761	1-249-440-11	CARBON	82K	5%	1/4W
R763	1-249-414-11	CARBON	560	5%	1/4W
R764	1-249-399-11	CARBON	33	5%	1/4W F
R765	1-249-399-11	CARBON	33	5%	1/4W F
R766	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R767	1-249-393-11	CARBON	10	5%	1/4W F
R768	1-249-389-11	CARBON	4.7	5%	1/4W F
R769	1-247-847-00	CARBON	4.7K	5%	1/4W
R771	1-240-855-81	CARBON	6.2K	5%	1/4W F
R772	1-249-419-11	CARBON	1.5K	5%	1/4W
R773	1-247-871-00	CARBON	47K	5%	1/4W
R775	1-249-439-11	CARBON	68K	5%	1/4W
R778	1-249-431-11	CARBON	15K	5%	1/4W
R780	1-249-429-11	CARBON	10K	5%	1/4W
R791	1-249-421-11	CARBON	2.2K	5%	1/4W
△ R792	1-215-868-00	METAL OXIDE	680	5%	1W F
R793	1-249-404-00	CARBON	82	5%	1/4W F
△ R794	1-215-868-00	METAL OXIDE	680	5%	1W F
R802	1-249-409-11	CARBON	220	5%	1/4W F
R803	1-249-389-11	CARBON	4.7	5%	1/4W F
R804	1-249-429-11	CARBON	10K	5%	1/4W
R806	1-247-863-00	CARBON	22K	5%	1/4W
R824	1-249-421-11	CARBON	2.2K	5%	1/4W (K9900P)
R831	1-249-404-00	CARBON	82	5%	1/4W F (K9900P)
△ R910	1-240-877-11	FUSIBLE	0.15	5%	1/2W F
< RELAY >					
RY560	1-755-267-11	RELAY			
RY601	1-755-170-11	RELAY (12V)			
RY701	1-755-170-11	RELAY (12V)			
RY791	1-755-170-11	RELAY (12V)			
RY801	1-755-013-11	RELAY (K9900P)			
< TERMINAL BOARD >					
TM601	1-780-216-11	TERMINAL BOARD (8P) (SPEAKERS FRONT A,SURROUND)			

Ref. No.	Part No.	Description			Remark
POWER BOARD					

< CONNECTOR >					
* CNP102	1-564-518-11	PLUG, CONNECTOR 3P			
< RESISTOR >					
R129	1-249-421-11	CARBON	2.2K	5%	1/4W
R130	1-247-847-00	CARBON	4.7K	5%	1/4W
< SWITCH >					
S128	1-771-410-21	SWITCH, TACTILE (SPEAKERS (ON/OFF))			(K5900P)
S128	1-771-410-21	SWITCH, TACTILE (SPEAKERS (OFF/A/B/A+B))			(K9900P)
S129	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
S130	1-771-410-21	SWITCH, TACTILE (DIMMER)			
S131	1-771-410-21	SWITCH, TACTILE (I/⏻)			

SPEAKER C/SB BOARD					

< CONNECTOR >					
* CNP503	1-564-241-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
< DIODE >					
D510	8-719-991-33	DIODE 1SS133T-77			
< COIL >					
L571	1-420-872-52	COIL, AIR-CORE			
L751	1-420-872-52	COIL, AIR-CORE			
< TRANSISTOR >					
Q550	8-729-119-78	TRANSISTOR 2SC2785-HFE			
< RESISTOR >					
R531	1-249-421-11	CARBON	2.2K	5%	1/4W
R534	1-249-404-00	CARBON	82	5%	1/4W F
R578	1-249-389-11	CARBON	4.7	5%	1/4W F
R751	1-249-389-11	CARBON	4.7	5%	1/4W F
< RELAY >					
RY501	1-755-170-11	RELAY (12V)			
< TERMINAL BOARD >					
TM501	1-780-215-11	TERMINAL BOARD (4P) (SPEAKERS SURROUND BACK,CENTER)			

SPEAKER B (P) BOARD (K9900P)					

< CONNECTOR >					
CNP610	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P			
CNP611	1-779-978-11	PIN, CONNECTOR 3P			

STR-K5900P/K9900P

SPEAKER B (P) STANDBY TUNING VIDEO

Ref. No.	Part No.	Description	Remark			
< DIODE >						
D810	8-719-991-33	DIODE 1SS133T-77				
< TRANSISTOR >						
Q810	8-729-119-78	TRANSISTOR 2SC2785-HFE				
< RESISTOR >						
R810	1-249-404-00	CARBON	82	5%	1/4W	F
R811	1-249-421-11	CARBON	2.2K	5%	1/4W	
< RELAY >						
RY610	1-755-170-11	RELAY (12V)				
< TERMINAL BOARD >						
* TM610	1-537-240-21	TERMINAL BOARD (CHECKER PIN) (4P) (SPEAKERS FRONT B)				

A-1084-334-A		STANDBY BOARD, COMPLETE				

1-533-217-41		HOLDER, FUSE				
< CAPACITOR >						
C913	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C914	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C915	1-126-943-11	ELECT	2200uF	20%	25V	
C916	1-126-942-61	ELECT	1000uF	20%	25V	
C920	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C921	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C922	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C924	1-126-960-11	ELECT	1uF	20%	50V	
C950	1-126-936-11	ELECT	3300uF	20%	16V	
< CONNECTOR >						
CNP801	1-784-922-11	PIN, CONNECTOR 5P				
CNP804	1-564-506-11	PLUG, CONNECTOR 3P				
CNP901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P				
CNP902	1-794-577-21	PIN, CONNECTOR (POWER) 2P				
CNP903	1-784-922-11	PIN, CONNECTOR 5P				
< DIODE >						
D901	8-719-991-33	DIODE 1SS133T-77				
D910	6-500-522-11	DIODE 10EDB40-TA2B5				
D911	6-500-522-11	DIODE 10EDB40-TA2B5				
D912	6-500-522-11	DIODE 10EDB40-TA2B5				
D913	6-500-522-11	DIODE 10EDB40-TA2B5				
D914	8-719-991-33	DIODE 1SS133T-77				
D915	8-719-991-33	DIODE 1SS133T-77				
D920	6-500-522-11	DIODE 10EDB40-TA2B5				
D921	6-500-522-11	DIODE 10EDB40-TA2B5				
D922	6-500-522-11	DIODE 10EDB40-TA2B5				
D923	6-500-522-11	DIODE 10EDB40-TA2B5				
< GROUND TERMINAL >						
G901	1-537-738-21	TERMINAL, GROUND				

Ref. No.	Part No.	Description	Remark			
< TRANSISTOR >						
Q901	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q921	8-729-119-78	TRANSISTOR 2SC2785-HFE				
< RESISTOR >						
△ R810	1-243-634-11	FUSIBLE	0.22	5%	1/2W	F
△ R811	1-243-634-11	FUSIBLE	0.22	5%	1/2W	F
△ R901	1-219-237-11	SOLID	3.3M	20%	1/2W	F
R902	1-247-871-00	CARBON	47K	5%	1/4W	
R903	1-249-421-11	CARBON	2.2K	5%	1/4W	
R904	1-249-381-11	CARBON	1	5%	1/4W	F
R921	1-247-871-00	CARBON	47K	5%	1/4W	
R922	1-247-863-00	CARBON	22K	5%	1/4W	
R923	1-249-429-11	CARBON	10K	5%	1/4W	
< RELAY >						
△ RY901	1-755-541-11	RELAY				
< TRANSFORMER >						
△ T902	1-443-516-11	TRANSFORMER, POWER				

TUNING BOARD						

< CONNECTOR >						
* CNP104	1-564-517-11	PLUG, CONNECTOR 2P				
< RESISTOR >						
R149	1-247-831-00	CARBON	1K	5%	1/4W	
R150	1-249-419-11	CARBON	1.5K	5%	1/4W	
R151	1-249-421-11	CARBON	2.2K	5%	1/4W	
R152	1-247-847-00	CARBON	4.7K	5%	1/4W	
R153	1-249-429-11	CARBON	10K	5%	1/4W	
< SWITCH >						
S148	1-771-410-21	SWITCH, TACTILE (TUNING -)				
S149	1-771-410-21	SWITCH, TACTILE (FM MODE)				
S150	1-771-410-21	SWITCH, TACTILE (MEMORY)				
S151	1-771-410-21	SWITCH, TACTILE (PRESET TUNING -)				
S152	1-771-410-21	SWITCH, TACTILE (PRESET TUNING +)				
S153	1-771-410-21	SWITCH, TACTILE (TUNING +)				

A-1084-344-A VIDEO BOARD, COMPLETE						

< CAPACITOR >						
C200	1-128-805-11	CERAMIC	47PF	5%	50V	
C201	1-128-805-11	CERAMIC	47PF	5%	50V	
C206	1-126-964-11	ELECT	10uF	20%	50V	
C207	1-126-964-11	ELECT	10uF	20%	50V	
C208	1-126-964-11	ELECT	10uF	20%	50V	
C209	1-126-964-11	ELECT	10uF	20%	50V	
C210	1-126-964-11	ELECT	10uF	20%	50V	
C213	1-126-923-11	ELECT	220uF	20%	10V	
C214	1-127-888-11	CERAMIC	0.1uF	10%	50V	
C215	1-127-888-11	CERAMIC	0.1uF	10%	50V	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C220	1-126-947-11	ELECT	47uF	20%	35V	R310	1-247-831-00	CARBON	1K	5%	1/4W
C221	1-126-923-11	ELECT	220uF	20%	10V	R311	1-247-831-00	CARBON	1K	5%	1/4W
C223	1-127-888-11	CERAMIC	0.1uF	10%	50V	R312	1-247-831-00	CARBON	1K	5%	1/4W
C224	1-127-888-11	CERAMIC	0.1uF	10%	50V	R313	1-247-863-00	CARBON	22K	5%	1/4W
C308	1-126-964-11	ELECT	10uF	20%	50V	*****					
C309	1-126-964-11	ELECT	10uF	20%	50V	VIDEO3 BOARD					
C310	1-126-964-11	ELECT	10uF	20%	50V	*****					
C311	1-126-964-11	ELECT	10uF	20%	50V	< CAPACITOR >					
C312	1-126-964-11	ELECT	10uF	20%	50V	C293	1-127-888-11	CERAMIC	0.1uF	10%	50V
C313	1-126-964-11	ELECT	10uF	20%	50V	C294	1-127-888-11	CERAMIC	0.1uF	10%	50V
C314	1-127-868-11	CERAMIC	0.0022uF	10%	50V	C298	1-162-286-31	CERAMIC	220PF	10%	50V
C315	1-127-868-11	CERAMIC	0.0022uF	10%	50V	C299	1-162-286-31	CERAMIC	220PF	10%	50V
C316	1-127-868-11	CERAMIC	0.0022uF	10%	50V	< CONNECTOR >					
C317	1-126-947-11	ELECT	47uF	20%	35V	CN201	1-784-922-11	PIN, CONNECTOR	5P		
C330	1-127-888-11	CERAMIC	0.1uF	10%	50V	< JACK >					
C331	1-127-888-11	CERAMIC	0.1uF	10%	50V	J298	1-819-187-11	JACK, PIN 3P (VIDEO 3 INPUT			
C338	1-126-947-11	ELECT	47uF	20%	35V	VIDEO,AUDIO L/R)					
< CONNECTOR >						< RESISTOR >					
* CNP202	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P				R298	1-247-831-00	CARBON	1K	5%	1/4W
CNP203	1-691-765-11	PLUG (MICRO CONNECTOR) 3P				R299	1-247-831-00	CARBON	1K	5%	1/4W
CNS250	1-568-443-11	SOCKET, CONNECTOR 13P				< LEAD WIRE >					
< DIODE >						* W290	1-690-880-31	LEAD (WITH CONNECTOR)			
D203	8-719-991-33	DIODE 1SS133T-77				*****					
D204	8-719-991-33	DIODE 1SS133T-77				MISCELLANEOUS					
< IC >						*****					
IC203	6-701-890-01	IC NJM2595D				102	1-828-963-11	WIRE (FLAT TYPE) (11 CORE)			
IC304	6-707-363-01	IC NJM2586L				103	1-828-972-11	WIRE (FLAT TYPE) (13 CORE)			
IC804	8-759-245-79	IC TA79005S				△ 105	1-783-820-11	CORD, POWER			
IC807	8-759-231-53	IC TA7805S				△ F901	1-533-453-12	FUSE, GLASS TUBE (DIA. 5) (5A/125V)			
< JACK >						Q503	6-702-390-01	TRANSISTOR MN2488-OPY-MK			
J200	1-794-978-11	JACK, PIN 3P (DVD VIDEO IN, VIDEO 2 VIDEO IN, VIDEO 1 VIDEO OUT)				Q504	6-702-391-01	TRANSISTOR MP1620-OPY-MK			
J201	1-815-043-11	JACK, PIN 2P (VIDEO 1 VIDEO IN, MONITOR VIDEO OUT)				Q533	6-702-390-01	TRANSISTOR MN2488-OPY-MK			
J301	1-816-592-11	JACK, PIN 9P (COMPONENT VIDEO DVD IN (ASSIGNABLE), VIDEO 2 IN (ASSIGNABLE), MONITOR OUT)				Q534	6-702-391-01	TRANSISTOR MP1620-OPY-MK			
< RESISTOR >						Q603	6-702-390-01	TRANSISTOR MN2488-OPY-MK			
R200	1-247-804-11	CARBON	75	5%	1/4W	Q604	6-702-391-01	TRANSISTOR MP1620-OPY-MK			
R201	1-247-804-11	CARBON	75	5%	1/4W	Q653	6-702-390-01	TRANSISTOR MN2488-OPY-MK			
R218	1-247-804-11	CARBON	75	5%	1/4W	Q654	6-702-391-01	TRANSISTOR MP1620-OPY-MK			
R219	1-247-804-11	CARBON	75	5%	1/4W	Q703	6-702-390-01	TRANSISTOR MN2488-OPY-MK			
R220	1-247-804-11	CARBON	75	5%	1/4W	Q704	6-702-391-01	TRANSISTOR MP1620-OPY-MK			
R221	1-247-804-11	CARBON	75	5%	1/4W	Q753	6-702-390-01	TRANSISTOR MN2488-OPY-MK			
R301	1-247-804-11	CARBON	75	5%	1/4W	Q754	6-702-391-01	TRANSISTOR MP1620-OPY-MK			
R302	1-247-804-11	CARBON	75	5%	1/4W	△ T901	1-443-524-11	TRANSFORMER, POWER (K9900P)			
R303	1-247-804-11	CARBON	75	5%	1/4W	△ T901	1-443-628-11	TRANSFORMER, POWER (K5900P)			
R304	1-247-804-11	CARBON	75	5%	1/4W	TN1	1-693-675-11	TUNER PACK (ANTENNA) (EXCEPT K5900P:SILVER)			
R305	1-247-804-11	CARBON	75	5%	1/4W	TN1	1-693-675-21	TUNER PACK (ANTENNA) (K5900P:SILVER)			
R306	1-247-804-11	CARBON	75	5%	1/4W						
R307	1-247-804-11	CARBON	75	5%	1/4W						
R308	1-247-804-11	CARBON	75	5%	1/4W						
R309	1-247-804-11	CARBON	75	5%	1/4W						

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.

[illegible]