

STR-K665P

SERVICE MANUAL

US Model

Ver 1.1 2004.10



- STR-K665P is the tuner and the amplifier section in HT-DDW665.

Manufactured under license from Dolby Laboratories.
“Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories.
“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, both channels driven, from 120 – 20,000 Hz; rated 55 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Power Output¹⁾

(6 ohms 1 kHz, THD 10%)

FRONT²⁾: 85 W/ch

CENTER²⁾: 85 W

SURR²⁾: 85 W/ch

(6 ohms 100 Hz, THD 10%)

SUB WOOFER²⁾: 85 W

1) Measured under the following conditions:

120 V AC, 60 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

Inputs (Analog)

DVD, VIDEO	Sensitivity: 800 mV Impedance: 50 kilohms
------------	--

Inputs (Digital)

DVD (Coaxial)	Sensitivity: – Impedance: 75 ohms
---------------	--------------------------------------

VIDEO (Optical)	Sensitivity: – Impedance: –
-----------------	--------------------------------

Reproduction frequency range:

28 – 20,000 Hz

Tone

Gain levels	±6 dB, 1 dB step
-------------	------------------

FM tuner section

Tuning range	87.5 - 108.0 MHz
Antenna	FM wire antenna
Antenna terminals	75 ohms, unbalanced
Intermediate Frequency	10.7 MHz

— Continued on next page —

FM STEREO FM-AM RECEIVER

9-877-665-02

2004J16-1

© 2004.10

Sony Corporation

Audio Group

Published by Sony Engineering Corporation

SONY®

AM tuner section

Tuning range
With 10-kHz tuning scale: 530 - 1,710 kHz³⁾
With 9-kHz tuning scale: 531 - 1,710 kHz³⁾
Antenna Loop antenna
Intermediate Frequency 450 kHz

3) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down PRESET TUNING + or TUNING +, press I/⏻. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

General

Power requirements 120 V AC, 60 Hz
Power consumption 160 W
Power consumption (during standby mode) 0.3 W
Dimensions (w/h/d) (Approx.) 430 × 145 × 301.5 mm (17 × 5 6/8 × 11 7/8 inches) including projecting parts and controls
Mass (Approx.) 6.5 kg (14 lb 6 oz)

Design and specifications are subject to change without notice.

TABLE OF CONTENTS

1. GENERAL 4

2. TEST MODE 8

3. DIAGRAMS

3-1. Circuit Board Location 9

3-2. Block Diagrams – MAIN Section – 10

 – DISPLAY/POWER Section – 11

3-3. Printed Wiring Board

 – DIGITAL Board (Side A) – 12

3-4. Printed Wiring Board

 – DIGITAL Board (Side B) – 13

3-5. Schematic Diagram – DIGITAL Section (1/2) – 14

3-6. Schematic Diagram – DIGITAL Section (2/2) – 15

3-7. Printed Wiring Board – MAIN Section – 16

3-8. Schematic Diagram – MAIN Section (1/2) – 17

3-9. Schematic Diagram – MAIN Section (2/2) – 18

3-10. Printed Wiring Board – SUB WOOFER Board – 19

3-11. Schematic Diagram – SUB WOOFER Board – 19

3-12. Printed Wiring Board – POWER Section – 20

3-13. Schematic Diagram – POWER Section – 21

3-14. Printed Wiring Board – FRONT PANEL Section – 22

3-15. Schematic Diagram – FRONT PANEL Section – 23

3-16. IC Pin Function Descriptions 27

4. EXPLODED VIEWS

4-1. Front Panel Section 29

4-2. Chassis Section 30

5. ELECTRICAL PARTS LIST 31


SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

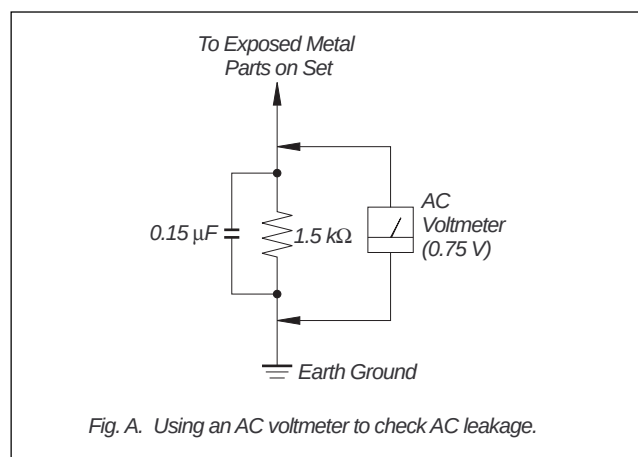

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)



: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350°C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1
GENERAL

This section is extracted
from instruction manual.

ALPHABETICAL ORDER

A - L


- A.F.D. (button/indicator) **7** (17, 18, 19, 30)
AM **22** (13, 14)
DIMMER **3** (15)
DISPLAY **2** (15, 31)
Display **5** (15)
DVD **24** (13)
ENTER **11** (10, 24)
FM **23** (13, 14)
FM MODE **20** (13)
Input buttons **16** (13, 20, 23, 24)
INPUT MODE **12** (20)
R (receptor) **4** (25, 31)

M - Z


- MAIN MENU **15** (11, 20, 22, 24)
MASTER VOLUME $\pm$ **10** (12, 13, 30)
MEMORY **19** (14)
MOVIE (button/indicator) **8** (18, 30)
MUSIC (button/indicator) **9** (19, 30)
PHONES (jack) **21** (13, 16, 30)
PRESET TUNING $\pm$ **17** (14, 33)
TUNING $\pm$ **18** (13, 33)
VIDEO **25** (13)

NUMBERS AND SYMBOLS

- 2CH (button/indicator) **6** (17, 19, 21)
 $\pm$ **13** (11, 20, 22, 24)
</> **14** (11, 20, 22, 24)
I/⏻ (power) **1** (10, 12, 33)

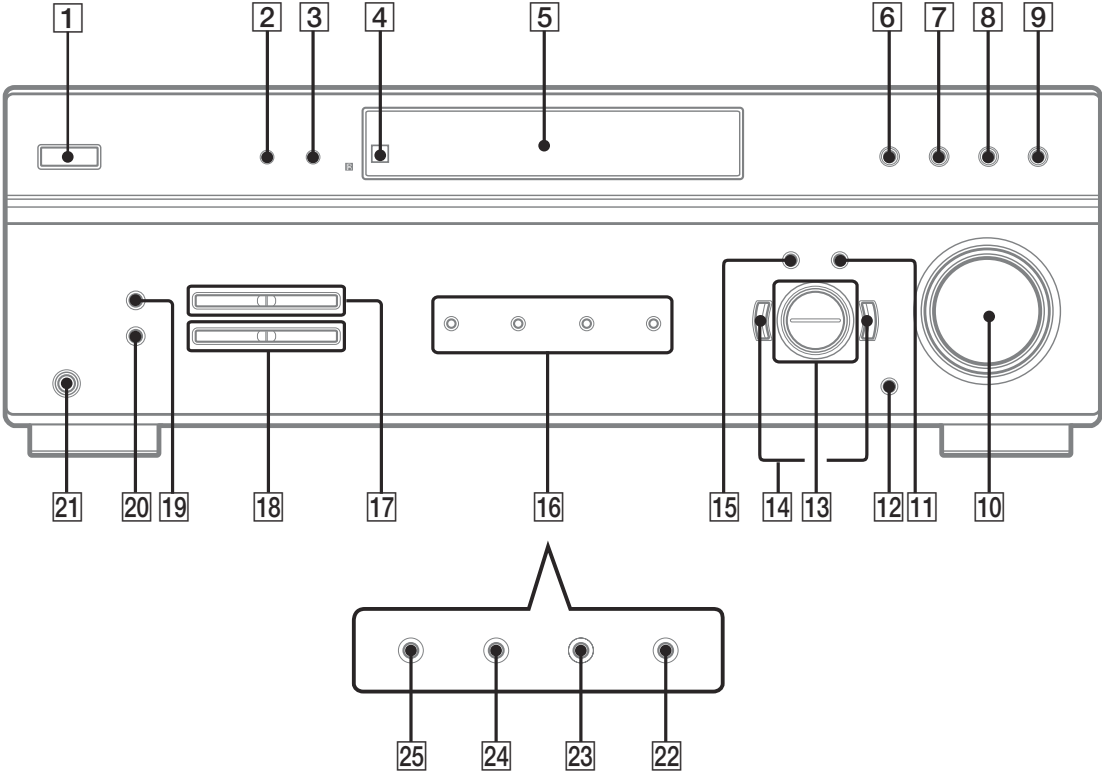

Remote button description

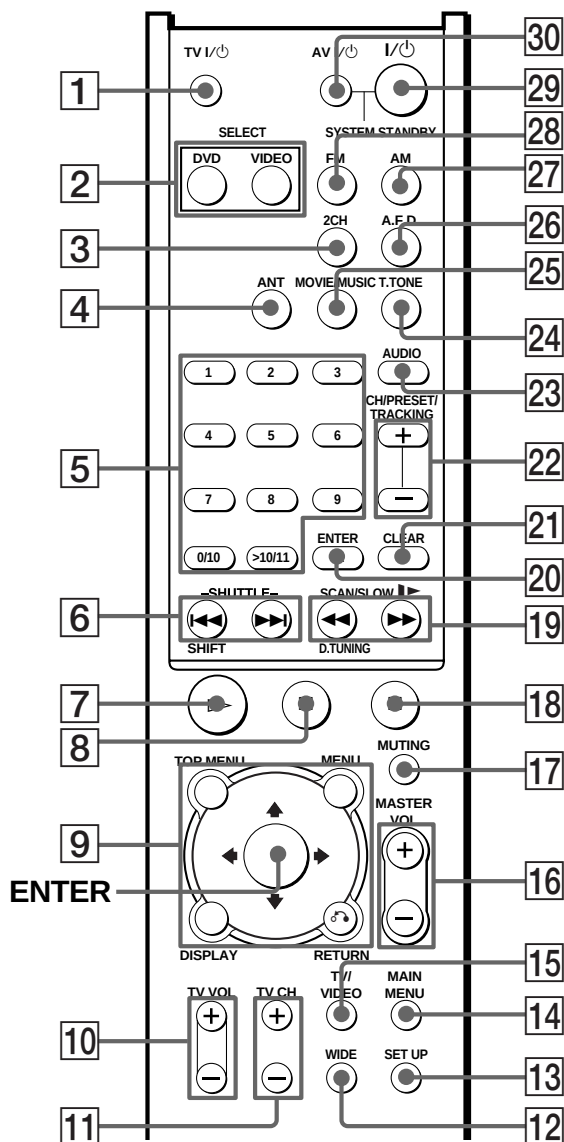

The tables below show the settings of each button.

Remote Button	Operations	Function
A.F.D. [26]	Receiver	Selects the decoding mode for audio sound.

Remote Button	Operations	Function
AM [27]	Receiver	To select the AM band.
ANT [4]	DVD PLAYER/ VIDEO CASSETTE RECORDER (VIDEO mode)	Selects output signal from the antenna terminal: TV signal or VCR program.
AUDIO [23]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Changes the sound to Multiplex or Bilingual.
AV I/⏻ [30]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Turns the audio and video components on or off.
CH/	Receiver	Selects preset stations.
PRESET/ TRACKING +/- [22]	DVD PLAYER/ VIDEO CASSETTE RECORDER (VIDEO mode)	Selects preset channel.
	DVD PLAYER/ VIDEO CASSETTE RECORDER (VIDEO mode)	Adjusts the tracking when distortion occurs.
CLEAR [21]	DVD PLAYER/ VIDEO CASSETTE RECORDER (DVD mode)	Press if you make a mistake when you press the numeric button or press to return to continuous play etc.
DISPLAY [9]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Selects information displayed on the TV screen.
D.TUNING [19]	Receiver	Enters direct tuning mode.
DVD [2]	Receiver	To watch DVD PLAYER/VIDEO CASSETTE RECORDER (DVD mode).
ENTER [9]	Receiver/ DVD PLAYER/ VIDEO CASSETTE RECORDER	Enters the selection.

Remote Button	Operations	Function
ENTER/12 [20]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Enters the selection.
FM [28]	Receiver	To select the FM band.
MAIN MENU [14]	Receiver	Selects the menu of the receiver.
MASTER VOL +/- [16]	Receiver	Adjusts the master volume of the receiver.
MENU [9]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Displays menu.
MOVIE/ MUSIC [25]	Receiver	Selects the pre-programmed sound fields for movie and music.
MUTING [17]	Receiver	Mutes the sound from the receiver.
RETURN/ ⏮ [9]	DVD PLAYER/ VIDEO CASSETTE RECORDER (DVD mode)	Returns to the previous menu or exits the menu.
SCAN/ SLOW ▶ [19]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Playback in slow motion.
SET UP [13]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Selects the SET UP MENU.
SHIFT [6]	Receiver	Selects a memory page for presetting radio stations or tuning to preset stations.
SHUTTLE [6]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Changes the playback speed.
SYSTEM STANDBY (Press AV I/⏻ [30] and I/⏻ [29] at the same time)	Receiver/TV/ DVD PLAYER/ VIDEO CASSETTE RECORDER	Turns off the receiver and other Sony audio/ video components.
T.TONE [24]	Receiver	Outputs test tone.

Remote Button	Operations	Function
TOP MENU [9]	VIDEO CASSETTE RECORDER (DVD mode)	Displays DVD title.
TV CH +/- [11]	TV	Selects preset TV channels.
TV/VIDEO [15]	TV	Selects input signal: TV input or video input.
TV VOL +/- [10]	TV	Adjusts the volume of the TV.
TV I/⏻ [1]	TV	Turns the TV on or off.
VIDEO [2]	Receiver	To watch DVD PLAYER/VIDEO CASSETTE RECORDER (VIDEO mode).
WIDE [12]	TV	Selects the wide picture mode.
I/⏻ [29]	Receiver	Turns the receiver on or off.
2CH [3]	Receiver	Selects 2CH STEREO mode.
⬆/⬇ [9]	Receiver	Selects a menu item.
⬅/➡ [9]	Receiver	Makes adjustment or change the setting.
⬆/⬇/⬅/➡ [9]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Selects a menu item.
1-9 and 0/10 [5]	Receiver	Use with SHIFT to preset radio station or tuning to preset stations and with D.TUNING for direct tuning.
	DVD PLAYER/ VIDEO CASSETTE RECORDER (VIDEO mode)	Selects channel numbers.

Remote Button	Operations	Function
 [6]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Skips tracks.
 [19]	DVD PLAYER/ VIDEO CASSETTE RECORDER (DVD mode)	Searches tracks in the forward or backward direction.
 [7]	DVD PLAYER/ VIDEO CASSETTE RECORDER (VIDEO mode)	Fastforwards or rewinds.
 [8]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Starts playback.
 [8]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Pauses playback or record. (Also starts recording with components in recording standby.)
 [18]	DVD PLAYER/ VIDEO CASSETTE RECORDER	Stops playback.

Notes

- The above explanation is intended to serve as an example only. Therefore, depending on the component the above operation may not be possible or may operate differently than described.
- When you press input buttons (VIDEO or DVD), the input mode of the TV might not switch to the corresponding input mode that you want. In this case, press the TV/VIDEO button to switch the input mode of the TV.
- The >10/11 is not available.

SECTION 2

TEST MODE

FACTORY PRESET MODE


- All preset contents are reset to the default setting.
- Procedure:
While depressing the **MAIN MENU** and the **PRESET TUNING-** buttons simultaneously, press the **I/⏻** button again. The message “FACTORY” appears and the present contents are reset to the default values.

AM CHANNEL STEP 9 KHz/10 KHz SELECTION MODE

- Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
- Procedure:
Set the FUNCTION to AM. Turn off the main power.
While depressing the **TUNING+** button or the **PRESET TUNING +** button, press the **I/⏻** button to turn on the main power. Either the message “9 k STEP” or “10 k STEP” appears. Select the desired step.


FLUORESCENT INDICATOR TUBE TEST MODE

- All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.
 - Procedure:
While depressing the **MOVIE** and the **>** buttons simultaneously, press the **I/⏻** button to turn on the main power.
1. All segments turn on.

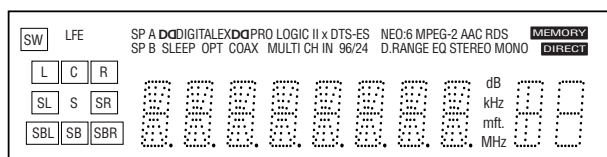


2CH, **A. F. D.**, **MOVIE** and **MUSIC** LED turn on.

2. Press the **VIDEO** button, confirm display.

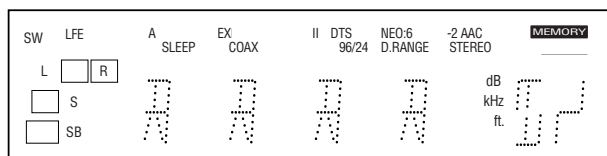

A.F.D. and **MUSIC** LED turn on.

3. Press the **VIDEO** button, confirm display

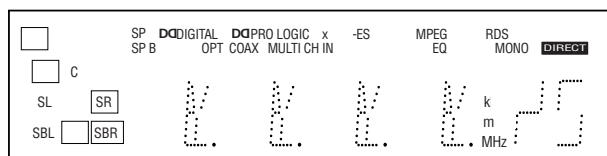

2CH and **MOVIE** LED turn on.

4. Press the **VIDEO** button, All segments and all LEDs turn off.
5. Every pressing of the **VIDEO** button turns on each segment and LED one after another in the same order.

SOUND FIELD CLEAR MODE

- The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

- Procedure:
While depressing the **2CH** button, press the **I/⏻** button to turn on the main power.
The message “SF. CLR.” appears and initialization is performed.

SOFTWARE VERSION DISPLAY MODE

- The software version is displayed.
- Procedure:
While depressing the **FM MODE** and the **DISPLAY** buttons simultaneously, press the **I/⏻** button to turn on the main power. The model name, destination and the software version are displayed.

KEY CHECK MODE


- Button check
- Procedure:
While depressing the **A.F.D.** and the **AM** buttons simultaneously, press the power **I/⏻** button to turn on the main power. “REST 23” appears.
Every pressing of any button other than **I/⏻** counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed “REST 00” appears.

COMMAND MODE SELECTION MODE

- The command mode (AV1 or AV2) of the remote commander can be selected.
- Procedure:
1. While depressing the **ENTER** button, press the **I/⏻** button to turn on the main power.
2. The message “C.MODE.AV 1” or “C.MODE.AV 2” appears for a moment. Select the desired mode.

SECTION 3
DIAGRAMS

3-1. CIRCUIT BOARD LOCATION

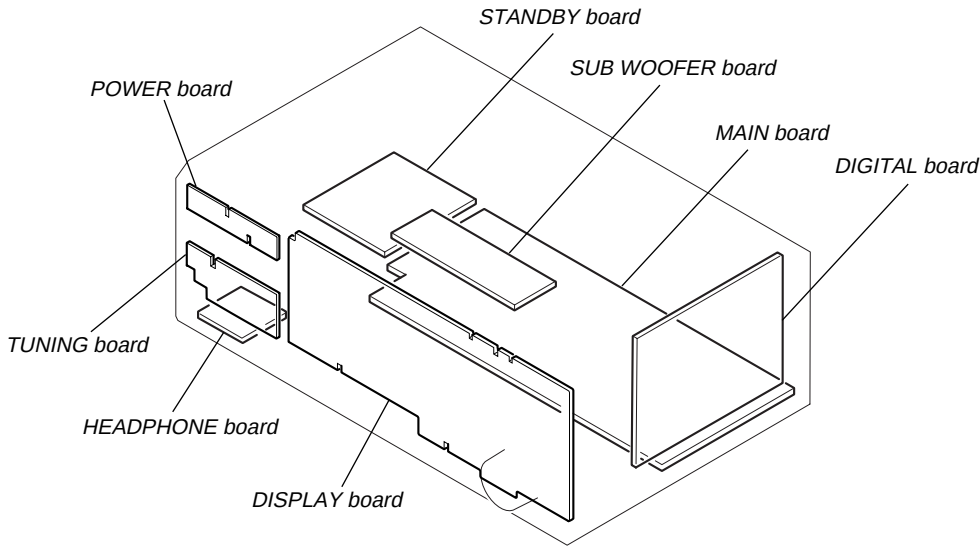

THIS NOTE IS COMMON FOR PRINTED WIRING
BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this necessary note is printed in each
block.)

For schematic diagrams.

Note:

- All capacitors are in μF unless otherwise noted. pF: $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

 

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
No mark : FM
* : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
 : FM
 : ANALOG INPUT
 : DIGITAL INPUT

For printed wiring boards.

Note:




- : parts extracted from the component side.
- : Through hole.
- : internal component.
- : Pattern from the side which enables seeing.

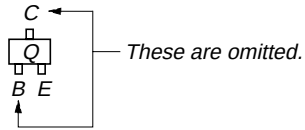

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Side A)
Parts face side: Parts on the parts face side seen from the parts face are indicated.
(Side B)


• Waveforms

DIGITAL Board

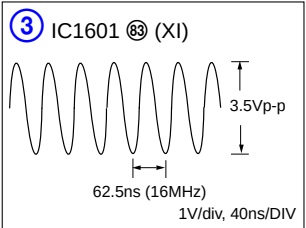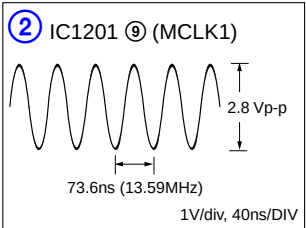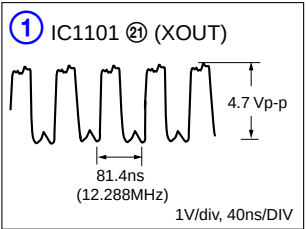


STR-K665P

3-2. BLOCK DIAGRAMS – MAIN SECTION –

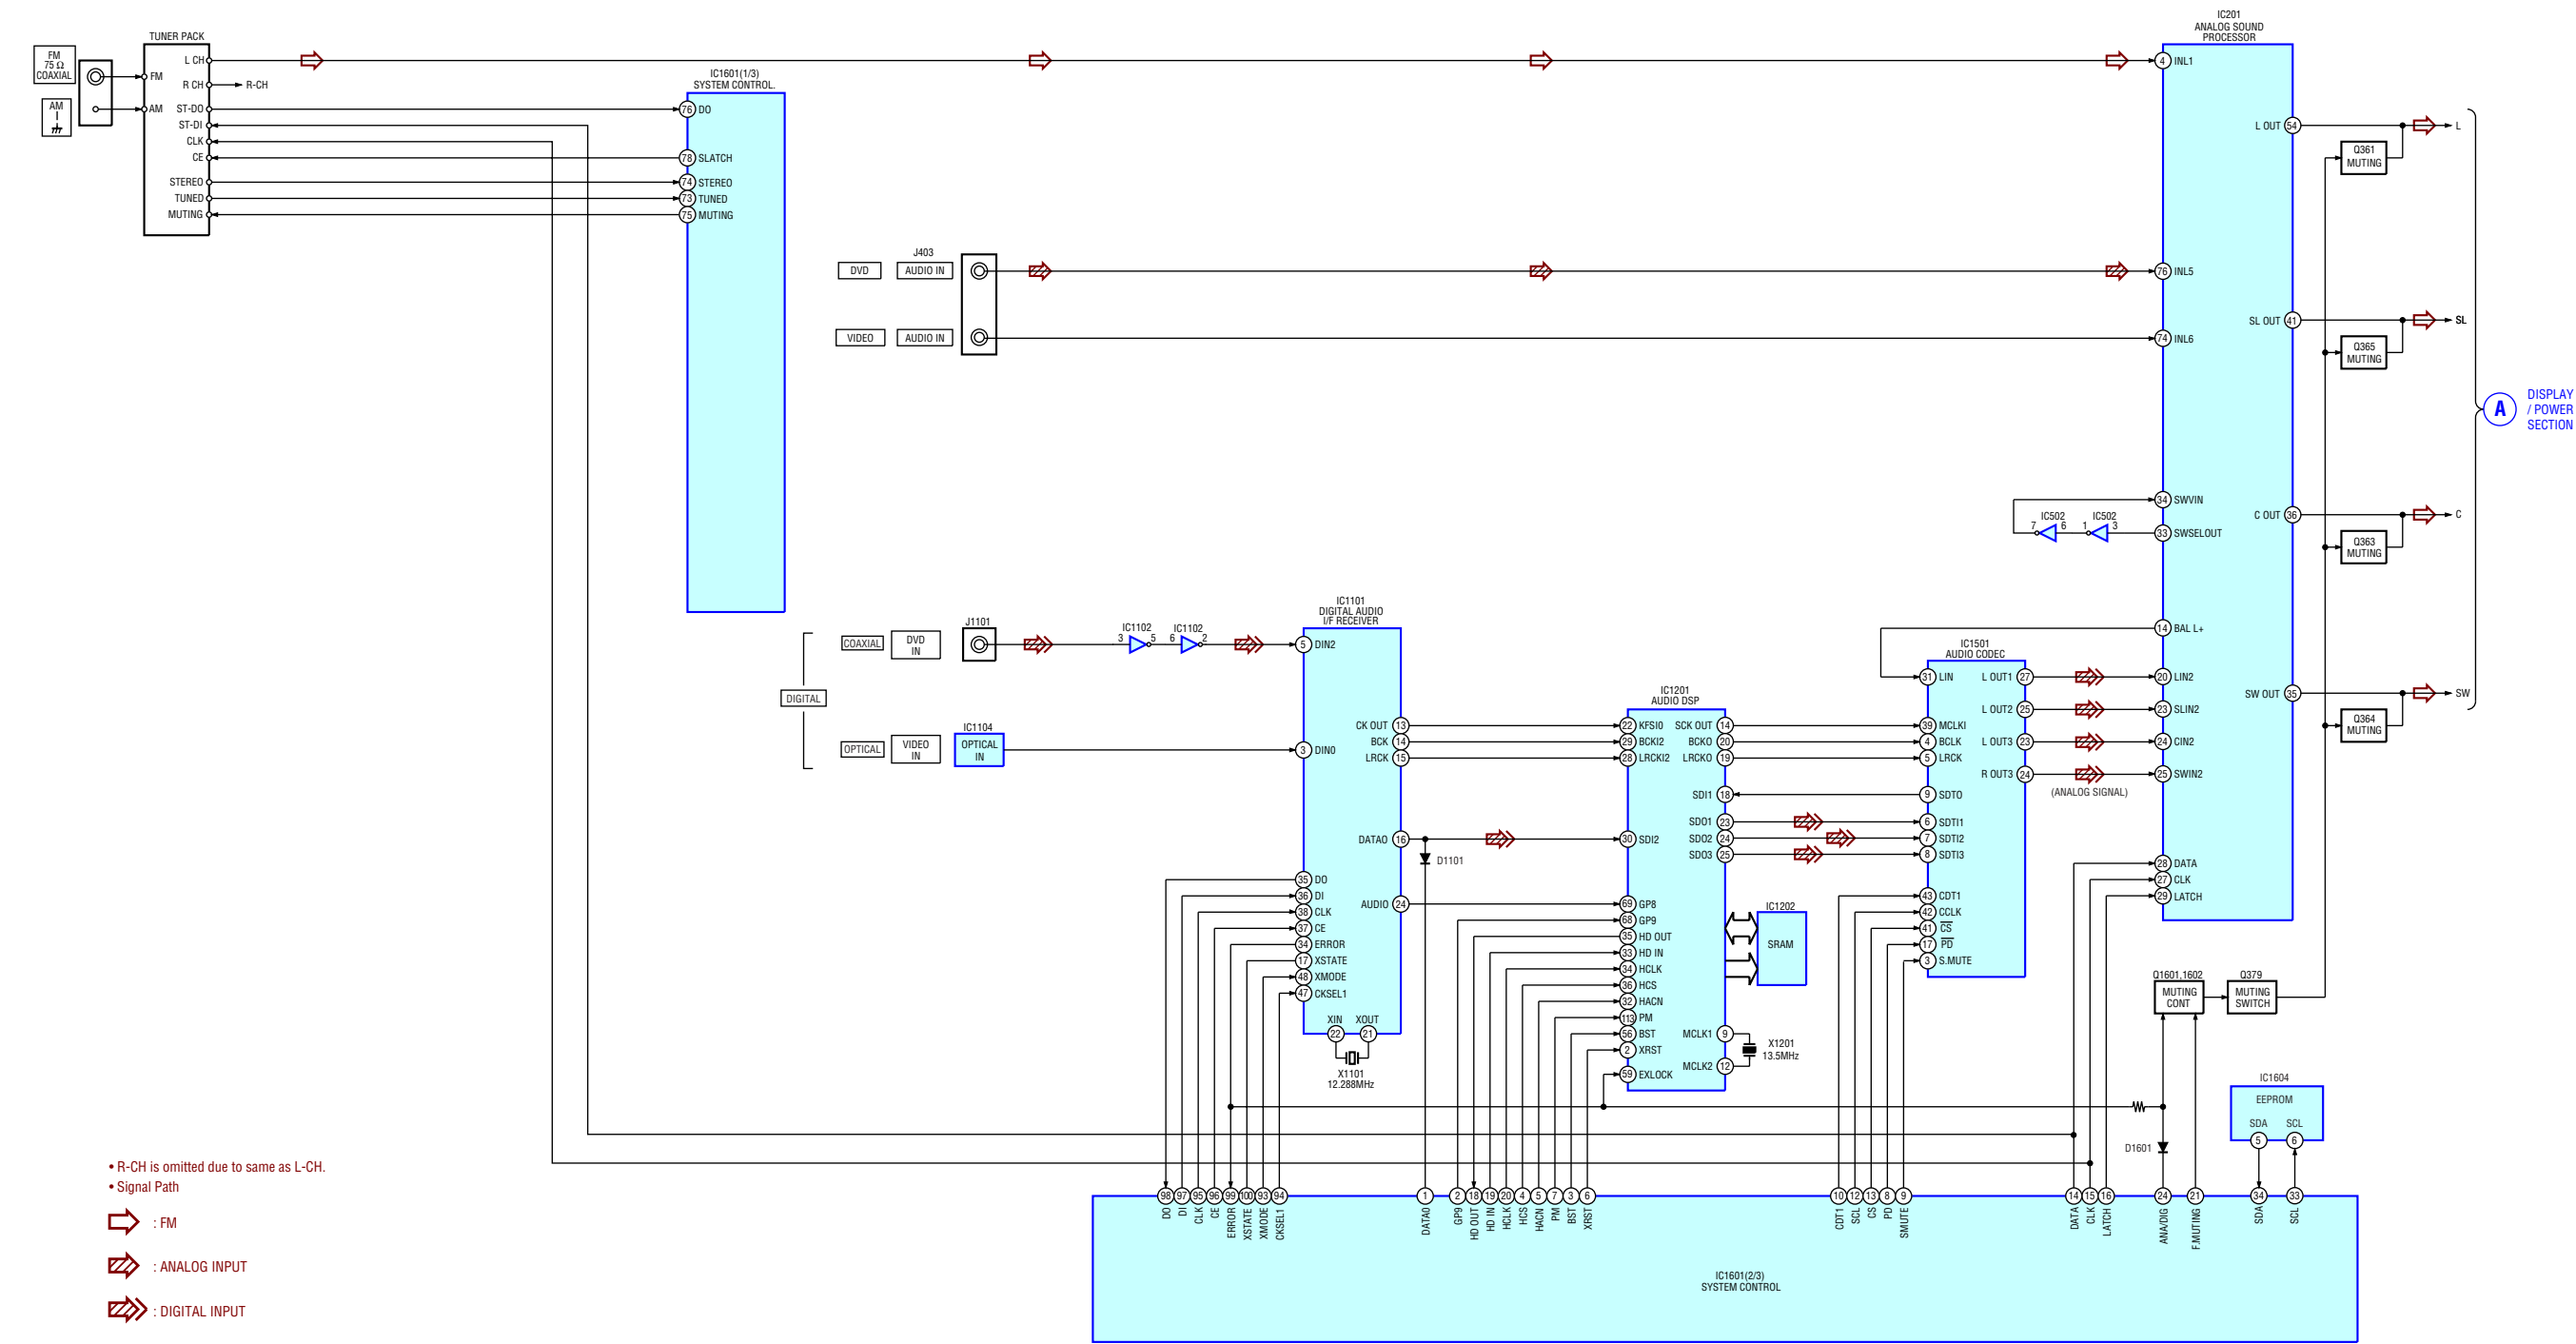



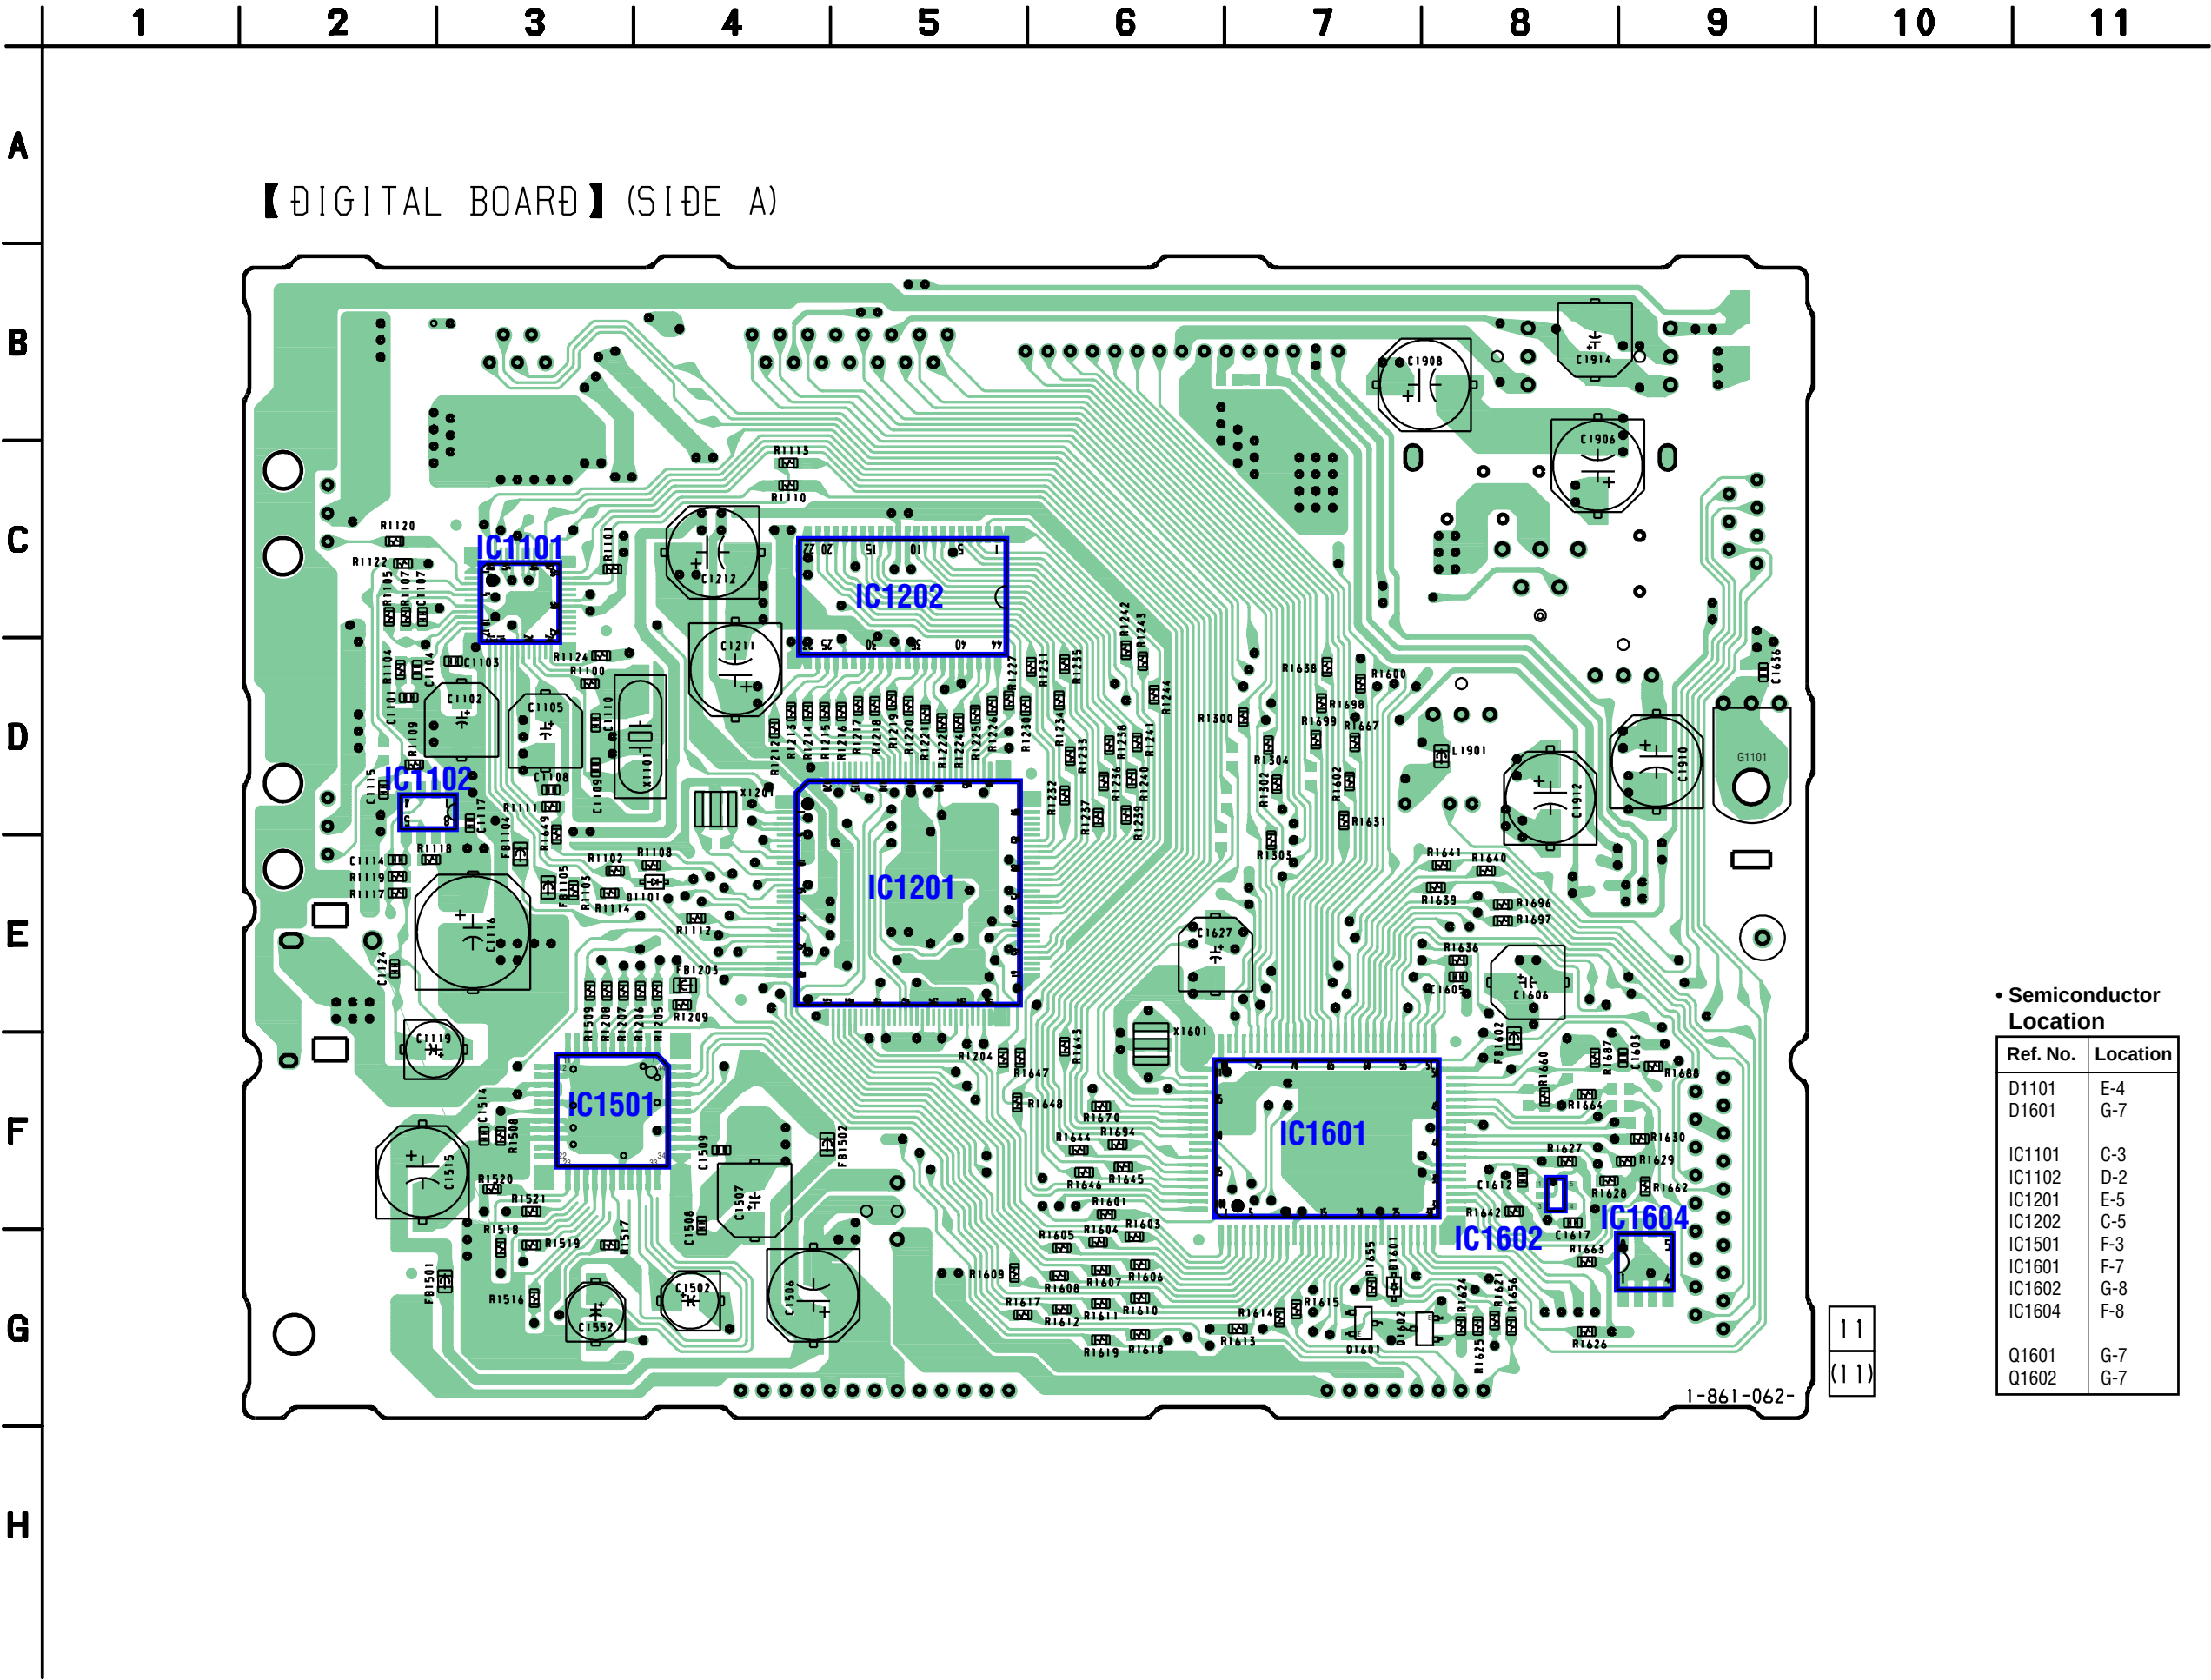


• Semiconductor Location

Ref. No.	Location
D1101	E-4
D1601	G-7
IC1101	C-3
IC1102	D-2
IC1201	E-5
IC1202	C-5
IC1501	F-3
IC1601	F-7
IC1602	G-8
IC1604	F-8
Q1601	G-7
Q1602	G-7

3-4. PRINTED WIRING BOARD – DIGITAL BOARD (SIDE B) –

• See page 9 for Circuit Boards Location.

•  : Uses unleaded solder.

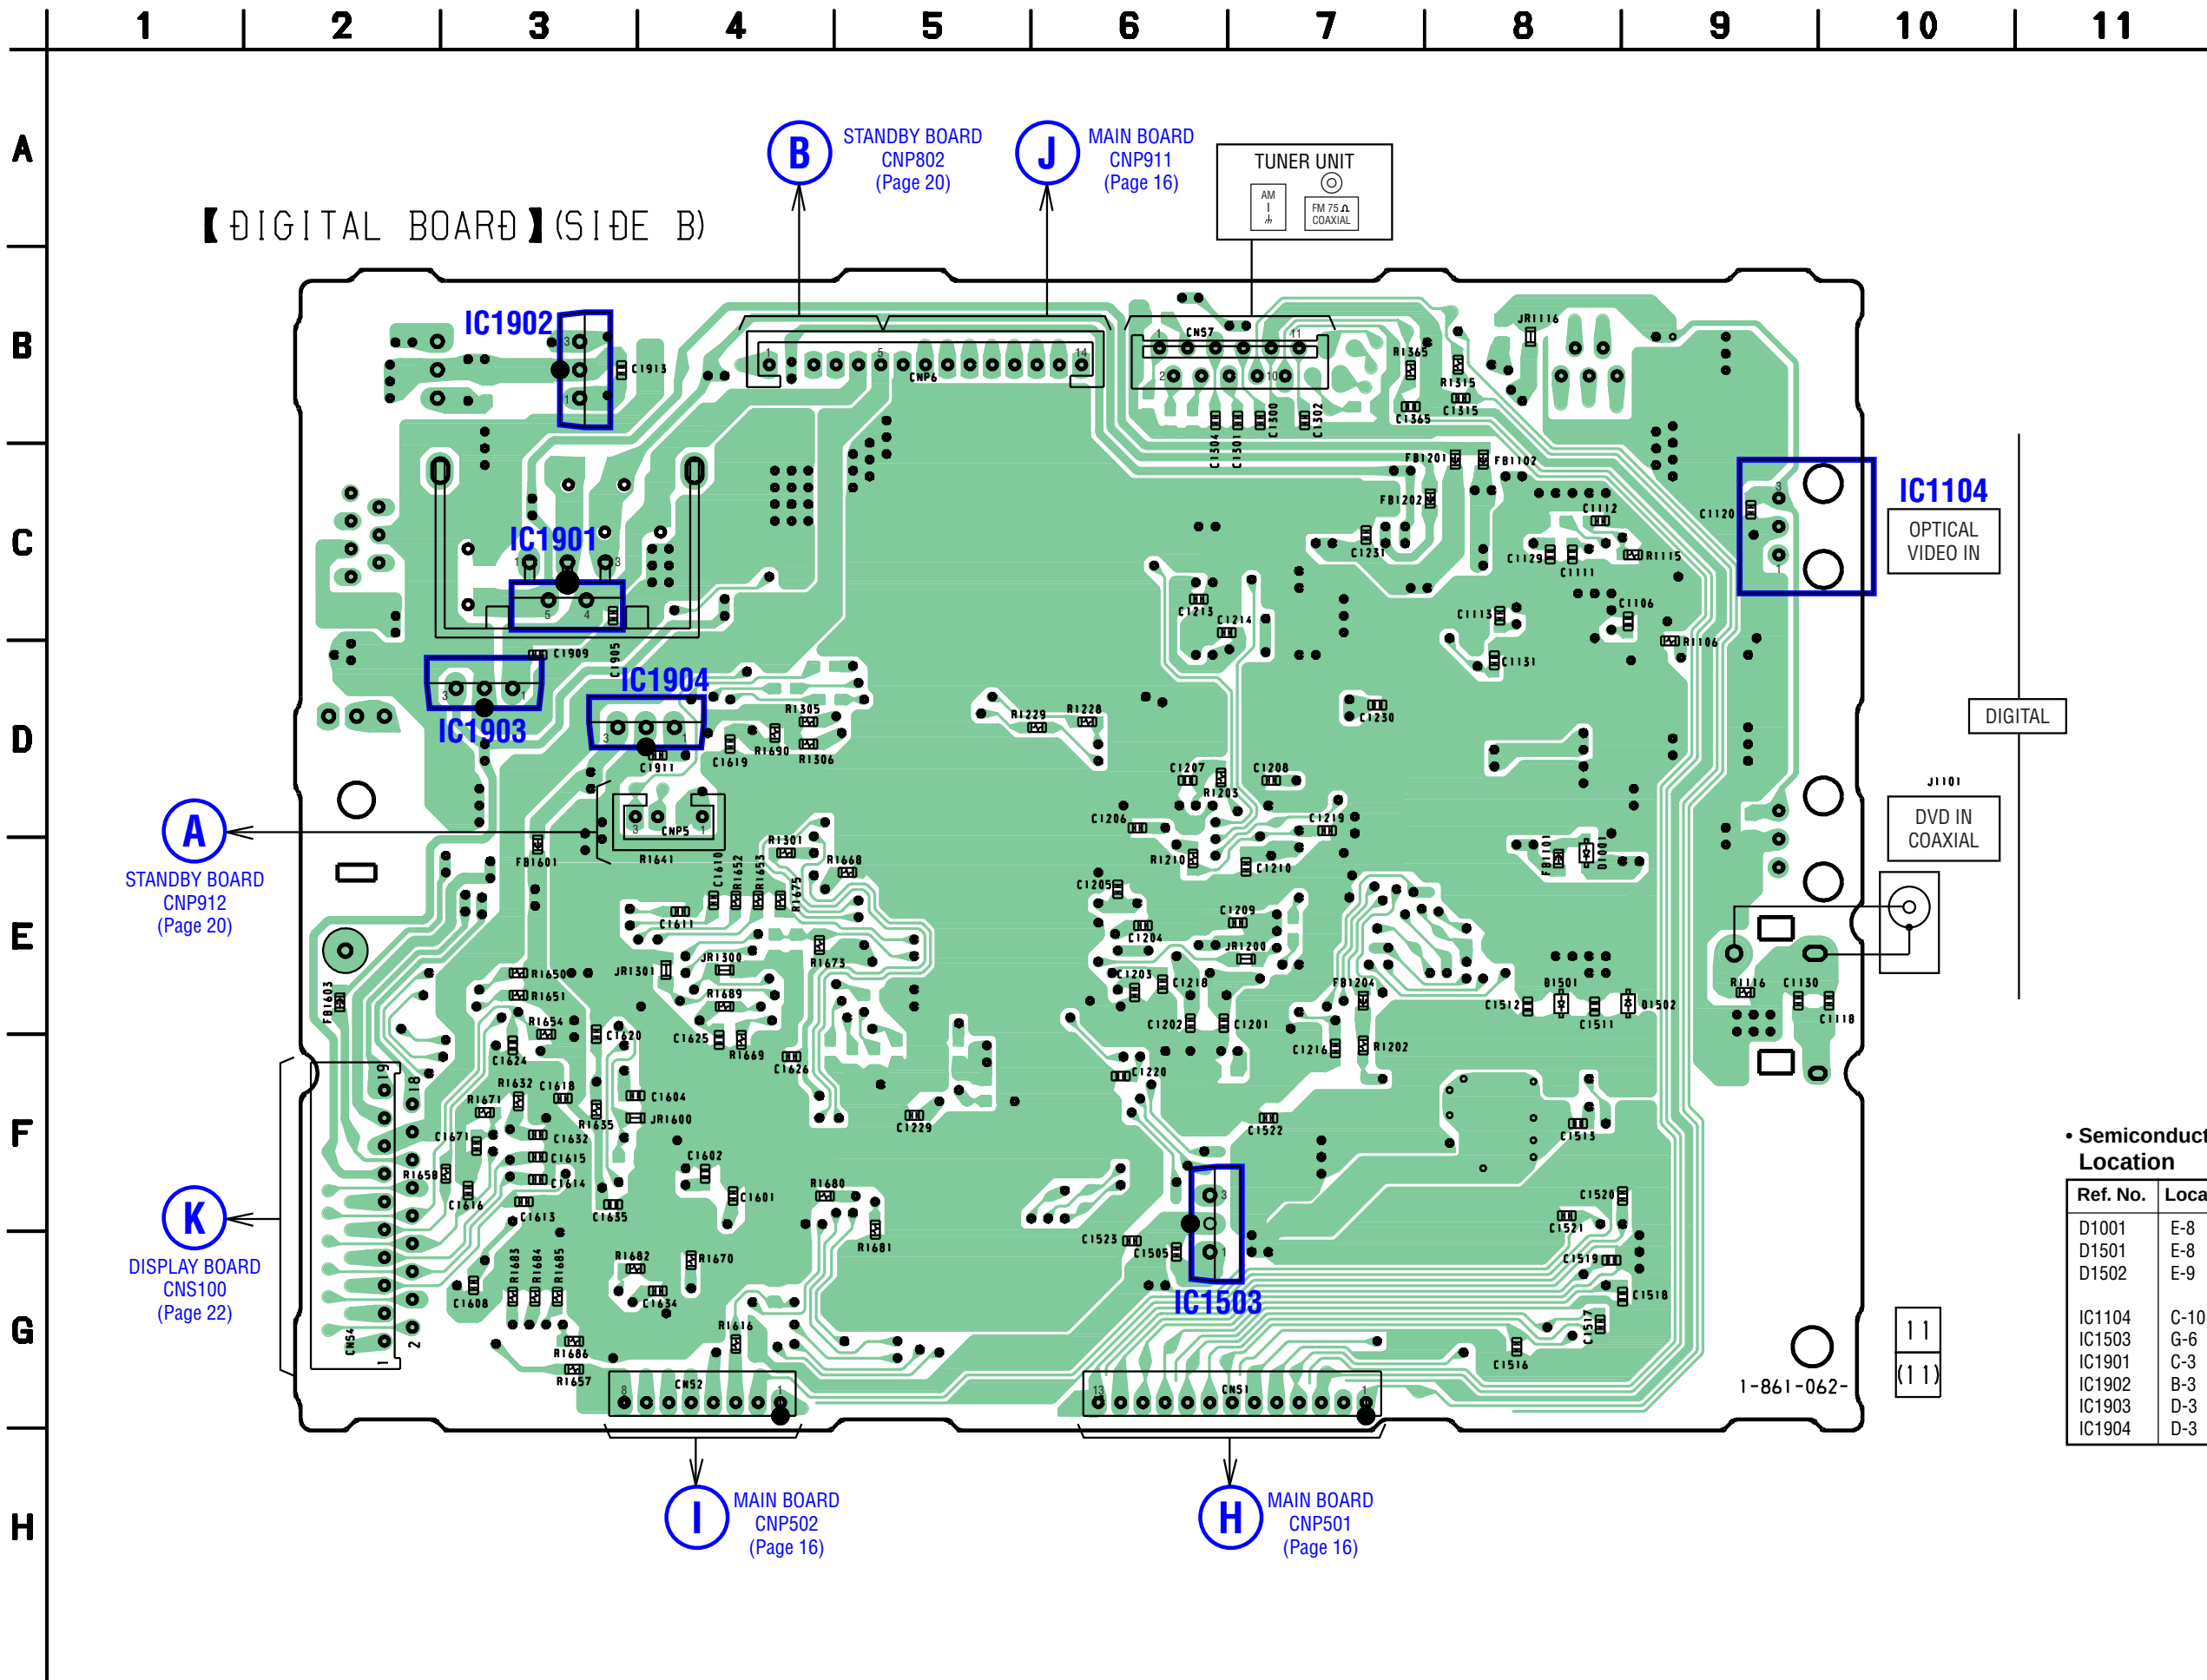


• Semiconductor Location

Ref. No.	Location
D1001	E-8
D1501	E-8
D1502	E-9
IC1104	C-10
IC1503	G-6
IC1901	C-3
IC1902	B-3
IC1903	D-3
IC1904	D-3



3-6. SCHEMATIC DIAGRAM – DIGITAL BOARD (2/2) – • See page 27 for IC PIN FUNCTION DESCRIPTIONS.

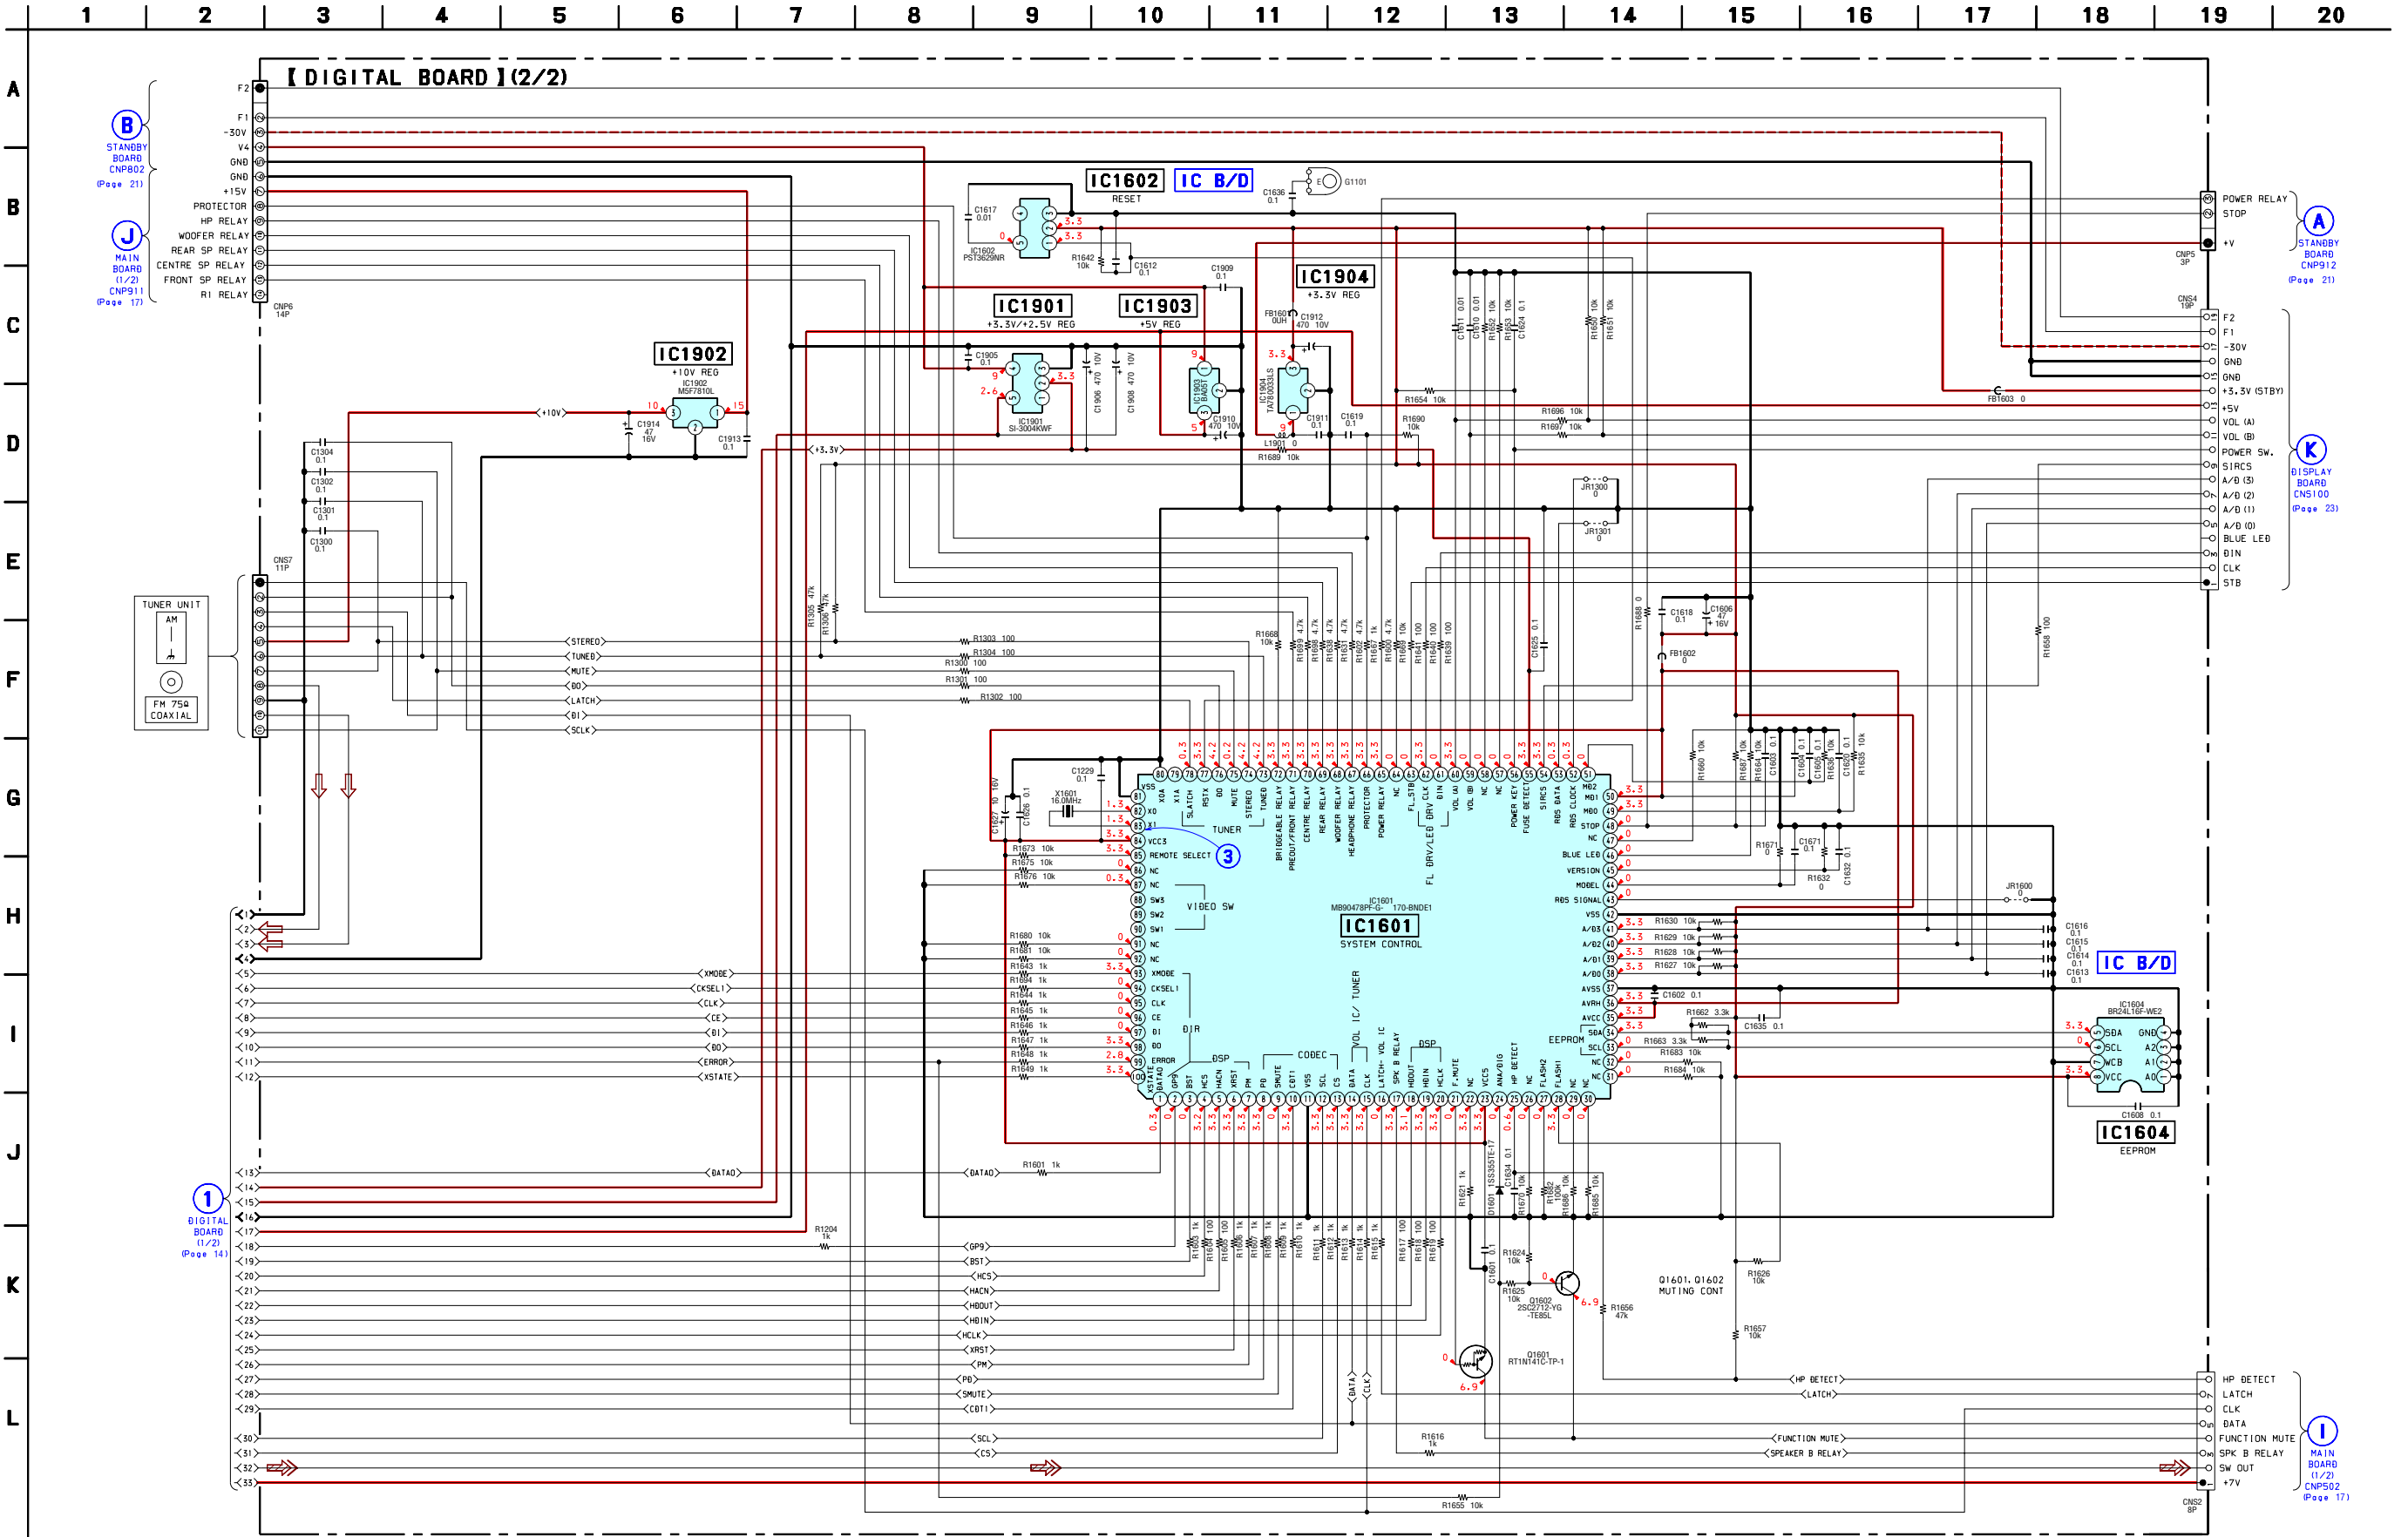








3-10. PRINTED WIRING BOARD – SUB WOOFER BOARD – • See page 9 for Circuit Boards Location.


•  : Uses unleaded solder.

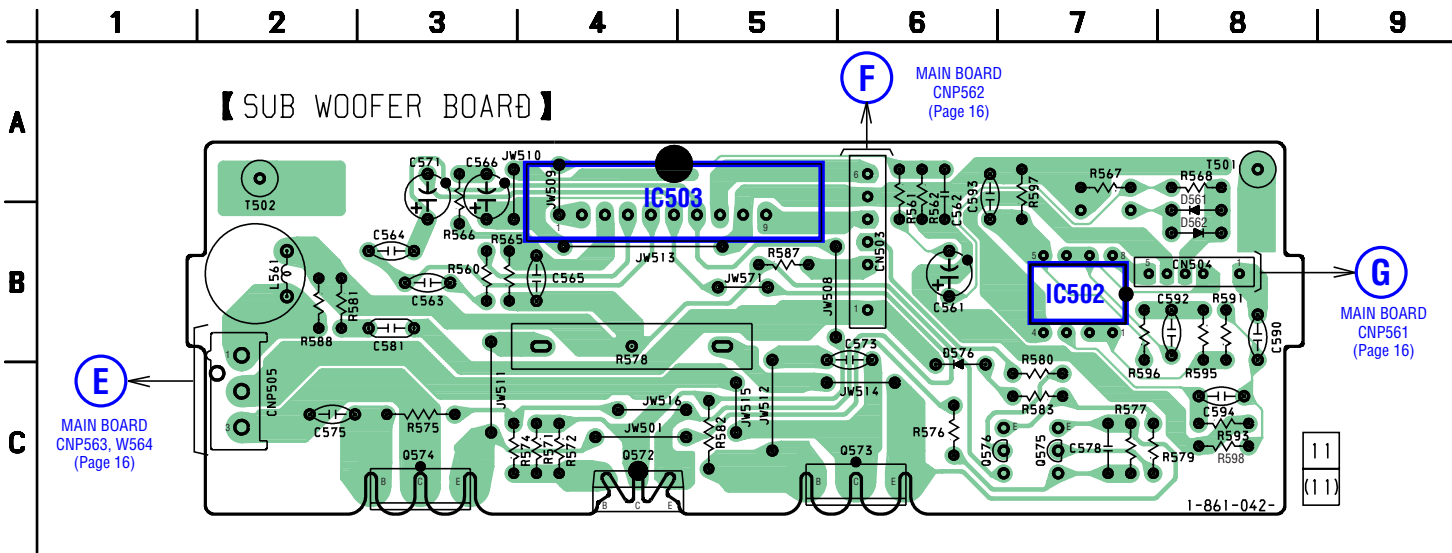


• Semiconductor Location


Ref. No.	Location
D561	B-8
D562	B-8
D576	B-6
IC502	B-7
IC503	A-4
Q572	C-4
Q573	C-6
Q574	C-3
Q575	C-7
Q576	C-6

3-11. SCHEMATIC DIAGRAM – SUB WOOFER BOARD –

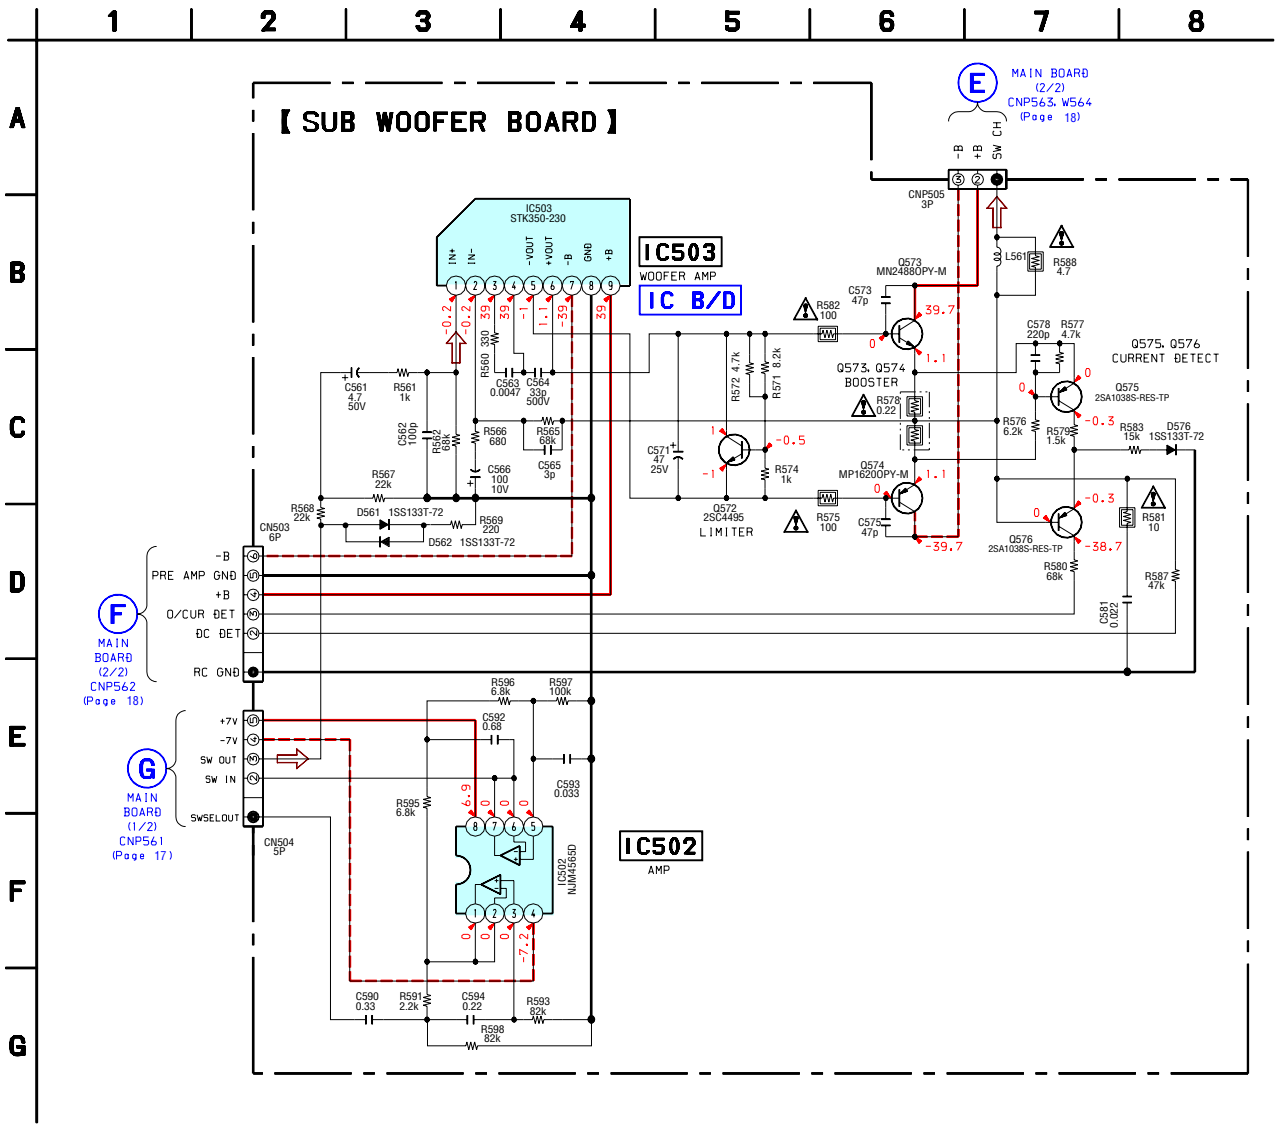

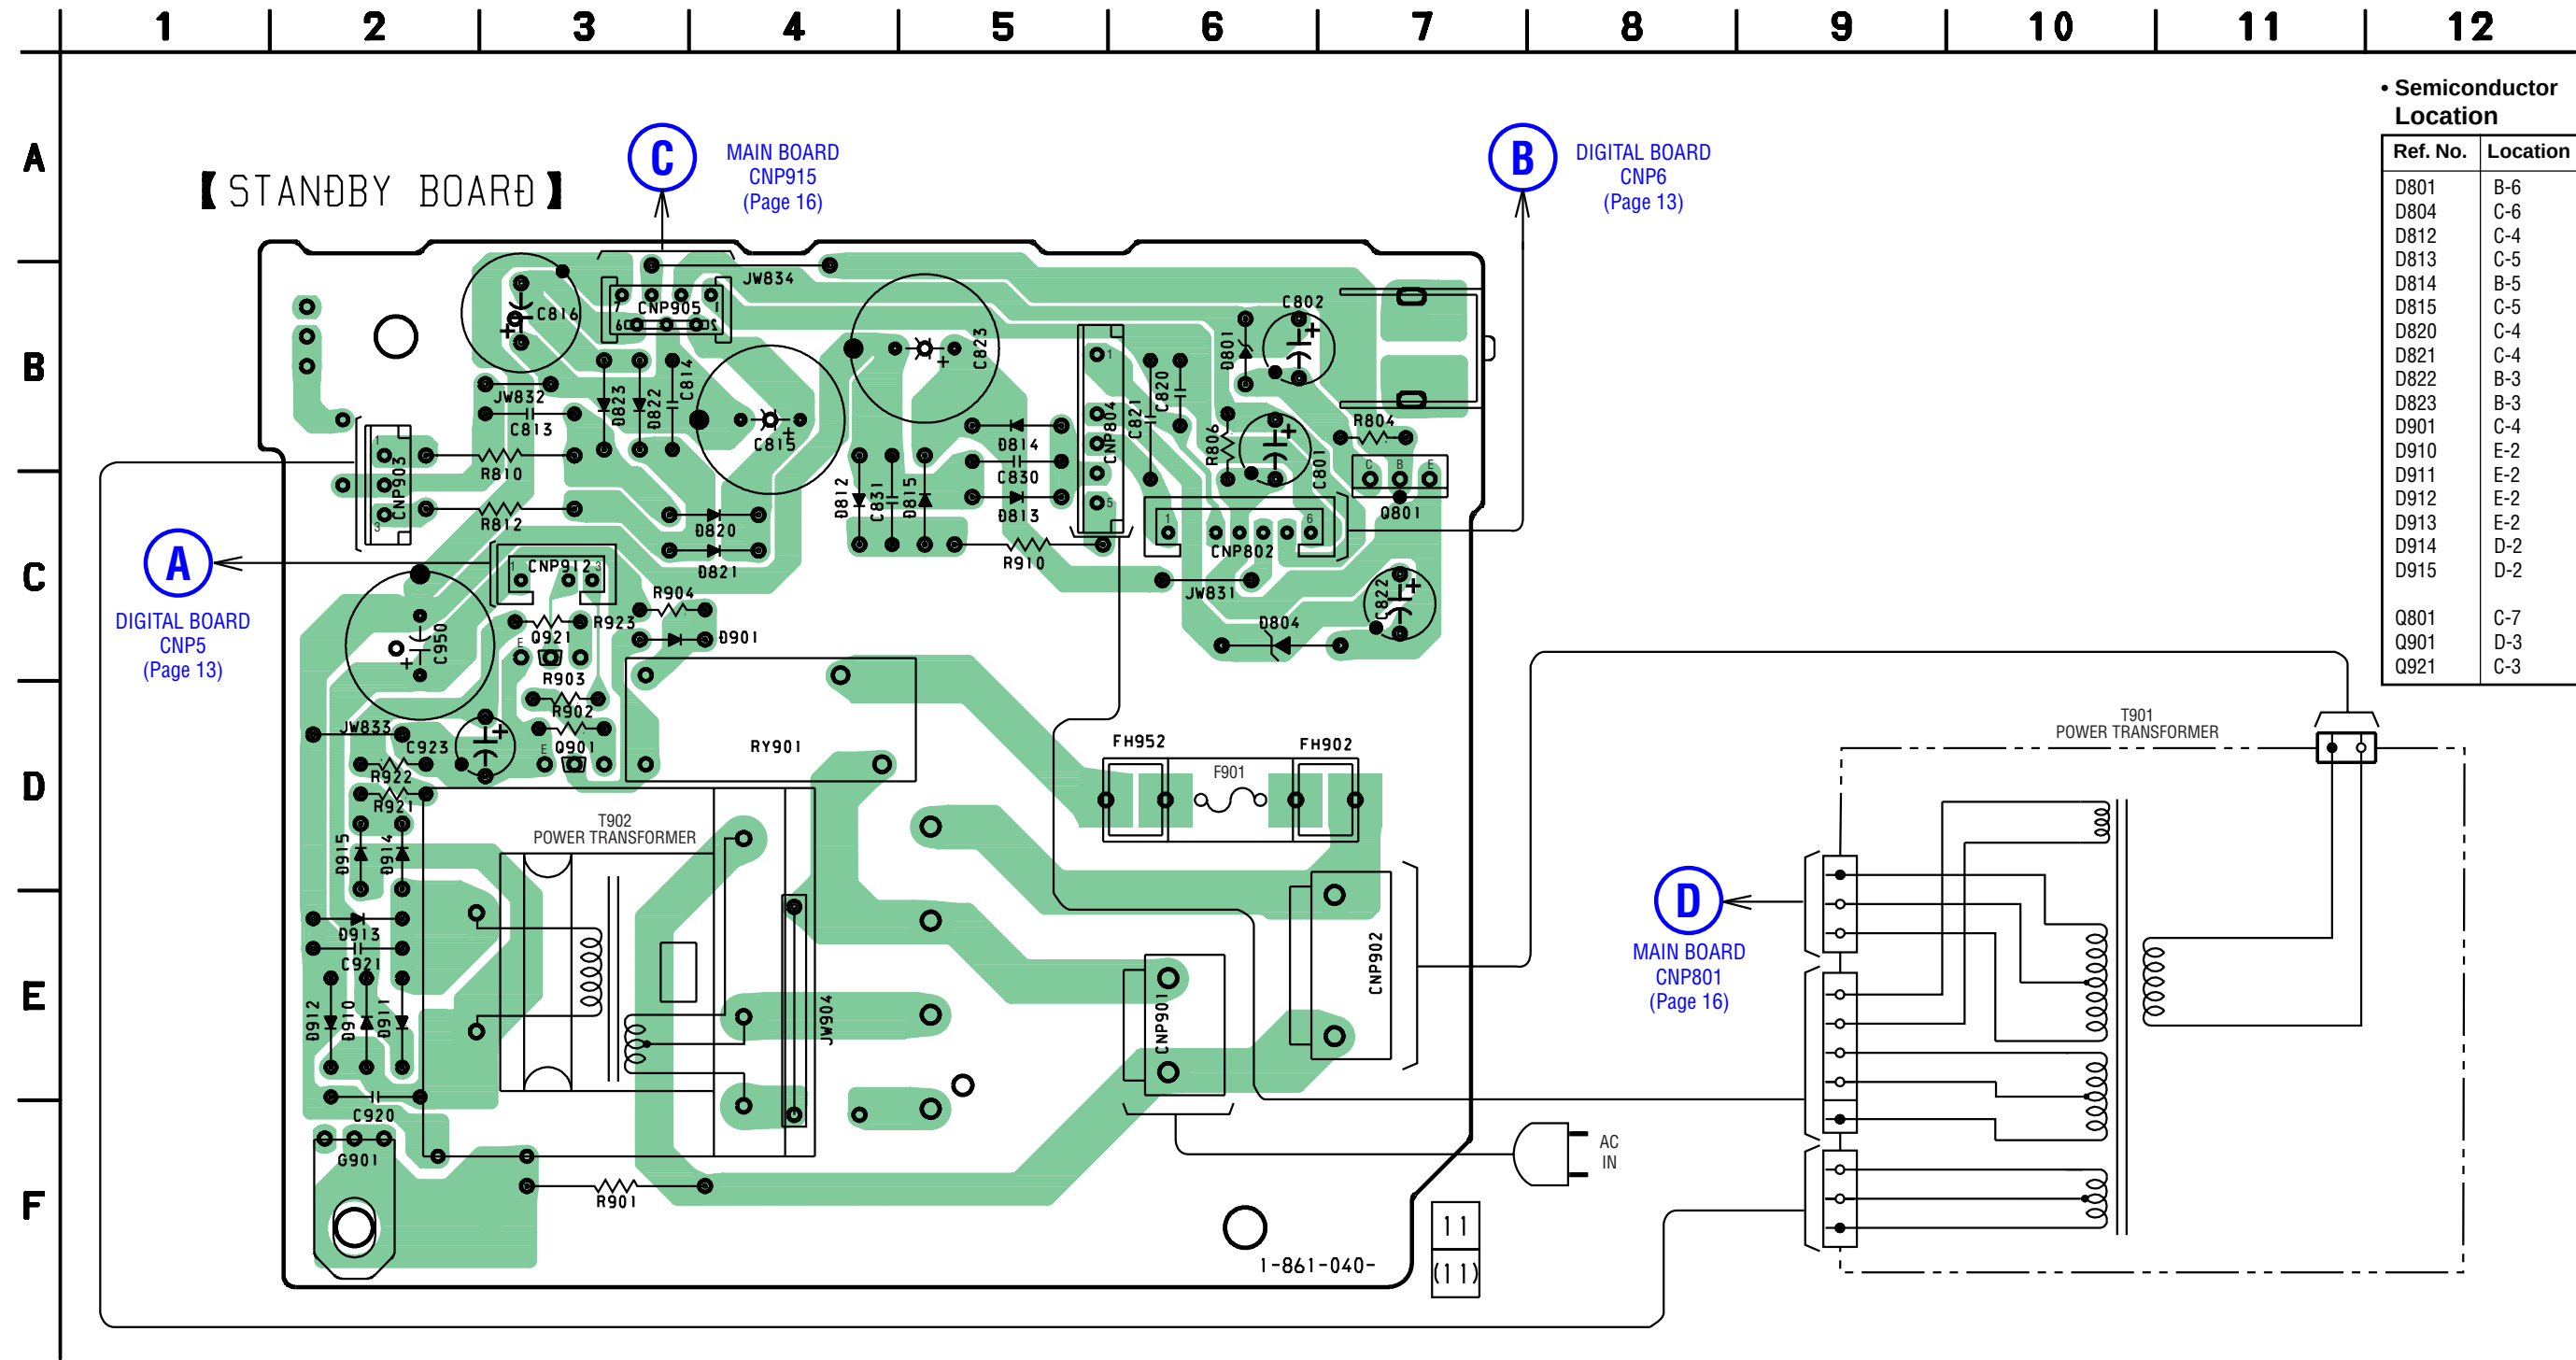


3-13. SCHEMATIC DIAGRAM – POWER SECTION –

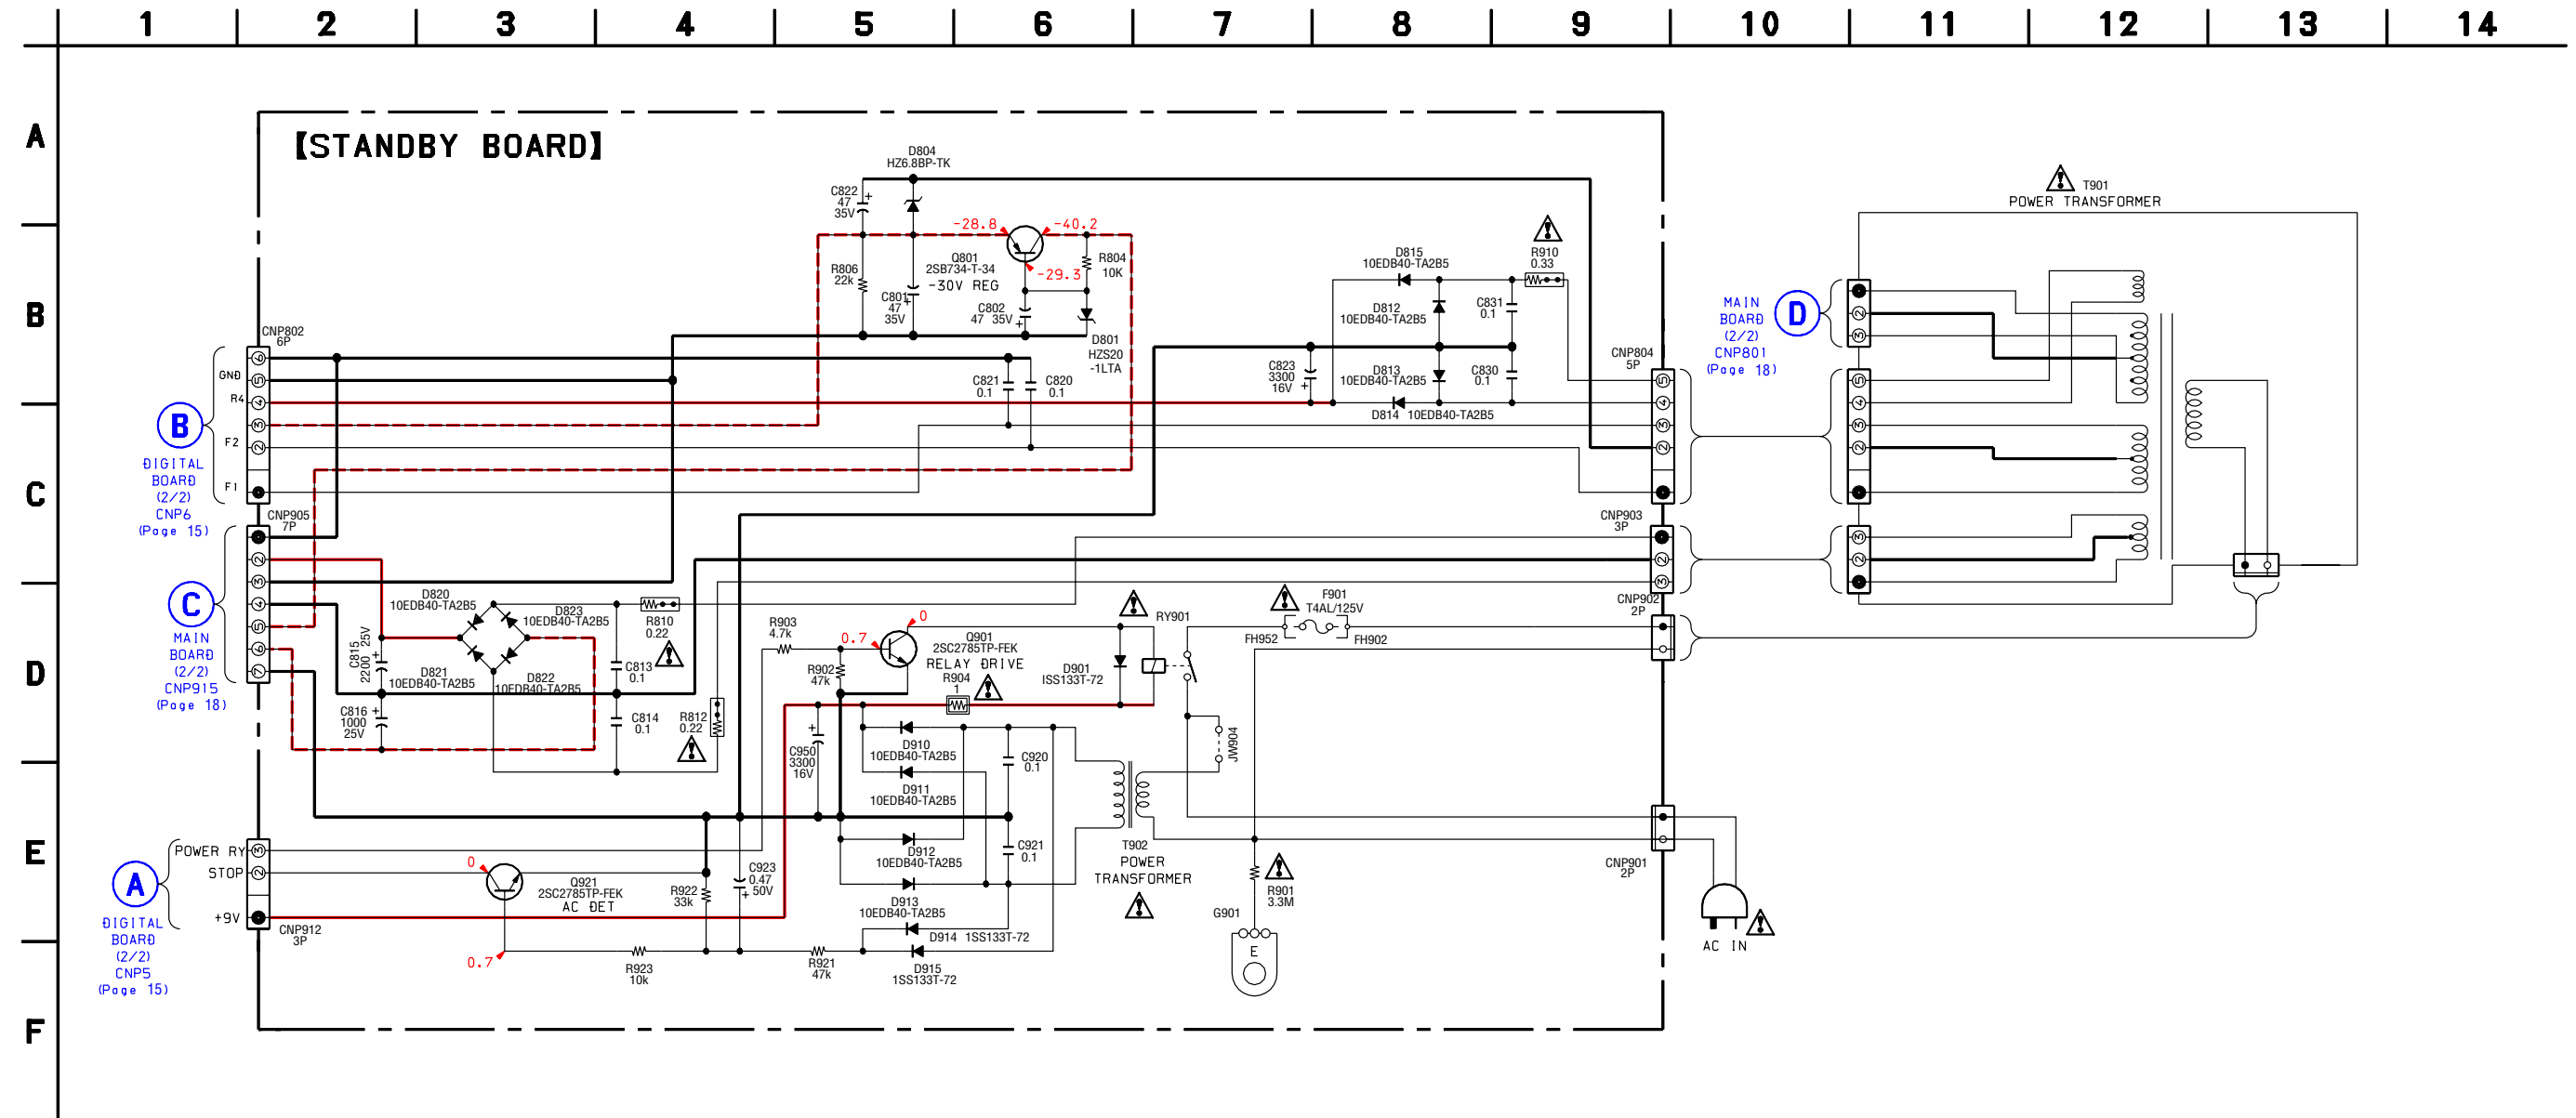




3-15. SCHEMATIC DIAGRAM – FRONT PANEL SECTION –

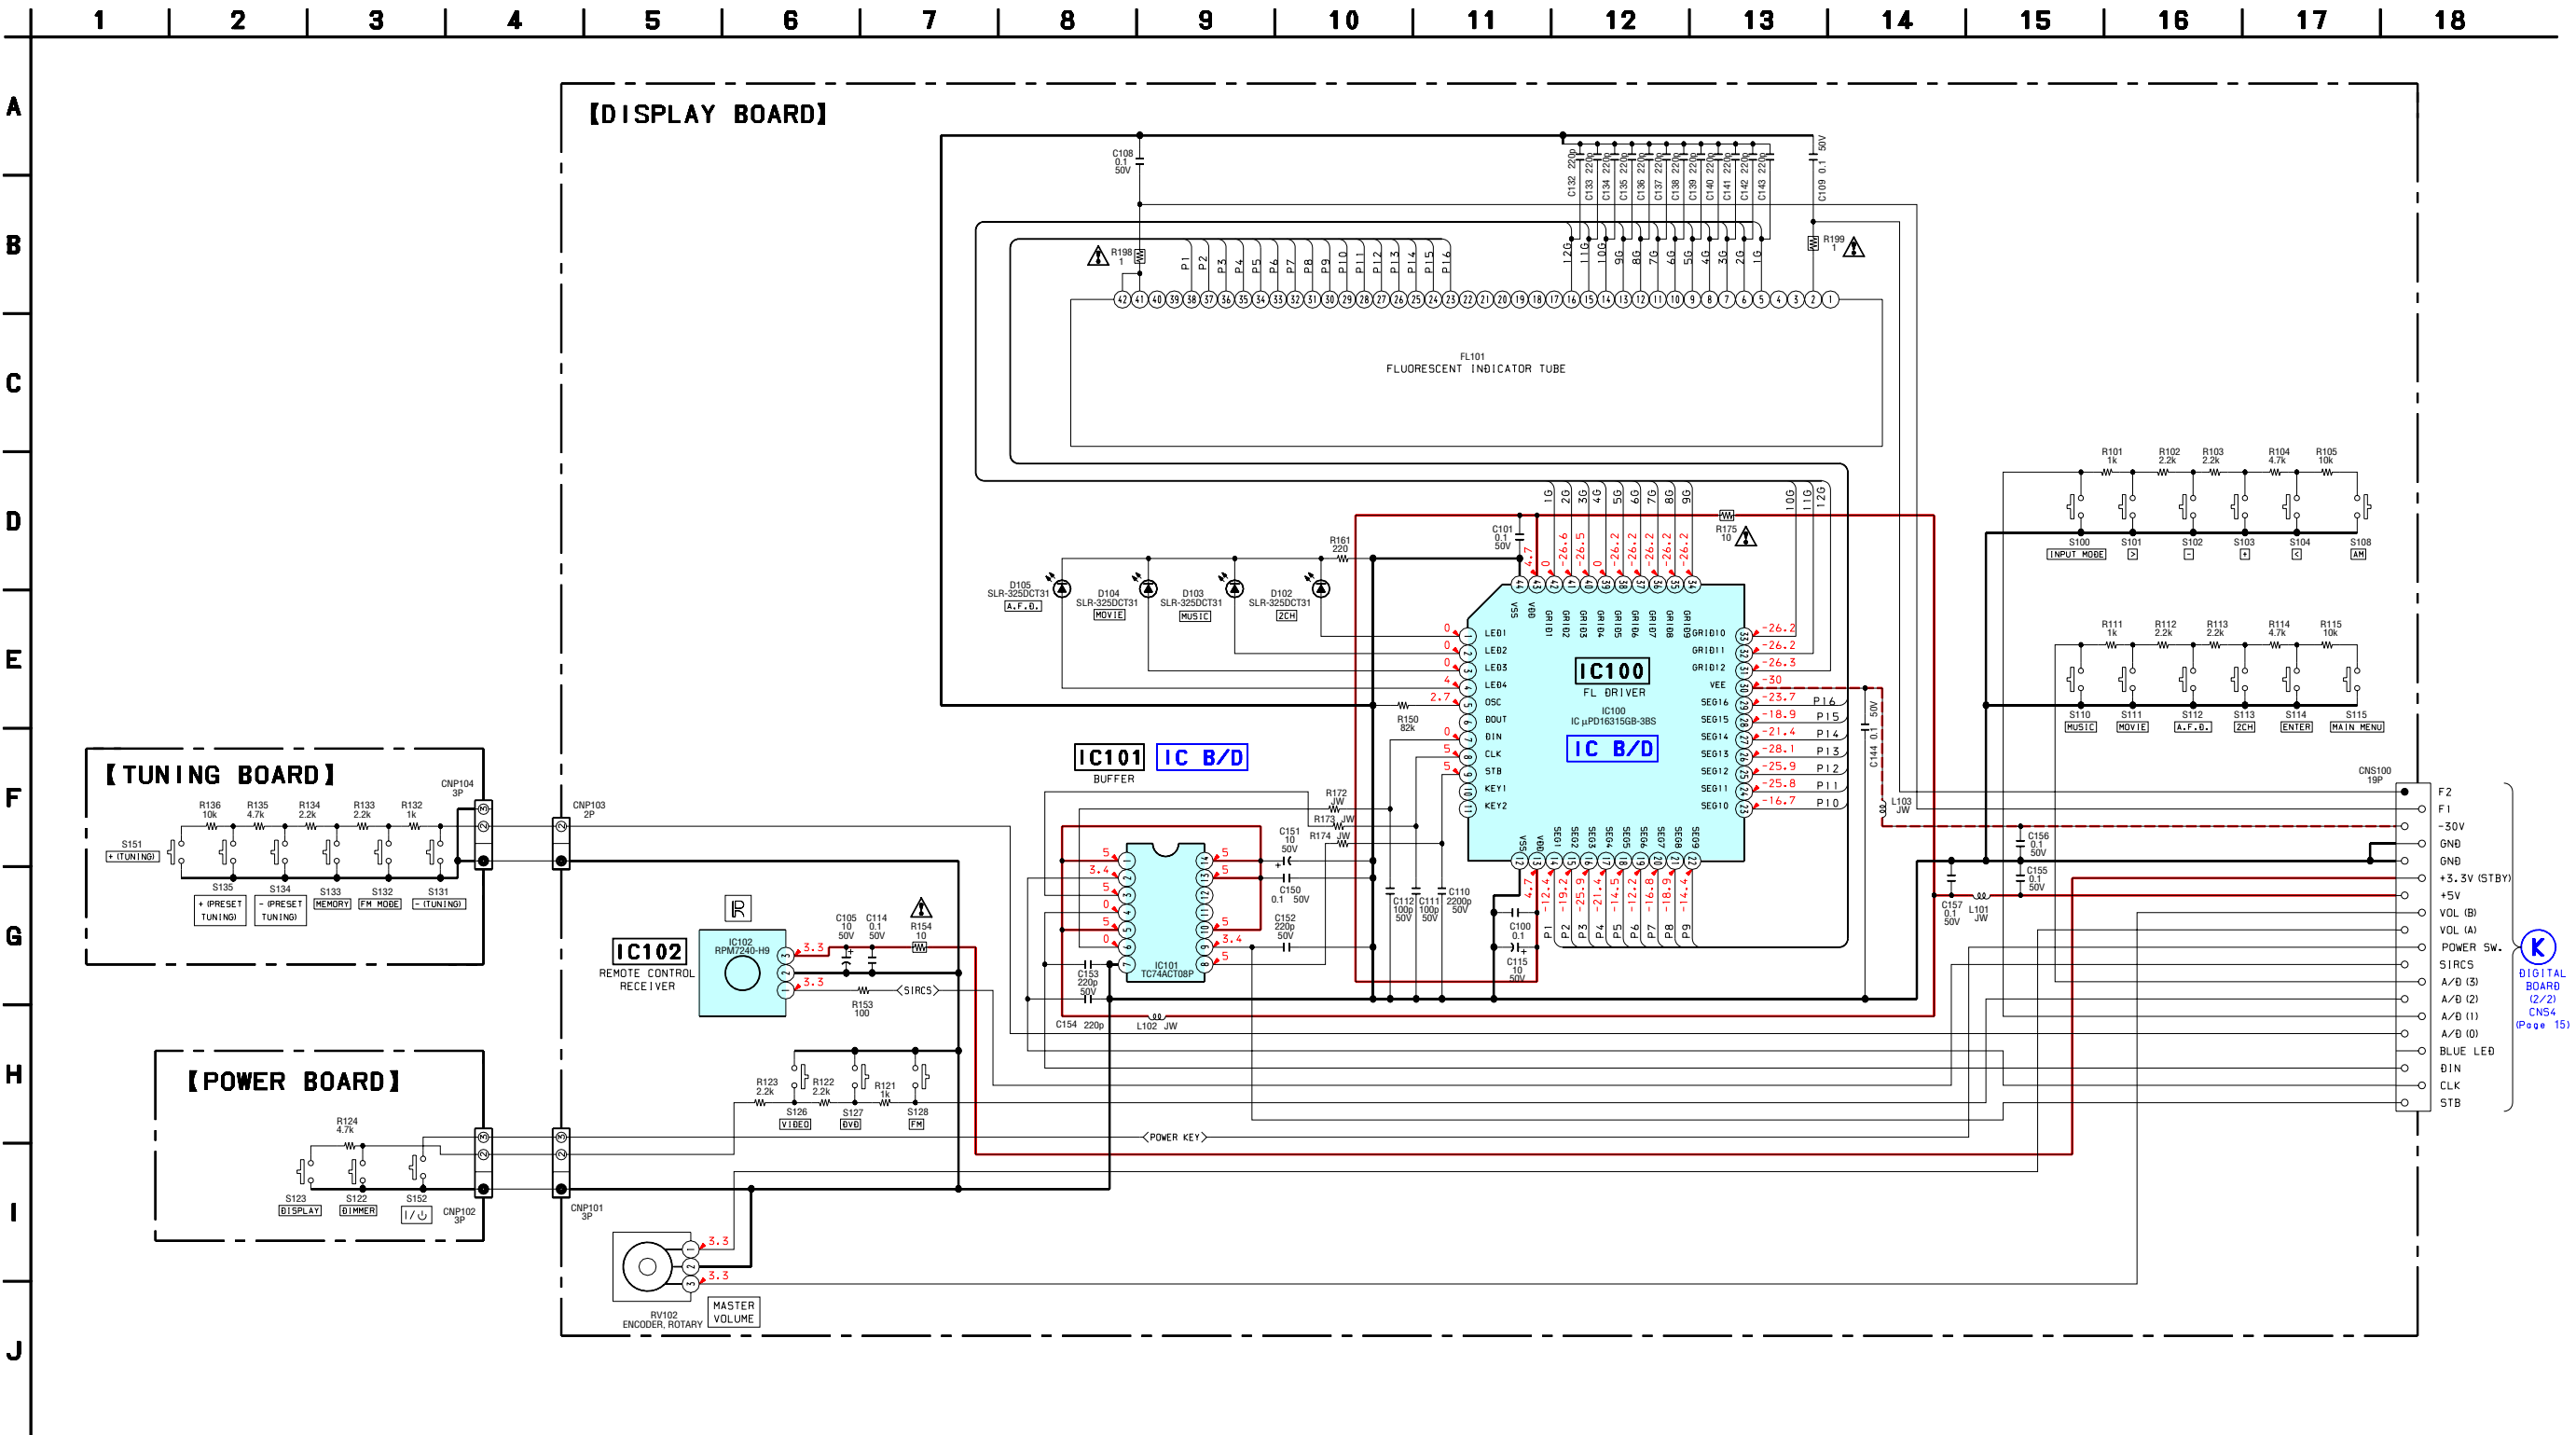


DIGITAL BOARD (2/2)
CNS4
(Page 15)

• IC BLOCK DIAGRAMS


IC1101 LC89056W-E (DIGITAL BOARD)

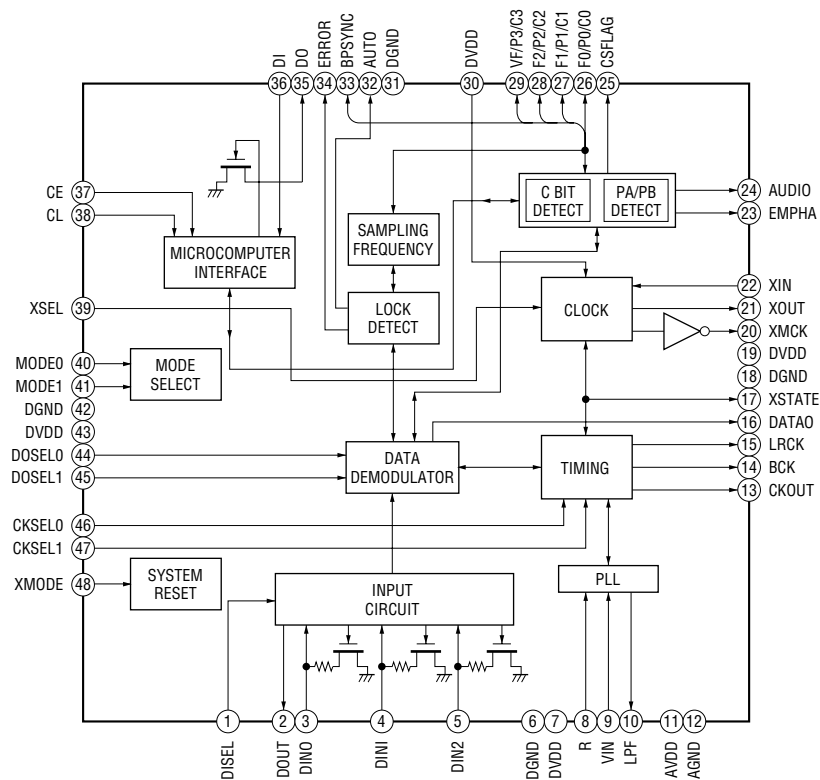


IC1602 PST3629NR (DIGITAL BOARD)

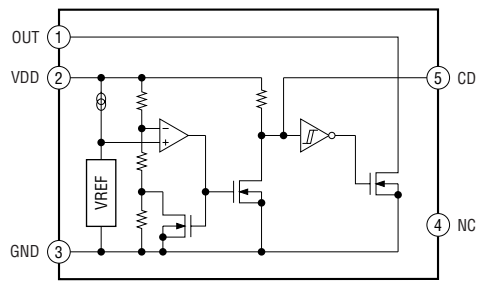


IC1202 IC61LV6416-15TG (DIGITAL BOARD)

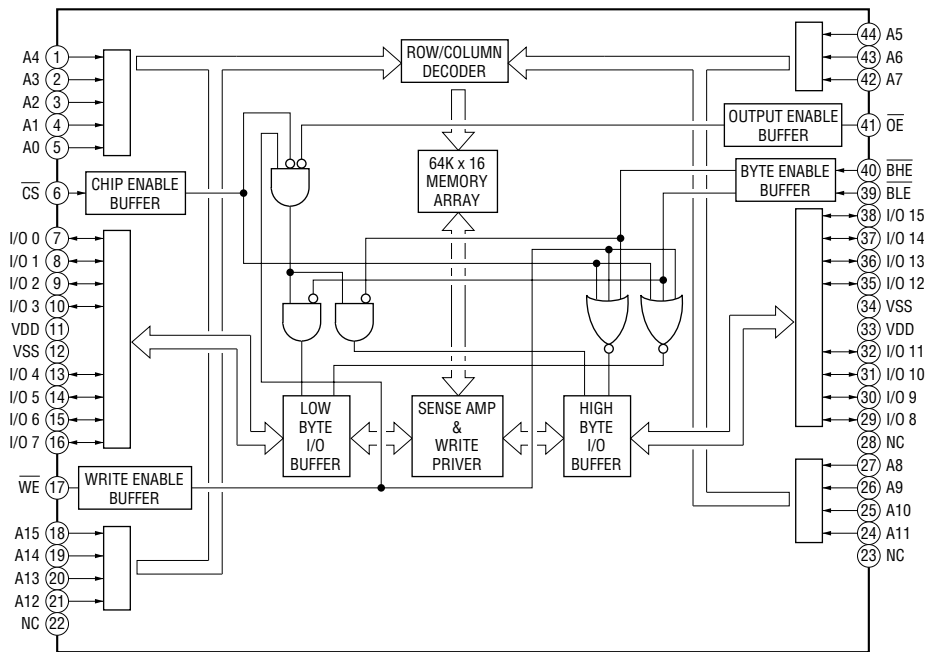


IC1604 BR24L16F-WE2 (DIGITAL BOARD)

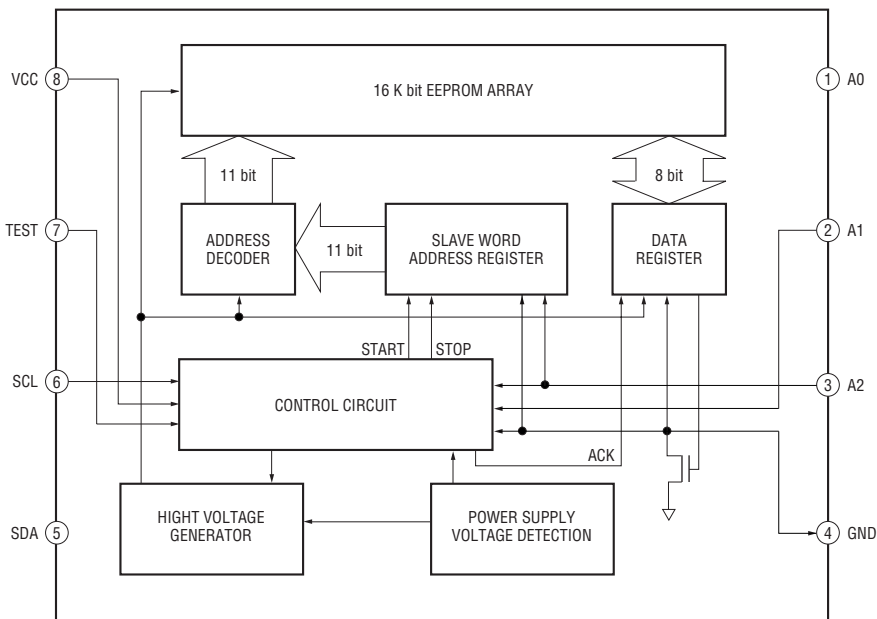


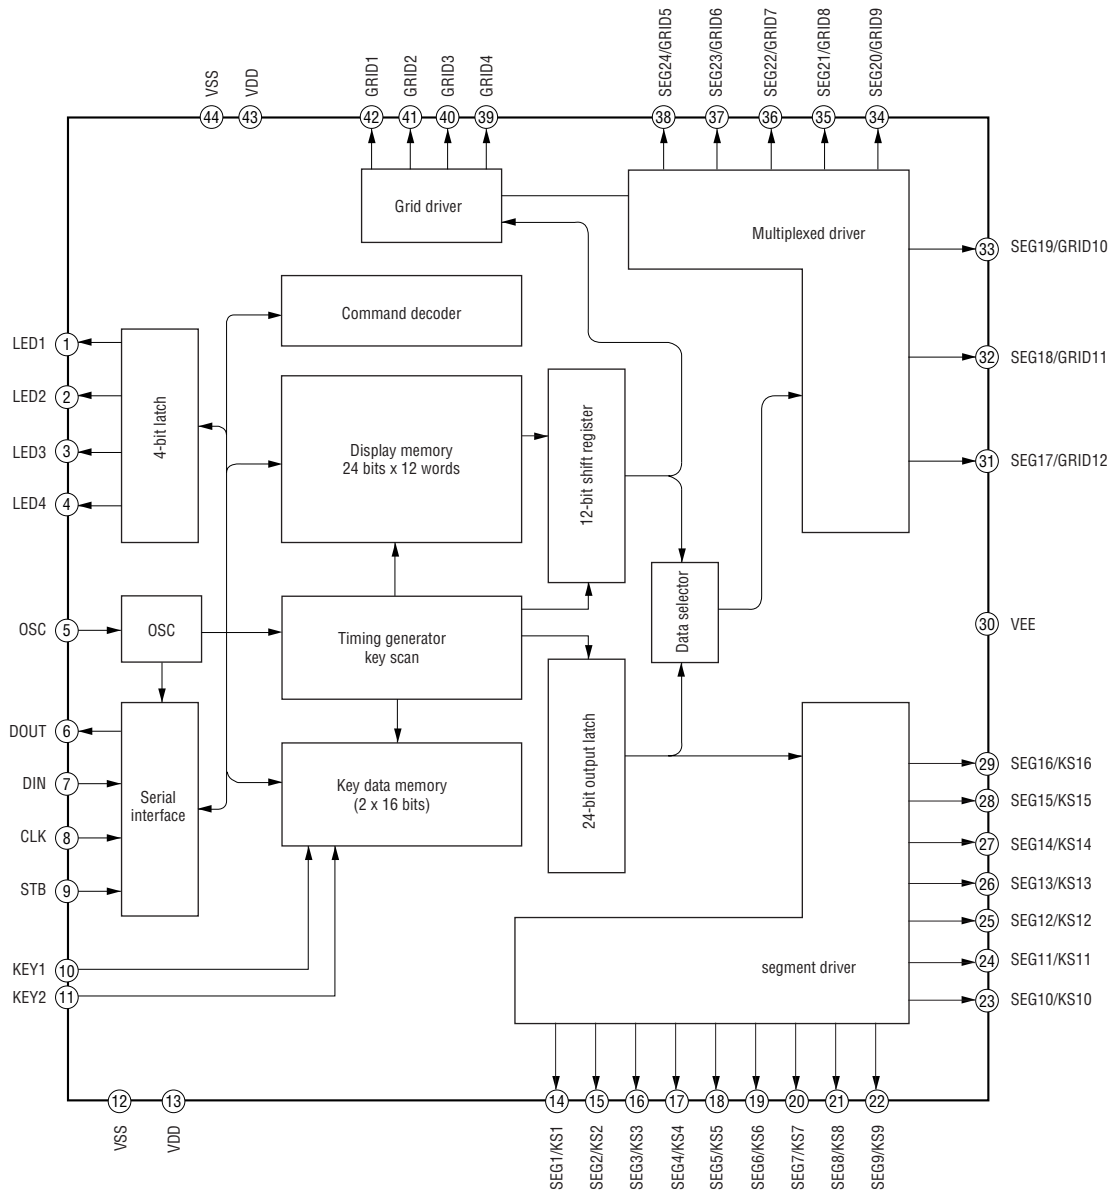IC100 μ PD16315GB-3BS (DISPLAY BOARD)


IC101 TC74ACT08P (DISPLAY BOARD)

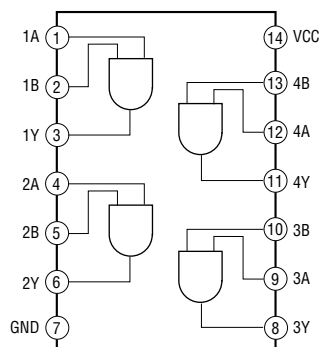


IC201 M61527FP (MAIN BOARD)

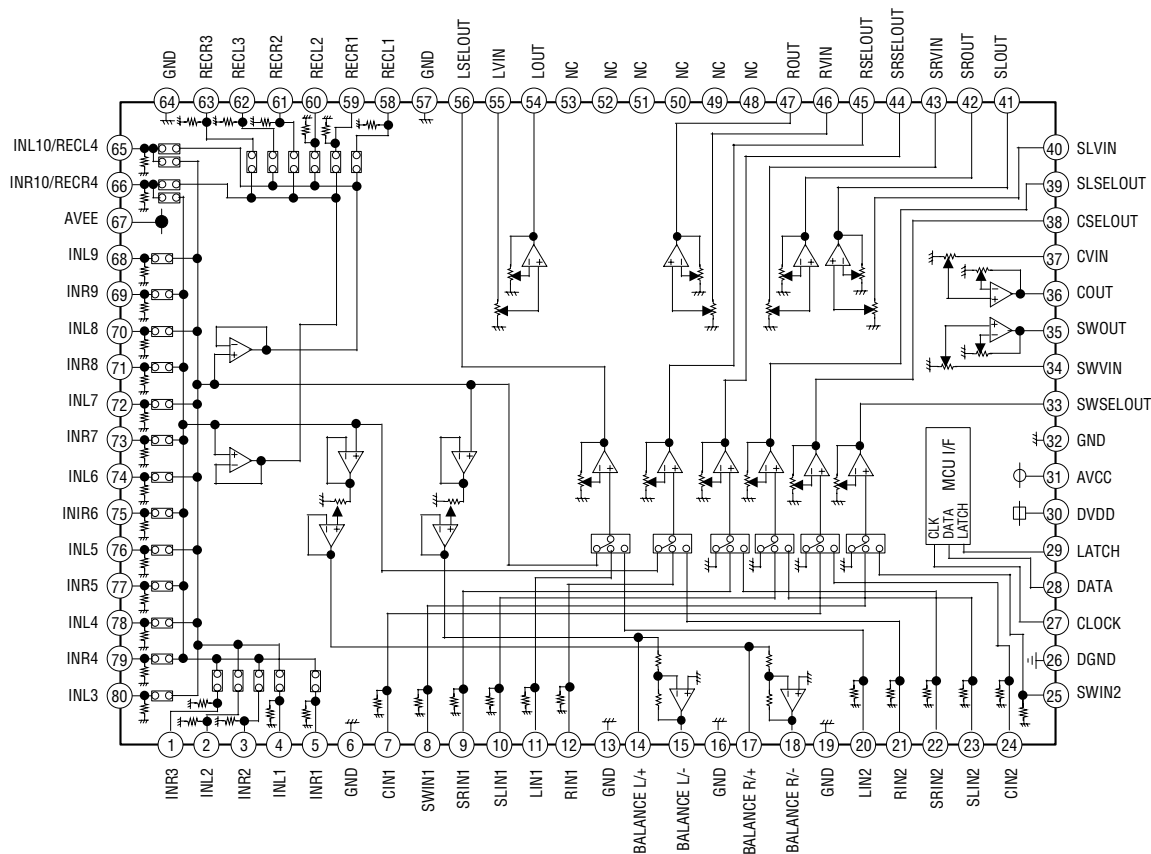

IC501 STK350-230 (MAIN BOARD)
IC503 STK350-230 (SUB WOOFER BOARD)

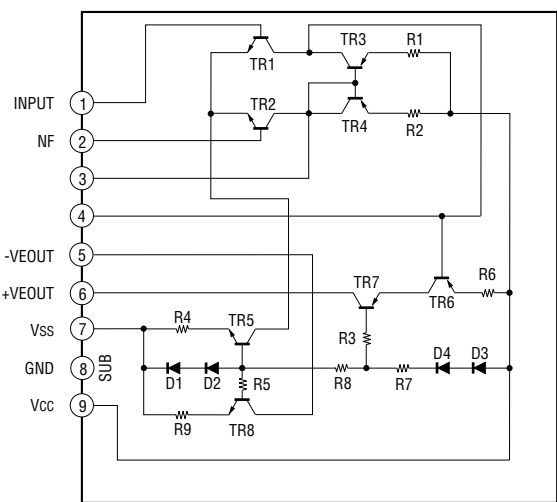

IC701, 702 μ PC2581V-S (MAIN BOARD)

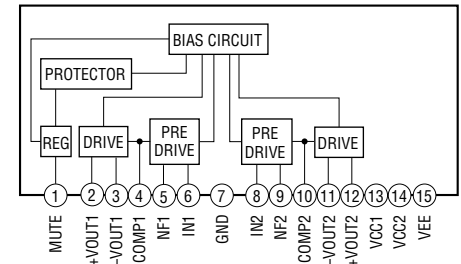

3-16. IC PIN FUNCTION DESCRIPTIONS

• IC1601 MB90478PF-G-170-BNDE1 (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Description
1	DATAO	I	Audio data signal input from DIR
2	GP9	I	GP9 signal input from DSP
3	BST	O	BST signal output to DSP
4	HCS	O	HCS signal output to DSP
5	HACN	I	HACN signal input from DSP
6	XRST	O	Reset signal output to DSP
7	PM	O	PM signal output to DSP
8	PD	O	Power down signal output to AUDIO CODEC
9	SMUTE	O	Muting signal output to AUDIO CODEC
10	CDT1	O	Control data signal output to AUDIO CODEC
11	VSS	—	Ground terminal
12	SCL	O	Clock signal output to AUDIO CODEC
13	CS	O	Chip select signal output to AUDIO CODEC
14	DATA	O	Control data signal output to the sound processor
15	CLK	O	Clock signal output to the sound processor
16	LATCH	O	Latch signal output to the sound processor
17	SPK B RELAY	O	Speaker B relay control signal output
18	HDOUT	I	HDOUT signal input from DSP
19	HDIN	O	HDIN signal output to DSP
20	HCLK	O	Clock signal output to DSP
21	F.MUTE	O	Muting signal output
22	AC MUTE	O	Muting signal output to the power amplifier
23	VCC5	—	Power supply
24	ANA/DIG	O	Muting and error signal output
25	HP DETECT	I	Headphone switch detect signal input
26	NC	—	Short to ground terminal
27	FLASH2	O	Terminal for FLASH programming
28	FLASH1	I/O	Terminal for FLASH programming
29	NC	—	Short to ground terminal
30	NC	—	Short to ground terminal
31	NC	—	Short to ground terminal
32	NC	—	Short to ground terminal
33	SCL	O	Serial clock output
34	SDA	I/O	Serial data input or output
35	AVCC	—	Analog power supply
36	AVRH	I	Analog reference voltage input
37	AVSS	—	Analog ground terminal
38	A/D0	I	Function key push signal input
39	A/D1	I	Function key push signal input
40	A/D2	I	Function key push signal input
41	A/D3	I	Function key push signal input
42	VSS	—	Ground terminal
43	RDS SIGNAL	I	RDS signal detect input
44	MODEL	I	Version setting input (MODEL)
45	VERSION	I	Version setting input (DESTINATION)
46	BLUE LED	—	Short to ground terminal
47	CRYSTAL SEL	—	Short to ground terminal
48	STOP	I	AC off detect signal input
49	MD0	I	Operation mode setting input
50	MD1	I	Operation mode setting input

STR-K665P

Pin No.	Pin Name	I/O	Description
51	MD2	I	Operation mode setting input
52	RDS CLOCK	I	RDS clock signal input (Not used)
53	RDS DATA	I	RDS data signal input (Not used)
54	SIRCS	I	Data signal input from the remote control sensor
55	FUSE DETECT	I	Fuse detect signal input
56	POWER KEY	I	Power switch key detect signal input
57	JOG (B)	I	Jog dial signal input from the rotary encoder
58	JOG (A)	I	Jog dial signal input from the rotary encoder
59	VOL (B)	I	Jog dial signal input from the rotary encoder
60	VOL (A)	I	Jog dial signal input from the rotary encoder
61	DIN	O	Data signal output to the FL tube driver
62	CLK	O	Clock signal output to the FL tube driver
63	FL STB	O	Strobe signal output to the FL tube driver
64	NC	—	Short to ground terminal
65	POWER RELAY	O	Power relay control signal output
66	PROTECTOR	I	Protector status detect signal input
67	HEADPHONE RELAY	O	Headphone relay control signal output
68	WOOFER RELAY	O	Woofer relay control signal output
69	REAR RELAY	O	Rear speaker relay control signal output
70	CENTRE RELAY	O	Centre speaker relay control signal output
71	PREOUT/FRONT RELAY	O	Front speaker relay control signal output
72	R1 RELAY	O	Bridgeable relay control
73	TUNED	I	Tuning a frequency signal input from the tuner
74	STEREO	I	Stereo tuning signal input from the tuner
75	MUTE	O	Muting signal output to the tuner
76	DO	I	Frequency data signal input from the tuner
77	RSTX	I	System reset
78	SLATCH	O	Latch signal output to the tuner
79	X1A	—	Not used
80	X0A	—	Ground terminal
81	VSS	—	Ground terminal
82	X0	—	Connection for a crystal resonator
83	X1	—	Connection for a crystal resonator
84	VCC3	—	Power supply
85	REMOTE SEL	—	Short to ground terminal
86	NC	O	Not used
87	NC	O	Video select control signal output (Not used)
88	SW3	O	Video select control signal output (Not used)
89	SW2	O	Video select control signal output (Not used)
90	SW1	O	Video muting control signal output (Not used)
91	NC	—	Short to ground terminal
92	NC	—	Short to ground terminal
93	XMODE	O	Reset signal output to DIR
94	CKSEL 1	O	CKSEL control signal to DIR
95	CLK	O	Clock signal output to DIR
96	CE	O	Chip enable signal output to DIR
97	DI	O	Data signal output to DIR
98	DO	I	Data signal input from DIR
99	ERROR	I	PLL error muting signal input from DIR
100	XSTATE	I	XSTATE data signal input from DIR


SECTION 4
EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

4-1. FRONT PANEL SECTION

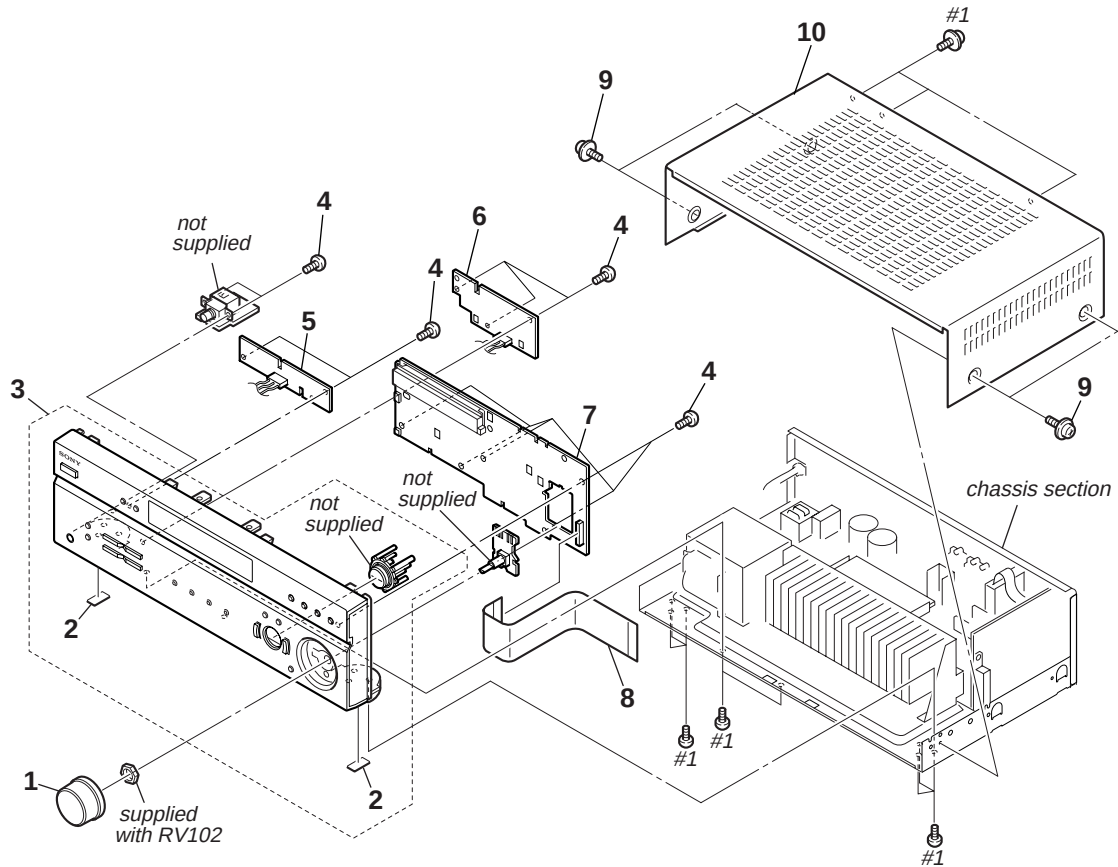

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-232-113-12	Knob (VOL)		7	A-4750-419-A	DISPLAY BOARD, COMPLETE	
2	4-977-358-01	CUSHION		8	1-773-114-11	WIRE (FLAT TYPE) (19 CORE)	
3	X-4956-134-1	FRONT PANEL ASSY		9	4-210-291-11	SCREW (CASE 3 TP2)	
4	4-951-620-01	SCREW (2.6X8), +BVTP		10	4-245-939-21	CASE	
5	1-861-045-11	POWER BOARD		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
6	1-861-044-11	TUNING BOARD					

4-2. CHASSIS SECTION

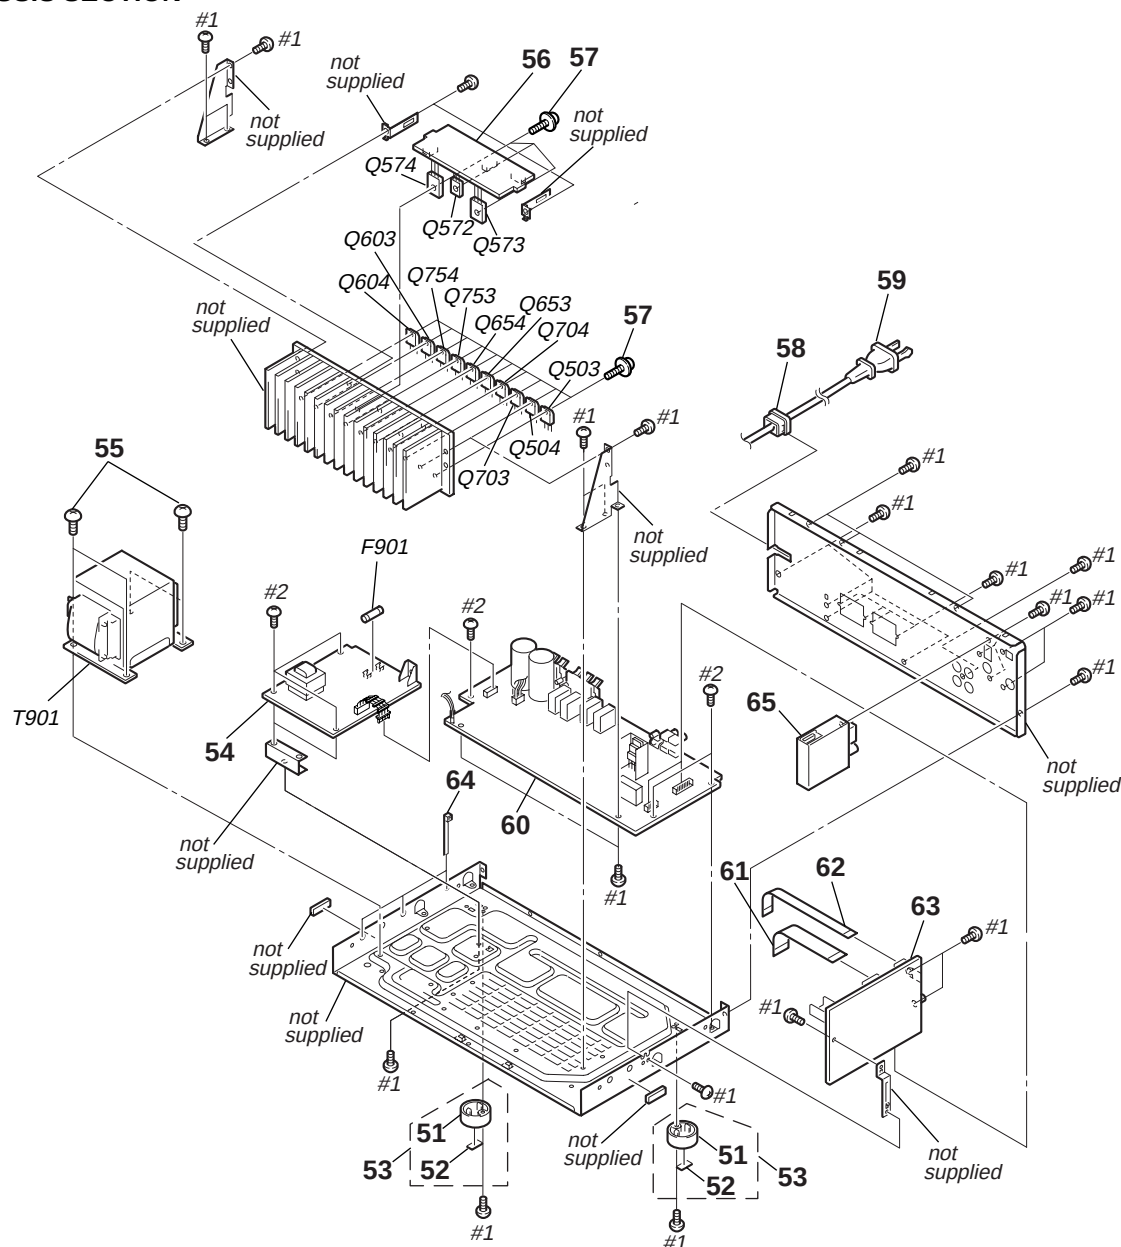

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-232-237-01	FOOT (DIA. 30)		Q503	6-702-390-01	IC MN2488-OPY-MK	
52	4-977-358-01	CUSHION		Q504	6-702-391-01	IC MP1620-OPY-MK	
53	X-4953-448-1	FOOT ASSY		Q572	8-729-026-08	TRANSISTOR 2SC4495	
54	A-4750-608-A	STANDBY BOARD, COMPLETE		Q573	6-702-390-01	IC MN2488-OPY-MK	
55	4-249-675-01	+BV SUMITITE S 4X6 ROUND		Q574	6-702-391-01	IC MP1620-OPY-MK	
56	A-4750-417-A	SUB WOOFER BOARD, COMPLETE		Q603	6-702-390-01	IC MN2488-OPY-MK	
57	3-905-609-01	SCREW (TRANSISTOR)		Q604	6-702-391-01	IC MP1620-OPY-MK	
* 58	3-703-244-00	BUSHING (2104), CORD		Q653	6-702-390-01	IC MN2488-OPY-MK	
△ 59	1-783-820-11	CORD, POWER		Q654	6-702-391-01	IC MP1620-OPY-MK	
60	A-4750-415-A	MAIN BOARD, COMPLETE		Q703	6-702-390-01	IC MN2488-OPY-MK	
61	1-769-937-11	WIRE (FLAT TYPE) (11 CORE)		Q704	6-702-391-01	IC MP1620-OPY-MK	
62	1-575-662-31	WIRE (FLAT TYPE) (5 CORE)		Q753	6-702-390-01	IC MN2488-OPY-MK	
63	A-4750-421-A	DIGITAL A BOARD, COMPLETE		Q754	6-702-391-01	IC MP1620-OPY-MK	
64	3-701-748-00	CLAMP		△ T901	1-443-185-11	POWER TRANSFORMER	
65	1-693-577-21	TUNER		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
△ F901	1-533-452-12	FUSE, GLASS TUBE (DIA. 5) (T4AL/125V)		#2	7-685-645-79	SCREW +BVTP 3X6 TYPE2 N-S	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SECTION 5 ELECTRICAL PARTS LIST

DIGITAL

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- COILS
uH: μ H

- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- CAPACITORS:
uF: μ F
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-4750-421-A	DIGITAL BOARD, COMPLETE *****		C1219	1-164-156-11	CERAMIC CHIP 0.1uF	25V
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3		C1220	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
		< CAPACITOR >		C1229	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1101	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1230	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1102	1-126-204-11	ELECT CHIP 47uF	20% 16V	C1231	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1103	1-164-156-11	CERAMIC CHIP 0.1uF	25V				
C1104	1-162-974-11	CERAMIC CHIP 0.01uF	50V	C1300	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1105	1-126-204-11	ELECT CHIP 47uF	20% 16V	C1301	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1106	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1302	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1107	1-162-974-11	CERAMIC CHIP 0.01uF	50V	C1304	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1108	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1315	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C1109	1-162-918-11	CERAMIC CHIP 18PF	5% 50V				
C1110	1-162-918-11	CERAMIC CHIP 18PF	5% 50V	C1365	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C1111	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1502	1-124-778-00	ELECT CHIP 22uF	20% 6.3V
C1112	1-162-974-11	CERAMIC CHIP 0.01uF	50V	C1505	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1113	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1506	1-128-396-11	ELECT CHIP 470uF	20% 10V
C1114	1-162-905-11	CERAMIC CHIP 1PF	0.25PF 50V	C1507	1-124-779-00	ELECT CHIP 10uF	20% 16V
C1115	1-162-923-11	CERAMIC CHIP 47PF	5% 50V				
C1116	1-110-530-11	ELECT CHIP 1000uF	20% 6.3V	C1508	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1117	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1509	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1118	1-115-416-11	CERAMIC CHIP 0.001uF	5% 25V	C1511	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1119	1-124-778-00	ELECT CHIP 22uF	20% 6.3V	C1512	1-162-995-11	CERAMIC CHIP 0.022uF	50V
C1120	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1513	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1124	1-164-156-11	CERAMIC CHIP 0.1uF	25V				
C1129	1-115-416-11	CERAMIC CHIP 0.001uF	5% 25V	C1514	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C1130	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1515	1-128-396-11	ELECT CHIP 470uF	20% 10V
C1131	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	C1516	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C1201	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1517	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C1202	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1518	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C1203	1-164-156-11	CERAMIC CHIP 0.1uF	25V				
C1204	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1519	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C1205	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1520	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C1206	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1521	1-162-967-11	CERAMIC CHIP 0.0033uF	10% 50V
C1207	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1522	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C1208	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1523	1-115-416-11	CERAMIC CHIP 0.001uF	5% 25V
C1209	1-164-156-11	CERAMIC CHIP 0.1uF	25V				
C1210	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1552	1-124-778-00	ELECT CHIP 22uF	20% 6.3V
C1211	1-128-396-11	ELECT CHIP 470uF	20% 10V	C1601	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1212	1-128-396-11	ELECT CHIP 470uF	20% 10V	C1602	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1213	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1603	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1214	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C1604	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C1216	1-162-927-11	CERAMIC CHIP 100PF	5% 50V				
C1218	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	C1605	1-164-156-11	CERAMIC CHIP 0.1uF	25V
				C1606	1-126-204-11	ELECT CHIP 47uF	20% 16V
				C1608	1-164-156-11	CERAMIC CHIP 0.1uF	25V
				C1610	1-162-974-11	CERAMIC CHIP 0.01uF	50V
				C1611	1-162-974-11	CERAMIC CHIP 0.01uF	50V
				C1612	1-164-156-11	CERAMIC CHIP 0.1uF	25V
				C1613	1-164-156-11	CERAMIC CHIP 0.1uF	25V
				C1614	1-164-156-11	CERAMIC CHIP 0.1uF	25V
				C1615	1-164-156-11	CERAMIC CHIP 0.1uF	25V
				C1616	1-164-156-11	CERAMIC CHIP 0.1uF	25V

DIGITAL

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C1617	1-162-974-11	CERAMIC CHIP 0.01uF	50V	< IC >			
C1618	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1101	8-759-825-15	IC LC89056W-E	
C1619	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1102	8-759-242-70	IC TC7WU04F	
C1620	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1104	6-600-014-01	IC TORX141L	
C1624	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1201	8-759-698-76	IC CXD9617R	
				IC1202	6-704-037-01	IC IC61LV6416-15TG	
C1625	1-164-156-11	CERAMIC CHIP 0.1uF	25V				
C1626	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1501	6-705-627-01	IC AK4626VQ	
C1627	1-124-779-00	ELECT CHIP 10uF	20% 16V	IC1503	8-759-231-53	IC TA7805S	
C1632	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1601	6-803-873-11	IC MB90478PF-G-170-BNDE1	
C1634	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1602	6-701-680-01	IC PST3629NR	
				IC1604	6-704-004-01	IC BR24L16F-WE2	
C1635	1-164-156-11	CERAMIC CHIP 0.1uF	25V				
C1636	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1901	6-701-887-02	IC SI-3004KWF	
C1671	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1902	8-759-604-32	IC M5F7810L	
C1905	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC1903	8-759-450-47	IC BA05T	
C1906	1-128-396-11	ELECT CHIP 470uF	20% 10V	IC1904	6-702-771-01	IC TA78033LS	
C1908	1-128-396-11	ELECT CHIP 470uF	20% 10V	< JACK >			
C1909	1-164-156-11	CERAMIC CHIP 0.1uF	25V	J1101	1-794-972-11	JACK, PIN 1P (DVD IN COAXIAL)	
C1910	1-128-396-11	ELECT CHIP 470uF	20% 10V	< SHORT >			
C1911	1-164-156-11	CERAMIC CHIP 0.1uF	25V	JR1116	1-216-864-11	SHORT CHIP	0
C1912	1-128-396-11	ELECT CHIP 470uF	20% 10V	JR1200	1-216-864-11	SHORT CHIP	0
				JR1300	1-216-864-11	SHORT CHIP	0
C1913	1-164-156-11	CERAMIC CHIP 0.1uF	25V	JR1301	1-216-864-11	SHORT CHIP	0
C1914	1-126-204-11	ELECT CHIP 47uF	20% 16V	JR1600	1-216-864-11	SHORT CHIP	0
< CONNECTOR >				< COIL >			
CNP5	1-779-978-11	PIN, CONNECTOR 3P		L1901	1-216-864-11	SHORT CHIP	0
CNP6	1-784-929-11	PIN, CONNECTOR 14P		< TRANSISTOR >			
< CONNECTOR >				Q1601	8-729-027-43	TRANSISTOR	DTC114EKA-T146
CNS1	1-764-865-41	CONNECTOR, BOARD TO BOARD 13P		Q1602	8-729-230-49	TRANSISTOR	2SC2712-YG
CNS2	1-784-031-41	CONNECTOR, BOARD TO BOARD 8P		< RESISTOR >			
CNS4	1-569-308-11	SOCKET, CONNECTOR (L TYRE) 19P		R1100	1-216-857-11	METAL CHIP	1M 5% 1/10W
CNS7	1-569-060-11	SOCKET, CONNECTOR 11P		R1101	1-216-833-11	METAL CHIP	10K 5% 1/10W
< DIODE >				R1102	1-216-833-11	METAL CHIP	10K 5% 1/10W
D1001	8-719-016-74	DIODE 1SS352		R1103	1-216-809-11	METAL CHIP	100 5% 1/10W
D1101	8-719-988-61	DIODE 1SS355TE-17		R1104	1-216-809-11	METAL CHIP	100 5% 1/10W
D1501	8-719-049-09	DIODE 1SS367-T3SONY		R1105	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
D1502	8-719-049-09	DIODE 1SS367-T3SONY		R1106	1-216-839-11	METAL CHIP	33K 5% 1/10W
D1601	8-719-988-61	DIODE 1SS355TE-17		R1107	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
< FERRITE BEAD >				R1108	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1101	1-469-727-21	FERRITE, EMI (SMD) (2012)		R1109	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1102	1-469-727-21	FERRITE, EMI (SMD) (2012)		R1110	1-216-821-11	METAL CHIP	1K 5% 1/10W
FB1104	1-469-710-21	FERRITE, EMI (SMD) (2012)		R1111	1-216-821-11	METAL CHIP	1K 5% 1/10W
FB1105	1-469-710-21	FERRITE, EMI (SMD) (2012)		R1112	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1201	1-469-727-21	FERRITE, EMI (SMD) (2012)		R1113	1-216-821-11	METAL CHIP	1K 5% 1/10W
FB1202	1-469-727-21	FERRITE, EMI (SMD) (2012)		R1114	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1203	1-469-710-21	FERRITE, EMI (SMD) (2012)		R1115	1-216-833-11	METAL CHIP	10K 5% 1/10W
FB1204	1-469-710-21	FERRITE, EMI (SMD) (2012)		R1116	1-218-285-11	METAL CHIP	75 5% 1/10W
FB1501	1-469-727-21	FERRITE, EMI (SMD) (2012)		R1117	1-216-821-11	METAL CHIP	1K 5% 1/10W
FB1502	1-216-864-11	SHORT CHIP 0		R1118	1-216-854-11	METAL CHIP	560K 5% 1/10W
FB1601	1-469-727-21	FERRITE, EMI (SMD) (2012)		R1119	1-216-837-11	METAL CHIP	22K 5% 1/10W
FB1602	1-216-864-11	SHORT CHIP 0		R1120	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1603	1-216-864-11	SHORT CHIP 0		R1122	1-216-833-11	METAL CHIP	10K 5% 1/10W
< GROUND TERMINAL >							
G1101	1-537-738-21	TERMINAL, GROUND					

DIGITAL

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R1124	1-216-809-11	METAL CHIP	100	5%	1/10W	R1521	1-216-813-11	METAL CHIP	220	5%	1/10W
R1202	1-216-809-11	METAL CHIP	100	5%	1/10W	R1600	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1203	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1601	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R1602	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1204	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1603	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1205	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1206	1-216-809-11	METAL CHIP	100	5%	1/10W	R1604	1-216-809-11	METAL CHIP	100	5%	1/10W
R1207	1-216-809-11	METAL CHIP	100	5%	1/10W	R1605	1-216-809-11	METAL CHIP	100	5%	1/10W
R1208	1-216-809-11	METAL CHIP	100	5%	1/10W	R1606	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R1607	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1209	1-216-809-11	METAL CHIP	100	5%	1/10W	R1608	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1210	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R1212	1-216-813-11	METAL CHIP	220	5%	1/10W	R1609	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1213	1-216-813-11	METAL CHIP	220	5%	1/10W	R1610	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1214	1-216-813-11	METAL CHIP	220	5%	1/10W	R1611	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R1612	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1215	1-216-813-11	METAL CHIP	220	5%	1/10W	R1613	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1216	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1217	1-216-813-11	METAL CHIP	220	5%	1/10W	R1614	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1218	1-216-813-11	METAL CHIP	220	5%	1/10W	R1615	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1219	1-216-813-11	METAL CHIP	220	5%	1/10W	R1616	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R1617	1-216-809-11	METAL CHIP	100	5%	1/10W
R1220	1-216-813-11	METAL CHIP	220	5%	1/10W	R1618	1-216-809-11	METAL CHIP	100	5%	1/10W
R1221	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1222	1-216-813-11	METAL CHIP	220	5%	1/10W	R1619	1-216-809-11	METAL CHIP	100	5%	1/10W
R1224	1-216-813-11	METAL CHIP	220	5%	1/10W	R1621	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1225	1-216-813-11	METAL CHIP	220	5%	1/10W	R1624	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1625	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1226	1-216-813-11	METAL CHIP	220	5%	1/10W	R1626	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1227	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1228	1-216-813-11	METAL CHIP	220	5%	1/10W	R1627	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1229	1-216-813-11	METAL CHIP	220	5%	1/10W	R1628	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1230	1-216-813-11	METAL CHIP	220	5%	1/10W	R1629	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1630	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1231	1-216-813-11	METAL CHIP	220	5%	1/10W	R1631	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1232	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1233	1-216-813-11	METAL CHIP	220	5%	1/10W	R1632	1-216-864-11	SHORT CHIP	0		
R1234	1-216-813-11	METAL CHIP	220	5%	1/10W	R1635	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1235	1-216-813-11	METAL CHIP	220	5%	1/10W	R1636	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1638	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1236	1-216-813-11	METAL CHIP	220	5%	1/10W	R1639	1-216-809-11	METAL CHIP	100	5%	1/10W
R1237	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1238	1-216-813-11	METAL CHIP	220	5%	1/10W	R1640	1-216-809-11	METAL CHIP	100	5%	1/10W
R1239	1-216-813-11	METAL CHIP	220	5%	1/10W	R1641	1-216-809-11	METAL CHIP	100	5%	1/10W
R1240	1-216-813-11	METAL CHIP	220	5%	1/10W	R1642	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1643	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1241	1-216-813-11	METAL CHIP	220	5%	1/10W	R1644	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1242	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1243	1-216-813-11	METAL CHIP	220	5%	1/10W	R1645	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1244	1-216-813-11	METAL CHIP	220	5%	1/10W	R1646	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1300	1-216-809-11	METAL CHIP	100	5%	1/10W	R1647	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R1648	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1301	1-216-809-11	METAL CHIP	100	5%	1/10W	R1649	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1302	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1303	1-216-809-11	METAL CHIP	100	5%	1/10W	R1650	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1304	1-216-809-11	METAL CHIP	100	5%	1/10W	R1651	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1305	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1652	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1653	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1306	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1654	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1315	1-216-864-11	SHORT CHIP	0								
R1365	1-216-864-11	SHORT CHIP	0			R1655	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1508	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1656	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1509	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1657	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1658	1-216-809-11	METAL CHIP	100	5%	1/10W
R1516	1-216-813-11	METAL CHIP	220	5%	1/10W	R1660	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1517	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1518	1-216-813-11	METAL CHIP	220	5%	1/10W	R1662	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1519	1-216-813-11	METAL CHIP	220	5%	1/10W	R1663	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1520	1-216-813-11	METAL CHIP	220	5%	1/10W	R1664	1-216-833-11	METAL CHIP	10K	5%	1/10W

DIGITAL

DISPLAY

Ref. No.	Part No.	Description			Remarks
R1667	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1668	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1669	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1670	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1671	1-216-864-11	SHORT CHIP	0		
R1673	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1675	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1676	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1680	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1681	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1682	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1683	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1684	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1685	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1686	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1687	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1688	1-216-864-11	SHORT CHIP	0		
R1689	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1690	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1694	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1696	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1697	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1698	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1699	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
< VIBRATOR >					
X1101	1-795-126-21	VIBRATOR, CRYSTAL 12.288MHz			
X1201	1-795-363-21	VIBRATOR, CERAMIC 13.5MHz			
X1601	1-767-922-11	VIBRATOR, CERAMIC 16.0MHz			

A-4750-419-A		DISPLAY BOARD, COMPLETE			

< CAPACITOR >					
C100	1-164-159-11	CERAMIC	0.1uF		50V
C101	1-164-159-11	CERAMIC	0.1uF		50V
C105	1-126-795-11	ELECT	10uF	20%	50V
C108	1-164-159-11	CERAMIC	0.1uF		50V
C109	1-164-159-11	CERAMIC	0.1uF		50V
C110	1-128-825-11	CERAMIC	2200PF	5%	50V
C111	1-128-809-11	CERAMIC	100PF	5%	50V
C112	1-128-809-11	CERAMIC	100PF	5%	50V
C114	1-164-159-11	CERAMIC	0.1uF		50V
C115	1-126-795-11	ELECT	10uF	20%	50V
C132	1-128-813-11	CERAMIC	220PF	5%	50V
C133	1-128-813-11	CERAMIC	220PF	5%	50V
C134	1-128-813-11	CERAMIC	220PF	5%	50V
C135	1-128-813-11	CERAMIC	220PF	5%	50V
C136	1-128-813-11	CERAMIC	220PF	5%	50V
C137	1-128-813-11	CERAMIC	220PF	5%	50V
C138	1-128-813-11	CERAMIC	220PF	5%	50V
C139	1-128-813-11	CERAMIC	220PF	5%	50V
C140	1-128-813-11	CERAMIC	220PF	5%	50V
C141	1-128-813-11	CERAMIC	220PF	5%	50V
C142	1-128-813-11	CERAMIC	220PF	5%	50V
C143	1-128-813-11	CERAMIC	220PF	5%	50V
C144	1-164-159-11	CERAMIC	0.1uF		50V

Ref. No.	Part No.	Description	Remarks		
C150	1-164-159-11	CERAMIC	0.1uF		50V
C151	1-126-795-11	ELECT	10uF	20%	50V
C152	1-128-813-11	CERAMIC	220PF	5%	50V
C153	1-128-813-11	CERAMIC	220PF	5%	50V
C154	1-128-813-11	CERAMIC	220PF	5%	50V
C155	1-164-159-11	CERAMIC	0.1uF		50V
C156	1-164-159-11	CERAMIC	0.1uF		50V
C157	1-164-159-11	CERAMIC	0.1uF		50V
< CONNECTOR >					
* CNP101	1-564-518-11	PLUG, CONNECTOR 3P			
* CNP103	1-564-517-11	PLUG, CONNECTOR 2P			
< CONNECTOR >					
CNS100	1-569-323-11	SOCKET, CONNECTOR 19P			
< DIODE >					
D102	8-719-061-96	DIODE SLR-325DCT31 (2CH)			
D103	8-719-061-96	DIODE SLR-325DCT31 (MUSIC)			
D104	8-719-061-96	DIODE SLR-325DCT31 (MOVIE)			
D105	8-719-061-96	DIODE SLR-325DCT31 (A.F.D.)			
< FLUORESCENT INDICATOR TUBE >					
FL101	1-518-966-11	VOCUUM FLUORESENT DISPLAYS			
< IC >					
IC100	8-759-643-83	IC uPD16315GB-3BS			
IC101	8-759-243-51	IC TC74ACT08P			
IC102	6-600-309-01	IC RPM7240-H9 (H)			
< RESISTOR >					
R101	1-247-831-91	CARBON	1K	5%	1/4W
R102	1-249-421-11	CARBON	2.2K	5%	1/4W
R103	1-249-421-11	CARBON	2.2K	5%	1/4W
R104	1-247-847-91	CARBON	4.7K	5%	1/4W
R105	1-249-429-11	CARBON	10K	5%	1/4W
R111	1-247-831-91	CARBON	1K	5%	1/4W
R112	1-249-421-11	CARBON	2.2K	5%	1/4W
R113	1-249-421-11	CARBON	2.2K	5%	1/4W
R114	1-247-847-91	CARBON	4.7K	5%	1/4W
R115	1-249-429-11	CARBON	10K	5%	1/4W
R121	1-247-831-91	CARBON	1K	5%	1/4W
R122	1-249-421-11	CARBON	2.2K	5%	1/4W
R123	1-249-421-11	CARBON	2.2K	5%	1/4W
R150	1-249-440-11	CARBON	82K	5%	1/4W
△ R153	1-247-807-31	CARBON	100	5%	1/4W
R154	1-249-393-11	CARBON	10	5%	1/4W
R161	1-249-409-11	CARBON	220	5%	1/4W
△ R175	1-249-393-11	CARBON	10	5%	1/4W
△ R198	1-249-381-11	CARBON	1	5%	1/4W
△ R199	1-249-381-11	CARBON	1	5%	1/4W
< VARIABLE RESISTOR >					
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)			

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

DISPLAY

HEADPHONE

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description			Remarks		
< SWITCH >				C488	1-164-159-11	CERAMIC	0.1uF		50V		
S100	1-771-410-21	SWITCH, TACTILE (INPUT MODE)		C489	1-128-809-11	CERAMIC	100PF	5%	50V		
				C490	1-128-809-11	CERAMIC	100PF	5%	50V		
				C491	1-126-963-11	ELECT	4.7uF	20%	50V		
				C492	1-126-963-11	ELECT	4.7uF	20%	50V		
S101	1-771-410-21	SWITCH, TACTILE (>)									
S102	1-771-410-21	SWITCH, TACTILE (-)									
S103	1-771-410-21	SWITCH, TACTILE (+)									
S104	1-771-410-21	SWITCH, TACTILE (<)		C493	1-126-963-11	ELECT	4.7uF	20%	50V		
				C494	1-126-963-11	ELECT	4.7uF	20%	50V		
S108	1-771-410-21	SWITCH, TACTILE (AM)		C495	1-126-963-11	ELECT	4.7uF	20%	50V		
S110	1-771-410-21	SWITCH, TACTILE (MUSIC)		C496	1-126-963-11	ELECT	4.7uF	20%	50V		
S111	1-771-410-21	SWITCH, TACTILE (MOVIE)		C497	1-128-809-11	CERAMIC	100PF	5%	50V		
S112	1-771-410-21	SWITCH, TACTILE (A.F.D.)									
S113	1-771-410-21	SWITCH, TACTILE (2CH)		C501	1-126-963-11	ELECT	4.7uF	20%	50V		
				C503	1-104-658-91	ELECT	100uF	20%	10V		
S114	1-771-410-21	SWITCH, TACTILE (ENTER)		C504	1-107-583-11	CERAMIC	3PF	0.25PF	500V		
S115	1-771-410-21	SWITCH, TACTILE (MAIN MENU)		C505	1-106-359-00	MYLAR	0.0047uF	5%	50V		
S126	1-771-410-21	SWITCH, TACTILE (VIDEO)		C506	1-102-233-00	CERAMIC	33PF	10%	500V		
S127	1-771-410-21	SWITCH, TACTILE (DVD)									
S128	1-771-410-21	SWITCH, TACTILE (FM)		C507	1-128-809-11	CERAMIC	100PF	5%	50V		
*****				C508	1-128-809-11	CERAMIC	100PF	5%	50V		
				C510	1-126-947-11	ELECT	47uF	20%	35V		
HEADPHONE BOARD				C511	1-136-157-00	FILM	0.022uF	5%	50V		
*****				C516	1-162-815-11	CERAMIC	47PF	5%	500V		
< CONNECTOR >				C517	1-162-815-11	CERAMIC	47PF	5%	500V		
CNP791	1-691-766-11	PLUG (MICRO CONNECTOR) 4P		C519	1-128-813-11	CERAMIC	220PF	5%	50V		
				C540	1-126-964-11	ELECT	10uF	20%	50V		
				C541	1-127-876-11	CERAMIC	0.01uF	10%	50V		
				C601	1-126-963-11	ELECT	4.7uF	20%	50V		
< JACK >											
J791	1-815-314-21	JACK (PHONES)		C603	1-104-658-91	ELECT	100uF	20%	10V		
*****				C604	1-107-583-11	CERAMIC	3PF	0.25PF	500V		
				C605	1-102-233-00	CERAMIC	33PF	10%	500V		
A-4750-415-A	MAIN BOARD, COMPLETE			C606	1-128-813-11	CERAMIC	220PF	5%	50V		
	*****			C607	1-128-809-11	CERAMIC	100PF	5%	50V		
7-685-646-79	SCREW +BVTP	3X8 TYPE2 IT-3		C610	1-126-947-11	ELECT	47uF	20%	35V		
< CAPACITOR >				C611	1-136-157-00	FILM	0.022uF	5%	50V		
C371	1-161-494-00	CERAMIC	0.022uF	25V	C619	1-128-813-11	CERAMIC	220PF	5%	50V	
C372	1-161-494-00	CERAMIC	0.022uF	25V	C620	1-162-815-11	CERAMIC	47PF	5%	500V	
C373	1-161-494-00	CERAMIC	0.022uF	25V	C621	1-162-815-11	CERAMIC	47PF	5%	500V	
C374	1-164-159-11	CERAMIC	0.1uF	50V							
C375	1-161-494-00	CERAMIC	0.022uF	25V	C640	1-126-964-11	ELECT	10uF	20%	50V	
C376	1-161-494-00	CERAMIC	0.022uF	25V	C642	1-127-876-11	CERAMIC	0.01uF	10%	50V	
C413	1-126-961-11	ELECT	2.2uF	20%	50V	C643	1-128-579-11	ELECT	2.2uF	20%	100V
C414	1-126-961-11	ELECT	2.2uF	20%	50V	C651	1-126-963-11	ELECT	4.7uF	20%	50V
C415	1-126-961-11	ELECT	2.2uF	20%	50V	C653	1-104-658-91	ELECT	100uF	20%	10V
C416	1-126-961-11	ELECT	2.2uF	20%	50V						
C417	1-126-961-11	ELECT	2.2uF	20%	50V	C654	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C418	1-126-961-11	ELECT	2.2uF	20%	50V	C655	1-102-233-00	CERAMIC	33PF	10%	500V
C419	1-126-961-11	ELECT	2.2uF	20%	50V	C656	1-128-813-11	CERAMIC	220PF	5%	50V
C433	1-126-961-11	ELECT	2.2uF	20%	50V	C657	1-128-809-11	CERAMIC	100PF	5%	50V
C464	1-164-159-11	CERAMIC	0.1uF	50V	C660	1-126-947-11	ELECT	47uF	20%	35V	
C465	1-126-934-11	ELECT	220uF	20%	16V	C661	1-136-157-00	FILM	0.022uF	5%	50V
C467	1-164-159-11	CERAMIC	0.1uF	50V	C666	1-162-815-11	CERAMIC	47PF	5%	500V	
C475	1-104-658-91	ELECT	100uF	20%	10V	C669	1-162-815-11	CERAMIC	47PF	5%	500V
C481	1-126-963-11	ELECT	4.7uF	20%	50V	C670	1-128-813-11	CERAMIC	220PF	5%	50V
C482	1-126-963-11	ELECT	4.7uF	20%	50V	C680	1-126-964-11	ELECT	10uF	20%	50V
C483	1-126-963-11	ELECT	4.7uF	20%	50V	C681	1-127-876-11	CERAMIC	0.01uF	10%	50V
C484	1-126-963-11	ELECT	4.7uF	20%	50V	C691	1-164-159-11	CERAMIC	0.1uF		50V
C485	1-126-964-11	ELECT	10uF	20%	50V	C700	1-164-159-11	CERAMIC	0.1uF		50V
C486	1-126-963-11	ELECT	4.7uF	20%	50V	C701	1-126-963-11	ELECT	4.7uF	20%	50V
C487	1-126-964-11	ELECT	10uF	20%	50V	C703	1-104-658-91	ELECT	100uF	20%	10V
						C704	1-107-583-11	CERAMIC	3PF	0.25PF	500V
						C705	1-102-233-00	CERAMIC	33PF	10%	500V
						C706	1-128-813-11	CERAMIC	220PF	5%	50V

STR-K665P

Ver 1.1

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C707	1-128-809-11	CERAMIC	100PF 5% 50V	D710	8-719-991-33	DIODE 1SS133T-77	
C710	1-126-947-11	ELECT	47uF 20% 35V	D721	8-719-991-33	DIODE 1SS133T-77	
C711	1-136-157-00	FILM	0.022uF 5% 50V	D722	8-719-991-33	DIODE 1SS133T-77	
C716	1-162-815-11	CERAMIC	47PF 5% 500V	D731	8-719-991-33	DIODE 1SS133T-77	
C717	1-162-815-11	CERAMIC	47PF 5% 500V	D732	8-719-991-33	DIODE 1SS133T-77	
C720	1-128-813-11	CERAMIC	220PF 5% 50V	D733	8-719-991-33	DIODE 1SS133T-77	
C721	1-126-934-11	ELECT	220uF 20% 16V	D734	8-719-991-33	DIODE 1SS133T-77	
C722	1-126-964-11	ELECT	10uF 20% 50V	D740	8-719-991-33	DIODE 1SS133T-77	
C732	1-128-582-11	ELECT	10uF 20% 100V	D750	8-719-991-33	DIODE 1SS133T-77	
C733	1-128-582-11	ELECT	10uF 20% 100V	D765	8-719-991-33	DIODE 1SS133T-77	
C740	1-126-964-11	ELECT	10uF 20% 50V	D791	8-719-991-33	DIODE 1SS133T-77	
C742	1-127-876-11	CERAMIC	0.01uF 10% 50V	D802	8-719-072-05	DIODE RBV-602LF-A	
C744	1-128-579-11	ELECT	2.2uF 20% 100V	D851	8-719-991-33	DIODE 1SS133T-77	
C750	1-126-964-11	ELECT	10uF 20% 50V	D896	8-719-043-76	DIODE AK04V0	
C751	1-126-963-11	ELECT	4.7uF 20% 50V	< IC >			
C752	1-127-876-11	CERAMIC	0.01uF 10% 50V	IC201	6-703-501-01	IC M61527FP	
C753	1-104-658-91	ELECT	100uF 20% 10V	IC501	8-749-011-16	IC STK350-230	
C754	1-107-583-11	CERAMIC	3PF 0.25PF 500V	IC601	8-759-167-88	IC NJM4565D	
C755	1-102-233-00	CERAMIC	33PF 10% 500V	IC701	6-700-943-01	IC uPC2581V-S	
C756	1-128-813-11	CERAMIC	220PF 5% 50V	IC702	6-700-943-01	IC uPC2581V-S	
C757	1-128-809-11	CERAMIC	100PF 5% 50V	IC801	8-759-071-48	IC TA7807S	
C760	1-126-947-11	ELECT	47uF 20% 35V	IC802	8-759-604-95	IC M5F79M07L	
C761	1-136-157-00	FILM	0.022uF 5% 50V	< JACK >			
C766	1-162-815-11	CERAMIC	47PF 5% 500V	J403	1-794-981-11	JACK, PIN 4P (VIDEO/DVD)	
C767	1-162-815-11	CERAMIC	47PF 5% 500V	< COIL >			
C770	1-128-813-11	CERAMIC	220PF 5% 50V	L521	1-420-872-52	COIL, AIR-CORE	
C803	1-165-498-11	ELECT	4700uF 20% 63V	L601	1-420-872-52	COIL, AIR-CORE	
C804	1-165-498-11	ELECT	4700uF 20% 63V	L651	1-420-872-52	COIL, AIR-CORE	
C805	1-136-497-81	FILM	0.1uF 5% 50V	L701	1-420-872-52	COIL, AIR-CORE	
C806	1-136-497-81	FILM	0.1uF 5% 50V	L751	1-420-872-52	COIL, AIR-CORE	
C807	1-104-658-91	ELECT	100uF 20% 10V	< TRANSISTOR >			
C808	1-126-925-91	ELECT	470uF 20% 10V	Q361	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
C810	1-164-159-11	CERAMIC	0.1uF 50V	Q362	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
C811	1-164-159-11	CERAMIC	0.1uF 50V	Q363	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
C900	1-161-494-00	CERAMIC	0.022uF 25V	Q364	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
< CONNECTOR >				Q365	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
CNP501	1-573-845-11	CONNECTOR, BOARD TO BOARD 13P		Q366	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
* CNP502	1-774-876-21	CONNECTOR, BOARD TO BOARD 8P		Q379	8-729-900-63	TRANSISTOR DTA124ES	
CNP561	1-784-922-11	PIN, CONNECTOR 5P		Q471	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
CNP562	1-691-768-11	PLUG (MICRO CONNECTOR) 6P		Q501	8-729-119-76	TRANSISTOR 2SA1175-HFE	
* CNP801	1-564-104-00	PIN, CONNECTOR (3.96mm PITCH) 3P		Q502	8-729-141-30	TRANSISTOR 2SC3623A-LK	
CNP911	1-784-924-11	PIN, CONNECTOR 8P		Q505	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
CNP915	1-793-674-21	CONNECTOR, BOARD TO BOARD 7P		Q506	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
< DIODE >				Q540	8-729-281-53	TRANSISTOR 2SC1815-GR	
D505	8-719-991-33	DIODE 1SS133T-77		Q550	8-729-119-79	TRANSISTOR 2SC2785-FEK	
D510	8-719-991-33	DIODE 1SS133T-77		Q601	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D540	8-719-991-33	DIODE 1SS133T-77		Q602	8-729-141-30	TRANSISTOR 2SC3623A-LK	
D605	8-719-991-33	DIODE 1SS133T-77		Q605	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
D610	8-719-991-33	DIODE 1SS133T-77		Q606	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
D640	8-719-991-33	DIODE 1SS133T-77		Q610	8-729-119-79	TRANSISTOR 2SC2785-FEK	
D665	8-719-991-33	DIODE 1SS133T-77		Q640	8-729-281-53	TRANSISTOR 2SC1815-GR	
D680	8-719-991-33	DIODE 1SS133T-77		Q651	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D690	8-719-934-21	DIODE HZS30-1L		Q652	8-729-141-30	TRANSISTOR 2SC3623A-LK	
D691	8-719-991-33	DIODE 1SS133T-77		Q655	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
D705	8-719-991-33	DIODE 1SS133T-77					

Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks			
Q656	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP				R503	1-249-422-11	CARBON	2.7K	5%	1/4W	
Q680	8-729-281-53	TRANSISTOR	2SC1815-GR				R504	1-249-411-11	CARBON	330	5%	1/4W	
Q691	8-729-281-53	TRANSISTOR	2SC1815-GR				R505	1-249-439-11	CARBON	68K	5%	1/4W	
Q692	8-729-900-63	TRANSISTOR	DTA124ES				R510	1-249-421-11	CARBON	2.2K	5%	1/4W	
Q701	8-729-119-76	TRANSISTOR	2SA1175-HFE				R511	1-249-440-11	CARBON	82K	5%	1/4W	
Q702	8-729-141-30	TRANSISTOR	2SC3623A-LK				R513	1-249-414-11	CARBON	560	5%	1/4W	
Q705	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP				△ R514	1-249-405-11	CARBON	100	5%	1/4W	
Q706	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP				△ R515	1-249-405-11	CARBON	100	5%	1/4W	
Q710	8-729-119-79	TRANSISTOR	2SC2785-FEK				△ R516	1-234-182-11	ENCAPSULATED COMPONENT				
Q722	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA				△ R517	1-249-393-11	CARBON	10	5%	1/4W	
Q723	8-729-119-79	TRANSISTOR	2SC2785-FEK				R520	1-247-847-91	CARBON	4.7K	5%	1/4W	
Q725	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP				R521	1-247-850-11	CARBON	6.2K	5%	1/4W	
Q740	8-729-281-53	TRANSISTOR	2SC1815-GR				R522	1-249-419-11	CARBON	1.5K	5%	1/4W	
Q750	8-729-281-53	TRANSISTOR	2SC1815-GR				R524	1-249-431-11	CARBON	15K	5%	1/4W	
Q751	8-729-119-76	TRANSISTOR	2SA1175-HFE				R525	1-249-439-11	CARBON	68K	5%	1/4W	
Q752	8-729-141-30	TRANSISTOR	2SC3623A-LK				△ R528	1-249-389-11	CARBON	4.7	5%	1/4W	
Q755	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP				R531	1-247-847-91	CARBON	4.7K	5%	1/4W	
Q756	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP				△ R534	1-249-404-00	CARBON	82	5%	1/4W	
Q790	8-729-119-79	TRANSISTOR	2SC2785-FEK				R540	1-247-863-91	CARBON	22K	5%	1/4W	
Q851	8-729-119-79	TRANSISTOR	2SC2785-FEK				R546	1-247-843-11	CARBON	3.3K	5%	1/4W	
< RESISTOR >							R555	1-247-863-91	CARBON	22K	5%	1/4W	
R360	1-247-879-91	CARBON	100K	5%	1/4W		R556	1-247-863-91	CARBON	22K	5%	1/4W	
R361	1-247-847-91	CARBON	4.7K	5%	1/4W		R557	1-249-431-11	CARBON	15K	5%	1/4W	
R362	1-247-847-91	CARBON	4.7K	5%	1/4W		R573	1-247-871-91	CARBON	47K	5%	1/4W	
R363	1-247-879-91	CARBON	100K	5%	1/4W		R601	1-247-831-91	CARBON	1K	5%	1/4W	
R366	1-249-429-11	CARBON	10K	5%	1/4W		R602	1-249-439-11	CARBON	68K	5%	1/4W	
R367	1-247-879-91	CARBON	100K	5%	1/4W		R603	1-249-422-11	CARBON	2.7K	5%	1/4W	
R368	1-247-871-91	CARBON	47K	5%	1/4W		R604	1-249-439-11	CARBON	68K	5%	1/4W	
R369	1-247-847-91	CARBON	4.7K	5%	1/4W		R610	1-249-421-11	CARBON	2.2K	5%	1/4W	
R370	1-247-847-91	CARBON	4.7K	5%	1/4W		R611	1-249-440-11	CARBON	82K	5%	1/4W	
R371	1-247-879-91	CARBON	100K	5%	1/4W		R613	1-249-414-11	CARBON	560	5%	1/4W	
R372	1-247-879-91	CARBON	100K	5%	1/4W		△ R614	1-249-405-11	CARBON	100	5%	1/4W	
R373	1-247-831-91	CARBON	1K	5%	1/4W		△ R615	1-249-405-11	CARBON	100	5%	1/4W	
R374	1-247-831-91	CARBON	1K	5%	1/4W		△ R616	1-234-182-11	ENCAPSULATED COMPONENT				
R375	1-247-831-91	CARBON	1K	5%	1/4W		△ R617	1-249-393-11	CARBON	10	5%	1/4W	
R376	1-247-831-91	CARBON	1K	5%	1/4W		△ R618	1-249-389-11	CARBON	4.7	5%	1/4W	
R377	1-247-831-91	CARBON	1K	5%	1/4W		R620	1-247-847-91	CARBON	4.7K	5%	1/4W	
R378	1-247-831-91	CARBON	1K	5%	1/4W		R621	1-247-850-11	CARBON	6.2K	5%	1/4W	
R379	1-247-847-91	CARBON	4.7K	5%	1/4W		R622	1-249-419-11	CARBON	1.5K	5%	1/4W	
R380	1-247-879-91	CARBON	100K	5%	1/4W		R623	1-247-871-91	CARBON	47K	5%	1/4W	
R381	1-249-429-11	CARBON	10K	5%	1/4W		R624	1-249-431-11	CARBON	15K	5%	1/4W	
R405	1-247-831-91	CARBON	1K	5%	1/4W		R625	1-249-439-11	CARBON	68K	5%	1/4W	
R407	1-247-831-91	CARBON	1K	5%	1/4W		R631	1-247-847-91	CARBON	4.7K	5%	1/4W	
R410	1-247-871-91	CARBON	47K	5%	1/4W		△ R634	1-249-404-00	CARBON	82	5%	1/4W	
R430	1-247-871-91	CARBON	47K	5%	1/4W		R638	1-249-439-11	CARBON	68K	5%	1/4W	
R455	1-247-831-91	CARBON	1K	5%	1/4W		R640	1-247-863-91	CARBON	22K	5%	1/4W	
R457	1-247-831-91	CARBON	1K	5%	1/4W		R643	1-247-863-91	CARBON	22K	5%	1/4W	
R471	1-249-415-11	CARBON	680	5%	1/4W		R648	1-247-843-11	CARBON	3.3K	5%	1/4W	
R472	1-247-831-91	CARBON	1K	5%	1/4W		R651	1-247-831-91	CARBON	1K	5%	1/4W	
R475	1-249-421-11	CARBON	2.2K	5%	1/4W		R652	1-249-439-11	CARBON	68K	5%	1/4W	
R476	1-247-807-31	CARBON	100	5%	1/4W		R653	1-249-422-11	CARBON	2.7K	5%	1/4W	
R477	1-247-807-31	CARBON	100	5%	1/4W		R654	1-249-439-11	CARBON	68K	5%	1/4W	
R478	1-247-807-31	CARBON	100	5%	1/4W		R655	1-247-863-91	CARBON	22K	5%	1/4W	
R479	1-249-421-11	CARBON	2.2K	5%	1/4W		R656	1-247-863-91	CARBON	22K	5%	1/4W	
R501	1-247-831-91	CARBON	1K	5%	1/4W		R657	1-249-431-11	CARBON	15K	5%	1/4W	
R502	1-249-439-11	CARBON	68K	5%	1/4W		R660	1-249-421-11	CARBON	2.2K	5%	1/4W	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

STR-K665P

MAIN

POWER

Ref. No.	Part No.	Description			Remarks
R661	1-249-440-11	CARBON	82K	5%	1/4W
R663	1-249-414-11	CARBON	560	5%	1/4W
△ R664	1-249-405-11	CARBON	100	5%	1/4W
△ R665	1-249-405-11	CARBON	100	5%	1/4W
△ R666	1-234-182-11	ENCAPSULATED COMPONENT			
△ R667	1-249-393-11	CARBON	10	5%	1/4W
△ R668	1-249-389-11	CARBON	4.7	5%	1/4W
R669	1-247-847-91	CARBON	4.7K	5%	1/4W
R671	1-247-850-11	CARBON	6.2K	5%	1/4W
R672	1-249-419-11	CARBON	1.5K	5%	1/4W
R673	1-247-871-91	CARBON	47K	5%	1/4W
R674	1-249-431-11	CARBON	15K	5%	1/4W
R675	1-247-863-91	CARBON	22K	5%	1/4W
R676	1-247-863-91	CARBON	22K	5%	1/4W
R677	1-249-431-11	CARBON	15K	5%	1/4W
R680	1-247-863-91	CARBON	22K	5%	1/4W
R681	1-247-843-11	CARBON	3.3K	5%	1/4W
R690	1-247-887-00	CARBON	220K	5%	1/4W
R691	1-216-452-11	METAL OXIDE	180	5%	2W
R692	1-215-889-00	METAL OXIDE	330	5%	2W
R693	1-249-429-11	CARBON	10K	5%	1/4W
R694	1-249-429-11	CARBON	10K	5%	1/4W
R695	1-249-429-11	CARBON	10K	5%	1/4W
R696	1-249-435-11	CARBON	33K	5%	1/4W
R698	1-249-429-11	CARBON	10K	5%	1/4W
R699	1-247-895-00	CARBON	470K	5%	1/4W
R701	1-247-831-91	CARBON	1K	5%	1/4W
R702	1-249-439-11	CARBON	68K	5%	1/4W
R703	1-249-422-11	CARBON	2.7K	5%	1/4W
R704	1-249-439-11	CARBON	68K	5%	1/4W
R710	1-249-421-11	CARBON	2.2K	5%	1/4W
R711	1-249-440-11	CARBON	82K	5%	1/4W
R713	1-249-414-11	CARBON	560	5%	1/4W
△ R714	1-249-405-11	CARBON	100	5%	1/4W
△ R715	1-249-405-11	CARBON	100	5%	1/4W
△ R716	1-234-182-11	ENCAPSULATED COMPONENT			
△ R717	1-249-393-11	CARBON	10	5%	1/4W
△ R718	1-249-389-11	CARBON	4.7	5%	1/4W
R719	1-247-847-91	CARBON	4.7K	5%	1/4W
R721	1-247-850-11	CARBON	6.2K	5%	1/4W
R722	1-249-419-11	CARBON	1.5K	5%	1/4W
R723	1-247-871-91	CARBON	47K	5%	1/4W
R724	1-249-431-11	CARBON	15K	5%	1/4W
R725	1-249-439-11	CARBON	68K	5%	1/4W
R731	1-247-847-91	CARBON	4.7K	5%	1/4W
△ R732	1-249-381-11	CARBON	1	5%	1/4W
△ R733	1-249-381-11	CARBON	1	5%	1/4W
△ R734	1-249-404-00	CARBON	82	5%	1/4W
R735	1-249-427-11	CARBON	6.8K	5%	1/4W
R736	1-247-831-91	CARBON	1K	5%	1/4W
R737	1-249-436-11	CARBON	39K	5%	1/4W
R740	1-247-863-91	CARBON	22K	5%	1/4W
R744	1-247-863-91	CARBON	22K	5%	1/4W
R745	1-247-863-91	CARBON	22K	5%	1/4W
R746	1-247-863-91	CARBON	22K	5%	1/4W
R747	1-249-431-11	CARBON	15K	5%	1/4W
R748	1-247-843-11	CARBON	3.3K	5%	1/4W
R750	1-247-863-91	CARBON	22K	5%	1/4W

Ref. No.	Part No.	Description			Remarks
R751	1-247-831-91	CARBON	1K	5%	1/4W
R752	1-249-439-11	CARBON	68K	5%	1/4W
R753	1-249-422-11	CARBON	2.7K	5%	1/4W
R754	1-249-439-11	CARBON	68K	5%	1/4W
R755	1-247-863-91	CARBON	22K	5%	1/4W
R756	1-247-863-91	CARBON	22K	5%	1/4W
R757	1-249-431-11	CARBON	15K	5%	1/4W
R758	1-247-843-11	CARBON	3.3K	5%	1/4W
R760	1-249-421-11	CARBON	2.2K	5%	1/4W
R761	1-249-440-11	CARBON	82K	5%	1/4W
R763	1-249-414-11	CARBON	560	5%	1/4W
△ R764	1-249-405-11	CARBON	100	5%	1/4W
△ R765	1-249-405-11	CARBON	100	5%	1/4W
△ R766	1-234-182-11	ENCAPSULATED COMPONENT			
△ R767	1-249-393-11	CARBON	10	5%	1/4W
△ R768	1-249-389-11	CARBON	4.7	5%	1/4W
R769	1-247-847-91	CARBON	4.7K	5%	1/4W
R770	1-247-871-91	CARBON	47K	5%	1/4W
R771	1-247-850-11	CARBON	6.2K	5%	1/4W
R772	1-249-419-11	CARBON	1.5K	5%	1/4W
R773	1-247-871-91	CARBON	47K	5%	1/4W
R775	1-249-439-11	CARBON	68K	5%	1/4W
R778	1-249-431-11	CARBON	15K	5%	1/4W
R780	1-249-429-11	CARBON	10K	5%	1/4W
R791	1-247-847-91	CARBON	4.7K	5%	1/4W
R792	1-215-868-00	METAL OXIDE	680	5%	1W
△ R793	1-249-404-00	CARBON	82	5%	1/4W
R794	1-215-868-00	METAL OXIDE	680	5%	1W
△ R803	1-249-389-11	CARBON	4.7	5%	1/4W
△ R851	1-249-404-00	CARBON	82	5%	1/4W
R852	1-247-847-91	CARBON	4.7K	5%	1/4W

< RELAY >

RY501	1-755-421-11	RELAY
RY601	1-755-421-11	RELAY
RY701	1-755-421-11	RELAY
RY791	1-755-421-11	RELAY
RY851	1-755-421-11	RELAY

< TERMINAL >

TM601	1-694-805-11	TERMINAL BOARD
		(SURROUND/SUB WOOFER)
TM602	1-694-805-11	TERMINAL BOARD (FRONT/CENTER)

1-861-045-11	POWER BOARD

< RESISTOR >

R124	1-247-847-91	CARBON	4.7K	5%	1/4W
------	--------------	--------	------	----	------

< SWITCH >

S122	1-771-410-21	SWITCH, TACTILE (DIMMER)
S123	1-771-410-21	SWITCH, TACTILE (DISPLAY)
S152	1-771-410-21	SWITCH, TACTILE (I/⓪)

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

STANDBY

SUB WOOFER

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-4750-608-A	STANDBY BOARD, COMPLETE *****				< TRANSISTOR >	
		< CAPACITOR >		Q801	8-729-140-97	TRANSISTOR	2SB734-34
C801	1-126-947-11	ELECT	47uF 20% 35V	Q901	8-729-119-79	TRANSISTOR	2SC2785-FEK
C802	1-126-947-11	ELECT	47uF 20% 35V	Q921	8-729-119-79	TRANSISTOR	2SC2785-FEK
C813	1-164-159-11	CERAMIC	0.1uF 50V			< RESISTOR >	
C814	1-164-159-11	CERAMIC	0.1uF 50V	R804	1-249-429-11	CARBON	10K 5% 1/4W
C815	1-126-943-11	ELECT	2200uF 20% 25V	R806	1-247-863-91	CARBON	22K 5% 1/4W
				△R810	1-243-634-91	FUSIBLE	0.22 5% 1/2W
C816	1-126-942-61	ELECT	1000uF 20% 25V	△R812	1-243-634-91	FUSIBLE	0.22 5% 1/2W
C820	1-164-159-11	CERAMIC	0.1uF 50V	△R901	1-219-237-91	SOLID	3.3M 20% 1/2W
C821	1-164-159-11	CERAMIC	0.1uF 50V				
C822	1-126-947-11	ELECT	47uF 20% 35V	R902	1-247-871-91	CARBON	47K 5% 1/4W
C823	1-126-936-11	ELECT	3300uF 20% 16V	R903	1-247-847-91	CARBON	4.7K 5% 1/4W
				△R904	1-249-381-11	CARBON	1 5% 1/4W
C830	1-164-159-11	CERAMIC	0.1uF 50V	△R910	1-243-635-11	FUSIBLE	0.33 5% 1/2W
C831	1-164-159-11	CERAMIC	0.1uF 50V	R921	1-247-871-91	CARBON	47K 5% 1/4W
C920	1-164-159-11	CERAMIC	0.1uF 50V				
C921	1-164-159-11	CERAMIC	0.1uF 50V	R922	1-249-435-11	CARBON	33K 5% 1/4W
C923	1-126-959-11	ELECT	0.47uF 20% 50V	R923	1-249-429-11	CARBON	10K 5% 1/4W
						< RELAY >	
C950	1-126-936-11	ELECT	3300uF 20% 16V	△RY901	1-755-276-31	RELAY, POWER	
		< CONNECTOR >				< TRANSFORMER >	
CNP802	1-779-977-11	PIN, CONNECTOR 6P		△T902	1-435-281-11	TRANSFORMER, POWER	
CNP804	1-691-767-11	PLUG (MICRO CONNECTOR) 5P				*****	
CNP901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P			A-4750-417-A	SUB WOOFER BOARD, COMPLETE	
CNP902	1-794-577-21	PIN, CONNECTOR (POWER)				*****	
CNP903	1-564-506-11	PLUG, CONNECTOR 3P				< CAPACITOR >	
CNP905	1-793-673-11	CONNECTOR, BOARD TO BOARD 7P					
CNP912	1-779-978-11	PIN, CONNECTOR 3P					
		< DIODE >					
D801	8-719-933-95	DIODE HZS20-1L		C561	1-126-963-11	ELECT	4.7uF 20% 50V
D804	8-719-068-28	DIODE HZ6.8BP-TK		C562	1-128-809-11	CERAMIC	100PF 5% 50V
D812	6-500-522-11	DIODE 10EDB40-TA2B5		C563	1-106-359-00	MYLAR	0.0047uF 5% 50V
D813	6-500-522-11	DIODE 10EDB40-TA2B5		C564	1-102-233-00	CERAMIC	33PF 10% 500V
D814	6-500-522-11	DIODE 10EDB40-TA2B5		C565	1-107-583-11	CERAMIC	3PF 0.25PF 500V
D815	6-500-522-11	DIODE 10EDB40-TA2B5		C566	1-104-658-91	ELECT	100uF 20% 10V
D820	6-500-522-11	DIODE 10EDB40-TA2B5		C571	1-126-947-11	ELECT	47uF 20% 35V
D821	6-500-522-11	DIODE 10EDB40-TA2B5		C573	1-162-815-11	CERAMIC	47PF 5% 500V
D822	6-500-522-11	DIODE 10EDB40-TA2B5		C575	1-162-815-11	CERAMIC	47PF 5% 500V
D823	6-500-522-11	DIODE 10EDB40-TA2B5		C578	1-128-813-11	CERAMIC	220PF 5% 50V
D901	8-719-991-33	DIODE 1SS133T-77		C581	1-136-157-00	FILM	0.022uF 5% 50V
D910	6-500-522-11	DIODE 10EDB40-TA2B5		C590	1-136-171-00	FILM	0.33uF 5% 50V
D911	6-500-522-11	DIODE 10EDB40-TA2B5		C592	1-136-175-00	FILM	0.68uF 5% 50V
D912	6-500-522-11	DIODE 10EDB40-TA2B5		C593	1-136-159-00	FILM	0.033uF 5% 50V
D913	6-500-522-11	DIODE 10EDB40-TA2B5		C594	1-137-190-91	FILM	0.22uF 5% 50V
						< DIODE >	
D914	8-719-991-33	DIODE 1SS133T-77		D561	8-719-991-33	DIODE 1SS133T-77	
D915	8-719-991-33	DIODE 1SS133T-77		D562	8-719-991-33	DIODE 1SS133T-77	
		< FUSE HOLDER >		D576	8-719-991-33	DIODE 1SS133T-77	
						< IC >	
FH902	1-533-217-41	HOLDER, FUSE		IC502	8-759-167-88	IC NJM4565D	
FH952	1-533-217-41	HOLDER, FUSE		IC503	8-749-011-16	IC STK350-230	
		< EARTH TERMINAL >					
* G901	1-537-738-21	TERMINAL, EARTH					

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SUB WOOFER

TUNING

Ref. No.	Part No.	Description	Remarks			
< COIL >						
L561	1-420-872-52	COIL, AIR-CORE				
< TRANSISTOR >						
Q575	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			
Q576	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP			
< RESISTOR >						
R560	1-249-411-11	CARBON	330	5%	1/4W	
R561	1-247-831-91	CARBON	1K	5%	1/4W	
R562	1-249-439-11	CARBON	68K	5%	1/4W	
R565	1-249-439-11	CARBON	68K	5%	1/4W	
R566	1-247-827-11	CARBON	680	5%	1/4W	
R567	1-247-863-91	CARBON	22K	5%	1/4W	
R568	1-247-863-91	CARBON	22K	5%	1/4W	
R569	1-249-409-11	CARBON	220	5%	1/4W	
R571	1-249-428-11	CARBON	8.2K	5%	1/4W	
R572	1-247-847-91	CARBON	4.7K	5%	1/4W	
R574	1-247-831-91	CARBON	1K	5%	1/4W	
△ R575	1-249-405-11	CARBON	100	5%	1/4W	
R576	1-247-850-11	CARBON	6.2K	5%	1/4W	
R577	1-247-847-91	CARBON	4.7K	5%	1/4W	
△ R578	1-234-182-11	ENCAPSULATED COMPONENT				
R579	1-249-419-11	CARBON	1.5K	5%	1/4W	
R580	1-249-439-11	CARBON	68K	5%	1/4W	
△ R581	1-249-393-11	CARBON	10	5%	1/4W	
△ R582	1-249-405-11	CARBON	100	5%	1/4W	
R583	1-249-431-11	CARBON	15K	5%	1/4W	
R587	1-247-871-91	CARBON	47K	5%	1/4W	
△ R588	1-249-389-11	CARBON	4.7	5%	1/4W	
R591	1-249-421-11	CARBON	2.2K	5%	1/4W	
R593	1-249-440-11	CARBON	82K	5%	1/4W	
R595	1-249-427-11	CARBON	6.8K	5%	1/4W	
R596	1-249-427-11	CARBON	6.8K	5%	1/4W	
R597	1-247-879-91	CARBON	100K	5%	1/4W	
R598	1-249-440-11	CARBON	82K	5%	1/4W	

	1-861-044-11	TUNING BOARD				

< RESISTOR >						
R132	1-247-831-91	CARBON	1K	5%	1/4W	
R133	1-249-421-11	CARBON	2.2K	5%	1/4W	
R134	1-249-421-11	CARBON	2.2K	5%	1/4W	
R135	1-247-847-91	CARBON	4.7K	5%	1/4W	
R136	1-249-429-11	CARBON	10K	5%	1/4W	
< SWITCH >						
S131	1-771-410-21	SWITCH, TACTIL -(TUNING))				
S132	1-771-410-21	SWITCH, TACTIL (FM MODE)				
S133	1-771-410-21	SWITCH, TACTIL (MEMORY)				
S134	1-771-410-21	SWITCH, TACTIL -(PRESET TUNING))				
S135	1-771-410-21	SWITCH, TACTIL +(PRESET TUNING))				
S151	1-771-410-21	SWITCH, TACTIL +(TUNING))				

Ref. No.	Part No.	Description	Remarks
MISCELLANEOUS			

8	1-773-114-11	WIRE (FLAT TYPE) (19 CORE)	
△ 59	1-783-820-11	CORD, POWER	
61	1-769-937-11	WIRE (FLAT TYPE) (11 CORE)	
62	1-575-662-31	WIRE (FLAT TYPE) (5 CORE)	
65	1-693-577-21	TUNER	
△ F901	1-533-452-12	FUSE, GLASS TUBE (DIA. 5) (T4AL/125V)	
Q503	6-702-390-01	IC MN2488-OPY-MK	
Q504	6-702-391-01	IC MP1620-OPY-MK	
Q572	8-729-026-08	TRANSISTOR 2SC4495	
Q573	6-702-390-01	IC MN2488-OPY-MK	
Q574	6-702-391-01	IC MP1620-OPY-MK	
Q603	6-702-390-01	IC MN2488-OPY-MK	
Q604	6-702-391-01	IC MP1620-OPY-MK	
Q653	6-702-390-01	IC MN2488-OPY-MK	
Q654	6-702-391-01	IC MP1620-OPY-MK	
Q703	6-702-390-01	IC MN2488-OPY-MK	
Q704	6-702-391-01	IC MP1620-OPY-MK	
Q753	6-702-390-01	IC MN2488-OPY-MK	
Q754	6-702-391-01	IC MP1620-OPY-MK	
△ T901	1-443-185-11	POWER TRANSFORMER	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]