


ST-SE520

SERVICE MANUAL

*AEP Model
UK Model*

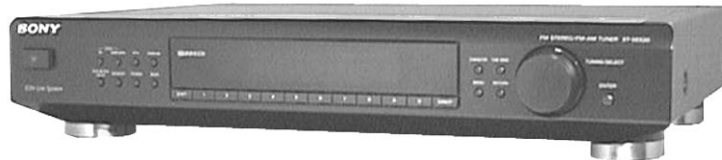

SPECIFICATIONS

FM tuner section

Frequency range 87.5 - 108.0 MHz

Aerial terminals 75 Ω , unbalanced

Intermediate frequency
10.7 MHz

Sensitivity at 26 dB quieting
(mono) 10.3 dBf,
0.9 μ V/75 Ω
at 46 dB quieting
(stereo) 38.5 dBf,
23 μ V/75 Ω

Usable sensitivity (IHF) 10.3 dBf, 0.9 μ V/75 Ω

S/N at 40 kHz deviation
74 dB (mono),
69 dB (stereo)

Harmonic distortion 0.09% (mono),
0.18% (stereo)

Frequency response 30 Hz - 15 kHz
(+0.5/-1.0 dB)

Separation 45 dB at 1 kHz

Selectivity at 400 kHz
85 dB
at 300 kHz
70 dB

Output at 40 kHz deviation
600 mV

AM tuner section

Frequency range MW: 522 - 1,611 kHz
(9 kHz step)
LW: 144 - 288 kHz
(1 kHz step)

Intermediate frequency
450 kHz

Usable Sensitivity (with AM loop
aerial)
MW: 200 μ V/m
LW: 700 μ V/m

Signal-to-noise ratio MW: 54 dB
(50 mV/m,
999 kHz)
LW: 50 dB
(50 mV/m,
216 kHz)

Harmonic distortion 0.3% (50 mV/m,
400 Hz)

Selectivity 50 dB

General

Power requirements 220 - 230 V,
AC 50/60 Hz

Power consumption 10 W

Dimensions 430 $\times$ 82 $\times$ 295 mm
(w/h/d)

Weight 2.5 kg

Supplied accessories

- Audio cord (1)
- AM loop aerial (1)
- FM wire aerial (1)
- EON connecting cord (1)

Design and specifications are
subject to change without notice.

FM STEREO FM-AM TUNER

SONY[®]

TABLE OF CONTENTS


1. GENERAL	2
2. TEST MODE	3
3. ELECTRICAL ADJUSTMENTS	5
4. DIAGRAMS	
4-1. Circuit Boards Location	5
4-2. Schematic Diagram – Tuner Section –	6
4-3. Printed Wiring Board – Tuner Section –	7
4-4. Schematic Diagram – Display Section –	8
4-5. Printed Wiring Board – Display Section –	9
4-6. IC Pin Function	10
4-7. IC Block Diagrams	11
5. EXPLODED VIEW	12
6. ELECTRICAL PARTS LIST	13

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL

Front Panel Descriptions

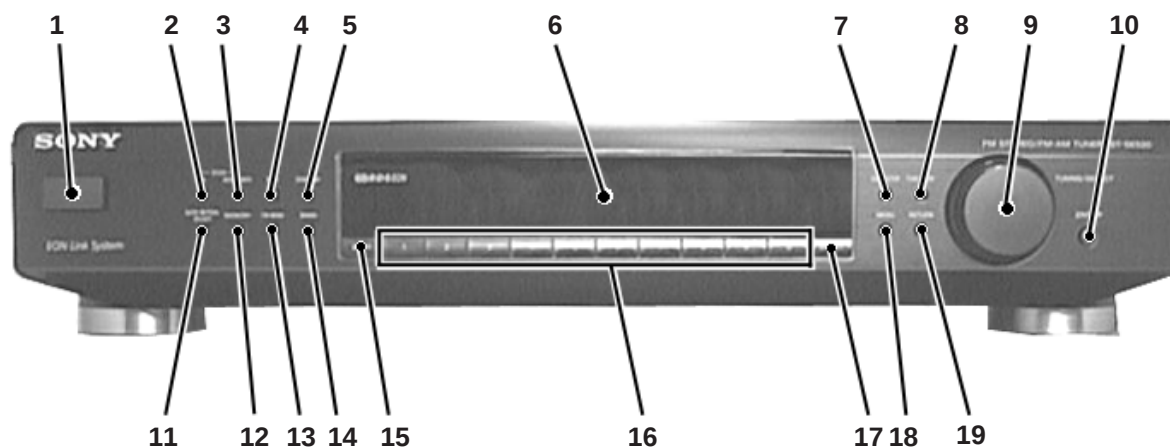

- | | |
|-------------------------------|--------------------------------------|
| 1 ① (Power)switch | 11 AUTO-BETICAL SELECT button |
| 2 EON TA button | 12 MEMORY button |
| 3 EON NEWS/INFO button | 13 FM MODE button |
| 4 PTY button | 14 BAND button |
| 5 DISPLAY button | 15 SHIFT button |
| 6 Display window | 16 Numeric buttons |
| 7 CHARACTER button | 17 DIRECT button |
| 8 TUNE MODE button | 18 MENU button |
| 9 TUNING/SELECT knob | 19 RETURN button |
| 10 ENTER button | |

SECTION 2 TEST MODE

1. Circuit Check Mode

Set to the reception frequency that the circuit can STEREO RDS stations. (Set the input level to above 70 dB.)

This enables circuit check to be performed in any of the reception modes-FM, AM (MW, LW). Set to a desired band before setting the test mode.


1. Turn OFF the power.
2. While pressing **[4]** and **[AUTO-BETICAL SELECT]** together, turn ON **[Ⓜ]**.

- The items in the following table will be checked automatically in order every 2 seconds.

Display	Items	DISPLAY		NG
		FM RDS	AM (MW, LW)	
Tuned	$\overline{AST}$ signal =LOW	OK or NG		IC201 NG, RV201 adjustments
IF Frq	IF COUNT OK	OK or NG	OK or NG	TB101, IC201 NG
Sig Level	SI LEVELh70dB	OK or NG	OK or NG	TB101 NG
Stereo	$\overline{ST}$ signal=LOW	OK or NG		TB101 NG
RDS Signal	RDS DATA OK	OK or NG		IC802 NG

SECTION 3
ELECTRICAL ADJUSTMENTS


FM Signal Level Adjustment

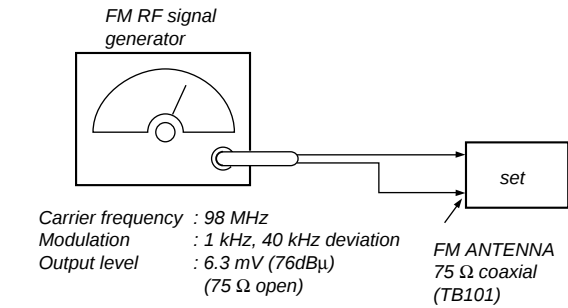

- Procedure:**
1. Tune the set to 98 MHz.
 2. Push the **DISPLAY** button for digital signal meter indication.
 3. Adjust RV201 to the place where level and “70dB ↑” indication lights on fluorescent indicator tube.


Adjustment Location:

[TUNER BOARD] — Component Side —

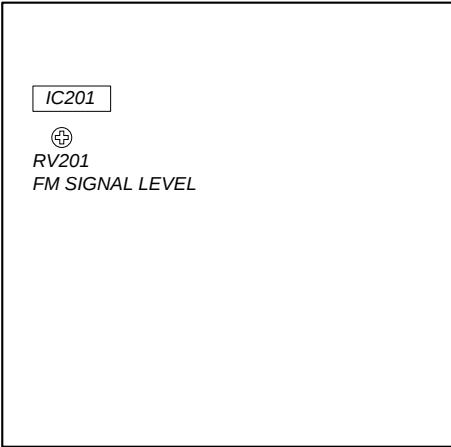

SECTION 4
DIAGRAMS

4-1. CIRCUIT BOARDS LOCATION

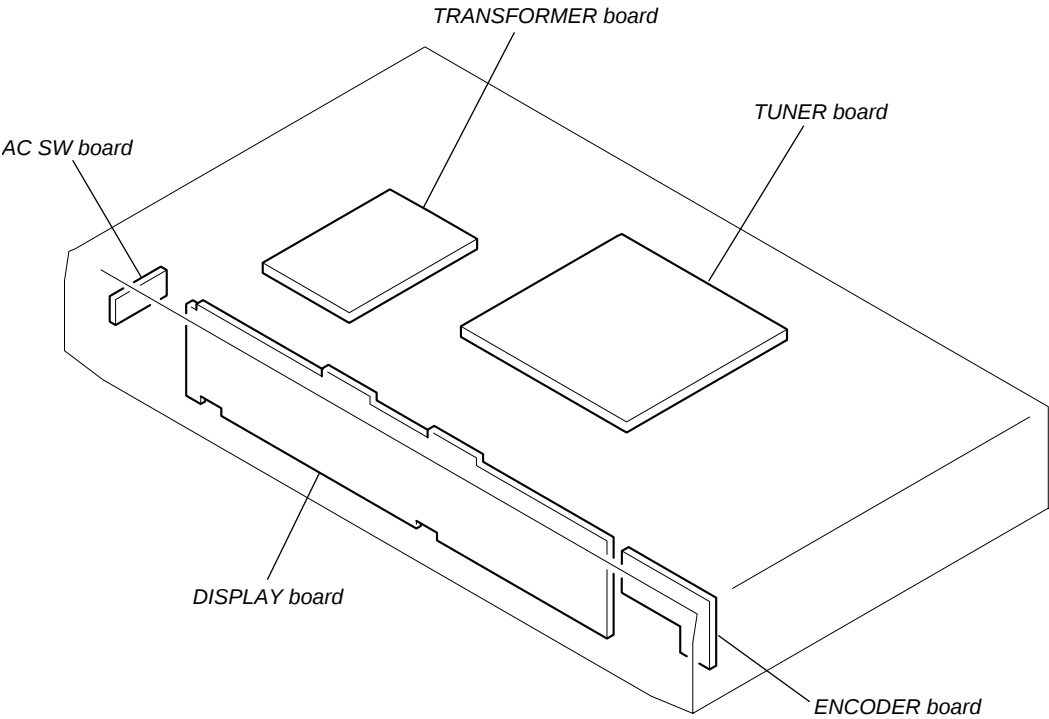

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.
Note:

- All capacitors are in μF unless otherwise noted. pF : μF
- 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- : nonflammable resistor.
- : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

- **B +** : B+ Line.
- **B -** : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
- * : Can not be measured.

- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 : FM


For printed wiring boards.
Note:

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Pattern from the side which enables seeing.

Indication of transistor


B C E
↑ ↑
These are omitted

WAVEFORMS



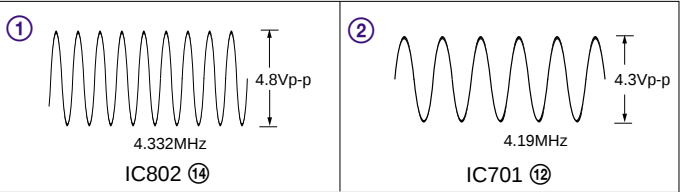


4-2. SCHEMATIC DIAGRAM – TUNER SECTION –

- See page 5 for Waveform.
- See page 11 for IC Block Diagram.

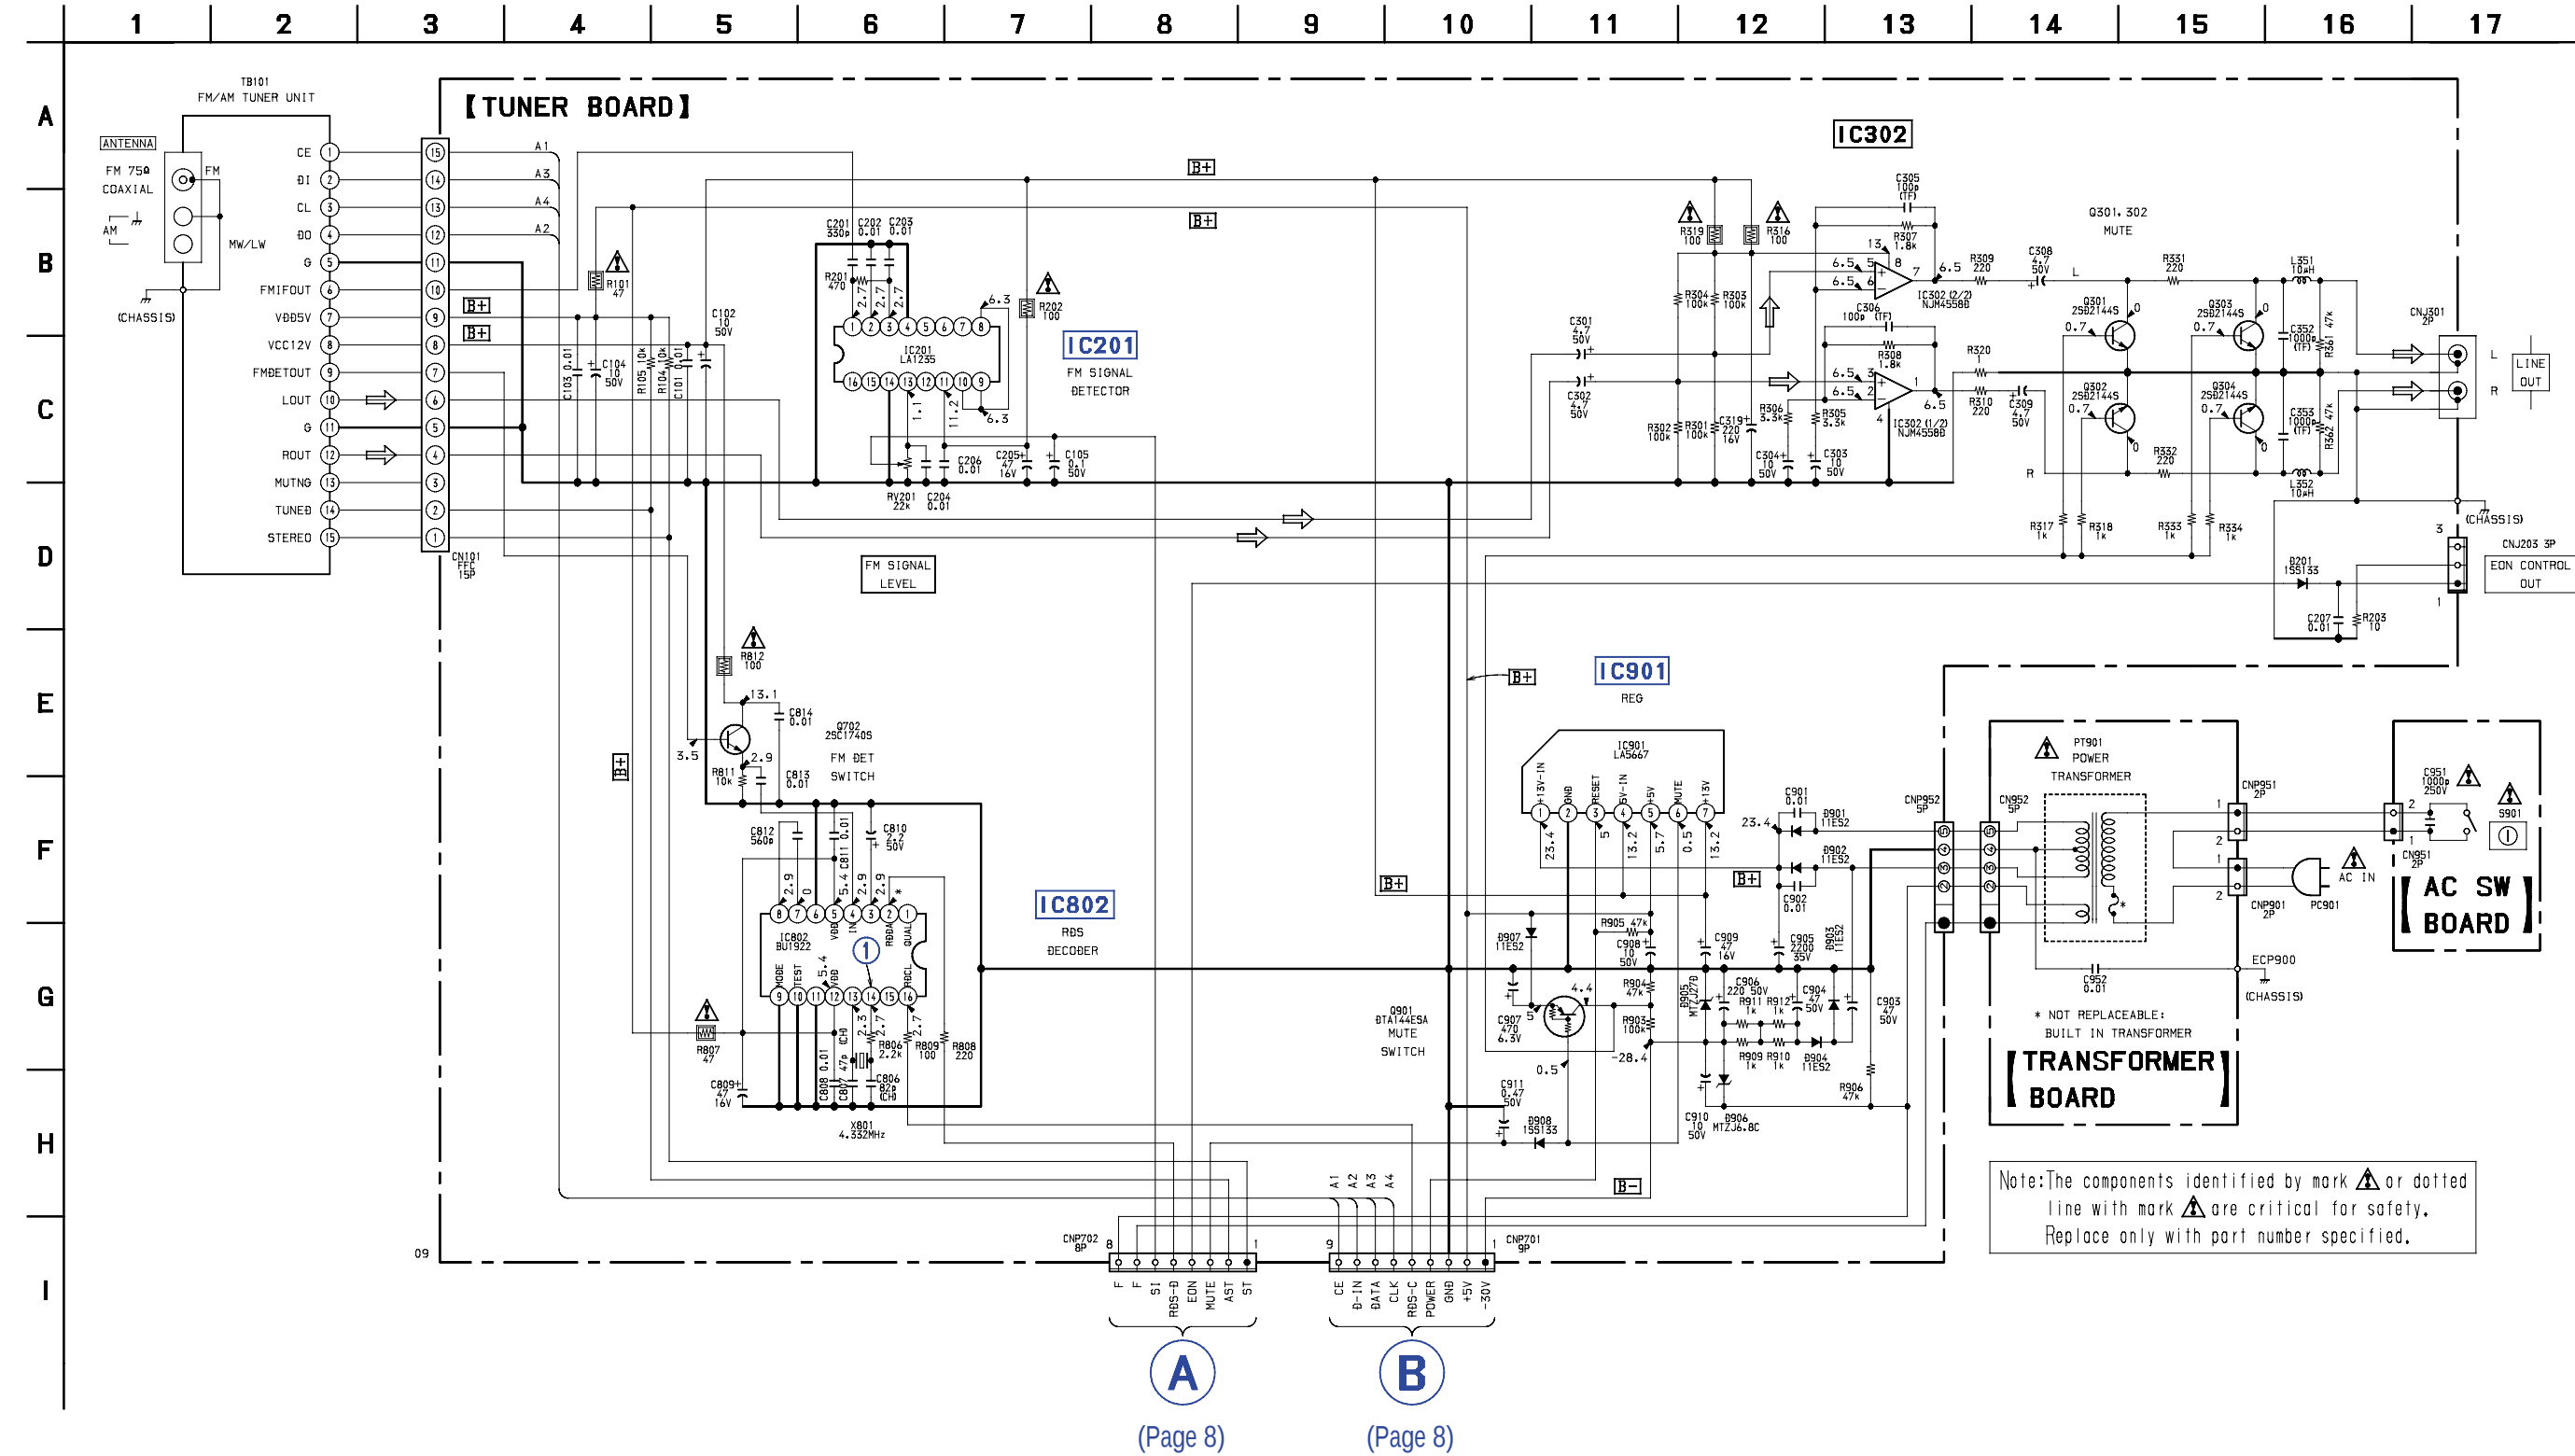

4-3. PRINTED WIRING BOARD –TUNER SECTION –
• See page 5 for Circuit Boards Location.

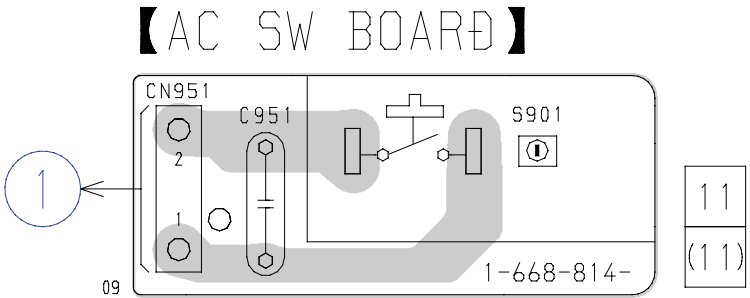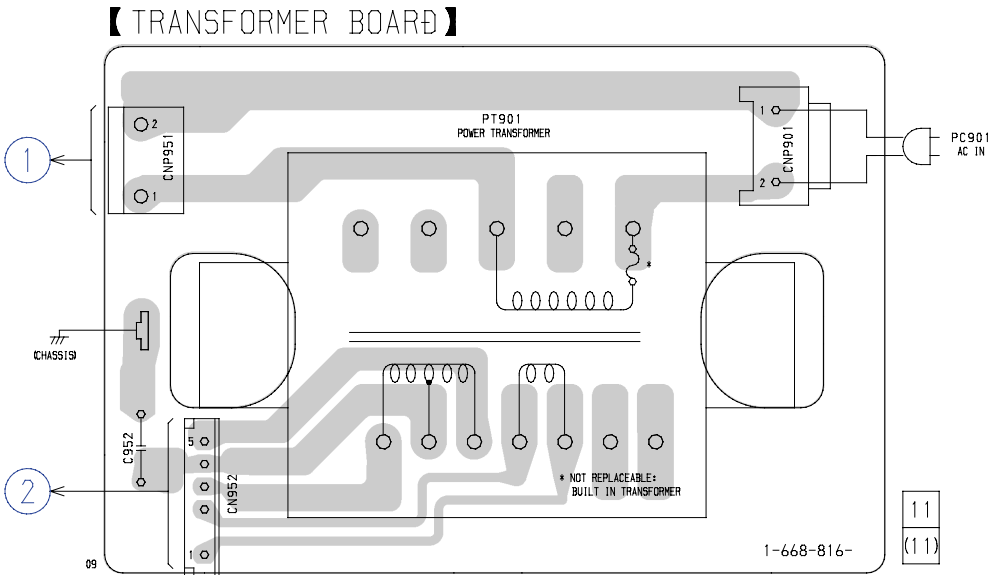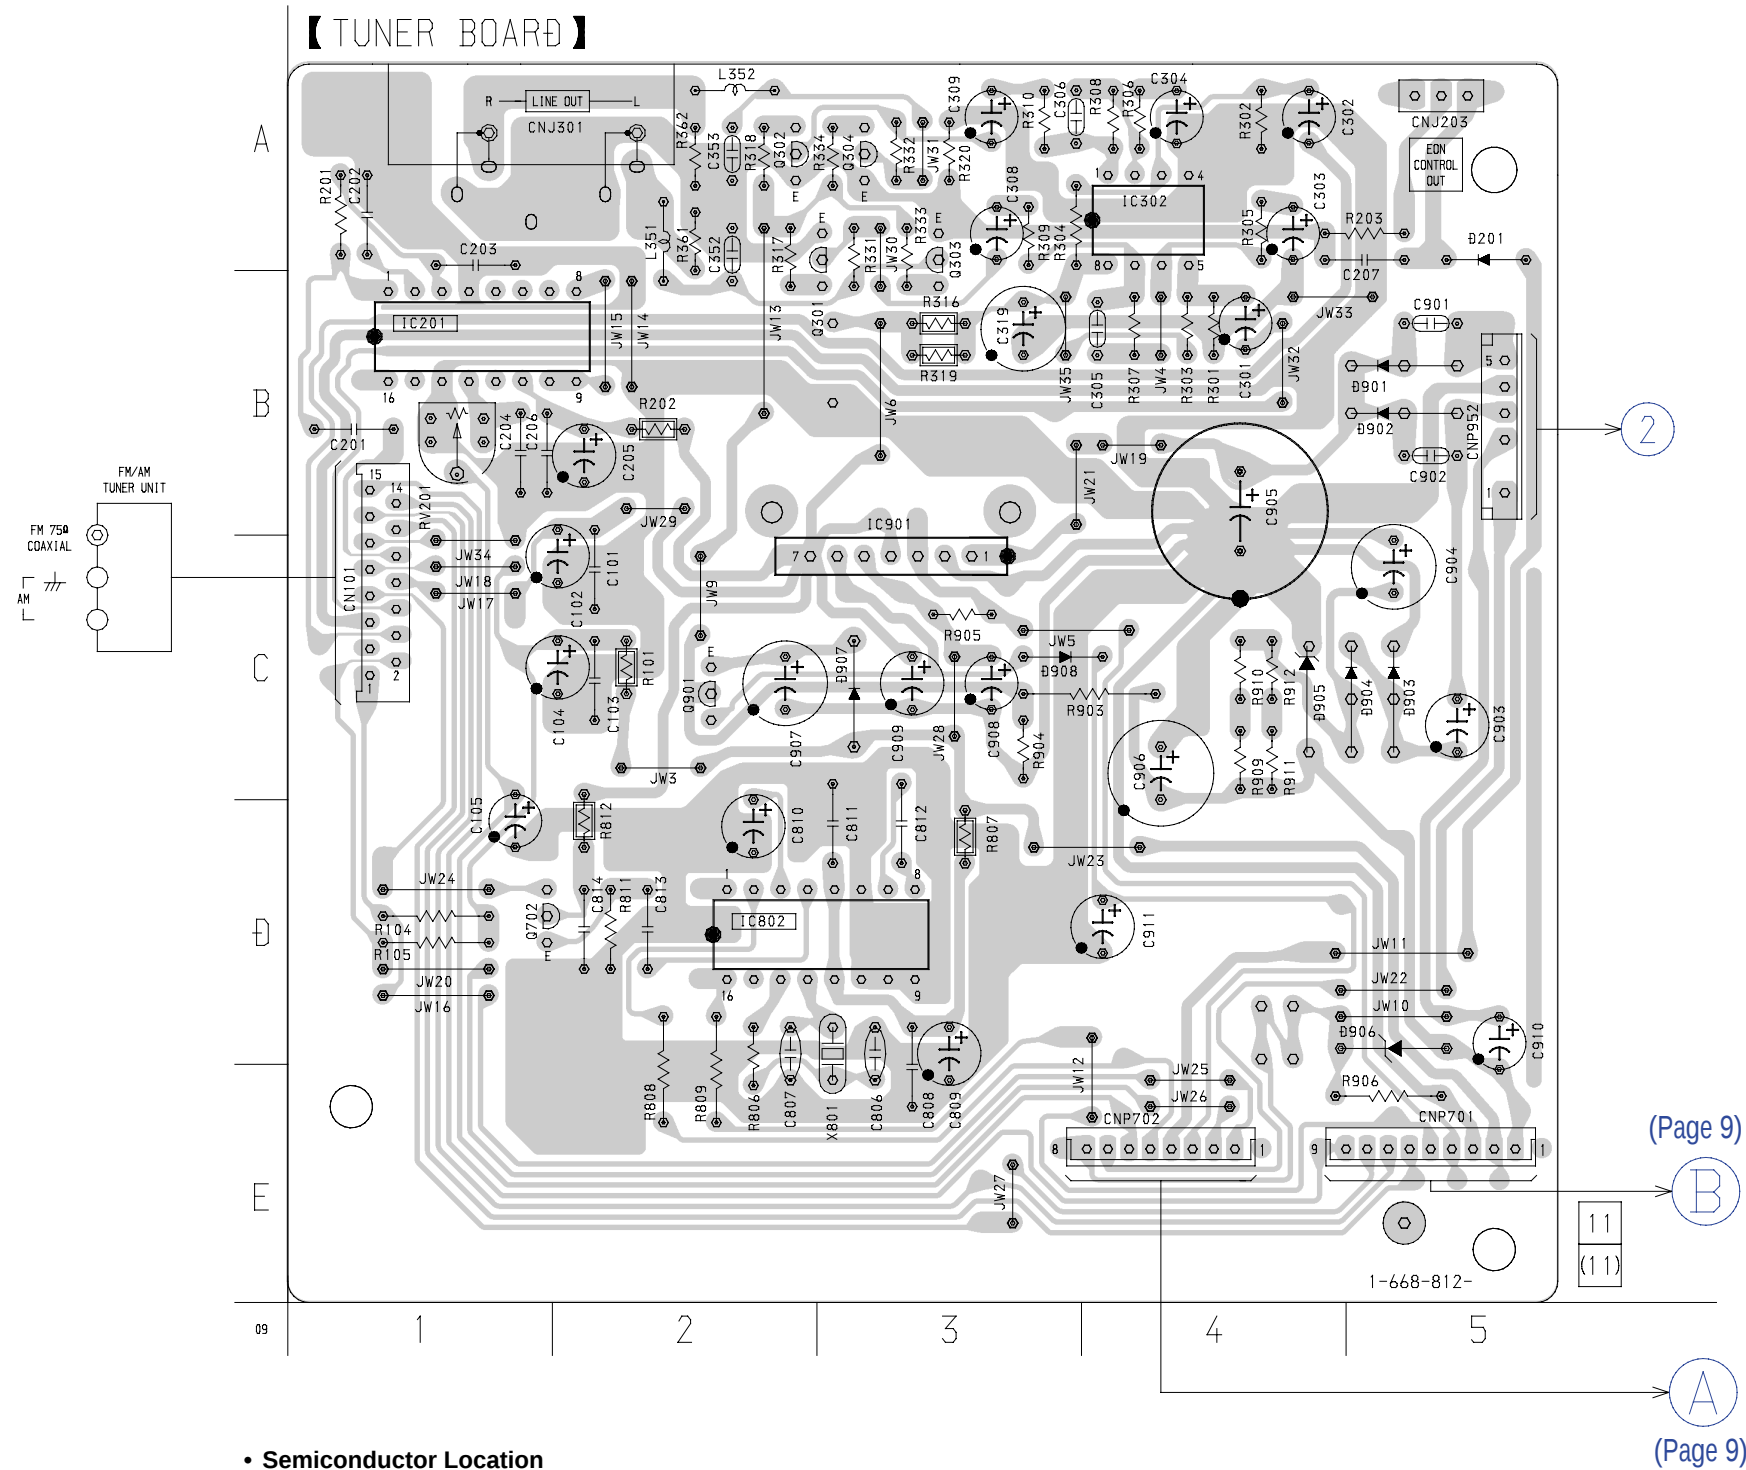


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D201	A-5	IC201	B-1
D901	B-5	IC302	A-4
D902	B-5	IC802	D-3
D903	C-5	IC901	C-3
D904	C-5		
D905	C-4	Q301	A-3
D906	D-5	Q302	A-2
D907	C-3	Q303	A-3
D908	C-3	Q304	A-3
		Q702	D-1
		Q901	C-2


4-4. SCHEMATIC DIAGRAM – DISPLAY SECTION –

- See page 5 for Waveform.
- See page 10 for IC Pin function.

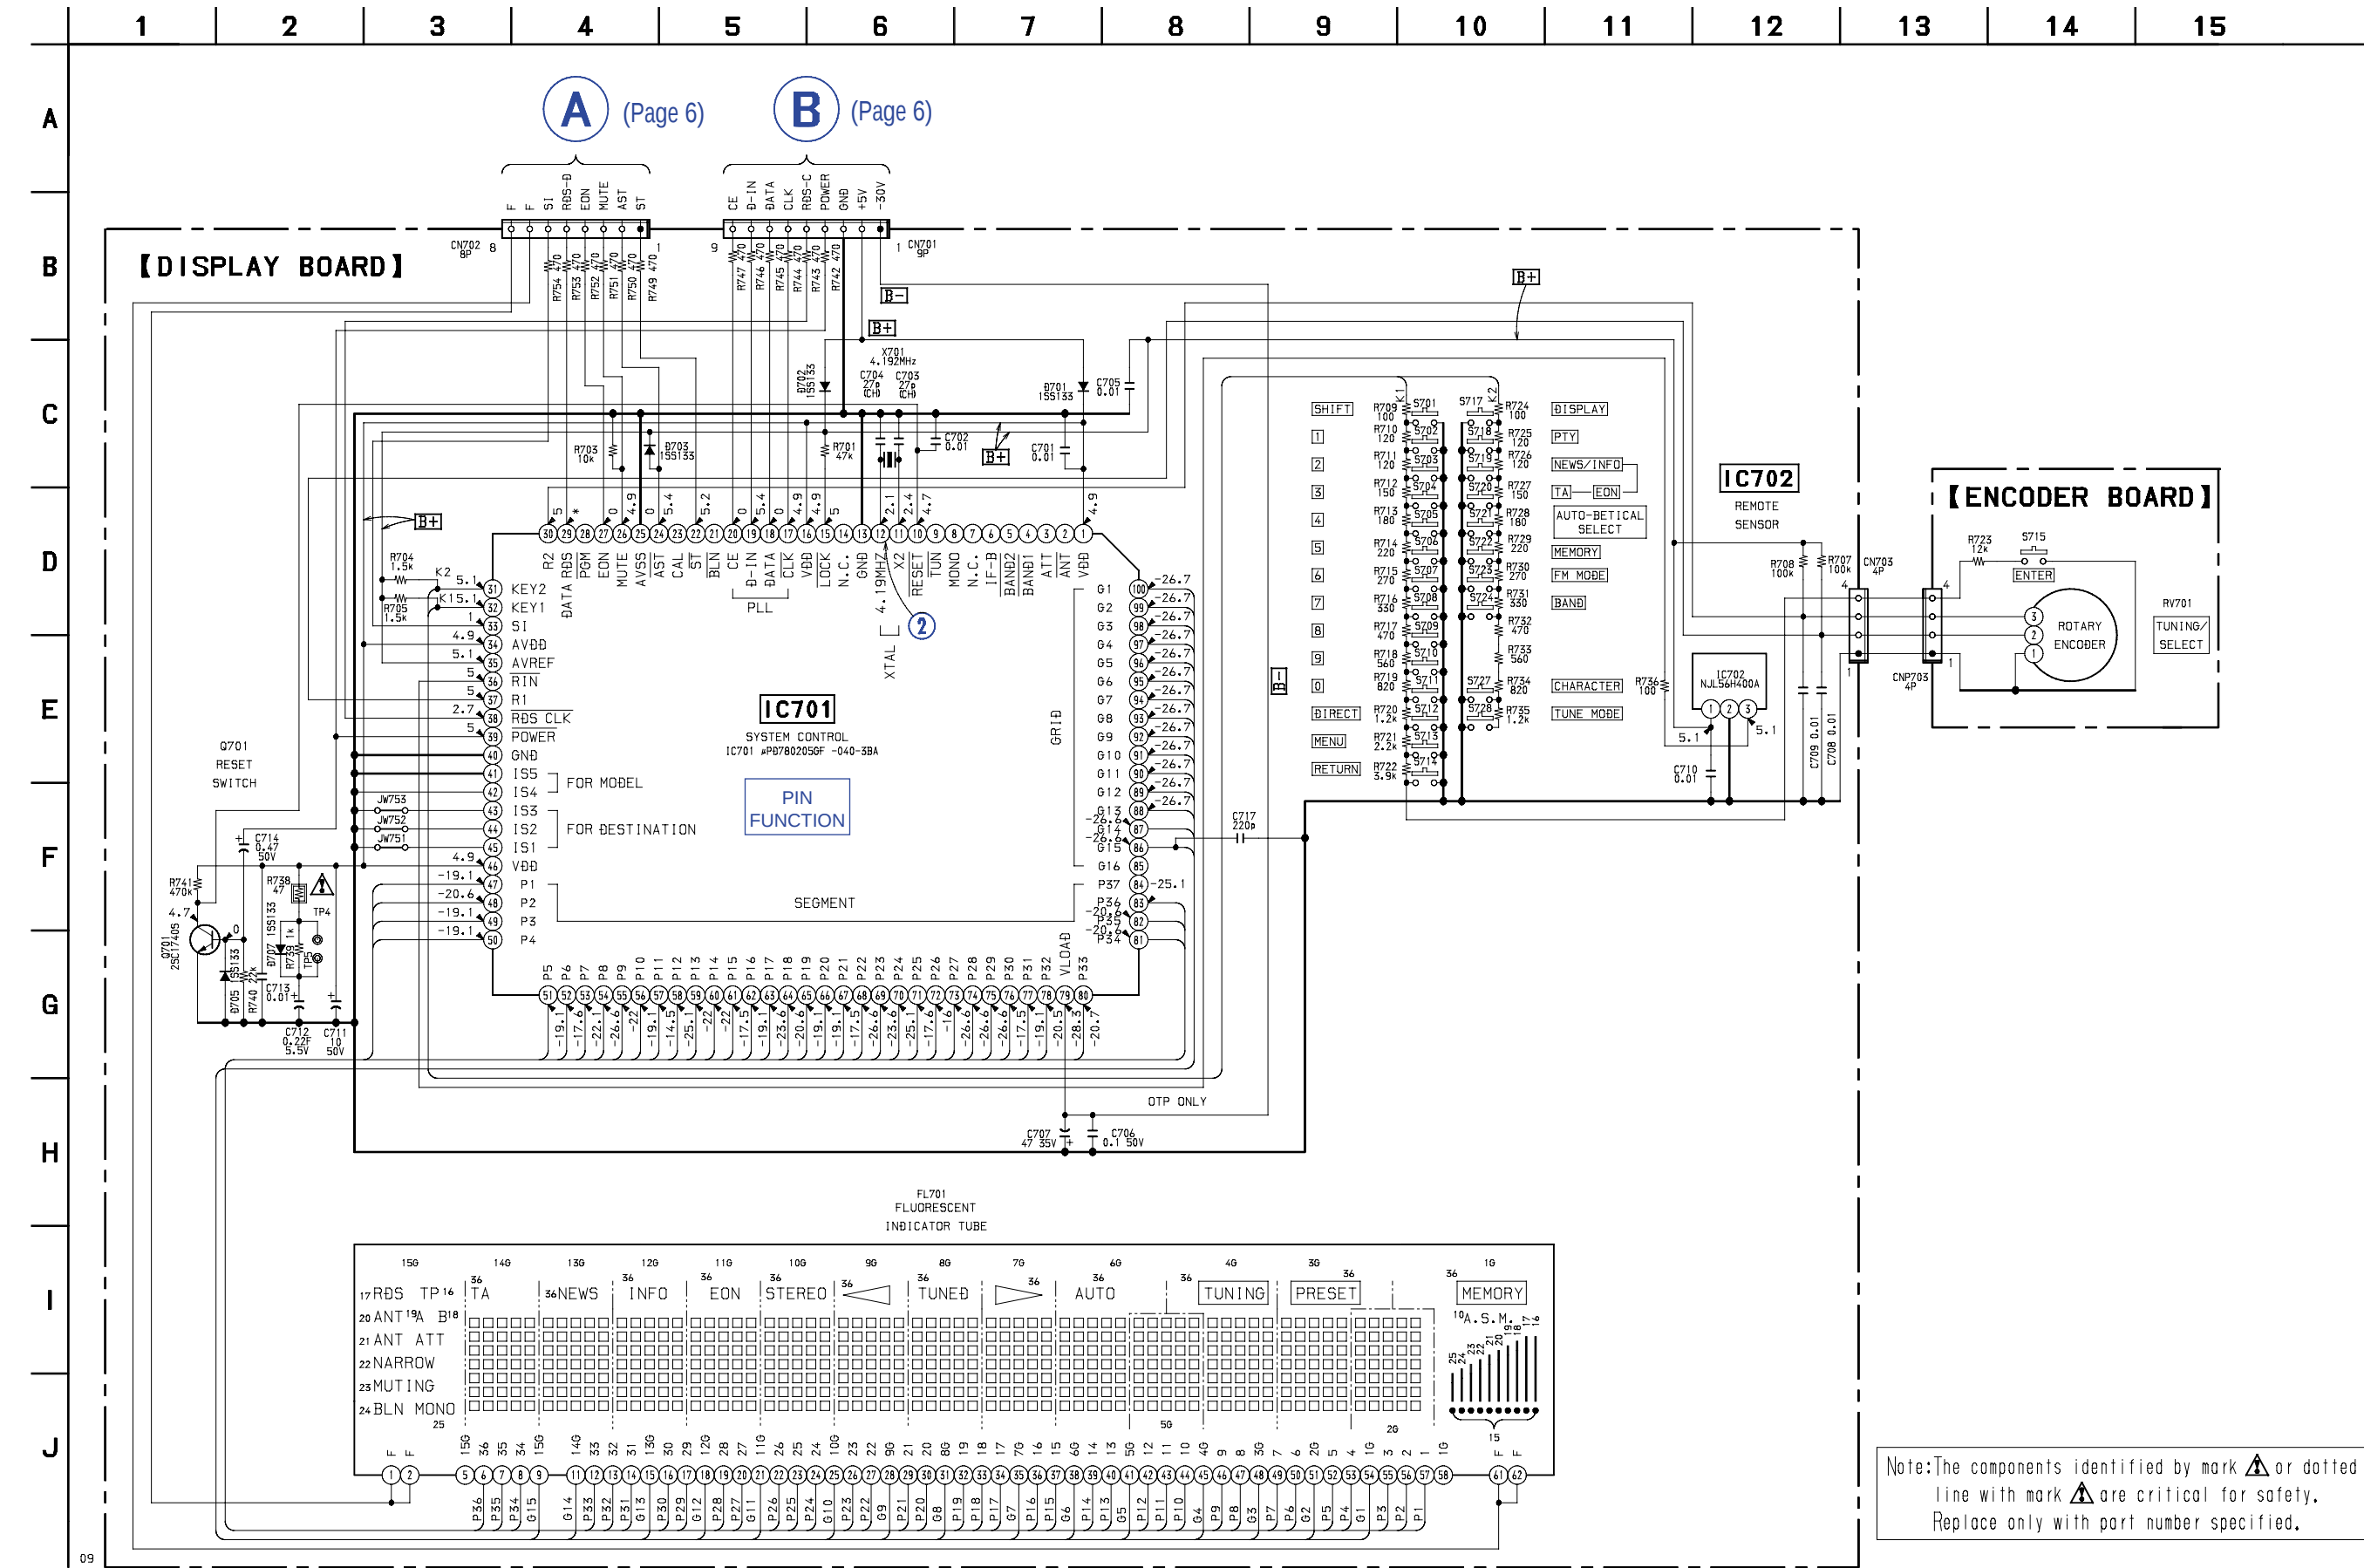


4-5. PRINTED WIRING BOARD – DISPLAY SECTION –
• See page 5 for Circuit Boards Location.

【 DISPLAY BOARD 】

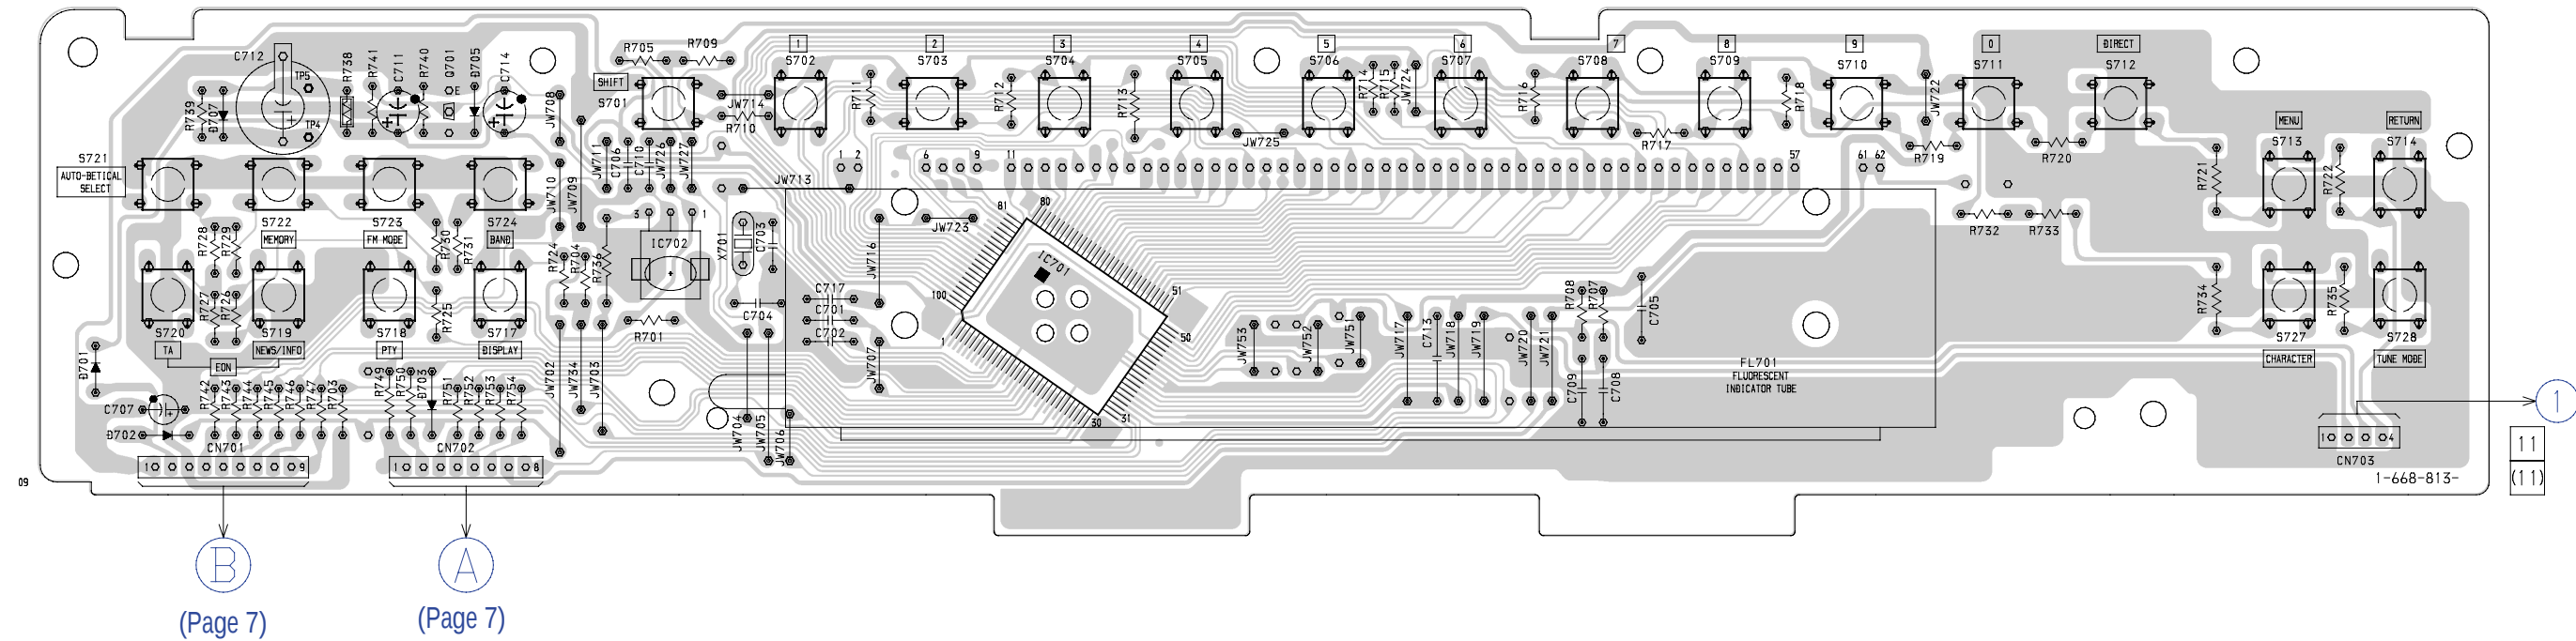

【 ENCODER BOARD 】

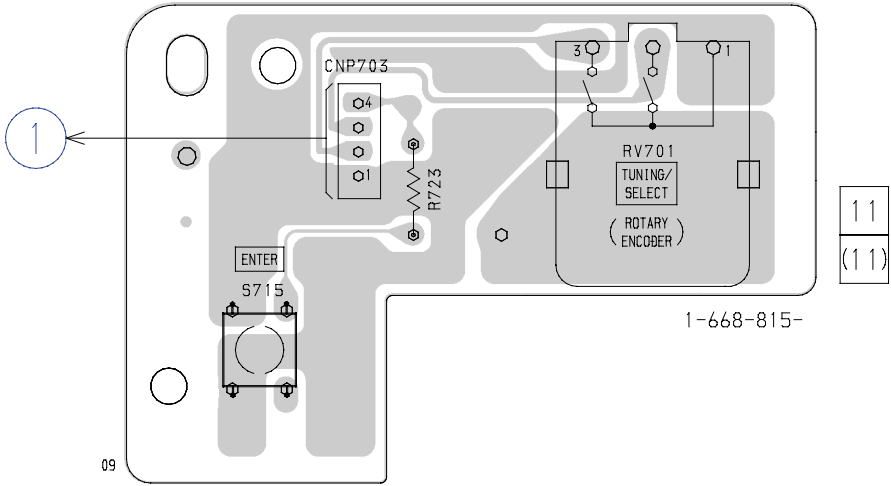

4-6. IC PIN FUNCTION

• IC701 System Control (μPD78205GF-040-3BA)

	Pin Name	I/O	Function
1	VDD	—	Power supply (+5V)
2	ANT	—	Not used
3	ANT	—	Not used
4	BAND 1	—	Not used
5	BAND 2	—	Not used
6	IF-B	—	Not used
7	NC	—	Not used
8	MONO	—	Not used
9	TUN	—	Not used
10	RESET	I	System reset input
11	X2	O	Oscillation signal output (4.19MHz)
12	4.19MHz	I	Oscillation signal output (4.19MHz)
13	GND	—	Ground
14	NC	—	Not used
15	LOCK	I	Lock signal input
16	VDD	—	Power supply (+5V)
17	CLK	O	PLL clock to TB101
18	DATA	O	PLL data to TB101
19	D-IN	I	PLL clock from TB101
20	CE	O	PLL Latch to TB101
21	BLN	—	Not used.
22	ST	I	Stereo display detection.
23	CAL	—	Not used
24	AST	I	Auto stop signal detection
25	AVSS	—	Ground
26	MUTE	O	Muting signal output
27	E ON	O	External control
28	PGM	—	Not used
29	DATA RDS	I	RDS data input
30	R2	O	Rotary encoder phase detection
31	KEY 2	I	Key input
32	KEY 1	I	Key input
33	SI	I	Signal input
34	AVDD	—	Analog power supply (+5V)
35	AVREF	I	Reference voltage (+5V)
36	R IN	I	Remote control input
37	R 1	I	Rotary encoder number of rotation detection
38	RDS CLK	I	RDS data clock input
39	POWER	I	Power supply ON/OFF monitor
40	GND	—	Ground


Pin No.	Pin Name	I/O	Function
41	IS 5	I	Model detection
42	IS 4	I	
43	IS 3	I	
44	IS 2	I	
45	IS 1	I	
46	VDD	—	Power supply (+5V)
47 to 78	P1 to P32	O	FL segment output
79	V LOAD	—	Power supply (−30V)
80 to 84	P33 to P37	O	FL segment output
85	G16	—	Not used
86 to 100	G15 to G1	O	FL grid output

- Abbreviation
FL: FLUORESCENT INDICATOR TUBE


4-7. IC BLOCK DIAGRAMS

• Tuner section


IC201 LA1235

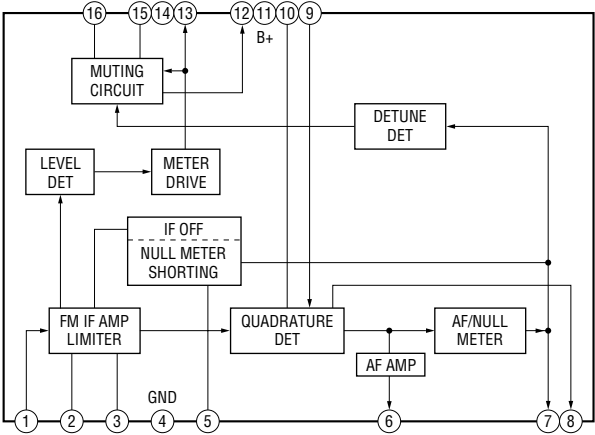

IC901 LA5667

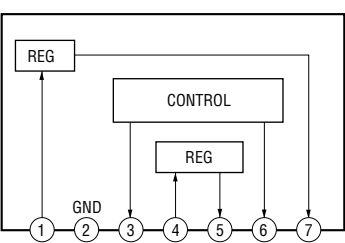

IC802 BU1922

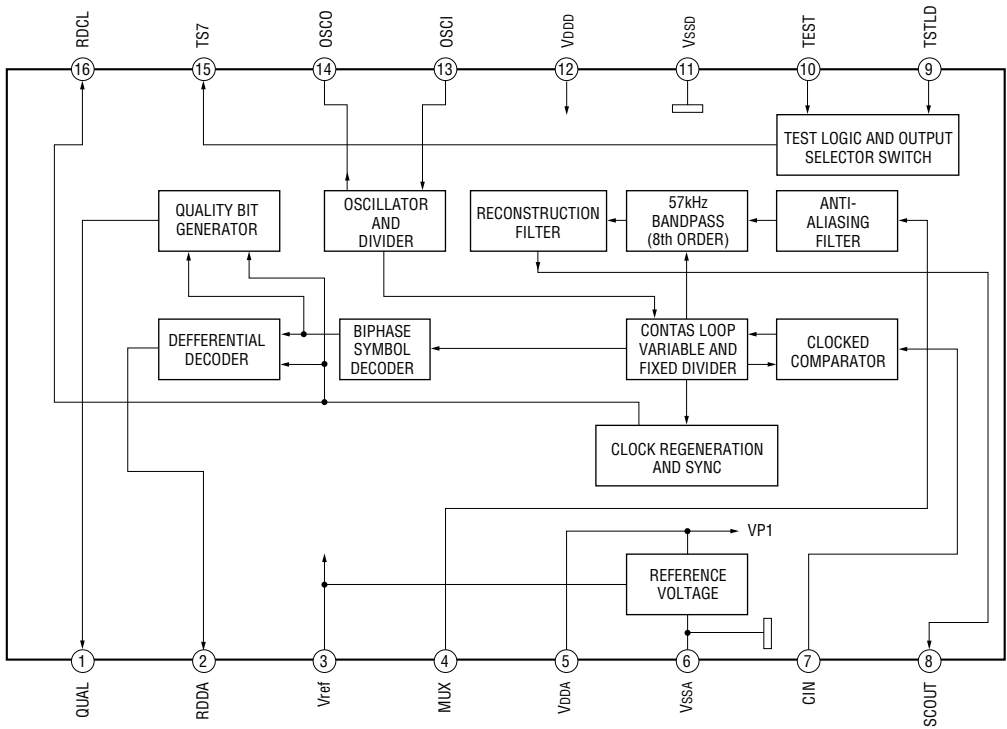


SECTION 5 EXPLODED VIEW

NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE)

- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of this parts list.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

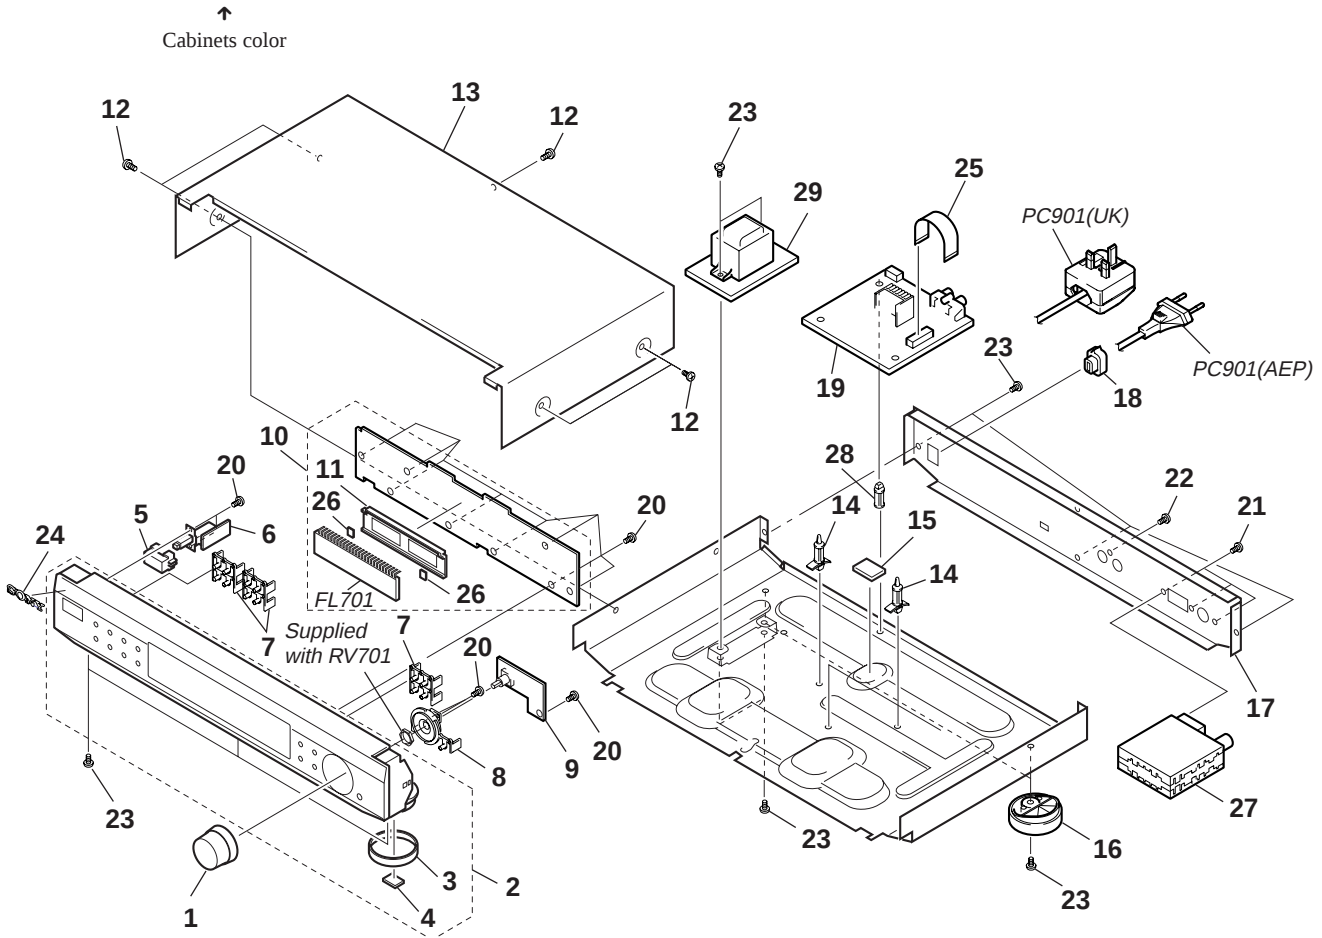

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-997-882-01	KNOB (T)(BLACK)		* 14	3-346-265-31	HOLDER, PC BOARD	
1	4-997-882-11	KNOB (T)(SILVER)		* 15	3-697-679-01	CUSHION, LS	
2	X-4949-582-2	PANEL ASSY, FRONT (BLACK)		16	X-4947-124-1	FOOT ASSY (F50150S)(SILVER)	
2	X-4949-583-2	PANEL ASSY, FRONT (SILVER)		16	X-4947-207-1	FOOT ASSY (F50150S)(BLACK)	
3	4-977-593-01	RING (DIA. 50), ORNAMENTAL		* 17	4-215-931-01	PANEL, BACK (AEP)	
4	4-977-358-31	CUSHION		17	4-215-931-51	PANEL, BACK (UK)	
5	3-931-429-71	BUTTON (POWER)(BLACK)		18	3-703-244-00	BUSHING, CORD	
5	3-931-429-81	BUTTON (POWER)(SILVER)		* 19	A-4407-374-A	TUNER BOARD, COMPLETE	
* 6	1-668-814-11	AC SW BOARD		20	4-951-620-01	SCREW (2.6X8), +BVTP	
7	4-981-264-01	BUTTON (4)(BLACK)		21	3-703-685-21	SCREW (+BV 3X8)	
7	4-981-264-21	BUTTON (4)(SILVER)		22	3-704-515-31	SCREW (BV/RING)	
8	4-997-881-01	ESCUTCHEON (BLACK)		23	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
8	4-997-881-11	ESCUTCHEON (SILVER)		24	4-963-404-21	EMBLEM (5-A), SONY	
* 9	1-668-815-11	ENCODER BOARD		25	1-773-002-11	WIRE (FLAT TYPE)(15 CORE)	
* 10	A-4407-375-A	DISPLAY BOARD, COMPLETE		* 26	4-921-941-01	CUSHION (FL)	
* 11	4-945-292-01	HOLDER, INDICATION TUBE		27	1-693-410-21	TUNER (PACK)	
12	3-710-901-01	SCREW, TAPPING (SILVER)		* 28	3-669-610-00	SPACER	
12	3-710-901-11	SCREW, TAPPING (BLACK)		* 29	1-668-816-11	TRANSFORMER BOARD	
* 13	4-978-901-41	CASE (407026)(BLACK)		FL701	1-517-177-21	INDICATOR TUBE, FLUORESCENT	
* 13	4-985-744-01	CASE (407026)(SILVER)		$\triangle$ PC901	1-575-651-21	CORD, POWER (AEP)	
				$\triangle$ PC901	1-751-523-11	CORD, POWER (UK)	

SECTION 6 ELECTRICAL PARTS LIST

AC SW

DISPLAY

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable

- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
*	1-668-814-11	AC SW BOARD *****						< TRANSISTOR >			
		< CAPACITOR >				Q701	8-729-119-78	TRANSISTOR 2SC2785-HFE			
		< SWITCH >						< RESISTOR >			
△ C951	1-113-915-11	CERAMIC 0.001uF 20% 250V				R701	1-249-437-11	CARBON 47K 5%	1/4W		
		< SWITCH >				R703	1-249-429-11	CARBON 10K 5%	1/4W		
						R704	1-249-419-11	CARBON 1.5K 5%	1/4W	F	
△ S901	1-572-267-51	SWITCH, PUSH (AC POWER)(1 KEY)(①)				R705	1-249-419-11	CARBON 1.5K 5%	1/4W	F	
						R707	1-249-441-11	CARBON 100K 5%	1/4W		

*	A-4407-375-A	DISPLAY BOARD, COMPLETE *****				R708	1-249-441-11	CARBON 100K 5%	1/4W		
						R709	1-247-807-31	CARBON 100 5%	1/4W		
						R710	1-249-406-11	CARBON 120 5%	1/4W	F	
*	4-921-941-01	CUSHION (FL)				R711	1-249-406-11	CARBON 120 5%	1/4W	F	
*	4-945-292-01	HOLDER, INDICATION TUBE				R712	1-249-407-11	CARBON 150 5%	1/4W	F	
	7-685-872-09	SCREW +BVT 3X8 (S)				R713	1-249-408-11	CARBON 180 5%	1/4W	F	
		< CAPACITOR >				R714	1-247-815-91	CARBON 220 5%	1/4W		
						R715	1-249-410-11	CARBON 270 5%	1/4W	F	
C701	1-162-306-11	CERAMIC 0.01uF 20% 16V				R716	1-249-411-11	CARBON 330 5%	1/4W		
C702	1-162-306-11	CERAMIC 0.01uF 20% 16V				R717	1-249-413-11	CARBON 470 5%	1/4W	F	
C703	1-162-209-31	CERAMIC 27PF 5% 50V				R718	1-249-414-11	CARBON 560 5%	1/4W	F	
C704	1-162-209-31	CERAMIC 27PF 5% 50V				R719	1-249-416-11	CARBON 820 5%	1/4W	F	
C705	1-162-306-11	CERAMIC 0.01uF 20% 16V				R720	1-249-418-11	CARBON 1.2K 5%	1/4W	F	
						R721	1-249-421-11	CARBON 2.2K 5%	1/4W	F	
C706	1-164-159-21	CERAMIC 0.1uF 50V				R722	1-249-424-11	CARBON 3.9K 5%	1/4W	F	
C707	1-126-947-11	ELECT 47uF 20% 35V									
C708	1-162-306-11	CERAMIC 0.01uF 20% 16V				R724	1-247-807-31	CARBON 100 5%	1/4W		
C709	1-162-306-11	CERAMIC 0.01uF 20% 16V				R725	1-249-406-11	CARBON 120 5%	1/4W	F	
C710	1-162-306-11	CERAMIC 0.01uF 20% 16V				R726	1-249-406-11	CARBON 120 5%	1/4W	F	
						R727	1-249-407-11	CARBON 150 5%	1/4W	F	
C711	1-126-964-11	ELECT 10uF 20% 50V				R728	1-249-408-11	CARBON 180 5%	1/4W	F	
C712	1-104-905-11	CAPACITOR 0.22F 5.5V									
C713	1-162-306-11	CERAMIC 0.01uF 20% 16V				R729	1-247-815-91	CARBON 220 5%	1/4W		
C714	1-126-959-11	ELECT 0.47uF 20% 50V				R730	1-249-410-11	CARBON 270 5%	1/4W	F	
C717	1-162-286-21	CERAMIC 220PF 10% 50V				R731	1-249-411-11	CARBON 330 5%	1/4W		
		< DIODE >				R732	1-249-413-11	CARBON 470 5%	1/4W	F	
						△ R733	1-249-414-11	CARBON 560 5%	1/4W	F	
D701	8-719-991-33	DIODE 1SS133T-77				R734	1-249-416-11	CARBON 820 5%	1/4W	F	
D702	8-719-991-33	DIODE 1SS133T-77				R735	1-249-418-11	CARBON 1.2K 5%	1/4W	F	
D703	8-719-991-33	DIODE 1SS133T-77				R736	1-247-807-31	CARBON 100 5%	1/4W		
D705	8-719-991-33	DIODE 1SS133T-77				R738	1-249-401-11	CARBON 47 5%	1/4W	F	
D707	8-719-991-33	DIODE 1SS133T-77				R739	1-249-417-11	CARBON 1K 5%	1/4W	F	
		< FLUORESCENT INDICATOR >				R740	1-247-863-91	CARBON 22K 5%	1/4W		
						R741	1-247-895-91	CARBON 470K 5%	1/4W		
FL701	1-517-177-21	INDICATOR TUBE, FLUORESCENT				R742	1-249-413-11	CARBON 470 5%	1/4W	F	
		< IC >				R743	1-249-413-11	CARBON 470 5%	1/4W	F	
						R744	1-249-413-11	CARBON 470 5%	1/4W	F	
IC701	8-759-495-96	IC uPD780205GF-040-3BA				R745	1-249-413-11	CARBON 470 5%	1/4W	F	
IC702	8-749-014-66	IC NJL64H400A				R746	1-249-413-11	CARBON 470 5%	1/4W	F	

DISPLAY	ENCODER	TRANSFORMER	TUNER
---------	---------	-------------	-------

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
R747	1-249-413-11	CARBON	470	5%	1/4W	F			< CONNECTOR >				
R749	1-249-413-11	CARBON	470	5%	1/4W	F							
R750	1-249-413-11	CARBON	470	5%	1/4W	F	CNP901	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P				
							CNP951	1-564-321-00	PIN, CONNECTOR 2P				
R751	1-249-413-11	CARBON	470	5%	1/4W	F			< LEAD >				
R752	1-249-413-11	CARBON	470	5%	1/4W	F							
R753	1-249-413-11	CARBON	470	5%	1/4W	F							
R754	1-249-413-11	CARBON	470	5%	1/4W	F	ECP900	1-690-880-51	LEAD (WITH CONNECTOR)				
< SWITCH >								< TRANSFORMER >					
S701	1-554-303-21	SWITCH, TACTILE (SHIFT)					△ PT901	1-423-525-11	TRANSFORMER, POWER				
S702	1-554-303-21	SWITCH, TACTILE (1)					*****						
S703	1-554-303-21	SWITCH, TACTILE (2)											
S704	1-554-303-21	SWITCH, TACTILE (3)					*	A-4407-374-A	TUNER BOARD, COMPLETE				
S705	1-554-303-21	SWITCH, TACTILE (4)							*****				
S706	1-554-303-21	SWITCH, TACTILE (5)											
S707	1-554-303-21	SWITCH, TACTILE (6)						1-690-880-41	LEAD (WITH CONNECTOR)				
S708	1-554-303-21	SWITCH, TACTILE (7)							< CAPACITOR >				
S709	1-554-303-21	SWITCH, TACTILE (8)											
S710	1-554-303-21	SWITCH, TACTILE (9)											
S711	1-554-303-21	SWITCH, TACTILE (0)					C101	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S712	1-554-303-21	SWITCH, TACTILE (DIRECT)					C102	1-126-964-11	ELECT	10uF	20%	50V	
S713	1-554-303-21	SWITCH, TACTILE (MENU)					C103	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S714	1-554-303-21	SWITCH, TACTILE (RETURN)					C104	1-126-964-11	ELECT	10uF	20%	50V	
S717	1-554-303-21	SWITCH, TACTILE (DISPLAY)					C105	1-124-463-00	ELECT	0.1uF	20%	50V	
S718	1-554-303-21	SWITCH, TACTILE (PTY)					C201	1-162-288-31	CERAMIC	330PF	10%	50V	
S719	1-554-303-21	SWITCH, TACTILE (EON NEWS/INFO)					C202	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S720	1-554-303-21	SWITCH, TACTILE (EON TA)					C203	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S721	1-554-303-21	SWITCH, TACTILE (AUTO-BETICAL SELECT)					C204	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S722	1-554-303-21	SWITCH, TACTILE (MEMORY)					C205	1-126-967-11	ELECT	47uF	20%	16V	
S723	1-554-303-21	SWITCH, TACTILE (FM MODE)					C206	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S724	1-554-303-21	SWITCH, TACTILE (BAND)					C207	1-162-306-11	CERAMIC	0.01uF	20%	16V	
S727	1-554-303-21	SWITCH, TACTILE (CHARACTER)					C301	1-126-963-11	ELECT	4.7uF	20%	50V	
S728	1-554-303-21	SWITCH, TACTILE (TUNE MODE)					C302	1-126-963-11	ELECT	4.7uF	20%	50V	
							C303	1-126-964-11	ELECT	10uF	20%	50V	
< VIBRATOR >							C304	1-126-964-11	ELECT	10uF	20%	50V	
X701	1-760-422-11	VIBRATOR, CRYSTAL (4.192MHz)					C305	1-110-335-11	MYLAR	100PF	5%	50V	

*	1-668-815-11	ENCODER BOARD					C306	1-110-335-11	MYLAR	100PF	5%	50V	
		*****					C308	1-126-963-11	ELECT	4.7uF	20%	50V	
		< RESISTOR >					C309	1-126-963-11	ELECT	4.7uF	20%	50V	
R723	1-249-430-11	CARBON	12K	5%	1/4W		C319	1-126-934-11	ELECT	220uF	20%	16V	
		< VARIABLE RESISTOR >					C352	1-130-471-00	MYLAR	0.001uF	5%	50V	
RV701	1-475-696-11	ENCODER, ROTARY (TUNING/SELECT)					C353	1-130-471-00	MYLAR	0.001uF	5%	50V	
		< SWITCH >					C806	1-102-527-11	CERAMIC	82PF	5%	50V	
S715	1-554-303-21	SWITCH, TACTILE (ENTER)					C807	1-102-852-91	CERAMIC	47PF	5%	50V	

*	1-668-816-11	TRANSFORMER BOARD					C808	1-162-306-11	CERAMIC	0.01uF	20%	16V	
		*****					C809	1-126-967-11	ELECT	47uF	20%	16V	
		< CAPACITOR >					C810	1-126-961-11	ELECT	2.2uF	20%	50V	
C952	1-162-306-11	CERAMIC	0.01uF	20%	16V		C811	1-162-306-11	CERAMIC	0.01uF	20%	16V	
							C812	1-162-291-31	CERAMIC	560PF	10%	50V	
							C813	1-162-306-11	CERAMIC	0.01uF	20%	16V	
							C814	1-162-306-11	CERAMIC	0.01uF	20%	16V	
							C901	1-101-004-00	CERAMIC	0.01uF		50V	
							C902	1-101-004-00	CERAMIC	0.01uF		50V	
							C903	1-126-967-11	ELECT	47uF	20%	50V	
							C904	1-126-967-11	ELECT	47uF	20%	50V	
							C905	1-126-953-11	ELECT	2200uF	20%	35V	
							C906	1-126-969-11	ELECT	220uF	20%	50V	
							C907	1-126-935-11	ELECT	470uF	20%	6.3V	
							C908	1-126-964-11	ELECT	10uF	20%	50V	

Ref. No.	Part No.	Description	Remark		
< CONNECTOR >					
CNP901	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P			
CNP951	1-564-321-00	PIN, CONNECTOR 2P			
< LEAD >					
ECP900	1-690-880-51	LEAD (WITH CONNECTOR)			
< TRANSFORMER >					
△ PT901	1-423-525-11	TRANSFORMER, POWER			

*	A-4407-374-A	TUNER BOARD, COMPLETE			

	1-690-880-41	LEAD (WITH CONNECTOR)			
< CAPACITOR >					
C101	1-162-306-11	CERAMIC	0.01uF	20%	16V
C102	1-126-964-11	ELECT	10uF	20%	50V
C103	1-162-306-11	CERAMIC	0.01uF	20%	16V
C104	1-126-964-11	ELECT	10uF	20%	50V
C105	1-124-463-00	ELECT	0.1uF	20%	50V
C201	1-162-288-31	CERAMIC	330PF	10%	50V
C202	1-162-306-11	CERAMIC	0.01uF	20%	16V
C203	1-162-306-11	CERAMIC	0.01uF	20%	16V
C204	1-162-306-11	CERAMIC	0.01uF	20%	16V
C205	1-126-967-11	ELECT	47uF	20%	16V
C206	1-162-306-11	CERAMIC	0.01uF	20%	16V
C207	1-162-306-11	CERAMIC	0.01uF	20%	16V
C301	1-126-963-11	ELECT	4.7uF	20%	50V
C302	1-126-963-11	ELECT	4.7uF	20%	50V
C303	1-126-964-11	ELECT	10uF	20%	50V
C304	1-126-964-11	ELECT	10uF	20%	50V
C305	1-110-335-11	MYLAR	100PF	5%	50V
C306	1-110-335-11	MYLAR	100PF	5%	50V
C308	1-126-963-11	ELECT	4.7uF	20%	50V
C309	1-126-963-11	ELECT	4.7uF	20%	50V
C319	1-126-934-11	ELECT	220uF	20%	16V
C352	1-130-471-00	MYLAR	0.001uF	5%	50V
C353	1-130-471-00	MYLAR	0.001uF	5%	50V
C806	1-102-527-11	CERAMIC	82PF	5%	50V
C807	1-102-852-91	CERAMIC	47PF	5%	50V
C808	1-162-306-11	CERAMIC	0.01uF	20%	16V
C809	1-126-967-11	ELECT	47uF	20%	16V
C810	1-126-961-11	ELECT	2.2uF	20%	50V
C811	1-162-306-11	CERAMIC	0.01uF	20%	16V
C812	1-162-291-31	CERAMIC	560PF	10%	50V
C813	1-162-306-11	CERAMIC	0.01uF	20%	16V
C814	1-162-306-11	CERAMIC	0.01uF	20%	16V
C901	1-101-004-00	CERAMIC	0.01uF		50V
C902	1-101-004-00	CERAMIC	0.01uF		50V
C903	1-126-967-11	ELECT	47uF	20%	50V
C904	1-126-967-11	ELECT	47uF	20%	50V
C905	1-126-953-11	ELECT	2200uF	20%	35V
C906	1-126-969-11	ELECT	220uF	20%	50V
C907	1-126-935-11	ELECT	470uF	20%	6.3V
C908	1-126-964-11	ELECT	10uF	20%	50V

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
C909	1-126-967-11	ELECT	47uF	20%	16V		R310	1-247-815-91	CARBON	220	5%	1/4W	
C910	1-126-964-11	ELECT	10uF	20%	50V		△ R316	1-249-405-11	CARBON	100	5%	1/4W	F
C911	1-126-959-11	ELECT	0.47uF	20%	50V		R317	1-249-417-11	CARBON	1K	5%	1/4W	F
							R318	1-249-417-11	CARBON	1K	5%	1/4W	F
		< CONNECTOR >					△ R319	1-249-405-11	CARBON	100	5%	1/4W	F
CN101	1-568-834-11	SOCKET, CONNECTOR 15P					△ R320	1-249-381-11	CARBON	100	5%	1/4W	F
CNJ203	1-566-212-11	PIN, CONNECTOR 3P (EON CONTROL OUT)					R331	1-247-815-91	CARBON	220	5%	1/4W	
CNJ301	1-568-250-11	JACK, PIN 2P (LINE OUT)					R332	1-247-815-91	CARBON	220	5%	1/4W	
* CNP701	1-568-936-11	PIN, CONNECTOR 9P					R333	1-249-417-11	CARBON	1K	5%	1/4W	F
* CNP702	1-568-935-11	PIN, CONNECTOR 8P					R334	1-249-417-11	CARBON	1K	5%	1/4W	F
CNP952	1-766-267-11	PIN, CONNECTOR (PC BOARD) 5P					R361	1-249-437-11	CARBON	47K	5%	1/4W	
		< DIODE >					R362	1-249-437-11	CARBON	47K	5%	1/4W	
D201	8-719-991-33	DIODE 1SS133T-77					R806	1-249-421-11	CARBON	2.2K	5%	1/4W	F
D901	8-719-200-82	DIODE 11ES2					△ R807	1-249-401-11	CARBON	47	5%	1/4W	F
D902	8-719-200-82	DIODE 11ES2					R808	1-247-815-91	CARBON	220	5%	1/4W	
D903	8-719-200-82	DIODE 11ES2					R809	1-247-807-31	CARBON	100	5%	1/4W	
D904	8-719-200-82	DIODE 11ES2					R811	1-249-429-11	CARBON	10K	5%	1/4W	
D905	8-719-110-69	DIODE RD27ES-B4					△ R812	1-249-405-11	CARBON	100	5%	1/4W	F
D906	8-719-109-97	DIODE RD6.8ES-B2					△ R902	1-247-752-11	CARBON	1K	5%	1/2W	F
D907	8-719-200-82	DIODE 11ES2					R903	1-249-441-11	CARBON	100K	5%	1/4W	
D908	8-719-991-33	DIODE 1SS133T-77					R904	1-249-437-11	CARBON	47K	5%	1/4W	
		< IC >					R905	1-249-437-11	CARBON	47K	5%	1/4W	
IC201	8-759-812-35	IC LA1235					R906	1-249-437-11	CARBON	47K	5%	1/4W	
IC302	8-759-634-51	IC M5218AP					R909	1-249-417-11	CARBON	1K	5%	1/4W	F
IC802	8-759-450-86	IC BU1922					R910	1-249-417-11	CARBON	1K	5%	1/4W	F
IC901	8-759-820-09	IC LA5667					R911	1-249-417-11	CARBON	1K	5%	1/4W	F
		< COIL >					R912	1-249-417-11	CARBON	1K	5%	1/4W	F
L351	1-410-509-11	INDUCTOR 10uH							< VARIABLE RESISTOR >				
L352	1-410-509-11	INDUCTOR 10uH					RV201	1-241-765-11	RES, ADJ, CARBON 22K				
		< TRANSISTOR >							< VIBRATOR >				
Q301	8-729-922-37	TRANSISTOR 2SD2144S-UVW					X801	1-579-900-21	VIBRATOR, CRYSTAL (4.332MHz)				
Q302	8-729-922-37	TRANSISTOR 2SD2144S-UVW					*****						
Q303	8-729-922-37	TRANSISTOR 2SD2144S-UVW							MISCELLANEOUS				
Q304	8-729-922-37	TRANSISTOR 2SD2144S-UVW							*****				
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE					25	1-773-002-11	WIRE (FLAT TYPE)(15 CORE)				
Q901	8-729-029-56	TRANSISTOR DTA144ESA					27	1-693-410-21	TUNER (PACK)				
		< RESISTOR >					FL701	1-517-177-21	INDICATOR TUBE, FLUORESCENT				
△ R101	1-249-401-11	CARBON	47	5%	1/4W	F	△ PC901	1-575-651-21	CORD, POWER (AEP)				
R104	1-249-429-11	CARBON	10K	5%	1/4W		△ PC901	1-751-523-11	CORD, POWER (UK)				
R105	1-249-429-11	CARBON	10K	5%	1/4W		*****						
R201	1-249-413-11	CARBON	470	5%	1/4W	F			ACCESSORIES & PACKING MATERIALS				
△ R202	1-249-405-11	CARBON	100	5%	1/4W	F			*****				
R203	1-249-393-11	CARBON	10	5%	1/4W	F			1-501-594-11	ANTENNA (FM)			
R301	1-249-441-11	CARBON	100K	5%	1/4W				1-501-721-11	ANTENNA (LOOP)			
R302	1-249-441-11	CARBON	100K	5%	1/4W				1-558-271-11	CORD, CONNECTION (AUDIO, 108cm)			
R303	1-249-441-11	CARBON	100K	5%	1/4W				1-765-383-11	CORD (WITH CONNECTOR)			
R304	1-249-441-11	CARBON	100K	5%	1/4W				3-865-569-12	MANUAL, INSTRUCTION			
									(ENGLISH,FRENCH,SPANISH,PORTUGUESE)(AEP,UK)				
R305	1-247-843-11	CARBON	3.3K	5%	1/4W								
R306	1-247-843-11	CARBON	3.3K	5%	1/4W				3-865-569-22	MANUAL, INSTRUCTION			
R307	1-249-420-11	CARBON	1.8K	5%	1/4W	F			(GERMAN,DUTCH,SWEDISH,ITALIAN)(AEP)				
R308	1-249-420-11	CARBON	1.8K	5%	1/4W	F			3-865-569-32	MANUAL,INSTRUCTION (DANISH,FINNISH)(AEP)			
R309	1-247-815-91	CARBON	220	5%	1/4W								

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

