

TA-F490

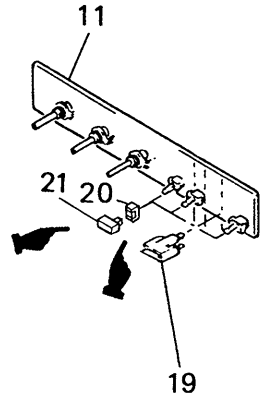
SERVICE MANUAL

Germany Model

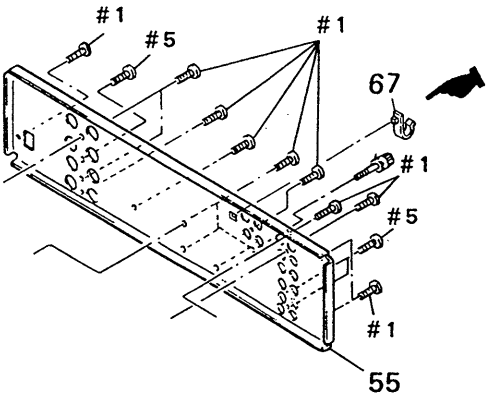
This set is almost the same as model TA-F470 previously produced.

Therefore, see the TA-F470 service manual for the information which is contained in this service manual.

 : Modified point

Page	TA-F470	TA-F490																																																																
1	Power consumption <table><tr><td></td><td></td><td>Canadian Model</td><td>Germany Model</td></tr><tr><td rowspan="3">DIN 1kHz</td><td>4 ohms</td><td>110W+110W</td><td>110W+110W</td></tr><tr><td>6 ohms</td><td>—</td><td>—</td></tr><tr><td>8 ohms</td><td>90W+90W</td><td>90W+90W</td></tr></table>			Canadian Model	Germany Model	DIN 1kHz	4 ohms	110W+110W	110W+110W	6 ohms	—	—	8 ohms	90W+90W	90W+90W	Power consumption <table><tr><td></td><td></td><td>Canadian Model</td><td>Germany Model</td></tr><tr><td rowspan="3">DIN 1kHz</td><td>4 ohms</td><td>110W+110W</td><td>115W+115W</td></tr><tr><td>6 ohms</td><td>—</td><td>—</td></tr><tr><td>8 ohms</td><td>90W+90W</td><td>90W+90W</td></tr></table>			Canadian Model	Germany Model	DIN 1kHz	4 ohms	110W+110W	115W+115W	6 ohms	—	—	8 ohms	90W+90W	90W+90W																																				
		Canadian Model	Germany Model																																																															
DIN 1kHz	4 ohms	110W+110W	110W+110W																																																															
	6 ohms	—	—																																																															
	8 ohms	90W+90W	90W+90W																																																															
		Canadian Model	Germany Model																																																															
DIN 1kHz	4 ohms	110W+110W	115W+115W																																																															
	6 ohms	—	—																																																															
	8 ohms	90W+90W	90W+90W																																																															
17	<table><tr><th>Ref. No.</th><th>Part No.</th><th>Description</th><th>Remark</th></tr><tr><td>1</td><td>4-945-617-01</td><td>PANEL, FRONT</td><td></td></tr><tr><td>5</td><td>4-945-600-01</td><td>KNOB (R21)</td><td></td></tr><tr><td>6</td><td>4-945-601-01</td><td>KNOB (F25)</td><td></td></tr><tr><td>8</td><td>4-926-836-01</td><td>CUSHION (BOTTON)</td><td></td></tr><tr><td>9</td><td>4-929-289-01</td><td>BUTTON</td><td></td></tr><tr><td>18</td><td>X-4941-617-1</td><td>FOOT (58175) ASSY</td><td></td></tr></table>	Ref. No.	Part No.	Description	Remark	1	4-945-617-01	PANEL, FRONT		5	4-945-600-01	KNOB (R21)		6	4-945-601-01	KNOB (F25)		8	4-926-836-01	CUSHION (BOTTON)		9	4-929-289-01	BUTTON		18	X-4941-617-1	FOOT (58175) ASSY		 <table><tr><th>Ref. No.</th><th>Part No.</th><th>Description</th><th>Remark</th></tr><tr><td>1</td><td>4-945-617-32</td><td>PANEL, FRONT</td><td></td></tr><tr><td>5</td><td>4-949-931-01</td><td>KNOB (DIA. 21)</td><td></td></tr><tr><td>6</td><td>4-949-932-01</td><td>KNOB (DIA. 25)</td><td></td></tr><tr><td>8</td><td>4-952-154-01</td><td>CUSHION (PE)</td><td></td></tr><tr><td>9</td><td>4-949-281-01</td><td>BUTTON</td><td></td></tr><tr><td>18</td><td>4-943-148-41</td><td>FOOT (F58175SW)</td><td></td></tr><tr><td>20</td><td>4-864-307-00</td><td>RING</td><td></td></tr><tr><td>21</td><td>4-947-011-01</td><td>BUTTON (F)</td><td></td></tr></table>	Ref. No.	Part No.	Description	Remark	1	4-945-617-32	PANEL, FRONT		5	4-949-931-01	KNOB (DIA. 21)		6	4-949-932-01	KNOB (DIA. 25)		8	4-952-154-01	CUSHION (PE)		9	4-949-281-01	BUTTON		18	4-943-148-41	FOOT (F58175SW)		20	4-864-307-00	RING		21	4-947-011-01	BUTTON (F)	
Ref. No.	Part No.	Description	Remark																																																															
1	4-945-617-01	PANEL, FRONT																																																																
5	4-945-600-01	KNOB (R21)																																																																
6	4-945-601-01	KNOB (F25)																																																																
8	4-926-836-01	CUSHION (BOTTON)																																																																
9	4-929-289-01	BUTTON																																																																
18	X-4941-617-1	FOOT (58175) ASSY																																																																
Ref. No.	Part No.	Description	Remark																																																															
1	4-945-617-32	PANEL, FRONT																																																																
5	4-949-931-01	KNOB (DIA. 21)																																																																
6	4-949-932-01	KNOB (DIA. 25)																																																																
8	4-952-154-01	CUSHION (PE)																																																																
9	4-949-281-01	BUTTON																																																																
18	4-943-148-41	FOOT (F58175SW)																																																																
20	4-864-307-00	RING																																																																
21	4-947-011-01	BUTTON (F)																																																																

INTEGRATED STEREO AMPLIFIER
SONY®

Page	TA-F470				TA-F490			
18								
	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	54	3-706-165-00	SCREW		54	4-947-010-01	SCREW, FEEDER FIXED	
	55	* 4-944-985-31	PANEL, BACK (Germany)		55	* 4-944-985-61	PANEL, BACK	
					67	* 4-949-235-01	HOOK	
25								
	3-753-380-41 MANUAL, INSTRUCTION (GERMAN, DUTCH, SWEDISH, ITALIAN) (AEP, Germany)				3-755-007-41 MANUAL, INSTRUCTION (GERMAN)			
	# 4	* 4-944-053-01	INDIVIDUAL CARTON		# 4	* 4-951-283-01	INDIVIDUAL CARTON	
		7-682-549-04	SCREW +BVTT 3X10 (S)			7-685-648-79	SCREW +BVTT 3X12 TYPE2 IT-3	