


TC-D709

SERVICE MANUAL

- TC-D709 is deck section in LBT-A67CD/A67CDM/D609CD.

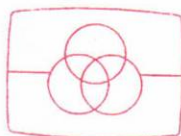

Free service manuals

Gratis schema's

Digitized by

www.freeservicemanuals.info

AEP Model
UK Model
E Model
Australian Model
Tourist Model

TC-D709 is based on model TC-D707.

As only difference parts of TC-D707 in this service manual.

Refer to TC-D707 service manual previously issued for the other information.

DIFFERENCE PARTS LIST

TC-D707 service manual				TC-D709
Page	Ref. No.	Description	Part No. (Destination)	Part No.
25	1	LID (A) ASSY, CASSETTE	X-3364-983-1 (except for IT) X-3364-984-1 (IT)	X-3364-983-1
	2	LID (B) ASSY, CASSETTE	X-3364-985-1 (except for IT) X-3364-986-1 (IT)	X-3366-401-1
	10	CASE	*4-939-803-31 (except for IT) *4-939-803-71 (IT)	*4-939-803-31
	11	PANEL, BACK	*3-377-136-51 (except for G) *3-377-136-61 (G)	*3-387-099-31 (except for G) *3-387-099-42 (G)
26	51	PANEL ASSY, FRONT	X-3364-708-1 (except for IT) X-3364-709-1 (IT)	X-3364-708-1
	55	KNOB (SLIDE)	*3-377-120-01 (except for IT) *3-377-120-11 (IT)	*3-377-120-01

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.



9-957-807-11

Sony Corporation
Audio Group

STEREO CASSETTE DECK
SONY®

English
 93C0461-1
 Printed in Japan
 © 1993. 3

Published by Audio Corporate Planning Group