

TC-W345

SONY[®] SERVICE MANUAL

*US Model
Canadian Model
AEP Model
E Model
Australian Model*


SUPPLEMENT-1

File this Supplement with the Service Manual.

Subject : Schematic Diagram change
Block Diagram

New type identification :

[AUDIO BOARD] — Component side —

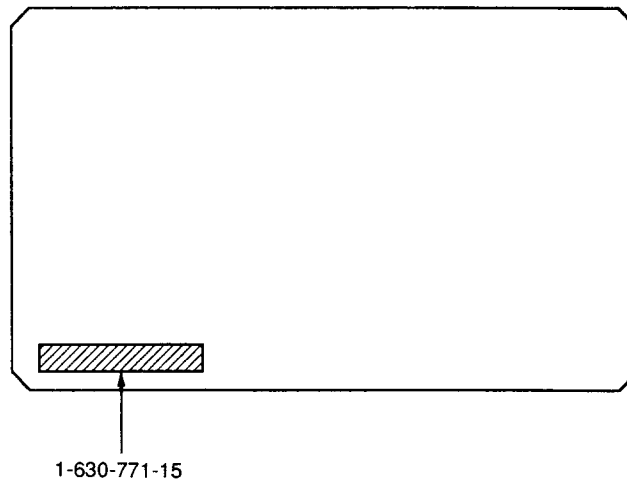

 : indicates changed portion

CHANGE PARTS LIST

Page	Ref. No.	Former	New
18	C153	_____	1-136-437-11 FILM 220PF 5% 630V
	C253	_____	1-136-437-11 FILM 220PF 5% 630V
19	CT301	1-141-225-00 CAP, TUNING, TRIMAR	_____
21	RV104	_____	1-241-767-21 RES, ADJ, CERMET 100K
	RV204	_____	1-241-767-21 RES, ADJ, CERMET 100K

ELECTRICAL ADJUSTMENTS (Service manual page 5)


RECORD BIAS ADJUSTMENT DECK B

Setting :


TAPE SELECT : TYPE-I (DECK-B)

Procedure :

1. Mode : record

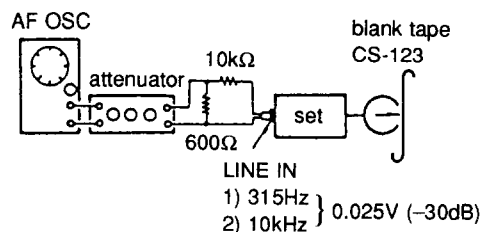

2. Mode : playback

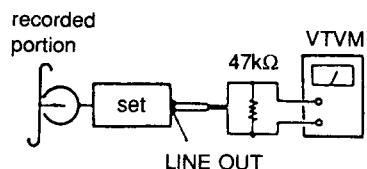

Playback the tape recorded in step 1. If the specification is not satisfied, adjust RV104 (L-CH), RV204 (R-CH) and repeat steps 1 and 2.

Measurement limit :

The LINE OUT level of 10kHz signal relative to that of 315Hz : -0.5dB to 0.5dB.

Adjustment Location : Audio Board

— Component side —

