

TC-W435

SERVICE MANUAL

*US Model
AEP Model
UK Model
E Model*

TC-W435 is based on model TC-W490.
As only difference parts of TC-W490 in this service manual.
Refer to TC-W490 service manual previously issued for the other information.

DIFFERENCE PARTS LIST

Page	TC-W490				TC-W435		
	Ref. No.	Part No.	Description	Remarks	Part No.	Description	Remarks
33 43	*3	3-377-350-01	PANEL, BACK (US, Canadian)		*3-385-935-01	PANEL, BACK (US)	
	*3	3-377-350-21	PANEL, BACK (AEP)		*3-385-935-12	PANEL, BACK (AEP)	
	*3	3-377-350-31	PANEL, BACK (UK)		*3-385-935-22	PANEL, BACK (UK)	
	*3	3-377-350-41	PANEL, BACK (E)		*3-385-935-32	PANEL, BACK (E)	
	△4	1-555-795-00	CORD, POWER, EULOPLUG (AEP)		△1-555-750-00	CORD, POWER (AEP)	
	△4	1-556-035-00	CORD, POWER (UK)		△1-696-572-11	CORD, POWER (UK)	
	5	4-943-148-32	FOOT (F58175SW) (US, Canadian)		3-318-688-51	FOOT (F58175S) (US)	
	5				3-318-688-31	FOOT (F58175S) (AEP, UK, E)	
	*7	3-346-265-11	HOLDER, PC BOARD		*3-346-265-31	HOLDER, PC BOARD	
	*8	A-2006-737-A	SYSTEM CONTROL BOARD, COMPLETE (US, Canadian, UK, E)		*A-2006-875-A	SYSTEM CONTROL BOARD, COMPLETE (US, UK, E)	
	*8	A-2006-839-A	SYSTEM CONTROL BOARD, COMPLETE (AEP)		*A-2006-876-A	SYSTEM CONTROL BOARD, COMPLETE (AEP)	
	10	1-690-891-11	WIRE, FLAT TYPE (11CORE)		1-696-945-11	WIRE (FLAT TYPE) (11CORE)	
	11	1-690-889-11	WIRE, FLAT TYPE (9CORE)		1-696-964-11	WIRE (FLAT TYPE) (7CORE)	
	12	1-690-890-11	WIRE, FLAT TYPE (9CORE)		1-696-965-11	WIRE (FLAT TYPE) (7CORE)	
	13	3-332-578-61	CASE		*4-943-088-51	CASE	
	△T901	1-450-837-11	TRANSFORMER, POWER (US, Canadian)		△1-450-837-21	TRANSFORMER, POWER (US)	
	△T901	1-450-838-11	TRANSFORMER, POWER (AEP, UK)		△1-450-838-21	TRANSFORMER, POWER (AEP, UK)	
	△T901	1-450-839-11	TRANSFORMER, POWER (E)		△1-450-839-21	TRANSFORMER, POWER (E)	

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

STEREO CASSETTE DECK
SONY®

Page	TC-W490				TC-W435			
34	Ref. No.	Part No.	Description	Remarks	Part No.	Description	Remarks	
	54	X-3364-742-1	LID (A) ASSY, CASSETTE		X-3366-252-1	LID (A) ASSY, CASSETTE		
	57	X-3340-195-1	HOLDER (R) ASSY, CASSETTE		A-4325-164-A	HOLDER (R) ASSY, CASSETTE		
	62	X-3340-194-1	HOLDER (L) ASSY, CASSETTE		A-4325-163-A	HOLDER (L) ASSY, CASSETTE		
	64	X-3364-748-1	PANEL ASSY, FRONT (US, Canadian)		X-3366-278-1	PANEL ASSY, FRONT (US)		
	64	X-3364-749-1	PANEL ASSY, FRONT (AEP, UK, E)		X-3366-279-1	PANEL ASSY, FRONT (AEP, UK, E)		
	43	65	3-377-340-01	BUTTON (FW)		3-385-936-01	BUTTON (FW)	
		66	3-377-341-01	BUTTON (SR)		3-377-341-11	BUTTON (SR)	
		68	1-690-888-11	WIRE, FLAT TYPE (31CORE)		1-696-946-11	WIRE (FLAT TYPE) (31CORE)	
		71	X-3364-743-1	LID (B) ASSY, CASSETTE		X-3366-253-1	LID (B) ASSY, CASSETTE	
72		3-377-328-01	BUTTON (EJECT)		3-377-328-11	BOTTOM (EJECT)		
75		3-377-334-01	KNOB (REC)		3-377-334-11	KNOB (REC)		
35	*115	1-634-841-14	SW-A BOARD (DECK A)		*1-638-020-11	LIFE SW BOARD		
	*123	A-2006-755-A	AUDIO BOARD, COMPLETE (DECK A)		*A-2006-891-A	AUDIO BOARD, COMPLETE (DECK A)		
	*123	A-2006-756-A	AUDIO BOARD, COMPLETE (DECK B)		*A-2006-890-A	AUDIO BOARD, COMPLETE (DECK B)		
36	162	X-3359-405-1	LEVER (RF ARM) ASSY		X-3366-569-1	ARM ASSY, RF		
37	*	A-2006-755-A	AUDIO BOARD, COMPLETE (DECK A)		*A-2006-891-A	AUDIO BOARD, COMPLETE (DECK A)		
	*	A-2006-756-A	AUDIO BOARD, COMPLETE (DECK B)		*A-2006-890-A	AUDIO BOARD, COMPLETE (DECK B)		
39	*	1-634-841-14	SW-A BOARD (DECK A)		*1-638-020-11	LIFE SW BOARD (DECK A)		
	*CNP81	1-568-852-11	SOCKET, CONNECTOR 9P		*1-568-850-11	SOCKET,CONNECTOR 7P		
	*	1-634-841-14	SW-A BOARD (DECK B)		*1-638-020-11	LIFE SW BOARD (DECK B)		
	*CNP81	1-568-852-11	SOCKET, CONNECTOR 9P		*1-568-850-11	SOCKET, CONNECTOR 7P		
	*	A-2006-737-A	SYSTEM CONTROL BOARD,COMPLETE (US, Canadian, UK, E)		*A-2006-875-A	SYSTEM CONTROL BOARD, COMPLETE (US, UK, E)		
	*	A-2006-839-A	SYSTEM CONTROL BOARD,COMPLETE (AEP)		*A-2006-876-A	SYSTEM CONTROL BOARD,COMPLETE (AEP)		
40	*CN803	1-568-828-11	SOCKET, CONNECTOR 9P		*1-568-826-11	SOCKET, CONNECTOR 7P		
	*CN804	1-568-828-11	SOCKET, CONNECTOR 9P		*1-568-826-11	SOCKET, CONNECTOR 7P		

ACCESSORIES & PACKING MATERIALS

1-559-533-11 CORD, CONNECTION
* 3-383-197-01 CUSHION
* 3-383-198-01 INDIVIDUAL CARTON (US, E)
* 3-383-198-11 INDIVIDUAL CARTON (AEP, UK)
3-754-779-12 MANUAL, INSTRUCTION (AEP, E)
(ENGLISH, FRENCH, SPANISH, PORTUGUESE)
3-754-779-21 MANUAL, INSTRUCTION (US, UK)
(ENGLISH)
3-754-779-42 MANUAL, INSTRUCTION (AEP)
(GERMAN, DUTCH, SWEDISH, ITALIAN)
3-754-779-62 MANUAL, INSTRUCTION (E)
(CHINESE)
3-754-779-72 MANUAL, INSTRUCTION (AEP)
(DANISH, FINNISH)