

TC-WR651

SERVICE MANUAL

US Model

The TC-WR651 is similar to the TC-WR445 US model.
So this manual contains only the points which differ from TC-WR445.
For the informations not contained in this manual, please refer to the
TC-WR445 service manuals (9-959-400-11), supplement-1 (9-959-400-81)
and supplement-2 (9-959-400-82) previously issued.

ELECTRICAL PARTS LIST

SYSTEM CONTROL

(Page 34 - 36)

Ref. No.	TC-WR445						TC-WR651	
	Part No.	Description					Part No.	Description
	* A-2007-167-A	SYSTEM CONTROL BOARD, COMPLETE					* A-2007-366-A	SYSTEM CONTROL BOARD, COMPLETE
	4-924-204-01	PLATE, GROUND						
C115	1-124-443-00	ELECT	100uF	20%	10V			
C215	1-124-443-00	ELECT	100uF	20%	10V			
C503	1-124-925-11	ELECT	2.2uF	20%	100V			
CN501	1-506-468-11	PIN, CONNECTOR 3P						
J501	1-750-735-11	JACK (LARGE TYPE) (PHONES)						
Q503	8-729-900-74	TRANSISTOR DTC143TS						
R121	1-249-409-11	CARBON	220	5%	1/4W			
R122	1-249-441-11	CARBON	100K	5%	1/4W			
R221	1-249-409-11	CARBON	220	5%	1/4W			
R222	1-249-441-11	CARBON	100K	5%	1/4W			
R520	1-249-430-11	CARBON	12K	5%	1/4W			

NOTE :

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

STEREO CASSETTE DECK
SONY®


EXPLODED VIEWS

 : different portion

(Page 30)


6-1. CHASSIS SECTION

 ▲ A : POWER TRANSFORMER BOARD

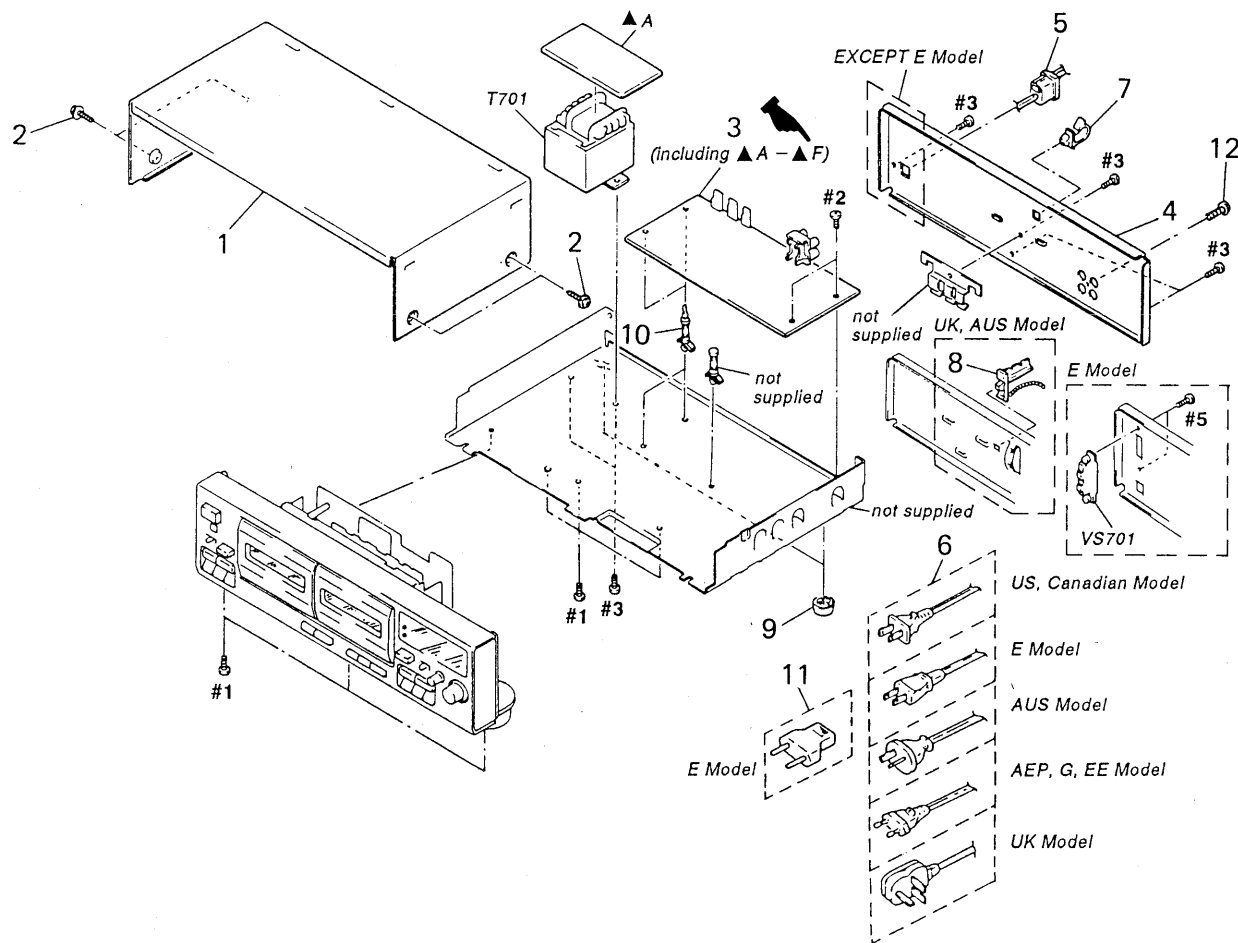

6-2. FRONT PANEL SECTION

 - ▲ B : PANEL (A) BOARD
 ▲ C : PANEL (C) BOARD
 ▲ D : PANEL (B) BOARD
 ▲ E : HEADPHONE BOARD
 ▲ F : PANEL (D) BOARD

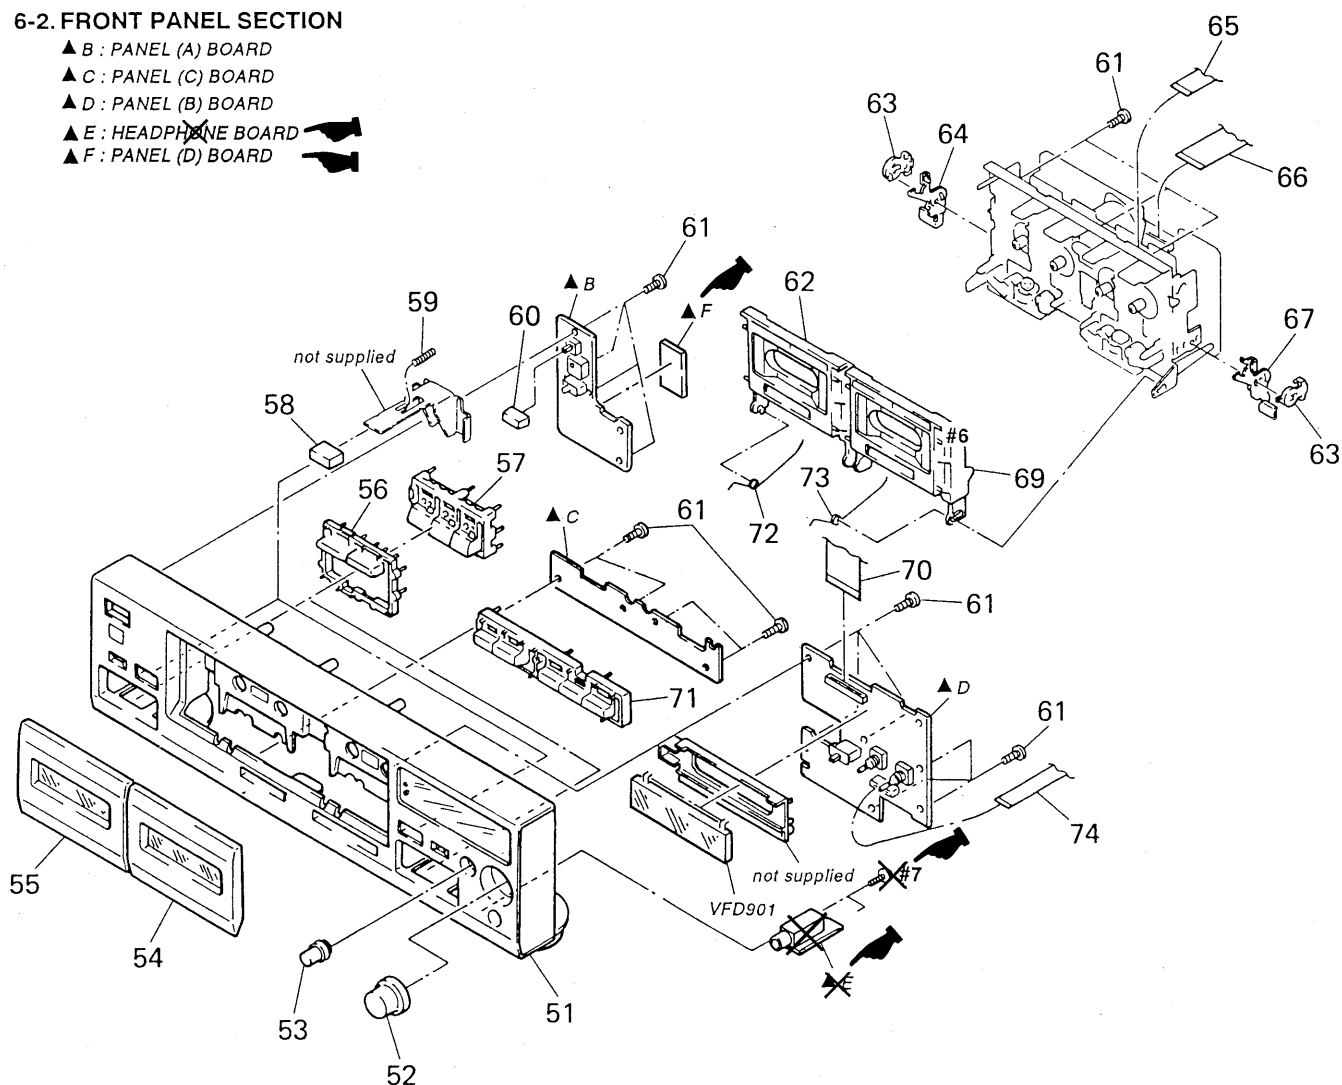**EXPLODED VIEWS PARTS LIST****NOTE :**




- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


Page	Ref. No.	TC-WR651
30	*1	4-943-088-41 CASE
	2	3-363-099-01 SCREW (CASE 3TP2)
	*3	A-2007-366-A SYSTEM CONTROL BOARD, COMPLETE
	*4	3-910-564-91 PANEL, BACK
	*7	
	*10	3-346-265-31 HOLDER, PC BOARD
31	51	X-3368-859-1 PANEL ASSY, FRONT
	54	X-3369-661-1 LID (B) ASSY, CASSETTE
	55	X-3369-660-1 LID (A) ASSY, CASSETTE
	59	3-359-906-11 SPRING, COMPRESSION
	60	4-922-921-31 BUTTON (POWER)
	62	X-4943-776-1 HOLDER (L) ASSY, CASSETTE
	69	X-4943-775-1 HOLDER (R) ASSY, CASSETTE

ACCESSORIES & PACKING MATERIALS

Page	TC-WR651
37	1-551-734-11 CORD, CONNECTION
	3-798-187-21 MANUAL, INSTRUCTION (ENGLISH)
	3-912-543-71 INDIVIDUAL CARTON

9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

   

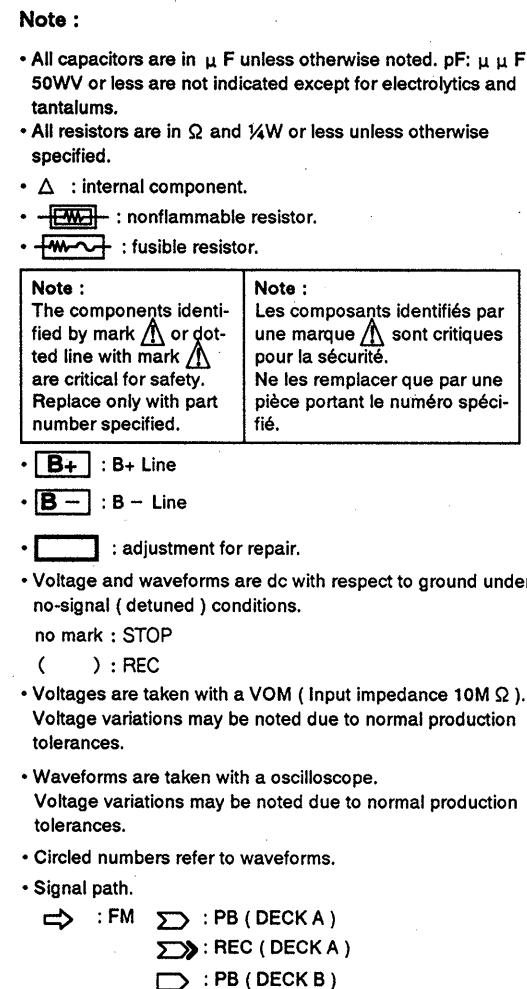 

9-960-187-11

Sony Corporation
Consumer A&V Products Company
Home A&V Products Div.

English
95E027032-1
Printed in Singapore
© 1995.5
Published by Home A&V Products Div.
Quality Engineering Dept.