

ALIGNMENT PROCEDURE

RADIO CONTROLS—Set volume control to maximum. Set tuning control and band switch, SW1, as indicated in chart.

OUTPUT METER—Connect across voice-coil terminals.

SIGNAL GENERATOR—Connect generator and set frequency as indicated in chart. Use modulated output.

OUTPUT LEVEL—During alignment, adjust signal-generator output to hold output-meter reading below 1.25 volts.

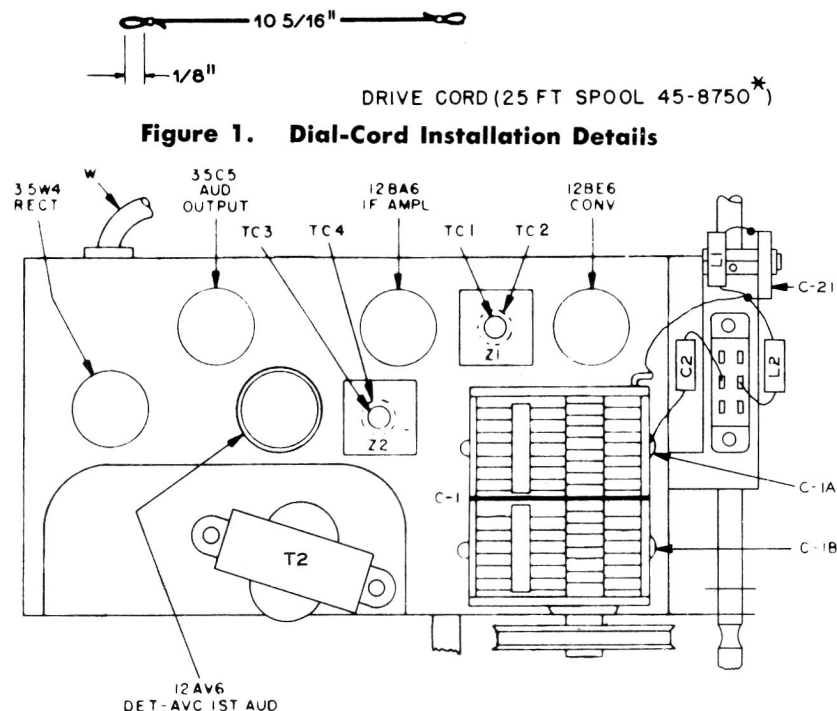


Figure 1. Dial-Cord Installation Details

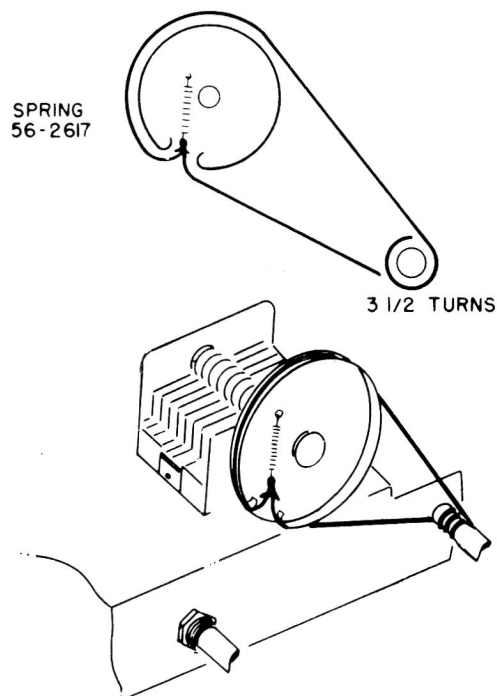


Figure 2. Top View, Showing Trimmer Locations

ALIGNMENT CHART

STEP	SIGNAL GENERATOR		RADIO			ADJUST
	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	BAND SWITCH SETTING	SPECIAL INSTRUCTIONS	
1	Ground lead to B-; output lead through a .1- μ f. condenser to grid (pin 7) of 12BE6.	460 kc.	Tuning gang fully open.	Broadcast	Adjust tuning cores, in order given, for maximum output. (TC1 and TC3 are located at top of transformers.)	TC4—2nd i-f sec. TC3—2nd i-f pri. TC2—1st i-f sec. TC1—1st i-f pri.
2	Radiating loop (see NOTE below).	1620 kc.	*1620 kc.	Broadcast	Adjust trimmer for maximum output.	C1-B osc.
3	Same as step 2.	1500 kc.	1500 kc.	Broadcast	Adjust trimmer for maximum output.	C1-A aerial (broadcast).
4	Same as step 2.	3200 kc.	3200 kc.	Special services	Adjust trimmer for maximum output.	C-21—aerial (special services).

NOTE: Make up a 6-8 turn, 6-inch-diameter loop from insulated wire; connect to signal-generator leads and place near radio loop.

* For proper adjustment of the oscillator trimmer, fully open the tuning gang and insert a .006-inch nonmetallic shim between the heel of the rotor and the top of the stator plates. Close the tuning gang sufficiently to hold the shim in place, and then remove the shim without disturbing the gang setting.