




769, 772, 3, 4 840, 2, 5, 6

ALIGNMENT CHART

STEP	SIGNAL GENERATOR	RADIO			ADJUST
	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	
1.	Ground lead to B—; output lead through a .1 mf condenser to grid (pin 7) of 12BE6 or top of r-f tuning condenser.	455 kc.	Tuning gang fully open.	Adjust tuning cores, in order given, for maximum output.	Z2—top Z2—bottom Z1—bottom Z1—top
2.	Radiating loop (See Note below).	1620 kc.	1620 kc.	Adjust for maximum output.	C1-B—osc.
3.	Same as step 2.	1500 kc.	1500 kc.	Adjust for maximum output.	C1-A—aerial

NOTE: Make up a 6-8 turn, 6 inch diameter loop from insulated wire, connect to signal-generator leads, and place near radio loop.
For proper adjustment of the oscillator trimmer, fully open the tuning gang and insert a .006 inch non-metallic shim between the heel of the rotor and the top of the stator plates. Close the tuning gang sufficiently to hold the shim in place, and then remove the shim without disturbing the gang setting.

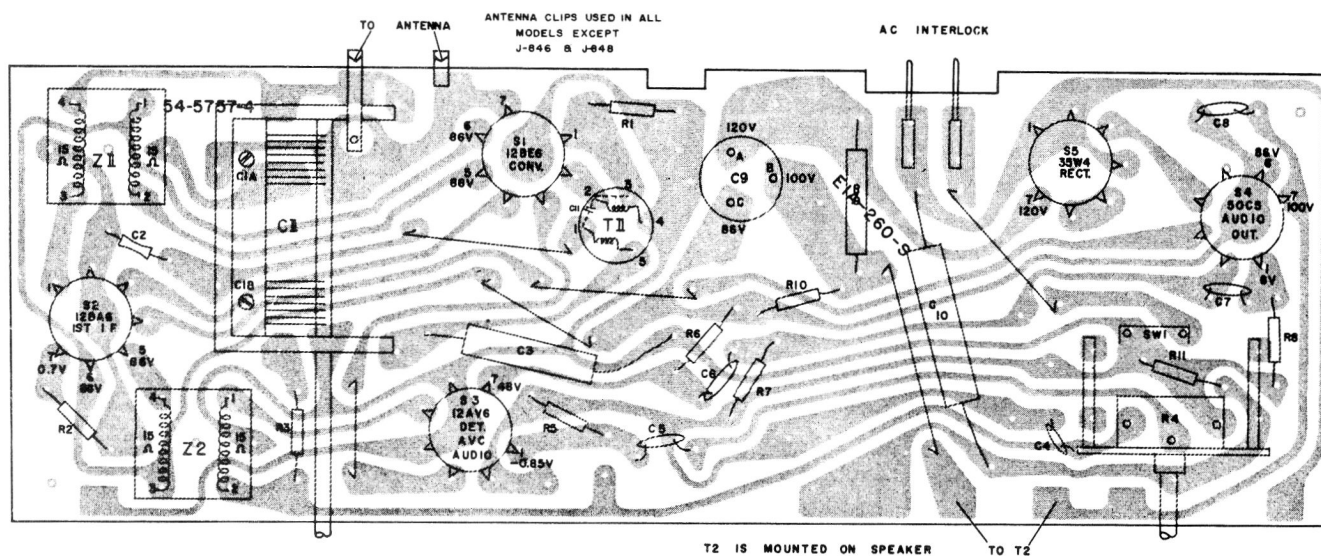

Bottom View of Perma Circuit Panel Component Layout

(See Fig. 3 for foil differences.)


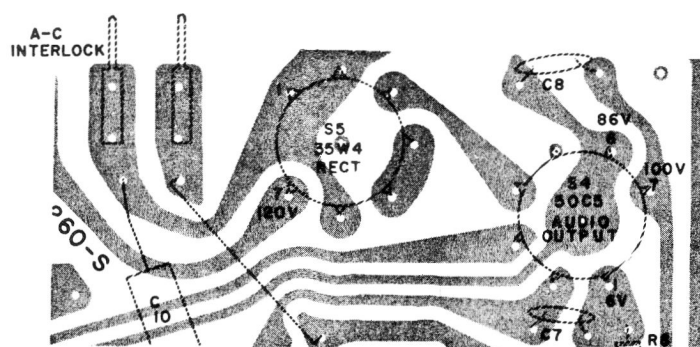


Fig. 3 Bottom View, Partial Printed Panel Showing Models -840, -842, -845, -846. Foil Difference in Rect. Filament Circuit

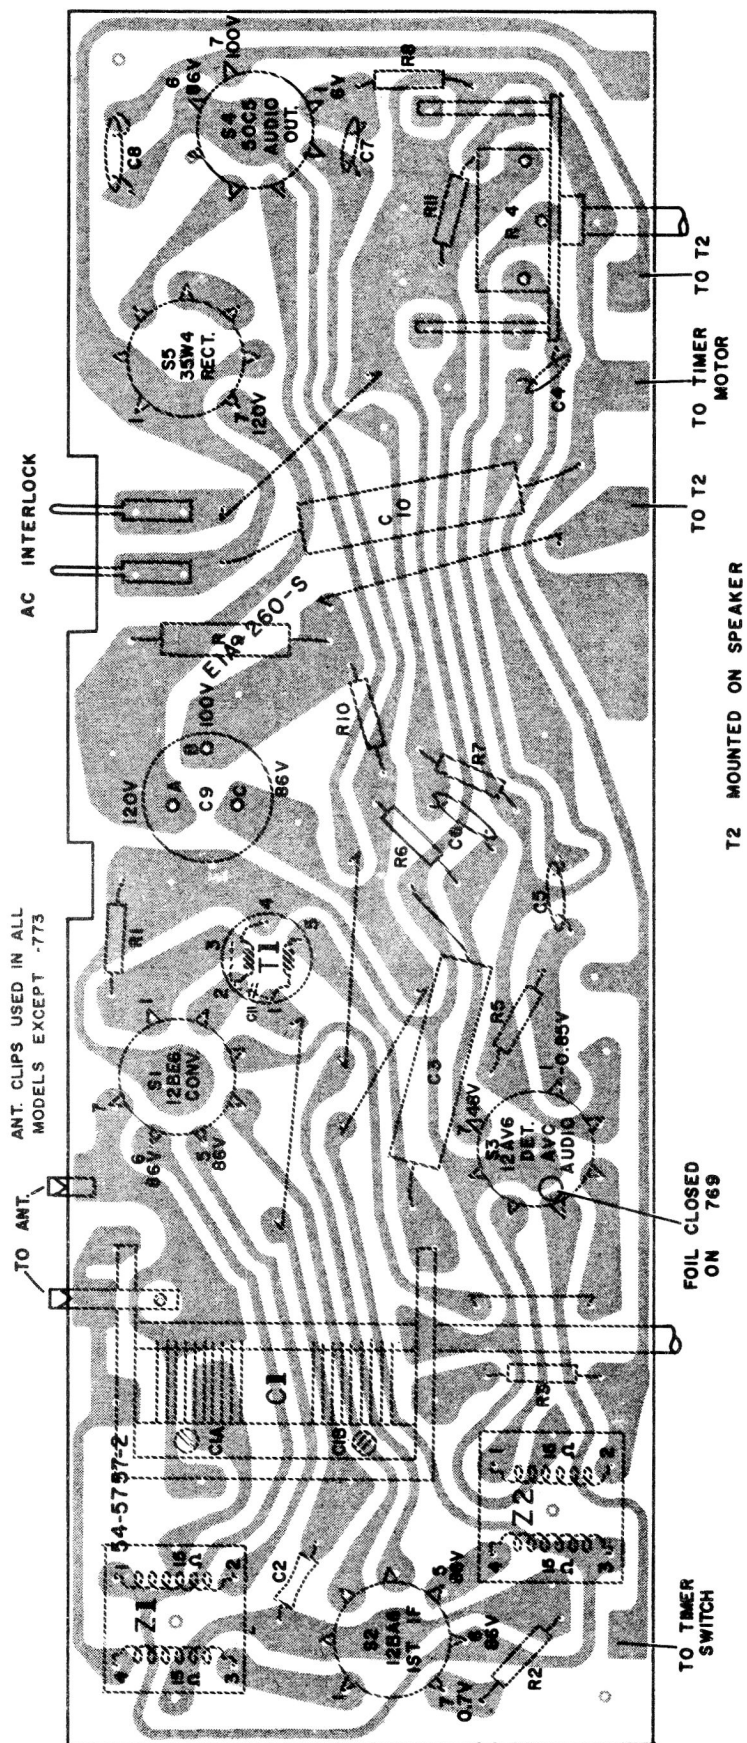

Bottom View of Perma Circuit Panel Component Layout Models -772, -773, -774

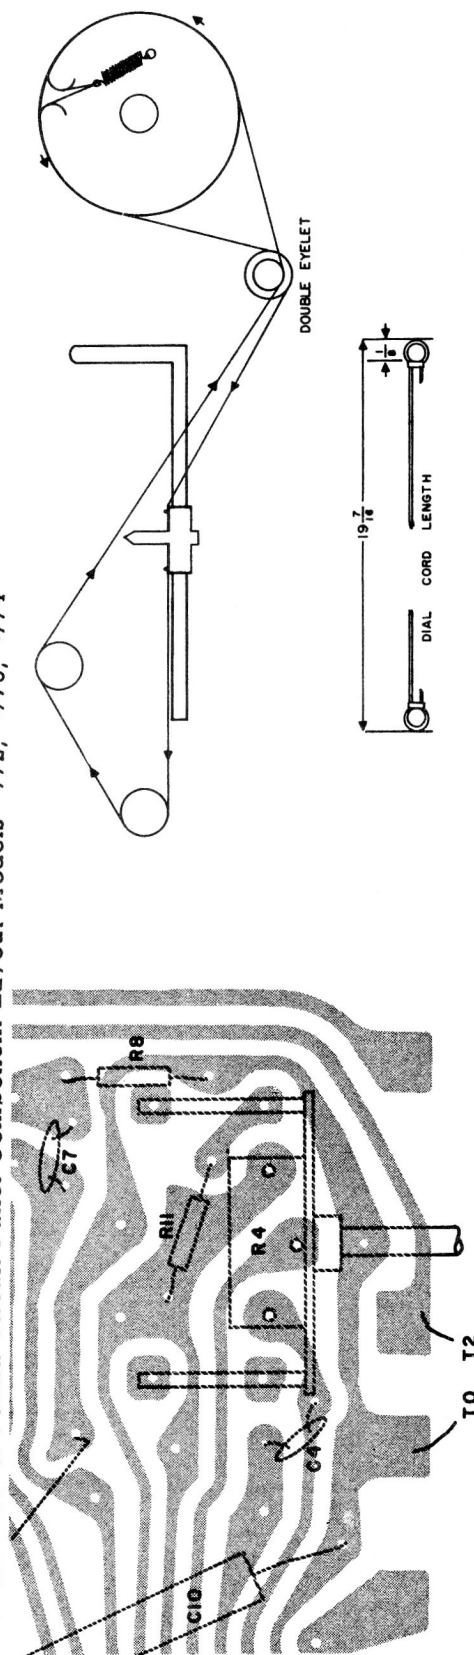


Fig. 6 Bottom View, Partial Printed Panel Showing Model 769 Foil Difference in B-Circuit