

CFD-110

SERVICE MANUAL

US Model
Canadian Model
AEP Model

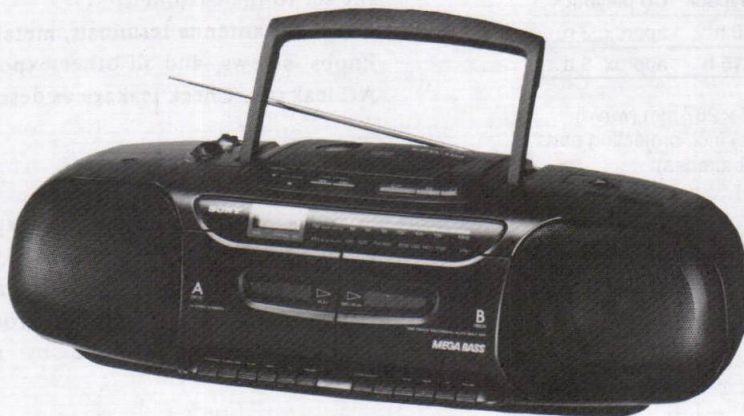


Photo: US, Canadian model

MEGA BASS

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 3.2-ohm loads, both channels driven from 150-10,000 Hz; rated 2.0 W per channel-
minimum RMS power, with no more than 10 % total harmonic distortion in AC operation.

CD player section

System	Compact disc digital audio system
Laser diode properties	Material: GaAlAs Wave length: 780 nm Emission duration: Continuous Laser output: Less than 44.6 μ W (This output is the value measured at a distance of about 200 mm from the objective lens surface on the optical pick-up block.) 200 r/min (rpm) to 500 r/min (rpm) (CLV)
Spindle speed	200 r/min (rpm) to 500 r/min (rpm) (CLV)
Error correction	Sony Refined Super Strategy Cross Interleave Reed Solomon Code 2
Number of channels	2
Frequency response	20-20,000 Hz +1/-2 dB
Wow and flutter	Below measurable limit

Radio section

Frequency range

model	FM	AM
US, Canadian	87.6 - 108MHz	530 - 1,710kHz
Italian	87.5 - 108MHz	526.5 - 1,606.5kHz
AEP	87.6 - 107MHz	531 - 1,602kHz

Model Name Using Similar Mechanism	CFD-10
Optical Device Name	KSM-2101BAN
Tape Transport Mechanism Type	MF-W308-64

Antennas

FM: Telescopic antenna
AM: Built-in ferrite bar antenna

Cassette-corder section

Recording system	4-track 2-channel stereo
Frequency response	TYPE I (normal) cassette: 70-10,000 Hz

General

Speaker	Full range: 10 cm dia., 3.2 ohms cone type
Inputs	Mixing microphone input jack (minijack): Sensitivity 3 mV For low impedance microphone
Outputs	Headphones jack (stereo minijack): For 16-68 ohms impedance headphones
Power output (excluding US model)	2.3 W + 2.3 W (at 3.2 ohms, 10% harmonic in DC operation)

— Continued on next page —

CD RADIO CASSETTE-CORDER
SONY®

Power requirements 120 V AC, 60Hz (US, Canadian model)
220 V wisselstroom, 50Hz (AEP, Italian model)

Power consumption 17 W

Battery life For CD radio cassette-corder:

	FM recording	Tape playback	CD playback
Sony SUM-1 (NS)	approx. 15 h	approx. 6 h	approx. 3 h
Sony Alkaline AM1	approx. 24 h	approx. 15 h	approx. 8 h

Dimensions Approx. 591 × 177 × 267 mm (w/h/d)
(23% × 7 × 10% in.) incl. projecting parts


Mass 5 kg (11 lb) (incl. batteries)

Supplied accessories AC power cord (1)

Design and specifications subject to change without notice.

Information

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

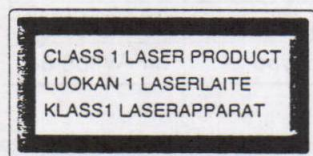

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

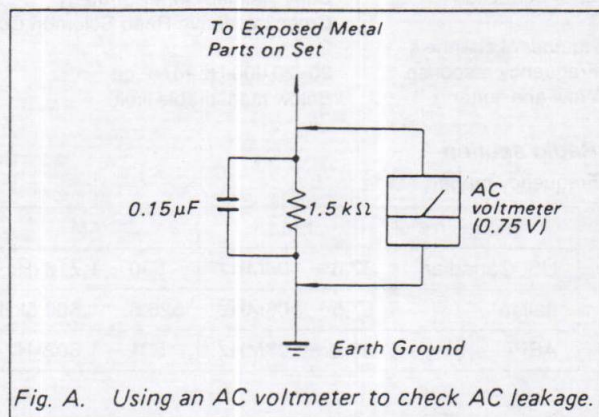


Fig. A. Using an AC voltmeter to check AC leakage.

SECTION 1

SERVICING NOTES

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
	Specifications	1
1.	SERVICING NOTES	3
2.	GENERAL	4
3.	DISASSEMBLY	5
4.	MECHANICAL ADJUSTMENTS	7
5.	ELECTRICAL ADJUSTMENTS	
5-1.	Tape Recorder Section	7
5-2.	Tuner Section	8
5-3.	CD Section	9
6.	DIAGRAMS	
6-1.	Tuner Section Block Diagram	12
6-2.	MD/Main/Power Section Block Diagram	13
6-3.	CD Section Block Diagram	15
6-4.	Tuner Section Printed Wiring Boards and Schematic Diagram	17
6-5.	MD/Main/Power Section Printed Wiring Boards	20
6-6.	MD/Main/Power Section Schematic Diagram	23
6-7.	CD Section Schematic Diagram	29
6-8.	CD Section Printed Wiring Boards	33
7.	EXPLODED VIEWS	39
8.	ELECTRICAL PARTS LIST	45

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.


The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe more than 25 cm away from the objective lens.

MODEL IDENTIFICATION


— SPECIFICATION LABEL —

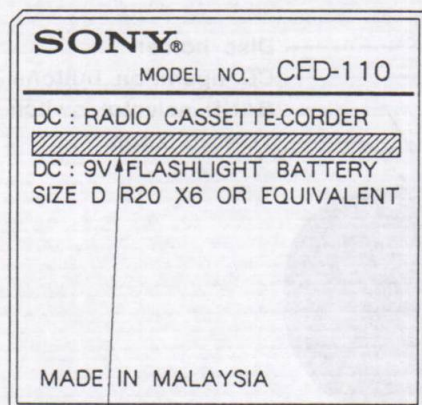

US, Canadian model: AC 120 V ~60 Hz 17 W
AEP, Italian model: AC 220 V ~50 Hz 17 W

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

1. Make Function switch to CD position with no disc inserted.
2. Open the lid for CD.
3. Turn on S704 as following figure.
4. Press ► key.
5. Confirm the laser diode emission while observing the objecting lens. When there is no emission, Auto Power Control circuit or Optical Pick-up is broken. Objective lens moves up and down once for the focus search.

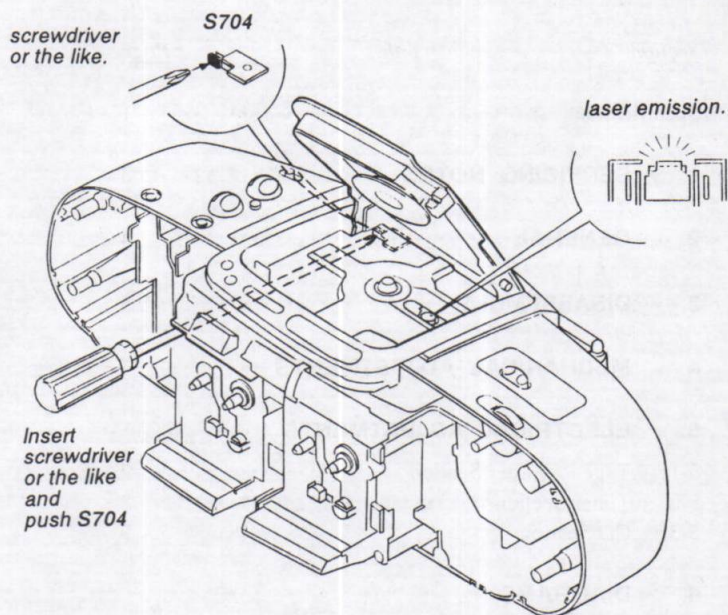


CHUCK PLATE JIG ON REPAIRING

On repairing CD section, playing a disc without the CD lid, use Chuck Plate Jig.

- Code number of Chuck Plate Jig: X-4918-255-1

SECTION 2 GENERAL


- Parts Identification

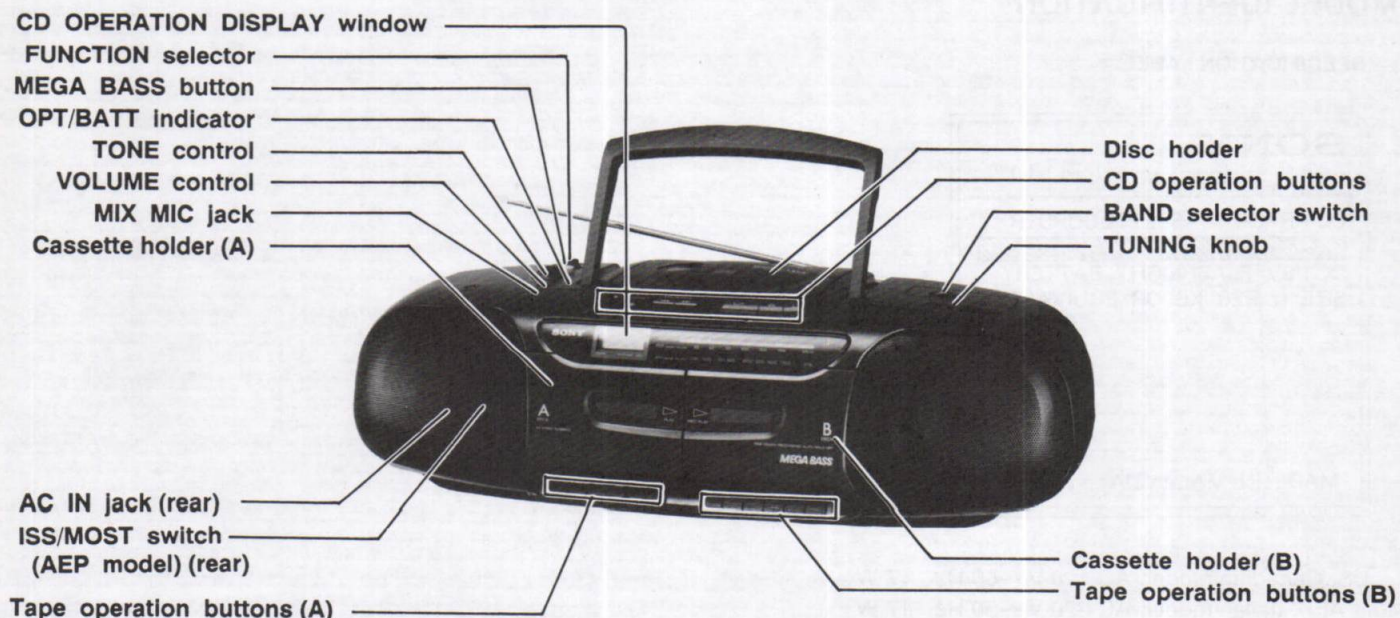


SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


FRONT CABINET ASS'Y

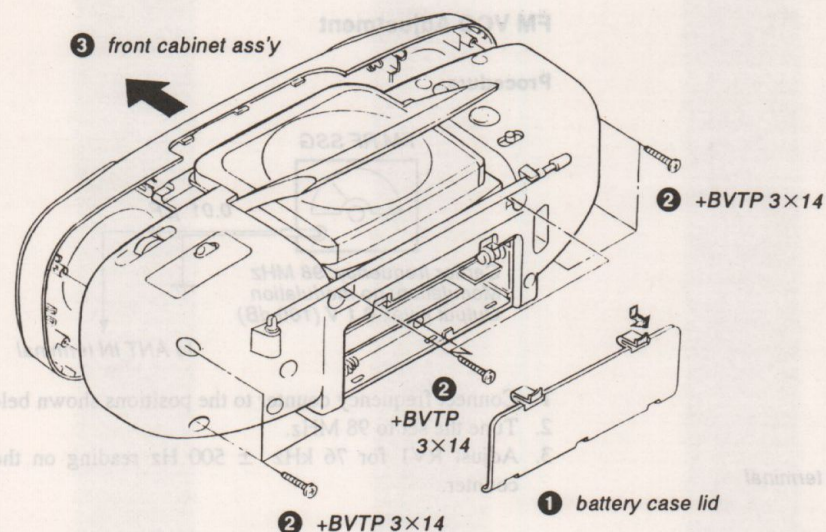


DIAL CHASSIS ASS'Y

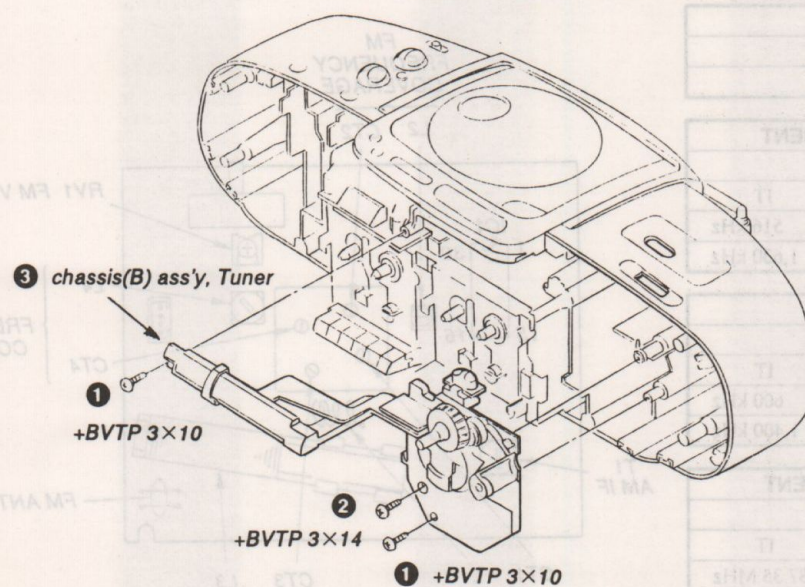

MD ASS'Y

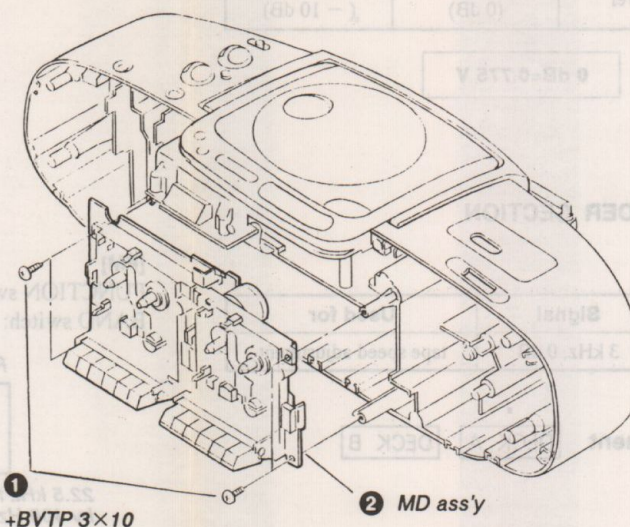

POWER BOARD

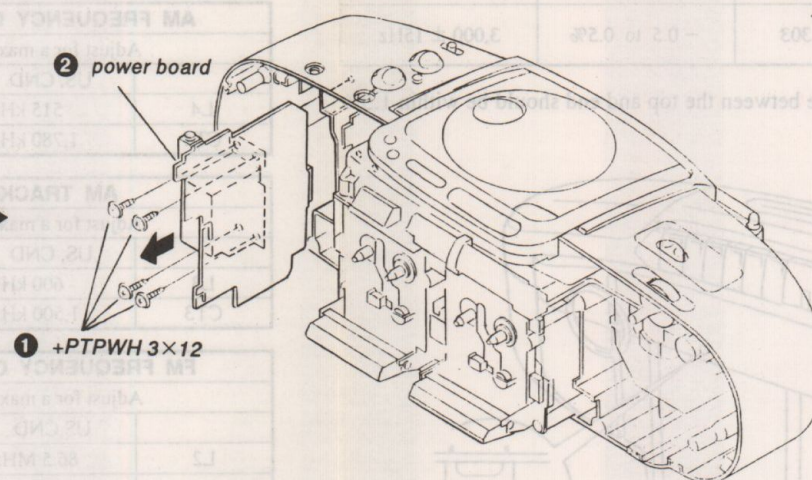


SECTION 4 MECHANICAL ADJUSTMENTS

PRECAUTION

In the following parts with a denatured-alcohol-moistened record/playback head pinch roller rubber belts idlers. After the record/playback head with a head demagnetizer. Using the head demagnetizer close to the case head. Use a magnetized screwdriver for the adjustment. The adjustment should be performed with the following voltage unless otherwise noted. er supply voltage: 9V dc.

CD ASS'Y, MAIN BOARD

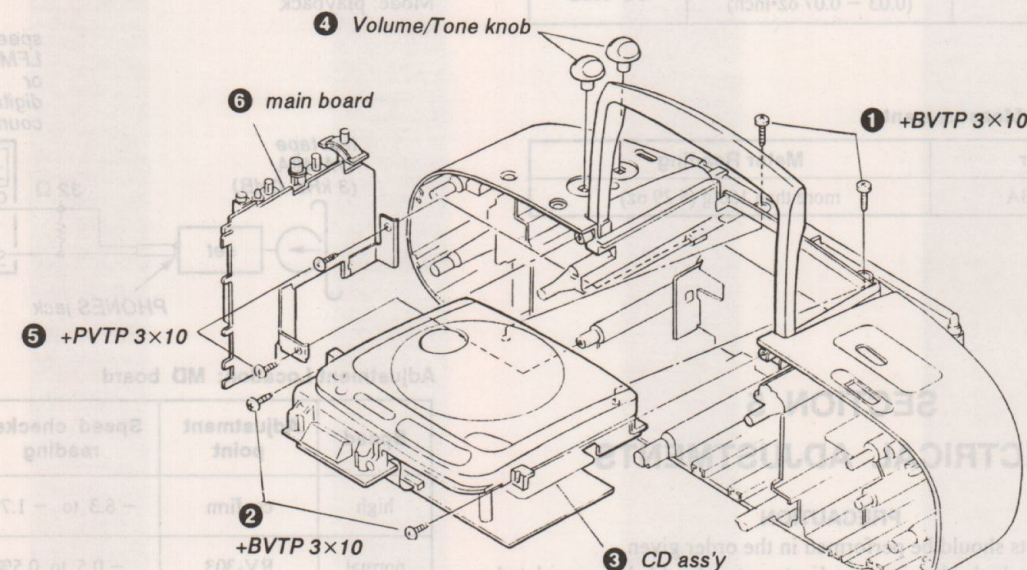

SECTION 4

MECHANICAL ADJUSTMENTS

PRECAUTION

- Clean the following parts with a denatured-alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	idlers
- Demagnetize the record/playback head with a head demagnetizer. (Do not bring the head demagnetizer close to the erase head.)
- Do not use a magnetized screwdriver for the adjustments.
- After the adjustments, apply suitable locking compound to the parts adjusted.
- The adjustments should be performed with the rated power supply voltage unless otherwise noted.
- Power supply voltage: 9V dc.

Torque Measurement

Torque	Meter Reading	Torque Meter
Forward	22.5 – 55 g•cm (0.31 – 0.76 oz•inch)	CQ-102C
Fast Forward and Rewind	60 – 120 g•cm (0.83 – 1.67 oz•inch)	CQ-201B
Back Tension	2 – 5g•cm (0.03 – 0.07 oz•inch)	CQ-102C

Tape Tension Measurement

Meter	Meter Reading
CQ-403A	more than 150 g (5.29 oz)

SECTION 5

ELECTRICAL ADJUSTMENTS

PRECAUTION

- Adjustments should be performed in the order given. Generally playback circuit adjustments should be completed before performing recording circuit adjustments.
- Adjustments should be performed for both L-ch and R-ch. Switches and controls should be set as follows unless otherwise specified.

- Positions of switches and control knobs
TONE maximum
MEGA BASS off

- Standard recording position**
Adjust the VOLUME knob so that the following regulated input/output signal levels are obtained.

Standard input level

	MIX MIC
Signal source impedance	300 Ω
Input signal level	4.8 mV (– 48 dB)
Frequency	1 kHz

Standard output level

Output Pin	Speaker (L, R)	PHONES
Signal source impedance	3.2 Ω	32 Ω
Output signal level	0.775 V (0 dB)	0.245 V (– 10 dB)

0 dB=0.775 V

5-1. TAPE RECORDER SECTION


Test Tape

Type	Signal	Used for
WS-48A	3 kHz, 0 dB	tape speed adjustment

Tape Speed Adjustment

DECK A DECK B


Procedure:
Mode: playback

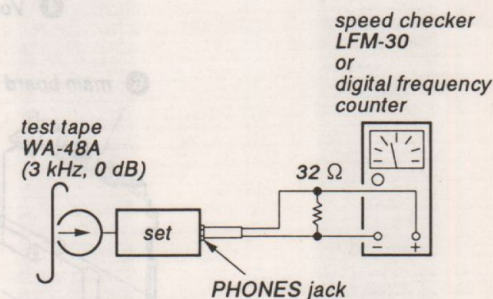

Adjustment Location: MD board

Speed	Adjustment point	Speed checker reading	Frequency counter
high	confirm	– 8.3 to – 1.7%	5,700 ± 200Hz
normal	RV-303	– 0.5 to 0.5%	3,000 ± 15Hz


Frequency difference between the top and end should be within 1.5% (45 Hz).

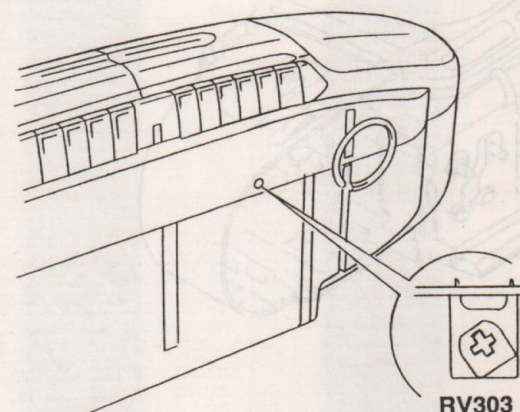

5-2. TUNER SECTION


[AM]

FUNCTION switch: RADIO
BAND switch: AM

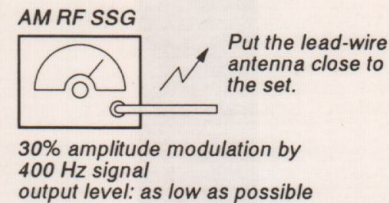

[FM]

FUNCTION switch: RADIO
BAND switch: FM

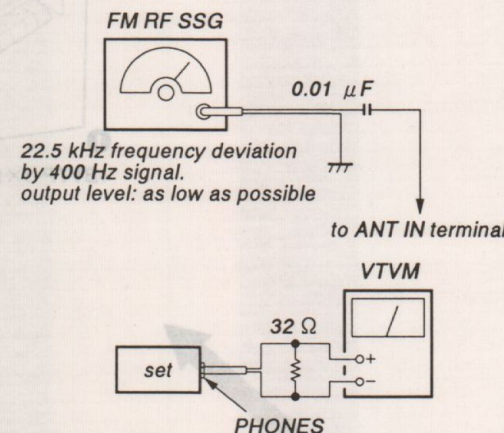

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

AM IF ADJUSTMENT	
Adjust for a maximum reading on VTVM.	
T1	455 kHz

AM FREQUENCY COVERAGE ADJUSTMENT			
Adjust for a maximum reading on VTVM.			
	US, CND	AEP	IT
L4	515 kHz	515 kHz	516 kHz
CT4	1,780 kHz	1,680 kHz	1,630 kHz

AM TRACKING ADJUSTMENT			
Adjust for a maximum reading on VTVM.			
	US, CND	AEP	IT
L3	600 kHz	600 kHz	600 kHz
CT3	1,500 kHz	1,400 kHz	1,400 kHz


FM FREQUENCY COVERAGE ADJUSTMENT			
Adjust for a maximum reading on VTVM.			
	US, CND	AEP	IT
L2	86.5 MHz	87.35 MHz	87.35 MHz
CT2	109.5 MHz	107.8 MHz	108.3 MHz

FM TRACKING ADJUSTMENT			
Adjust for a maximum reading on VTVM.			
	US, CND	AEP	IT
L1	86.5 MHz	87.35 MHz	87.35 MHz
CT1	109.5 MHz	107.8 MHz	108.3 MHz


CND: Canadian model IT: Italian model

FM VCO Adjustment


Procedure:

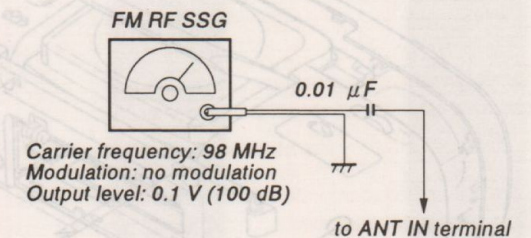

- Connect frequency counter to the positions shown below.
- Tune the set to 98 MHz.
- Adjust RV1 for 76 kHz ± 500 Hz reading on the frequency counter.

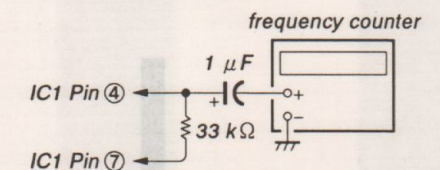

Adjusting Parts Location

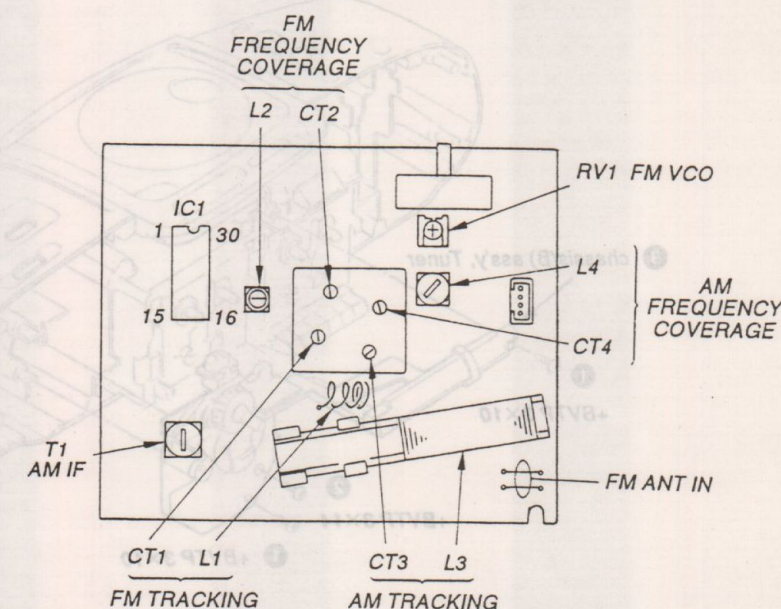

5-3. CD SECTION

Notes on Adjustment

1. Perform adjustment in service mode.
After adjustment, be sure to release service mode.
2. Perform adjustments in the order given.
3. Use the disc (YEDS-18, Part No. 3-702-101-01) only when so indicated.

Before Adjustment

Put the set into service mode and perform the following checks. Repair if there are any problems.

● Sled Motor Check

1. Press **■** key for long.
2. Press **▶▶**, **◀◀** keys and confirm that the FOP moves smoothly from the innermost to outermost circumference and back smoothly and with no catching or abnormal noises.
▶▶: FOP moves to the outer circumference
◀◀: FOP moves to the inner circumference
3. Press **■** key for long.
4. Confirm that FOP moving operations stops. If it does not, press **■** key again longer.

● Focus Search Check


1. Press **■** key.
2. Press **▶** key. (Focus search operation is performed continuously.)
3. Look at the FOP objective lens and confirm that it moves up and down smoothly, with no catching or abnormal noises.
4. Press **■** key for long.
5. Confirm that focus search operation stops. If it does not, press **■** key again longer.

How to Put the Set into Service Mode

1. Short-circuit between TP TEST and ground on the CD main board.
2. Tune POWER on. (Set the FUNCTION switch to CD position.)
3. LCD801 indicator blinks the test mode pattern.


E-F Balance Adjustment

This adjustment is to be done when the optical block is replaced.

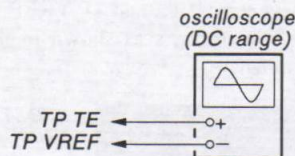


Adjustment Procedure:

1. Connect the oscilloscope between TP TE and TP VREF.
2. Put the set into service mode. (See page 9)
3. Press the **▶▶** and **◀◀** keys to move the FOP to the center.
4. Insert disc (YEDS-18) and press **▶** key.
5. Adjust RV701 so that the oscilloscope traverse waveform is symmetrical, as shown in the figure below.
6. Release service mode after adjustment is completed.

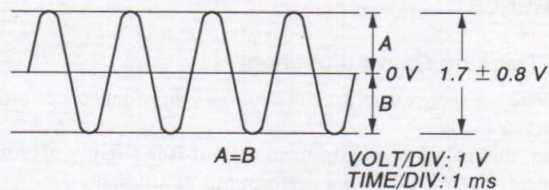

Focus Bias Adjustment


This adjustment is to be done when the optical block is replaced.

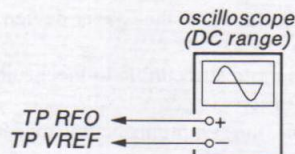

Adjustment Procedure:

1. Connect the oscilloscope between TP RFO and TP VREF.
2. Put the set into service mode. (See page 9)
3. Press the **▶▶** and **◀◀** keys to move the FOP to the center. (Move the FOP to the music area on the disc to enable easy visibility of the eye pattern.)
4. Insert disc (YEDS-18) and press **▶** key.
5. Adjust RV702 so that the oscilloscope waveform is as shown in the figure below (eye pattern).
A good eye pattern means that the diamond shape (◇) in the center of the waveform can be clearly distinguished.
6. Release service mode after adjustment is completed.

● RF signal reference waveform (eye pattern)

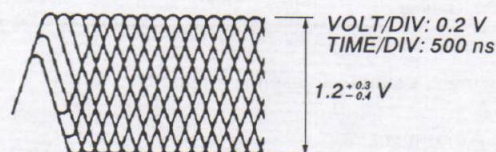

When observing the eye pattern, set the oscilloscope for AC range and raise vertical sensitivity.

REFERENCE

Focus/Tracking Gain Adjustment

A frequency response analyzer is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up (vertical and horizontal) relative to mechanical noise and mechanical shock when the 2-axis device operate.

However, as these reciprocate, the adjustment is at the point where both are satisfied.


- When gain is raised, the noise when the 2-axis device operates increases.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.
- When gain adjustment is off, the symptoms below appear.

Symptoms \ Gain	Focus	Tracking
• The time until music starts becomes longer for STOP → PLAY or automatic selection (◀▶, ▶▶ buttons pressed). (Normally takes about 2 seconds.)	low	low or high
• Music does not start and disc continues to rotate for STOP → PLAY or automatic selection (▶▶, ▶▶ buttons pressed).	—	low
• Sound is interrupted during PLAY. Or time counter display stops progressing.	—	low
• More noise during 2-axis device operation.	high	high

The following is a simple adjustment method.


— Simple Adjustment —

Note: Since exact adjustment cannot be performed, remember the positions of the controls before performing the adjustment. If the positions after the simple adjustment are only a little different, return the controls to the original position.

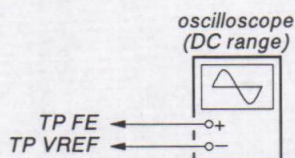


Procedure:

1. Keep the set horizontal.
(If the set is not horizontal, this adjustment cannot be performed due to the gravity against the 2-axis device.)
2. Insert disc (YEDS-18) and press ▶ PLAY button.
3. Connect the oscilloscope between TP FE and TP VREF.
4. Adjustment RV703 so that the waveform is as shown in the figure below. (focus gain adjustment)

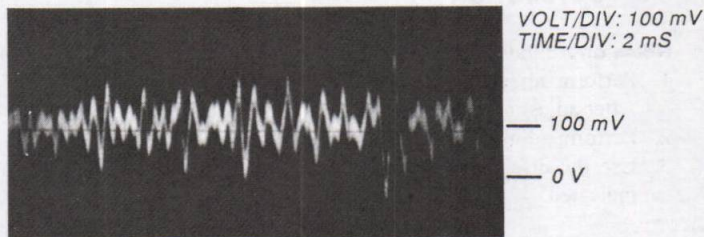


- Inccorent Examples (DC level changes more than on adjusted waveform)


low focus gain

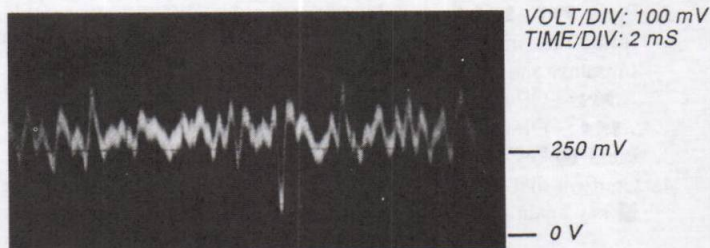

high focus gain

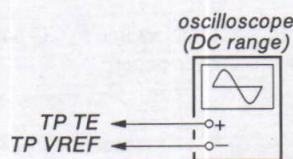


5. Connect the oscilloscope between TP TE and TP VREF.
6. Adjust RV704 so that the waveform is as shown in the figure below. (tracking gain adjustment)

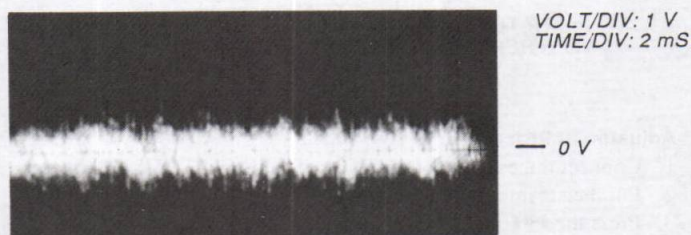

● Incorrect Examples (fundamental wave appears)

low track gain

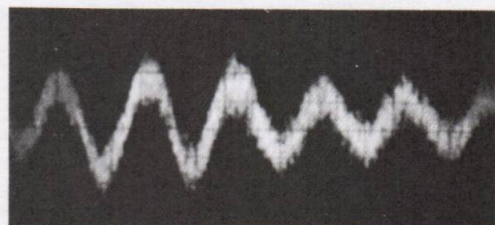

VOLT/DIV: 1 V
TIME/DIV: 2 mS

— 0 V


high track gain
(higher fundamental wave than for low gain)



VOLT/DIV: 1 V
TIME/DIV: 2 mS


— 0 V

Adjustment Location: CD main board (conductor side)

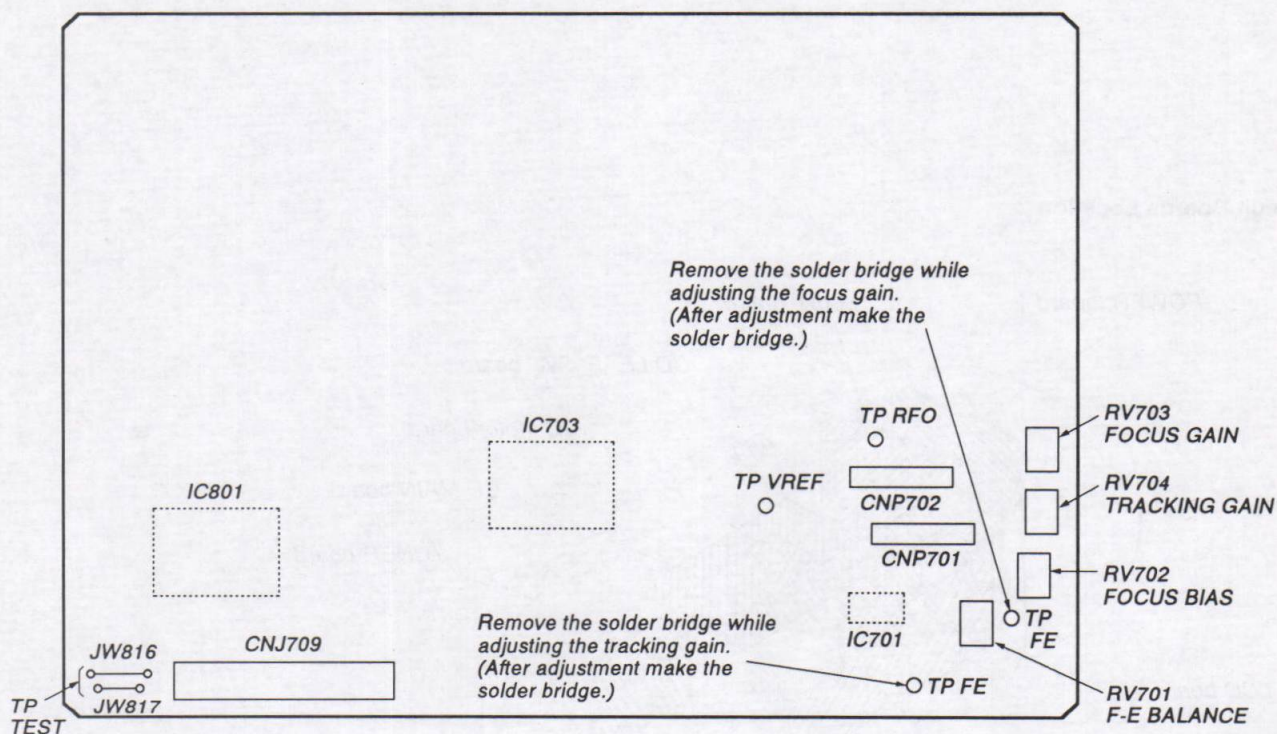



SECTION 6 DIAGRAMS


6-1. TUNER SECTION BLOCK DIAGRAM

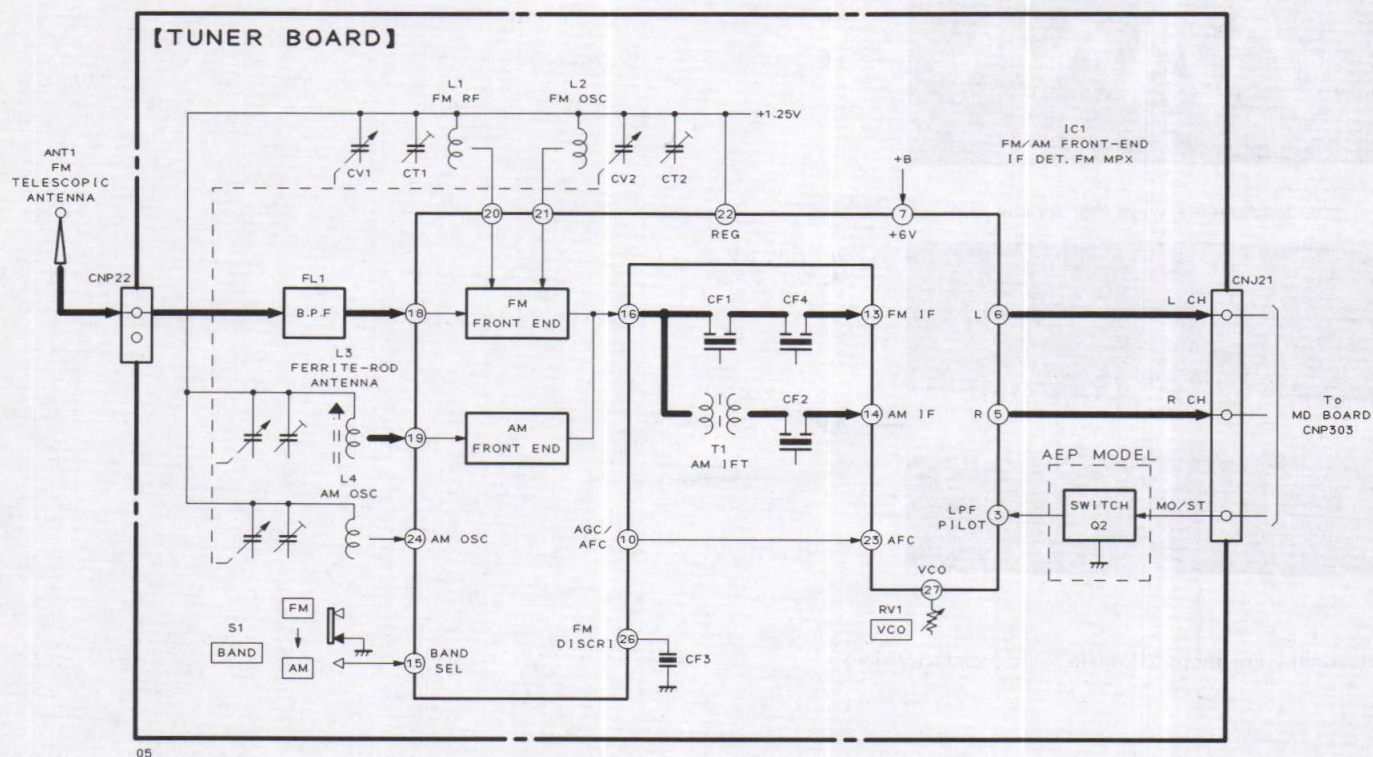


● Circuit Boards Location

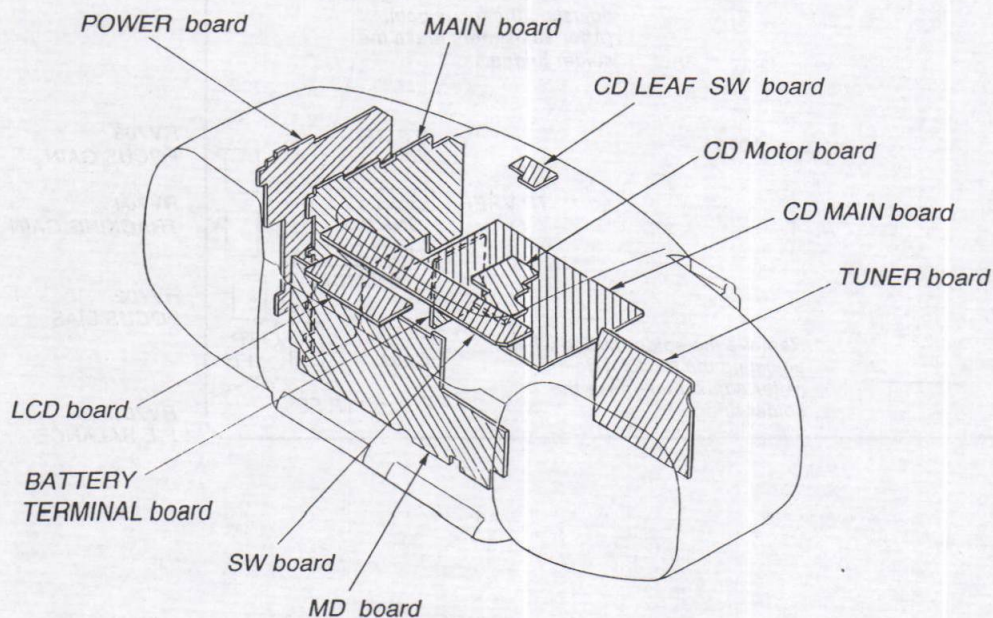

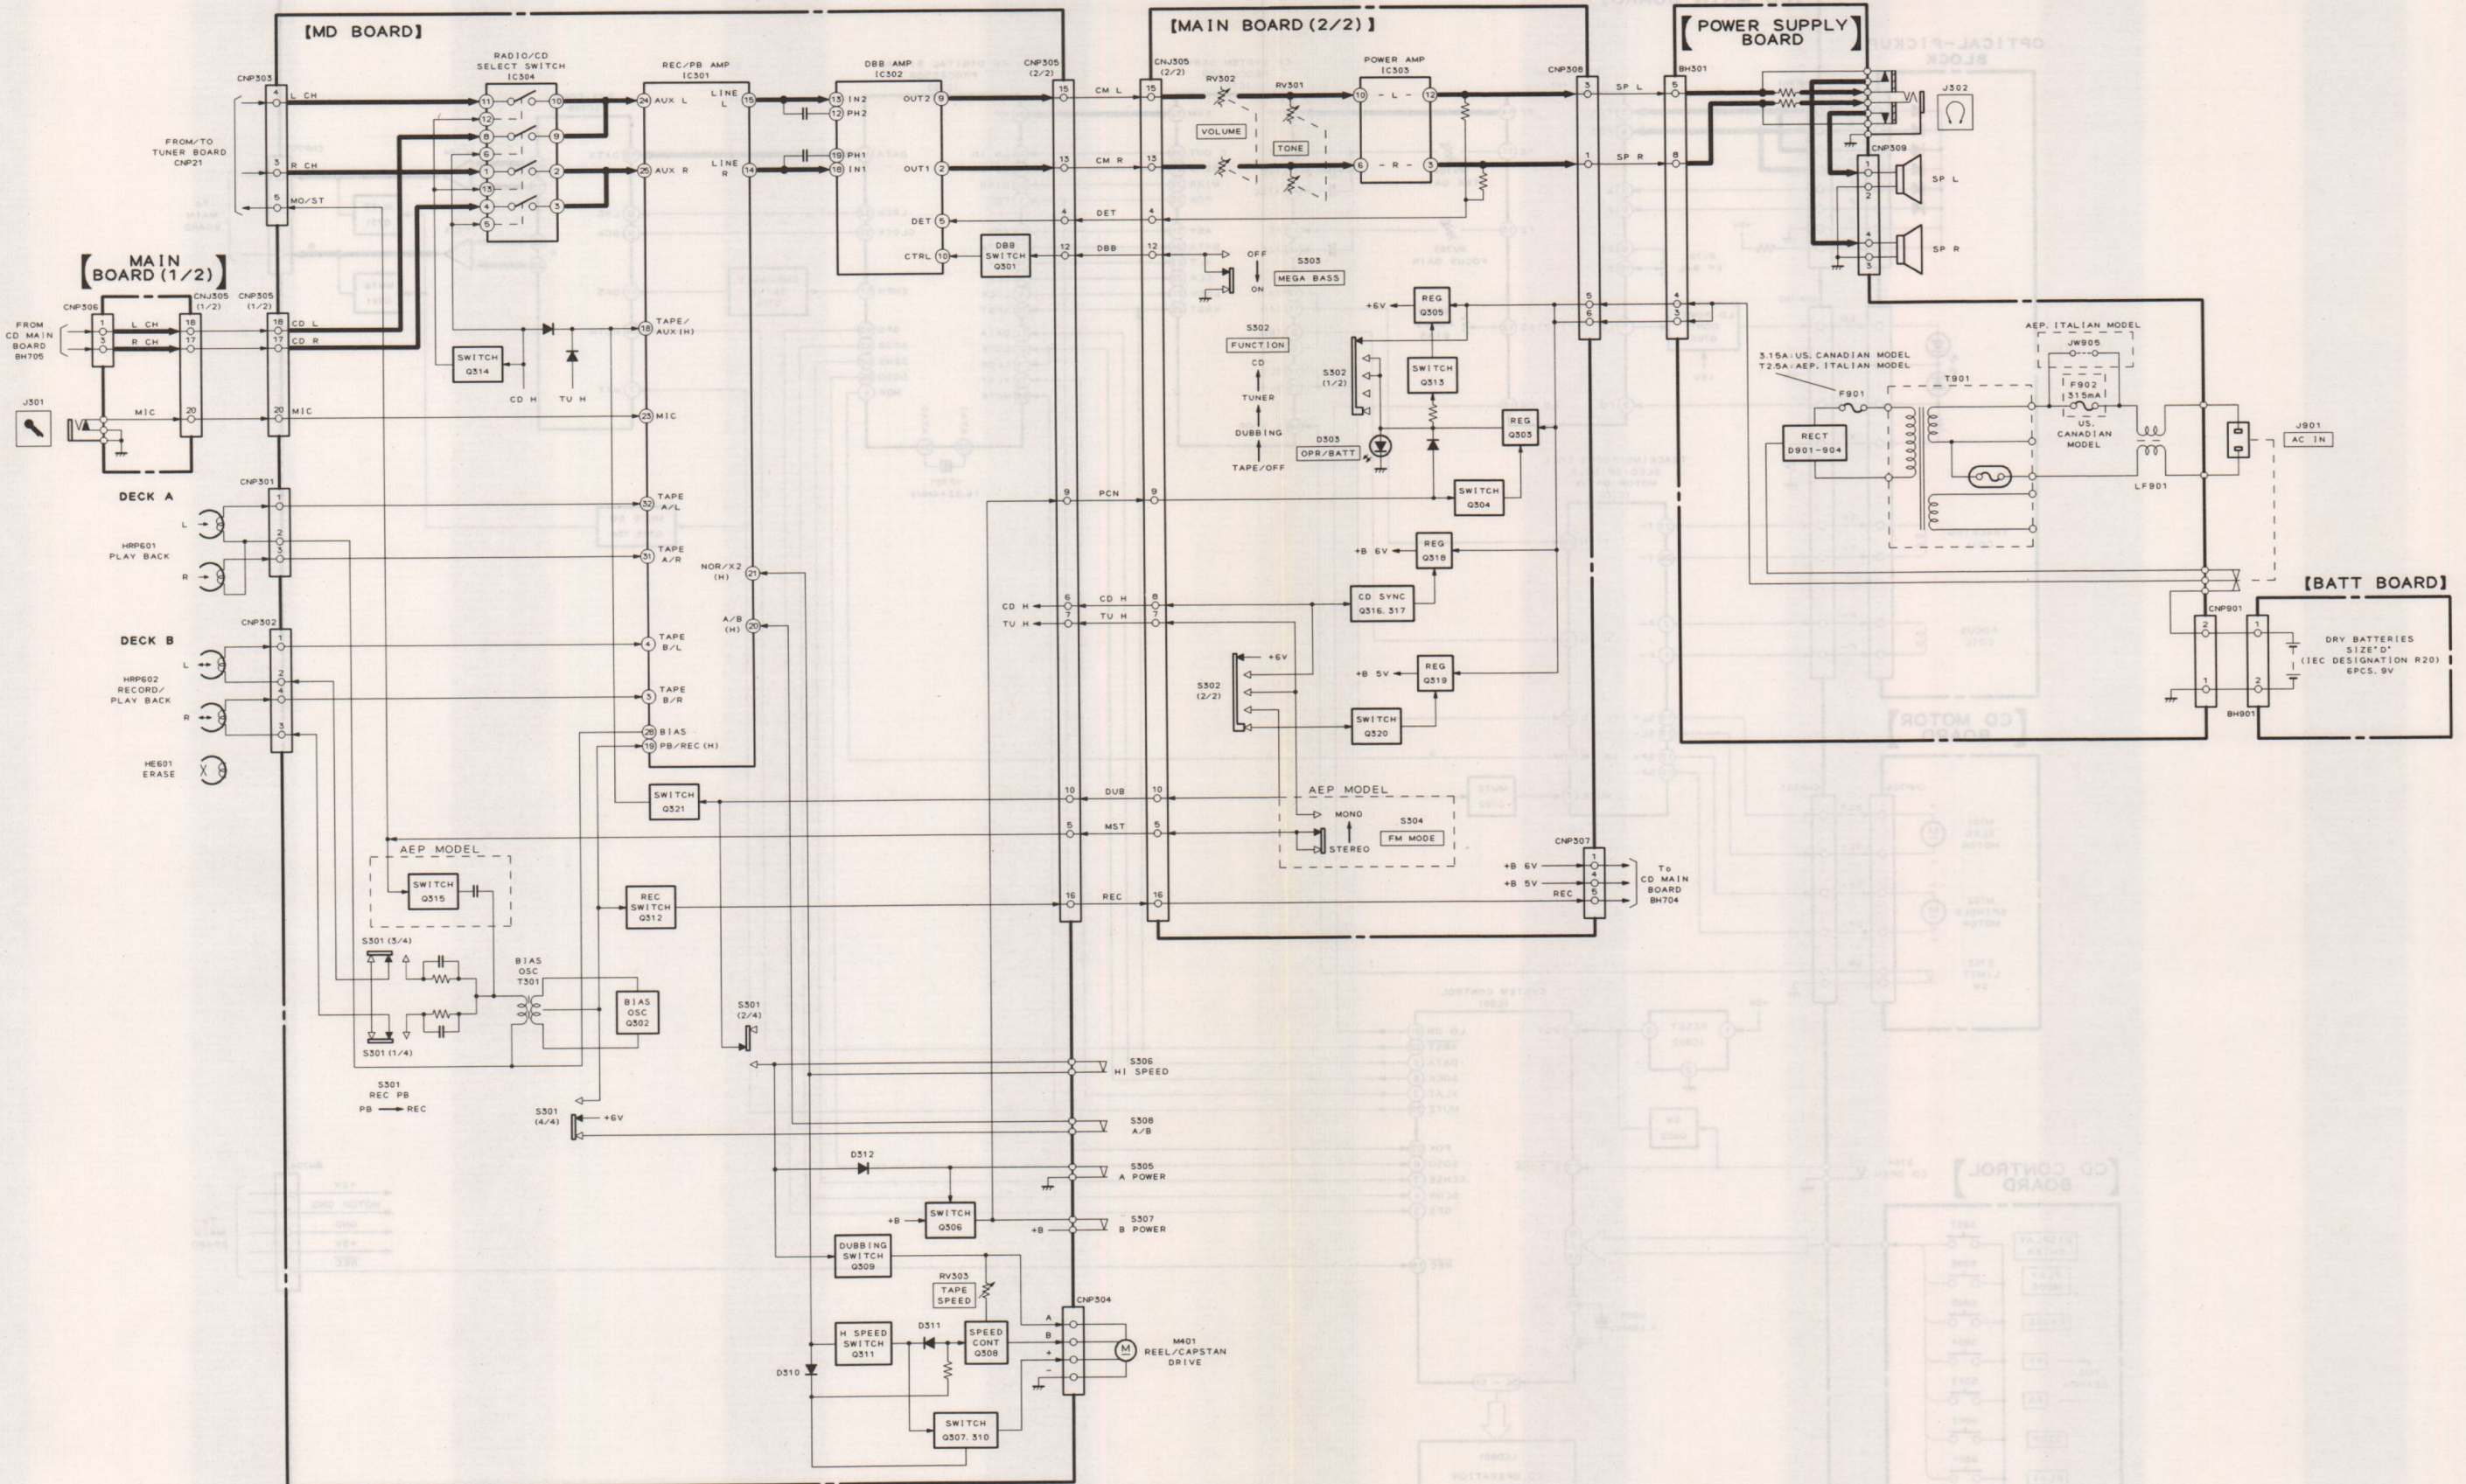

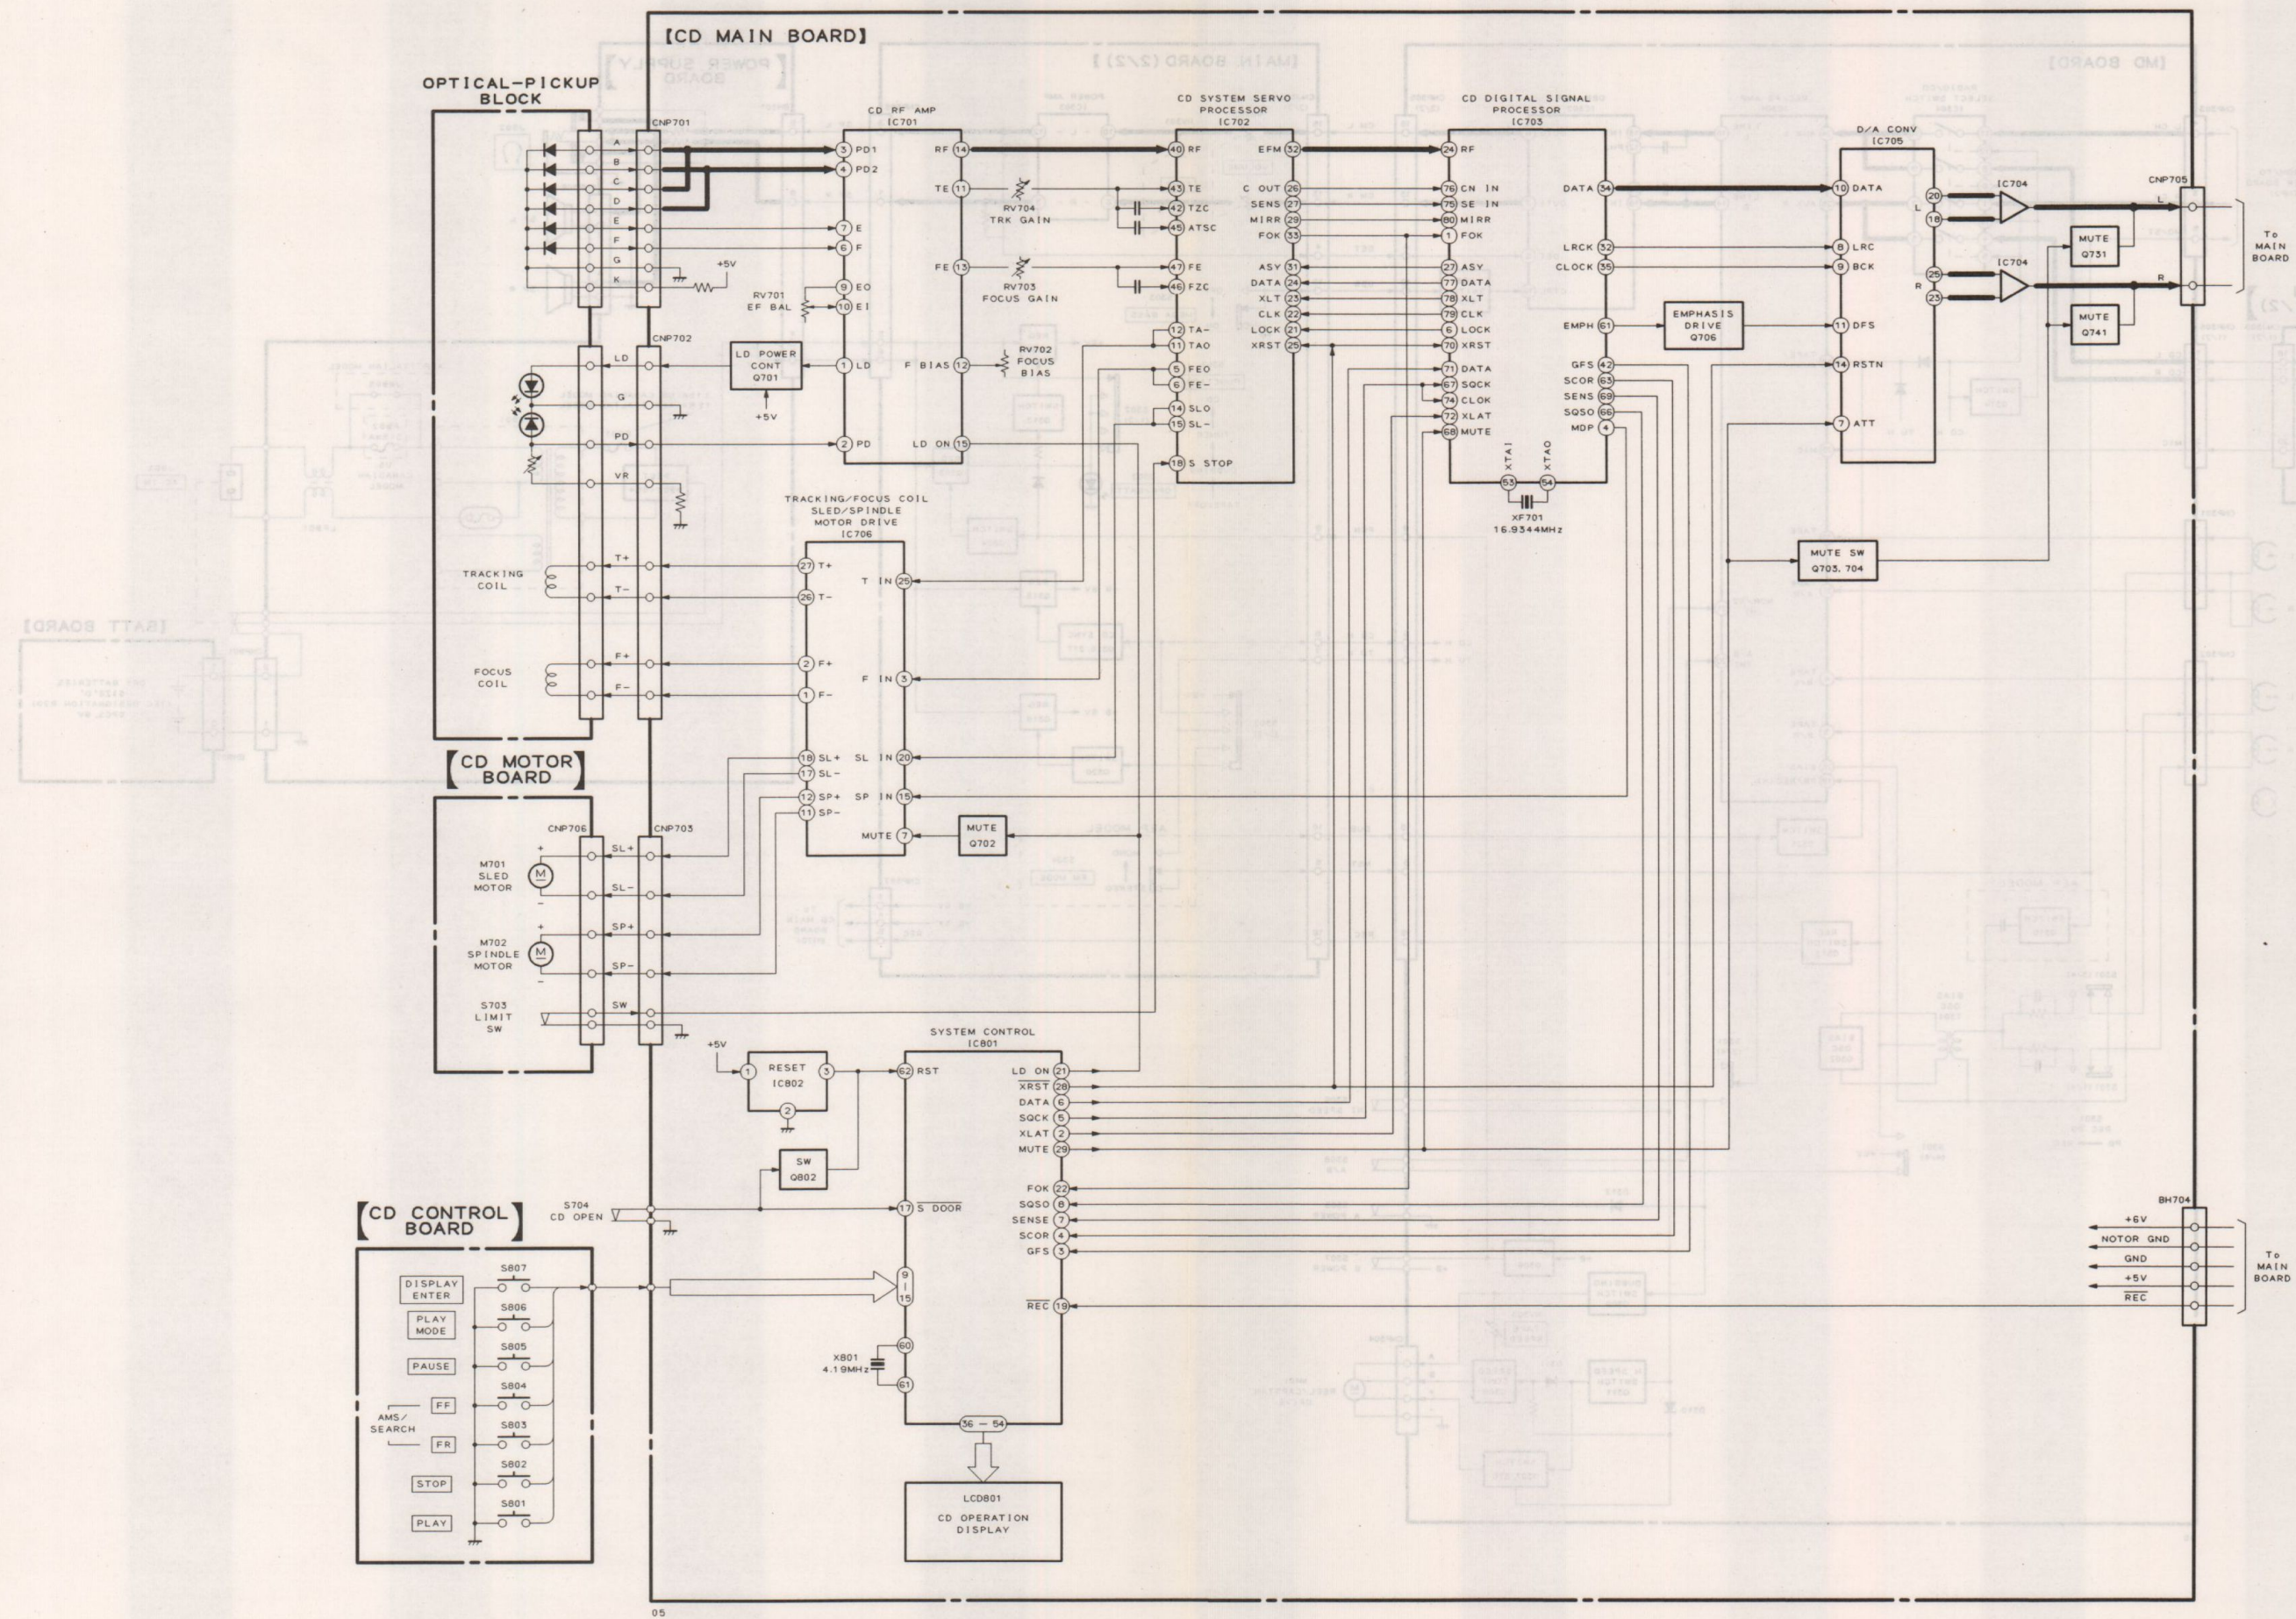


6-4. TUNER SECTION PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

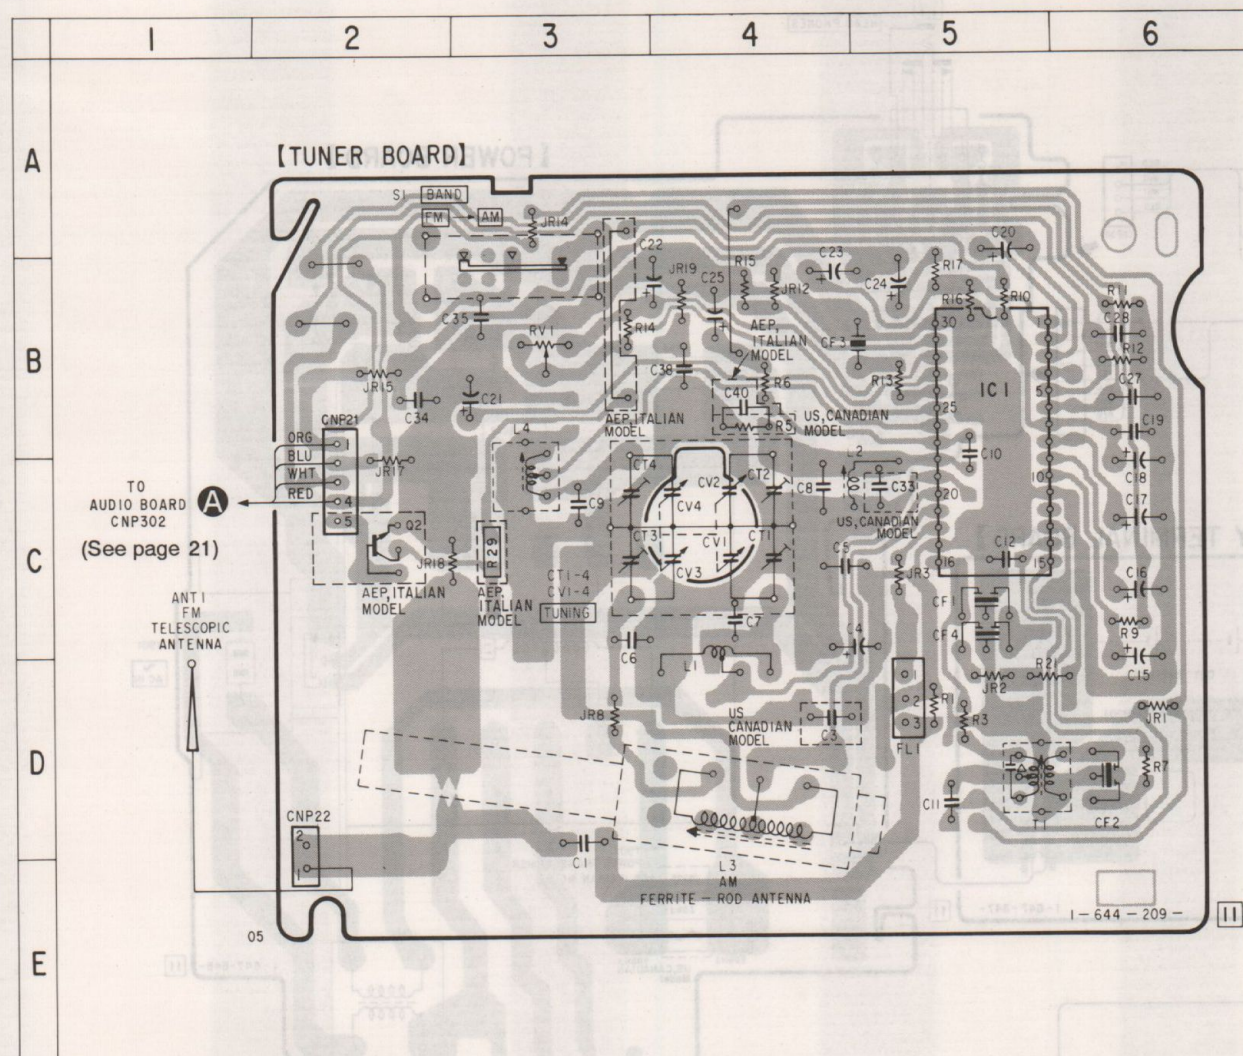

• IC Block Diagram

IC1 CX1238S

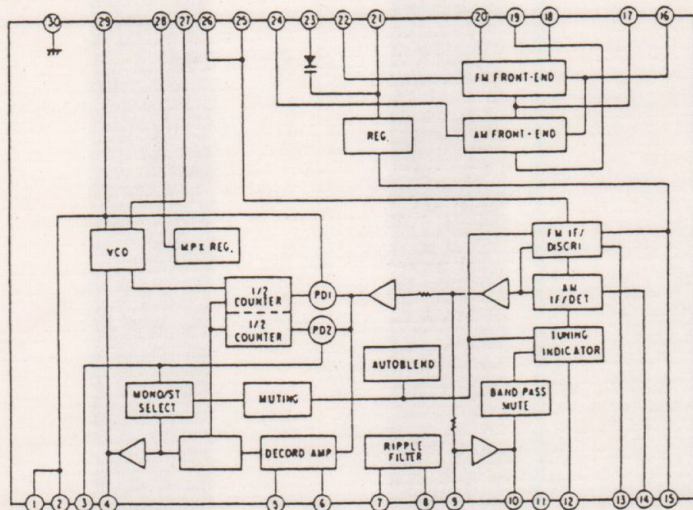


Note on Printed Wiring Board:

- : indicates side identified with part number.
- : internal component.

• Semiconductor Location
(TUNER BOARD)

Ref. No.	Location
IC1	B-5
Q2	C-2

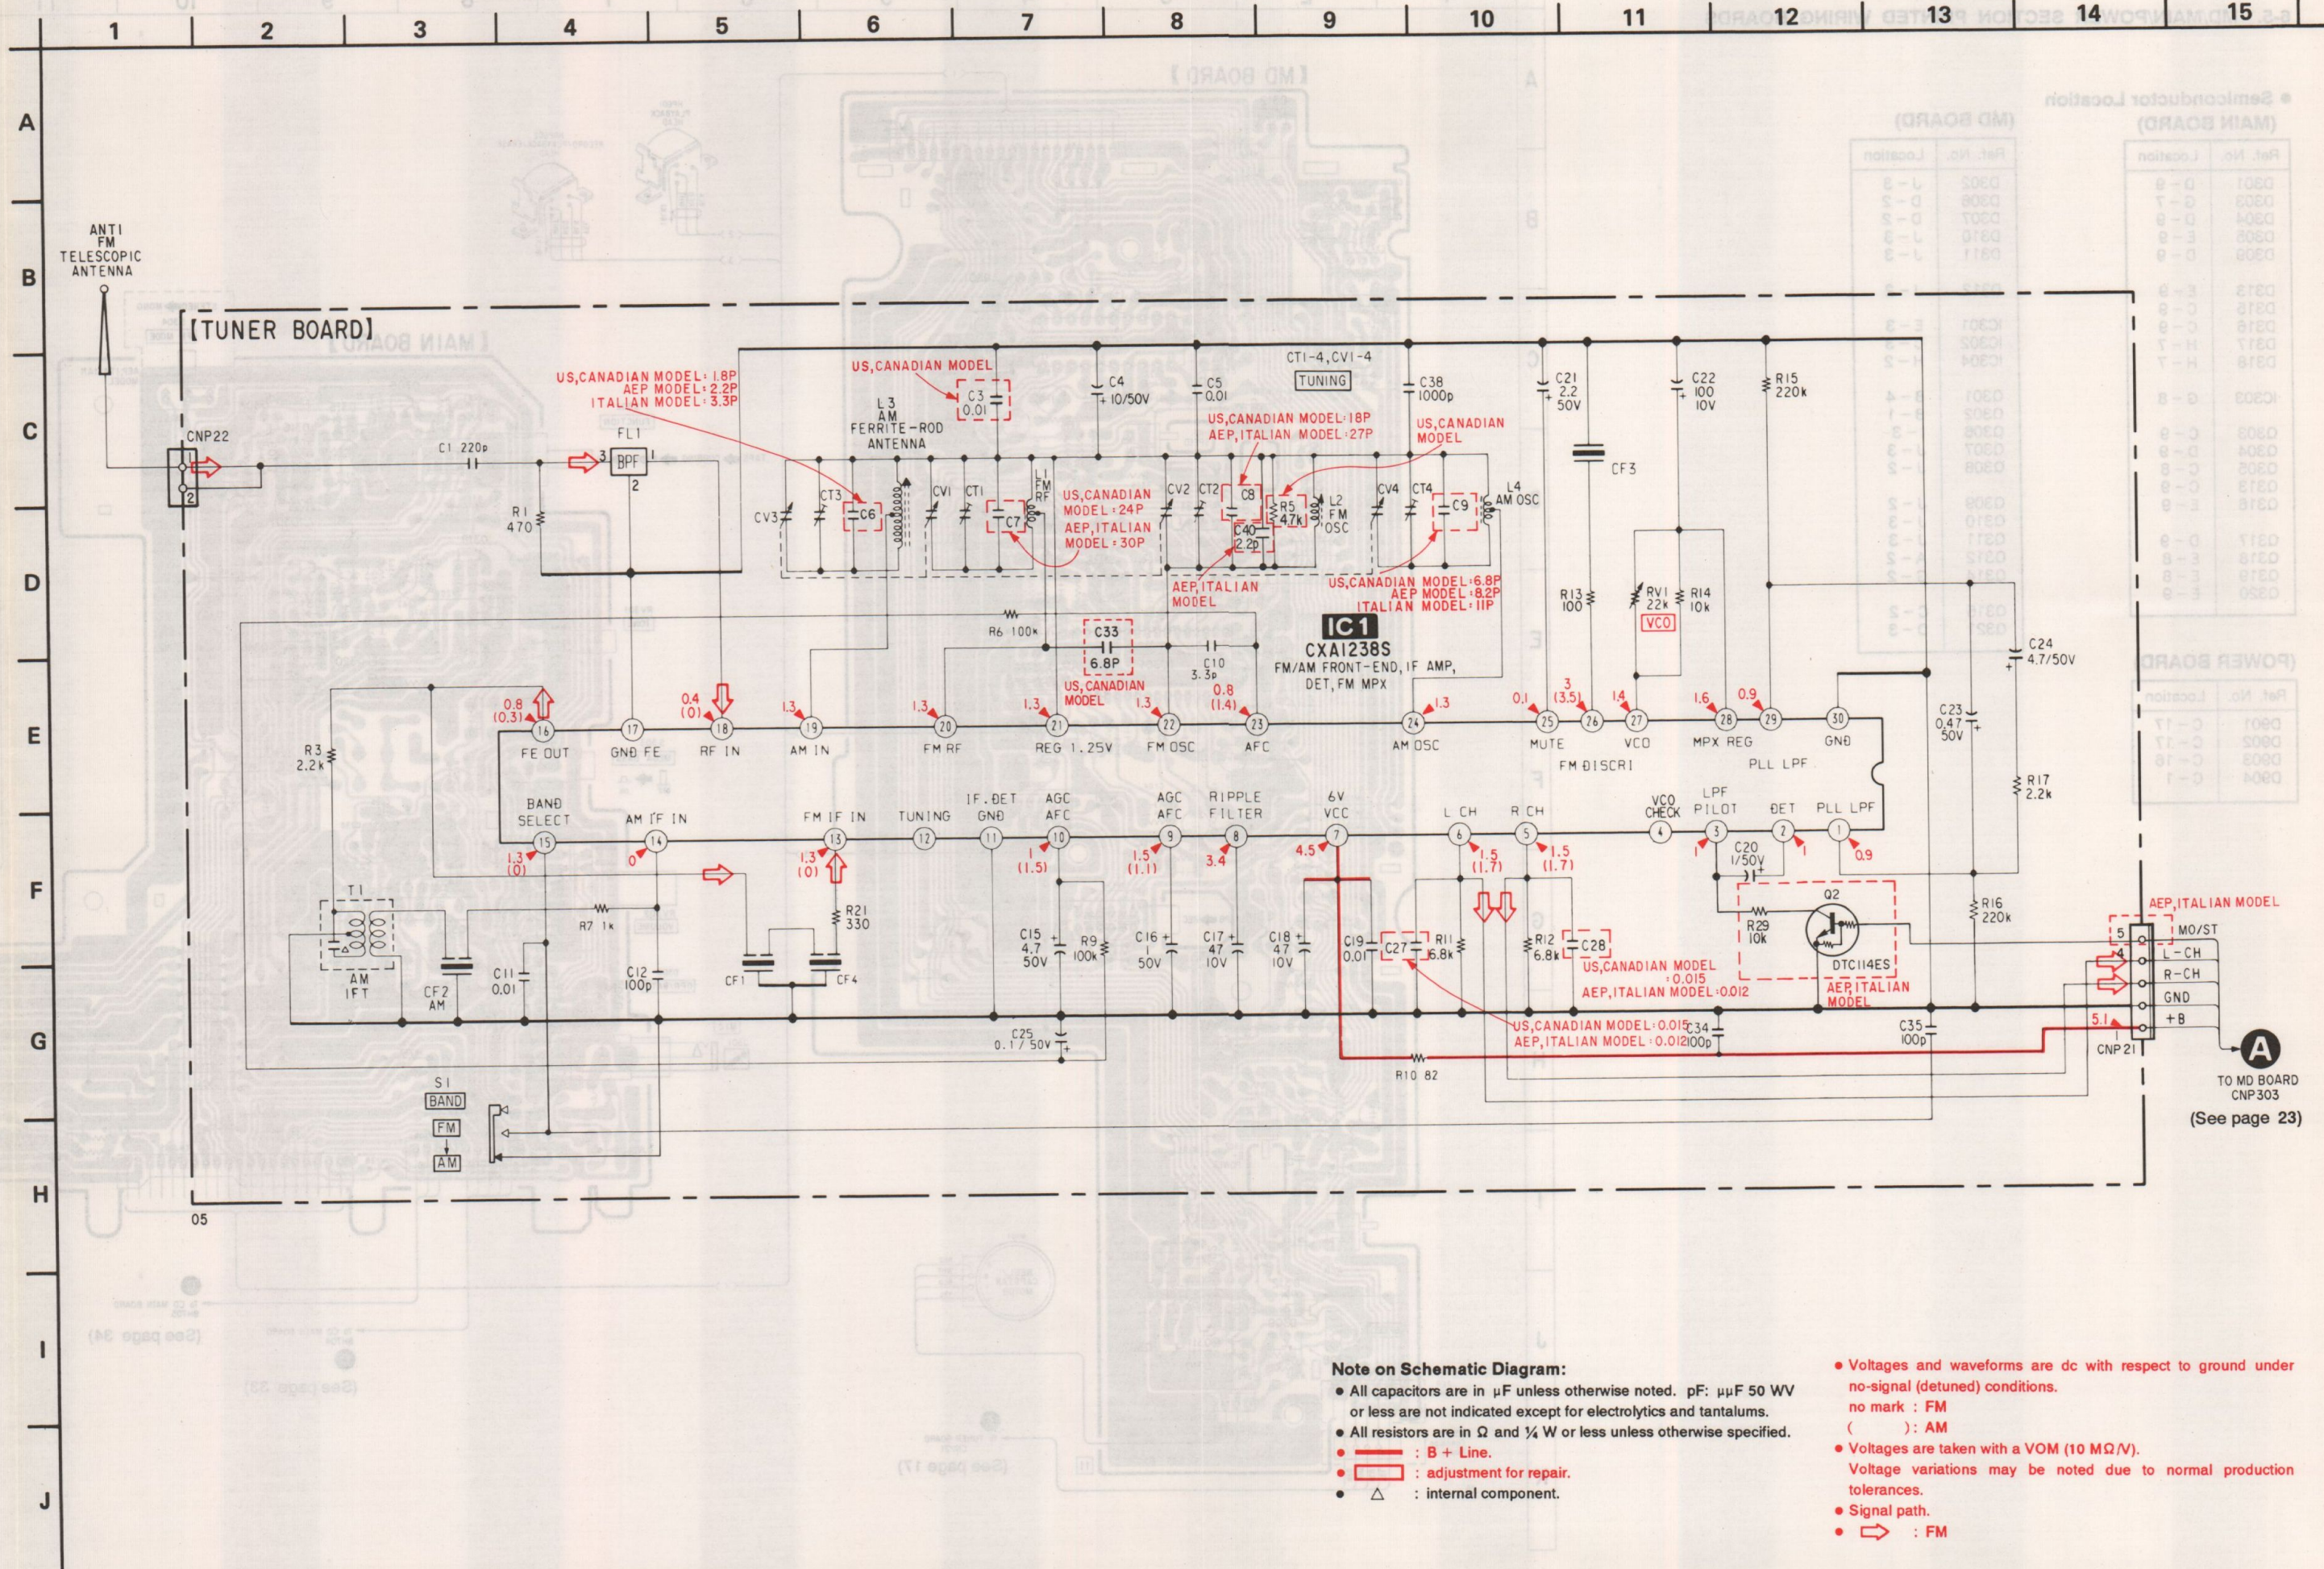

6-5. MD/MAIN/POWER SECTION PRINTED WIRING BOARDS

● Semiconductor Location (MAIN BOARD)


Ref. No.	Location
D301	D-9
D303	G-7
D304	D-9
D305	E-9
D309	D-9
D313	E-9
D315	C-9
D316	C-9
D317	H-7
D318	H-7
IC303	G-8
Q303	C-9
Q304	D-9
Q305	C-8
Q313	C-9
Q316	E-9
Q317	D-9
Q318	E-8
Q319	E-8
Q320	E-9


(POWER BOARD)

Ref. No.	Location
D901	C-17
D902	C-17
D903	C-16
D904	C-1

(MD BOARD)

Ref. No.	Location
D302	J-3
D306	D-2
D307	D-2
D310	J-3
D311	J-3
D312	J-2
IC301	E-3
IC302	C-3
IC304	H-2
Q301	B-4
Q302	B-1
Q306	I-3
Q307	J-3
Q308	J-2
Q309	J-2
Q310	J-3
Q311	J-3
Q312	A-2
Q314	G-2
Q315	C-2
Q321	D-3

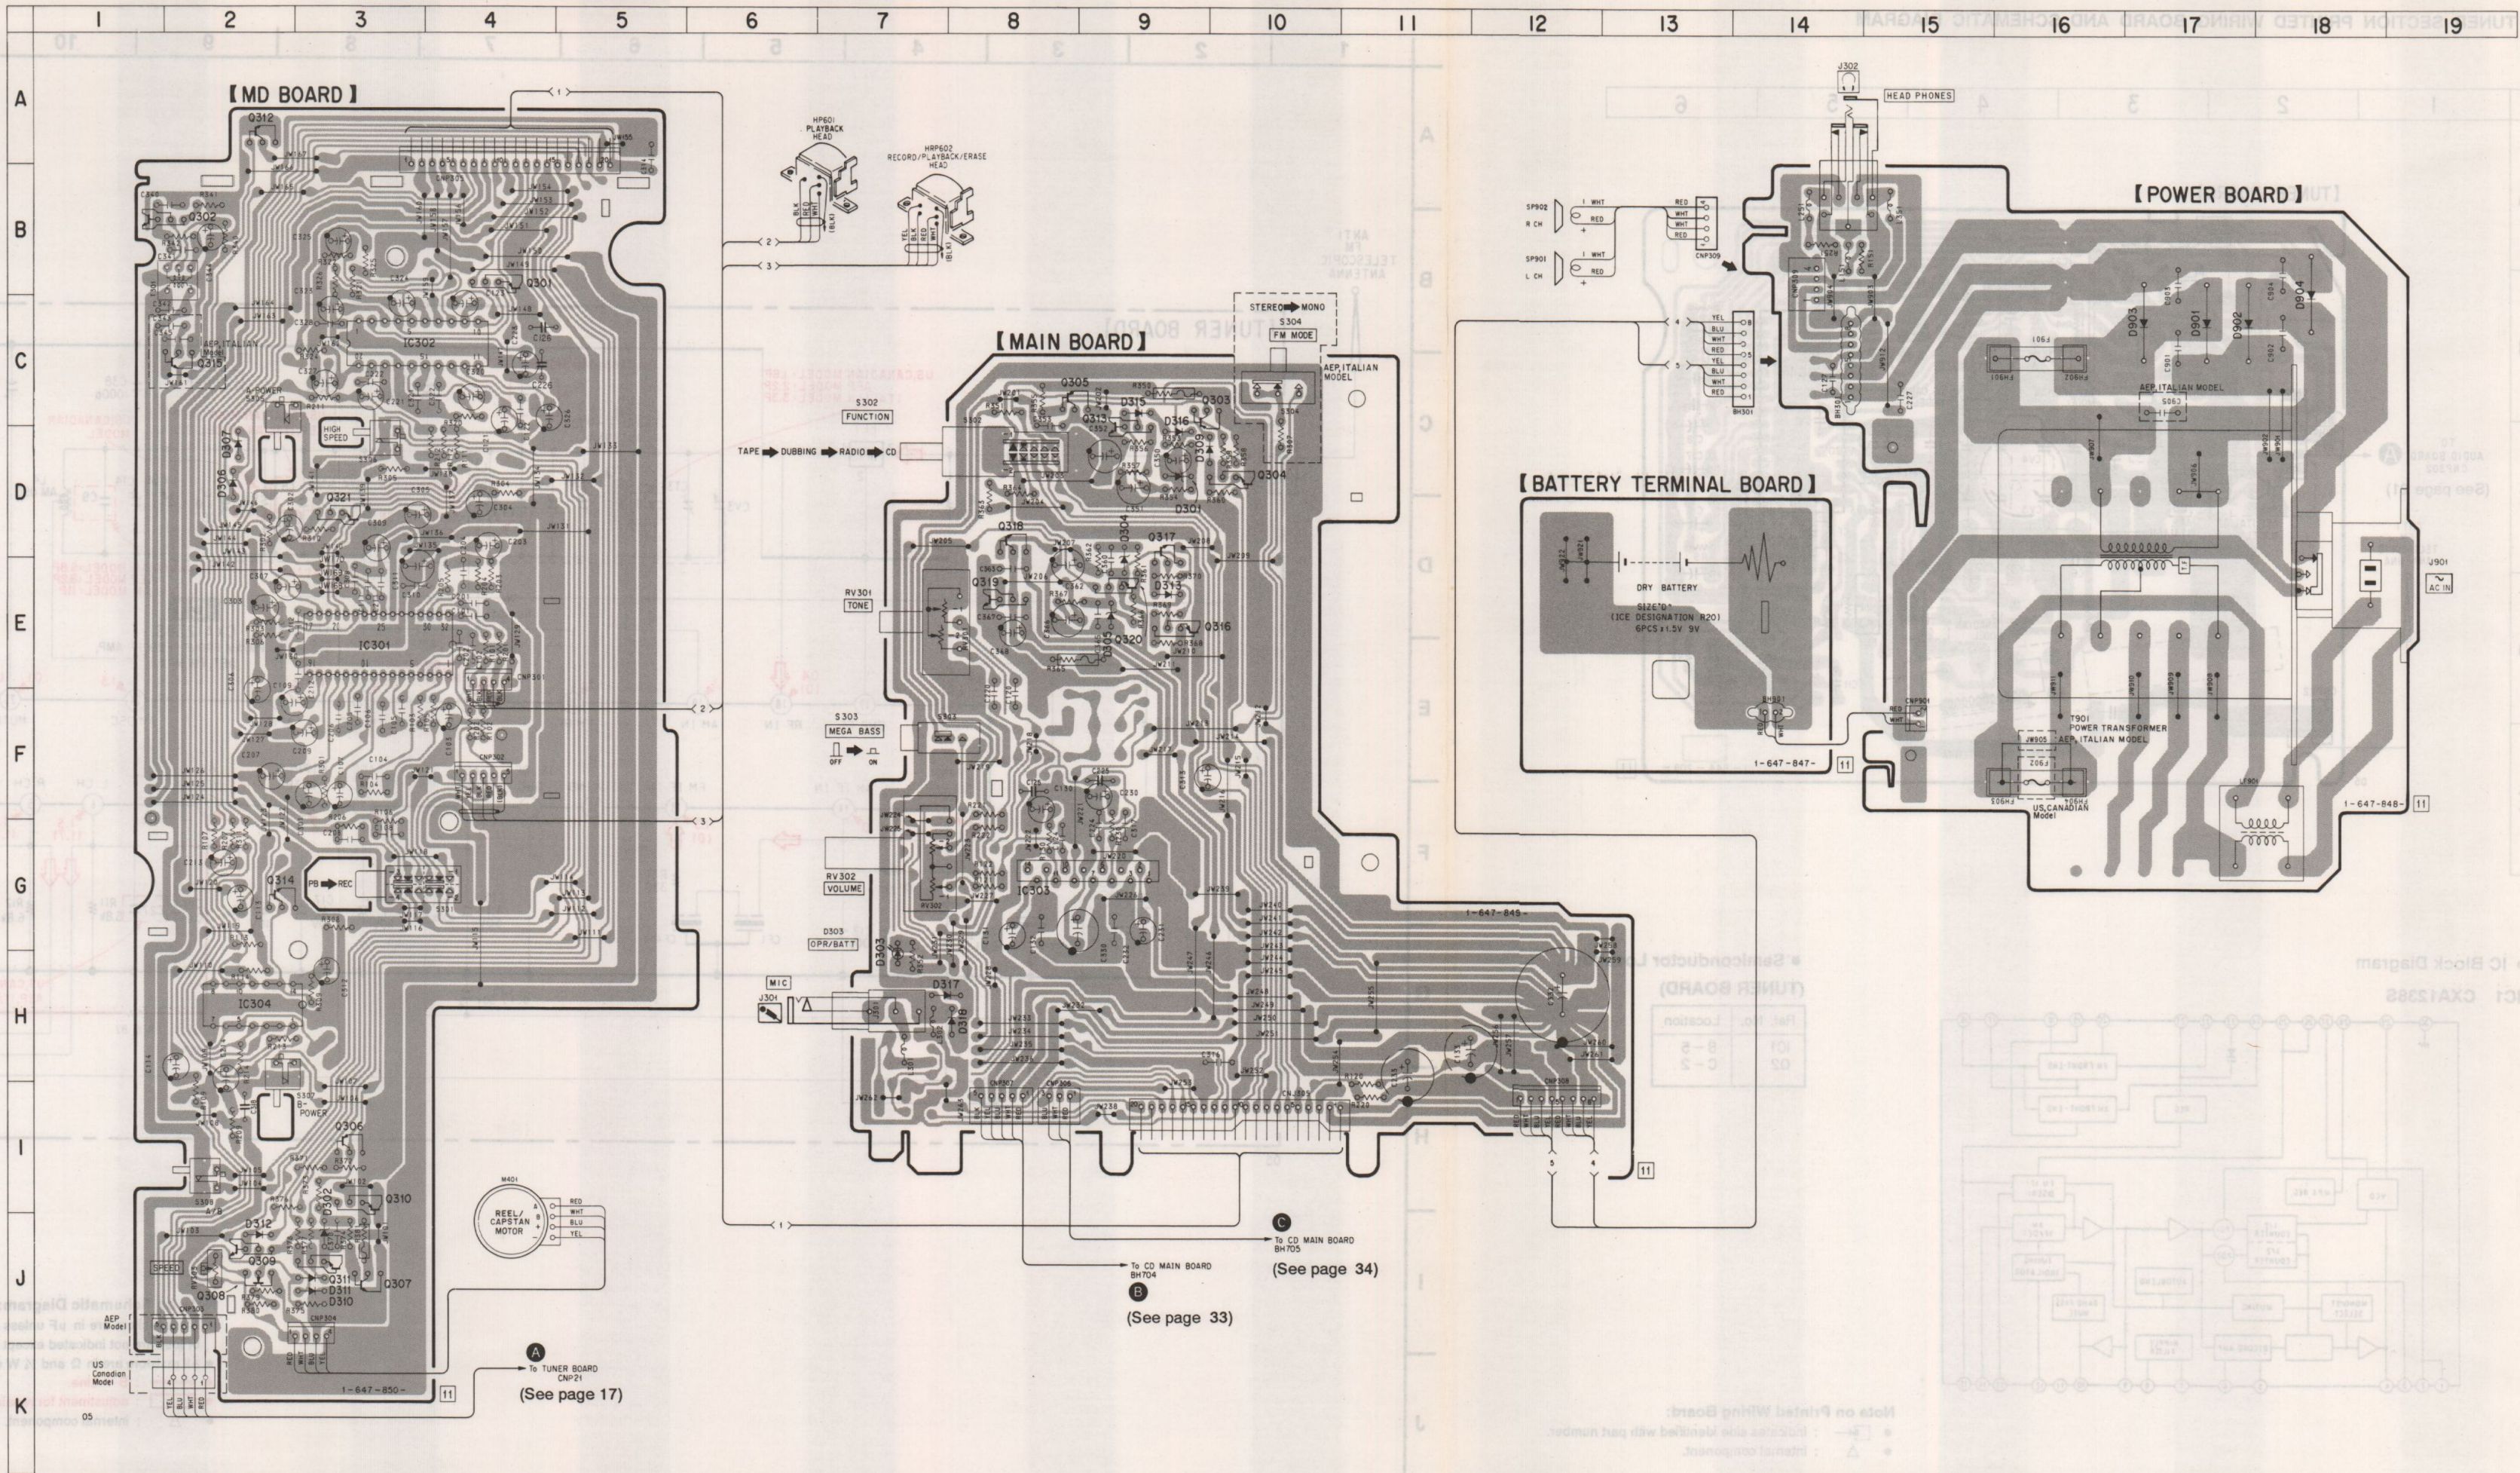





P

IC Block Diagram


IC702 CXD1372AQ

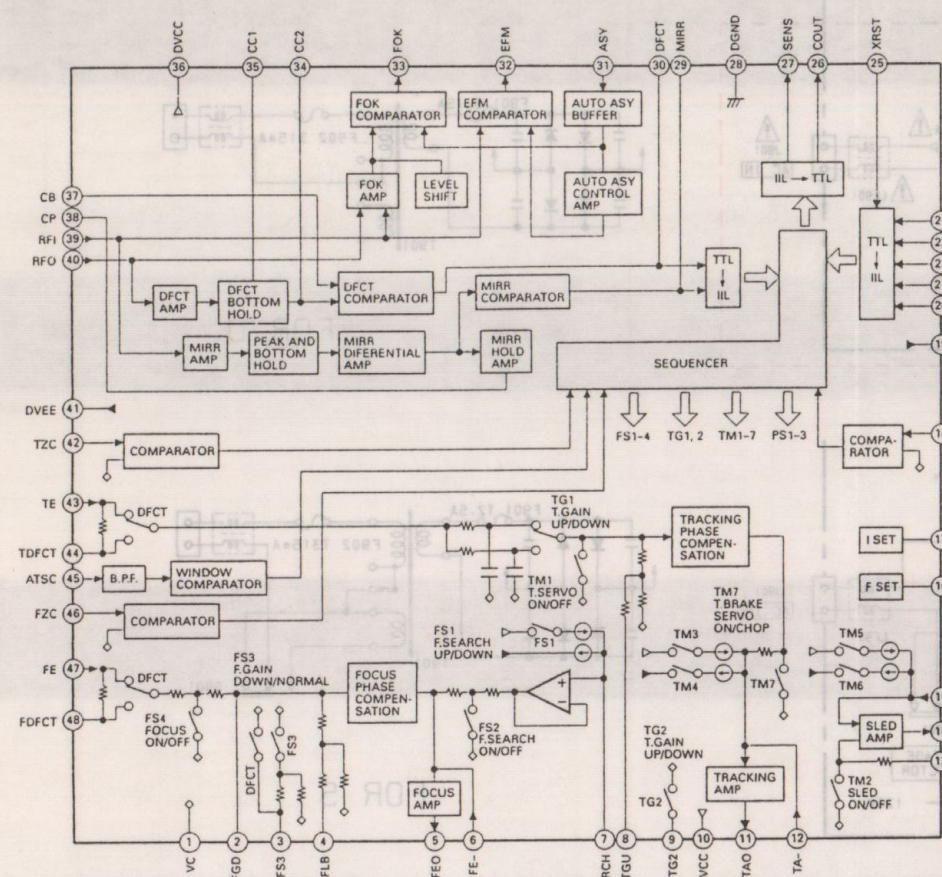

IC703 CXD2500BQ

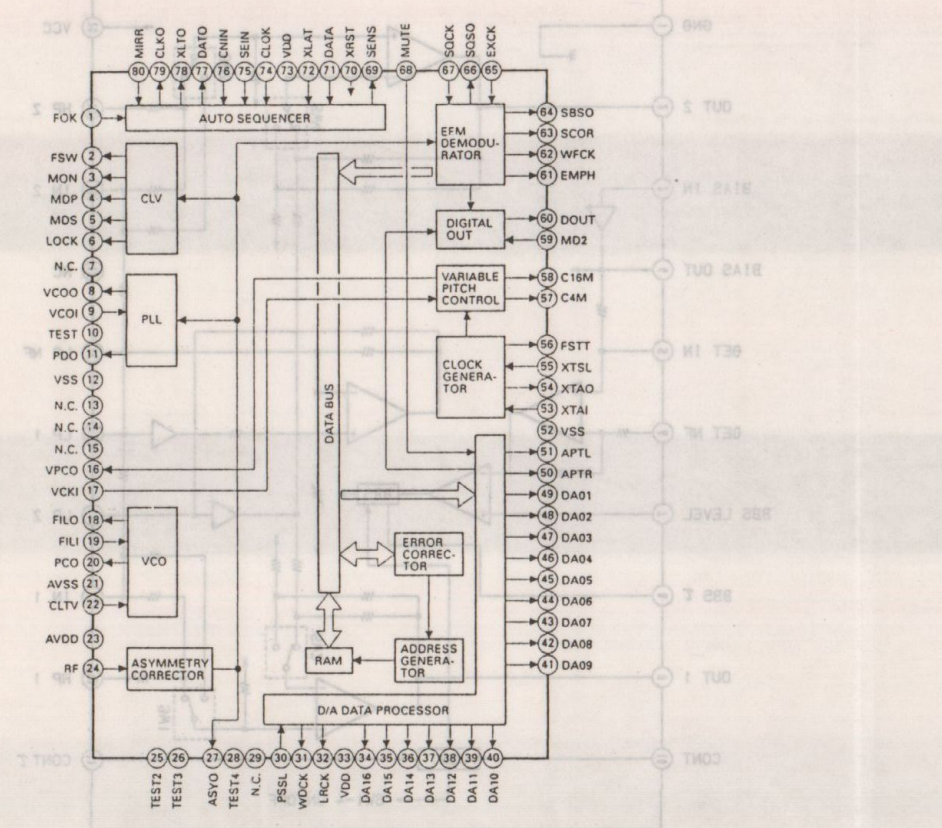

[CD CONTROL BOARD]

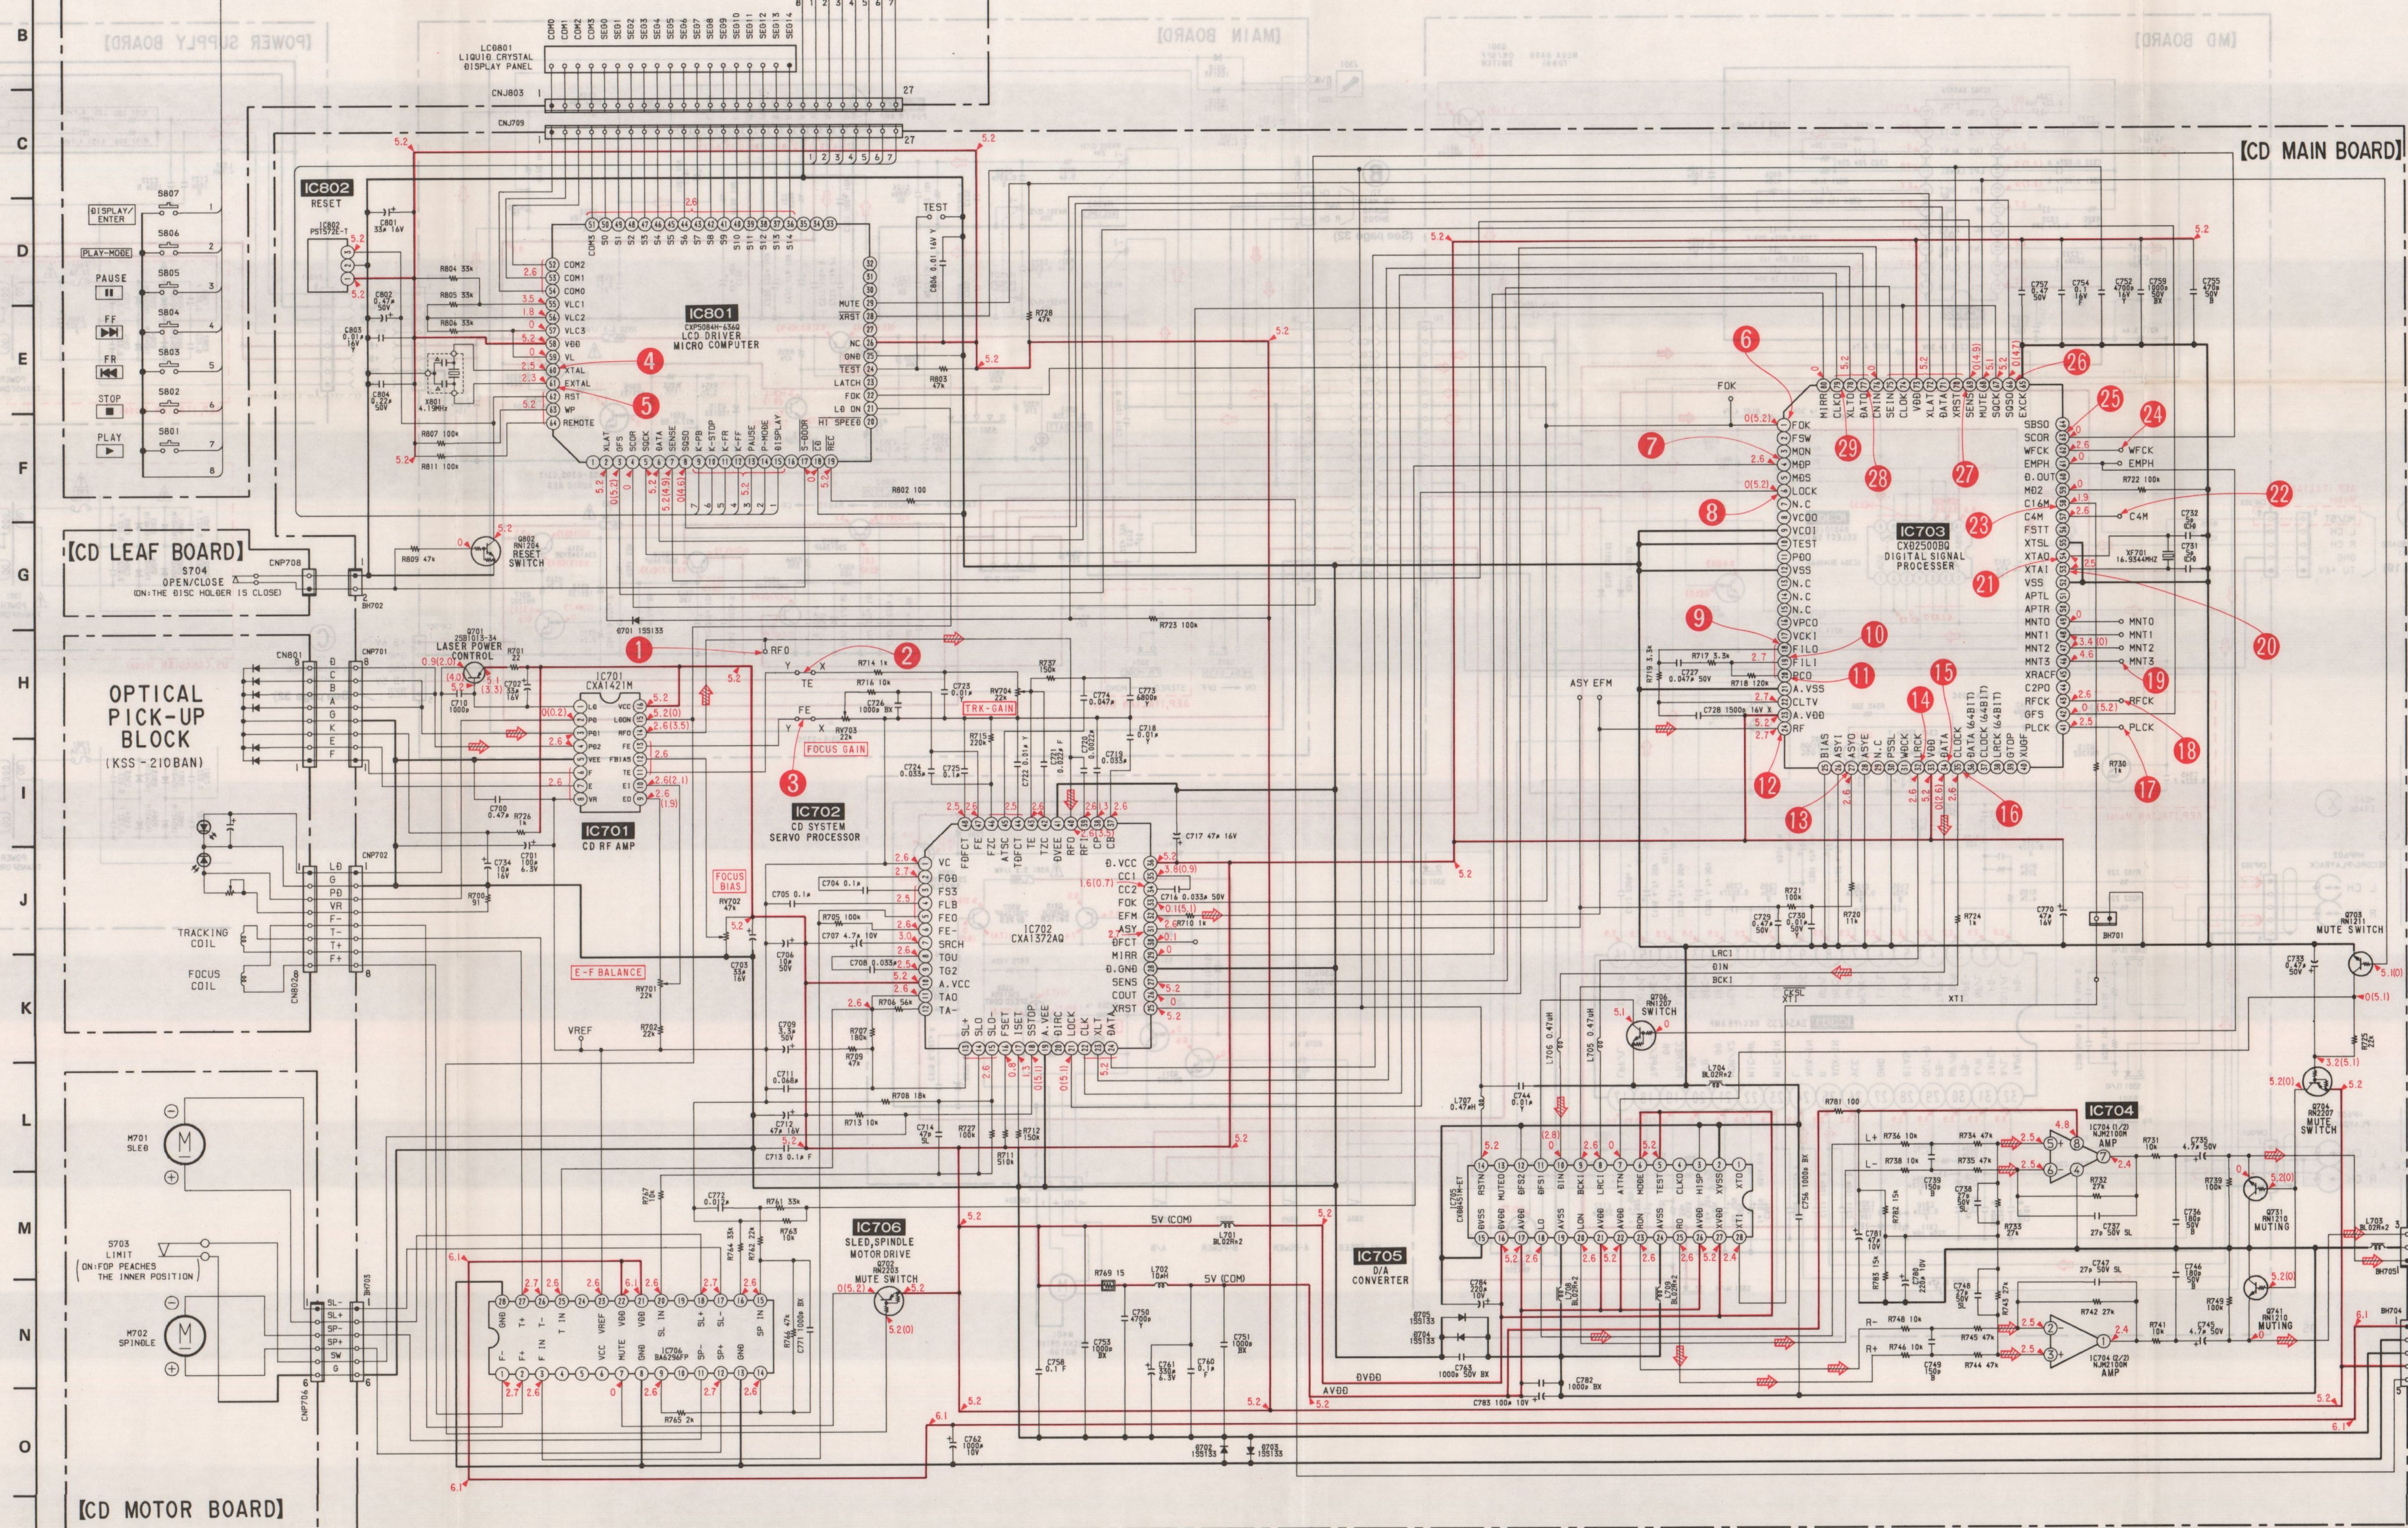


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF, μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
- $\text{---}/\text{---}$: fusible resistor.


Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Remplace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- --- : B+ Line.
- --- : panel designation.
- --- : adjustment for repair.
- Power voltage is dc 9 V and fed with regulated dc power supply from external power voltage jack.
- Voltages and waveforms are dc with respect to ground under no-signal (stamped) conditions.
no mark: STOP
() : CD PLAY
- Voltages are taken with a VOM (10 $\text{M}\Omega/\text{V}$) in 50% condition.
Voltage variations may be noted due to normal production tolerances.
- Signal path.
- --- : CD
- * : Impossible to measure the voltage at the marked points.

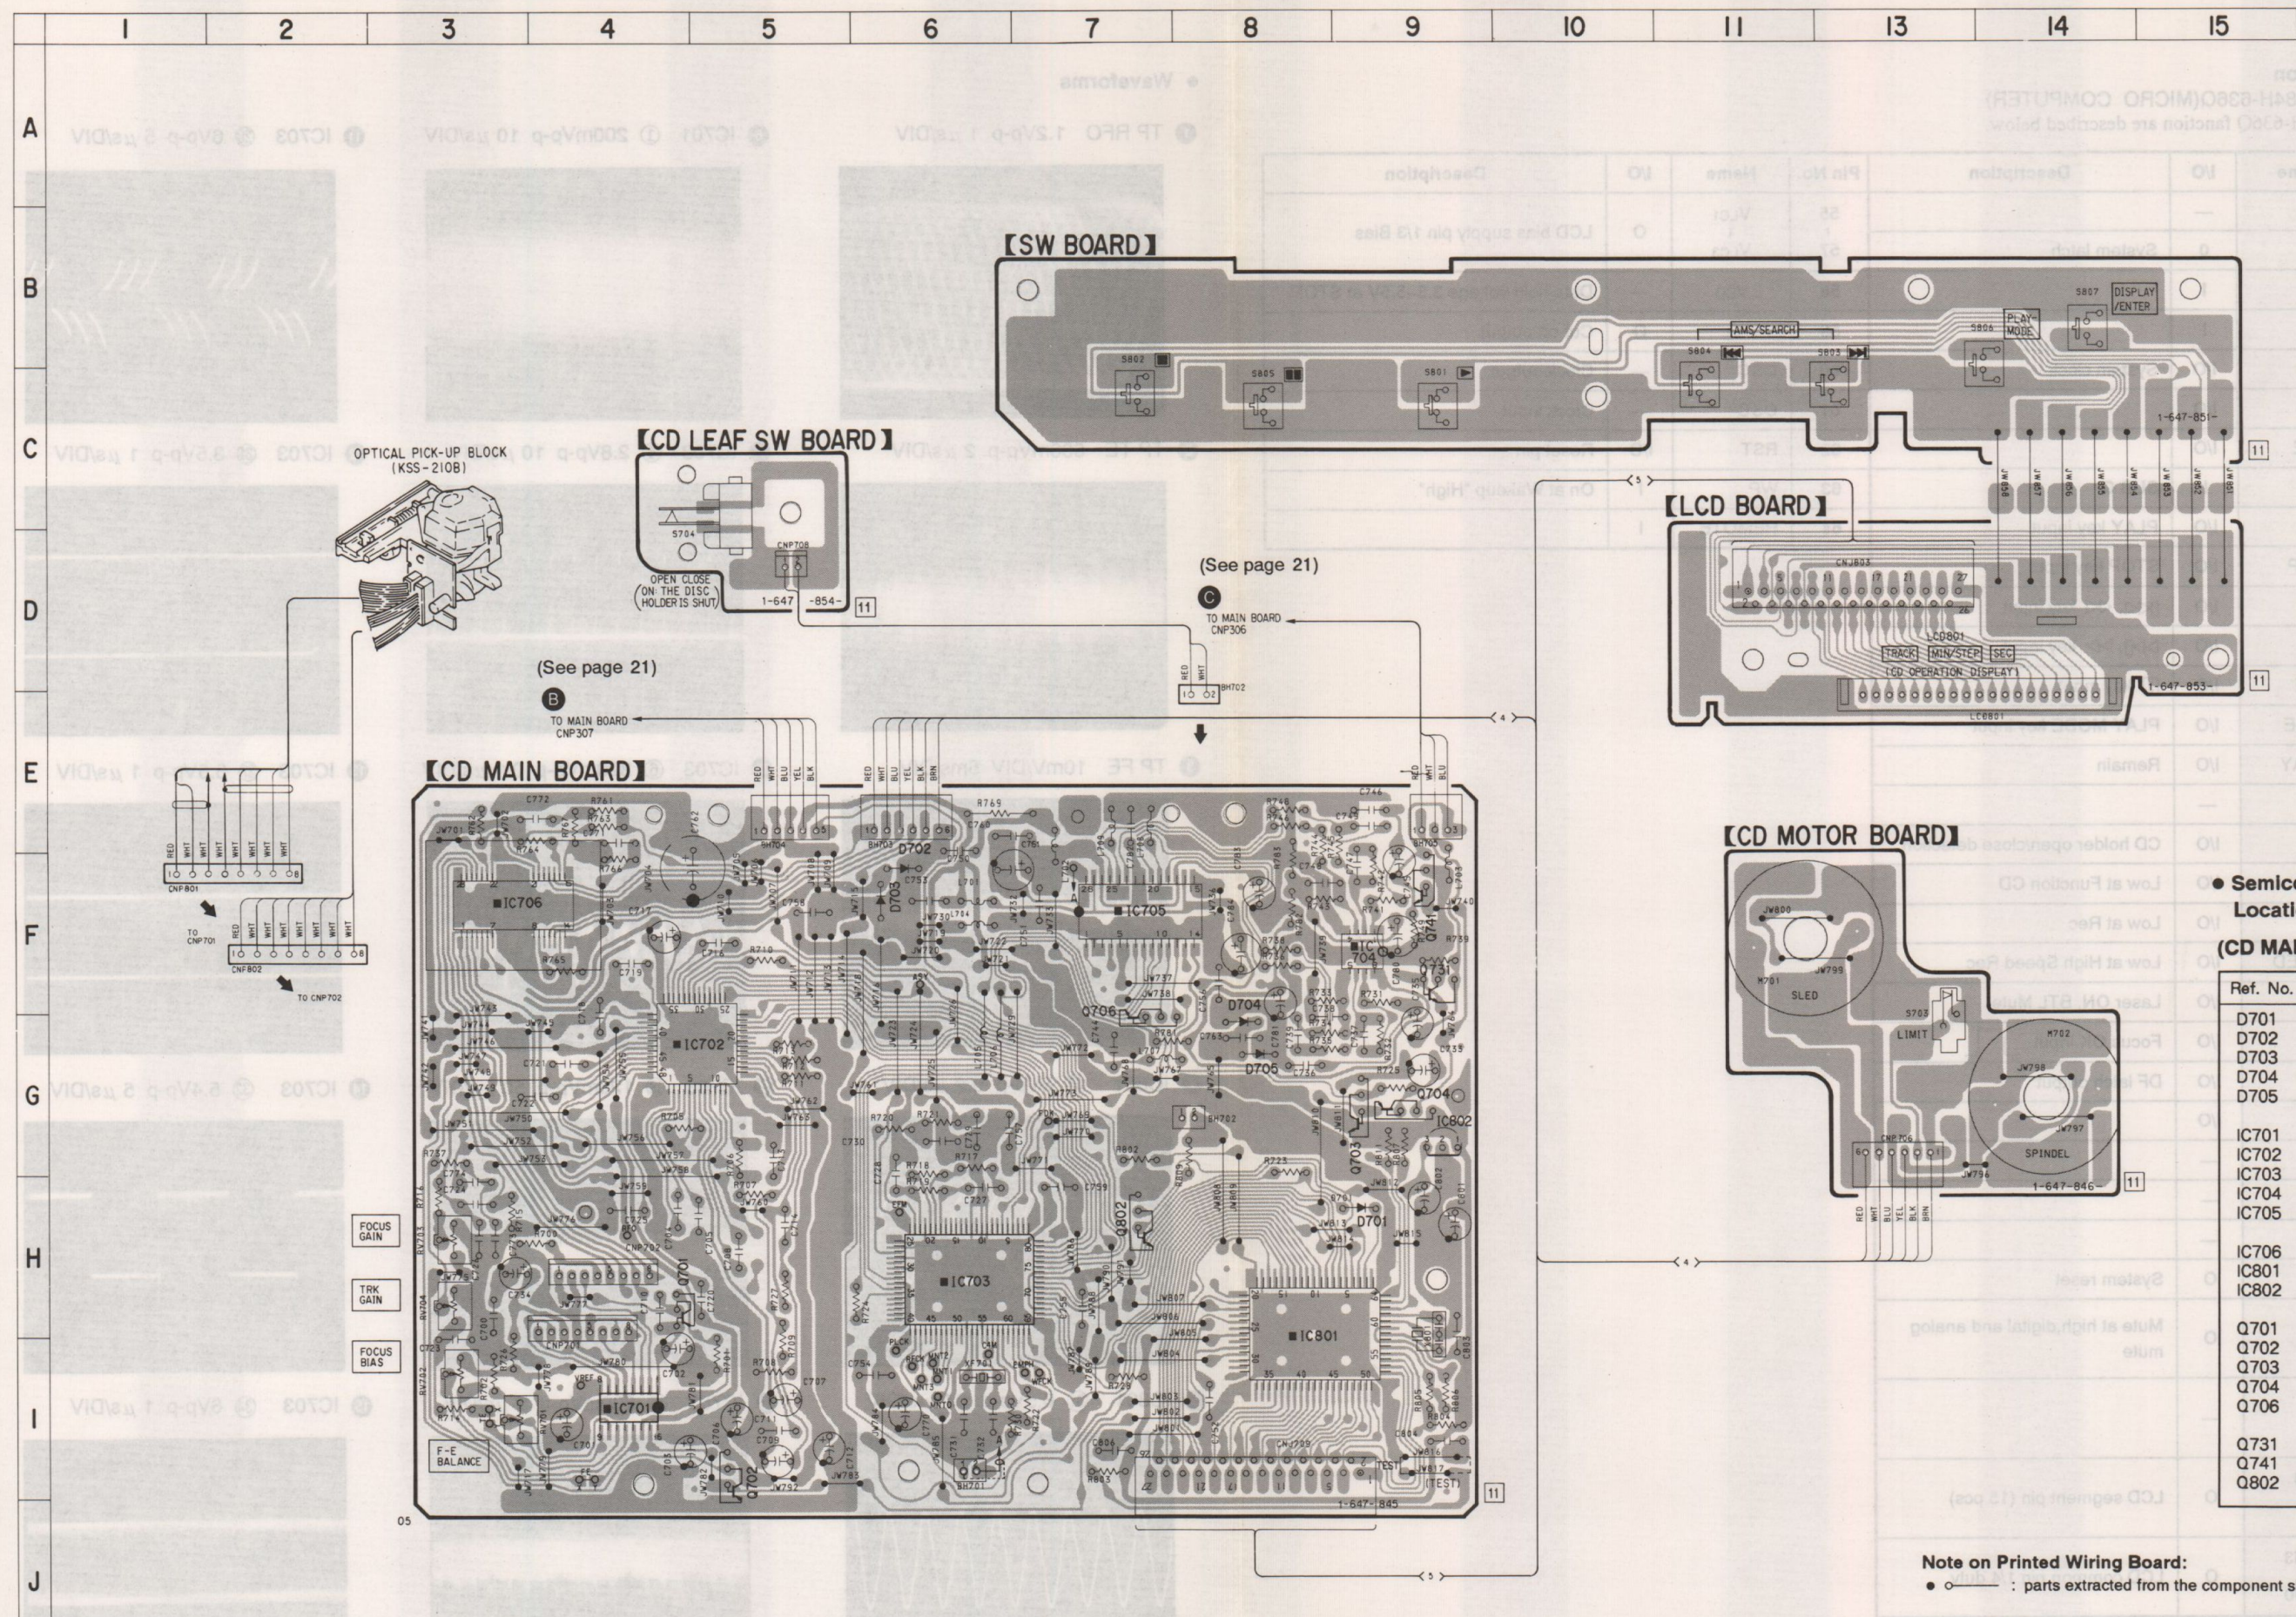


● Pin description
IC801 CXP5084H-636Q(MICRO COMPUTER)
The CXP5084H-636Q function are described below.

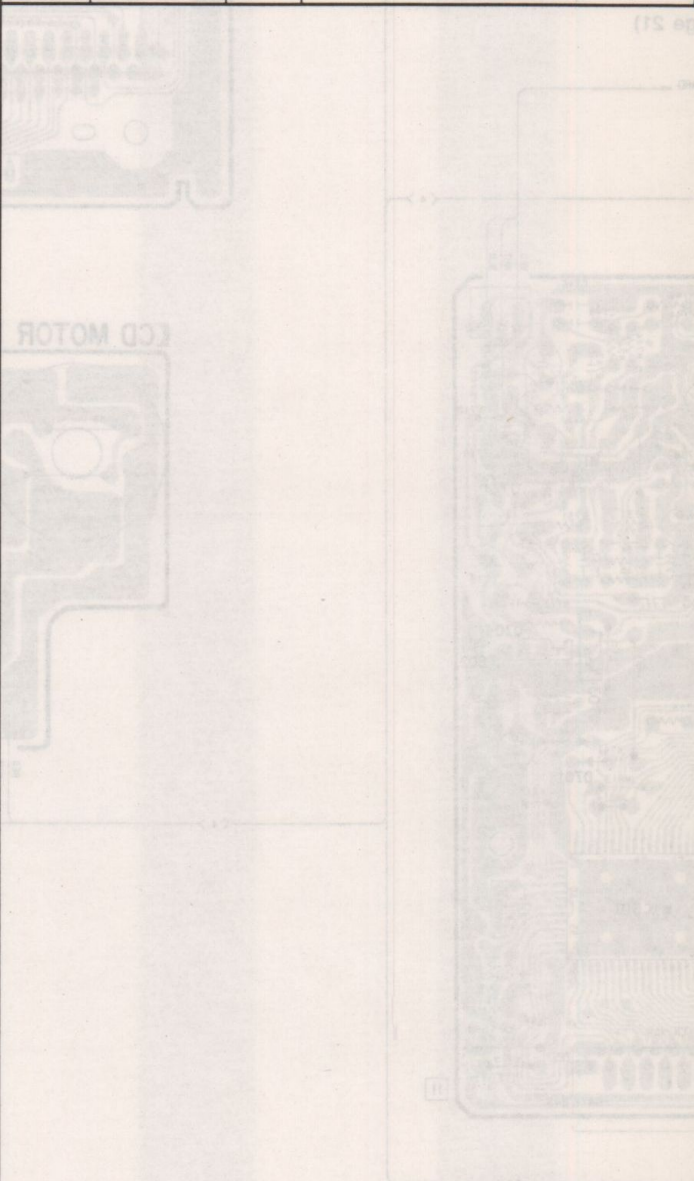
Pin No.	Name	I/O	Description	Pin No.	Name	I/O	Description
1	—	—		55 57	V _{LC1} V _{LC3}	O	LCD bias supply pin 1/3 Bias
2	XLT	0	System latch				
3	GFS	I		58	V _{DD}	—	Data hold voltage 3.5~5.5V at STOP
4	SCOR	I		59	V _L	O	Cut-off output
5	CLK	I/O	System clock	60	OSC	—	Clock output
6	DATA	I/O		61	OSC	—	Clock input
7	SENSE	I/O		62	RST	I/O	Reset pin
8	SQSO	I	SUB Q	63	WP	I	On at Wakeup "High"
9	K-PB	I/O	PLAY key input	64	REMOTE	I	
10	K-STOP	I/O	STOP key input				
11	K-FR	I/O	◀◀, ◀ key input				
12	K-FF	I/O	▶▶, ▶ key input				
13	PAUSE	I/O	⏸ key input				
14	P-MODE	I/O	PLAY MODE key input				
15	DISPLAY	I/O	Remain				
16	—	—					
17	DOOR	I/O	CD holder open/close detection				
18	CD	I/O	Low at Function CD				
19	REC	I/O	Low at Rec				
20	HI SPEED	I/O	Low at High Speed Rec				
21	LD ON	I/O	Laser ON, BTL Mute				
22	FOK	I/O	Focus OK input 				
23	LATCH	I/O	DF latch output				
24	TEST	I/O					
25	GND	—					
26	NC	—					
27	—	—					
28	XRST	O	System reset				
29	MUTE	O	Mute at high,digital and analog mute				
30 35	—	—					
36 50	S14 S0	O	LCD segment pin (15 pcs)				
51 54	COM3 COM0	O	LCD common pin 1/4 duty				

● Waveforms


① TP RFO 1.2Vp-p 1 μs/DIV

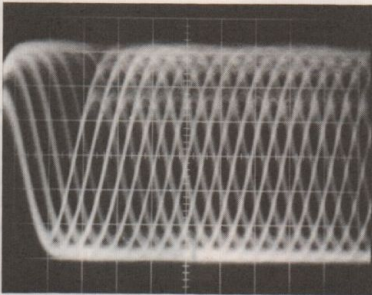


② TP TE 600mVp-p 2 μs/DIV

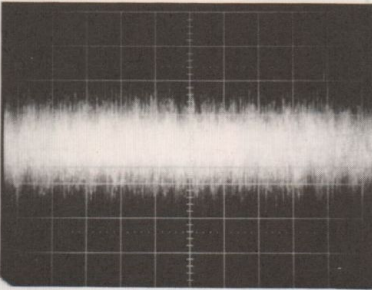


③ TP FE 10mV/DIV 5ms/DIV

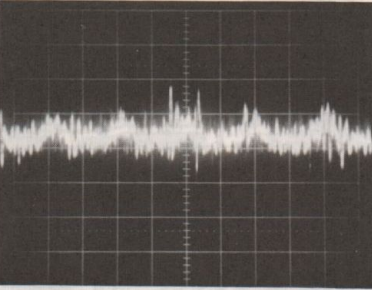


④ IC801 ⑥0 6Vp-p 0.2 μs/DIV

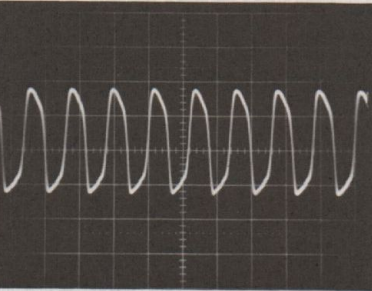


⑤ IC801 ⑥1 6.5Vp-p 0.2 μs/DIV

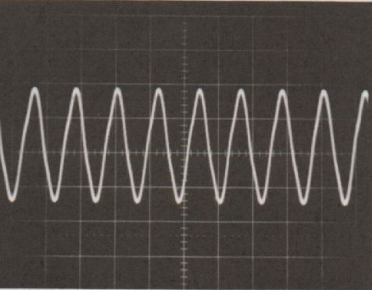


⑥ IC701 ① 200mVp-p 10 μs/DIV

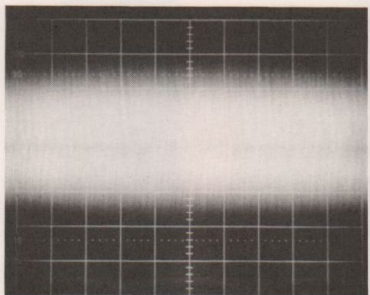


⑦ IC703 ④ 2.8Vp-p 10 μs/DIV

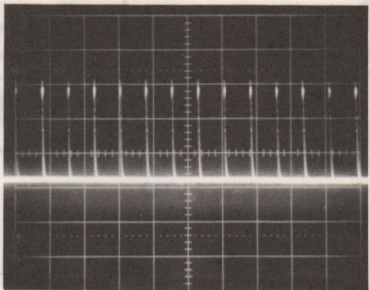


⑧ IC703 ⑥ 320mVp-p 0.1 μs/DIV

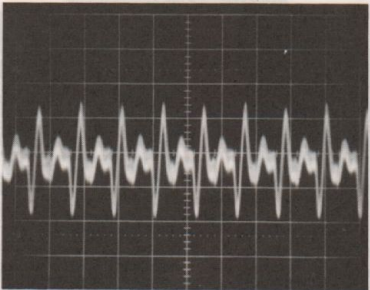


⑨ IC703 ⑱ 120mVp-p 50 μs/DIV

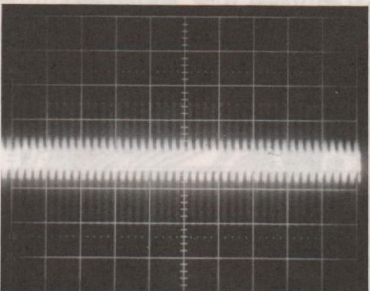


⑩ IC703 ⑲ 200mVp-p 5 μs/DIV

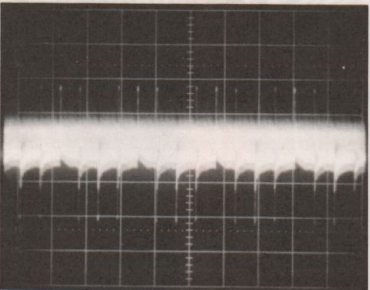


⑪ IC703 ⑳ 6Vp-p 5 μs/DIV

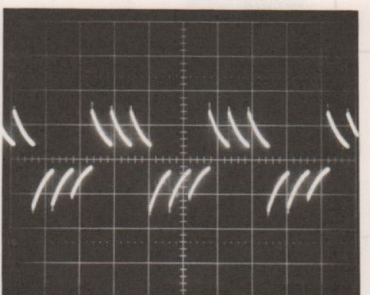


⑫ IC703 ㉔ 3.5Vp-p 1 μs/DIV

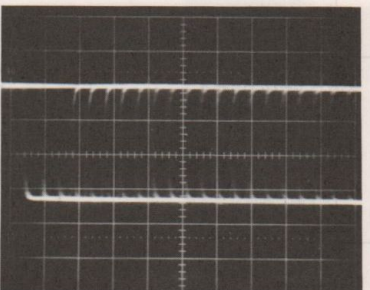


⑬ IC703 ㉗ 5.5Vp-p 1 μs/DIV

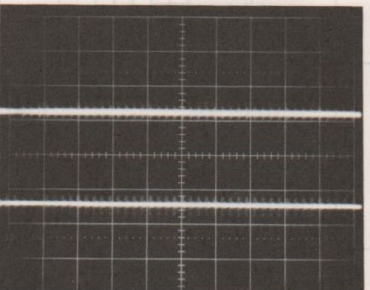


⑭ IC703 ㉚ 5.4Vp-p 5 μs/DIV

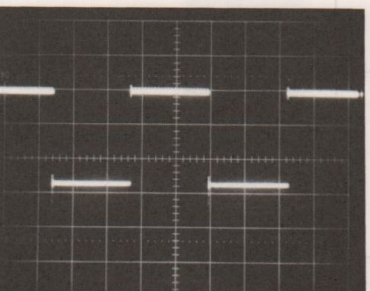


⑮ IC703 ㉜ 6Vp-p 1 μs/DIV

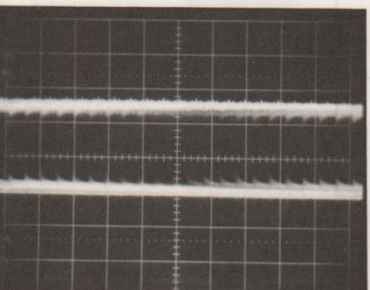


16 IC703 35 5.4Vp-p 0.2 μ s/DIV

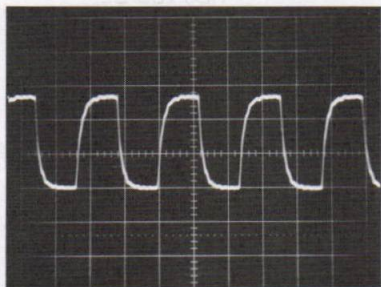


21 IC703 54 6.8Vp-p 0.05 μ s/DIV

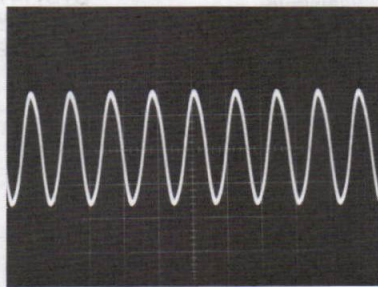


26 IC703 66 5.2Vp-p 5ms/DIV

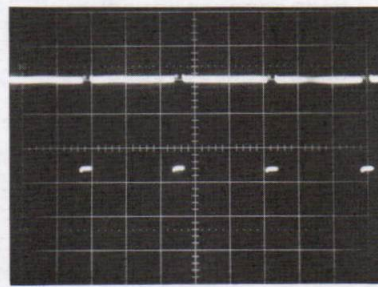


17 IC703 41 7Vp-p 0.1 μ s/DIV

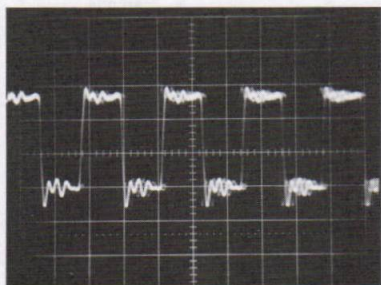


22 IC703 57 7Vp-p 0.1 μ s/DIV

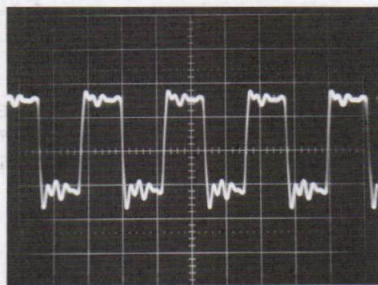


27 IC703 69 5.2Vp-p 5ms/DIV

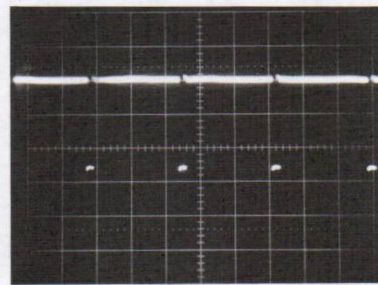


18 IC703 43 5.4Vp-p 50 μ s/DIV

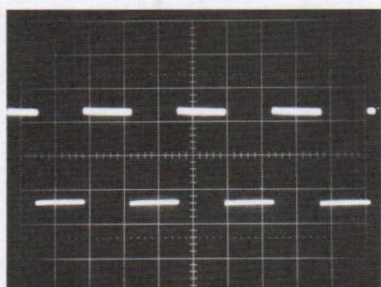


23 IC703 58 6.8Vp-p 0.1 μ s/DIV

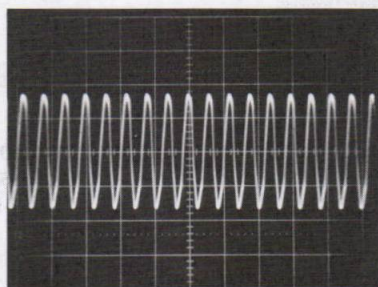


28 IC703 77 5Vp-p 5ms/DIV

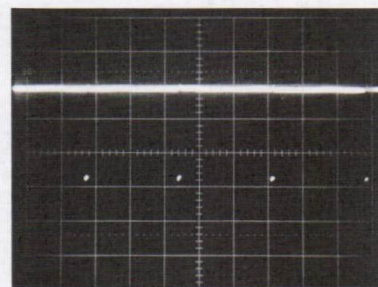


19 IC703 46 5.4Vp-p 50 μ s/DIV

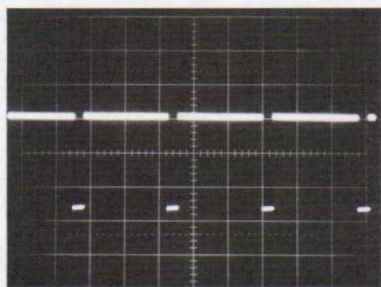


24 IC703 62 5.4Vp-p 50 μ s/DIV

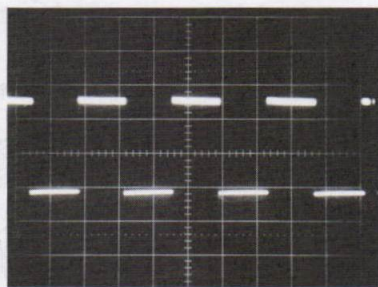


29 IC703 79 5.2Vp-p 5ms/DIV

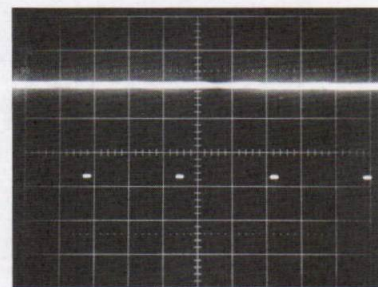

20 IC703 53 2.3Vp-p 0.05 μ s/DIV

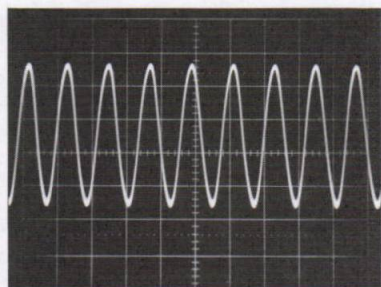


25 IC703 63 5.4Vp-p 50 μ s/DIV

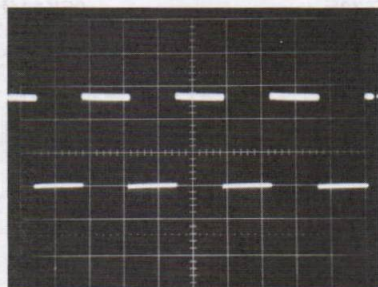


• Semiconductor Lead Layouts

BA3423S

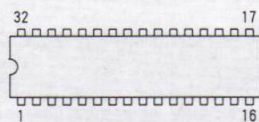


(TOP VIEW)

BA3870




(TOP VIEW)

BA6296FP

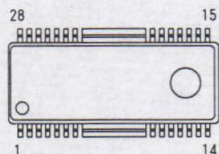


BU4066B




(TOP VIEW)

CXA1238S




(TOP VIEW)

CXA1372AQ

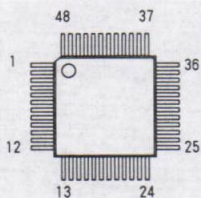


(TOP VIEW)

CXA1421M

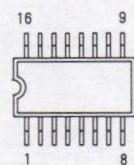


(TOP VIEW)

CXD2500BQ

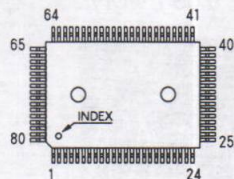


(TOP VIEW)

CXD8451M-ET

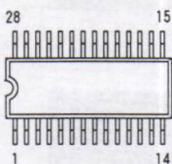


(TOP VIEW)

CXP5084H-636Q

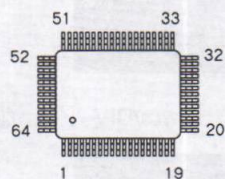


TOP VIEW

LA4598

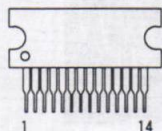

NJM2100M



(TOP VIEW)

PST572E




1:Vcc
2:GND
3:OutPut

DTC114EL-TL2
DTC114ES
DTC114YL-TL2
DTC114YS
DTC124ES
RN1210
RN1211
RN2207TPE4



DTC144ES
2SA1175-HFE
2SC2785-HFE


LETTER SIDE



2SA952
2SB1013-4
2SC1815-GR
2SC945-P




2SD1266-P




2SK104H




RD5.6ES-B2
RD6.8ES-B2
RD8.2ES-B2
1SS119

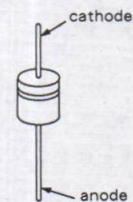

U05G

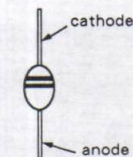

SLP-135B-55

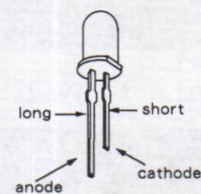

SECTION 7 EXPLODED VIEWS

NOTE :

- -XX and -X mean standardized parts, so they may have some differences from the original one.

- Color Indication of Appearance Parts
Example:

KNOB, BALANCE (WHITE) (RED)

↑ ↑
Parts color Cabinet's color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (#mark) list is given in the last of this parts list.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.


Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

(1) FRONT CABINET ASSEMBLY SECTION

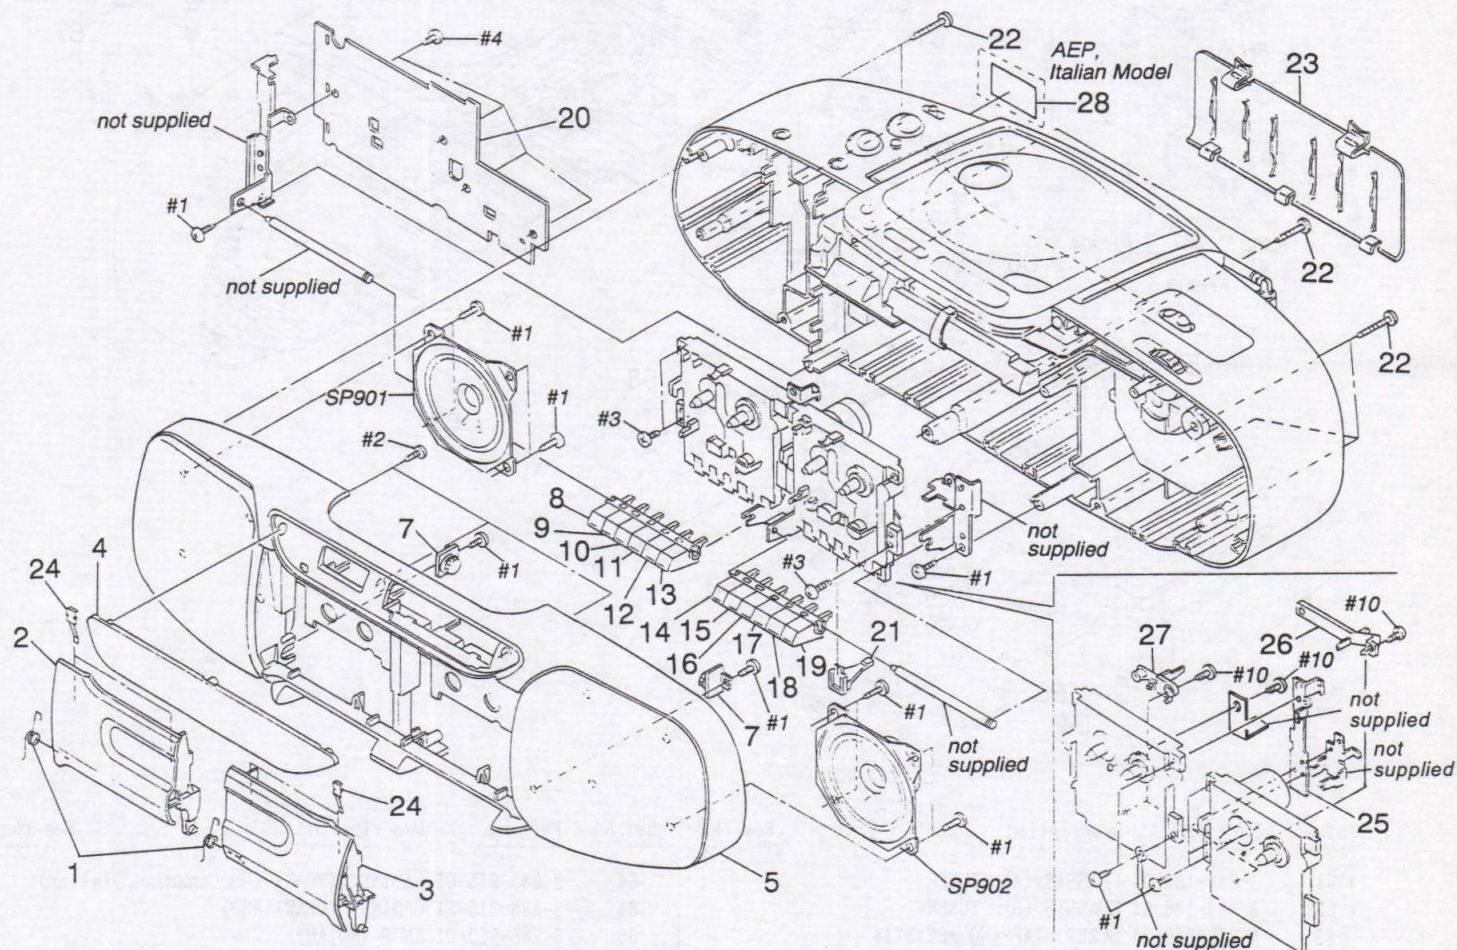

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-388-196-01	SPRING, CASSETTE OPEN		16	3-388-168-01	BUTTON (PLAY-B), MD	
2	A-3263-586-A	HOLDER (L) ASSY, CASSETTE		17	3-388-167-01	BUTTON (REW-B), MD	
3	A-3263-587-A	HOLDER (R) ASSY, CASSETTE		18	3-388-166-01	BUTTON (FF-B), MD	
4	3-388-194-01	PANEL (US, Canadian)		19	3-388-169-01	BUTTON (PAUSE-B), MD	
4	3-388-194-11	PANEL (AEP)		* 20	A-3264-358-A	MD BOARD, COMPLETE (US, Canadian)	
4	3-388-194-21	PANEL (Italian)		* 20	A-3264-631-A	MD BOARD, COMPLETE (AEP, Italian)	
5	X-3366-599-1	CABINET (FRONT) SUB ASSY		* 21	3-389-274-01	LEVER, PLAY	
7	3-351-377-11	DAMPER		22	3-325-679-31	SCREW, TAPPING +BV 3X14	
8	3-388-177-01	BUTTON (S/E-A), MD		23	3-368-522-01	LID, BATTERY CASE	
9	3-388-182-01	BUTTON (HSD-A), MD		24	3-308-823-11	SPRING	
10	3-388-180-01	BUTTON (PLAY-A), MD		25	3-380-160-01	JOINT (MD)	
11	3-388-179-01	BUTTON (REW-A), MD		* 26	3-380-451-01	LEVER (REC)	
12	3-388-178-01	BUTTON (FF-A), MD		* 27	3-380-452-01	LEVER (MD-B)	
13	3-388-181-01	BUTTON (PAUSE-A), MD		* 28	4-941-548-01	LABEL, CLASS (1) (AEP, Italian)	
14	3-388-165-01	BUTTON (S/E-B), MD		SP901	1-504-269-21	SPEAKER (10CM)	
15	3-388-170-01	BUTTON (REC-B), MD		SP902	1-504-269-21	SPEAKER (10CM)	

(2) REAR CABINET ASSEMBLY SECTION

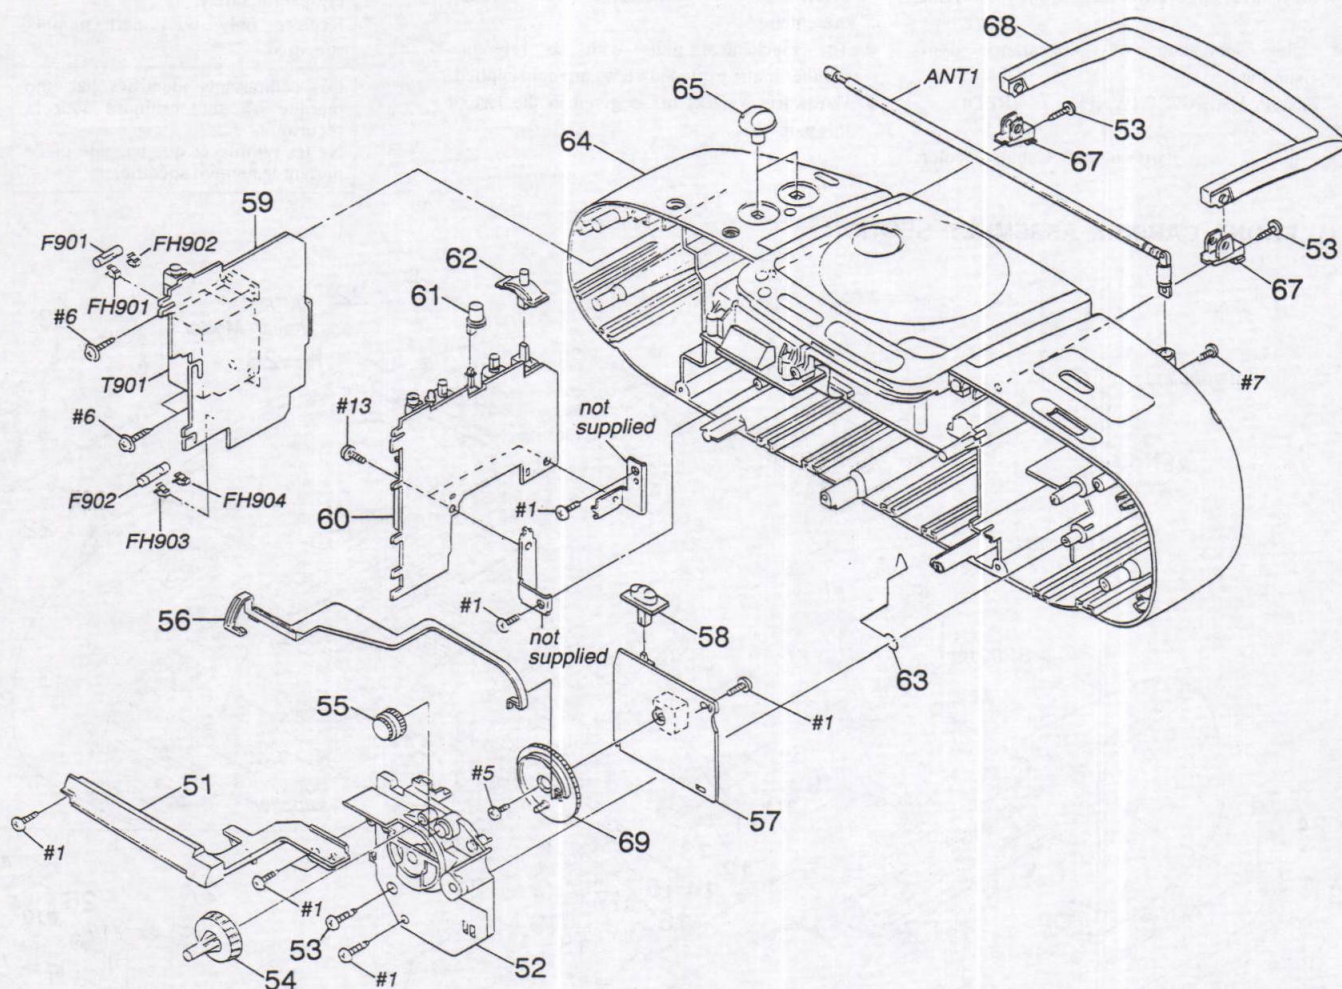


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 51	3-388-184-01	CHASSIS (A), TUNER		64	3-388-215-01	CABINET (REAR) (US, Canadian, Italian)	
* 52	3-388-185-01	CHASSIS (B), TUNER		64	3-388-215-21	CABINET (REAR) (AEP)	
53	3-325-679-31	SCREW, TAPPING +BV 3X14		65	3-386-950-01	KNOB (ROTARY)	
54	3-388-183-01	KNOB (TUNING) (US, AEP, Italian)		* 67	3-388-216-01	HOLDER, HANDLE	
* 55	3-388-187-01	GEAR, MIDWAY		68	X-3366-600-1	HANDLE ASSY	
56	3-388-186-01	POINTER		69	3-388-189-01	GEAR, TUNING CAPACITOR	
* 57	A-3264-641-A	TUNER BOARD, COMPLETE (US, Canadian)		ANT1	1-501-515-11	ANTENNA, TELESCOPIC	
* 57	A-3264-715-A	TUNER BOARD, COMPLETE (AEP)		△F901	1-532-735-11	FUSE (3.15A) (US, Canadian)	
* 57	A-3264-815-A	TUNER BOARD, COMPLETE (Italian)		△F901	1-532-286-00	FUSE (T2.5A) (AEP, Italian)	
58	3-388-188-01	KNOB (2 BAND)		△F902	1-576-107-11	FUSE (315mA) (US, Canadian)	
* 59	1-647-848-11	POWER BOARD		FH901	1-533-217-31	HOLDER, FUSE	
* 60	A-3264-359-A	MAIN BOARD, COMPLETE (US, Canadian)		FH902	1-533-217-31	HOLDER, FUSE	
* 60	A-3264-633-A	MAIN BOARD, COMPLETE (AEP, Italian)		FH903	1-533-217-31	HOLDER, FUSE (US, Canadian)	
61	3-386-946-01	BUTTON (DBB)		FH904	1-533-217-31	HOLDER, FUSE (US, Canadian)	
62	3-388-164-01	KNOB (FUNCTION)		△T901	1-450-515-11	TRANSFORMER, POWER (US, Canadian)	
* 63	3-389-272-01	TERMINAL, ANTENNA		△T901	1-450-517-11	TRANSFORMER, POWER (AEP, Italian)	

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

(3) CD ASSEMBLY SECTION

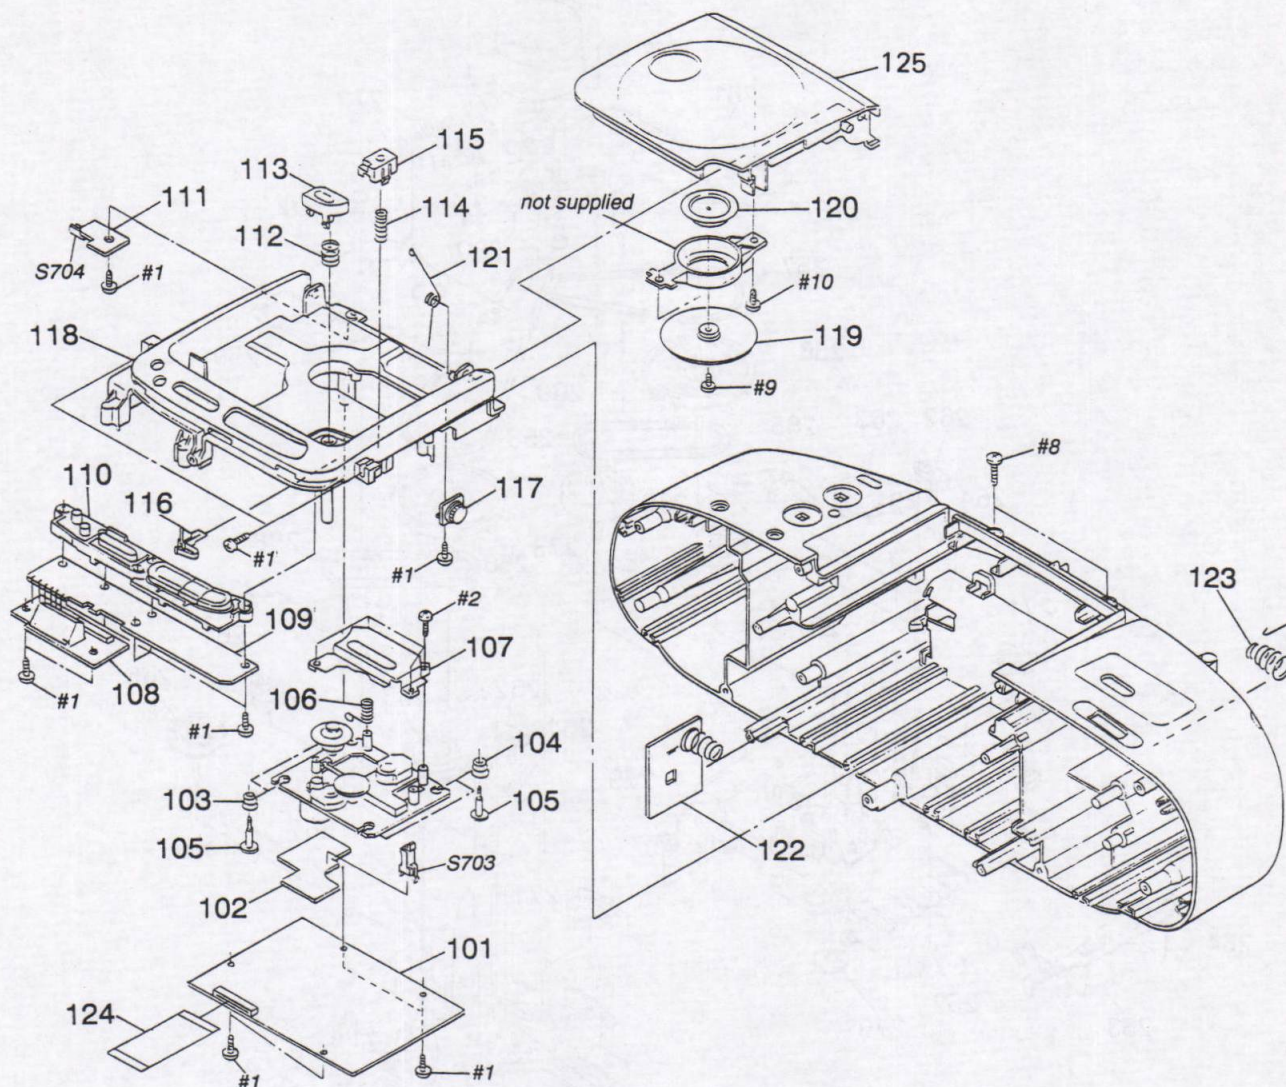


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 101	A-3264-357-A	CD MAIN BOARD, COMPLETE		114	3-388-206-01	SPRING (CD LIFT)	
* 102	1-647-846-11	CD MOTOR BOARD		* 115	3-388-202-01	LEVER, CD LIFT	
103	4-922-858-11	DAMPER (GREEN)		* 116	3-388-203-01	CLAW, LOCK	
104	4-922-858-01	DAMPER (PINK)		117	3-351-377-11	DAMPER	
105	4-931-373-01	SCREW, CD FITTING		118	3-388-201-01	CABINET (UPPER)	
106	4-931-358-01	SPRING		119	3-704-435-01	PLATE (M), CHUCK	
107	4-928-936-01	COVER, CD		120	1-452-531-11	MAGNET	
* 108	1-647-853-11	LCD BOARD		121	3-388-211-01	SPRING (CD OPEN)	
* 109	1-647-851-11	SWITCH BOARD		* 122	1-647-847-11	BATTERY TERMINAL BOARD	
110	3-388-210-01	BUTTON (CD)		123	3-368-494-01	SPRING (+, -), BATTERY COIL	
* 111	1-647-854-11	LEAF SWITCH BOARD		124	1-751-445-11	WIRE, PARALLEL (FFC) (27 CORE)	
112	3-388-204-01	SPRING (CD OPEN BUTTON)		125	A-3300-118-A	HOLDER SUB ASSY (CD)	
113	3-388-205-01	BUTTON (CD OPEN)		S703	1-571-936-11	SWITCH, LEAF (LIMIT)	
				S704	1-570-013-11	SWITCH, LEAF (OPEN/CLOSE)	

(4) TAPE TRANSPORT MECHANISM-1
(MF-W308-64)

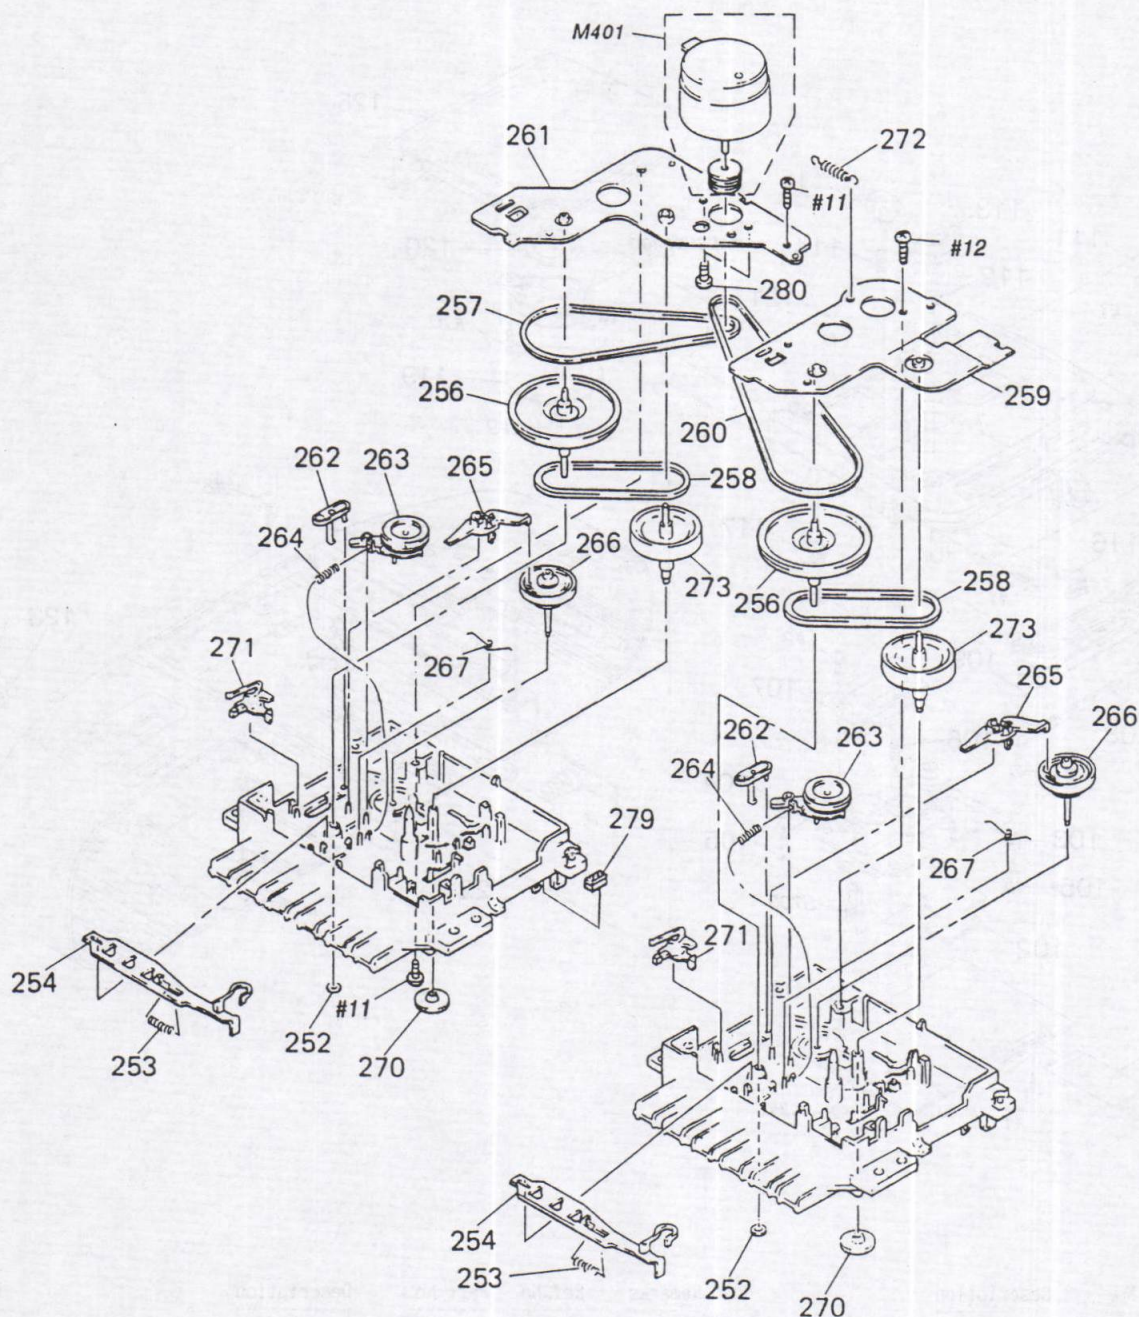

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
252	3-343-358-01	RING, RETAINING		264	3-905-168-01	SPRING, COMPRESSION	
253	4-932-656-01	SPRING, COMPRESSION		265	4-928-986-01	LEVER (S), SHUT-OFF	
254	4-928-996-11	LEVER, SW		266	X-4918-582-1	PLATE ASSY, TAKE-UP REEL	
256	X-4920-923-1	WHEEL (W) ASSY, CAPSTAN		267	4-928-958-01	SPRING, FR RETURN	
257	3-369-312-01	BELT (59X1)		270	4-928-967-01	GEAR (C), MIDWAY	
258	4-928-974-01	BELT (MIDWAY)		271	4-928-987-01	LEVER (T), SHUT-OFF	
* 259	X-4918-598-1	PLATE ASSY, GROUND		272	3-378-420-01	SPRING, TENSION	
260	3-378-419-01	BELT		273	X-4920-922-1	PULLEY (W) ASSY, FR	
261	X-4920-921-1	PLATE (W) ASSY, GROUND		279	4-934-522-01	CUSHION	
262	4-928-961-01	PLATE, PAUSE LOCK		280	3-343-251-01	SCREW (M2.6X2.5)	
263	X-4920-346-1	LEVER (S) ASSY, IDLER		M401	X-4920-924-1	MOTOR ASSY (REEL/CAPSTAN)	

(6) OPTICAL PICK-UP SECTION
(KSM-210BAN)

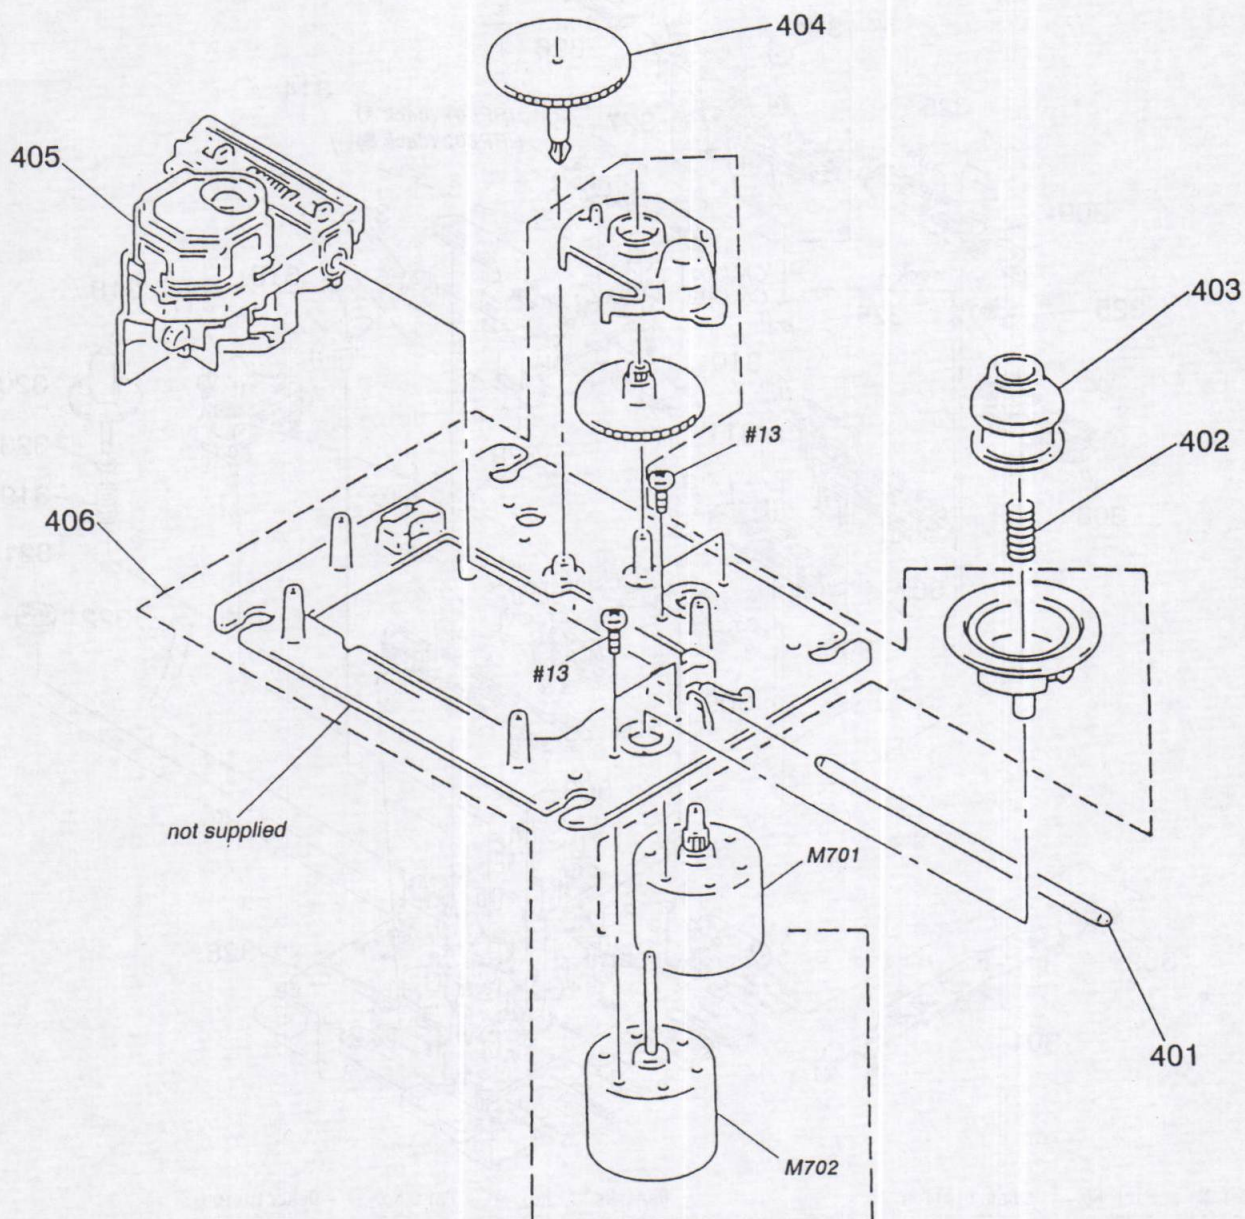

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
401	4-917-565-01	SHAFT, SLED		△405	8-848-137-11	PICK-UP, OPTICAL KSS-210B	
402	2-625-191-01	SPRING, COMPRESSION		406	X-2625-133-2	CHASSIS ASSY, TT (WITH M702 SPINDLE) (SPINDLE)	
403	2-625-186-01	RING (C), CENTER					
404	2-625-188-02	GEAR (A)		M701	X-2625-132-1	GEAR ASSY, MOTOR (SLED)	

Note: The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Note: Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 8

ELECTRICAL PARTS LIST

BATTERY TERMINAL

CD MAIN

● Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.

● -XX and -X mean standardized parts, so they may have some differences from the original one.

● RESISTORS

All resistors are in ohms.

METAL: Metal-film resistor.

METAL OXIDE: Metal Oxide-film resistor.

F: nonflammable

● Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

● SEMICONDUCTORS

In each case, u: μ , for example:

uA.....: μ A....., uPA.....: μ PA.....,

uPB.....: μ PB....., uPC.....: μ PC.....,

uPD.....: μ PD.....

● CAPACITORS

uF: μ F

● COILS

uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	1-647-847-11	BATTERY TERMINAL BOARD *****		C730	1-162-306-11	CERAMIC	0.01uF 20% 16V
	3-389-273-01	SPRING (-), BATTERY COIL *****		C731	1-102-942-00	CERAMIC	5.0PF +-0.5PF 50V
				C732	1-102-942-00	CERAMIC	5.0PF +-0.5PF 50V
				C733	1-124-902-00	ELECT	0.47uF 20% 50V
				C734	1-126-157-11	ELECT	10uF 20% 16V
*	A-3264-357-A	CD MAIN BOARD, COMPLETE *****		C735	1-124-927-11	ELECT	4.7uF 20% 100V
		< CAPACITOR >		C736	1-162-285-31	CERAMIC	180PF 10% 50V
				C737	1-162-209-31	CERAMIC	27PF 5% 50V
				C738	1-162-209-31	CERAMIC	27PF 5% 50V
				C739	1-162-284-31	CERAMIC	150PF 10% 50V
C700	1-136-173-00	FILM	0.47uF 5% 50V	C744	1-162-306-11	CERAMIC	0.01uF 20% 16V
C701	1-124-443-00	ELECT	100uF 20% 10V	C745	1-124-927-11	ELECT	4.7uF 20% 100V
C702	1-124-034-51	ELECT	33uF 20% 16V	C746	1-162-285-31	CERAMIC	180PF 10% 50V
C703	1-124-034-51	ELECT	33uF 20% 16V	C747	1-162-209-31	CERAMIC	27PF 5% 50V
C704	1-136-165-00	FILM	0.1uF 5% 50V	C748	1-162-209-31	CERAMIC	27PF 5% 50V
C705	1-136-165-00	FILM	0.1uF 5% 50V	C749	1-162-284-31	CERAMIC	150PF 10% 50V
C706	1-124-907-11	ELECT	10uF 20% 50V	C750	1-162-294-31	CERAMIC	0.001uF 20% 50V
C707	1-131-375-00	TANTALUM	4.7uF 10% 10V	C751	1-162-294-31	CERAMIC	0.001uF 20% 50V
C708	1-130-489-00	MYLAR	0.033uF 5% 50V	C752	1-161-377-00	CERAMIC	0.0047uF 20% 16V
C709	1-123-382-00	ELECT	3.3uF 20% 100V	C753	1-162-294-31	CERAMIC	0.001uF 20% 50V
C710	1-162-294-31	CERAMIC	0.001uF 10% 50V	C754	1-162-851-11	CERAMIC	0.1uF 16V
C711	1-130-493-00	MYLAR	0.068uF 5% 50V	C755	1-162-290-31	CERAMIC	470PF 10% 50V
C712	1-124-477-11	ELECT	47uF 20% 25V	C756	1-162-294-31	CERAMIC	0.001uF 20% 50V
C713	1-162-851-11	CERAMIC	0.1uF 16V	C757	1-136-173-00	FILM	0.47uF 5% 50V
C714	1-162-215-31	CERAMIC	47PF 5% 50V	C758	1-162-851-11	CERAMIC	0.1uF 16V
C716	1-130-489-00	MYLAR	0.033uF 5% 50V	C759	1-162-294-31	CERAMIC	0.001uF 10% 50V
C717	1-124-477-11	ELECT	47uF 20% 25V	C760	1-162-851-11	CERAMIC	0.1uF 16V
C718	1-162-306-11	CERAMIC	0.01uF 20% 16V	C761	1-124-442-00	ELECT	330uF 20% 6.3V
C719	1-130-489-00	MYLAR	0.033uF 5% 50V	C762	1-124-473-11	ELECT	1000uF 20% 10V
C720	1-130-475-00	MYLAR	0.0022uF 5% 50V	C763	1-162-294-31	CERAMIC	0.001uF 10% 50V
C721	1-161-494-00	CERAMIC	0.022uF 25V	C770	1-124-477-11	ELECT	47uF 20% 25V
C722	1-162-306-11	CERAMIC	0.01uF 20% 16V	C771	1-162-294-31	CERAMIC	0.001uF 10% 50V
C723	1-162-306-11	CERAMIC	0.01uF 20% 16V	C772	1-130-484-00	MYLAR	0.012uF 5% 50V
C724	1-130-489-00	MYLAR	0.033uF 5% 50V	C773	1-161-329-00	CERAMIC	0.0068uF 20% 16V
C725	1-136-165-00	FILM	0.1uF 5% 50V	C774	1-130-491-00	MYLAR	0.047uF 5% 50V
C726	1-162-294-31	CERAMIC	0.001uF 10% 50V	C780	1-126-176-11	ELECT	220uF 20% 10V
C727	1-130-491-00	MYLAR	0.047uF 5% 50V	C781	1-124-126-00	ELECT	47uF 20% 10V
C728	1-161-374-11	CERAMIC	0.0015uF 20% 50V	C782	1-162-294-31	CERAMIC	0.001uF 20% 50V
C729	1-136-173-00	FILM	0.47uF 5% 50V	C783	1-124-443-00	ELECT	100uF 20% 10V
				C784	1-126-176-11	ELECT	220uF 20% 10V
				C801	1-124-034-51	ELECT	33uF 20% 16V
				C802	1-124-902-00	ELECT	0.47uF 20% 50V

CD MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C803	1-162-306-11	CERAMIC	0.01uF 20% 16V	R707	1-247-885-00	CARBON	180K 5% 1/4W
C804	1-136-169-00	FILM	0.22uF 5% 50V	R708	1-249-432-11	CARBON	18K 5% 1/4W
C806	1-162-306-11	CERAMIC	0.01uF 20% 16V	R709	1-249-437-11	CARBON	47K 5% 1/4W
< CONNECTOR >				R710	1-249-417-11	CARBON	1K 5% 1/4W
* CNP701	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P		R711	1-247-896-11	CARBON	510K 5% 1/4W
* CNP702	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P		R712	1-247-883-00	CARBON	150K 5% 1/4W
* CNJ709	1-569-919-11	SOCKET, CONNECTOR 27P		R713	1-249-429-11	CARBON	10K 5% 1/4W
< DIODE >				R714	1-249-417-11	CARBON	1K 5% 1/4W
D701	8-719-911-19	DIODE	1SS119	R715	1-247-887-00	CARBON	220K 5% 1/4W
D702	8-719-911-19	DIODE	1SS119	R716	1-249-429-11	CARBON	10K 5% 1/4W
D703	8-719-911-19	DIODE	1SS119	R717	1-249-423-11	CARBON	3.3K 5% 1/4W
D704	8-719-911-19	DIODE	1SS119	R718	1-247-881-00	CARBON	120K 5% 1/4W
D705	8-719-911-19	DIODE	1SS119	R719	1-249-423-11	CARBON	3.3K 5% 1/4W
< IC >				R720	1-247-856-00	CARBON	11K 5% 1/4W
IC701	8-752-039-03	IC	CXA1421M	R721	1-249-441-11	CARBON	100K 5% 1/4W
IC702	8-752-058-77	IC	CXA1372AQ	R722	1-249-441-11	CARBON	100K 5% 1/4W
IC703	8-752-352-93	IC	CXD2500BQ	R723	1-249-441-11	CARBON	100K 5% 1/4W
IC704	8-759-710-55	IC	NJM2100M	R724	1-249-417-11	CARBON	1K 5% 1/4W
IC705	8-759-093-98	IC	CXD8451M	R725	1-249-433-11	CARBON	22K 5% 1/4W
IC706	8-759-518-59	IC	BA6296FP	R726	1-249-417-11	CARBON	1K 5% 1/4W
IC801	8-752-830-87	IC	CXP5084H-636Q	R727	1-249-441-11	CARBON	100K 5% 1/4W
IC802	8-759-520-90	IC	PST572E	R728	1-249-437-11	CARBON	47K 5% 1/4W
< COIL >				R730	1-249-417-11	CARBON	1K 5% 1/4W
L701	1-410-397-11	FERRITE BEADS INDUCTOR	1.1uH	R731	1-249-429-11	CARBON	10K 5% 1/4W
L702	1-410-509-11	INDUCTOR	10uH	R732	1-249-434-11	CARBON	27K 5% 1/4W
L703	1-410-397-11	FERRITE BEADS INDUCTOR	1.1uH	R733	1-249-434-11	CARBON	27K 5% 1/4W
L704	1-410-397-11	FERRITE BEADS INDUCTOR	1.1uH	R734	1-249-437-11	CARBON	47K 5% 1/4W
L705	1-410-314-11	INDUCTOR	0.47uH	R735	1-249-437-11	CARBON	47K 5% 1/4W
L706	1-410-314-11	INDUCTOR	0.47uH	R736	1-249-429-11	CARBON	10K 5% 1/4W
L707	1-410-314-31	INDUCTOR	0.47uH	R737	1-247-883-00	CARBON	150K 5% 1/4W
L708	1-410-397-11	FERRITE BEADS INDUCTOR	1.1uH	R738	1-249-429-11	CARBON	10K 5% 1/4W
L709	1-410-397-11	FERRITE BEADS INDUCTOR	1.1uH	R739	1-249-441-11	CARBON	100K 5% 1/4W
< TRANSISTOR >				R741	1-249-429-11	CARBON	10K 5% 1/4W
Q701	8-729-801-84	TRANSISTOR	2SB1013-4	R742	1-249-434-11	CARBON	27K 5% 1/4W
Q702	8-729-900-36	TRANSISTOR	DTC124ES	R743	1-249-434-11	CARBON	27K 5% 1/4W
Q703	8-729-206-29	TRANSISTOR	RN1211	R744	1-249-437-11	CARBON	47K 5% 1/4W
Q704	8-729-206-36	TRANSISTOR	RN2207	R745	1-249-437-11	CARBON	47K 5% 1/4W
Q706	8-729-206-25	TRANSISTOR	RN1207	R746	1-249-429-11	CARBON	10K 5% 1/4W
Q731	8-729-206-28	TRANSISTOR	RN1210	R748	1-249-429-11	CARBON	10K 5% 1/4W
Q741	8-729-206-28	TRANSISTOR	RN1210	R749	1-249-441-11	CARBON	100K 5% 1/4W
Q802	8-729-900-89	TRANSISTOR	DTC144ES	R761	1-249-435-11	CARBON	33K 5% 1/4W
< RESISTOR >				R762	1-249-429-11	CARBON	10K 5% 1/4W
R700	1-247-806-11	CARBON	91 5% 1/4W	R763	1-249-429-11	CARBON	10K 5% 1/4W
R701	1-249-397-11	CARBON	22 5% 1/4W	R764	1-249-435-11	CARBON	33K 5% 1/4W
R702	1-249-433-11	CARBON	22K 5% 1/4W	R765	1-247-838-00	CARBON	2K 5% 1/4W
R705	1-249-441-11	CARBON	100K 5% 1/4W	R766	1-249-437-11	CARBON	47K 5% 1/4W
R706	1-249-438-11	CARBON	56K 5% 1/4W	R767	1-249-433-11	CARBON	22K 5% 1/4W
R769	1-247-690-11	CARBON	15 5% 1/4W	R781	1-249-405-11	CARBON	100 5% 1/4W
R781	1-249-405-11	CARBON	100 5% 1/4W	R782	1-249-431-11	CARBON	15K 5% 1/4W
R782	1-249-431-11	CARBON	15K 5% 1/4W	R783	1-249-431-11	CARBON	15K 5% 1/4W
R783	1-249-431-11	CARBON	15K 5% 1/4W	R802	1-249-405-11	CARBON	100 5% 1/4W
R802	1-249-405-11	CARBON	100 5% 1/4W	R803	1-249-437-11	CARBON	47K 5% 1/4W
R803	1-249-437-11	CARBON	47K 5% 1/4W	R804	1-249-435-11	CARBON	33K 5% 1/4W
R804	1-249-435-11	CARBON	33K 5% 1/4W	R805	1-249-435-11	CARBON	33K 5% 1/4W
R805	1-249-435-11	CARBON	33K 5% 1/4W	R806	1-249-435-11	CARBON	33K 5% 1/4W
R806	1-249-435-11	CARBON	33K 5% 1/4W	R807	1-249-441-11	CARBON	100K 5% 1/4W
R807	1-249-441-11	CARBON	100K 5% 1/4W				

CD MAIN

CD MOTOR

LCD

LEAF SWITCH

MAIN

Ref.No.	Part No.	Description	Remarks
R809	1-249-437-11	CARBON 47K 5% 1/4W	
R811	1-249-441-11	CARBON 100K 5% 1/4W	
< VARIABLE RESISTOR >			
RV701	1-230-497-11	RES, ADJ, CARBON 22K (E-F BALANCE)	
RV702	1-237-288-11	RES, ADJ, CARBON 47K (FOCUS BIAS)	
RV703	1-230-497-11	RES, ADJ, CARBON 22K (FOCUS GAIN)	
RV704	1-230-497-11	RES, ADJ, CARBON 22K (TRK GAIN)	
< VIBRATOR >			
X801	1-567-775-11	VIBRATOR, CERAMIC (4.19MHz)	
XF701	1-579-345-11	VIBRATOR, CERAMIC (16.9344MHz)	

*	1-647-846-11	CD MOTOR BOARD	

< CONNECTOR >			
CNP706	1-695-108-11	CONNECTOR 6P	
< SWITCH >			
S703	1-571-936-11	SWITCH, LEAF (LIMIT)	

*	1-647-853-11	LCD BOARD	

*	3-389-271-01	BRACKET, LCD	
< CONNECTOR >			
* CNJ803	1-569-919-11	SOCKET, CONNECTOR 27P	
< LIQUID CRYSTAL DISPLAY >			
LCD801	1-810-089-11	DISPLAY PANEL, LIQUID CRYSTAL	

*	1-647-854-11	LEAF SWITCH BOARD	

< CONNECTOR >			
* CNP708	1-691-573-11	PIN, CONNECTOR (PC BOARD) 2P	
< SWITCH >			
S704	1-570-013-11	SWITCH, LEAF (OPEN/CLOSE)	

*	A-3264-359-A	MAIN BOARD, COMPLETE (US, Canadian)	
*	A-3264-633-A	MAIN BOARD, COMPLETE (AEP, Italian)	

	3-386-946-01	BUTTON (DBB)	
	3-388-164-01	KNOB (FUNCTION)	
	7-682-547-04	SCREW +P 3X6	

Ref.No.	Part No.	Description	Remarks
< CAPACITOR >			
C120	1-161-020-11	CERAMIC 0.039uF 10% 16V	
C124	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C125	1-161-043-00	CERAMIC 0.0022uF 10% 50V	
C130	1-124-126-00	ELECT 47uF 20% 10V	
C131	1-124-443-00	ELECT 100uF 20% 10V	
C132	1-130-495-00	MYLAR 0.1uF 5% 50V	
C133	1-124-473-11	ELECT 1000uF 20% 10V	
C220	1-161-020-11	CERAMIC 0.039uF 10% 16V	
C224	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C225	1-161-043-00	CERAMIC 0.0022uF 10% 50V	
C230	1-124-126-00	ELECT 47uF 20% 10V	
C231	1-124-443-00	ELECT 100uF 20% 10V	
C232	1-130-495-00	MYLAR 0.1uF 5% 50V	
C233	1-124-473-11	ELECT 1000uF 20% 10V	
C313	1-124-916-11	ELECT 22uF 20% 63V	
C315	1-162-282-31	CERAMIC 100PF 10% 50V	
C316	1-162-282-31	CERAMIC 100PF 10% 50V	
C317	1-162-282-31	CERAMIC 100PF 10% 50V	
C318	1-162-282-31	CERAMIC 100pF 10% 50V	
C330	1-124-120-11	ELECT 220uF 20% 25V	
C332	1-126-017-11	ELECT 6800uF 20% 16V	
C350	1-124-927-11	ELECT 4.7uF 20% 100V	
C351	1-126-176-11	ELECT 220uF 20% 10V	
C352	1-126-176-11	ELECT 220uF 20% 10V	
C353	1-161-494-00	CERAMIC 0.022uF 25V	
C360	1-161-494-00	CERAMIC 0.022uF 25V	
C362	1-126-176-11	ELECT 220uF 20% 10V	
C363	1-161-494-00	CERAMIC 0.022uF 25V	
C365	1-161-494-00	CERAMIC 0.022uF 25V	
C366	1-126-176-11	ELECT 220uF 20% 10V	
C367	1-161-494-00	CERAMIC 0.022uF 25V	
C368	1-124-126-00	ELECT 47uF 20% 10V	
< JACK >			
CNJ305	1-580-848-11	SOCKET, CONNECTOR(PC BOARD) 20P	
< CONNECTOR >			
* CNP306	1-695-105-11	PIN, CONNECTOR (PC BOARD) 3P	
* CNP307	1-695-107-11	PIN, CONNECTOR (PC BOARD) 5P	
* CNP308	1-691-579-11	PIN, CONNECTOR (PC BOARD) 8P	
< DIODE >			
D301	8-719-109-97	DIODE RD6. 8ES-B2	
D303	8-719-903-39	LED SLP135B-55 (OPR/BATT)	
D304	8-719-109-97	DIODE RD6. 8ES-B2	
D305	8-719-109-89	DIODE RD5. 6ES-B2	
D309	8-719-911-19	DIODE 1SS119	
D313	8-719-911-19	DIODE 1SS119	
D315	8-719-911-19	DIODE 1SS119	

MAIN

MD

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D316	8-719-911-19	DIODE 1SS119		R364	1-249-433-11	CARBON 22K 5% 1/4W	
D317	8-719-911-19	DIODE 1SS119		△R365	1-219-149-11	FUSIBLE 1 5% 1/4W F	
D318	8-719-911-19	DIODE 1SS119		R366	1-249-411-11	CARBON 330 5% 1/4W	
< IC >				R367	1-249-405-11	CARBON 100 5% 1/4W	
IC303	8-759-060-21	IC LA4598		R368	1-247-887-00	CARBON 220K 5% 1/4W	
< JACK >				< VARIABLE RESISTOR >			
J301	1-563-330-11	JACK (MIX MIC)		RV301	1-241-745-11	RES. VAR. CARBON 20K/20K (TONE)	
< COIL >				RV302	1-223-403-11	RES. VAR. CARBON 20K/20K (VOLUME)	
L301	1-410-324-11	INDUCTOR 4.7uH		< SWITCH >			
L302	1-410-324-11	INDUCTOR 4.7uH		S302	1-571-345-11	SWITCH, LEVER SLIDE (FUNCTION)	
< TRANSISTOR >				S303	1-572-006-11	SWITCH, PUSH (1 KEY) (MEGA BASS)	
Q303	8-729-119-76	TRANSISTOR 2SA1175-HFE		S304	1-692-117-11	SWITCH, SLIDE (FM MODE) (AEP, Italian)	
Q304	8-729-206-20	TRANSISTOR RN1202		*****			
Q305	8-729-195-23	TRANSISTOR 2SA952-K2		*	A-3264-358-A	MD BOARD, COMPLETE (US, Canadian)	
Q313	8-729-194-57	TRANSISTOR 2SC945-P		*	A-3264-631-A	MD BOARD, COMPLETE (AEP, Italian)	
Q316	8-729-119-76	TRANSISTOR 2SA1175-HFE		*****			
< CAPACITOR >				C101	1-162-291-31	CERAMIC 560PF 10% 50V	
Q317	8-729-206-20	TRANSISTOR RN1202		C102	1-162-291-31	CERAMIC 560PF 10% 50V	
Q318	8-729-819-68	TRANSISTOR 2SD1666K-RS		C103	1-124-126-00	ELECT 47uF 20% 10V	
Q319	8-729-819-68	TRANSISTOR 2SD1666K-RS		C104	1-162-840-11	CERAMIC 0.012uF 10% 16V	
Q320	8-729-119-78	TRANSISTOR 2SC2785-HFE		C105	1-162-290-31	CERAMIC 470PF 10% 50V	
< RESISTOR >				C106	1-162-832-11	CERAMIC 0.0027uF 10% 16V	
R120	1-247-903-00	CARBON 1M 5% 1/4W		C107	1-124-927-11	ELECT 4.7uF 20% 100V	
R121	1-249-426-11	CARBON 5.6K 5% 1/4W		C108	1-162-291-31	CERAMIC 560PF 10% 50V	
R122	1-249-429-11	CARBON 10K 5% 1/4W		C109	1-124-927-11	ELECT 4.7uF 20% 100V	
R130	1-249-405-11	CARBON 100 5% 1/4W		C111	1-162-282-31	CERAMIC 100PF 10% 50V	
R220	1-247-903-00	CARBON 1M 5% 1/4W		C112	1-161-327-00	CERAMIC 0.0033uF 30% 50V	
R221	1-249-426-11	CARBON 5.6K 5% 1/4W		C113	1-124-903-11	ELECT 1uF 20% 50V	
R222	1-249-429-11	CARBON 10K 5% 1/4W		C114	1-124-902-00	ELECT 0.47uF 20% 50V	
R230	1-249-405-11	CARBON 100 5% 1/4W		C121	1-124-903-11	ELECT 1uF 20% 50V	
R307	1-249-417-11	CARBON 1K 5% 1/4W (AEP, Italian)		C122	1-161-375-00	CERAMIC 0.0022uF 20% 50V	
△R350	1-219-113-11	FUSIBLE 6.8 5% 1/4W F		C123	1-124-925-11	ELECT 2.2uF 20% 100V	
R351	1-249-416-11	CARBON 820 5% 1/4W		C126	1-162-282-31	CERAMIC 100pF 10% 50V	
R352	1-249-410-11	CARBON 270 5% 1/4W		C201	1-162-291-31	CERAMIC 560PF 10% 50V	
R353	1-249-408-11	CARBON 180 5% 1/4W		C202	1-162-291-31	CERAMIC 560PF 10% 50V	
R354	1-249-421-11	CARBON 2.2K 5% 1/4W		C203	1-124-126-00	ELECT 47uF 20% 10V	
R355	1-249-437-11	CARBON 47K 5% 1/4W		C204	1-162-840-11	CERAMIC 0.012uF 10% 16V	
R356	1-249-414-11	CARBON 560 5% 1/4W		C205	1-162-290-31	CERAMIC 470PF 10% 50V	
R357	1-247-804-11	CARBON 75 5% 1/4W		C206	1-162-832-11	CERAMIC 0.0027uF 10% 16V	
R358	1-247-887-00	CARBON 220K 5% 1/4W		C207	1-124-927-11	ELECT 4.7uF 20% 100V	
R359	1-249-421-11	CARBON 2.2K 5% 1/4W		C208	1-162-291-31	CERAMIC 560PF 10% 50V	
R360	1-249-421-11	CARBON 2.2K 5% 1/4W		C209	1-124-927-11	ELECT 4.7uF 20% 100V	
R361	1-249-411-11	CARBON 330 5% 1/4W		C211	1-162-282-31	CERAMIC 100PF 10% 50V	
R362	1-249-405-11	CARBON 100 5% 1/4W		C212	1-161-327-00	CERAMIC 0.0033uF 30% 50V	
R363	1-249-433-11	CARBON 22K 5% 1/4W					

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety.

Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
C213	1-124-903-11	ELECT 1uF	20% 50V
C214	1-124-902-00	ELECT 0.47uF	20% 50V
C221	1-124-903-11	ELECT 1uF	20% 50V
C222	1-161-375-00	CERAMIC 0.0022uF	20% 50V
C223	1-124-925-11	ELECT 2.2uF	20% 100V
C226	1-162-282-31	CERAMIC 100pF	10% 50V
C301	1-124-126-00	ELECT 47uF	20% 10V
C302	1-124-927-11	ELECT 4.7uF	20% 100V
C303	1-124-907-11	ELECT 10uF	20% 50V
C304	1-124-907-11	ELECT 10uF	20% 50V
C305	1-124-907-11	ELECT 10uF	20% 50V
C306	1-124-903-11	ELECT 1uF	20% 50V
C307	1-124-902-00	ELECT 0.47uF	20% 50V
C308	1-161-494-00	CERAMIC 0.022uF	25V
C309	1-124-443-00	ELECT 100uF	20% 10V
C310	1-161-494-00	CERAMIC 0.022uF	25V
C311	1-126-176-11	ELECT 220uF	20% 10V
C312	1-124-126-00	ELECT 47uF	20% 10V
C314	1-162-282-31	CERAMIC 100PF	10% 50V
C320	1-124-902-00	ELECT 0.47uF	20% 50V
C321	1-162-844-11	CERAMIC 0.027uF	10% 16V
C322	1-162-844-11	CERAMIC 0.027uF	10% 16V
C323	1-124-034-51	ELECT 33uF	20% 16V
C324	1-124-907-11	ELECT 10uF	20% 50V
C325	1-124-916-11	ELECT 22uF	20% 63V
C326	1-124-464-11	ELECT 0.22uF	20% 50V
C327	1-124-443-00	ELECT 100uF	20% 10V
C328	1-161-494-00	CERAMIC 0.022uF	25V
C340	1-161-379-00	CERAMIC 0.01uF	20% 25V
C341	1-161-327-00	CERAMIC 0.0033uF	30% 16V
C342	1-130-471-00	MYLAR 0.001uF	5% 50V
C343	1-162-284-31	CERAMIC 150PF 10% 50V(AEP, Italian)	
C344	1-124-126-00	ELECT 47uF	20% 10V
C345	1-161-494-00	CERAMIC 0.022uF	25V(AEP, Italian)
C370	1-161-494-00	CERAMIC 0.022uF	25V

< CONNECTOR >

CNP301	1-506-986-11	PIN, CONNECTOR (PC BOARD) 4P
CNP302	1-506-987-11	PIN, CONNECTOR (PC BOARD) 5P
* CNP303	1-695-106-11	PIN, CONNECTOR (PC BOARD) 4P(US, Canadian)
* CNP303	1-695-107-11	PIN, CONNECTOR (PC BOARD) 5P(AEP, Italian)
CNP304	1-506-986-11	PIN, CONNECTOR (PC BOARD) 4P
CNP305	1-580-849-11	PIN, CONNECTOR (PC BOARD) 20P

< DIODE >

D302	8-719-110-08	DIODE RD8. 2ES-B2
D306	8-719-911-19	DIODE 1SS119
D307	8-719-911-19	DIODE 1SS119
D310	8-719-911-19	DIODE 1SS119
D311	8-719-911-19	DIODE 1SS119
D312	8-719-911-19	DIODE 1SS119

Ref. No.	Part No.	Description	Remarks
		< IC >	
IC301	8-759-048-59	IC BA3423S	
IC302	8-759-048-60	IC BA3870	
IC304	8-759-932-33	IC BU4066B	
		< TRANSISTOR >	
Q301	8-729-900-36	TRANSISTOR DTC124ES	
Q302	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q306	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q307	8-729-819-68	TRANSISTOR 2SD1666K-RS	
Q308	8-729-115-30	TRANSISTOR 2SK105A-30	
Q309	8-729-206-20	TRANSISTOR RN1202	
Q310	8-729-195-23	TRANSISTOR 2SA952-K2	
Q311	8-729-206-20	TRANSISTOR RN1202	
Q312	8-729-206-20	TRANSISTOR RN1202	
Q314	8-729-206-20	TRANSISTOR RN1202	
Q315	8-729-206-20	TRANSISTOR RN1202 (AEP, Italian)	
Q321	8-729-206-20	TRANSISTOR RN1202	
		< RESISTOR >	
R101	1-249-409-11	CARBON 220 5% 1/4W	
R102	1-249-409-11	CARBON 220 5% 1/4W	
R103	1-249-405-11	CARBON 100 5% 1/4W	
R104	1-247-889-00	CARBON 270K 5% 1/4W	
R105	1-249-425-11	CARBON 4.7K 5% 1/4W	
R106	1-249-429-11	CARBON 10K 5% 1/4W	
R107	1-249-425-11	CARBON 4.7K 5% 1/4W	
R109	1-249-417-11	CARBON 1K 5% 1/4W	
R111	1-249-425-11	CARBON 4.7K 5% 1/4W	
R112	1-249-426-11	CARBON 5.6K 5% 1/4W	
R113	1-249-429-11	CARBON 10K 5% 1/4W	
R114	1-249-429-11	CARBON 10K 5% 1/4W	
R201	1-249-409-11	CARBON 220 5% 1/4W	
R202	1-249-409-11	CARBON 220 5% 1/4W	
R203	1-249-405-11	CARBON 100 5% 1/4W	
R204	1-247-889-00	CARBON 270K 5% 1/4W	
R205	1-249-425-11	CARBON 4.7K 5% 1/4W	
R206	1-249-429-11	CARBON 10K 5% 1/4W	
R207	1-249-425-11	CARBON 4.7K 5% 1/4W	
R209	1-249-417-11	CARBON 1K 5% 1/4W	
R211	1-249-425-11	CARBON 4.7K 5% 1/4W	
R212	1-249-426-11	CARBON 5.6K 5% 1/4W	
R213	1-249-429-11	CARBON 10K 5% 1/4W	
R214	1-249-429-11	CARBON 10K 5% 1/4W	
R301	1-247-903-00	CARBON 1M 5% 1/4W	
R302	1-249-435-11	CARBON 33K 5% 1/4W	
R303	1-249-435-11	CARBON 33K 5% 1/4W	
R304	1-249-435-11	CARBON 33K 5% 1/4W	

MD	POWER	SWITCH
-----------	--------------	---------------

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R305	1-249-435-11	CARBON	33K 5% 1/4W	< CONNECTOR >			
R306	1-247-712-11	CARBON	820 5% 1/4W	* CNP309	1-695-106-11	PIN, CONNECTOR (PC BOARD) 4P	
R308	1-249-405-11	CARBON	100 5% 1/4W	* CNP901	1-691-573-11	PIN, CONNECTOR (PC BOARD) 2P	
R309	1-249-429-11	CARBON	10K 5% 1/4W	< DIODE >			
R310	1-249-429-11	CARBON	10K 5% 1/4W	D901	8-719-911-55	DIODE U05G	
R311	1-249-429-11	CARBON	10K 5% 1/4W	D902	8-719-911-55	DIODE U05G	
R320	1-249-425-11	CARBON	4.7K 5% 1/4W	D903	8-719-911-55	DIODE U05G	
R321	1-249-424-11	CARBON	3.9K 5% 1/4W	D904	8-719-911-55	DIODE U05G	
R322	1-247-903-00	CARBON	1M 5% 1/4W	< FUSE >			
R324	1-249-402-11	CARBON	56 5% 1/4W	△F901	1-576-107-11	FUSE (3.15A) (US, Canadian)	
R325	1-249-441-11	CARBON	100K 5% 1/4W	△F901	1-532-464-51	FUSE (T2.5A) (AEP, Italian)	
R326	1-249-418-11	CARBON	1.2K 5% 1/4W	△F902	1-576-695-21	FUSE (315mA) (US, Canadian)	
R340	1-249-411-11	CARBON	330 5% 1/4W	< FUSE HOLDER >			
R341	1-249-393-11	CARBON	10 5% 1/4W	FH901	1-533-217-31	HOLDER, FUSE	
R342	1-249-435-11	CARBON	33K 5% 1/4W	FH902	1-533-217-31	HOLDER, FUSE	
R371	1-249-421-11	CARBON	2.2K 5% 1/4W	FH903	1-533-217-31	HOLDER, FUSE (US, Canadian)	
R372	1-247-887-00	CARBON	220K 5% 1/4W	FH904	1-533-217-31	HOLDER, FUSE (US, Canadian)	
R373	1-249-407-11	CARBON	150 5% 1/4W	< JACK >			
R374	1-247-804-11	CARBON	75 5% 1/4W	J302	1-566-891-11	JACK (PHONES)	
R375	1-249-441-11	CARBON	100K 5% 1/4W	△J901	1-540-009-11	INLET, AC (US, Canadian)	
R376	1-249-429-11	CARBON	10K 5% 1/4W	△J901	1-526-838-11	INLET, AC 2P (AEP, Italian)	
R377	1-249-421-11	CARBON	2.2K 5% 1/4W	< COIL >			
R378	1-249-429-11	CARBON	10K 5% 1/4W	L151	1-410-324-11	INDUCTOR 4.7uH	
R379	1-249-418-11	CARBON	1.2K 5% 1/4W	L251	1-410-324-11	INDUCTOR 4.7uH	
R380	1-249-422-11	CARBON	2.7K 5% 1/4W	L351	1-410-324-11	INDUCTOR 4.7uH	
△R381	1-219-162-11	FUSIBLE	3.3 5% 1/4W F	< LINE FILTER >			
< VARIABLE RESISTOR >				△LF901	1-424-150-21	TRANSFORMER, LINE FILTER	
RV303	1-230-494-11	RES, ADJ, CARBON 1K		< RESISTOR >			
< SWITCH >				R151	1-249-405-11	CARBON 100 5% 1/4W	
S301	1-572-325-11	SWITCH, SLIDE (REC/PB)		R251	1-249-405-11	CARBON 100 5% 1/4W	
S305	1-692-080-11	SWITCH, PUSH (1 KEY) (A-POWER)		< TRANSFORMER >			
S306	1-692-080-11	SWITCH, PUSH (1 KEY) (HI SPEED)		△T901	1-450-515-11	TRANSFORMER, POWER (US, Canadian)	
S307	1-692-080-11	SWITCH, PUSH (1 KEY) (B-POWER)		△T901	1-450-517-11	TRANSFORMER, POWER (AEP, Italian)	
S308	1-692-080-11	SWITCH, PUSH (1 KEY) (A/B)		*****			
< TRANSFORMER >				* 1-647-848-11	POWER BOARD		
T301	1-433-346-11	TRANSFORMER, BIAS OSCILLATOR		*****			
*****				< CAPACITOR >			
C901	1-101-005-00	CERAMIC	22000PF 50V	C901	1-101-005-00	CERAMIC	22000PF 50V
C902	1-101-005-00	CERAMIC	22000PF 50V	C902	1-101-005-00	CERAMIC	22000PF 50V
C903	1-101-005-00	CERAMIC	22000PF 50V	C903	1-101-005-00	CERAMIC	22000PF 50V
C904	1-101-005-00	CERAMIC	22000PF 50V	C904	1-101-005-00	CERAMIC	22000PF 50V
C905	1-101-005-00	CERAMIC	22000PF 50V (AEP, Italian)	C905	1-101-005-00	CERAMIC	22000PF 50V (AEP, Italian)
C127	1-162-282-31	CERAMIC	100pF 10% 50V	C127	1-162-282-31	CERAMIC	100pF 10% 50V
C227	1-162-282-31	CERAMIC	100pF 10% 50V	C227	1-162-282-31	CERAMIC	100pF 10% 50V
*****				< SWITCH >			
*****				S801	1-572-198-11	SWITCH, KEY BOARD (▷ PLAY)	
*****				S802	1-572-198-11	SWITCH, KEY BOARD (□ STOP)	

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety.

Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifié.

SWITCH

TUNER

Ref. No.	Part No.	Description	Remarks
S803	1-572-198-11	SWITCH, KEY BOARD (◀▶ AMS/SEARCH)	
S804	1-572-198-11	SWITCH, KEY BOARD (▶▶ AMS/SEARCH)	
S805	1-572-198-11	SWITCH, KEY BOARD (□□ PAUSE)	
S806	1-572-198-11	SWITCH, KEY BOARD (PLAY/MODE)	
S807	1-572-198-11	SWITCH, KEY BOARD (DISPLAY/ENTER)	

*	A-3264-641-A	TUNER BOARD, COMPLETE (US, Canadian)	
*	A-3264-715-A	TUNER BOARD, COMPLETE (AEP)	
*	A-3264-815-A	TUNER BOARD, COMPLETE (Italian)	

*	3-378-438-01	CUSHION, SARANET	
	3-388-189-01	GEAR, TUNING CAPACITOR	
	7-621-770-87	SCREW +P 2.6X5	

< CAPACITOR >

C1	1-163-189-00	CERAMIC MELF	220PF	10%	50V
C3	1-163-059-00	CERAMIC CHIP	0.01uF	10%	50V
				(US, Canadian)	
C4	1-124-907-11	ELECT	10uF	20%	50V
C5	1-163-059-00	CERAMIC CHIP	0.01uF	10%	50V
C6	1-163-149-00	CERAMIC MELF	1.8PF	20%	50V
C6	1-163-159-00	CERAMIC MELF	2.2PF	10%	50V (AEP)
C6	1-163-150-00	CERAMIC MELF	3.3PF	10%	50V (Italian)
C7	1-163-166-00	CERAMIC MELF	24PF	5%	50V
				(US, Canadian)	
C7	1-163-168-00	CERAMIC MELF	30PF	5%	50V (AEP, Italian)
C8	1-102-953-00	CERAMIC	18PF	5%	50V
				(US, Canadian)	
C8	1-102-961-00	CERAMIC	27PF	5%	50V (AEP, Italian)
C9	1-163-154-00	CERAMIC MELF	6.8PF	10%	50V
				(US, Canadian)	
C9	1-163-155-00	CERAMIC MELF	8.2PF	10%	50V (AEP)
C9	1-163-158-00	CERAMIC MELF	11PF	5%	50V (Italian)
C10	1-163-150-00	CERAMIC MELF	3.3PF	10%	50V
C11	1-163-059-00	CERAMIC CHIP	0.01uF	10%	50V
C12	1-163-181-00	CERAMIC MELF	100PF	10%	50V
C15	1-124-927-11	ELECT	4.7uF	20%	100V
C16	1-124-903-11	ELECT	1uF	20%	50V
C17	1-124-126-00	ELECT	47uF	20%	10V
C18	1-124-126-00	ELECT	47uF	20%	10V
C19	1-163-059-00	CERAMIC CHIP	0.01uF	10%	50V
C20	1-124-903-11	ELECT	1uF	20%	50V
C21	1-124-925-11	ELECT	2.2uF	20%	100V
C22	1-124-443-00	ELECT	100uF	20%	10V
C23	1-124-902-00	ELECT	0.47uF	20%	50V
C24	1-124-927-11	ELECT	4.7uF	20%	100V
C25	1-124-463-00	ELECT	0.1uF	20%	50V
C27	1-161-053-00	CERAMIC	0.015uF	10%	50V
				(US, Canadian)	
C27	1-162-840-11	CERAMIC	0.012uF	10%	50C (AEP, Italian)
C28	1-161-053-00	CERAMIC	0.015uF	10%	50V
				(US, Canadian)	

Ref. No.	Part No.	Description	Remarks
C28	1-162-840-00	CERAMIC	0.012uF 10% 50V (AEP, Italian)
C33	1-163-154-00	CERAMIC MELF	6.8PF 10% 50V
			(US, Canadian)
C34	1-163-181-00	CERAMIC MELF	100PF 10% 50V
C35	1-163-181-00	CERAMIC MELF	100PF 10% 50V
C38	1-162-397-11	CERAMIC MELF	0.001uF 10% 50V

C40	1-163-159-00	CERAMIC MELF	2.2PF 10% 50V (AEP)
C40	1-162-347-11	CERAMIC MELF	1.8PF 20% 50V (Italian)

< FILTER >

CF1	1-577-599-81	FILTER, CERAMIC	
CF2	1-239-249-11	ENCAPSULATED COMPONENT	
CF3	1-577-599-81	FILTER, CERAMIC	
CF4	1-577-599-81	FILTER, CERAMIC	

< CONNECTOR >

* CNP22	1-691-573-11	PIN, CONNECTOR (PC BOARD) 2P	
---------	--------------	------------------------------	--

< TRIMMER >

CT1-4	}	1-151-696-11	CAP, VAR (US, Canadian)
CV1-4			
CT1-4	}	1-151-695-11	CAP, VAR (AEP, Italian)
CV1-4			

< FILTER >

FL1	1-236-022-11	FILTER, BAND PASS	
FL1	1-236-711-21	FILTER, BAND PASS	

< IC >

IC1	8-752-050-20	IC	CXA1238S
-----	--------------	----	----------

< JUMPER RESISTOR >

JR1	1-216-296-00	METAL CHIP	0	5%	1/8W
JR2	1-216-296-00	METAL CHIP	0	5%	1/8W
JR3	1-216-296-00	METAL CHIP	0	5%	1/8W
JR8	1-216-296-00	METAL CHIP	0	5%	1/8W
JR12	1-216-296-00	METAL CHIP	0	5%	1/8W
JR14	1-216-296-00	METAL CHIP	0	5%	1/8W
JR15	1-216-296-00	METAL CHIP	0	5%	1/8W
JR17	1-216-296-00	METAL CHIP	0	5%	1/8W
JR18	1-216-296-00	METAL CHIP	0	5%	1/8W
JR19	1-216-296-00	METAL CHIP	0	5%	1/8W

< COIL >

L1	1-428-777-11	COIL, AIR-CORE (US, Canadian)	
L1	1-428-776-11	COIL, AIR-CORE (AEP, Italian)	
L2	1-460-336-11	COIL (WITH CORE) (US, Canadian)	
L2	1-460-205-11	COIL (WITH CORE) (AEP, Italian)	
L3	1-402-416-11	ANTENNA, FERRITE-ROD (MW) (US, Canadian)	
L3	1-402-158-11	ANTENNA, FERRITE-ROD (MW) (AEP, Italian)	

TUNER

Ref.No.	Part No.	Description	Remarks	Ref.No.	Part No.	Description	Remarks
L4	1-406-474-11	COIL (OSC) (US, Canadian)		ANT1	1-501-515-11	ANTENNA, TELESCOPIC (FM)	
L4	1-406-475-11	COIL (OSC) (AEP, Italian)		* CNJ301	1-691-561-11	HOUSING, CONNECTOR 4P (DECK-A)	
< TRANSISTOR >				* CNJ302	1-691-562-11	HOUSING, CONNECTOR 5P (DECK-B)	
Q2	8-729-900-80	TRANSISTOR DTC114ES (AEP, Italian)		HRP601	1-543-628-11	HEAD, MAGNETIC (REC/PB) (DECK-A)	
< RESISTOR >				HRP602	1-543-714-11	HEAD, MAGNETIC (REC/PB) (DECK-B)	
R1	1-249-413-11	CARBON 470 5% 1/4W		M401	X-4920-924-1	MOTOR ASSY (REEL/CAPSTAN)	
R3	1-249-421-11	CARBON 2.2K 5% 1/4W		M701	X-2625-132-1	GEAR ASSY, MOTOR (SLED)	
R5	1-249-425-11	CARBON 4.7K 5% 1/4W (US, Canadian)		S703	1-571-936-11	SWITCH, LEAF (LIMIT)	
R6	1-249-441-11	CARBON 100K 5% 1/4W		S704	1-570-013-11	SWITCH, LEAF (OPEN/CLOSE)	
R7	1-249-417-11	CARBON 1K 5% 1/4W		SP901	1-504-269-21	SPEAKER (10CM)	
R9	1-249-441-11	CARBON 100K 5% 1/4W		SP902	1-504-269-21	SPEAKER (10CM)	
R10	1-249-404-00	CARBON 82 5% 1/4W		*****			
R11	1-249-427-11	CARBON 6.8K 5% 1/4W		ACCESSORIES & PACKING MATERIALS			
R12	1-249-427-11	CARBON 6.8K 5% 1/4W		*****			
R13	1-249-405-11	CARBON 100 5% 1/4W		△	1-690-952-21	CORD, POWER (US)	
R14	1-249-429-11	CARBON 10K 5% 1/4W		△	1-590-147-11	CORD, POWER (Canadian)	
R15	1-215-477-00	METAL 220K 1% 1/6W		△	1-590-253-11	CORD, POWER SUPPLY (AEP, Italian)	
R16	1-215-477-00	METAL 220K 1% 1/6W			3-756-864-21	MANUAL, INSTRUCTION (ENGLISH) (US, Canadian)	
R17	1-249-421-11	CARBON 2.2K 5% 1/4W			3-756-864-31	MANUAL, INSTRUCTION (FRENCH) (Canadian)	
R21	1-249-411-11	CARBON 330 5% 1/4W			3-756-864-51	MANUAL, INSTRUCTION (ENGLISH, SPANISH, ITALIAN, DUTCH) (AEP, Italian)	
R29	1-249-429-11	CARBON 10K 5% 1/4W (AEP, Italian)			3-906-186-01	INDIVIDUAL CARTON (US, Canadian)	
< VARIABLE RESISTOR >					3-906-189-01	INDIVIDUAL CARTON (AEP, Italian)	
RV1	1-238-601-11	RES, ADJ, CARBON 22K (VCO)			3-906-187-01	CUSHION (L)	
< SWITCH >					3-906-188-01	CUSHION (R)	
S1	1-571-547-11	SWITCH, SLIDE (BAND)		*****			
< TRANSFORMER >				HARDWARE LIST			
T1	1-239-249-11	ENCAPSULATED COMPONENT		*****			
*****				#1	7-685-647-79	SCREW, TAPPING +BV 3X10	
MISCELLANEOUS				#2	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT	
*****				#3	7-682-548-04	SCREW +BVTT 3X8 (S)	
120	1-452-531-11	MAGNET		#4	7-685-870-01	SCREW +BVTT 3X5 (S)	
124	1-751-445-11	WIRE, PARALLEL (FFC) (27 CORE)		#5	7-621-770-87	SCREW +P 2.6X5	
324	1-543-876-13	HEAD (ERASE)		#6	7-685-648-79	SCREW, TOTSU PTPWH 3X12, TYPE2	
△405	8-848-137-11	PICK-UP, OPTICAL KSS-210B		#7	7-682-148-15	SCREW +P 3X8	
				#8	7-685-547-19	SCREW +BTP 3X10 TYPE2 N-S	
				#9	7-621-772-00	SCREW +B 2X3	
				#10	7-685-133-19	SCREW +P 2.6X6 TYPE2	
				#11	7-685-132-19	SCREW +P 2.6X5 TYPE2 NON-SLIT	
				#12	7-685-144-11	SCREW +P 3X5 TYPE2 NON-SLIT	
				#13	7-621-255-15	SCREW +P 2X3	
				#14	7-682-547-04	SCREW +P 3X6	

Note:

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Note:

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

CFD-110



SONY SERVICE MANUAL

US Model
Canadian Model
AEP Model
Australian Model
Taiwan Model

SUPPLEMENT-2

Revise your service manual as shown below due to parts supply classification has been changed.

 : Indicates revised portion.

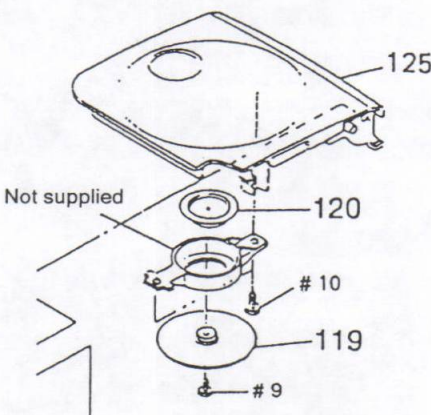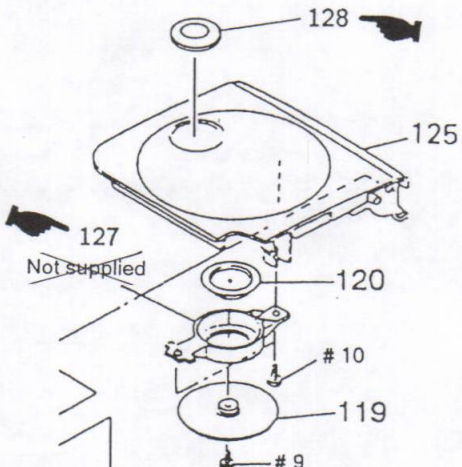Page	Ref. No.	CURRENT	REVISED
		<u>Part No.</u> <u>Description</u> 125 A-3300-118-A HOLDER SUB ASSY (CD) 127 Not supplied 128 _____	<u>Part No.</u> <u>Description</u> 3-388-212-01 LID, CD  3-388-214-01 HOLDER, CHUCKING  3-386-985-01 PLATE (CD), TRANSPARENT 
41		(3) CD ASSEMBLY SECTION 	(3) CD ASSEMBLY SECTION 



SONY**Service Bulletin**

Date 17.08.95	Ref. No. GA01595R	Model CFD-110, CFD-110L, CFD-112, CFD-112L, CFD-550, CFD-550L, CFS-DW34, CFS-DW34L, CFS-DW34S, CFS-W304, CFS-W304L, CFS-W304LII, CFS-W304S, CFS-W308, CFS-W308L, CFS-W308S, CFS-W310L, CFS-W310S, CFS-W318, CFS-W318L, CFS-W318S, CFS-W328, CFS-W328L, CFS-W328S, CFS-W504, CFS-W504L, CFS-W504LII, CFS-W504S	GA
Subject Changes in Tape Transport Mechanism [REVISION]			IRIS .185

The Tape Transport Mechanism has been changed during production from a so-called "idler" type mechanism to a "gear" type mechanism.

The table below shows the parts that have changed.

<i>Former (Idler type)</i>		<i>New (Gear type)</i>	
FR Pulley Assy (single mechanism) X-4918-580-1 FR Pulley Assy (double mechanism) X-4920-922-1			Gear Pulley Assy X-3366-943-1
T Reel Plate Assy X-4918-582-1			(FWD) Limit Assy X-3366-942-1
Idler Lever (S) Assy X-4920-346-1			Gear (FWD) 3-904-615-21 Lever (FWD) 3-904-619-21
Wheel (S) Assy Capstan X-4920-349-1			Wheel (W) Assy Capstan X-4920-923-1
Shut-off Lever (S) 4-928-986-01			Lever (Shut-off) (S) 3-904-621-21 Coil Spring (Compression) 3-904-617-01
Shut-off Lever (T) 4-928-987-01			Lever (Shut-off) (T) 3-904-620-21

APPLICABLE MODELS

All the models using a tape drive mechanism ending in -64.

SONY**Service Bulletin**

Date 31.03.95	Ref. No. GA01595	Model CFD-110, CFD-110L, CFD-112, CFD-112L	GA
Subject Changes in Tape Transport Mechanism			IRIS .185

The Tape Transport Mechanism has been changed during production from a so-called "idler" type mechanism to a "gear" type mechanism.

The table below shows the parts that have changed. Other parts remain compatible between the two types of mechanism.

<i>Ref.</i>	<i>Former</i>		<i>New</i>	
263	FWD Idler Assy	X-4920-346-1	FWD Gear	3-904-615-21
			FWD Lever	3-904-619-21
266	FWD Limiter Assy	X-4918-582-1	FWD Limiter Assy	X-3366-942-1
273	Pulley Assy	X-4920-922-1	Gear Pulley Assy	X-3366-943-1