

STR-D715/D915

SERVICE MANUAL

US Model
Canadian Model
STR-D715/D915
Australian Model
STR-D915

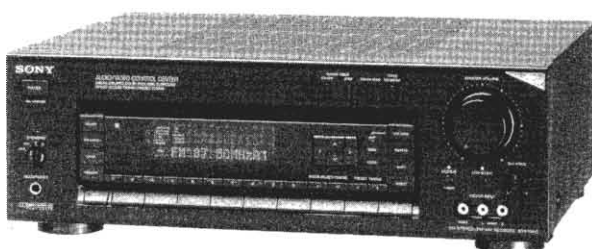


Photo : STR-D915

SPECIFICATIONS

Audio Power Specifications

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 8-ohm load, both channels driven, from 20 - 20,000 Hz, rated 110 watts (STR-D915) or 100 watts (STR-D715) per channel minimum RMS power, with no more than 0.3 % total harmonic distortion from 250 milliwatts to rated output. (U.S. A. model only)

Other Specifications

Amplifier section

Continuous RMS power output (8 ohms, at 20 Hz - 20 kHz less than 0.3% (US, Canadian model), 0.7% (Australian model)

STR-D915: 118 W + 118 W

(U.S., Canadian model)

STR-D915: 110W + 110W (Australian model)

STR-D715: 110 W + 110 W

Surround mode

	Surround mode (8ohms at 1 kHz, THD 0.8 %)	
	STR-D915	STR-D715
FRONT	100 W/ch	80 W/ch
CENTER*	100 W	80 W
REAR	25 W	25 W

* (only in the DOLBY SUR and THEATER modes)

Dynamic power output (U.S., Canadian model)

STR-D915: 160 W + 160 W (8 ohms)

225 W + 225 W (4 ohms)

STR-D715: 155 W + 155 W (8 ohms)

220 W + 220 W (4 ohms)

Harmonic distortion at rated output (U.S., Canadian model)

Less than 0.3 %

Frequency response

PHONO: RIAA equalization curve

±0.5 dB

CD, DAT/MD, TAPE MONITOR, VIDEO 1, 2, 3*: 10 Hz - 50 kHz, ±1 dB

* STR-D915 only

FM tuner section

Tuning range 87.5 - 108.0 MHz
Antenna terminals 75 ohms, unbalanced
Sensitivity (at 50 dB): 18.3 dBf, 4.5 µV (mono)
38.3 dBf, 45 µV (stereo)

Usable sensitivity 11.2 dBf, 2 µV (IHF)
S/N Mono: 76 dB
Stereo: 70 dB

Harmonic distortion at 1 kHz

Mono: 0.3 %
Stereo: 0.5 %
45 dB at 1 kHz
Frequency response 30 Hz - 15 kHz, ±0.5 dB
Selectivity 60 dB at 400 kHz

AM tuner section

Tuning range 530 - 1710 kHz (with 10 kHz interval*)
(U.S., Canadian model) 531 - 1710 kHz (with 9 kHz interval)
Tuning range 531-1602kHz
(Australian model)

Antenna Loop antenna
Usable sensitivity 50 dB/m (at 1,000 kHz or 999 kHz)
S/N 54 dB (at 50 mV/m)
Harmonic distortion 0.5% (50 mV/m, 400 Hz)
Selectivity 35 dB (9 kHz), 40 dB (10 kHz)

Inputs

	Sensitivity	Impedance	S/N Short A Net/78 IHF A Net
PHONO (MM)	2.5 mV	50 kilohms	75 dB/75 dB
CD	300 mV	50 kilohms	82 dB/82 dB
DAT/MD, TV, LD, VIDEO 1, 2, 3*, TAPE MONITOR	250 mV	50 kilohms	82 dB/82 dB

* STR-D915 only

Outputs

REC OUT VIDEO 1, 2 (AUDIO) OUT	Voltage 250 mV Impedance 10 kilohms
HEADPHONES	Accepts low and high impedance headphones

MUTING -20 dB
LOW BOOST +10 dB at 70 Hz
TONE ±8 dB at 100 Hz and 10 kHz

* You can change the AM tuning interval to 9 kHz. After tuning in any AM tuning in any AM station, turn off the power of receiver once. While holding down the TUNING + button, press the POWER switch. When you change the interval, all the preset stations will be erased. To reset the interval, repeat the same procedure. (U.S., Canadian model)

Video section

Inputs STR-D915: VIDEO 1,2,3:
1 Vp-p 75 ohms
STR-D715: VIDEO 1,2:
1 Vp-p 75 ohms
Outputs VIDEO 1, 2, MONITOR:
1 Vp-p 75 ohms

General

System Tuner section: PLL quartz-locked digital synthesizer system
Low-noise NF type equalizer
Preamplifier section: Power amplifier section: Pure-complementary SEPP
Power requirements 120 V AC, 60 Hz (U.S., Canadian model)
240V AC, 50Hz (Australian model)
Power consumption (in standby condition: 5W)

STR-D915: USA model: 210 W
Canada model: 305 VA
Australian model: 220W
STR-D715: USA model: 195 W
Canada model: 280 VA

AC outlets

Two switched, total 120 W (U.S., Canadian model)
One switched, 100W (Australian model)

Dimensions

430 x 148 x 355 mm

(17 x 5 7/8 x 14 inches)

Mass STR-D915: 10.0 kg (22 lb 1 oz)

STR-D715: 9.7 kg (22 lb 7 oz)

Supplied accessories

FM wire antenna (1)

AM loop antenna (1)

Remote commander (1)

Sony Batteries SUM-3(NS) (2)

Design and specifications are subject to change without notice.

FM STEREO FM-AM RECEIVER
SONY®




使用時は添付資料も参照のこと
Refer to the additional documents

TABLE OF CONTENTS

Section	Title	Page
1.	SERVICING NOTE.....	3
2.	GENERAL.....	4
3.	DIAGRAMS	
3-1.	Circuit Boards Location	7
3-2.	Semiconductor Lead Layouts	8
3-3.	Printed Wiring Boards — SURROUND Section —	10
3-4.	Schematic Diagram — SURROUND Section —	13
3-5.	Schematic Diagram — MAIN Section —	17
3-6.	Printed Wiring Boards — MAIN Section —	21
3-7.	Printed Wiring Boards — DISPLAY Section —	26
3-8.	Schematic Diagram — DISPLAY Section —	31
3-9.	IC Pin Functions	
	• IC106 (TC9174P) LED Driver	34
	• IC202 (μ PD75518GF-195-3B9) Main Controller.....	35
4.	EXPLODED VIEWS	
4-1.	Cabinet Section	37
4-2.	Chassis Section	38
5.	ELECTRICAL PARTS LIST	39

MODEL IDENTIFICATION

— Specification Label —

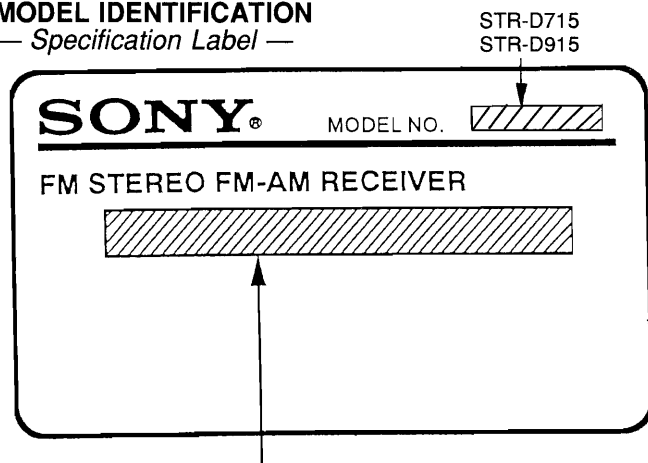

US model : 120V AC, 60Hz 195W (D715)

120V AC, 60Hz 210W (D915)

Canadian model : 120V AC, 60Hz 280VA (D715)

120V AC, 60Hz 305VA (D915)

Australian model : 240V AC, 50Hz 220W

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

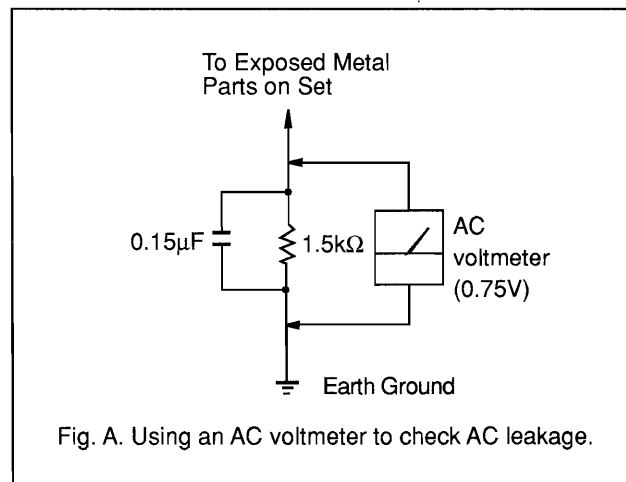


Fig. A. Using an AC voltmeter to check AC leakage.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1

SERVICING NOTE

CHECK MODE The movement check of the set as follows :

	SUBJECT	WITH WHAT HELD DOWN	WHAT IS OPERATED	WHAT FUNCTION IS PERFORMED	SUPPLEMENT
1	FACTORY SET	10 KEY [1], [2], [3]	POWER ON	Initialize for Electrical Adjustment	Set to AM.
2	ALL CLEAR	10 KEY [4], [5], [6]	POWER ON	Initialize	
3	AM 9kHz STEP	[INDEX SELECT/ TUNING +]	POWER ON	AM 9k/10k select	
4	SURROUND CLEAR	[TONE ON/DEFEAT]	POWER ON	SOUND FIELD Initialize	
5	FL KEY CHECK	10 KEY [7], [8], [9]	POWER ON	FL Tube Check and KEY Check	Set to S.F.OFF.
6	DEMO	[DISPLAY]	Continue to hold down.	Demonstration	

1. FACTORY SET

When ten-keys [1], [2] and [3] key are pressed simultaneously and the power is turned on, the following data are stored in the respective RAMs

TUNER PRESET		
CH	FM W/AM 9k	FM W/AM 10k
A1	FM 87.50MHz	FM 87.50MHz
A2	FM 88.00MHz	FM 88.00MHz
A3	FM 98.00MHz	FM 98.00MHz
A4	FM 100.00MHz	FM 100.00MHz
A5	FM 108.00MHz	FM 108.00MHz
A6	AM 531kHz	AM 530kHz
A7	AM 621kHz	AM 620kHz
A8	AM 1053kHz	AM 1050kHz
A9	AM 1485kHz	AM 1490kHz
A0	AM 1710kHz	AM 1710kHz

FUNCTION	LD
PHONO	HALL
CD	HALL
TUNER	OFF
VIDEO 1	DOLBY SUR.
VIDEO 2	DOLBY SUR.
VIDEO 3(D915)	DOLBY SUR.
DAT/MD	HALL
LD	DOLBY SUR.
TV	THEATER

2. ALL CLEAR

When ten-keys [4], [5] and [6] key are pressed simultaneously and the power is turned on, all the RAMs are cleared and initialized.

◎Initial Operation Set State(1)

FUNCTION	TUNER	FM 87.50MHz(AM 530kHz)
		FM MODE AUTO
		TUNING LEVEL LOW
		INDEX NO INDEX (.....)
		PRESET NO. None(A_)
MONITOR	VIDEO 1	
TAPE MONITOR	OFF	
LOW BOOST	OFF	
MUTING (-20dB)	OFF	
CURSOR MODE	SUR	
SOUND FIELD	OFF	
TONE	DEFEAT	
FUNC. INDEX NAME	SAME FUNC. NAME	
TEST TONE	OFF	
DISPLAY MODE	NORMAL	
LAST S.F.MODE	ACOUSTIC	

◎Initial Operation Set State (2 : Sound Field)

HALL	BASS(dB)	+2
	TREBLE(dB)	0
	DELAY TIME(ms)	30
	REAR LEVEL(dB)	0
DANCE	BASS(dB)	+8
	TREBLE(dB)	+6
	DELAY TIME(ms)	20
	REAR LEVEL(dB)	0
LIVE	BASS(dB)	+2
	TREBLE(dB)	+4
	DELAY TIME(ms)	30
	REAR LEVEL(dB)	0
DOLBY SURROUND	BASS(dB)	0
	TREBLE(dB)	0
	DELAY TIME(ms)	15
	REAR LEVEL(dB)	0
	CENTER LEVEL(dB)	0
THEATER	CENTER MODE	PHANTOM
	BASS(dB)	+4
	TREBLE(dB)	-4
	DELAY TIME(ms)	15
	REAR LEVEL(dB)	0
ACOUSTIC	CENTER LEVEL(dB)	0
	CENTER MODE	PHANTOM
	BASS(dB)	0
	TREBLE(dB)	0

3. AM 9kHz STEP

During AM 10kHz STEP TUNING, set to AM and turn off the power. Then press and hold down [INDEX SELECT/ TUNING +] key, turn on the power, and change AM TUNING STEP to 9kHz to initialize all the preset channels. (When this procedure is performed during AM 9kHz STEP, AM TUNING STEP is changed to 10kHz.)

4. SURROUND CLEAR

When [TONE ON/DEFEAT] key is held down and the power is turned on, SOUND FIELD memory is initialized.

5. FL TUBE CHECK/KEY CHECK

When ten-keys [7], [8] and [9] key are pressed simultaneously and the power is turned on, FL Tube TEST Display starts.

- All lighting
- One segment lighting for each digit
- Key count indication

The count is decremented for each key input. When it is down to zero, the [POWER] key is used to terminate this check.

SECTION 2

GENERAL

6. DEMO

When SOUND FIELD is turned off and **DISPLAY** key continues to be held down (for 3 seconds), Demonstration starts. If any other key is input, this DEMO stops and processing for that key is done.

* DEMO causes TONE data for ACOUSTIC and DOLBY SURROUND to be changed and set as follows:


DOLBY SUR's CENTER MODE=PHANTOM
REAR/CENTER LEVEL=+6dB
DELAY TIME=20mS

In case of any key input, the state when DEMO is suspended by key input will be maintained.

• ANOTHER FUNCTION

The function that makes FUNCTION INDEX NAME return into FUNCTION NAME. The way of returning is that select any FUNCTIONs you want then press the same FUNCTION KEY during the INDEX input mode.


This section is extracted from instruction manual.

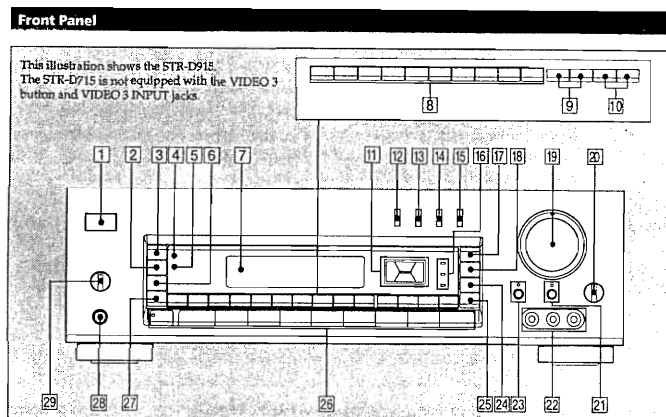

- 1 POWER switch
- 2 FM MODE button (See page 11.)
- 3 FM/AM button (See pages 11, 12.)
- 4 Remote sensor
- 5 STANDBY indicator
(The STANDBY indicator lights up when the power cord is connected.. STR-D915 for Australian model only)
- 6 LEVEL button (See page 12.)
- 7 Display window
- 8 Numeric buttons (See pages 11, 12, 13, 15.)
- 9 INDEX SELECT/TUNING +/- buttons
(See pages 12, 15.)
- 10 PRESET TUNING +/- buttons (See pages 13, 15.)
- 11 DIGITAL PROCESSING CONTROL buttons (See pages 10, 14, 21, 22, 24.)
- 12 SOUND FIELD ON/OFF button (See pages 21, 22, 24, 25.)
- 13 SOUND FIELD MODE button (See pages 21, 22, 24, 25.)
- 14 CENTER MODE button (See pages 20, 21, 24.)
- 15 TONE ON/DEFEAT button (See pages 24, 25.)
- 16 DPC MODE indicators
- 17 DPC MODE button (See pages 10, 14, 21, 22, 24.)
- 18 DISPLAY button (See pages 10, 12, 13, 14, 15.)
- 19 MASTER VOLUME control (See page 9.)
- 20 BALANCE control (See page 9.)
- 21 LOW BOOST button and indicator (See page 9.)
- 22 VIDEO 3 INPUT jacks (STR-D915 only)
- 23 MUTING -20 dB button and indicator (See page 9.)
- 24 SHIFT button (See pages 12, 13.)
- 25 DIRECT button (See page 11.)
- 26 Function selectors and TAPE MONITOR button and indicator (VIDEO 3 button: STR-D915 only)
(See pages 9, 10, 18.)
- 27 MEMORY button (See page 12.)
- 28 HEADPHONES jack
- 29 SPEAKERS selector (See page 9.)

RM-U241 (EXCEPT D915:Canadian)


Remote Commander (Except for The STR-D915 for Canadian Model)

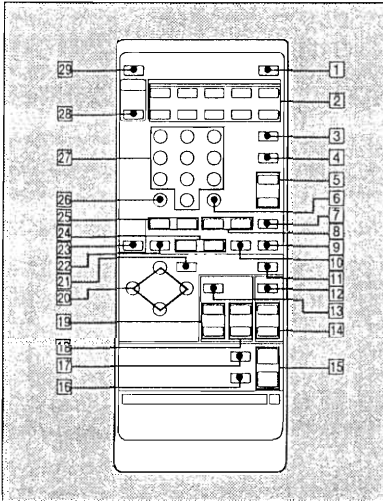

- 1 **SYSTEM OFF button** (See page 16.)
- 2 **SYSTEM CONTROL/FUNCTION**
TAPE, DAT/MD, CD, TUNER, PHONO, VIDEO 1
VIDEO 2, VIDEO 3, LD, TV buttons (See pages 9, 16,
18.)
- 3 **VISUAL POWER button** (See page 16.)
- 4 **TV/VIDEO, INDEX button** (See page 16.)
- 5 **CH/PRESET +/- buttons** (See page 16.)
- 6 **RMS/START, ENTER button** (See pages 16, 17.)
- 7 **ANT TV/VTR, D (disc) SKIP button** (See pages 16, 17.)
- 8 **◀◀, ▶▶ button** (See pages 16, 17.)
- 9 **● button** (See pages 16, 17.)
- 10 **II button** (See pages 16, 17.)
- 11 **EQ/TONE ON/OFF button** (See page 24.)
- 12 **SOUND FIELD ON/OFF button** (See pages 21, 22, 24,
25.)
- 13 **TEST TONE button** (See page 21.)
- 14 **SOUND FIELD MODE +/- buttons** (See pages 21, 22,
24, 25.)
- 15 **MASTER VOL +/- buttons** (See page 9.)
- 16 **MUTING button** (See page 9.)
- 17 **LOW BOOST button** (See page 9.)
- 18 **CENTER LEVEL +/- buttons** (See page 21.)
- 19 **REAR LEVEL +/- buttons** (See page 21.)
- 20 **DIGITAL PROCESSING CONTROL buttons** (See pages
10, 14, 21, 22, 24.)
- 21 **DPC MODE button** (See pages 14, 21, 22, 24.)
- 22 **RMS CLEAR, ■ button** (See page 16.)
- 23 **BACK GROUND button** (See page 17.)
- 24 **◀, ▶, RMS DIRECTION buttons** (See page 16.)
- 25 **◀◀, ▶▶ button** (See pages 16, 17.)
- 26 **> 10, SHIFT button** (See page 16, 17.)
- 27 **Numeric buttons (1 to 0)** (See pages 11, 12, 13, 15.)
- 28 **TV CONTROL ON button** (See page 17.)
- 29 **SLEEP button** (See page 10.)

RM-P341 (D915:Canadian)

Identifying the Parts and Control

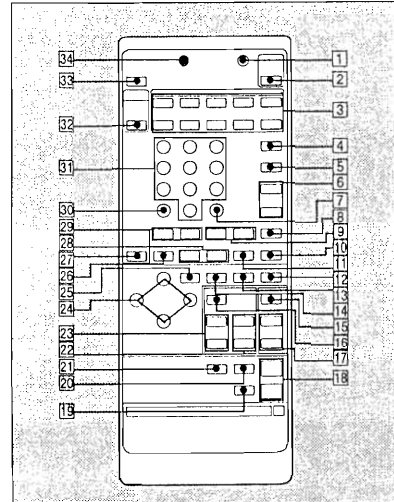


- 1 **LEARN button**
- 2 **SYSTEM OFF button**
- 3 **SYSTEM CONTROL/FUNCTION**
TAPE, DAT/MD, CD, TUNER, PHONO, VIDEO 1,
VIDEO 2, VIDEO 3, LD, TV buttons
- 4 **VISUAL POWER button**
- 5 **TV/VIDEO, INDEX button**
- 6 **CH/PRESET +/- buttons**
- 7 **RMS/START, ENTER button**
- 8 **ANT TV/VTR, D (disc) SKIP button**
- 9 **◀◀, ▶▶ button**
- 10 **● button**
- 11 **II button**
- 12 **EQ/TONE ON/OFF button**
- 13 **EQ SLOPE button**
- 14 **EQ BAND button**
- 15 **SOUND FIELD ON/OFF button**
- 16 **TEST TONE button**
- 17 **SOUND FIELD MODE +/- buttons**
- 18 **MASTER VOL +/- buttons**
- 19 **MUTING button**
- 20 **LOW BOOST button**
- 21 **DIRECT button**
- 22 **CENTER LEVEL +/- buttons**
- 23 **REAR LEVEL +/- buttons**
- 24 **DIGITAL PROCESSING CONTROL buttons**
- 25 **DPC MODE button**
- 26 **RMS CLEAR, ■ button**
- 27 **BACK GROUND button**
- 28 **◀, ▶, RMS DIRECTION buttons**
- 29 **◀◀, ▶▶ button**
- 30 **> 10, SHIFT button**
- 31 **Numeric buttons (1 to 0)**
- 32 **TV CONTROL ON button**
- 33 **SLEEP button**
- 34 **LEARN indicator**

RM-P341 (D915:Canadian)


Programming Signals of Other Audio/Video Equipment

The remote commander RM-P341 learns various functions of other remote commanders emitting infrared rays and allows you to control most of audio and video equipment from a distance.

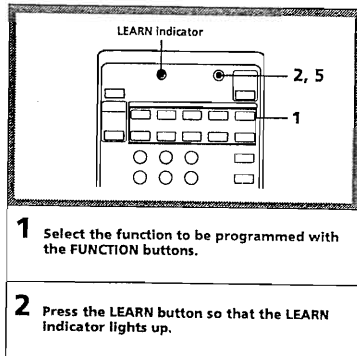

3

Program a signal.
The buttons you can program differ among the functions. Only the buttons listed in "Operative Buttons" can learn new signals for each function.

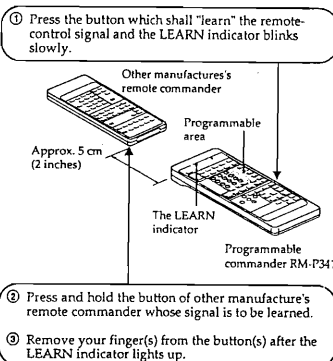

Note

If the button which cannot be programmed is pressed in step ①, the LEARN indicator blinks rapidly.

4

Repeat operation for each button to be programmed.

5

Press the LEARN button.
The LEARN indicator lights for a few seconds. After the indicator goes off, you can control other equipments with the programmed buttons.

The two remote commanders must:

- face straight each other.
- be placed at a distance of approx. 5 cm (2 inches).
- not be moved during programming operation.

After programming

Be sure to test if the equipment really works with the programmed signals.

Note

If you do not perform the following operation in about one minute after steps 2 and 3-③, the learning mode will be canceled.

Number of signals that the commander can learn

It depends on the format of the signal. If you program signals of Sony equipment, approximately 30 signals can be programmed.

Memory capacity

If the LEARN indicator does not blink or light in step 3-③, the memory capacity has become full. This occurs when other signals stronger than the remote-control signals have been stored because the signals were programmed in a noisy environment or the remote commanders were placed too far apart from each other.

In this case, clear all the signals following the procedure described below and program again from the beginning under the proper conditions.

Notes on programming

- Remote-control signals of equipment of manufactures other than Sony can be programmed only when they are compatible with the infrared wireless remote control system. Since the programmable commander can "learn" only the signals output from another remote commander, it cannot control equipment that does not use a remote commander.
- Don not attempt to use the programmable commander with an air conditioner or other household appliances.
- Note that there are some special remote-control signals that cannot be programmed.
- Even if the POWER of the other manufacture's remote commander is learned, you can not turn on this unit and the other equipment simultaneously with the SYSTEM CONTROL/FUNCTION button.

RM-P341/U241

Programming a New Signal onto a Previously Programmed Button

Follow the programming procedure.
The previously programmed signal is cleared and replaced by the new signal.

To clear a programmed signal

- 1 Press the LEARN button so that the LEARN indicator lights up.
- 2 Press the button to be cleared while pressing the BACK GROUND button until the LEARN indicator goes off.

To program a signal onto the ● button for recording

It is not possible to operate any equipment with only the ● button. You can program the rec standby signal and rec start signal under the ● + ► button on RM-P341. With a tape deck, you can also program the signal under the ● + ◀ button (in the reverse direction).

Notes on battery

If the LEARN indicator does not light when a button is pressed, the batteries are almost exhausted. When the batteries are exhausted, the remote commander can no longer operate the unit or programming becomes impossible.

If this happens, replace both batteries with new ones. We recommend the use of alkaline batteries for prolonged use.

Changing the Settings of the FUNCTION Buttons

You can replace the functions stored in the FUNCTION buttons.

Hold down one of the FUNCTION buttons you want to change and press one of the numeric (1 to 0) buttons to select the desired function.


After changing the setting of the FUNCTION button, the equipment can be operated with the FUNCTION button you have changed.

To return the function to the initial mode, perform the same operation above.

With the numeric buttons from 1 to 0, each function can be selected as described in the following table:

Numeric buttons	The function to be selected
1	CD player
2	DAT deck
3	MD recorder
4	DECK A
5	DECK B
6	LD player
7	VCR 1 (Remote control mode)
8	VCR 2 (Remote control mode)
9	VCR 3 (Remote control mode)
0	TV

Example: To change the CD FUNCTION button to the DAT function button.

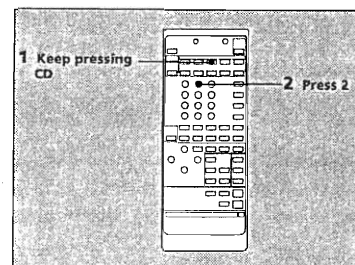


Note

The settings of the TUNER button and the PHONO button cannot be changed.

SECTION 3


DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

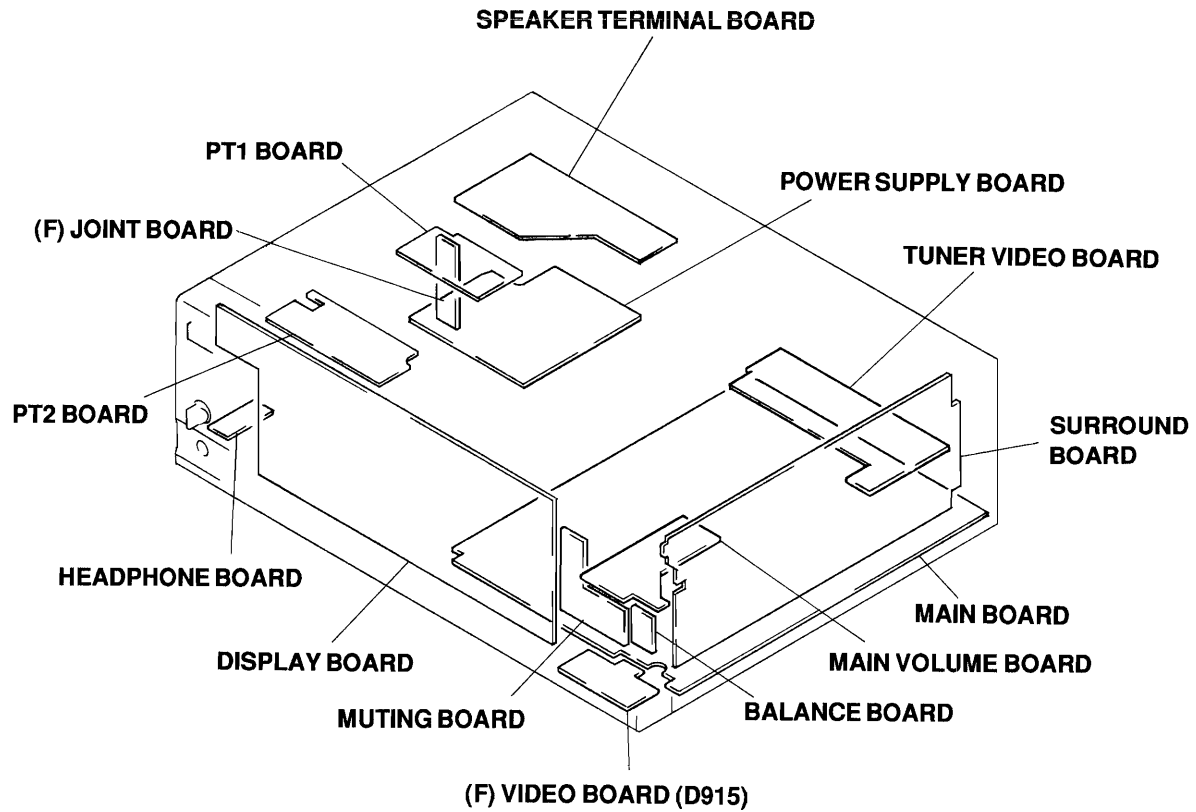


3-2. SEMICONDUCTOR LEAD LAYOUTS


GP1U58XB

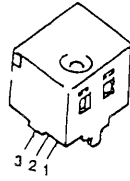


M5F78M05L
TA78M12S



STK3102-MK3

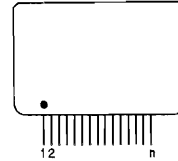


MN2488-OPY-M
MN1620-OPY-M
2SB1560-OPY-M
2SD2390-OPY-M




2SD774-34
2SD809-K




RBA-402
RBV-602-01




LA2785



M5F79M12L



TC9174P

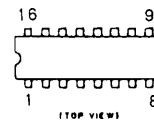


2SA988-PAFAEA




2SK246-GR3




1S1585
1N4148M

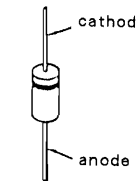


LB1639
M5218AP

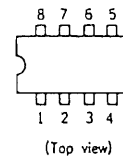


SI-18752




TD62C950RF

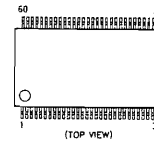


2SA1175-HFE




HZS4ALL
HZS6C3L
UZL-9H3
UZL-36H
UZP-5.6B
11ES2

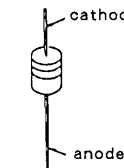


LC7822

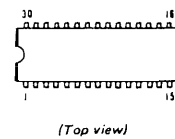

SN74HC151AN
SN74HC237AN
SN761200N
TC9184P




uPD75518GF-195-3B9

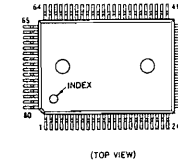


2SC1841-PAFAEA




SEL2210S-CD

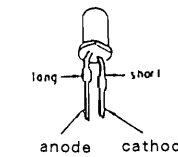

LV1010N

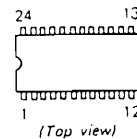


STK350-130

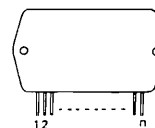


DTA114ES
DTA124ES
DTC114ES
DTC124ES
2SC2785-FEK
2SC3623A-LK



2SC4495
2SD2012



SEL2810A

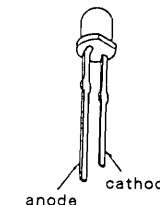

3-3. PRINTED WIRING BOARDS — SURROUND SECTION —


- See page 7 for Circuit Boards Location.
- See page 8 for Semiconductor Lead Layouts.






• Semiconductor Location

Ref. No.	Location
D201	B-14
D202	B-13
D204	B-13
D205	E-14
2	B-10
7	B-6
1...01	C-10
IC202	C-13
IC251	I-16
IC300	C-8
IC301	E-8
IC302	C-6
IC401	E-3
IC412	B-3
Q201	D-14
Q202	D-14
Q210	E-14
Q211	E-13
Q212	E-13
Q213	B-10
Q251	J-17
Q252	H-17
Q253	G-17
Q254	I-17
Q305	A-4
Q306	C-4
Q307	C-5
Q308	D-5
Q401	A-3
Q402	B-2
Q403	E-4
Q404	D-4
Q451	C-3
Q452	C-2
Q453	F-5
Q454	F-4
Q808	B-6

Note:

- ○ : parts extracted from the component side.
- ■ : Pattern from the side which enable seeing.

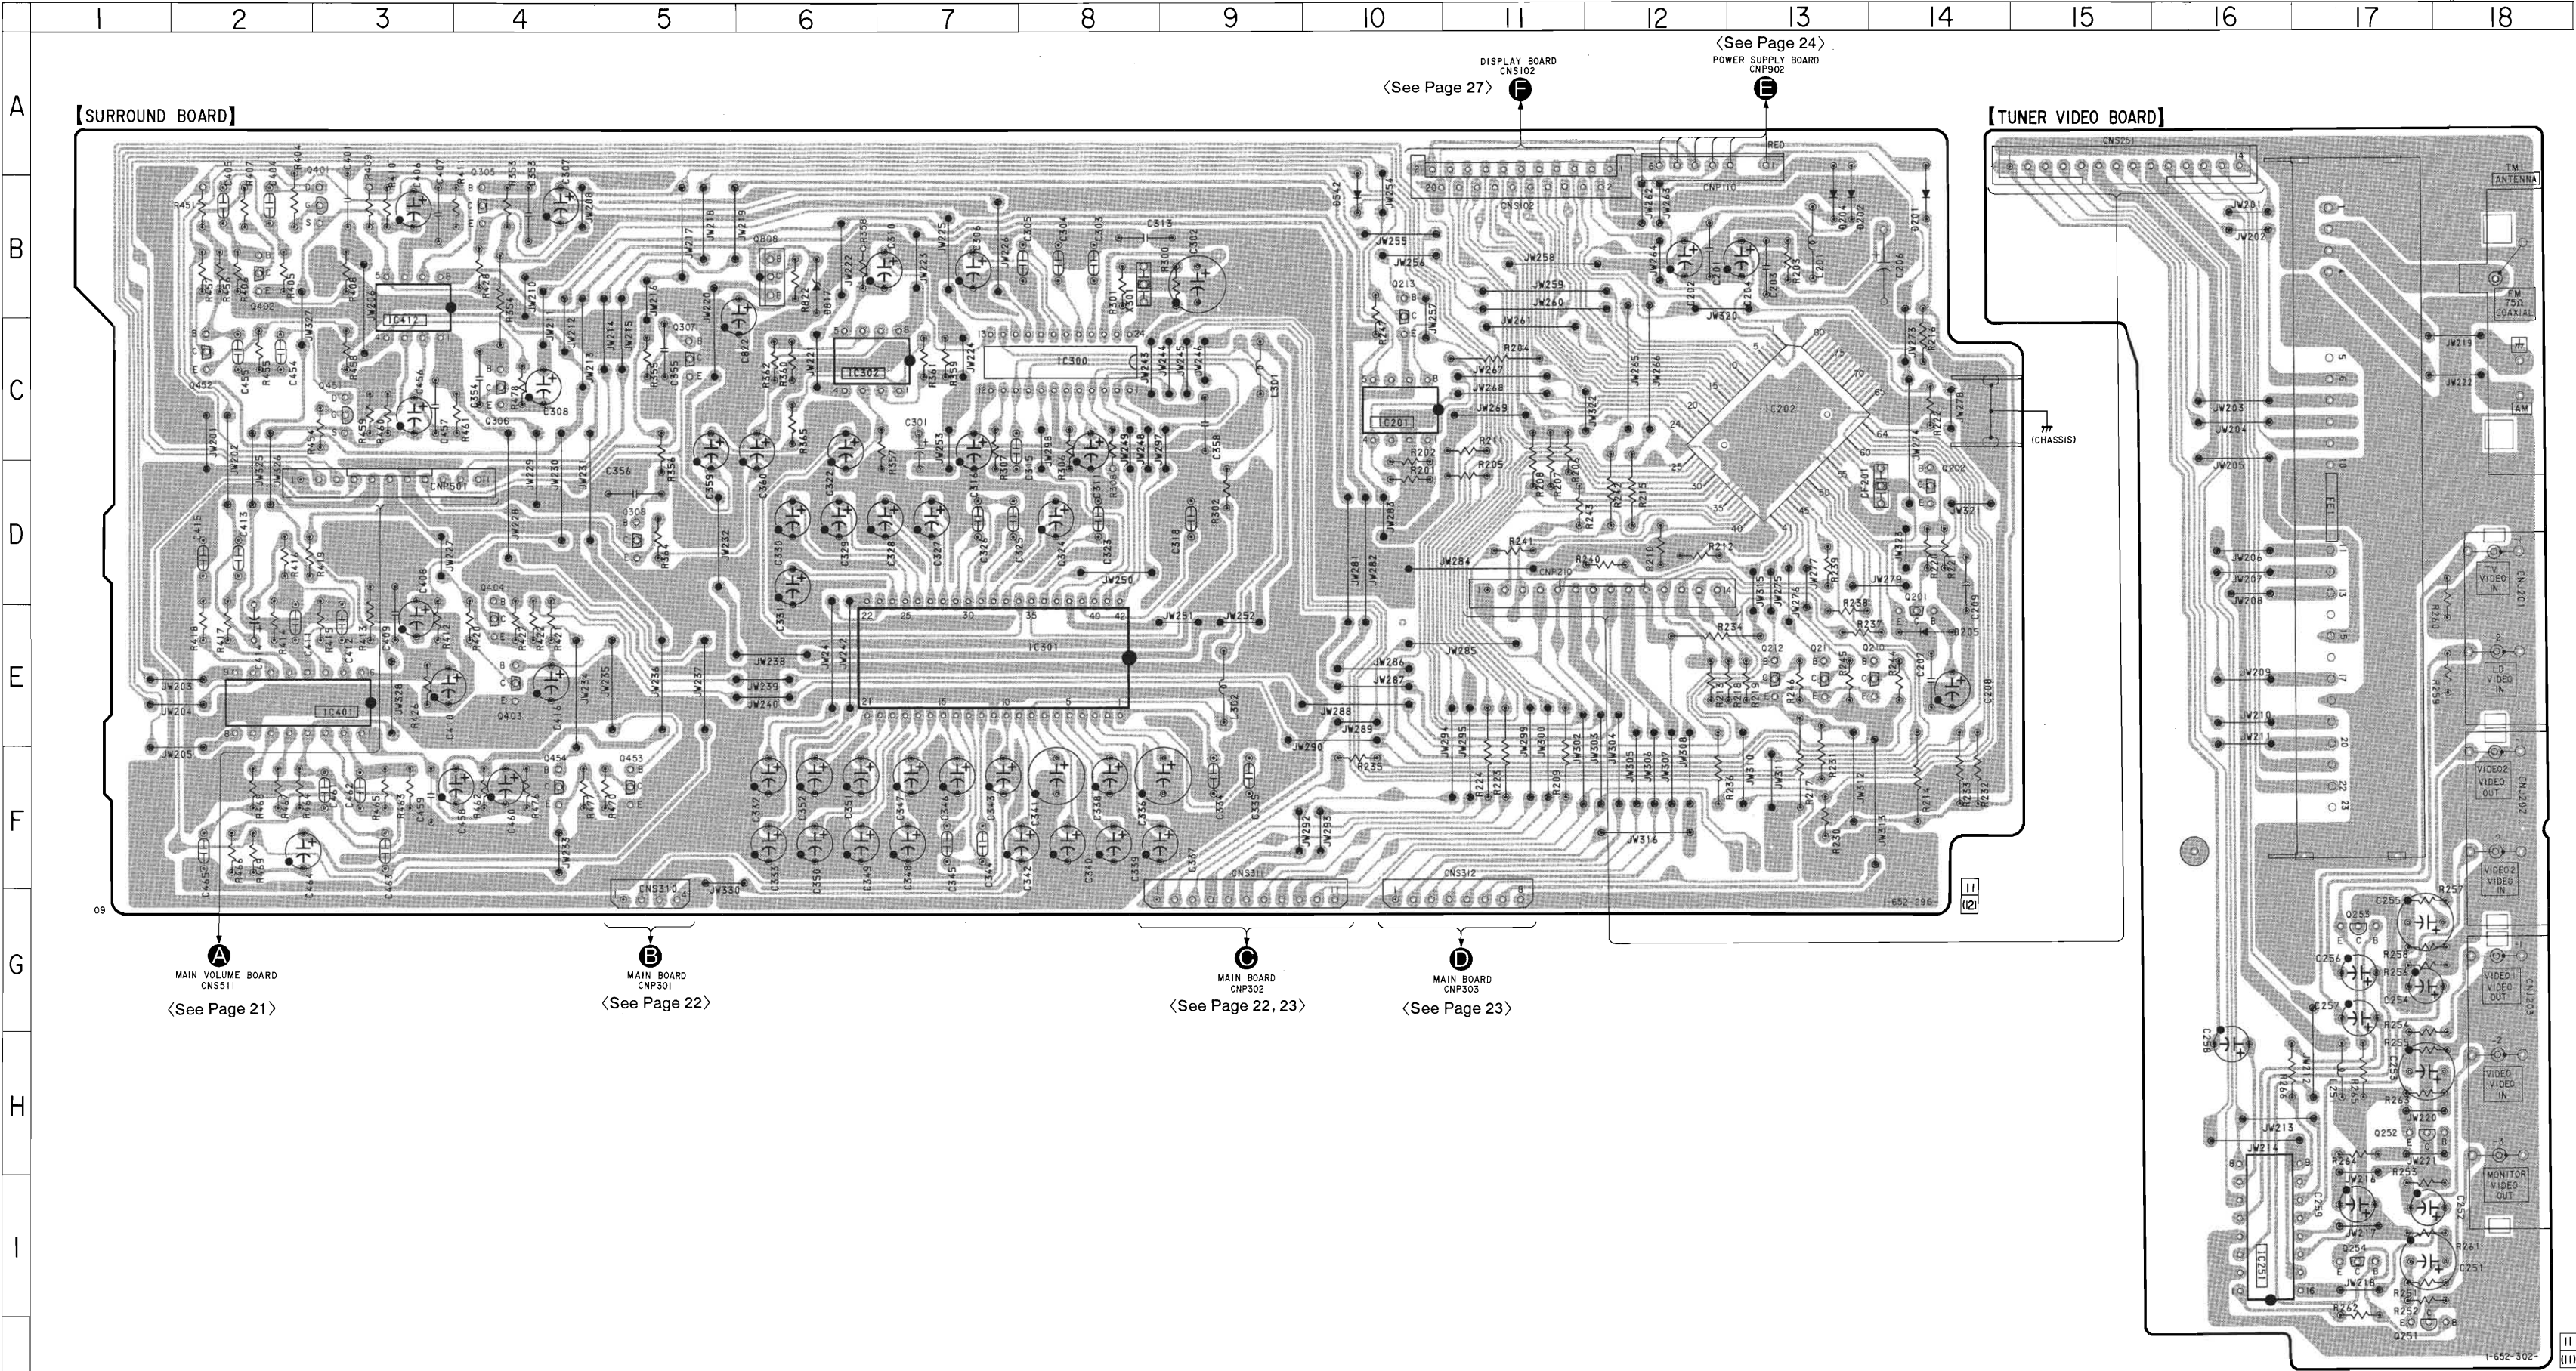


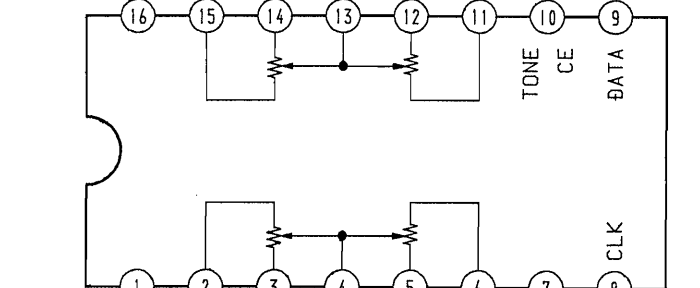

-  : B+ Line
-  : B- Line
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
no mark : FM
- Voltages are taken with a VOM (Input impedance 10M Ω).
Voltage variations may be noted due to normal production tolerances.
- Signal path.
 : FM

3-6. PRINTED WIRING BOARDS — MAIN SECTION —

- See page 7 for Circuit Boards Location.
- See page 8 for Semiconductor Lead Layouts.

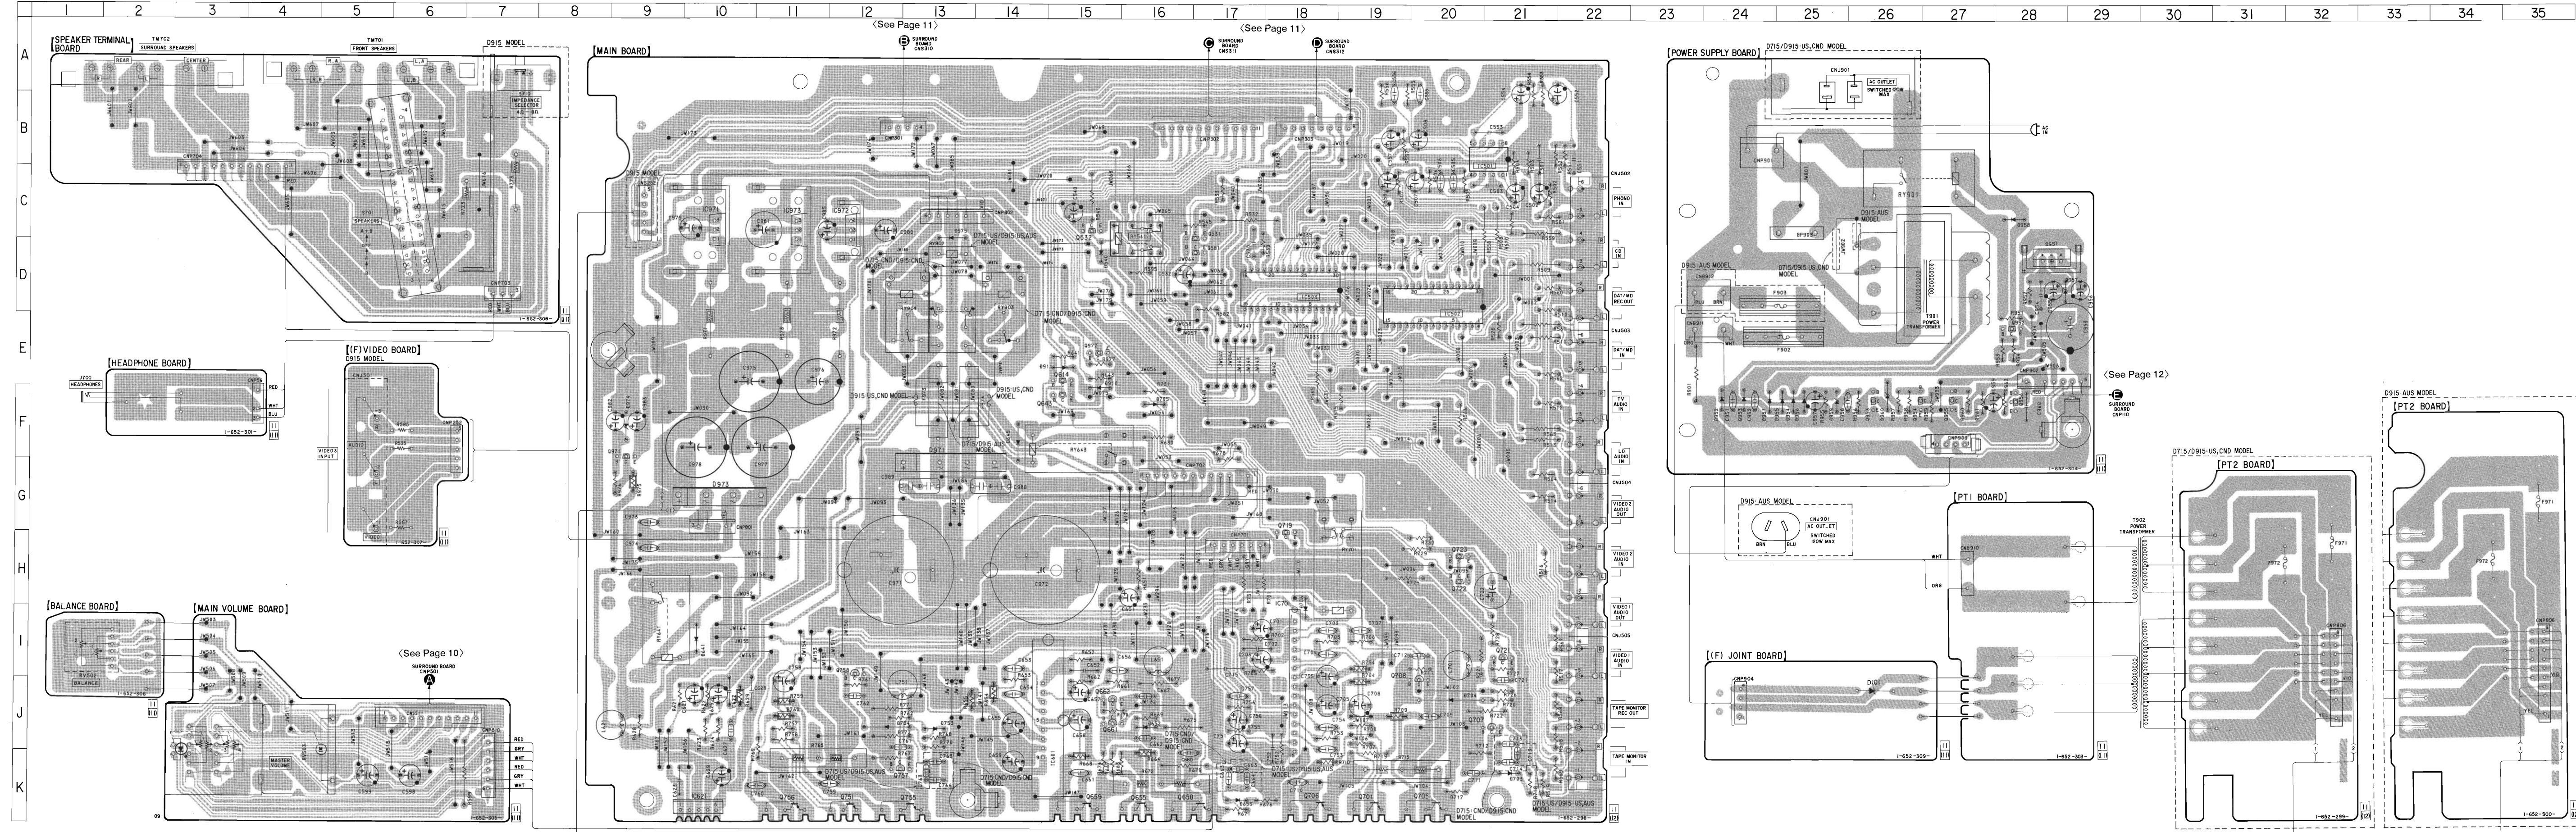

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D101	J-26	IC972	C-12
D540	D-15	IC973	C-11
D641	I-10		
D645	F-14	Q631	C-17
D652	J-16	Q632	C-15
D653	K-17	Q681	D-17
D703	K-21	Q614	E-15
D704	J-20	Q643	F-14
D705	F-16	Q655	K-16
D706	H-18	Q658	K-17
D753	J-13	Q659	K-15
D754	J-13	Q661	J-15
D910	E-15	Q662	J-15
D911	E-15	Q701	K-19
D951	F-24	Q705	K-20
D952	F-24	Q706	K-18
D953	F-24	Q707	J-21
D954	F-25	Q708	J-19
D955	F-25	Q719	G-18
D956	F-25	Q721	I-21
D957	D-29	Q722	H-20
D958	C-28	Q723	H-20
D959	F-25	Q751	K-12
D960	F-26	Q755	K-13
D971	F-13	Q756	K-11
D973	G-10	Q757	K-13
D974	F-9	Q758	I-12
D975	C-13	Q951	D-28
		Q952	E-28
		Q953	F-26
		Q954	F-27
		Q955	F-27
		Q956	F-28
		Q971	F-9
		Q972	E15

Note:


- : parts extracted from the component side.
- : Pattern from the side which enable seeing.
- Abbreviation
CND : Canadian model.
AUS : Australian model.

3-7. PRINTED WIRING BOARDS — DISPLAY SECTION —
• See page 7 for Circuit Boards Location.
• See page 8 for Semiconductor Lead Layouts.


• Semiconductor Location

Ref. No.	Location
D101	B-15
D102	B-16
D105	F-18
D106	D-6
D107	D-6
D108	D-6
D109	D-3
D110	D-2
D111	D-16
D121	C-18
D122	C-18
D123	C-18
D124	C-18
D125	C-17
D126	B-17
D127	C-17
D131	D-8
D135	D-8
D138	C-8
IC101	D-12
IC102	D-16
IC103	B-17
IC104	B-10
IC105	F-18
IC106	E-5
Q101	B-15
Q102	B-14

Note:
• : Pattern from the side which enable seeing.
• Abbreviation
AUS : Australian model.

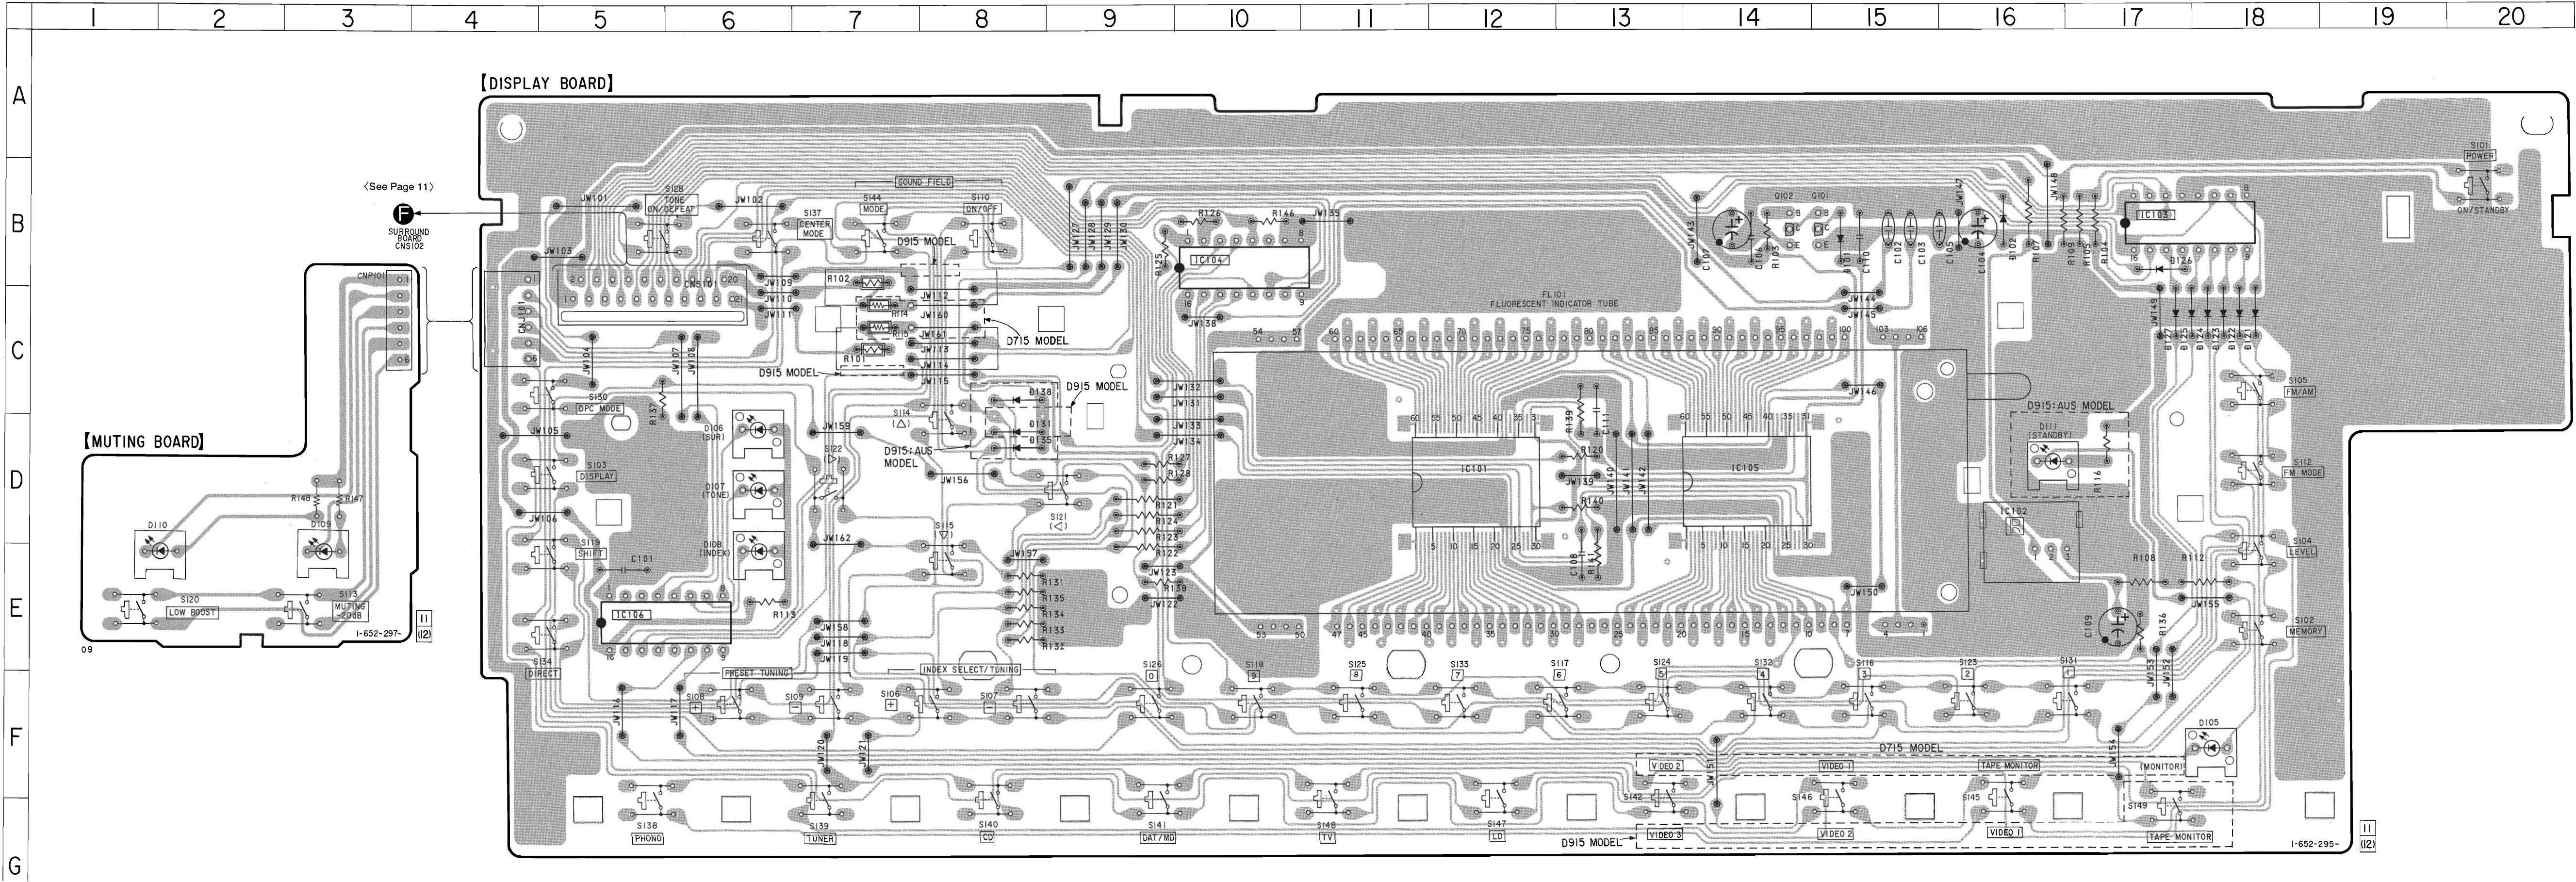


3-8. SCHEMATIC DIAGRAM — DISPLAY SECTION —
• See page 36 for IC Pin Functions. (IC106)

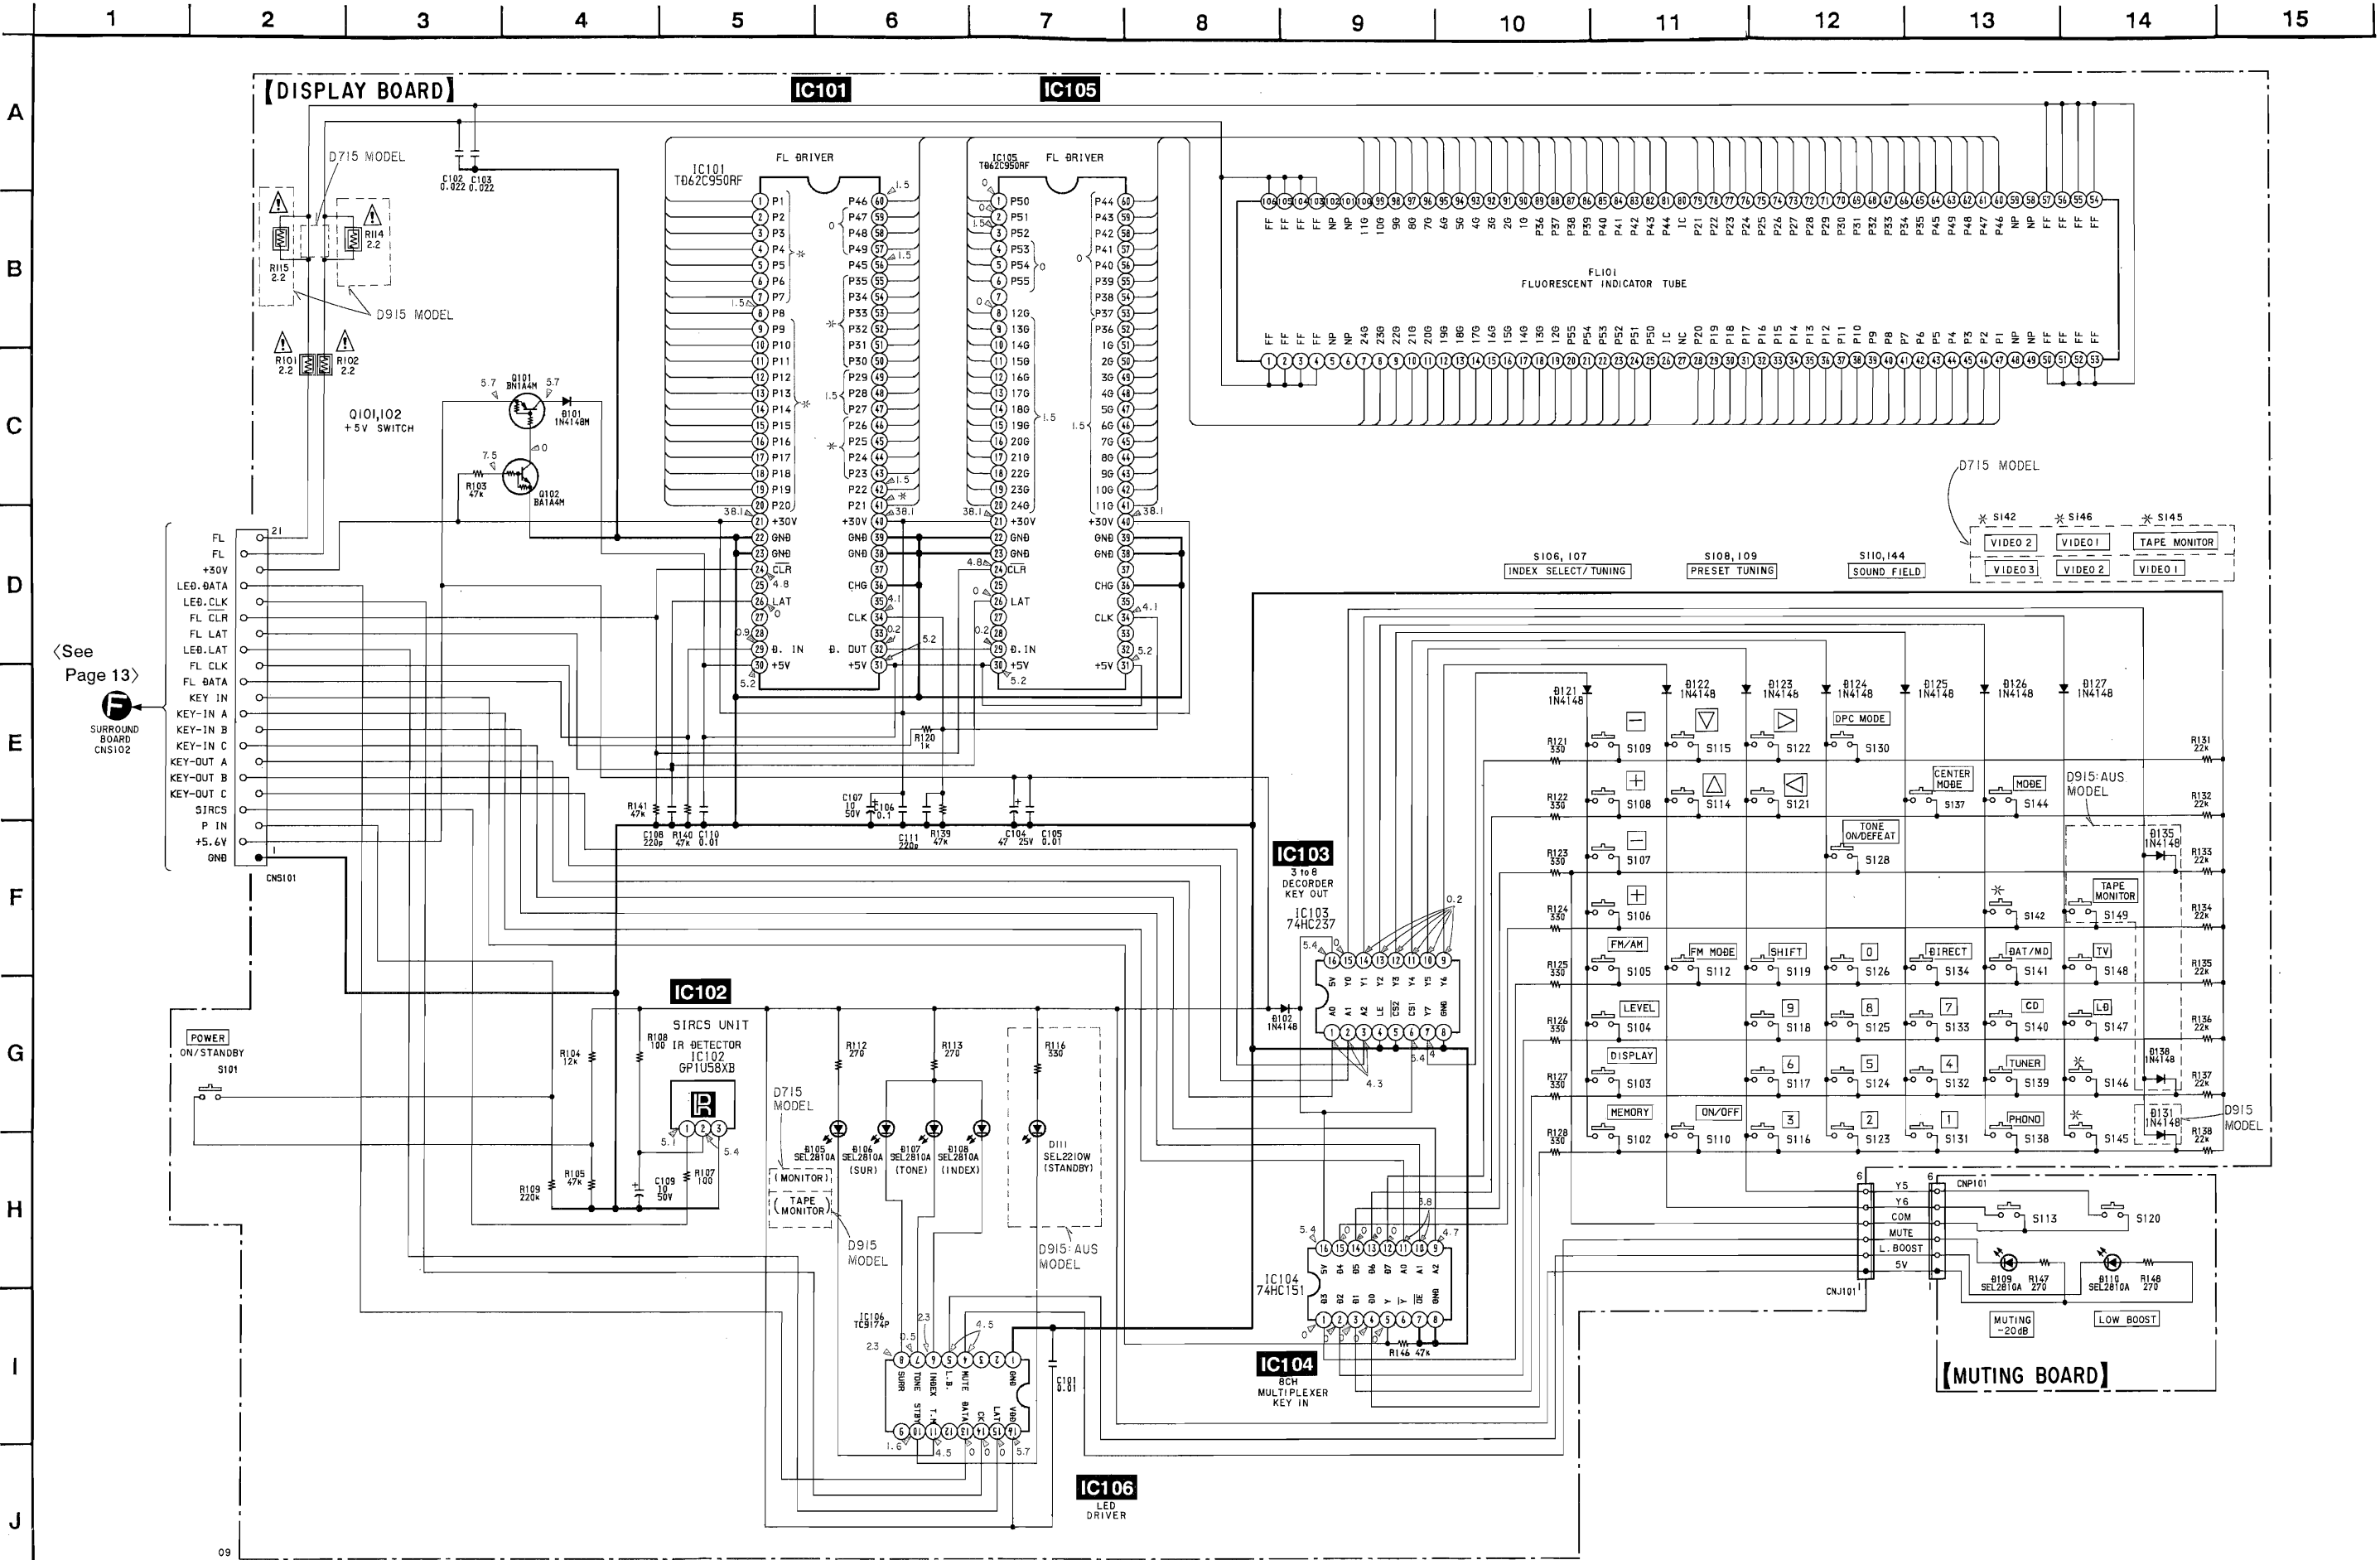


• IC Block Diagrams.

IC103 74HC237

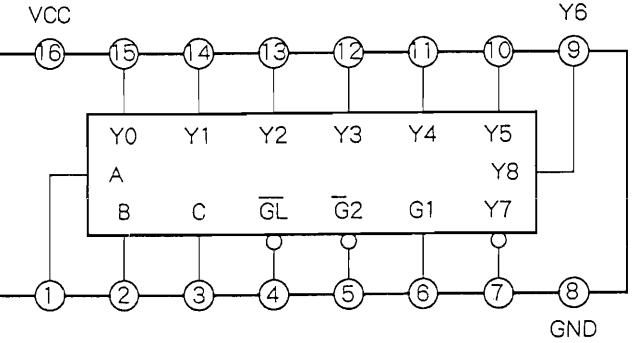

IC104 74HC151

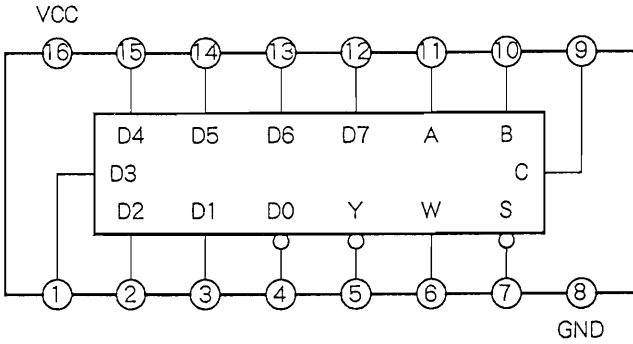

- Note:**
- All capacitors are in μF unless otherwise noted. $\text{pF}:\mu\text{F}$ 50V or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and 1/4W or less unless otherwise specified.
 - $\square$: nonflammable resistor.
 - $\square$: panel designation.

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- $\square$: B+ Line
- Voltage and waveforms are dc with respect to ground under no-signal conditions. no mark : FM
- $\times$: can not be measured.
- Voltages are taken with a VOM (input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- Abbreviation
AUS : Australian model.

3-9. IC PIN FUNCTIONS

- IC202 (μ PD75518GF-195-3B9) MAIN CONTROLLER

Pin No.	Pin Name	I/O	Function
1	P. IN	I	POWER IN
2	A/D. REF	—	REFERENCE VOLTAGE OF A/D CONVERTER (+5V)
3	+5V	—	+5V
4	+5V	—	+5V
5	—	O	OPEN
6	T. MUT	O	TUNER MUTE
7	TONE. LAT	O	TONE latch
8	—	O	OPEN
9	LOW BOOST	O	LOW BOOST ON/OFF
10	KEY-O. C	O	KEY OUT CONTROL A0
11	KEY-O. B	O	KEY OUT CONTROL A1
12	KEY-O. A	O	KEY OUT CONTROL A2
13	T-2	O	TAPE MONITOR ON/OFF
14	KEY-I. C	O	KEY IN CONTROL A0
15	KEY-I. B	O	KEY IN CONTROL A1
16	KEY-I. A	O	KEY IN CONTROL A2
17	KEY. IN	I	KEY INPUT
18	FL. DATA	O	FL DRIVER SERIAL DATA
19	FL. CK	O	FL DRIVER SERIAL CLOCK
20	—	O	GND
21	VR (+)	O	VOLUME UP control
22	VR (—)	O	VOLUME DOWN control
23	FL. LS	O	FL DRIVER LATCH
24	FL. CL	O	FL DRIVER CLEAR
25	LED CK	O	LED clock
26	LED DATA	O	LED data
27	SURR. RY	O	SURROUND RELAY drive
28	CENTER. RY	O	CENTER RELAY drive
29	LED LAT	O	LED latch (PULL-UP: 2.2k)
30	VOL LED	O	VOLUME LED drive (PULL-UP: 2.2k)
31	VIDEO-A	O	VIDEO A SELECT (PULL-UP: 2.2k)
32	BRIDGEABLE OUT	O	SP=8 Ω : 2CH $\rightarrow$ "L", SURR $\rightarrow$ "H"/SP=4 Ω : ALL "H" (PULL-UP: 2.2k)
33	Vss	—	GND
34	—	I	GND (PULL-UP: 2.2k)
35	—	I	GND (PULL-UP: 2.2k)
36	—	I	GND (PULL-UP: 2.2k)
37	BRIDGEABLE IN	I	SP4 Ω /8 Ω SELECT4 Ω = "L" 8 Ω = "H" (PULL-UP: 2.2k)
38	PW. RY	O	POWER RELAY drive
39	SP. RY	O	SPEAKER RELAY drive
40	S. CLK	O	SERIAL CLOCK

Pin No.	Pin Name	I/O	Function
41	S. DATA	O	SERIAL DATA
42	LAT	O	SERIAL LATCH
43	FUNC. MUT	O	FUNCTION MUTE
44	-20DB. MUT	O	-20dB MUTE
45	PROT. MUT	O	PROTECTOR MUTE (Use a things S-MUTE)
46	STEREO. IN	I	TUNER STEREO SIGNAL INPUT (PULL-UP: 10k)
47	PROT. IN	I	PROTECTOR INPUT (PULL-UP: 10k)
48	GND	—	GND (PULL-UP: 10k)
49	REMO. MA	I	REMOTE CONTROL INPUT (PULL-UP: 10k)
50	ADJ. LAT	I	AUTO MEASUREMENT LATCH (PULL-UP: 10k)
51	A. STOP	I	TUNER AUTO STOP (PULL-UP: 10k)
52	D. IN	I	IF COUNT DATA INPUT (PULL-UP: 10k)
53	STOP	I	STOP DETECT
54	Vss	—	GND
55	XT1	—	GND
56	—	—	OPEN
57	IC	—	GND
58	OSC	—	CRYSTAL OSCILLATOR 6MHz
59	OSC	—	CRYSTAL OSCILLATOR 6MHz
60	RESET	I	RESET INPUT
61	SURR CLOCK	O	Serial clock for surround IC (LV1010, LA2785) (PULL-UP: 2.2k)
62	SURR DATA	O	Serial data for surround IC (LV1010, LA2785) (PULL-UP: 2.2k)
63	SURR LAT	O	Serial latch for surround IC (LV1010, LA2785) (PULL-UP: 2.2k)
64	INH	O	Inhidit output for VIDEO MONITOR OUT (PULL-UP: 2.2k)
65	—	I	GND
66	—	I	GND
67	—	I	GND
68	—	I	GND
69	—	I	GND
70	—	I	GND
71	—	I	GND
72	—	I	GND
73	Vss	—	GND
74	—	I	GND
75	—	I	GND
76	—	I	GND
77	—	I	GND
78	—	I	GND
79	—	I	GND
80	—	I	GND

• **IC106 (TC9174P) LED DRIVER**

Pin No.	Pin Name	I/O	Function
1	GND	—	GND
2	NC	—	Not used
3	NC	—	Not used
4	MUTE	O	MUTING LED drive
5	L.B.	O	LOW BOOST LED drive
6	INDEX	O	INDEX LED drive
7	TONE	O	TONE LED drive
8	SURR	O	SUR LED drive
9	NC	—	Not used
10	STBY	O	STANDBY LED drive (D915: Australian model)
11	T.M	O	MONITOR LED (D715), TAPE MONITOR LED (D915) drive
12	NC	—	Not used
13	DATA	I	Serial data input
14	CK	I	Serial clock input
15	LAT	I	Serial latch input
16	VDD	—	+5.6V

SECTION 4

EXPLODED VIEWS

NOTE:


- Items marked “ * ” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
CND : Canadian model
AUS : Australian model

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. CABINET SECTION

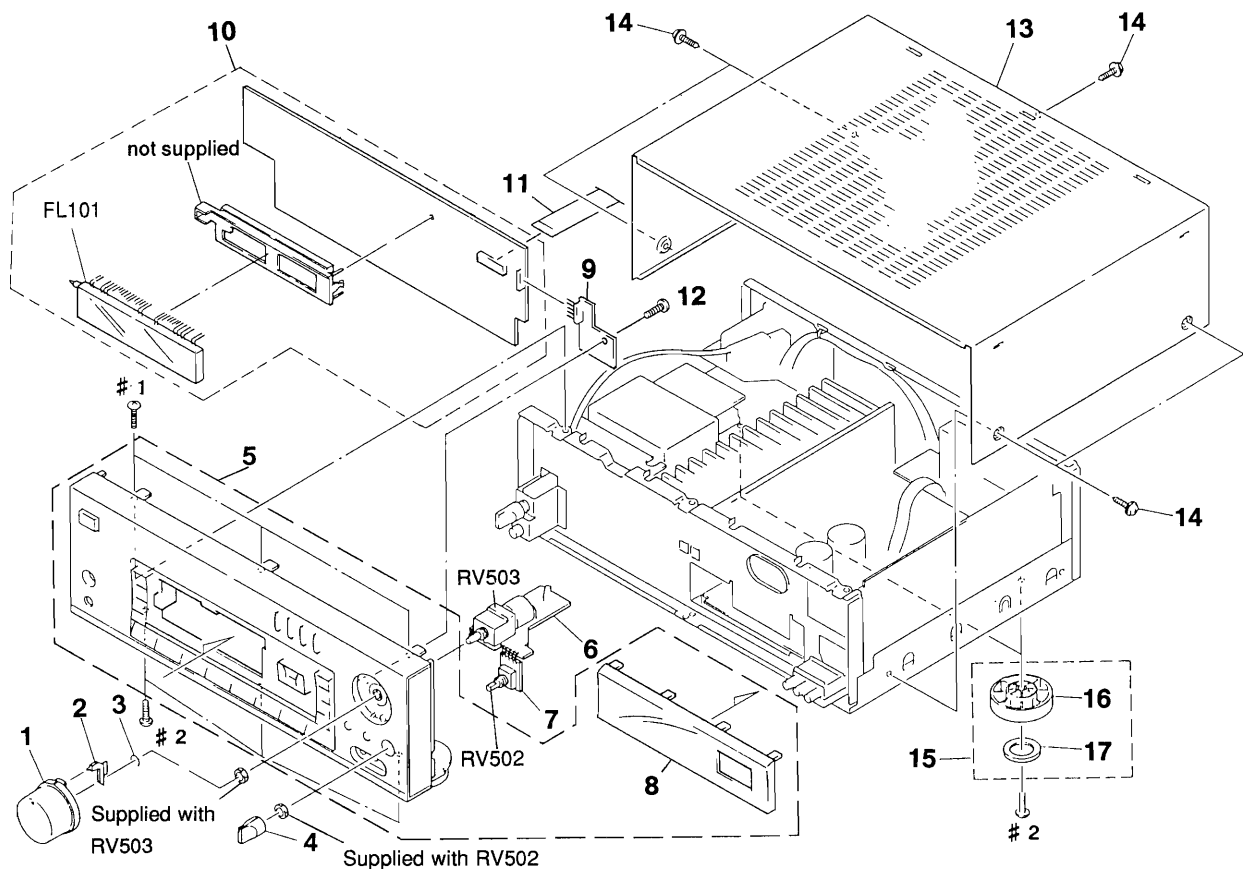

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
1	4-949-659-01	KNOB (VOL-NEW)		* 10	A-4369-964-A	DISPLAY BOARD, COMPLETE (D915:AUS)	
2	4-958-991-01	PLATE (VOL), LIGHT GUIDE		* 10	A-4369-969-A	DISPLAY BOARD, COMPLETE (D715)	
3	3-350-426-01	SPRING, RING		11	1-765-290-11	WIRE (FLAT TYPE) (21 CORE)	
4	4-957-383-01	KNOB (F14)		12	4-951-620-01	SCREW (2. 6X8), +BVTP	
5	X-4944-830-1	PANEL ASSY, FRONT (D915:US, CND)		13	4-931-031-11	CASE	
5	X-4944-831-1	PANEL ASSY, FRONT (D915:AUS)		14	3-704-366-01	SCREW (CASE) (M3X8)	
5	X-4944-832-1	PANEL ASSY, FRONT (D715)		15	X-4941-291-1	FOOT ASSY (F58175S) (EXCEPT D915:AUS)	
* 6	1-652-305-11	MAIN VOLUME BOARD		15	X-4941-292-1	FOOT ASSY (F58175S) (D915:AUS)	
* 7	1-652-306-11	BALANCE BOARD		16	3-318-688-31	FOOT (F58175S) (D915:AUS)	
8	4-965-948-01	PLATE (B), INDICATION (EXCEPT D915:AUS)		16	3-318-688-51	FOOT (F58175S) (EXCEPT D915:AUS)	
8	4-965-948-11	PLATE (B), INDICATION (D915:AUS)		17	4-923-836-21	CUSHION	
* 9	1-652-297-11	MUTING BOARD		FL101	1-517-305-11	INDICATOR TUBE, FLUORESCENT	
* 10	A-4369-963-A	DISPLAY BOARD, COMPLETE (D915:US, CND)					

4-2. CHASSIS SECTION

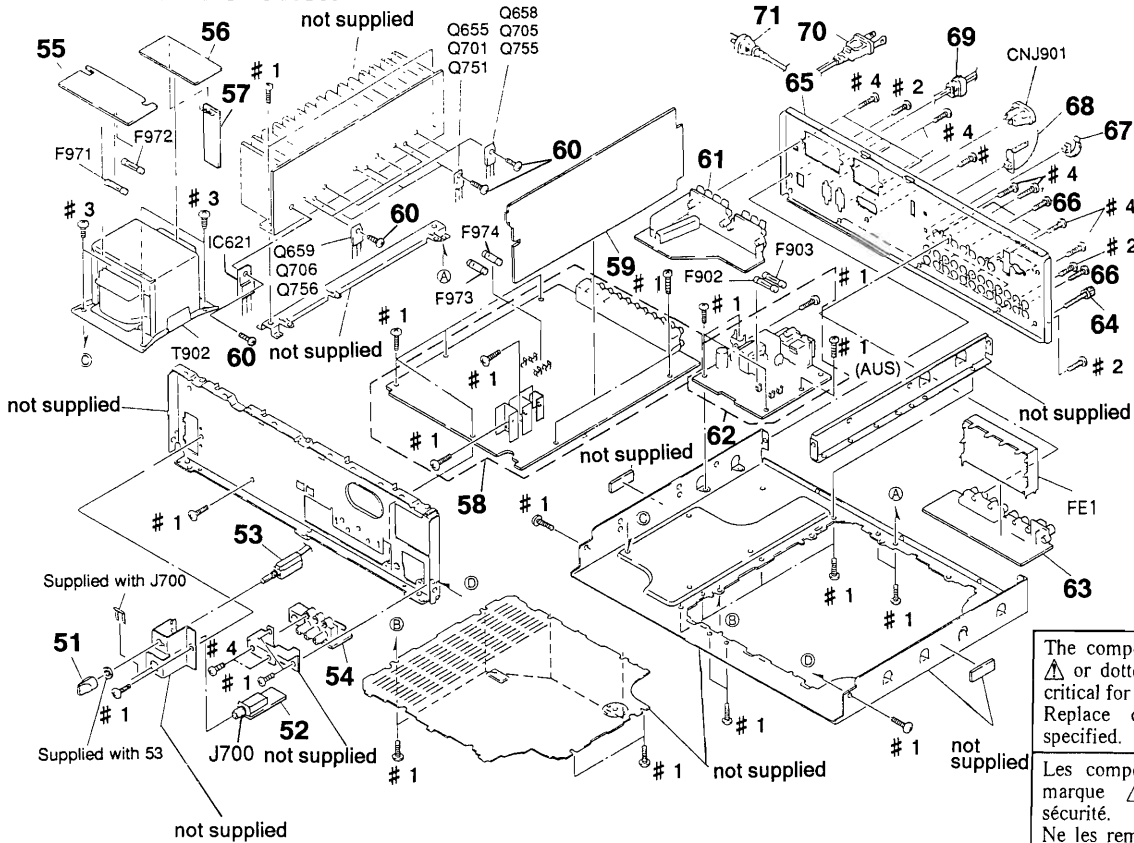

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-957-383-01	KNOB (F14)		ΔF902	1-532-748-11	FUSE, GLASS TUBE (6.3A/125V) (EXCEPT D915:AUS)	
* 52	1-652-301-11	HEADPHONE BOARD		ΔF903	1-532-286-00	FUSE (T2. 5A/250V) (D915:AUS)	
53	1-572-291-41	SWITCH, ROTARY SLIDE		ΔF971	1-532-237-00	FUSE, TIME LAG (T3. 15A/250V) (D915:AUS)	
* 54	1-652-307-11 (F)	VIDEO BOARD (D915)		ΔF971	1-576-107-11	FUSE (3. 15A/250V) (EXCEPT D915:AUS)	
* 55	1-652-299-11	PT2 BOARD (EXCEPT D915:AUS)		ΔF972	1-532-237-00	FUSE, TIME LAG (T3. 15A/250V) (D915:AUS)	
* 55	1-652-300-11	PT2 BOARD (D915:AUS)		ΔF972	1-576-107-11	FUSE (3. 15A/250V) (EXCEPT D915:AUS)	
* 56	1-652-303-11	PT1 BOARD		ΔF973	1-532-748-11	FUSE, GLASS TUBE (6.3A/125V) (EXCEPT D915:AUS)	
* 57	1-652-309-11 (F)	JOINT BOARD		ΔF974	1-532-748-11	FUSE, GLASS TUBE (6.3A/125V) (EXCEPT D915:AUS)	
* 58	A-4369-953-A	MAIN BOARD, COMPLETE (D915:US)		FE1	1-239-727-11	ENCAPSULATED COMPONENT (FCC) (EXCEPT D915:AUS)	
* 58	A-4369-962-A	MAIN BOARD, COMPLETE (D915:CND)		FE1	1-239-611-11	ENCAPSULATED COMPONENT (D915:AUS)	
* 58	A-4369-971-A	MAIN BOARD, COMPLETE (D715:US)		IC621	8-759-502-33	IC SI-18752	
* 58	A-4369-973-A	MAIN BOARD, COMPLETE (D715:CND)		Q655	8-729-026-08	TRANSISTOR 2SC4495	
* 58	A-4371-665-A	MAIN BOARD, COMPLETE (D915:AUS)		Q658	8-729-022-16	TRANSISTOR 2SD2390-OPY-M (D715)	
* 59	A-4369-951-A	SURROUND BOARD, COMPLETE		Q658	8-749-010-25	TRANSISTOR MN2488-OPY-M (D915)	
60	3-905-609-01	SCREW (TRANSISTOR)		Q659	8-729-022-15	TRANSISTOR 2SB1560-OPY-M (D715)	
* 61	1-652-308-11	SPEAKER TERMINAL BOARD		Q659	8-749-010-26	TRANSISTOR MP1620-OPY-M (D915)	
* 62	A-4369-957-A	POWER SUPPLY BOARD, COMPLETE (EXCEPT D915:AUS)		Q701	8-729-026-08	TRANSISTOR 2SC4495	
* 62	A-4369-966-A	POWER SUPPLY BOARD, COMPLETE (D915:AUS)		Q705	8-729-022-16	TRANSISTOR 2SD2390-OPY-M (D715)	
* 63	1-652-302-11	TUNER VIDEO BOARD		Q705	8-749-010-25	TRANSISTOR MN2488-OPY-M (D915)	
64	4-947-010-01	SCREW, FEEDER FIXED		Q706	8-729-022-15	TRANSISTOR 2SB1560-OPY-M (D715)	
* 65	4-965-957-01	PANEL, BACK (D915:US)		Q706	8-749-010-26	TRANSISTOR MP1620-OPY-M (D915)	
* 65	4-965-957-11	PANEL, BACK (D915:CND)		Q751	8-729-026-08	TRANSISTOR 2SC4495	
* 65	4-965-957-21	PANEL, BACK (D915:AUS)		Q755	8-729-022-16	TRANSISTOR 2SD2390-OPY-M (D715)	
* 65	4-965-957-31	PANEL, BACK (D715:US)		Q755	8-749-010-25	TRANSISTOR MN2488-OPY-M (D915)	
* 65	4-965-957-41	PANEL, BACK (D715:CND)		Q756	8-729-022-15	TRANSISTOR 2SB1560-OPY-M (D715)	
66	3-704-515-01	SCREW (BV/RING)		Q756	8-749-010-26	TRANSISTOR MP1620-OPY-M (D915)	
* 67	4-949-235-01	HOOK (EXCEPT D915:AUS)		ΔT902	1-423-637-11	TRANSFORMER, POWER (D715:US)	
68	4-956-370-12	BAND, PLUG FIXED (D915:AUS)		ΔT902	1-423-638-11	TRANSFORMER, POWER (D715:CND)	
* 69	3-703-244-00	BUSHING (2104), CORD		ΔT902	1-426-756-11	TRANSFORMER, POWER (D915:US)	
Δ70	1-690-609-11	CORD, POWER (EXCEPT D915:AUS)		ΔT902	1-426-757-11	TRANSFORMER, POWER (D915:CND)	
Δ71	1-696-848-21	CORD, POWER (D915:AUS)		ΔT902	1-426-758-11	TRANSFORMER, POWER (D915:AUS)	
ΔCNJ901	1-251-078-11	OUTLET, AC. (D915:AUS)					
ΔF902	1-532-237-00	FUSE, TIME LAG (T3. 15A/250V) (D915:AUS)					

SECTION 5

ELECTRICAL PARTS LIST

BALANCE

DISPLAY

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
CND : Canadian model
AUS : Australian model

- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
*	1-652-306-11	BALANCE BOARD *****		D122	8-719-987-63	DIODE 1N4148M	
		< VARIABLE RESISTOR >		D123	8-719-987-63	DIODE 1N4148M	
				D124	8-719-987-63	DIODE 1N4148M	
				D125	8-719-987-63	DIODE 1N4148M	
				D126	8-719-987-63	DIODE 1N4148M	
				D127	8-719-987-63	DIODE 1N4148M	
		*****		D131	8-719-987-63	DIODE 1N4148M (D915)	
*	A-4369-963-A	DISPLAY BOARD, COMPLETE (D915:US, CND) *****		D135	8-719-987-63	DIODE 1N4148M (D915:AUS)	
*	A-4369-964-A	DISPLAY BOARD, COMPLETE (D915:AUS) *****		D138	8-719-987-63	DIODE 1N4148M (D915:AUS)	
		< FLUORESCENT INDICATOR >					
*	A-4369-969-A	DISPLAY BOARD, COMPLETE (D715) *****		FL101	1-517-305-11	INDICATOR TUBE, FLUORESCENT	
		< IC >					
		< CAPACITOR >		IC101	8-759-075-35	IC TD62C950RF	
				IC102	8-749-923-11	IC GP1U58XB	
				IC103	8-759-921-32	IC SN74HC237AN	
				IC104	8-759-916-48	IC SN74HC151AN	
				IC105	8-759-075-35	IC TD62C950RF	
				IC106	8-759-202-07	IC TC9174P	
						< TRANSISTOR >	
				Q101	8-729-900-61	TRANSISTOR DTA114ES	
				Q102	8-729-900-80	TRANSISTOR DTC114ES	
						< RESISTOR >	
				Δ R101	1-249-385-11	CARBON 2.2 5% 1/6W F	
				Δ R102	1-249-385-11	CARBON 2.2 5% 1/6W F	
				R103	1-249-437-11	CARBON 47K 5% 1/4W	
				R104	1-249-430-11	CARBON 12K 5% 1/4W	
				R105	1-249-437-11	CARBON 47K 5% 1/4W	
				R107	1-247-807-31	CARBON 100 5% 1/4W	
				R108	1-247-807-31	CARBON 100 5% 1/4W	
				R109	1-247-887-00	CARBON 220K 5% 1/4W	
				R112	1-249-410-11	CARBON 270 5% 1/4W F	
				R113	1-249-410-11	CARBON 270 5% 1/4W F	
				Δ R114	1-249-385-11	CARBON 2.2 5% 1/6W F (D715)	
				Δ R115	1-249-385-11	CARBON 2.2 5% 1/6W F (D715)	
				R116	1-249-411-11	CARBON 330 5% 1/4W (D915:AUS)	
				R120	1-249-417-11	CARBON 1K 5% 1/4W F	
				R121	1-249-411-11	CARBON 330 5% 1/4W	
		< CONNECTOR >					
*	CNJ101	1-565-482-11 CONNECTOR, BOARD TO BOARD 6P					
	CNS101	1-691-651-11 SOCKET, CONNECTOR 21P					
		< DIODE >					
				D101	8-719-987-63	DIODE 1N4148M	
				D102	8-719-987-63	DIODE 1N4148M	
				D105	8-719-301-49	LED SEL2810A (MONITOR) (D715)	
				D105	8-719-301-49	LED SEL2810A (TAPE MONITOR) (D915)	
				D106	8-719-301-49	LED SEL2810A (SUR)	
				D107	8-719-301-49	LED SEL2810A (TONE)	
				D108	8-719-301-49	LED SEL2810A (INDEX)	
				D111	8-719-301-37	LED SEL2210S-CD (STANDBY) (D915:AUS)	
				D121	8-719-987-63	DIODE 1N4148M	

DISPLAY**(F) JOINT****(F) VIDEO****HEADPHONE**

Ref.No.	Part No.	Description	Remark
R122	1-249-411-11	CARBON 330 5% 1/4W	
R123	1-249-411-11	CARBON 330 5% 1/4W	
R124	1-249-411-11	CARBON 330 5% 1/4W	
R125	1-249-411-11	CARBON 330 5% 1/4W	
R126	1-249-411-11	CARBON 330 5% 1/4W	
R127	1-249-411-11	CARBON 330 5% 1/4W	
R128	1-249-411-11	CARBON 330 5% 1/4W	
R131	1-249-433-11	CARBON 22K 5% 1/4W	
R132	1-249-433-11	CARBON 22K 5% 1/4W	
R133	1-249-433-11	CARBON 22K 5% 1/4W	
R134	1-249-433-11	CARBON 22K 5% 1/4W	
R135	1-249-433-11	CARBON 22K 5% 1/4W	
R136	1-249-433-11	CARBON 22K 5% 1/4W	
R137	1-249-433-11	CARBON 22K 5% 1/4W	
R138	1-249-433-11	CARBON 22K 5% 1/4W	
R139	1-249-437-11	CARBON 47K 5% 1/4W	
R140	1-249-437-11	CARBON 47K 5% 1/4W	
R141	1-249-437-11	CARBON 47K 5% 1/4W	
R146	1-249-437-11	CARBON 47K 5% 1/4W	
< SWITCH >			
S101	1-554-303-21	SWITCH, TACTILE (POWER)	
S102	1-554-303-21	SWITCH, TACTILE (MEMORY)	
S103	1-554-303-21	SWITCH, TACTILE (DISPLAY)	
S104	1-554-303-21	SWITCH, TACTILE (LEVEL)	
S105	1-554-303-21	SWITCH, TACTILE (FM/AM)	
S106	1-554-303-21	SWITCH, TACTILE (+)	
S107	1-554-303-21	SWITCH, TACTILE (-)	
S108	1-554-303-21	SWITCH, TACTILE (+)	
S109	1-554-303-21	SWITCH, TACTILE (-)	
S110	1-554-303-21	SWITCH, TACTILE (ON/OFF)	
S112	1-554-303-21	SWITCH, TACTILE (FM MODE)	
S114	1-554-303-21	SWITCH, TACTILE (△)	
S115	1-554-303-21	SWITCH, TACTILE (▽)	
S116	1-554-303-21	SWITCH, TACTILE (3)	
S117	1-554-303-21	SWITCH, TACTILE (6)	
S118	1-554-303-21	SWITCH, TACTILE (9)	
S119	1-554-303-21	SWITCH, TACTILE (SHIFT)	
S121	1-554-303-21	SWITCH, TACTILE (<=)	
S122	1-554-303-21	SWITCH, TACTILE (>=)	
S123	1-554-303-21	SWITCH, TACTILE (2)	
S124	1-554-303-21	SWITCH, TACTILE (5)	
S125	1-554-303-21	SWITCH, TACTILE (8)	
S126	1-554-303-21	SWITCH, TACTILE (0)	
S128	1-554-303-21	SWITCH, TACTILE (TONE ON/DEFEAT)	
S130	1-554-303-21	SWITCH, TACTILE (DPC MODE)	
S131	1-554-303-21	SWITCH, TACTILE (1)	
S132	1-554-303-21	SWITCH, TACTILE (4)	
S133	1-554-303-21	SWITCH, TACTILE (7)	
S134	1-554-303-21	SWITCH, TACTILE (DIRECT)	
S137	1-554-303-21	SWITCH, TACTILE (CENTER MODE)	

Ref.No.	Part No.	Description	Remark
S138	1-554-303-21	SWITCH, TACTILE (PHONO)	
S139	1-554-303-21	SWITCH, TACTILE (TUNER)	
S140	1-554-303-21	SWITCH, TACTILE (CD)	
S141	1-554-303-21	SWITCH, TACTILE (DAT/MD)	
S142	1-554-303-21	SWITCH, TACTILE (VIDEO2) (D715)	
S142	1-554-303-21	SWITCH, TACTILE (VIDEO3) (D915)	
S144	1-554-303-21	SWITCH, TACTILE (MODE)	
S145	1-554-303-21	SWITCH, TACTILE (TAPE MONITOR) (D715)	
S145	1-554-303-21	SWITCH, TACTILE (VIDEO1) (D915)	
S146	1-554-303-21	SWITCH, TACTILE (VIDEO1) (D715)	
S146	1-554-303-21	SWITCH, TACTILE (VIDEO2) (D915)	
S147	1-554-303-21	SWITCH, TACTILE (LD)	
S148	1-554-303-21	SWITCH, TACTILE (TV)	
S149	1-554-303-21	SWITCH, TACTILE (TAPE MONITOR) (D915)	

*	1-652-309-11	(F) JOINT BOARD	

< CONNECTOR >			
*	CNP904	1-565-480-11 CONNECTOR, BOARD TO BOARD 4P	
< DIODE >			
D101	8-719-014-66	DIODE UZP-5.6B	

*	1-652-307-11	(F) VIDEO BOARD (D915)	

< CONNECTOR >			
CNJ501	1-766-206-11	JACK, PIN 3P (VIDEO3 INPUT)	
CNP252	1-766-203-11	PLUG, CONNECTOR PIN (PC BOARD) 5P	
< RESISTOR >			
R267	1-247-804-11	CARBON 75 5% 1/4W	
R535	1-249-417-11	CARBON 1K 5% 1/4W F	
R585	1-249-417-11	CARBON 1K 5% 1/4W F	

*	1-652-301-11	HEADPHONE BOARD	

< JACK >			
J700	1-568-498-31	JACK, LARGE TYPE (HEADPHONES)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-4369-953-A	MAIN BOARD, COMPLETE (D915:US) *****		C656	1-164-040-11	CERAMIC 4PF 0.25PF 50V	
*	A-4369-962-A	MAIN BOARD, COMPLETE (D915:CND) *****		C657	1-124-443-00	ELECT 100uF 20% 10V	
*	A-4369-971-A	MAIN BOARD, COMPLETE (D715:US) *****		C658	1-124-477-11	ELECT 47uF 20% 25V	
*	A-4369-973-A	MAIN BOARD, COMPLETE (D715:CND) *****		C659	1-124-916-11	ELECT 22uF 20% 63V	
*	A-4371-665-A	MAIN BOARD, COMPLETE (D915:AUS) *****		C660	1-161-959-00	CERAMIC 22PF 10% 500V	
	1-533-217-31	HOLDER, FUSE		C661	1-161-959-00	CERAMIC 22PF 10% 500V	
	1-533-233-11	HOLDER, FUSE (D915:US, CND)		C662	1-136-165-00	FILM 0.1uF 5% 50V	
	1-533-293-11	FUSE HOLDER		C663	1-136-157-00	FILM 0.022uF 5% 50V	(D715:US/D915:US, AUS)
*	4-942-204-01	PLATE, GROUND		C663	1-136-161-00	FILM 0.047uF 5% 50V	(D715:CND/D915:CND)
	7-682-548-04	SCREW +BVT 3X8 (S)		C664	1-136-161-00	FILM 0.047uF 5% 50V	(D715:CND/D915:CND)
	< CAPACITOR >			C667	1-136-165-00	FILM 0.1uF 5% 50V	
C501	1-162-282-31	CERAMIC 100PF 10% 50V		C701	1-124-927-11	ELECT 4.7uF 20% 100V	
C502	1-124-927-11	ELECT 4.7uF 20% 100V		C702	1-162-288-31	CERAMIC 330PF 10% 50V	
C503	1-162-282-31	CERAMIC 100PF 10% 50V		C703	1-102-989-00	CERAMIC 68PF 5% 500V	
C504	1-124-477-11	ELECT 47uF 20% 25V		C704	1-102-989-00	CERAMIC 68PF 5% 500V	
C505	1-130-480-00	MYLAR 0.0056uF 5% 50V		C705	1-124-916-11	ELECT 22uF 20% 63V	
C506	1-130-473-00	MYLAR 0.0015uF 5% 50V		C706	1-124-443-00	ELECT 100uF 20% 10V	
C507	1-124-903-11	ELECT 1uF 20% 50V		C707	1-164-040-11	CERAMIC 4PF 0.25PF 50V	
C508	1-124-477-11	ELECT 47uF 20% 25V		C708	1-124-477-11	ELECT 47uF 20% 25V	
C530	1-162-294-31	CERAMIC 0.001uF 10% 50V		C709	1-161-959-00	CERAMIC 22PF 10% 500V	
C532	1-124-927-11	ELECT 4.7uF 20% 100V		C710	1-161-959-00	CERAMIC 22PF 10% 500V	
C540	1-124-907-11	ELECT 10uF 20% 50V		C711	1-136-165-00	FILM 0.1uF 5% 50V	
C551	1-162-282-31	CERAMIC 100PF 10% 50V		C712	1-136-165-00	FILM 0.1uF 5% 50V	
C552	1-124-927-11	ELECT 4.7uF 20% 100V		C713	1-136-157-00	FILM 0.022uF 5% 50V	(D715:US/D915:US, AUS)
C553	1-162-282-31	CERAMIC 100PF 10% 50V		C713	1-136-161-00	FILM 0.047uF 5% 50V	(D715:CND/D915:CND)
C554	1-124-477-11	ELECT 47uF 20% 25V		C714	1-136-161-00	FILM 0.047uF 5% 50V	(D715:CND/D915:CND)
C555	1-130-480-00	MYLAR 0.0056uF 5% 50V		C715	1-162-282-31	CERAMIC 100PF 10% 50V	
C556	1-130-473-00	MYLAR 0.0015uF 5% 50V		C721	1-136-169-00	FILM 0.22uF 5% 50V	
C557	1-124-903-11	ELECT 1uF 20% 50V		C722	1-124-471-00	ELECT 1000uF 20% 6.3V	
C558	1-124-477-11	ELECT 47uF 20% 25V		C751	1-124-927-11	ELECT 4.7uF 20% 100V	
C621	1-124-927-11	ELECT 4.7uF 20% 100V		C752	1-162-288-31	CERAMIC 330PF 10% 50V	
C622	1-162-282-31	CERAMIC 100PF 10% 50V		C753	1-102-989-00	CERAMIC 68PF 5% 500V	
C623	1-162-282-31	CERAMIC 100PF 10% 50V		C754	1-102-989-00	CERAMIC 68PF 5% 500V	
C625	1-124-925-11	ELECT 2.2uF 20% 100V		C755	1-124-916-11	ELECT 22uF 20% 63V	
C627	1-136-157-00	FILM 0.022uF 5% 50V		C756	1-124-443-00	ELECT 100uF 20% 10V	
C628	1-164-159-11	CERAMIC 0.1uF 50V		C757	1-164-040-11	CERAMIC 4PF 0.25PF 50V	
C629	1-124-927-11	ELECT 4.7uF 20% 100V		C758	1-124-477-11	ELECT 47uF 20% 25V	
C651	1-124-927-11	ELECT 4.7uF 20% 100V		C759	1-161-959-00	CERAMIC 22PF 10% 500V	
C652	1-162-288-31	CERAMIC 330PF 10% 50V		C760	1-161-959-00	CERAMIC 22PF 10% 500V	
C653	1-102-989-00	CERAMIC 68PF 5% 500V		C761	1-136-165-00	FILM 0.1uF 5% 50V	
C654	1-102-989-00	CERAMIC 68PF 5% 500V		C762	1-136-165-00	FILM 0.1uF 5% 50V	
C655	1-124-916-11	ELECT 22uF 20% 63V		C763	1-136-157-00	FILM 0.022uF 5% 50V	(D715:US/D915:US, AUS)
				C763	1-136-161-00	FILM 0.047uF 5% 50V	(D715:CND/D915:CND)

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C764	1-136-161-00	FILM	0.047uF 5% 50V (D715:CND/D915:CND)	D703	8-719-815-85	DIODE	1S1585
C971	1-109-932-11	ELECT	10000uF 20% 71V (D915:US, CND)	D704	8-719-815-85	DIODE	1S1585
C971	1-125-729-11	ELECT	10000uF 20% 63V (D715/D915:AUS)	D705	8-719-987-63	DIODE	1N4148M
C972	1-109-932-11	ELECT	10000uF 20% 71V (D915:US, CND)	D706	8-719-987-63	DIODE	1N4148M
C972	1-125-729-11	ELECT	10000uF 20% 63V (D715/D915:AUS)	D753	8-719-815-85	DIODE	1S1585
C973	1-164-097-11	CERAMIC	0.022uF 50V	D754	8-719-815-85	DIODE	1S1585
C974	1-164-097-11	CERAMIC	0.022uF 50V	D910	8-719-987-63	DIODE	1N4148M
C975	1-124-618-11	ELECT	2200uF 20% 35V	D911	8-719-987-63	DIODE	1N4148M
C976	1-126-105-11	ELECT	1000uF 20% 35V	D971	8-719-302-38	DIODE	RBV-602-01
C977	1-124-618-11	ELECT	2200uF 20% 35V	D973	8-719-312-09	DIODE	RBA-402
C978	1-124-618-11	ELECT	2200uF 20% 35V	D974	8-719-002-76	DIODE	UZL-36H
C979	1-124-477-11	ELECT	47uF 20% 25V	D975	8-719-987-63	DIODE	1N4148M
C980	1-124-477-11	ELECT	47uF 20% 25V	< IC >			
C981	1-124-472-11	ELECT	470uF 20% 10V	IC501	8-759-634-51	IC	M5218AP
C982	1-124-907-11	ELECT	10uF 20% 50V	IC502	8-759-805-14	IC	LC7822
C983	1-124-907-11	ELECT	10uF 20% 50V	IC503	8-759-805-14	IC	LC7822
C985	1-124-903-11	ELECT	1uF 20% 50V	IC601	8-749-010-16	IC	STK350-130
C988	1-102-394-11	CERAMIC	0.01uF 250V	IC621	8-759-502-33	IC	SI-18752
C989	1-102-394-11	CERAMIC	0.01uF 250V	IC701	8-749-920-70	IC	STK3102-MK3
< CONNECTOR >				IC971	8-759-263-43	IC	TA78M12S
CNJ502	1-691-887-11	JACK, PIN 6P (PHONO, CD, DAT/MD)		IC972	8-759-604-45	IC	M5F79M12L
CNJ503	1-580-825-11	JACK, PIN 6P (DAT/MD, TV, LD)		IC973	8-759-604-35	IC	M5F78M05L
CNJ504	1-580-825-11	JACK, PIN 6P (VIDEO1, VIDEO2)		< COIL >			
CNJ505	1-580-825-11	JACK, PIN 6P (VIDEO1, TAPE MONITOR)		L621	1-420-872-00	COIL, AIR CORE	
CNP301	1-691-161-11	PIN, CONNECTOR 4P		L651	1-420-872-00	COIL, AIR CORE	
CNP302	1-691-168-11	PIN, CONNECTOR 11P		L701	1-420-872-00	COIL, AIR CORE	
CNP303	1-691-165-11	PIN, CONNECTOR 8P		L751	1-420-872-00	COIL, AIR CORE	
* CNP701	1-564-509-11	PLUG, CONNECTOR 6P		< TRANSISTOR >			
CNP702	1-691-773-11	PLUG (MICRO CONNECTOR) 11P		Q531	8-729-141-30	TRANSISTOR	2SC3623A-LK
CNP801	1-691-765-11	PLUG (MICRO CONNECTOR) 3P		Q532	8-729-900-36	TRANSISTOR	DTC124ES
CNP802	1-691-768-11	PLUG (MICRO CONNECTOR) 6P		Q581	8-729-141-30	TRANSISTOR	2SC3623A-LK
CNS252	1-766-200-11	SOCKET, CONNECTOR PIN 5P (D915)		Q614	8-729-119-79	TRANSISTOR	2SC2785-FEK
< FUSE >				Q643	8-729-119-79	TRANSISTOR	2SC2785-FEK
△F973	1-532-748-11	FUSE, GLASS TUBE(6.3A/125V) (EXCEPT D915:AUS)		Q655	8-729-026-08	TRANSISTOR	2SC4495
△F974	1-532-748-11	FUSE, GLASS TUBE(6.3A/125V) (EXCEPT D915:AUS)		Q658	8-729-022-16	TRANSISTOR	2SD2390-OPY-M (D715)
< DIODE >				Q658	8-749-010-25	TRANSISTOR	MN2488-OPY-M (D915)
D540	8-719-987-63	DIODE	1N4148M	Q659	8-729-022-15	TRANSISTOR	2SB1560-OPY-M (D715)
D641	8-719-987-63	DIODE	1N4148M	Q659	8-749-010-26	TRANSISTOR	MP1620-OPY-M (D915)
D645	8-719-987-63	DIODE	1N4148M	Q661	8-729-140-82	TRANSISTOR	2SA988-PAFAEA
D652	8-719-815-85	DIODE	1S1585	Q662	8-729-140-82	TRANSISTOR	2SA988-PAFAEA
D653	8-719-815-85	DIODE	1S1585	Q701	8-729-026-08	TRANSISTOR	2SC4495
				Q705	8-729-022-16	TRANSISTOR	2SD2390-OPY-M (D715)
				Q705	8-749-010-25	TRANSISTOR	MN2488-OPY-M (D915)
				Q706	8-729-022-15	TRANSISTOR	2SB1560-OPY-M (D715)
				Q706	8-749-010-26	TRANSISTOR	MP1620-OPY-M (D915)
				Q707	8-729-140-82	TRANSISTOR	2SA988-PAFAEA
				Q708	8-729-140-82	TRANSISTOR	2SA988-PAFAEA
				Q719	8-729-119-79	TRANSISTOR	2SC2785-FEK

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q721	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA	R562	1-249-417-11	CARBON	1K 5% 1/4W F
Q722	8-729-119-79	TRANSISTOR	2SC2785-FEK	R563	1-249-417-11	CARBON	1K 5% 1/4W F
Q723	8-729-119-79	TRANSISTOR	2SC2785-FEK	R564	1-249-417-11	CARBON	1K 5% 1/4W F
Q751	8-729-026-08	TRANSISTOR	2SC4495	R565	1-249-417-11	CARBON	1K 5% 1/4W F
Q755	8-729-022-16	TRANSISTOR	2SD2390-OPY-M (D715)	R566	1-249-417-11	CARBON	1K 5% 1/4W F
Q755	8-749-010-25	TRANSISTOR	MN2488-OPY-M (D915)	R567	1-249-417-11	CARBON	1K 5% 1/4W F
Q756	8-729-022-15	TRANSISTOR	2SB1560-OPY-M (D715)	R568	1-249-417-11	CARBON	1K 5% 1/4W F
Q756	8-749-010-26	TRANSISTOR	MP1620-OPY-M (D915)	R569	1-249-417-11	CARBON	1K 5% 1/4W F
Q757	8-729-140-82	TRANSISTOR	2SA988-PAFAEA	R570	1-249-429-11	CARBON	10K 5% 1/4W
Q758	8-729-140-82	TRANSISTOR	2SA988-PAFAEA	R582	1-247-807-31	CARBON	100 5% 1/4W
Q971	8-729-140-96	TRANSISTOR	2SD774-34	R595	1-249-437-11	CARBON	47K 5% 1/4W
Q972	8-729-119-79	TRANSISTOR	2SC2785-FEK	R621	1-249-417-11	CARBON	1K 5% 1/4W F
< RESISTOR >				R622	1-249-439-11	CARBON	68K 5% 1/4W
R501	1-249-411-11	CARBON	330 5% 1/4W	R623	1-249-417-11	CARBON	1K 5% 1/4W F
R502	1-249-441-11	CARBON	100K 5% 1/4W	R624	1-249-439-11	CARBON	68K 5% 1/4W
R503	1-249-441-11	CARBON	100K 5% 1/4W	R628	1-249-389-11	CARBON	4.7 5% 1/4W F
R504	1-249-416-11	CARBON	820 5% 1/4W F	△R629	1-249-393-11	CARBON	10 5% 1/4W F
R505	1-247-897-11	CARBON	560K 5% 1/4W	R630	1-249-429-11	CARBON	10K 5% 1/4W
R506	1-249-437-11	CARBON	47K 5% 1/4W	R641	1-249-421-11	CARBON	2.2K 5% 1/4W F
R507	1-249-441-11	CARBON	100K 5% 1/4W	R643	1-249-421-11	CARBON	2.2K 5% 1/4W F
R508	1-249-409-11	CARBON	220 5% 1/4W F	R651	1-249-417-11	CARBON	1K 5% 1/4W F
R509	1-249-421-11	CARBON	2.2K 5% 1/4W F	R652	1-249-438-11	CARBON	56K 5% 1/4W
R510	1-249-417-11	CARBON	1K 5% 1/4W F	R653	1-249-413-11	CARBON	470 5% 1/4W F
R511	1-249-417-11	CARBON	1K 5% 1/4W F	△R654	1-249-401-11	CARBON	47 5% 1/4W F
R512	1-249-417-11	CARBON	1K 5% 1/4W F	△R655	1-249-401-11	CARBON	47 5% 1/4W F
R513	1-249-417-11	CARBON	1K 5% 1/4W F	R661	1-249-438-11	CARBON	56K 5% 1/4W
R514	1-249-417-11	CARBON	1K 5% 1/4W F	R662	1-249-414-11	CARBON	560 5% 1/4W F
R515	1-249-417-11	CARBON	1K 5% 1/4W F	R663	1-249-417-11	CARBON	1K 5% 1/4W F
R516	1-249-417-11	CARBON	1K 5% 1/4W F	△R664	1-249-393-11	CARBON	10 5% 1/4W F
R517	1-249-417-11	CARBON	1K 5% 1/4W F	R667	1-249-411-11	CARBON	330 5% 1/4W
R518	1-249-417-11	CARBON	1K 5% 1/4W F	△R668	1-249-393-11	CARBON	10 5% 1/4W F
R519	1-249-417-11	CARBON	1K 5% 1/4W F	R669	1-249-424-11	CARBON	3.9K 5% 1/4W F
R520	1-249-429-11	CARBON	10K 5% 1/4W	R670	1-249-424-11	CARBON	3.9K 5% 1/4W F
R530	1-249-425-11	CARBON	4.7K 5% 1/4W F	R671	1-249-425-11	CARBON	4.7K 5% 1/4W F
R532	1-247-807-31	CARBON	100 5% 1/4W	△R672	1-239-912-21	ENCAPSULATED COMPONENT	0.22 2W
R533	1-249-421-11	CARBON	2.2K 5% 1/4W F	R674	1-249-425-11	CARBON	4.7K 5% 1/4W F
R540	1-249-429-11	CARBON	10K 5% 1/4W	R675	1-249-431-11	CARBON	15K 5% 1/4W
R545	1-249-437-11	CARBON	47K 5% 1/4W	R676	1-249-431-11	CARBON	15K 5% 1/4W
R551	1-249-411-11	CARBON	330 5% 1/4W	R677	1-260-072-11	CARBON	4.7 5% 1/2W
R552	1-249-441-11	CARBON	100K 5% 1/4W	R678	1-249-433-11	CARBON	22K 5% 1/4W
R553	1-249-441-11	CARBON	100K 5% 1/4W	R679	1-260-076-11	CARBON	10 5% 1/2W
R554	1-249-416-11	CARBON	820 5% 1/4W F	R701	1-249-417-11	CARBON	1K 5% 1/4W F
R555	1-247-897-11	CARBON	560K 5% 1/4W	R702	1-249-438-11	CARBON	56K 5% 1/4W
R556	1-249-437-11	CARBON	47K 5% 1/4W	R703	1-249-413-11	CARBON	470 5% 1/4W F
R557	1-249-441-11	CARBON	100K 5% 1/4W	△R704	1-249-397-11	CARBON	22 5% 1/4W F
R558	1-249-409-11	CARBON	220 5% 1/4W F	R705	1-249-413-11	CARBON	470 5% 1/4W F
R559	1-249-421-11	CARBON	2.2K 5% 1/4W F	R706	1-249-438-11	CARBON	56K 5% 1/4W
R560	1-249-417-11	CARBON	1K 5% 1/4W F	R707	1-249-417-11	CARBON	1K 5% 1/4W F
R561	1-249-417-11	CARBON	1K 5% 1/4W F	R708	1-249-411-11	CARBON	330 5% 1/4W
				△R709	1-249-393-11	CARBON	10 5% 1/4W F

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

MAIN

MAIN VOLUME

MUTING

POWER SUPPLY

Ref.No.	Part No.	Description	Remark
△R710	1-249-393-11	CARBON 10 5% 1/4W F	
R711	1-249-424-11	CARBON 3.9K 5% 1/4W F	
R712	1-249-424-11	CARBON 3.9K 5% 1/4W F	
△R715	1-239-912-21	ENCAPSULATED COMPONENT 0.22 2W	
R717	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R718	1-249-431-11	CARBON 15K 5% 1/4W	
R719	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R720	1-249-431-11	CARBON 15K 5% 1/4W	
R721	1-260-072-11	CARBON 4.7 5% 1/2W	
R722	1-260-076-11	CARBON 10 5% 1/2W	
R725	1-249-417-11	CARBON 1K 5% 1/4W F	
R726	1-249-429-11	CARBON 10K 5% 1/4W	
R727	1-249-439-11	CARBON 68K 5% 1/4W	
R728	1-249-436-11	CARBON 39K 5% 1/4W	
R729	1-249-434-11	CARBON 27K 5% 1/4W	
R730	1-249-433-11	CARBON 22K 5% 1/4W	
R731	1-249-437-11	CARBON 47K 5% 1/4W	
R751	1-249-417-11	CARBON 1K 5% 1/4W F	
R752	1-249-438-11	CARBON 56K 5% 1/4W	
R753	1-249-413-11	CARBON 470 5% 1/4W F	
△R754	1-249-397-11	CARBON 22 5% 1/4W F	
R755	1-249-413-11	CARBON 470 5% 1/4W F	
R756	1-249-438-11	CARBON 56K 5% 1/4W	
R757	1-249-417-11	CARBON 1K 5% 1/4W F	
R758	1-249-411-11	CARBON 330 5% 1/4W	
△R759	1-249-393-11	CARBON 10 5% 1/4W F	
△R760	1-249-393-11	CARBON 10 5% 1/4W F	
R761	1-249-424-11	CARBON 3.9K 5% 1/4W F	
R762	1-249-424-11	CARBON 3.9K 5% 1/4W F	
△R765	1-239-912-21	ENCAPSULATED COMPONENT 0.22 2W	
R767	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R768	1-249-431-11	CARBON 15K 5% 1/4W	
R769	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R770	1-249-431-11	CARBON 15K 5% 1/4W	
R771	1-260-072-11	CARBON 4.7 5% 1/2W	
R772	1-260-076-11	CARBON 10 5% 1/2W	
△R971	1-215-906-11	METAL OXIDE 15 5% 3W F	
△R972	1-215-909-11	METAL OXIDE 47 5% 3W F	
△R973	1-215-909-11	METAL OXIDE 47 5% 3W F	
△R975	1-249-409-11	CARBON 220 5% 1/4W F	
R976	1-249-426-11	CARBON 5.6K 5% 1/4W	
R977	1-249-421-11	CARBON 2.2K 5% 1/4W F	

< RELAY >

RY541	1-515-614-11	RELAY
RY641	1-515-533-11	RELAY
RY643	1-515-765-11	RELAY
RY701	1-515-765-11	RELAY
RY902	1-515-894-11	RELAY (D715:US/D915:US, AUS)
RY903	1-515-918-11	RELAY (D715:CND/D915:CND)

RY904	1-515-918-11	RELAY (D715:CND/D915:CND)	

*	1-652-305-11	MAIN VOLUME BOARD	

< CAPACITOR >			
C598	1-124-903-11	ELECT 1uF	20% 50V
C599	1-124-903-11	ELECT 1uF	20% 50V
< CONNECTOR >			
* CNP510	1-564-521-11	PLUG, CONNECTOR 6P	
CNS511	1-766-201-11	SOCKET, CONNECTOR PIN 11P	
< RESISTOR >			
R599	1-249-409-11	CARBON 220 5% 1/4W F	
< VARIABLE RESISTOR >			
RV503	1-241-816-11	RES, VAR, CARBON 100KX4 (MASTER VOLUME)	

*	1-652-297-11	MUTING BOARD	

< CONNECTOR >			
* CNP101	1-569-798-11	PLUG, CONNECTOR 6P	
< DIODE >			
D109	8-719-301-49	LED SEL2810A (MUTING -20dB)	
D110	8-719-301-49	LED SEL2810A (LOW BOOST)	
< RESISTOR >			
R147	1-249-410-11	CARBON 270 5% 1/4W F	
R148	1-249-410-11	CARBON 270 5% 1/4W F	
< SWITCH >			
S113	1-554-303-21	SWITCH, TACTILE (MUTING -20dB)	
S120	1-554-303-21	SWITCH, TACTILE (LOW BOOST)	

*	A-4369-957-A	POWER SUPPLY BOARD, COMPLETE	

(EXCEPT D915:AUS)			
*	A-4369-966-A	POWER SUPPLY BOARD, COMPLETE (D915:AUS)	

1-533-293-11 FUSE HOLDER			
*	4-942-204-01	PLATE, GROUND	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

POWER SUPPLY

PT1

PT2

Ref. No.	Part No.	Description	Remark
	7-682-548-04	SCREW +BVT 3X8 (S)	
		< BASE POST >	
* BP903	1-535-139-00	BASE POST 19MM (10MM PITCH) 2P	
		< CAPACITOR >	
C951	1-164-097-11	CERAMIC 0.022uF	50V
C952	1-164-097-11	CERAMIC 0.022uF	50V
C953	1-124-557-11	ELECT 1000uF 20%	25V
C954	1-162-282-31	CERAMIC 100PF 10%	50V
C955	1-124-477-11	ELECT 47uF 20%	25V
C956	1-124-477-11	ELECT 47uF 20%	25V
C957	1-124-903-11	ELECT 1uF 20%	50V
C958	1-164-097-11	CERAMIC 0.022uF	50V
C959	1-124-464-11	ELECT 0.22uF 20%	50V
C960	1-161-494-00	CERAMIC 0.022uF	25V
		< CONNECTOR >	
△CNJ901	1-540-060-11	OUTLET, AC (POLAR) (AC OUTLET)	(EXCEPT D915:AUS)
CNP901	1-564-321-00	PIN, CONNECTOR 2P	
* CNP903	1-565-495-11	CONNECTOR, BOARD TO BOARD 4P	
CNP912	1-564-321-00	PIN, CONNECTOR 2P (D915:AUS)	
		< DIODE >	
D951	8-719-024-99	DIODE 11ES2	
D952	8-719-024-99	DIODE 11ES2	
D953	8-719-024-99	DIODE 11ES2	
D954	8-719-024-99	DIODE 11ES2	
D955	8-719-987-63	DIODE 1N4148M	
D956	8-719-987-63	DIODE 1N4148M	
D957	8-719-933-41	DIODE HZS6C3L	
D958	8-719-987-63	DIODE 1N4148M	
D959	8-719-933-41	DIODE HZS6C3L	
D960	8-719-985-53	DIODE HZS4ALL	
		< FUSE >	
△F902	1-532-237-00	FUSE, TIME LAG (T3.15A/250V) (D915:AUS)	
△F902	1-532-748-11	FUSE, GLASS TUBE (6.3A/125V)	(EXCEPT D915:AUS)
△F903	1-532-286-00	FUSE (T2.5A/250V) (D915:AUS)	
		< TRANSISTOR >	
Q951	8-729-209-15	TRANSISTOR 2SD2012	
Q952	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q953	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q954	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q955	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q956	8-729-119-79	TRANSISTOR 2SC2785-FEK	

Ref. No.	Part No.	Description	Remark
		< RESISTOR >	
△R901	1-202-725-00	SOLID 3.3M 10% 1/2W	(EXCEPT D915:AUS)
R951	1-249-396-11	CARBON 18 5% 1/4W F	
R952	1-249-417-11	CARBON 1K 5% 1/4W F	
R953	1-249-437-11	CARBON 47K 5% 1/4W	
R954	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R955	1-249-433-11	CARBON 22K 5% 1/4W	
R956	1-249-429-11	CARBON 10K 5% 1/4W	
R957	1-249-417-11	CARBON 1K 5% 1/4W F	
R958	1-249-429-11	CARBON 10K 5% 1/4W	
R959	1-249-429-11	CARBON 10K 5% 1/4W	
R960	1-249-426-11	CARBON 5.6K 5% 1/4W	
R961	1-249-417-11	CARBON 1K 5% 1/4W F	
R962	1-249-426-11	CARBON 5.6K 5% 1/4W	
		< RELAY >	
△RY901	1-515-701-11	RELAY (EXCEPT D915:AUS)	
△RY901	1-515-701-21	RELAY (D915:AUS)	
		< TRANSFORMER >	
△T901	1-450-358-11	TRANSFORMER, POWER (D915:AUS)	
△T901	1-450-361-11	TRANSFORMER, POWER (EXCEPT D915:AUS)	

*	1-652-303-11	PT1 BOARD	*****

*	1-652-299-11	PT2 BOARD (EXCEPT D915:AUS)	*****

*	1-652-300-11	PT2 BOARD (D915:AUS)	*****

		< CONNECTOR >	
CNP806	1-691-771-11	PLUG (MICRO CONNECTOR) 9P	
		< FUSE >	
△F971	1-532-237-00	FUSE, TIME LAG (T3.15A/250V) (D915:AUS)	
△F971	1-576-107-11	FUSE (3.15A/250V) (EXCEPT D915:AUS)	
△F972	1-532-237-00	FUSE, TIME LAG (T3.15A/250V) (D915:AUS)	
△F972	1-576-107-11	FUSE (3.15A/250V) (EXCEPT D915:AUS)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SPEAKER TERMINAL

SURROUND

Ref.No.	Part No.	Description	Remark
*	1-652-308-11	SPEAKER TERMINAL BOARD *****	
		< CONNECTOR >	
* CNP703	1-564-518-11	PLUG, CONNECTOR 3P	
CNP704	1-691-773-11	PLUG (MICRO CONNECTOR) 11P	
		< RESISTOR >	
△R723	1-216-431-11	METAL OXIDE 560 5% 1W F	
△R773	1-216-431-11	METAL OXIDE 560 5% 1W F	
		< SWITCH >	
S701	1-572-322-11	SWITCH, SLIDE (SPEAKERS)	
S710	1-692-196-11	SWITCH, SLIDE (IMPEDANCE SELECTOR) (D915)	
		< TERMINAL >	
TM701	1-537-376-11	TERMINAL BOARD (SP) (FRONT SPEAKERS)	
TM702	1-537-510-11	TERMINAL BOARD (SPEAKER) (6P) (SURROUND SPEAKERS)	

*	A-4369-951-A	SURROUND BOARD, COMPLETE *****	
		< CAPACITOR >	
C201	1-161-379-00	CERAMIC 0.01uF 20% 25V	
C202	1-124-477-11	ELECT 47uF 20% 25V	
C203	1-161-379-00	CERAMIC 0.01uF 20% 25V	
C204	1-124-903-11	ELECT 1uF 20% 50V	
C206	1-104-905-11	DOUBLE LAYERS 0.22F 5.5V	
C207	1-161-379-00	CERAMIC 0.01uF 20% 25V	
C208	1-124-925-11	ELECT 2.2uF 20% 100V	
C209	1-161-379-00	CERAMIC 0.01uF 20% 25V	
C301	1-124-119-00	ELECT 330uF 20% 16V	
C302	1-124-120-11	ELECT 220uF 20% 25V	
C303	1-136-159-00	FILM 0.033uF 5% 50V	
C304	1-130-473-00	MYLAR 0.0015uF 5% 50V	
C305	1-136-159-00	FILM 0.033uF 5% 50V	
C306	1-124-903-11	ELECT 1uF 20% 50V	
C307	1-124-907-11	ELECT 10uF 20% 50V	
C308	1-124-907-11	ELECT 10uF 20% 50V	
C310	1-124-927-11	ELECT 4.7uF 20% 100V	
C311	1-124-925-11	ELECT 2.2uF 20% 100V	
C313	1-164-159-11	CERAMIC 0.1uF 50V	
C315	1-136-159-00	FILM 0.033uF 5% 50V	
C316	1-124-907-11	ELECT 10uF 20% 50V	
C318	1-130-469-00	MYLAR 680PF 5% 50V	
C322	1-124-927-11	ELECT 4.7uF 20% 100V	
C323	1-136-173-00	FILM 0.47uF 5% 50V	
C324	1-124-910-11	ELECT 47uF 20% 50V	

Ref.No.	Part No.	Description	Remark
C325	1-136-165-00	FILM 0.1uF 5% 50V	
C326	1-136-165-00	FILM 0.1uF 5% 50V	
C327	1-124-902-00	ELECT 0.47uF 20% 50V	
C328	1-124-927-11	ELECT 4.7uF 20% 100V	
C329	1-124-902-00	ELECT 0.47uF 20% 50V	
C330	1-124-927-11	ELECT 4.7uF 20% 100V	
C331	1-124-250-00	ELECT 0.15uF 20% 50V	
C332	1-126-962-11	ELECT 3.3uF 20% 50V	
C333	1-124-250-00	ELECT 0.15uF 20% 50V	
C334	1-136-157-00	FILM 0.022uF 5% 50V	
C335	1-130-479-00	MYLAR 0.0047uF 5% 50V	
C336	1-124-120-11	ELECT 220uF 20% 25V	
C337	1-124-907-11	ELECT 10uF 20% 50V	
C338	1-124-907-11	ELECT 10uF 20% 50V	
C339	1-124-907-11	ELECT 10uF 20% 50V	
C340	1-124-907-11	ELECT 10uF 20% 50V	
C341	1-124-120-11	ELECT 220uF 20% 25V	
C342	1-126-962-11	ELECT 3.3uF 20% 50V	
C343	1-126-962-11	ELECT 3.3uF 20% 50V	
C344	1-136-165-00	FILM 0.1uF 5% 50V	
C345	1-136-165-00	FILM 0.1uF 5% 50V	
C346	1-124-902-00	ELECT 0.47uF 20% 50V	
C347	1-124-927-11	ELECT 4.7uF 20% 100V	
C348	1-124-902-00	ELECT 0.47uF 20% 50V	
C349	1-124-927-11	ELECT 4.7uF 20% 100V	
C350	1-124-250-00	ELECT 0.15uF 20% 50V	
C351	1-126-962-11	ELECT 3.3uF 20% 50V	
C352	1-124-250-00	ELECT 0.15uF 20% 50V	
C353	1-164-159-11	CERAMIC 0.1uF 50V	
C354	1-164-159-11	CERAMIC 0.1uF 50V	
C355	1-164-159-11	CERAMIC 0.1uF 50V	
C356	1-164-159-11	CERAMIC 0.1uF 50V	
C358	1-161-379-00	CERAMIC 0.01uF 20% 25V	
C359	1-124-927-11	ELECT 4.7uF 20% 100V	
C360	1-124-927-11	ELECT 4.7uF 20% 100V	
C401	1-164-159-11	CERAMIC 0.1uF 50V	
C404	1-136-171-00	FILM 0.33uF 5% 50V	
C405	1-136-159-00	FILM 0.033uF 5% 50V	
C406	1-124-927-11	ELECT 4.7uF 20% 100V	
C407	1-162-209-31	CERAMIC 27PF 5% 50V	
C408	1-124-477-11	ELECT 47uF 20% 25V	
C409	1-164-159-11	CERAMIC 0.1uF 50V	
C410	1-124-477-11	ELECT 47uF 20% 25V	
C411	1-136-154-00	FILM 0.012uF 5% 50V	
C412	1-136-163-00	FILM 0.068uF 5% 50V	
C413	1-130-476-00	MYLAR 0.0027uF 5% 50V	
C414	1-124-907-11	ELECT 10uF 20% 50V	
C415	1-136-157-00	FILM 0.022uF 5% 50V	
C416	1-124-927-11	ELECT 4.7uF 20% 100V	
C454	1-136-171-00	FILM 0.33uF 5% 50V	

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SURROUND

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
C455	1-136-159-00	FILM	0.033uF 5% 50V	Q210	8-729-900-63	TRANSISTOR DTA124ES	
C456	1-124-927-11	ELECT	4.7uF 20% 100V	Q211	8-729-900-63	TRANSISTOR DTA124ES	
C457	1-162-209-31	CERAMIC	27PF 5% 50V	Q212	8-729-900-63	TRANSISTOR DTA124ES	
C458	1-124-477-11	ELECT	47uF 20% 25V	Q213	8-729-900-63	TRANSISTOR DTA124ES	
C459	1-164-159-11	CERAMIC	0.1uF 50V	Q305	8-729-141-30	TRANSISTOR 2SC3623A-LK	
C460	1-124-477-11	ELECT	47uF 20% 25V	Q306	8-729-141-30	TRANSISTOR 2SC3623A-LK	
C461	1-136-154-00	FILM	0.012uF 5% 50V	Q307	8-729-141-30	TRANSISTOR 2SC3623A-LK	
C462	1-136-163-00	FILM	0.068uF 5% 50V	Q308	8-729-141-30	TRANSISTOR 2SC3623A-LK	
C463	1-130-476-00	MYLAR	0.0027uF 5% 50V	Q401	8-729-202-67	TRANSISTOR 2SK246-GR3	
C464	1-124-907-11	ELECT	10uF 20% 50V	Q402	8-729-141-30	TRANSISTOR 2SC3623A-LK	
C465	1-136-157-00	FILM	0.022uF 5% 50V	Q403	8-729-141-30	TRANSISTOR 2SC3623A-LK	
C822	1-124-477-11	ELECT	47uF 20% 25V	Q404	8-729-141-30	TRANSISTOR 2SC3623A-LK	
< FILTER >				Q451	8-729-202-67	TRANSISTOR 2SK246-GR3	
CF201	1-567-776-41	VIBRATOR, CERAMIC (6MHz)		Q452	8-729-141-30	TRANSISTOR 2SC3623A-LK	
< CONNECTOR >				Q453	8-729-141-30	TRANSISTOR 2SC3623A-LK	
CNP210	1-766-205-11	PLUG, CONNECTOR PIN 14P		Q454	8-729-141-30	TRANSISTOR 2SC3623A-LK	
CNP501	1-766-204-11	PLUG, CONNECTOR PIN 11P		Q808	8-729-180-92	TRANSISTOR 2SD809-K	
CNS102	1-568-838-11	SOCKET, CONNECTOR 21P		< RESISTOR >			
* CNS310	1-691-174-11	CONNECTOR (BOARD TO BOARD) 4P		R201	1-249-437-11	CARBON 47K 5% 1/4W	
CNS311	1-691-181-11	CONNECTOR (BOARD TO BOARD) 11P		R202	1-249-437-11	CARBON 47K 5% 1/4W	
CNS312	1-691-178-11	CONNECTOR (BOARD TO BOARD) 8P		R203	1-247-807-31	CARBON 100 5% 1/4W	
< DIODE >				R204	1-249-429-11	CARBON 10K 5% 1/4W	
D201	8-719-987-63	DIODE 1N4148M		R205	1-249-429-11	CARBON 10K 5% 1/4W	
D202	8-719-987-63	DIODE 1N4148M		R206	1-249-429-11	CARBON 10K 5% 1/4W	
D204	8-719-987-63	DIODE 1N4148M		R207	1-249-429-11	CARBON 10K 5% 1/4W	
D205	8-719-987-63	DIODE 1N4148M		R208	1-249-429-11	CARBON 10K 5% 1/4W	
D542	8-719-987-63	DIODE 1N4148M		R209	1-249-425-11	CARBON 4.7K 5% 1/4W	F
D817	8-719-001-30	DIODE UZL-9H3		R210	1-249-437-11	CARBON 47K 5% 1/4W	
< IC >				R211	1-249-421-11	CARBON 2.2K 5% 1/4W	F
IC201	8-759-820-62	IC LB1639		R212	1-249-437-11	CARBON 47K 5% 1/4W	
IC202	8-759-264-78	IC uPD75518GF-195-3B9		R213	1-249-423-11	CARBON 3.3K 5% 1/4W	F
IC300	8-759-168-98	IC LV1010N		R214	1-249-433-11	CARBON 22K 5% 1/4W	
IC301	8-759-248-74	IC LA2785		R215	1-249-425-11	CARBON 4.7K 5% 1/4W	F
IC302	8-759-634-51	IC M5218AP		R216	1-249-429-11	CARBON 10K 5% 1/4W	
IC401	8-759-072-32	IC TC9184P		R217	1-249-429-11	CARBON 10K 5% 1/4W	
IC412	8-759-634-51	IC M5218AP		R218	1-249-429-11	CARBON 10K 5% 1/4W	
< COIL >				R219	1-249-429-11	CARBON 10K 5% 1/4W	
L201	1-410-521-11	INDUCTOR 100uH		R220	1-249-429-11	CARBON 10K 5% 1/4W	
L301	1-410-521-11	INDUCTOR 100uH		R221	1-249-429-11	CARBON 10K 5% 1/4W	
L302	1-410-521-11	INDUCTOR 100uH		R222	1-249-429-11	CARBON 10K 5% 1/4W	
< TRANSISTOR >				R223	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q201	8-729-900-63	TRANSISTOR DTA124ES		R224	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q202	8-729-119-79	TRANSISTOR 2SC2785-FEK		R230	1-249-421-11	CARBON 2.2K 5% 1/4W	F
				R231	1-249-421-11	CARBON 2.2K 5% 1/4W	F
				R232	1-249-421-11	CARBON 2.2K 5% 1/4W	F
				R233	1-249-421-11	CARBON 2.2K 5% 1/4W	F
				R234	1-249-417-11	CARBON 1K 5% 1/4W	F
				R235	1-249-417-11	CARBON 1K 5% 1/4W	F
				R236	1-249-413-11	CARBON 470 5% 1/4W	F

SURROUND

TUNER VIDEO

Ref. No.	Part No.	Description	Remark
R237	1-249-413-11	CARBON	470 5% 1/4W F
R238	1-249-413-11	CARBON	470 5% 1/4W F
R239	1-249-413-11	CARBON	470 5% 1/4W F
R240	1-249-413-11	CARBON	470 5% 1/4W F
R241	1-249-413-11	CARBON	470 5% 1/4W F
R242	1-249-413-11	CARBON	470 5% 1/4W F
R243	1-249-413-11	CARBON	470 5% 1/4W F
R244	1-249-437-11	CARBON	47K 5% 1/4W
R245	1-249-437-11	CARBON	47K 5% 1/4W
R246	1-249-437-11	CARBON	47K 5% 1/4W
R247	1-249-437-11	CARBON	47K 5% 1/4W
R300	1-247-903-00	CARBON	1M 5% 1/4W
R301	1-249-411-11	CARBON	330 5% 1/4W
R302	1-249-431-11	CARBON	15K 5% 1/4W
R306	1-249-433-11	CARBON	22K 5% 1/4W
R307	1-249-436-11	CARBON	39K 5% 1/4W
R308	1-249-417-11	CARBON	1K 5% 1/4W F
R353	1-249-425-11	CARBON	4.7K 5% 1/4W F
R354	1-249-425-11	CARBON	4.7K 5% 1/4W F
R355	1-249-425-11	CARBON	4.7K 5% 1/4W F
R356	1-249-425-11	CARBON	4.7K 5% 1/4W F
R357	1-249-441-11	CARBON	100K 5% 1/4W
R358	1-249-441-11	CARBON	100K 5% 1/4W
R359	1-249-433-11	CARBON	22K 5% 1/4W
R360	1-249-430-11	CARBON	12K 5% 1/4W
R361	1-249-433-11	CARBON	22K 5% 1/4W
R362	1-249-433-11	CARBON	22K 5% 1/4W
R364	1-249-413-11	CARBON	470 5% 1/4W F
R365	1-249-413-11	CARBON	470 5% 1/4W F
R404	1-249-441-11	CARBON	100K 5% 1/4W
R405	1-249-423-11	CARBON	3.3K 5% 1/4W F
R406	1-247-883-00	CARBON	150K 5% 1/4W
R407	1-249-412-11	CARBON	390 5% 1/4W F
R408	1-249-427-11	CARBON	6.8K 5% 1/4W F
R409	1-249-427-11	CARBON	6.8K 5% 1/4W F
R410	1-249-440-11	CARBON	82K 5% 1/4W
R411	1-247-895-00	CARBON	470K 5% 1/4W
R412	1-249-419-11	CARBON	1.5K 5% 1/4W F
R413	1-249-425-11	CARBON	4.7K 5% 1/4W F
R414	1-247-897-11	CARBON	560K 5% 1/4W
R415	1-249-436-11	CARBON	39K 5% 1/4W
R416	1-249-434-11	CARBON	27K 5% 1/4W
R417	1-249-426-11	CARBON	5.6K 5% 1/4W
R418	1-249-418-11	CARBON	1.2K 5% 1/4W F
R419	1-249-417-11	CARBON	1K 5% 1/4W F
R420	1-247-807-31	CARBON	100 5% 1/4W
R421	1-249-417-11	CARBON	1K 5% 1/4W F
R422	1-249-417-11	CARBON	1K 5% 1/4W F
R426	1-249-425-11	CARBON	4.7K 5% 1/4W F
R427	1-249-441-11	CARBON	100K 5% 1/4W

Ref. No.	Part No.	Description	Remark
R428	1-249-435-11	CARBON	33K 5% 1/4W
R451	1-247-903-00	CARBON	1M 5% 1/4W
R454	1-249-441-11	CARBON	100K 5% 1/4W
R455	1-249-423-11	CARBON	3.3K 5% 1/4W F
R456	1-247-883-00	CARBON	150K 5% 1/4W
R457	1-249-412-11	CARBON	390 5% 1/4W F
R458	1-249-427-11	CARBON	6.8K 5% 1/4W F
R459	1-249-427-11	CARBON	6.8K 5% 1/4W F
R460	1-249-440-11	CARBON	82K 5% 1/4W
R461	1-247-895-00	CARBON	470K 5% 1/4W
R462	1-249-419-11	CARBON	1.5K 5% 1/4W F
R463	1-249-425-11	CARBON	4.7K 5% 1/4W F
R464	1-247-897-11	CARBON	560K 5% 1/4W
R465	1-249-436-11	CARBON	39K 5% 1/4W
R466	1-249-434-11	CARBON	27K 5% 1/4W
R467	1-249-426-11	CARBON	5.6K 5% 1/4W
R468	1-249-418-11	CARBON	1.2K 5% 1/4W F
R469	1-249-417-11	CARBON	1K 5% 1/4W F
R470	1-247-807-31	CARBON	100 5% 1/4W
R476	1-249-425-11	CARBON	4.7K 5% 1/4W F
R477	1-249-441-11	CARBON	100K 5% 1/4W
R478	1-249-435-11	CARBON	33K 5% 1/4W
R822	1-247-811-31	CARBON	150 5% 1/4W
< VIBRATOR >			
X301	1-579-952-21	VIBRATOR, CERAMIC (8MHz)	

*	1-652-302-11	TUNER VIDEO BOARD	

< CAPACITOR >			
C251	1-124-472-11	ELECT	470uF 20% 10V
C252	1-124-927-11	ELECT	4.7uF 20% 100V
C253	1-124-472-11	ELECT	470uF 20% 10V
C254	1-124-927-11	ELECT	4.7uF 20% 100V
C255	1-124-472-11	ELECT	470uF 20% 10V
C256	1-124-927-11	ELECT	4.7uF 20% 100V
C257	1-124-927-11	ELECT	4.7uF 20% 100V
C258	1-124-927-11	ELECT	4.7uF 20% 100V
C259	1-124-927-11	ELECT	4.7uF 20% 100V
< CONNECTOR >			
CNJ201	1-695-317-21	JACK, PIN 2P (TV/LD VIDEO IN)	
CNJ202	1-695-317-21	JACK, PIN 2P (VIDEO2 VIDEO IN/OUT)	
CNJ203	1-766-199-11	JACK, PIN 3P	
		(VIDEO1 VIDEO IN/OUT, MONITOR VIDEO OUT)	
CNS251	1-766-202-11	SOCKET, CONNECTOR PIN 14P	

TUNER VIDEO

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< FRONT-END >				MISCELLANEOUS			

FE1	1-239-611-11	ENCAPSULATED COMPONENT (D915:AUS)		11	1-765-290-11	WIRE (FLAT TYPE) (21 CORE)	
FE1	1-239-727-11	ENCAPSULATED COMPONENT (FCC)		53	1-572-291-41	SWITCH, ROTARY SLIDE	
		(EXCEPT D915:AUS)		△70	1-690-609-11	CORD, POWER (EXCEPT D915:AUS)	
< IC >				△71	1-696-848-21	CORD, POWER (D915:AUS)	
IC251	8-759-061-95	IC SN761200N		FL101	1-517-305-11	INDICATOR TUBE, FLUORESCENT	
< COIL >				△CNJ901	1-251-078-11	OUTLET, AC. (D915:AUS)	
< TRANSISTOR >				△F902	1-532-237-00	FUSE, TIME LAG (T3. 15A/250V) (D915:AUS)	
L251	1-410-509-11	INDUCTOR 10uH		△F902	1-532-748-11	FUSE, GLASS TUBE (6. 3A/125V)	(EXCEPT D915:AUS)
< RESISTOR >				△F903	1-532-286-00	FUSE (T2. 5A/250V) (D915:AUS)	
Q251	8-729-119-76	TRANSISTOR 2SA1175-HFE		△F971	1-532-237-00	FUSE, TIME LAG (T3. 15A/250V) (D915:AUS)	
Q252	8-729-119-76	TRANSISTOR 2SA1175-HFE		△F971	1-576-107-11	FUSE (3. 15A/250V) (EXCEPT D915:AUS)	
Q253	8-729-119-76	TRANSISTOR 2SA1175-HFE		△F972	1-532-237-00	FUSE, TIME LAG (T3. 15A/250V) (D915:AUS)	
Q254	8-729-900-63	TRANSISTOR DTA124ES		△F972	1-576-107-11	FUSE (3. 15A/250V) (EXCEPT D915:AUS)	
< RESISTOR >				△F973	1-532-748-11	FUSE, GLASS TUBE (6. 3A/125V)	(EXCEPT D915:AUS)
R251	1-249-403-11	CARBON 68 5% 1/4W F		△F974	1-532-748-11	FUSE, GLASS TUBE (6. 3A/125V)	(EXCEPT D915:AUS)
R252	1-249-429-11	CARBON 10K 5% 1/4W		FE1	1-239-727-11	ENCAPSULATED COMPONENT (FCC)	
R253	1-247-804-11	CARBON 75 5% 1/4W				(EXCEPT D915:AUS)	
R254	1-249-403-11	CARBON 68 5% 1/4W F		FE1	1-239-611-11	ENCAPSULATED COMPONENT (D915:AUS)	
R255	1-249-429-11	CARBON 10K 5% 1/4W		IC621	8-759-502-33	IC SI-18752	
R256	1-247-804-11	CARBON 75 5% 1/4W		Q655	8-729-026-08	TRANSISTOR 2SC4495	
R257	1-249-403-11	CARBON 68 5% 1/4W F		Q658	8-729-022-16	TRANSISTOR 2SD2390-OPY-M (D715)	
R258	1-249-429-11	CARBON 10K 5% 1/4W		Q658	8-749-010-25	TRANSISTOR MN2488-OPY-M (D915)	
R259	1-247-804-11	CARBON 75 5% 1/4W		Q659	8-729-022-15	TRANSISTOR 2SB1560-OPY-M (D715)	
R260	1-247-804-11	CARBON 75 5% 1/4W		Q659	8-749-010-26	TRANSISTOR MP1620-OPY-M (D915)	
R261	1-247-811-31	CARBON 150 5% 1/4W		Q701	8-729-026-08	TRANSISTOR 2SC4495	
R262	1-247-807-31	CARBON 100 5% 1/4W		Q705	8-729-022-16	TRANSISTOR 2SD2390-OPY-M (D715)	
R263	1-247-811-31	CARBON 150 5% 1/4W		Q705	8-749-010-25	TRANSISTOR MN2488-OPY-M (D915)	
R264	1-247-807-31	CARBON 100 5% 1/4W		Q706	8-729-022-15	TRANSISTOR 2SB1560-OPY-M (D715)	
R265	1-247-811-31	CARBON 150 5% 1/4W		Q706	8-749-010-26	TRANSISTOR MP1620-OPY-M (D915)	
R266	1-247-807-31	CARBON 100 5% 1/4W		Q751	8-729-026-08	TRANSISTOR 2SC4495	
< TERMINAL >				Q755	8-729-022-16	TRANSISTOR 2SD2390-OPY-M (D715)	
TM1	1-537-714-11	TERMINAL BOARD (ANTENNA) (D915:AUS)		Q755	8-749-010-25	TRANSISTOR MN2488-OPY-M (D915)	
TM1	1-537-734-11	TERMINAL BOARD, ANT (ANTENNA)		Q756	8-729-022-15	TRANSISTOR 2SB1560-OPY-M (D715)	
		(EXCEPT D915:AUS)		Q756	8-749-010-26	TRANSISTOR MP1620-OPY-M (D915)	
*****				△T902	1-423-637-11	TRANSFORMER, POWER (D715:US)	
				△T902	1-423-638-11	TRANSFORMER, POWER (D715:CND)	
				△T902	1-426-756-11	TRANSFORMER, POWER (D915:US)	
				△T902	1-426-757-11	TRANSFORMER, POWER (D915:CND)	
				△T902	1-426-758-11	TRANSFORMER, POWER (D915:AUS)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	---

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
		ACCESSORIES & PACKING MATERIALS *****	
	1-467-637-11	REMOTE COMMANDER (RM-U241) (EXCEPT D915:CND)	
	1-467-638-11	REMOTE COMMANDER (RM-P341) (D915:CND)	
	1-501-374-11	ANTENNA, LOOP	
	1-501-594-11	ANTENNA (FM) (D915:AUS)	
	3-758-526-21	MANUAL, INSTRUCTION (ENGLISH)	
	3-758-526-31	MANUAL, INSTRUCTION (FRENCH) (D715:CND/D915:CND)	
	3-759-183-31	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (for RM-P341) (D915:CND)	
	4-925-079-11	COVER (6), BATTERY (for REMOTE COMMANDER)	
*	4-952-676-01	CUSHION	
*	4-967-030-01	INDIVIDUAL CARTON (D715)	
*	4-967-032-01	INDIVIDUAL CARTON (D915)	

		***** HARDWARE LIST *****	
#1	7-682-548-04	SCREW +BVTI 3X8 (S)	
#2	7-682-548-09	SCREW +BVTI 3X8 (S)	
#3	7-682-561-04	SCREW +BVTI 4X8 (S)	
#4	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

STR-D715/D915

SONY[®] SERVICE MANUAL

US Model
Canadian Model
STR-D715/D915
Australian Model
STR-D915

SUPPLEMENT-1


File this Supplement with the Service Manual.

Subject : Circuit change Block diagram
--


SCHEMATIC DIAGRAM (Service manual page 17)

 : indicates changed portion

[MAIN BOARD] ADDRESS J-2

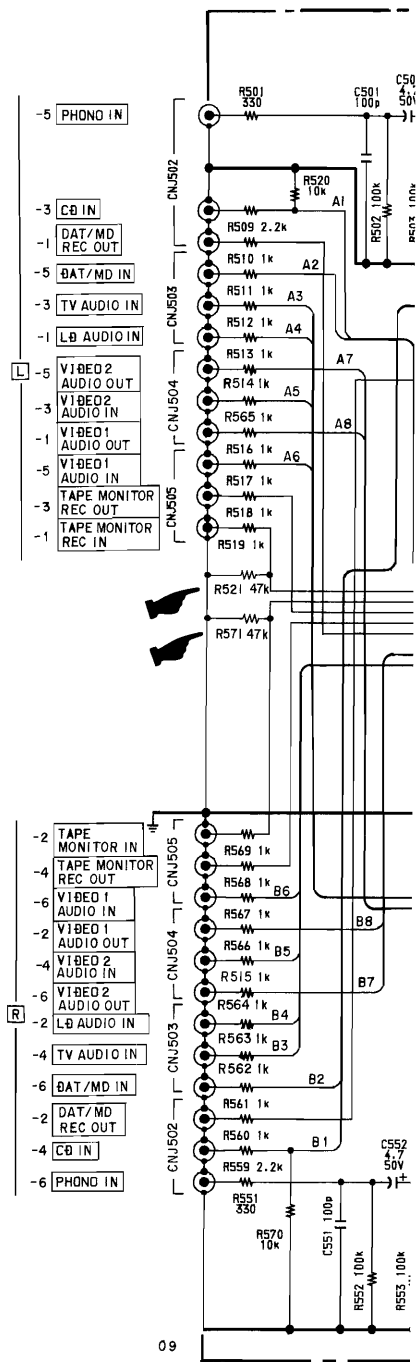

[MAIN BOARD] ADDRESS G,H-20

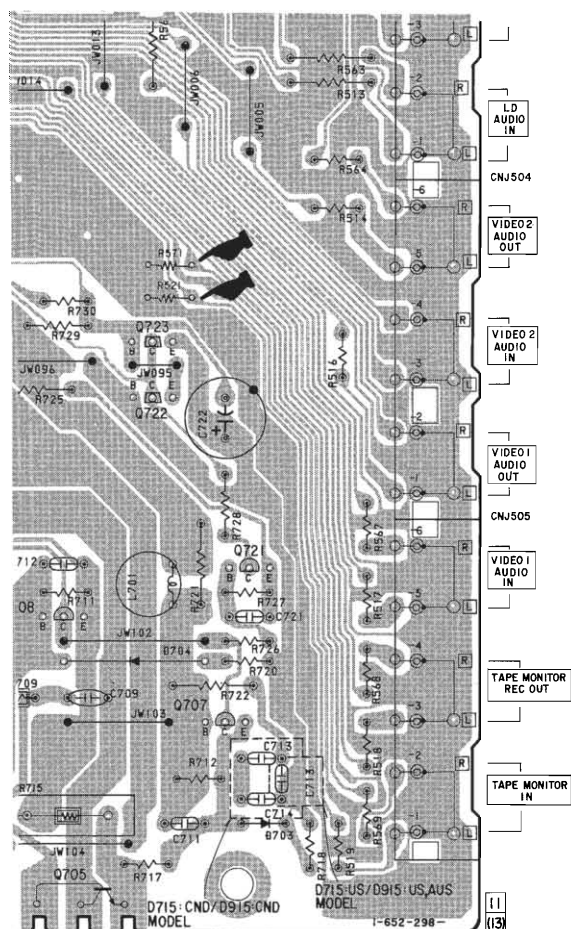

Page	Ref. No.	Former	New				
43	R521	————	1-249-437-11	CARBON	47K	5%	1/4W
	R571	————	1-249-437-11	CARBON	47K	5%	1/4W

• BLOCK DIAGRAM

