DENON

Hi-Fi AM-FM Stereo Receiver

For Europe And U.K. Models

SERVICE MANUAL

MODEL DRA-585RD

AM-FM STEREO RECEIVER

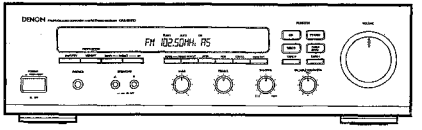

TABLE OF CONTENTS

OPERATING INSTRUCTIONS ..... 2 ~ 9
DISASSEMBLY 10
METHOD OF ADJUSTMENTS 11
CONNECTION DIAGRAM OF MEASURING INSTRUMENTS 12
BLOCK/LEVEL DIAGRAM 13
NOTE FOR PARTS LIST 14
PRINTED WIRING BOARD PARTS LIST ..... 15 ~ 19
PRINTED WAIRING BOARD PATTERNS 20, 21
1U-2817 MAIN UNIT ASS'Y 20
1U-2915 POWER UNIT ASS'Y 20
KU-9328 DISPLAY UNIT ASS'Y 21
1U-2818 TUNER UNIT ASS'Y 21
EXPLODED VIEW OF CHASSIS AND CABINET 22
PARTS LIST OF EXPLODED VIEW 23
WIRING DIAGRAM 24
SCHEMATIC DIAGRAM 25
SEMICONDUCTORS 26, 27

NIPPON COLUMBIA CO., LTD.

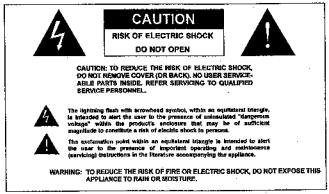

PRECAUTIONS FOR INSTALLATION
Install DRA-585RD always horizontally. And leave at least 10 cm of space between the unit and other component placed above.

VORKEHRUNGEN FÜR DIE AUFSTELLUNG
Stellen Sie den DRA-585RD stets waagerecht auf. Achten Sie ebenfalls darauf, daß ein Mindestabstand von 10 cm zwischen dem Gerät und der Komponente, die darüber gestellt wird, eingehalten wird.

PRECAUTIONS D'INSTALLATION
Le DRA-585RD doit toujours être installé horizontalement. Laissez au moins un espace de 10 cm entre cet appareil et tout autre composant qui serait placé au-dessus.

PRECAUZIONI PER L'INSTALLAZIONE
Installare il DRA-585RD sempre in posizione orizzontale, avendo cura di lasciare almeno 10 cm tra l'unità ed altri componenti posti al di sopra.

PRECAUCIONES PARA LA INSTALACION
Instale siempre el DRA-585RD en posición horizontal. Asegúrese también de dejar un espacio de por lo menos 10 cm entre esta unidad y el componente que sea colocado encima.

VOORZORGSMAATREGELEN VOOR INSTALLATIE
De DRA-585RD altijd horizontaal plaatsen. Laat tevens tussen dit apparaat en het andere component dat u erboven plaatst.

FÖRBEREDELSER FÖR INSTALLATION
Installera alltid DRA-585RD horisontellt. Lämna åtminstone 10 cm mellan denna apparat och en annan komponent som placeras ovanpå.

PRECAUÇÕES DURANTE A INSTALAÇÃO
Instale sempre o DRA-585RD em posição horizontal. E deixe pelo menos 10 cm de espaço entre esta unidade e outro componente colocado acima.



FRONT PANEL
VORDERSEITE
PANNEAU AVANT
PANNELLO ANTERIORE
PANEL ANTERIOR
VOORPANEEL
FRAMPANELEN
PAINEL FRONTAL

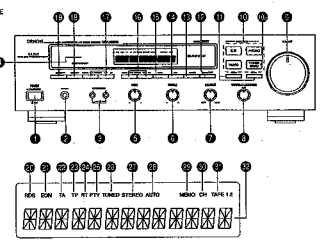

DISPLAY
ANZEIGE
AFFICHAGE
DISPLAY
VISUALIZADOR
DISPLAY
DISPLAYEN
MOSTRADOR

REAR PANEL
RÜCKSEITE
PANNEAU ARRIÈRE
PANNELLO POSTERIORE
PANEL POSTERIOR
ACHTERPANEEL
BAKSIDAN
PAINEL TRASEIRO

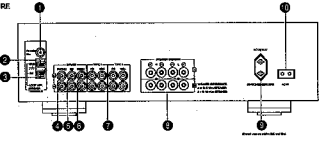

NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION
NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA
OBSERVAÇOES SOBRE O USO

- Avoid high temperatures.
  Allow for sufficient heat dispersion when installed on a rack.
- Vermeiden Sie hohe Temperaturen.
  Beachten Sie, daß eine ausreichende Luftzirkulation gewährleistet sein muß, wenn das Gerät in ein Rack eingebaut aufgestellt werden soll.
- Evitez des températures élevées.
  Tenez compte d'une dispersion de chaleur suffisante lors de l'installation sur un support pour appareils de mesure ou sur une étagère.
- Evitare temperature troppo elevate.
  Accertarsi che ci sia un adeguato dispersione del calore quando l'unità è installata in un rack o in un mobile.
- Evite temperaturas elevadas.
  Asegúrese de garantizar una dispersión de calor suficiente al instalar la unidad en una consola.
- Vermijd hoge temperaturen.
  Zorg voor een dergelijke hitteafvoer indien het apparaat op een rek wordt geplaatst.
- Undvik höga temperaturer.
  Se till att det finns möjlighet till god värmeavledning när enheten monteras i rack.
- Undgå høje temperaturer.
  Overvåde tilstrækkelig varmeafledning, hvis enheden monteres i et rack.
- Evite as altas temperaturas.
  Quando instalar o equipamento numa prateleira coloque-o de modo a permitir uma dissipação suficiente do calor.

- Handle the power cord carefully.
  Hold the plug when unplugging the cord.
- Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie es aus der Steckdose ziehen.
- Manipuler le cordon d'alimentation avec précaution.
  Tenir la prise lors du débranchement du cordon.
- Maneggiare con cura il cavo di alimentazione.
  Quando si scollega il cavo dalla presa, non tirare il cavo.
- Manejar el cable de alimentación con cuidado.
  Cuando se desenchufa el cable, desconectar el cable de la toma.
- Hanteer het netsnoer voorzichtig.
  Houd het vast bij de stekker wan neemnor deze moet worden aan- of losgekoppeld.
- Hantera nätkabeln varsamt.
  Håll i kontakten när du drar ut den. Dra inte i kabeln.
- Håndter strømledningen forsigtigt.
  Hold i stikket, når strømledningen skal tages ud af stikkontakten.
- Manuseie com cuidado o cabo de alimentação.
  Ao desligar o cabo de alimentação, segure na ficha para desligar o cabo de alimentação da tomada.

- Keep the set free from moisture, water and dust.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Mantenere l'unità lontana da umidità, acqua e polvere.
- Mantenga el equipo libre de humedad, agua y polvo.
- Apparaten vochtigheid, water of stof in het algemeen binnenlaten.
- Undvi hos apparaten fukt, vatten och damm.
- Undertag e svalgjørelse af fugt, vand og støv.
- Mantenha o equipamento livre de humidade. Água ou pó.

- Unplug the power cord when not using the set for long periods of time.
- Ziehen Sie den Netzstecker aus der Steckdose, wenn Sie das Gerät über einen längeren Zeitraum hinweg nicht verwenden.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Quando si prevede di non utilizzare l'unità per lunghi periodi di tempo, staccarne il cavo di alimentazione dalla presa.
- Desenchufe el cable de alimentación cuando no vaya a utilizar el equipo por mucho tiempo.
- Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende zeer lange periode niet wordt gebruikt.
- Dra ur nätsladden från uttaget om apparaten inte kommer att användas på länge.
- Overlegen i tilfælde af strømstandsning, dersom man ønsker at opbevare apparatet længere tid.
- Desligue o cabo de alimentação quando não utilizar o equipamento durante períodos prolongados.

- Do not obstruct the ventilation holes.
- Die Lüftungsschlitze dürfen nicht verdeckt werden.
- Ne pas obstruer les trous d'aération.
- Non ostruire i fori per la ventilazione.
- No cubrir los orificios de ventilación.
- De ventilatieopeningen mogen niet worden geblokkeerd.
- Täpp inte till ventilationshålen.
- Ikke tape ventilationsåbningerne.
- Não tape os orifícios de ventilação.



- Do not put foreign objects in the set.
- Lassen Sie keinerlei Gegenstände in das Gehäuse hinein gelangen.
- Ne pas laisser des objets étrangers dans l'appareil.
- Non far cadere alcun oggetto all'interno del telaio.
- No insista objetos extraños en el equipo.
- Laat geen vreemde voorwerpen in de apparaat terechtkomen.
- Se till att främmande föremål inte kommer in i apparaten.
- Undgå at fremmede genstande falder ned i apparatet.
- Evite colocar objectos estranhos dentro a aparelho.



- Do not let insecticides, benzene, and thinner come in contact with the set.
- Lassen Sie niemals Insektizide, Benzol oder Verdünnungsmittel in die Nähe des Gerätes kommen.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Evitare di mettere insetticidi, benzene e diluenti a contatto con l'unità.
- Los insecticidas, benceno y disolventes no se lo untes.
- Laat geen insecticiden/bijgende middelen, benzol of verfverdunner met dit apparaat in contact komen.
- Låt aldrig insektsmedel, bensen och thinner komma i kontakt med apparatens hölje.
- Undgå spåndannelse, benzine og fortynder kommer i kontakt med apparatens kabinet.
- Evite que insecticidas, benzina e diluentes entrem em contacto com o equipamento.

- Never disassemble or modify the set in any way.
- Versuchen Sie niemals, das Gerät selbstständig zu zerlegen oder abzuändern, da sonst Gefahr entstehen könnte.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Non smontare o modificare in alcun modo l'unità.
- Nunca desarme o modifique el equipo de ninguna manera.
- Haal de apparaat nooreenkomt of op enkele wijze veranderen.
- Ta inte sett apparaten och försök inte bygga om den.
- Husk at demontere eller modificere apparatet på ingen måde.

- Do not touch the AC plug with wet hands.
- Berühren Sie den Netzstecker nicht mit nassen Händen.
- Ne pas toucher la prise secteur avec les mains mouillées.
- Non toccare la spina di alimentazione con le mani bagnate.
- No toque el enchufe de la red con las manos mojadas.
- Raak de stekker niet met natte handen aan.
- Rör inte nätkontakten med våta händer.
- Undgå at berøre stikket med våde hænder.
- Não toque na ficha de alimentação com as mãos molhadas.

Please check the following items are included with the main unit in the carton:

(1) Operating Instructions 1
(2) AM Loop Antenna 1
(3) FM Antenna 1
(4) Remote Control RC-174 1
(5) Batteries R6 (AA) 2
(6) AC Cord 1

Vergewissern Sie sich, daß folgende Teile vollständig im Lieferumfang enthalten sind:

(1) Bedienungsanleitung 1
(2) MW-Rahmenantenne 1
(3) UKW-Antenne 1
(4) Fernbedienungsgerät RC-174 1
(5) Trockenbatterien Baltration R6 (AA) 2
(6) Netzkabel 1

Veuillez vérifier que les articles suivants sont bien joints à l'appareil principal dans le carton:

(1) Mode d'emploi 1
(2) Antenne-cadre AM 1
(3) Antenne FM 1
(4) Télécommande RC-174 1
(5) Piles de format R6 (AA) 2
(6) Cordon secteur 1

Controllare che le parti seguenti si trovino imballate con l'apparecchio nella scatola di spedizione:

(1) Istruzioni per l'uso 1
(2) Antenna AM a telaio 1
(3) Antenna FM 1
(4) Telecomando RC-174 1
(5) Batterie a secco R6 (AA) 2
(6) Cavo d'alimentazione 1

Verifique que los artículos siguientes hayan sido suministrados con la unidad principal:

(1) Instrucciones de operación 1
(2) Antena AM de cuadro 1
(3) Antena de FM 1
(4) Unidad de control remoto RC-174 1
(5) Pilas secas R6 (AA) 2
(6) Cable de alimentación 1

Controleer of de volgende accessoires bij het hoofdtoestel in de doos zijn verpakt:

(1) Gebruiksaanwijzing 1
(2) AM-raamantenne 1
(3) FM-antenne 1
(4) Afstandsbediening RC-174 1
(5) R6 (AA) droge cel batter 2
(6) Netsnoer 1

Kontrollere at følgende tilbehør her packats ner i kartongen tilhammans med hovedenheden:

(1) Betjeningsvejledning 1
(2) Rammestrin-ltv AM-bnik 1
(3) FM-antenn 1
(4) Fjernkontroll RC-174 1
(5) R6 (AA) batterier 2
(6) Nettsnoren 1

Verifique se os items que se seguem estão incluídos na caixa de cartão com a unidade principal

(1) Instruções de funcionamento 1
(2) Antena de quadro AM 1
(3) Antena FM 1
(4) Telecomando RC-174 1
(5) Pilhas R6 (AA) 2
(6) Cabo de alimentação 1

NUR FÜR EUROPÄISCHE MODELLE:

Konformitätserklärung

Die DENON Elektronik GmbH
Hülsdonk 32
40880 Ratingen

erklärt als Herstellerbetreiber, daß das in dieser Bedienungsanleitung beschriebene Gerät den Technischen Vorschriften für Ton- und Fernseh-Rundfunkempfänger nach der Amtsblattverfügung 862/1979 (Amtsblatt des Bundesministeriums für Post und Telekommunikation vom 31.8.1979) entspricht.

CONNECTIONS

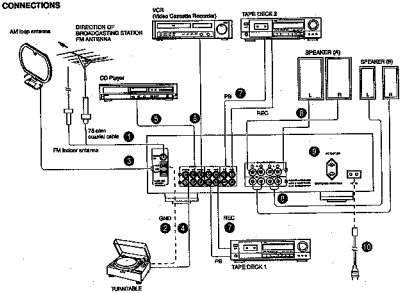

Notes on Connection

- Do not plug the power cord into the AC wall outlet until all connections have been completed.
- Make sure channels are correctly connected. Connect Left channels to Left channels and Right channels to Right channels. Follow the color markings of plugs and terminals to avoid sure mistakes are not made.
- Connect all plug-in plugs securely, pushing them completely into the jacks. Incomplete connections will cause noise generation.
- Binding the connection cables to power cords, or running such cables close to power supply transformers will cause humming or noise, and should thus be avoided.

SPEAKER CONNECTION

Confirm polarity (+, -) and set left and right channels (L, R). Connect the speaker pairs to the SPEAKER terminals A or B on the back panel. Connections must be made with power cord disconnected.

Preparing the cord

1. Peel of the sheath.
2. Twist the wires.

Connecting the front speaker terminals

1. Loosen by turning counterclockwise.
2. Insert the cord and tighten by turning clockwise.



ANTENNA INSTALLATION

- **FM ANTENNA**
  The supplied indoor FM antenna can be used inside wooden houses for receiving local FM stations and other strong FM signals. Stretch out the end of the antenna and mount the antenna on the wall or ceiling where optimum reception is achieved. An indoor FM antenna may not consistently receive stable reception, due to environmental changes. In such cases, the indoor FM antenna should only be used temporarily until an outdoor FM antenna has been installed.
  When connecting an outdoor FM antenna, the use of 75 ohm coaxial cable (DCI-2V, IEC-2V) is strongly recommended.

- **AM ANTENNA**
  Attach the supplied AM loop antenna even when using an outdoor AM antenna.
  Connect the leads to the AM and GND terminals.
  Also use the AM terminals for connecting an outdoor AM antenna (when making such a connection do not disconnect the AM loop antenna).
  Adjust the loop antennas to obtain optimum reception. Where broadcast stations are distant and only weak signals are received or where signals are blocked, it is best to install an outdoor AM antenna.

Assembling the Loop Antenna

- Loosen the tie fastening the loop antenna's lead and connect the lead to the antenna terminals.

Notes:

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.

REAR PANEL (Refer to page 6 and page 7.)

1 FM ANT (FM antenna terminals)
75-ohm coaxial cable can be connected to this terminal. For antenna connecting procedure, see ANTENNA INSTALLATION.

2 GND (Grounding terminal)
The grounding wire of the turntable is connected here.
- Hum or noise may be generated if the grounding wire is not connected.

3 AM ANT (AM antenna terminals)
Connect the attached AM loop antenna.
Connect to this terminal when a medium wave outdoor antenna is used.

4 PHONO (Phonos input terminals)
The output cord of the turntable is connected here.
Since the input sensitivity of "PHONO" is extremely high, do not use the unit without this input jack cord. If used without this cord, the speakers may generate hum.

5 CD
The output cord of the CD player is connected here.

6 VIDEO
A VIDEO, such as a VCR or Video Disc may be connected here.

7 TAPE-1, TAPE-2
Two tape deck or tape deck can be connected to these jacks for full-fledged play/back, recording and tape dubbing operation.

8 SPEAKER SYSTEMS (Speaker terminals)
Two pairs of speakers A and B can be connected to these terminals.

9 AC OUTLET (AC power outlet)
This AC outlet is controlled by the power switch.
(Except units are sold in U.K. and Eire).

10 AC Inlet
Connect the included AC cord here.

CAUTION

Protective Circuit
This unit is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large power overflowing when the speaker cords are not completely connected or when an output is generated by a short circuit.
This protective circuit's operation cuts off the output to the speakers. In such a case, be sure to turn the power to the set off and check the connections to the speakers. Then turn the power on again. After waiting for several seconds, the set will operate normally.

DESIGNATIONS AND FUNCTIONS OF PANEL CONTROLS (Refer to Page 3.)

FRONT PANEL

1 POWER (Power ON-STANDBY/OFF Switch)
This switch turns the unit ON or OFF. There is a delay of a few seconds before the unit is operable after this power switch is turned ON. If the unit is turned OFF from the remote control, the unit will be in the STANDBY mode. When the STANDBY mode, the unit is not be turned ON with the power button on the remote control. If the unit will not be used for extended period, be sure to turn the unit OFF from the front panel power switch.
NOTE: This unit includes a STANDBY protection feature. This feature is designed to prevent accidental turn-on from the STANDBY mode in the event of a power failure. Should AC power be disconnected and then reconnected while the unit is in STANDBY mode, the unit will return the STANDBY mode.
To turn the unit ON from the STANDBY mode without use the remote control, operate the front panel power switch four times. The unit will then operate normally.

2 PHONES (Headphones jack)
Connect a pair of headphones (sold separately) to this jack for private listening.

3 SPEAKERS (Speaker selector switches)
These switches are used to select speaker system A and B. No sound is heard through the speakers when both switches are set to the [ ] position.

4 REMOTE SENSOR (Remote control sensor)
This sensor receives the infra-red light transmitted from the wireless remote control unit.
For remote control, point the wireless remote control unit towards the sensor.

5 BASS (Bass control)
Use this control to adjust the low-range response. When the control is set to the center position, the frequency characteristic curve (below 1,000 Hz) is flat. Turn the control clockwise to increase the bass response and counterclockwise to decrease it.

6 TREBLE (Treble control)
Use this control to adjust the high-range response.
When the control is set to the center position, the frequency characteristic curve (above 1,000 Hz) is flat. Turn the control clockwise to increase the treble response and counterclockwise to decrease it.

7 BALANCE (Balance control)
Use this control to balance the volume levels between left and right channels. The volume levels in both channels are equal when the control is set to the center position.

8 VARIABLE LOUDNESS (Loudness control)
At low volumes, the human ear is less sensitive to low (BASS) and high (TREBLE) frequencies. Use the control to compensate for this deficiency when listening at low volume levels. Turn this control counter-clockwise until a natural balance of bass and treble sound has been restored.

9 VOLUME (Volume control)
This knob is used to adjust the volume level of both channels. Turn the knob clockwise to raise the volume and counterclockwise to lower it.

10 Input selector (Input selector buttons)
These buttons are used to select the audio input source.
- PHONO: Press to play a record on a record player connected to the PHONO input jacks.
- CD: Press to listen to a compact disc player or another component connected to the CD input jacks.
- TUNER: Press to listen to FM or AM programs, where the set is set TUNER function.
- VIDEO: Use when playing back the audio from a Hi-Fi video, video disc player or other component connected to the VIDEO terminal.

11 BAND (Band selector button)
Press this button to select the FM or AM (MW) band, when the set is TUNER function.

12 Tape selector (Tape selection/monitor buttons)
TAPE-1: Press the button once, TAPE-1 indicator will light up and then you can play tape source on TAPE-1 terminal.
TAPE-2: Press this button once, TAPE-2 indicator will light up and then you can play tape or video source of TAPE-2 terminal.
In this state you can copy TAPE-2 source to TAPE-1 terminal.
Press again the button to turn off accessed. to play sources selected by input selector **10**, indicator goes out.

13 RADIO TEXT button
This button is used for displaying radio text messages. When this button is pressed while the station currently tuned is offering a radio text message service, the message scrolls on the display.
This mode turns on and off each time the button is pressed. (Refer to page 13.)

14 EON TA button
When a traffic announcement begins on a station in the same network as the station currently tuned in, that network station is automatically tuned in, and the previous station is tuned back in once the traffic announcement is over.
This button is used to turn this mode on and off.
If the station switches from the current station to the network station when this mode is on but the network station cannot be received properly due to weak signals, the previous station is immediately tuned back in. (Refer to page 13.)

15 RDS (RDS button)
This button is used for the RDS search (refer to page 12) and PTY search (refer to page 13) and TP search (refer to page 12) operations, and to input the station name (refer to page 11.)

⑨ AUTO (Tuning mode button)
This switches between auto and manual tuning.
Auto tuning: When the UP button is pressed, the radio is tuned automatically to a higher frequency. Press the DOWN button to tune to a lower frequency. Use this position to eliminate noise when no signals or weak signals are being received.
Manual tuning: In this position, the radio can be tuned manually. Reception is automatically measured when in the manual mode.

⑩ TUNING (Tuning buttons)
Use these to change the received frequency to a higher frequency (UP) or a lower frequency (DOWN).
When writing station names, use these buttons to select the letters. (Refer to Page 11.)

⑪ Preset (Preset station buttons)
These buttons are used for storing stations or recalling stations which have been preset. Using the SHIFT/PTY button you can preset a total of 40 FM or AM stations into preset channels.
Once a radio has been memorized, the same station can later be tuned in instantly simply by recalling the corresponding preset channel with PRESET UP or DOWN button.

⑫ MEMORY (Memory button)
This switch is used to store the desired radio station to a memory.

⑬ SHIFT / PTY button
Use this button to select the memory blocks, A (1 to 8), B (1 to 8), C (1 to 8), D (1 to 8) or E (1 to 8).
For PTY search, use this button to select the program type.
When writing station names, use this button to set the writing position.

NOTES
- This receiver has a fallback up system. When the power is turned on, the INPUT SELECTOR buttons are set to the last mode set before the power was turned off.
- When using this receiver in close proximity to video equipment (TV, VCR, VDP, etc.), noise may be generated in AM broadcasts. To avoid this, keep the monitor as far away from other video components as possible, or place the AM loop antenna where noise is reduced. If the noise is not reduced, turn off the power of the video components when listening to AM broadcasts.

DISPLAY

⑭ RDS indicator
This lights when receiving RDS broadcasts, and flashes during the RDS search operation.

⑮ EON indicator
This lights when receiving EON information.

⑯ TA indicator
This lights when receiving traffic announcements.

⑰ TP indicator
This flashes during the TP search operation and lights when TP stations are searched.

⑱ RT indicator
This lights when the RADIO TEXT button is pressed.

⑲ PTY indicator
This flashes during the PTY (Programme Type) search operation.

⑳ TUNED indicator
This lights when a station is properly tuned in.

㉑ STEREO indicator
This lights when receiving stereo broadcasts. It remains off when receiving AM broadcasts.

㉒ AUTO indicator
This indicates the tuning mode. It lights in the auto mode and remains off in the manual mode.

㉓ MEMO indicator
This indicator lights for approximately 10 seconds when the MEMORY button has been pressed and a station can be stored on a PRESET CHANNEL button.
This flashes continuously during the auto memory operation.

㉔ CH indicator
This lights when the preset channel number and shift mode (A, B, C, D or E) are displayed.

㉕ TAPE-1/TAPE-2 indicator
The TAPE-1 indicator lights when the TAPE-1 source is selected with the tape selector buttons. The TAPE-2 indicator lights when the TAPE-2 source is selected.

㉖ Multi function display
This displays the frequency, station name, program type, etc.

USING THE VARIOUS FUNCTIONS

1. Using the auto preset memory function
This function automatically stores the FM stations which can be received in the area in which the set is being used in the preset memory. Use this function so that the RDS functions can be used more effectively. Also once the channel memories can be changed as well even after the preset stations have been stored with this function.

Operation
1. Connect the FM antenna and set it so that FM stations can be received.
2. Press the POWER button to turn on the power while holding in the MEMORY button ⑫.
3. Searching begins automatically, and stations are stored in the preset memory in order, beginning from channel A1. (The operation is automatically stops once 40 stations have been set in the memory.)

2. Storing new stations at the preset channels
The reception frequency, RDS service information, Tuning mode and input characters can be stored at the different channel memories.
When this operation is performed, the station already stored in that channel memory using the auto preset memory function is cleared.

Operation
1. Press the MEMORY button ⑫. (The MEMO indicator flashes.)
2. Use the SHIFT/PTY button ⑬ to select the block, A to E.
3. Use the PRESET UP or DOWN button ⑪ to select the channel at which the station is to be stored.
4. Press the MEMORY button ⑫ again to store the station in the memory.

3. Recalling preset channels
Use the following operation to recall preset channels:

Operation
1. Use the SHIFT/PTY button ⑬ to select the block, A to E.
2. Use the PRESET UP or DOWN button ⑪ to recall the station stored in the memory.
If the PRESET UP or DOWN buttons are pressed without pressing the SHIFT/PTY button ⑬, the stations are recalled in the order A1 to A8, B1 to B8, and so on through E8.

4. Inputting characters
Any characters can be input (up to 8 characters).
The input characters can be stored at the preset channels.

Operation
1. Press the RDS button ❹ four times.
(The cursor flashes at the first place.)

2. Use the TUNING UP or DOWN button ❿ to select the character for the first place.
(The selected character flashes.)



3. Press the SHIFT/PTY button ⑬ to move the cursor to the next place. (The cursor flashes at the second place).

4. Repeat steps 2 and 3 above to input up to 8 characters.

5. The characters are set five seconds after the input procedure is finished. The input characters can be stored in the memory.
To keep the input characters, be sure to store them in a channel memory.

6. Clearing characters
1. Recall the character you want to clear.
2. Press the RDS button ❹ 4 times until the character at the first place flashes.
3. Then press the SHIFT/PTY button ⑬ for at least 2 seconds. The current character will then be cleared.

Table of characters
The characters are input in the order shown to the right. Use the TUNING buttons ⑩ to select the desired characters.

Using the RDS functions (for FM only)

1. RDS search

Use this to automatically search and stop at stations offering RDS services.

Operation

1. Press the RDS button ❶ once.

2. Press the PRESET UP or DOWN button ❷. (Searching begins.)

3. Searching begins again if the PRESET UP or DOWN button ❷ is pressed while the RDS indicator is flashing.



4. If no other RDS station is found when all the frequencies are searched, "NO RDS" is displayed.

2. PTY Search

Use this to automatically search and stop at stations broadcasting the specified programme type (PTY).

Operation

1. Press the RDS button ❶ twice.

2. Use the SHIFT/PTY button ❸ to select the programme type.

3. Press the PRESET UP or DOWN button ❷. (Searching begins.)

4. Searching begins again if the PRESET UP or DOWN button ❷ is pressed while the PTY indicator is flashing.

5. If no other station broadcasting the designated programme type is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

List of PTY (Programme Type) displays:

1.	NEWS	9.	VARIED
2.	AFFAIRS	10.	POP MUSIC
3.	INFORMATION	11.	ROCK MUSIC
4.	SPORT	12.	M.O.R. MUSIC
5.	EDUCATION	13.	L-CLASSICS (Light classics)
6.	DRAMA	14.	S-CLASSICS (Serious classics)
7.	CULTURE	15.	OTHER MUSIC
8.	SCIENCE	31.	ALARM

NOTE: ALARM cannot be selected during the PTY search operation.

3. TP Search

Use this to automatically search and stop at stations which broadcast traffic announcements (even if the station is not currently broadcasting a traffic announcement).

Operation

1. Press the RDS button ❶ three times.

2. Press the PRESET UP or DOWN button ❷. (Searching begins.)



3. Searching begins again if the PRESET UP or DOWN button ❷ is pressed while the TP indicator is flashing.



4. If no other TP station is found when all the frequencies are searched, "NO PROGRAMME" is displayed.

4. RADIO TEXT

When the RADIO TEXT button ❶ is pressed while the station currently tuned in is offering a radio text message service, the message scrolls on the display.
(The RT indicator lights when the RADIO TEXT station is pressed.)



("NO TEXT DATA" is displayed if no radio text message is being broadcast.)

5. EON TA

When an RDS station is broadcasting RDS information on other stations within the same network and a traffic announcement begins on another station in the same network based on this information (EON = Enhanced Other Network), the network station is automatically tuned in. The previous station is tuned back in once the traffic announcement is over.

Operation

1. Press the EON TA button ❶. (The EON TA indicator lights.)



(STATION A)

(When a traffic announcement starts, the station is automatically tuned in.)



(STATION B)

(When the traffic announcement is over, the previous station is tuned back in.)

(STATION A)

RDS Emergency Alarm

"ALARM" will flash on the display when the unit receives the Emergency Programme Type Code (PTY31) from an RDS station. This feature may not operate properly if the signal from the RDS station is too weak or is subjected to interference.
It is not possible to select the "ALARM" display from the PTY search mode.

NOTE:

1. Be sure to use the EON TA mode off when recording programmes.
2. In the EON TA mode, if the station is switched from the current station to another station in the network but the signals of that network station are weak and it cannot be tuned in properly, "WEAK SIGNAL" is displayed and the original station is immediately tuned back in.
3. In the EON TA mode, the station does not switch to another station in the network if the current station is broadcasting a traffic announcement.
4. Since the RDS services offered differ from station to station, some RDS functions may not operate for some stations, but this is not a malfunction.

PLAYBACK USING THE REMOTE CONTROL

The accessory RC-174 remote control unit is used to control the RECEIVER from a distance.

(1) Inserting the dry cell batteries

1. Remove the rear cover on the remote control unit.

2. Insert two size "AA" (R6) dry cell batteries as shown in the diagram on the battery supply unit.

3. Replace the rear cover.

(2) Directions for use

- Operate the remote control unit while pointing it towards the remote control sensor on the receiver as shown in the diagram left.
- The remote control unit can be used at distances up to about 8 meters in a straight line from the receiver. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the remote control unit is not directed straight at the receiver.

Notes on Use of the Batteries

- The remote control unit uses size "AA" (R6) dry cell batteries.
- The batteries will need to be replaced approximately once a year. This will depend upon how often the remote control is used.
- If, in less than a year from the time new batteries were inserted, the remote control fails to operate the receiver from a near-by position, it is time to replace the batteries.
- Insert the batteries properly, following the diagram on the battery supply unit.
- Batteries are prone to damage and leakage. Therefore:
  - Do not combine new batteries with used ones.
  - Do not combine different types of batteries.
  - Do not jumper the opposite poles of the batteries, expose them to heat or break them open, or put them into open fire.
- When the remote control is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any battery fluid from the inside of the battery supply unit by wiping it out thoroughly and insert new batteries.

Note on Operation

- Do not press the operating buttons on the receiver and the remote control unit at the same time. This will cause misoperation.
- Operation of the remote control unit will become less effective or unstable if the infra-red remote control sensor on the receiver is exposed to strong light or if there are obstructions between the remote control unit and the sensor.
- In case you operate your VCR, TV or other components by remote control, do not operate buttons on two different remote control units in the same time. This will cause misoperation.

Besides being abin to operate the DRA-585RD receiver with this remote control unit, you can also operate a DENON cassette deck and CD player from this handy full-system remote control unit.

Remote Control Section

Full-system Remote Control Unit

This full-system remote control unit operates all major functions of the receiver such as function switching, volume control, and preset station selection. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the standard suggests.

Remote Control Unit RC-174 supplied with DRA-585RD

DECK	
▶ PLAY	PLAY button
◀ PLAY (REV)	PLAY (REV) button
■ STOP	STOP button
◀◀ REW	REWIND button
FF ▶▶	FF button
● REC	Refer to the instruction manual supplied with your DENON tape deck.
▮▮ PAUSE	PAUSE button
A/B W DECK	A/B DECK SELECT button

PANEL button

The display switches between the frequency, memorid characters, station name, programme type and time each time this button is pressed. Station names, programme types and the time are only displayed when receiving RDS stations.

The following may appear on the display for some stations, but this is not a malfunction:

"NOT PTY": This is an RDS broadcast, but the programme type (PTY) is set to "Non-definition".

"NO PS": This is an RDS broadcast, is being received, but the PS (Programme Service name or station name) is not being received due to weak signals, etc.

"NO TIME DATA": This is displayed when the station currently tuned in is not broadcasting time data, and may be displayed from time to time also when the station is transmitting correct time data but the receiver is in a weak signal area.

(This PANEL button only operates when the function is set to the TUNER mode.)

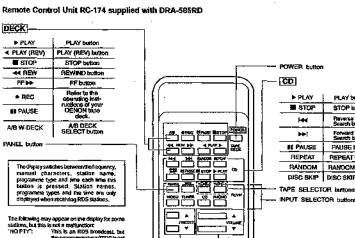

CD	
▶ PLAY	PLAY button
■ STOP	STOP button
⏮	Reverse Track Search button
⏭	Forward Track Search button
▮▮ PAUSE	PAUSE button
REPEAT	REPEAT button
RANDOM	RANDOM button
DISC SKIP	DISC SKIP button

- The RC-174 Remote Control Unit can control CD players and cassette decks made by DENON.
- Note the operation may not be possible for some models.
- Buttons are conveniently separated into groups, each group controlling one specific component. The groups are RECEIVER, CD and DECK.

For details on operating other components, refer to the instruction manuals for the CD player and/or cassette deck.

CAUTION:

- If the power is turned off with the remote control unit, the receiver is switched to the power stand-by state. If you are to be absent for a long period of time, be sure to turn the power off using the POWER switch on the receiver.
- A part of 1st digit of fluorescent display light while the receiver is in the power stand-by state.
- You may experience misoperation of the remote control unit if it is operated in fluorescent light and direct sunlight, in particular if the light comes into remote control sensor on the receiver. However, this is not a malfunction, and if this should happen, protect the sensor against such light.

TROUBLESHOOTING

1. Have all connections been made PROPERLY?
2. Have you followed all operational instructions correctly?
3. Check speaker and the turntable systems for proper operation.

When your unit does not seem to be operating correctly, first check the items in the following table. If the symptom does not correspond to any of the problems as shown below, turn off the power sources immediately and contact your DENON dealer.

Problem	Cause	Remedy
FM AND AM RECEPTION		
Radio program can not be received.	• Antenna connection is wrong. • A signal strength is weak.	• Check the connection. • Check the antenna installation.
Noise is reproduced.	• A signal strength is weak. • Automobile ignition noise interferes with reception. • Other electrical equipment interferes with reception.	• Install an outdoor antenna. • Keep the antenna away from the street. • Keep the equipment away from this set, or turn off the power of the other equipment.
The preset frequencies are erased.	• The memory back-up fuse (about 1 month) blown.	• Preset again.
In automatic tuning, the frequency doesn't stop at the radio station.	• A signal strength is weak.	• Use manual tuning.
In automatic tuning, it stops at the one step lower or higher frequency than the radio station.	• Noise or strong signal strength is received.	• Use manual tuning for optimum reception.
PLAYBACK OF THE AUDIO EQUIPMENTS		
No sound is produced with power on.	• Input and speaker cords connection are wrong. • Speaker switch is off. • The INPUT SELECTOR buttons are in wrong position. • The protective circuit is operating. • The fuse has blown out.	• Check the connection. • Turn on speaker switch). • Check these position. • Turn the power off once, check the connections up the speakers, then turn the power on again. • Ask your dealer, or the nearest DENON representative.
Audible hum when playing records.	• The input and grounding cords connection of the turntable are wrong. • The cords connection of the cartridge are wrong. • The interference from the nearby TV or radio transmission antenna	• Check the connection. • Check the connection. • Ask your dealer, or the nearest DENON representative.
Howling is produced when the volume control is turned up too high while playing records.	• The vibrations and sounds transmit from the speakers to the turntable.	• Insulate the vibrations, or keep the speakers away from the turntable.
Cracking noise is produced when playing records.	• The record is stained with dust. • The stylus tip of the cartridge is stained with the dust. • The cartridge is defective.	• Clean the record. • Clean the stylus tip. • Try the other cartridge.

SPECIFICATIONS

AMPLIFIER SECTION

Continuous Power Output (RMS):
80 W + 80 W (8 ohms, 1 kHz)

Power Bandwidth (HIFI):
15 Hz – 44 kHz (T.H.D. 0.16% both channels driven into 8 ohms)

Total Harmonic Distortion:
0.03% (10 dB as rated output, 8 ohms)

Frequency Response:
PHONO RIAA Standard Curve (Recording Output)
MM 20 Hz – 20 kHz ± 0.5 dB
CD, VIDEO, TAPE 1, TAPE 2 5 Hz – 65 kHz + 1.5 dB
34.1 kHz

Input Sensitivity and Impedance:
PHONO MM 2.5 mV 47 kohms
CD, VIDEO, TAPE 1, TAPE 2 150 mV 25 kohms

Maximum Input Level: (at 1 kHz)
PHONO MM 120 mV

Signal to Noise Ratio (SIN dB):
PHONO MM 70 dB (at 5.0 mV input)
CD, VIDEO, TAPE 1, TAPE 2 90 dB

Tone Controls:
BASS ± 10 dB at 100 Hz
TREBLE ± 10 dB at 10 kHz

Loudness Control Effect:
Variable Loudness at maximum position 68 Hz/10.0 kHz, + 19 kHz/+6 dB

TUNER SECTION

[FM] (note: pin 4 is 75 ohms, 0 dBf = 1 x 10⁻¹⁵ W)

Receiving Range:
Usable Sensitivity:
Signal to Noise Ratio (SIN dB):
MONO
STEREO
Image Rejection:
Selectivity (± 300 kHz):
Frequency Response:
Stereo Separation (1 kHz):
87.5 – 108 MHz
0.9 µV (75.3 dBf)
62 dB
38 dB
60 dB
50 dB
30 Hz – 15 kHz +0.2 dB – 1.2 dB
40 dB

[AM]

Receiving Range:
Usable Sensitivity:
Signal to Noise Ratio:
522 – 1611 kHz
18 µV
55 dB

General

Power Supply:
Power Consumption:
Power Outlet:
Dimensions:
Weight:
AC 230 V 50 Hz
160 W
SWITCHED 100 W
434 mm (W) x 129 mm (H) x 310 mm (D)
6.7 kg

REMOTE CONTROL UNIT

Remote control system:
Power supply:
External dimensions:
Weight:
RC-174
Infrared pulse system
3V DC "Size-size "AA" (R6) dry cell batteries
60 mm (W) x 175 mm (H) x 19 mm (D)
120 g (Includes batteries)

Design and specifications are subject to change without prior notice.

DISASSEMBLY

(To reassemble reverse disassembly)

1. Top Cover

(1) Remove 4 screws ①.
(2) Remove 3 screws ②.

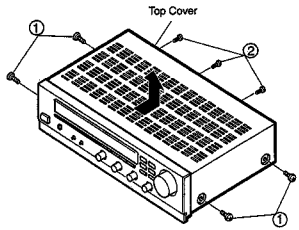

2. Front Panel

(1) Pull out Volume knob ③.
(2) Remove nut ④.
(3) Remove 4 screws ⑤ and undo hooks at 3 places.

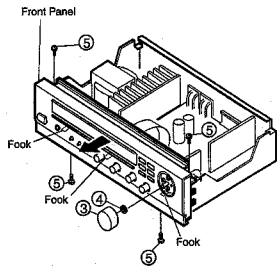

3. Rear Panel

(1) Remove 2 screws ⑥ and 12 fixing screws ⑦.
(2) Remove hooks at 3 places in arrow direction (⬆).

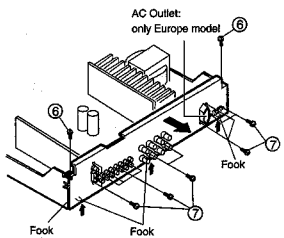

METHOD OF ADJUSTMENTS

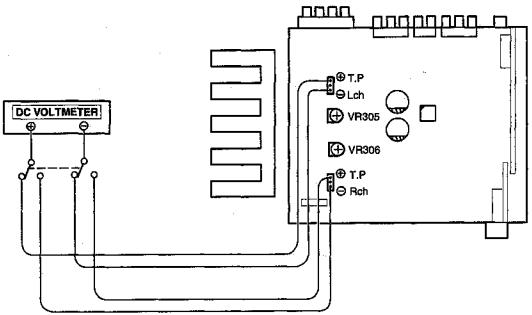

IDLING CURRENT

(1) Set controls as follows.
POWER Switch → off (■)
VOLUME Control → 0 (min.)
SPEAKERS → off (■)
Temperature → 15°C ~ 30°C (59°F ~ 86°F)
VR305 and VR306 of the 1U-2817 (Main Unit) → MIN. (↺)

(2) Connect DC Voltmeter to the T.P Lch and T.P Rch of the 1U-2817.
(3) Turn the Power Switch on and rotate VR305 clockwise so that the DC Voltmeter reads 3 mV ±0.2 mV DC at the T.P Lch. Follow the same procedure to VR306 for T.P Rch.
(4) Warm up for three minutes, then readjust VR305 and VR306 so that the DC Voltmeter reads 3 mV ±0.5 mV DC.
(5) Warm up for 10 minutes, then readjust VR 305 and VR306 so that the DC Voltmeter reads 2.7 mV ±0.5 mV DC.

CONNECTINON DIAGRAM OF MEASURING INSTRUMENTS

● FM SECTION

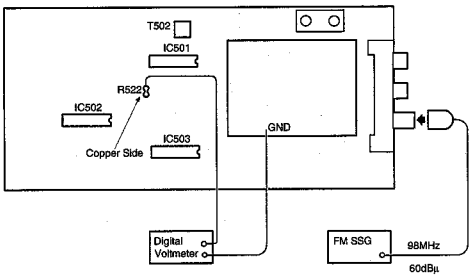

Adjust T502, Potential difference across R522 should be within 50mV.

BLOCK/LEVEL DIAGRAM

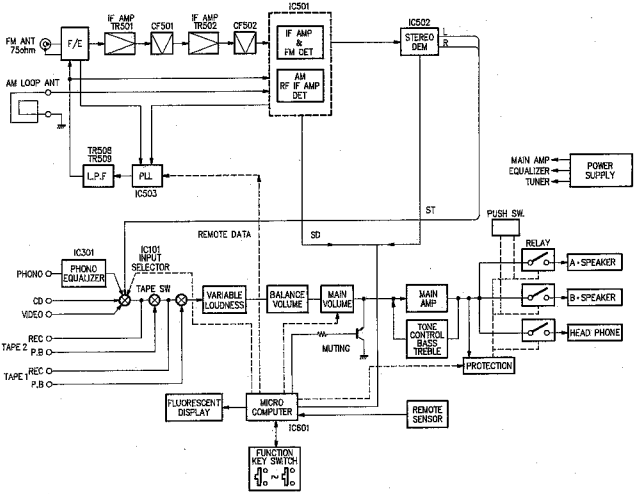

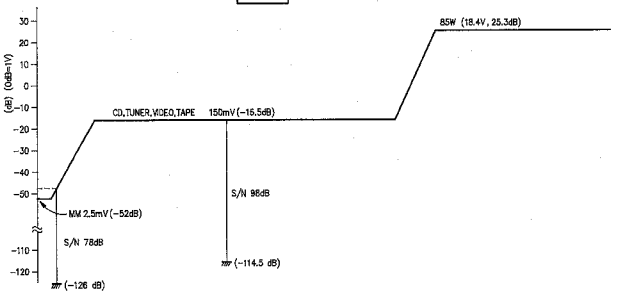

Ref. No.	Part No.	Part Name	Remarks
R401	247 0013 900	Carbon chip 220kohm 1/10W	RM73B--224J
R402	247 0009 985	Carbon chip 10kohm 1/10W	RM73B--103J
R403	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B--472J
R404,405	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J
R406	247 0009 985	Carbon chip 10kohm 1/10W	RM73B--103J
R407	247 0010 958	Carbon chip 20kohm 1/10W	RM73B--203J
R408	247 0009 985	Carbon chip 10kohm 1/10W	RM73B--103J
R409	247 0007 945	Carbon chip 1kohm 1/10W	RM73B--102J
R410	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B--472J
△R411	244 2051 997	Metal oxide film 4.7ohm 1W	RS1/2BA4R7JNBS(S)
△R412	241 2277 947	Carbon 100ohm 1/4W	RD1/4PE101JNBS
△R415	241 2367 908	Carbon 10ohm 1/4W	RD1/4PE010JNBS
△R451,452	244 2052 902	Metal oxide film 2.7kohm 1W	RS1/2BA2R72JNBS(S)
△R453	244 2051 990	Metal oxide film 4.7kohm 1W	RS1/2BA4R72JNBS(S)
R460	247 0011 944	Carbon chip 47kohm 1/10W	RM73B--473J
△R465,466	244 2052 902	Metal oxide film 2.7kohm 1W	RS1/2BA2R72JNBS(S)
△R467	244 2050 951	Metal oxide film 5.6kohm 1W	RS1/2BA562JNBS(S)
R468	244 2052 957	Metal oxide film 5.6kohm 1W	RS1/2BA562JNBS(S)
R475	247 0010 929	Carbon chip 15kohm 1/10W	RM73B--153J
R701,702	247 0009 901	Carbon chip 4.7kohm 1/10W	RM73B--472J
R703,704	247 0012 969	Carbon chip 150kohm 1/10W	RM73B--154J
R705,706	247 0011 986	Carbon chip 68kohm 1/10W	RM73B--683J
R707,708	247 0004 922	Carbon chip 47ohm 1/10W	RM73B--470J
R709,710	247 0005 992	Carbon chip 240ohm 1/10W	RM73B--241J
R711,712	247 0012 956	Carbon chip 130kohm 1/10W	RM73B--134J
R713,714	247 0009 938	Carbon chip 11kohm 1/10W	RM73B--113J
R715,716	247 0003 949	Carbon chip 22ohm 1/10W	RM73B--220J
R717,718	247 0005 905	Carbon chip 100ohm 1/10W	RM73B--101J
R719,720	247 0012 927	Carbon chip 100kohm 1/10W	RM73B--104J

CAPACITORS GROUP

C101--108	257 0004 903	Ceramic chip 56pF/50V	CC73SL1H560J
C109,110	253 1179 945	Ceramic 220pF/50V	CK45B1H221KT
C111	257 0002 921	Ceramic chip 10pF/50V	CC73SL1H100D
C112,113	257 0012 982	Ceramic chip 0.022µF/50V	CK73F1H223Z
C124,125	257 0012 982	Ceramic chip 0.022µF/50V	CK73F1H223Z
C127	257 0012 982	Ceramic chip 0.022µF/50V	CK73F1H223Z
C131--134	257 0004 903	Ceramic chip 56pF/50V	CC73SL1H560J
C201--204	255 1265 907	Film 6800pF/50V	CQ93M1H682J(B)
C205,206	257 0006 985	Ceramic chip 820pF/50V	CC73SL1H821J
C251--254	254 4258 918	Electrolytic 10µF/35V	CE04W1V100M
△C257,258	254 6201 002	Electrolytic 220µF/63V	CE04W1J221M(ODL)
C259	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z
C307,308	257 0006 927	Ceramic chip 470pF/50V	CC73SL1H471J
C311--314	253 4636 909	Ceramic 10pF/50V	CC45SL1H100D
C323,324	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C325,326	255 1265 936	Film 0.01µF/50V	CQ93M1H103J(B)

Ref. No.	Part No.	Part Name	Remarks
C331,332	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C333,334	254 4260 922	Electrolytic 0.33µF/50V	CE04W1HR33M
C335,336	257 0004 961	Ceramic chip 100pF/50V	CC73SL1H101J
C337,338	257 0002 992	Ceramic chip 20pF/50V	CC73SL1H200J
C339,340	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
C341,342	257 0004 961	Ceramic chip 100pF/50V	CC73SL1H101J
△C353,354	255 1264 979	Metalized 0.1µF/50V	CF93A1H104J
C355,356	255 1265 978	Film 0.022F/50V	CQ93M1H223J(B)
C357	254 4260 948	Electrolytic 1mF/50V	CE04W1H010M
C358	253 9030 963	Ceramic 0.01µF/25V	CK45=1E103K
C359,360	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C401	254 4258 905	Electrolytic 4.7µF/35V	CE04W1V4R7M
C402	257 0012 966	Ceramic chip 0.01µF/50V	CK73F1H103Z
C403	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C404,405	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z
C406	259 0007 702	For back up 8200µF	SB CAP=-822=C
C407	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C408	254 4403 734	Electrolytic 4700µF/25V	CE04W1E472MC(SMG)
C409	254 4261 921	Electrolytic 100µF/50V	CE04W1H101M
C410	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C451	254 4260 980	Electrolytic 10µF/50V	CE04W1H100M
C452	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
C453	254 4250 945	Electrolytic 330µF/6.3V	CE04W0J331M
C456	255 1265 936	Film 0.01µF/50V	CQ93M1H103J(B)
C459,460	253 1151 905	Ceramic 4700pF/500V	CK45E2H472P
△C461	254 3042 905	Metalized 0.1µF/50V	CF93A2E104K
C462	254 4254 938	Electrolytic 47µF/16V	CE04W1C470M
C549	254 4252 927	Electrolytic 47µF/10V	CE04W1A470M
C701,702	257 0003 988	Ceramic chip 47pF/50V	CC73SL1H470J
C703,704	257 0005 944	Ceramic chip 220pF/50V	CC73SL1H221J
C705,706	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C709,710	254 4250 929	Electrolytic 100µF/6.3V	CE04W0J101M
C711,712	255 4199 999	Film 0.024µF/50V	CQ92M1H243J(MRZ)
C713,714	255 1265 907	Film 6800pF/50V	CQ93M1H682J(B)
C715,716	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C717,718	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z
C724	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C725	257 0012 982	Ceramic chip 0.022µF/50V	CK73F1H223Z
C801,802	257 0016 962	Ceramic chip 27pF/50V	CC73CH1H270J
C803--805	254 4250 916	Electrolytic 47µF/6.3V	CE04W0J470M
C807,808	257 0003 933	Ceramic chip 30pF/50V	CC73SL1H300J
C809	257 0012 966	Ceramic chip 0.01µF/50V	CK73F1H103Z
C810	254 4250 916	Electrolytic 47µF/6.3V	CE04W0J470M
C811	257 0006 943	Ceramic chip 560pF/50V	CC73SL1H561J

1U-2818 TUNER UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks
OTHERS PARTS GROUP			
CB29D	205 0990 045	29P FFC connector base	
CB6A,6C	205 0918 001	6P bottom socket	
CB8A	205 0918 014	8P bottom socket	
CB8B,8C	205 0806 090	8P connector base (9115)	
CN3C	203 2377 000	2P DA-DA connector cord	
CN7A	205 0653 078	7P VH connector base	
L391,392	235 0104 007	Inductor(1MHz)	
L701,702	235 9003 002	FTZ choke coil	
RL451,452	214 0167 005	Relay(G5Z-2A)	
RL453	214 0127 003	Relay(RY-12W)	
TH451	279 0034 067	Posistor	PTH9M04BB222TS2F333
TP001,002	205 0190 036	3P NH Connector base	TEST POINT
XL601	399 0178 007	Crystal	4.332MHz
XT801	399 0041 901	Resonator	CSA4.00MG
	205 0484 001	8P speaker terminal	Europe model
	203 0475 072	1P contact Ass'y	
	205 0472 013	6P speaker terminal	U.K model
	204 8486 009	4P pin jack(S-GND)	
	204 8486 008	6P pin jack(S-GND)	

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC501	263 0891 001	IC LA1265(S)	
IC502	263 0439 007	IC LA3401	
IC503	263 0791 907	IC LM7001M	
IC504	263 0794 001	IC NJM78M12FA(S)	
TR501	275 0074 902	Transistor 2SK211(Y/GR)	
TR502	273 0438 908	Transistor 2SC2413K (Q)	
TR503	269 0157 905	Transistor DTB123EK	Built in resistor
TR504	269 0083 901	Transistor DTA114EK	Built in resistor
TR505,506	269 0054 901	Transistor DTC144EK	Built in resistor
TR507	271 0279 909	Transistor 2SA1515(R)	
TR508	275 0075 901	Transistor 2SK209(Y/GR)	
TR509	273 0403 904	Transistor 2SC2712(Y/GR)	
D501	276 0559 909	Diode DAP202K	
RESISTORS GROUP (Not included carbon film ±5% 1/4W)			
R001~016	247 0018 905	Chip 0ohm 1/10W	RM73B~0R0K
R501	247 0004 906	Chip 39ohm 1/10W	RM73B~390J
R502	247 0007 945	Chip 1kohm 1/10W	RM73B~102J
R503	247 0009 985	Chip 10kohm 1/10W	RM73B~103J
R504	247 0009 927	Chip 5.6kohm 1/10W	RM73B~562J
R505	247 0006 920	Chip 330ohm 1/10W	RM73B~331J
R506	247 0009 901	Chip 4.7kohm 1/10W	RM73B~472J
R507	247 0005 989	Chip 220ohm 1/10W	RM73B~221J
R508,509	247 0006 920	Chip 330ohm 1/10W	RM73B~331J
R510	247 0006 989	Chip 560ohm 1/10W	RM73B~561J
R511	247 0012 927	Chip 100kohm 1/10W	RM73B~104J
R512	247 0009 914	Chip 5.1kohm 1/10W	RM73B~512J
R513	247 0005 905	Chip 100ohm 1/10W	RM73B~101J
R514	247 0008 986	Chip 3.9kohm 1/10W	RM73B~392J
R515	247 0006 946	Chip 390ohm 1/10W	RM73B~391J
R516	247 0005 947	Chip 150ohm 1/0W	RM73B~151J
R517	247 0009 985	Chip 10kohm 1/10W	RM73B~103J
R518	247 0018 905	Chip 0ohm 1/10W	RM73B~0R0K
R519	247 0009 901	Chip 4.7kohm 1/10W	RM73B~472J
R520	247 0004 980	Chip 82ohm 1/10W	RM73B~820J
R521	247 0008 944	Chip 2.7kohm 1/10W	RM73B~272J
R522	247 0011 902	Chip 33kohm 1/10W	RM73B~333J
R523~525	247 0009 985	Chip 10kohm 1/10W	RM73B~103J
R526	247 0008 957	Chip 3kohm 1/10W	RM73B~302J
R527	247 0011 986	Chip 68kohm 1/10W	RM73B~683J
R528	247 0009 956	Chip 7.5kohm 1/10W	RM73B~752J
R529	247 0008 980	Chip 3.3kohm 1/10W	RM73B~332J
R530	247 0012 927	Chip 100kohm 1/10W	RM73B~104J
R532	247 0009 985	Chip 10kohm 1/10W	RM73B~103J
R533	247 0007 945	Chip 1kohm 1/10W	RM73B~102J
R534	247 0011 915	Chip 36kohm 1/10W	RM73B~363J

Ref. No.	Part No.	Part Name	Remarks
R535	247 0010 974	Chip 24kohm 1/10W	RM73B--243J
R536	247 0012 985	Chip 180kohm 1/10W	RM73B--184J
R537	247 0012 998	Chip 200kohm 1/10W	RM73B--204J
R538	247 0012 985	Chip 180kohm 1/10W	RM73B--184J
R539	247 0012 998	Chip 200kohm 1/10W	RM73B--204J
R540,541	247 0008 902	Chip 1.8kohm 1/10W	RM73B--182J
R542,543	247 0009 901	Chip 4.7kohm 1/10W	RM73B--472J
R544	247 1007 986	Chip 1.5kohm 1/8W	RM73B2B152J
R545	247 0009 985	Chip 10kohm 1/10W	RM73B--103J
R546	247 0012 927	Chip 100kohm 1/10W	RM73B--104J
CAPACITORS GROUP			
C501~506	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C507	257 0002 947	Chip(Ceramic) 12pF/50V	CC73SL1H120J
C508	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C509	257 0004 961	Chip(Ceramic) 100pF/50V	CC73SL1H101J
C510	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C511	254 4260 906	Electrolytic 0.1µF/50V	CE04W1H0R1M
C513	254 3056 917	Electrolytic 1µF/50V (Non-polar)	CE04D1H010MBP
C514	257 0012 982	Chip(Ceramic) 0.022µF/50V	CK73F1H223Z
C515,516	257 0002 976	Chip(Ceramic) 16pF/50V	CC73SL1H160J
C517	254 4254 938	Electrolytic 47µF/16V	CE04W1C470M
C518,519	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C520	254 4260 922	Electrolytic 0.33µF/50V	CE04W1HR33M
C521	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C522	254 4256 936	Electrolytic 47µF/25V	CE04W1E470M
C523	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C524	254 4260 964	Electrolytic 3.3µF/50V	CE04W1H3R3M
C525	257 0012 982	Chip(Ceramic) 0.022µF/50V	CK73F1H223Z
C526	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C527	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C528	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C529	257 1013 951	Chip(Ceramic) 0.047µF/25V	CK73F1E473K
C530	254 4254 912	Electrolytic 22µF/16V	CE04W1C220M
C531	257 0004 961	Chip(Ceramic) 100pF/50V	CC73SL1H101J
C532	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C533	254 4260 919	Electrolytic 0.22µF/50V	CE04W1HR22M
C534	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C535,536	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C537	254 4254 912	Electrolytic 22µF/16V	CE04W1C220M
C538	254 4254 938	Electrolytic 47µF/16V	CE04W1C470M
C539,540	257 0005 960	Chip(Ceramic) 270pF/50V	CC73SL1H271J
C541	254 4260 951	Electrolytic 2.2µF/50V	CE04W1H2R2M
C545	253 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C548	254 4260 951	Electrolytic 2.2µF/50V	CE04W1H2R2M
C550,551	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C553,554	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C555	256 1034 937	Metalized 0.047µF/50V	CF93A1H473J
C561	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z

Ref. No.	Part No.	Part Name	Remarks
OTHERS PARTS GROUP			
CF501,502	261 0064 007	Ceramic filter	SFT10.7MS2
CF504	261 0101 009	:Ceramic filter	BFU450C4N
CN8B,8C	205 0805 091	8P connector socket	
FE501	216 0065 006	Front end	
T501	231 1913 004	MW antenna OSC coil	
T502	231 2099 008	FM DET trans	
T503	231 3904 008	:AM IFT	
T504	232 9010 009	Antibirdie filter	
T505,506	232 0065 004	:LPF	
XL502	261 0103 007	:Resonator	CSB456F11
XL503	399 0075 003	Crystal	7.2MHz
	205 0847 004	3P antenna terminal(PAL/F)	
	205 0526 031	1P Contact Ass'y	

KU-9328 DISPLAY UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC601	262 2249 001	IC TMP87CM71F-6348	
IC602	263 0905 900	IC BA6208F	
ZD651	276 0654 901	Zener diode DTZ8.2B	
RESISTORS GROUP (Not included carbon film ±5% 1/4W)			
VR301	211 0841 018	Valiable 100kohm	V14P22FW104K
VR302	211 0831 002	Valiable 100kohm	V1620V25FB104(MG)
VR303	211 0842 017	Valiable 250kohm	V14P22FC254K
VR304	211 0843 016	Valiable 50kohm	V14P22FC503K
VR307	211 9131 004	Valiable 100kohm	V14P22FB104K
R301,302	247 0011 928	Chip 39kohm 1/10W	RM73B–393J
R303,304	247 0009 943	Chip 6.8kohm 1/10W	RM73B–682J
R361,362	247 0011 973	Chip 62kohm 1/10W	RM73B–623J
R363,364	247 0009 998	Chip 11kohm 1/10W	RM73B–113J
R365,366	247 0008 931	Chip 2.4kohm 1/10W	RM73B–242J
R367,368	247 0013 984	Chip 470kohm 1/10W	RM73B–474J
R369,370	247 0010 945	Chip 18kohm 1/10W	RM73B–183J
R371,372	247 0009 943	Chip 6.8kohm 1/10W	RM73B–682J
R373,374	247 0006 917	Chip 300ohm 1/10W	RM73B–301J
R375,376	247 0011 944	Chip 47kohm 1/10W	RM73B–473J
R379,380	247 0009 901	Chip 4.7kohm 1/10W	RM73B–472J
R651	247 1009 900	Chip 4.7kohm 1/8W	RM73B2B472J
R652–657	247 0009 985	Chip 10kohm 1/10W	RM73B–103J
R665	247 0007 945	Chip 1kohm 1/10W	RM73B–102J
R666	247 0005 976	Chip 200ohm 1/10W	RM73B–201J
R667	247 0006 917	Chip 300ohm 1/10W	RM73B–301J
R668	247 0007 945	Chip 1kohm 1/10W	RM73B–102J
R669	247 0005 976	Chip 200ohm 1/10W	RM73B–201J
R670	247 0006 917	Chip 300ohm 1/10W	RM73B–301J
R671	247 0007 945	Chip 1kohm 1/10W	RM73B–102J
R672	247 0005 976	Chip 200ohm 1/10W	RM73B–201J
R673	247 0006 917	Chip 300ohm 1/10W	RM73B–301J
R674	247 0006 975	Chip 510ohm 1/10W	RM73B–511J
R675	247 0007 945	Chip 1kohm 1/10W	RM73B–102J
R676	247 0007 945	Chip 1kohm 1/10W	RM73B–102J
R677	247 0005 976	Chip 200ohm 1/10W	RM73B–201J
R678	247 0006 917	Chip 300ohm 1/10W	RM73B–301J
R679	247 0006 975	Chip 510ohm 1/10W	RM73B–511J
R680	247 0007 945	Chip 1kohm 1/10W	RM73B–102J
R681	247 0009 985	Chip 10kohm 1/10W	RM73B–103J
R682,683	247 0009 985	Chip 10kohm 1/10W	RM73B–103J
R685	247 0008 957	Chip 3kohm 1/10W	RM73B–302J

Ref. No.	Part No.	Part Name	Remarks
CAPACITORS GROUP			
C300	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C301,302	257 0006 943	Ceramic 560pF/50V	CC73SL1H561J
C303,304	255 1265 978	Film 0.022µF/50V	CQ93M1H223J(B)
C361,362	257 0004 961	Ceramic 100pF/50V	CC73SL1H101J
C363,364	255 1265 981	Film 0.027µF/50V	CQ93M1H273J(B)
C365,366	256 1034 982	Metalized 0.12µF/50V	CF93A1H124J
C367,368	255 1264 924	Film 1500pF/50V	CQ93M1H152J(B)
C369,370	255 1265 936	Film 0.01µF/50V	CQ93M1H103J(B)
C651	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C652	254 4300 963	Electrolytic 100µF/6.3V	CE04W0J101M(SRE)
C653	257 0012 966	Chip(Ceramic) 0.01µF/50V	CK73F1H103Z
C655	254 4299 964	Electrolytic 47µF/16V	CE04W1C470M(SRE)
C657	257 0012 982	Chip(Ceramic) 0.022µF/50V	CK73F1H223Z
C666	257 0004 961	Ceramic 100pF/50V	CC73SL1H101J
OTHERS PARTS GROUP			
CB8D	205 0919 026	8P JQ socket(Side)	
CN29D	205 0990 045	29P FFC connector base	
CN6A,6C	205 0917 002	6P bottom plug	
CN8A	205 0917 015	8P bottom plug	
CN8D	205 0408 045	8P JQ socket	
FL401	393 4155 002	FL tube	FIP14AM7R
JK201	204 8354 017	Head phone jack	Black model
JK201	204 8355 003	Head phone jack	Gold model
RM601	499 0150 008	Remote sensor	SBX1610-52
SW302,303	212 1140 009	Push switch(ESB6440)	
SW601–617	212 5604 910	Tact switch	
XL651	399 0261 901	Resonator	DCRH4.00M
	414 0740 006	Shield plate	

1U-2915 POWER UNIT ASS'Y

Ref. No.	Part No.	Part Name	Remarks
CAPACITORS GROUP			
⚠C411	253 8014 702	Ceramic 0.01µF/400V AC	CK45F2GA103MC
OTHERS PARTS GROUP			**CK45=1E103K**
⚠AC401	203 3961 004	1P AC outlet	Except to U.K.
⚠CN2A	203 3949 009	2P inlet	
CN3A	205 0581 001	2P VH connector base	
⚠F401	206 1075 036	Fuse(2.0A)	
⚠F402	206 1075 001	Fuse(1A)	Except to U.K.
⚠SW401	212 1031 008	Power switch(TV-5)	
	415 0299 000	Condencer cover	
	202 0040 909	Fuse clip	

PRINTED WIRING BOARD PATTERNS

1 2 3 4 5 6 7 8

A B C D E

1U-2817 MAIN UNIT ASS'Y

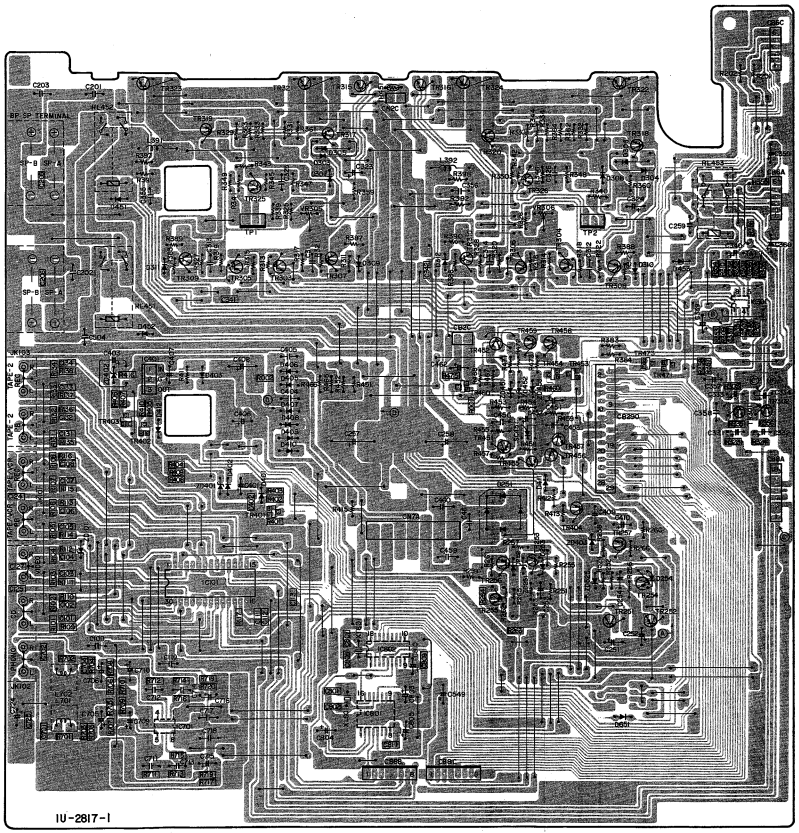

1U-2915 POWER UNIT ASS'Y

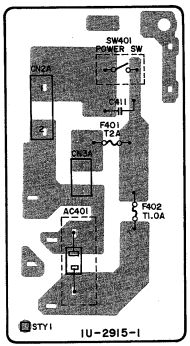

KU-9328 DISPLAY UNIT ASS'Y

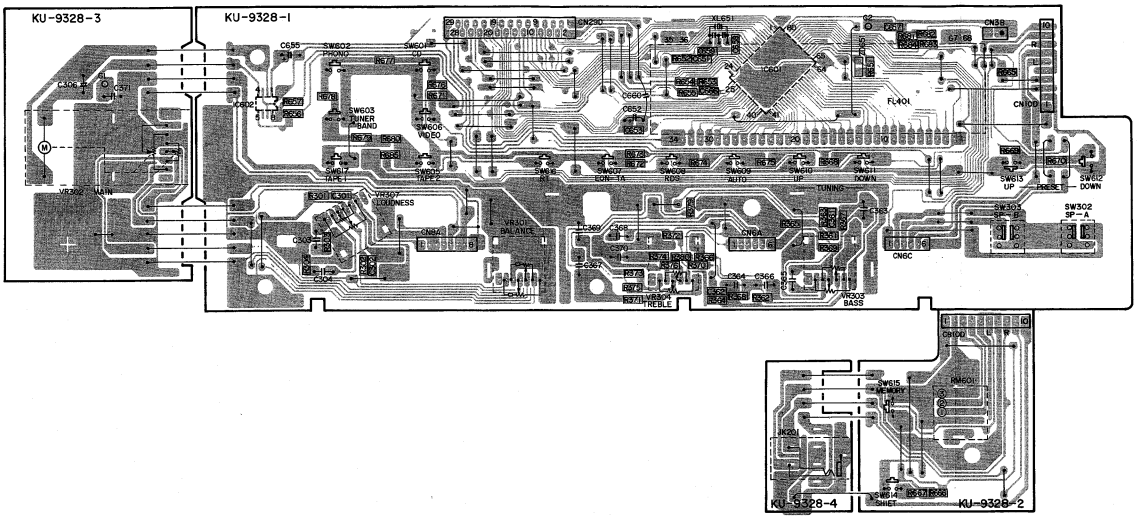

1U-2818 TUNER UNIT ASS'Y

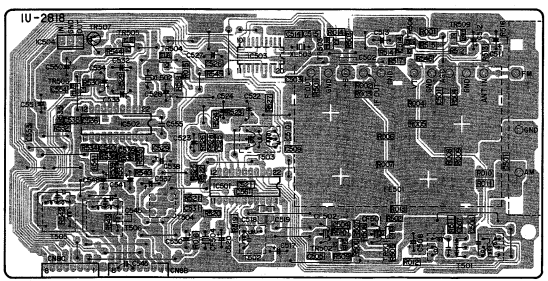

EXPLODED VIEW OF CHASSIS AND CABINET

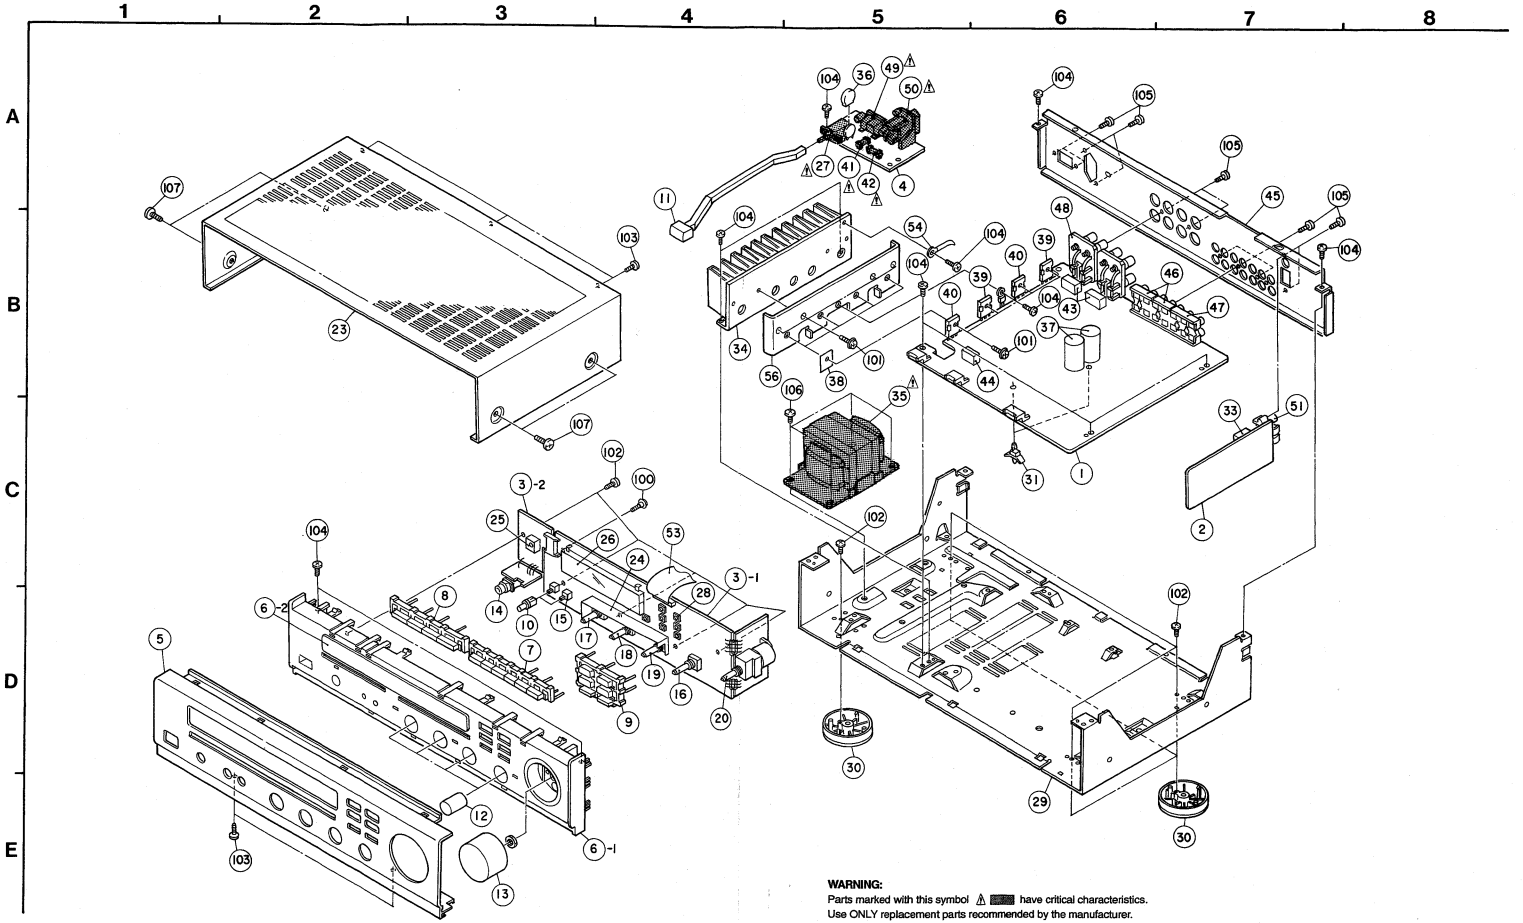

WARNING:
Parts marked with this symbol ⚠ ▒▒ have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

PARTS LIST EXPLODED VIEW

* Gold model = Except to U.K.

Ref. No.	Part No.	Part Name	Remarks	Q'ty
◉ 1	1U- 2817 E	Main unit Ass'y	Europe model	1
	—			
◉ 1	1U- 2817 F	Main unit Ass'y	U.K. model	1
	—			
◉ 2	1U- 2818	Tuner unit Ass'y		1
◉ 3	KU- 9328	Display unit Ass'y		1
3-1	—	Display & Volume unit		
3-2	—	H/P J.& Remocon unit		
4	1U- 2915	Power unit Ass'y		1
◉ 5	144 2487 002	Front panel	Black model	1
◉ 5	144 2487 015	Front panel	Gold model	1
◉ 6-1	146 1602 004	Inner panel Ass'y	Black model	1
6-2	143 9187 001	(Window)		
◉ 6-1	146 1602 017	Inner panel Ass'y	Gold model	1
6-2	143 9187 001	(Window)		
7	113 9325 008	Series button (A)	Black model	1
7	113 9325 011	Series button (A)	Gold model	1
8	113 9326 007	Series button (B)	Black model	1
8	113 9326 010	Series button (B)	Gold model	1
9	113 9324 229	Function button	Black model	1
9	113 9324 232	Function button	Gold model	1
10	113 9323 000	Push button (SP)	Black model	2
10	113 9323 013	Push button (SP)	Gold model	2
11	113 1721 105	Power button Ass'y	Black model	1
11	113 1721 011	Power button Ass'y	Gold model	1
12	112 0739 001	:*Knob (Maru)	Black model	4
12	112 0739 014	:*Knob (Maru)	Gold model	4
13	112 0737 029	:*Volume knob	Black model	1
13	112 0737 032	:*Volume knob	Gold model	1
14	204 8354 017	Head phone jack	Black model	1
14	204 8355 003	Head phone jack	Gold model	1
15	212 1140 009	Push switch(ESB6440)	SW3002,303	2
16	211 9131 004	Variable resistor	VR307	1
17	211 0842 017	Variable resistor	VR303	1
18	211 0843 016	Variable resistor	VR304	1
19	211 0841 018	Variable resistor	VR301	1
20	211 0831 002	Variable resistor	VR302	1
◉ 23	102 0571 013	Top cover	Gold model	1
◉ 23	102 0571 000	Top cover	Black model	1
◉ 24	414 0740 006	Shield plate		1
25	499 0150 008	Remote sensor	SBX1610-52	1
26	383 4155 002	FL tube	FIP14AM7R	1
⚠ 27	212 1031 008	Power switch (TV-S)		1
28	212 5604 910	Tact switch		
		SW601–603,605–617		16
◉ 29	411 1323 300	Chassis		1
◉ 30	104 0230 101	:Foot Ass'y		4
◉ 31	449 0033 049	Locking card spacer		2
33	216 0065 006	Front end		1
◉ 34	417 0529 006	:Power radiator		1
⚠ 35	233 6194 002	:Power Transformer		1

Ref. No.	Part No.	Part Name	Remarks	Q'ty
◉ 36	415 0299 000	Capacitor cover		1
37	254 6201 002	Electrolytic capacitor	C257,258	2
38	415 0234 007	Insulating sheet		4
39	271 0240 006	Transistor 2SA1491(O/P/Y)	TR323,324	2
40	273 0389 002	Transistor 2SC3855(O/P/Y)	TR321,322	2
⚠ 41	206 1075 030	Fuse (2.0A)	F401	1
⚠ 42	206 1075 001	Fuse (1A)	Except to U.K.	1
43	214 0167 005	Relay(G5Z-2A)	RL451,452	2
44	214 0127 003	Relay(RY-12W)	RL453	1
◉ 45	105 1187 104	:Rear panel	Europe model	1
◉ 45	105 1187 117	:Rear panel	U.K model	1
46	204 8485 009	4P pin jack(S-GND)		2
47	204 8486 008	6P pin jack(S-GND)		1
48	205 0484 001	8P speaker terminal	Europe model	1
48	205 0472 013	8P speaker terminal	U.K model	1
⚠ 49	203 2349 009	2P inlet	CN2A	1
⚠ 50	203 3961 004	1P AC outlet	Except to U.K.	1
◉ 51	205 0847 004	3P antenna terminal(PAL/F)		1
53	009 0134 009	29P FFC cable		1
54	445 0048 003	Cord holder(L=76)		1
56	417 0520 102	Sub radiator		1
SCREWS				
100	477 0262 006	Special screw		1
101	473 8007 009	Cup screw 3×12		8
102	473 7500 044	Screw 3×8 (P) BK		9
103	473 7015 018	Screw 3×8 (S) BK		5
104	473 7002 018	Screw 3×8 (S)		12
105	477 8057 004	Fixing screw 3×10 BK		11
106	473 7004 016	Screw 4×6 (S)		4
107	473 7007 013	Screw 4×10 (S) BK	Black model	4
107	473 4801 005	Screw 4×8	Gold model	4

PACKING & ACCESSORIES

Ref. No.	Part No.	Part Name	Remarke	Q'ty
◉	505 0283 018	:Envelope		1
◉	511 2840 001	Operating instructions		1
	231 1914 003	AM loop antenna		1
	395 0023 008	:*FM antenna Ass'y		1
	399 0242 001	Remoto control unit	RC-174	1
⚠	206 2106 003	:AC connectorWith plug	Europe model	1
⚠	206 2113 001	:AC cordWith connector	U.K model	1
◉	505 0131 050	Cabinet cover		1
◉	503 1140 109	:Cushion		2
◉	501 1871 045	Carton case		1

WIRING DIAGRAM

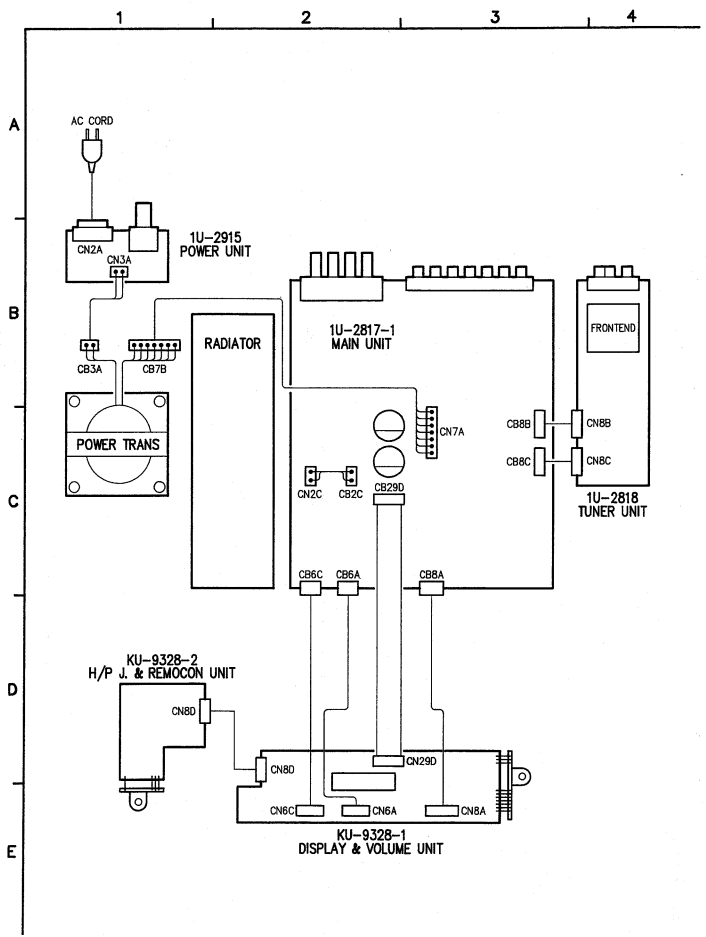

SCHEMATIC DIAGRAM

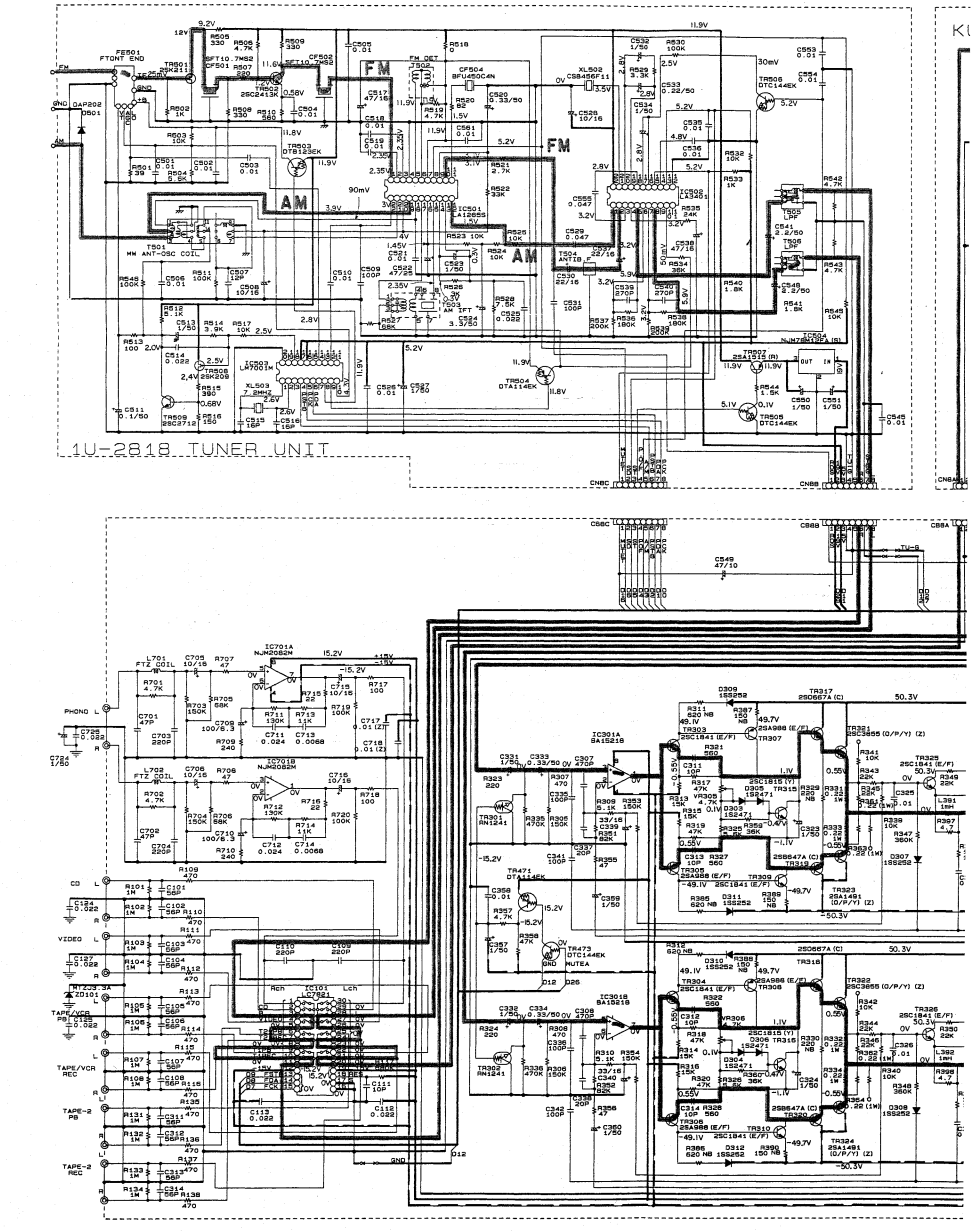

WARNING:
Parts marked with this symt
Use ONLY replacement par

CAUTION:
Before returning the unit to t
current check or (2) a line t
exceeds 0.5 milliamps, or if
cord is less than 240 kohms

WARNING:
DO NOT return the unit to th

NOTES:
Circuit and parts are sub

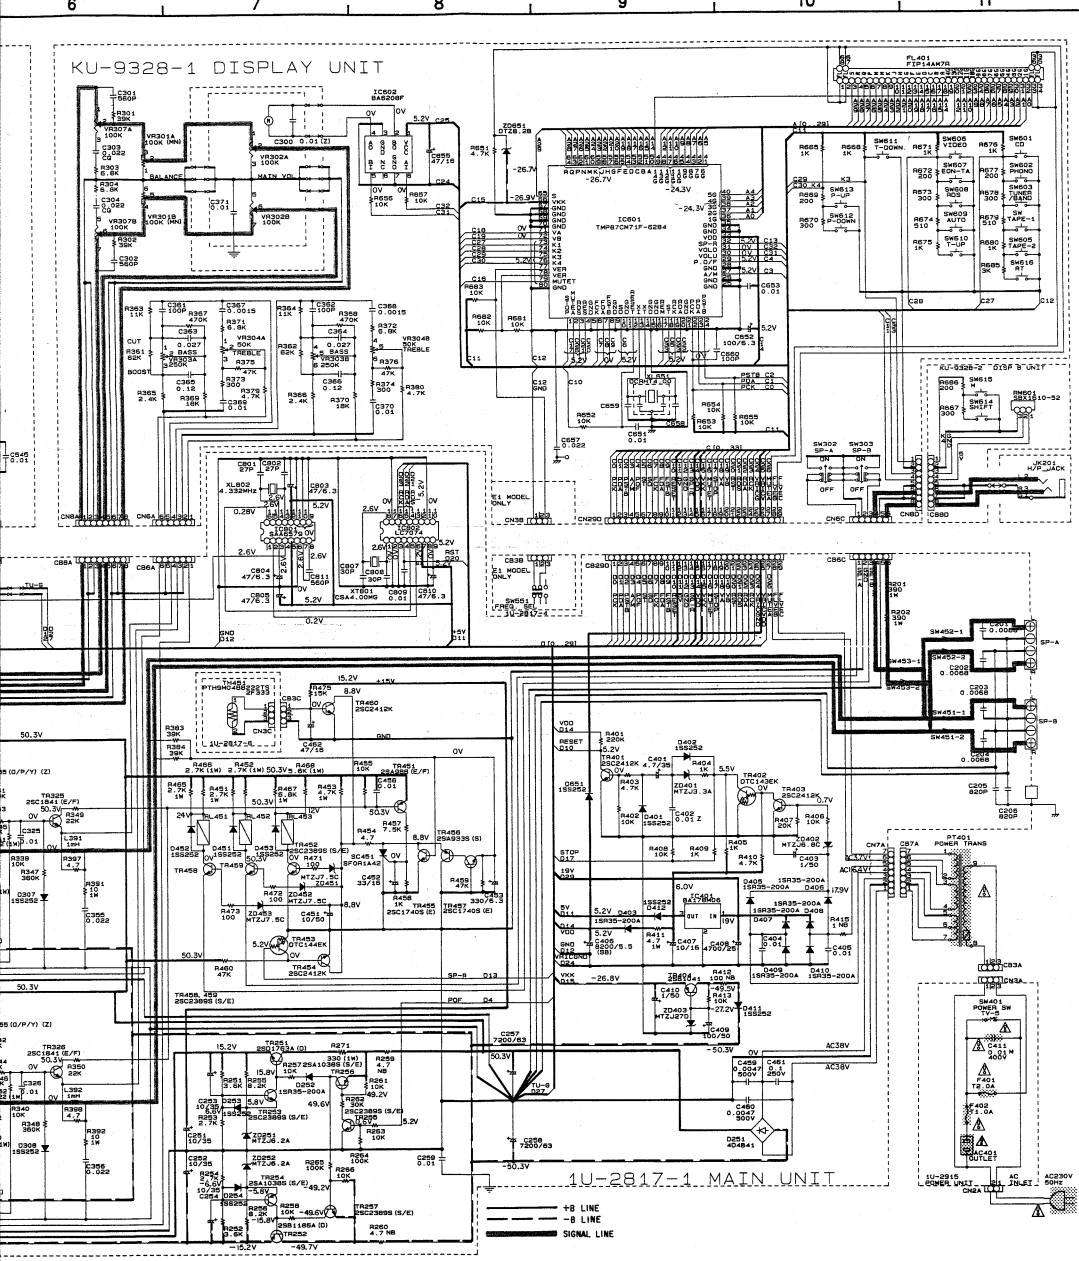

NING:
marked with this symbol ⚠ ▨ have critical characteristics.
ONLY replacement parts recommended by the manufacturer.

TION:
re returning the unit to the customer, make sure you make either (1) a leakage
nt check or (2) a line to chassis resistance check. If the leakage current
eds 0.5 milliamps, or if the resistance from chassis to either side of the power
is less than 240 kohms, the unit is defective.

NING:
NOT return the unit to the customer until the problem is located and corrected.

ES:
uit and parts are subject to change without prior notice.

NOTES
ALL RESISTANCE VALUES IN OHM. k=1,000 OHM,
M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD.
P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO
SIGNAL INPUT CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT
PRIOR NOTICE.

● IC's

TMP87CM71F-6348 (IC601)

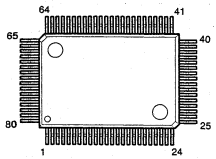

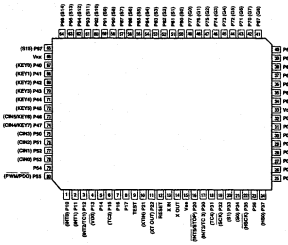

TMP87CM71F Port Allocation Table

Pin No.	Symbol	I/O	Logic	Initial Setting	Function
1	STOP	I	L	—	Power down detection ("L" = at power down).
2	MUTE (A)	I	—	—	MUTE (A) output ("H" = MUTE)
3	RDS	I	Serial	—	RDS data (start) input.
4	RES	O	L	H	LC7074 reset output.
5	GND	I	Serial	—	Not used.
6	FCK	O	Serial	L	Function control ouput (LC7621) for F-CK.
7	FDA	O	Serial	L	Function control ouput (LC7621) for F-DATA.
8	F STB	O	H	L	Function control ouput (LC7621) for F-STB.
9	GND	I	—	—	Connect to GND.
10	SD	I	L	—	Tuned signal input ("L" = at tuned in).
11	GND	I	—	—	Not used.
12	RESET	I	L	—	Reset input.
13	XIN	I	—	—	Oscillation circuit (4MHz).
14	XOUT	I	—	—	Oscillation circuit (4MHz).
15	Vss	PW	—	—	GND
16	GND	I	—	—	GND
17	REM	I	L	—	Remote control signal input.
18	ST	I	L	—	Stereo signal input ("L" = at stereo).
19	RCK	I	Serial	—	RDS data (clock) input.
20	RDA	I	Serial	—	RDS data (data) input.
21	GND	I	—	—	Not used.
22	PCK	O	Serial	L	LM7001 control output for PLL-CK (CL).
23	PDA	O	Serial	L	LM7001 control output for PLL-DATA (DATA).
24	PSTB	O	H	L	LM7001 control output for PLL-STB (CE).
25	GND	O	—	L	GND
26	GND	O	—	L	GND
27	A/M	O	L	L	AUTO/MANUAL control.
28	GND	I	—	—	Not used.
29	P O/F	O	H	L	Power control ouput ("H" = ON).
30	VR-UP	O	H	L	Power volume control output (LB1639 ON = at "H").
31	VR-D	O	H	L	Power volume control output (LB1639 ON = at "H").
32	SP-R	O	H	L	Speaker relay control output (ON = at "H").
33	VDD	PW	—	—	+5V
34	GND	I	—	—	GND
35	GND	I	—	—	GND
36	1G	O	—	—	FL tube control ouput for 1G.
37	2G	O	—	—	FL tube control ouput for 2G.
38	3G	O	—	—	FL tube control ouput for 3G.
39	4G	O	—	—	FL tube control ouput for 4G.

Pin No.	Symbol	I/O	Logic	Initial Setting	Function
40	5G	O	—	—	FL tube control ouput for 5G.
41	6G	O	—	—	FL Tube control output for 6G.
42	7G	O	—	—	FL Tube control output for 7G.
43	8G	O	—	—	FL Tube control output for 8G.
44	9G	O	—	—	FL Tube control output for 9G.
45	10G	O	—	—	FL Tube control output for 10G.
46	11G	O	—	—	FL Tube control output for 11G.
47	12G	O	—	—	FL Tube control output for 12G.
48	13G	O	—	—	FL Tube control output for 13G.
49	14G	O	—	—	FL Tube control output for 14G.
50	S0 (a)	O	—	—	FL Tube control output for P(a).
51	S1 (b)	O	—	—	FL Tube control output for P(b).
52	S2 (c)	O	—	—	FL Tube control output for P(c).
53	S3 (d)	O	—	—	FL Tube control output for P(d).
54	S4 (e)	O	—	—	FL Tube control output for P(e).
55	S5 (f)	O	—	—	FL Tube control output for P(f).
56	S6 (g)	O	—	—	FL Tube control output for P(g).
57	S7 (h)	O	—	—	FL Tube control output for P(h).
58	S8 (i)	O	—	—	FL Tube control output for P(i).
59	S9 (k)	O	—	—	FL Tube control output for P(k).
60	S10 (m)	O	—	—	FL Tube control output for P(m).
61	S11 (n)	O	—	—	FL Tube control output for p(n).
62	S12 (o)	O	—	—	FL Tube control output for P(o).
63	S13 (q)	O	—	—	FL Tube control output for P(q).
64	S14 (r)	O	—	—	FL Tube control output for P(r).
65	S15 (s)	O	—	—	FL Tube control output for P(s).
66	Vsk	PW	—	—	-15V
67					
68	GND	I	—	—	GND
69					
70					
71	VA	O	L	H	Video In/Out control ("L" = at selection) BV4066.
72	VB	O	L	H	Video In/Out control ("L" = at selection) BV4066.
73	K1	I	—	—	Key input (A/D conversion input).
74	K2	I	—	—	Key input (A/D conversion input).
75	K3	I	—	—	Key input (A/D conversion input).
76	K4	I	—	—	Key input (A/D conversion input).
77	VER	I	—	—	Forwarding country setting.
78	VER	I	—	—	Specification setting.
79	MUTE (T)	O	H	H	MUTE output ("H" = MUTE).
80	GND	I	—	—	GND

LM7001 (IC503)



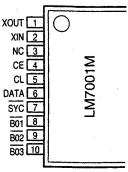

LA3401 (IC502)

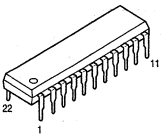

BA620

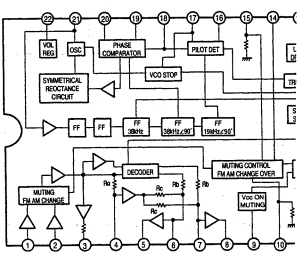

● TRANSISTORS

2SA988(E/F)
2SA1515(R)
2SC1815(Y)
2SC1841(E/F)



2SB647A(C)
2SB1041(R)
2SD667A(C)



2SA933S(S)
2SA1038S(S/E)
2SC1740S(E)
2SC2389S(S/E)



2SB1328(P)
2SD2004(P)



2SA1491 (O/P/Y) (TR323,324)
2SC3855 (O/P/Y) (TR321,322)



2SB1186A (D)
2SD1763A (D)



Digital Transistor (Built in Resistors)

1:GND/Emitter
2:In/Base
3:Out/Collector

DTA114EK
DTB123EK
DTC114EK
DTC143EK
DTC144EK
(Chip)

RN-1241(A/B)



DTA · DTBEK Series

	R1	R2
DTA114EK	10kohm	10koh
DTB123EK	2.2kohm	2.2koh

DTCEK Series

	R1	R2
DTC114EK	10kohm	10koh
DTC143EK	4.7kohm	4.7koh
DTC144EK	47kohm	47koh

RN-1241



LA1265 (S)
(IC501)

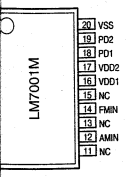

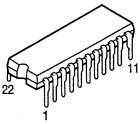

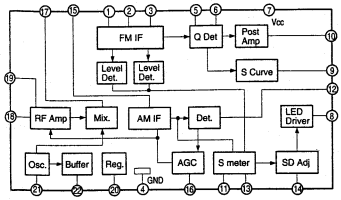

NJM78M12FA (IC504)
BA178M06 (IC401)



LC7821 (IC101)

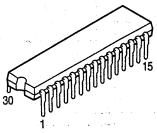

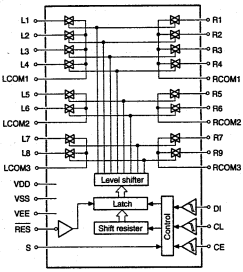

NJM2082MD (IC701)





BA6208F (IC602)



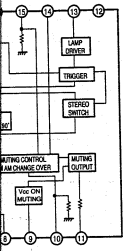

BA15218F (IC301)





SAA6579T (IC801)



Pin No.	Symbol	Description
1	QUAL	Quality indication output.
2	RDDA	RDS data output.
3	V_{ref}	Reference voltage output (0.5 V_{DDA}).
4	MUX	Multiplex signal input.
5	V_{DDA}	+5 V supply voltage for analog part.
6	V_{SSA}	Ground for analog part (0 V).
7	CIN	Subcarrier input to comparator.
8	SCOUT	Subcarrier output of reconstruction filter.
9	TSTLD	Test control.
10	TEST	Test enable.
11	V_{SSD}	Ground for digital part (0 V).
12	V_{DDD}	+5 V supply voltage for digital part.
13	OSCI	Oscillator input.
14	OSCO	Oscillator output.
15	T57	57 kHz clock signal output.
16	RDCL	RDS clock output.

LC7074M (IC802)



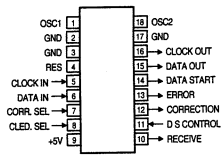

EK Series



R1	R2
kohm	10kohm
kohm	2.2kohm

eries



R1	R2
kohm	10kohm
kohm	4.7kohm
kohm	47kohm

2SK209 (Y/GR)

2SA1037 (S/R)
2SC2412 (S)
2SC2413K (Q)
2SC2712 (Y/GR)
DTB123EK



● DIODES (included LED)

1SS252

1S2471

MTZJ3.3A MTZJ7.5C
MTZJ6.2A MTZJ27D
MTZJ6.8C

4D4B42

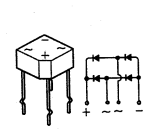

SF0R1A42



2SK211 (Y/RG)

1SR35-200 (A)

DAP202K (Chip)

DAP202K



DTZ8.2B

SBX1610-52 (Remote Control Sensor)

1. Vcc
2. Output
3. GND
4. Case Fin
5. Case Fin

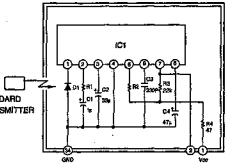

IC1 : CX20106A Chip
D1 : PIN Photodiode Chip
C1,C2,C4 : Aluminum Electrolytic Capacitor
C3 : SL Characteristic ±5%
R1 : Gain control resistor
R2 : fo control resistor (Using ±1%)
R (Other than above items)
: ±5%