

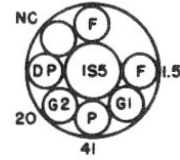
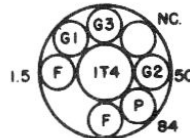


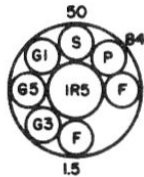

SOCKET VOLTAGE CHART

NOTES.

1. THESE ARE TOP VIEWS OF SOCKETS.
2. MEASURE VOLTAGES FROM SOCKET LUGS TO CHASSIS.
3. THESE VOLTAGES MEASURED USING 20,000 OHMS PER VOLT VOLTMETER D.C.
4. W.J.- WIRING JUNCTION.
5. NC. -NO CONNECTION.
6. SOCKET VOLTAGE TOLERANCE, 10%.

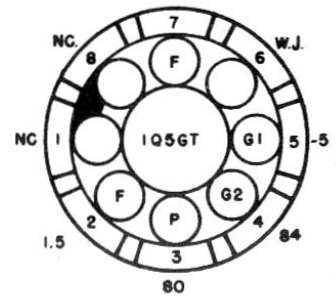

ALIGNMENT CHART

Alignment Sequence	Signal Generator Output			Position of Tuning Dial	Adjust for Maximum Output
	Frequency in kc.	In Series with	To		
1	455	200 mmf.	Ant.	1,620	A & B
2	1,400	200 mmf.	Ant.	1,400	C
3	1,400	200 mmf.	Ant.	1,400	D

Crosley B-1464 Battery Operated Receiver