


ALIGNMENT PROCEDURE

SIGNAL GENERATOR		RECEIVER		
Connections to Receiver	Dial Setting	Dial Setting	Special Instructions	Adjust Trimers
1 Through .05 mf. to stator of antenna section of tuning condenser.	460 kc.	Plates fully meshed	Pre-set C300B fully clockwise.	C300B
2 Through 100 mmf. to stator of antenna section of tuning condenser.	1600 kc.	1600 kc.	Adjust for maximum.	C301A C301B C300A C300B
3 Connect output lead to a wire approx. 6" long, and lay this near the loop.	1500 kc.	1500 kc.	Adjust for maximum.	C401B C401A

ALIGNMENT
DATA
MODEL
708

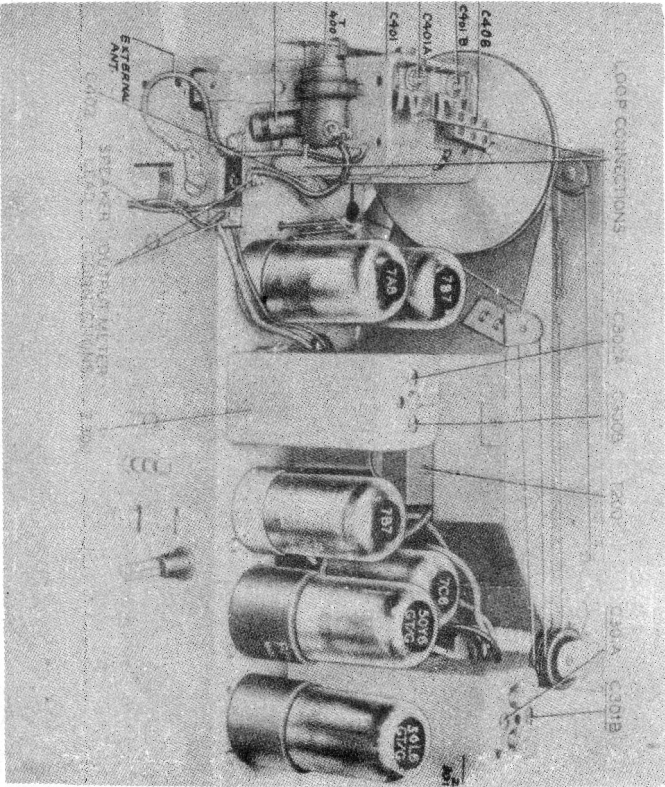

Top view, showing trimmer locations