




Electrohome (Phonola) 1U51-S-1, 1U51-S-2, 1U52-D, 1U52-E, 1U52-L, 1U52-P, 1U52-S, 1U52-S-1

ALIGNMENT—PROCEED IN SEQUENCE LISTED.

Band	Band Switch Setting	Dummy Antenna	Connect Generator To	Radio Dial Setting	Generator Frequency	Trimmer Adjusted	Adjustment	Note
2nd I.F.	B.C.	.1 Mfd.	Grid of 12S.K.7 I.F. Tube	1700 K.C.	455 K.C.	2nd I.F. C-9	Maximum Output	
1st I.F.	B.C.	.1 Mfd.	Grid of 12S.A.7 Converter	1700 K.C.	455 K.C.	1st I.F. C-8	Maximum Output	
1460 K.C.	B.C.	200 Mmfd.	Antenna	1460 K.C.	1460 K.C.	B.C. Osc. C-5 B.C. Ant. C-3	Maximum Output	Refer to Note 1
600 K.C.	B.C.	200 Mmfd.	Antenna	600 K.C.	600 K.C.	B.C. Padder C-7	Maximum Output	Refer to Note 1
15 M.C.	S.W.	400 Ohm	Antenna	15 M.C.	15 M.C.	S.W. Osc. C-6 S.W. Ant. C-4	Maximum Output	Refer to Note 2
6 M.C.	S.W.	400 Ohm	Antenna	6 M.C.	6 M.C.	None	None	Check Only

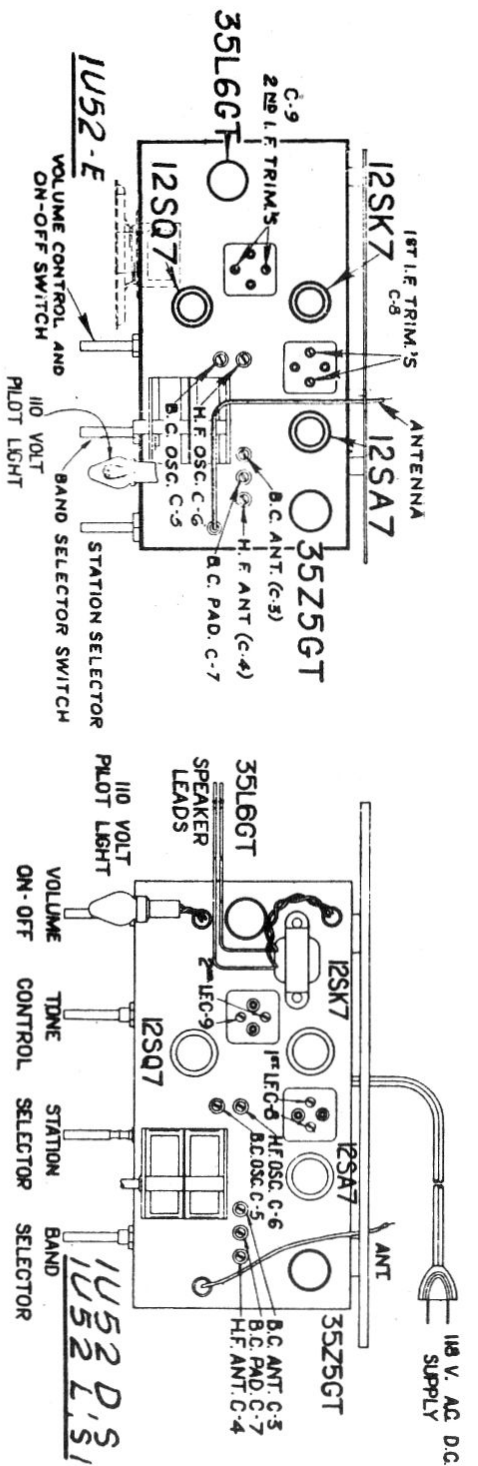