


Models R-29 & R-31 A.C. Receivers

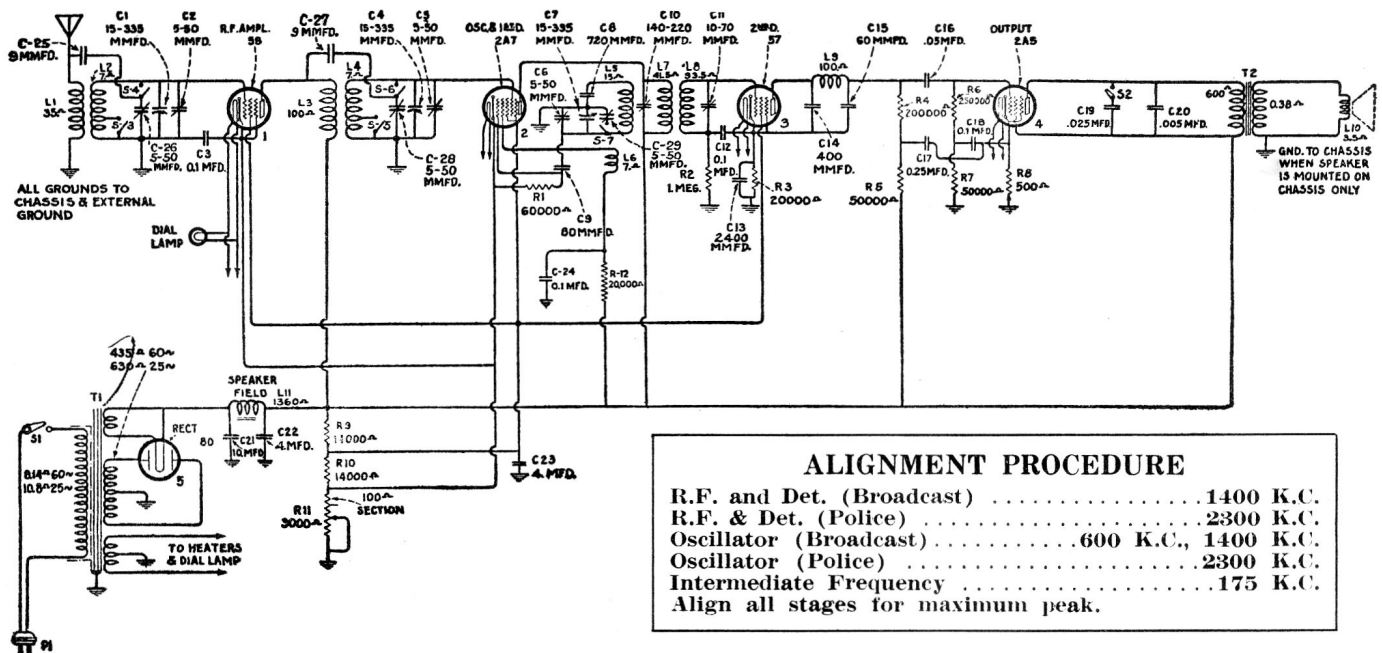

REPLACEMENT PARTS — VICTOR R-29 & R-31

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK NO.	DESCRIPTION	STOCK NO.	DESCRIPTION
RECEIVER ASSEMBLIES			
S-1140	Shield-Radiotron Tube Shield.	6464	Transformer-Intermediate frequency transformer.
S-1151	Socket-6 Contact Radiotron Tube Socket.	6471	Coil-Oscillator Coil.
S-1280	Resistor-200,000 ohm-Carbon Type- $\frac{3}{4}$ watt(R4).	S-1362	Capacitor-Double 4. mfd.-electrolytic capacitor (C22,C23).
S-1308	Capacitor-.1 mfd. Capacitor(C24).	7590	Capacitor-10 mfd.-electrolytic capacitor(C21).
S-1309	Knob-Range Switch knob.	9002	Transformer-Power Transformer 105-125V,25 Cycles (T1).
S-1338	Socket-4 Contact Tube socket and shell assembly.	R-29 ONLY	
S-1339	Coil-Antenna Coil-Tapped.	3575	Socket-Dial lamp socket & bracket.
S-1341	Coil-R.F.Coil-Tapped.	6465	Control-Volume control.(R11).
S-1343	Scale-Tuning dial and scale assembly.	6466	Switch-Tone control switch.(S2).
S-1351	Capacitor-9 mmfd.Capacitor(C25,C27).	6467	Transformer-Output transformer (T2).
S-1352	Transformer-Power Transformer 105-125V,60 Cycle (T1).	7588	Capacitor or variable tuning capacitor.
2269	Capacitor-720 mmfd. capacitor (C8).	S-1344	Switch-Range change switch.
2747	Cap-Contact Cap.	R-31 ONLY	
3050	Resistor-14,000 ohm-Carbon type-3 Watt(R9).	3624	Socket-dial lamp socket & bracket.
3076	Resistor-1. megohm-Carbon type-1/2 Watt(R2).	3625	Scale-Dial & scale assembly-volume control.
3456	Capacitor-.05 mfd.capacitor (C16).	7597	Capacitor-Variable tuning capacitor.
3459	Capacitor-80 mmfd.capacitor(C9).	S-1346	Transformer-Output transformer(T2).
3472	Capacitor-.0024 mfd.capacitor(C13).	S-1347	Switch-Range change switch.
3514	Resistor-250,000 ohms-Carbon type- $\frac{3}{4}$ Watt(R6).	S-1348	Switch-Tone control switch (S2).
3572	Socket-7 Contact-Radiotron Tube socket.	S-1349	Control-Volume control (R11).
3574	Coil-Choke Coil Assembly (L9).	R-29 SPEAKER	
3584	Ring-Coil retaining ring.	8987	Cone-Reproducer cone.
3592	Knob-Tuning Control,Volume Control and Tone Control knob.	8988	Coil assembly-cone housing,magnet and field coil assembly.
3594	Resistor-50,000 ohm-Carbon type-1/2 watt (R5,R7).	S-1345	Board-Terminal board.
3596	Capacitor-60 mmfd.-Capacitor(C17).	R-31 SPEAKER	
3597	Capacitor-.25 mfd.-Capacitor(C17).	8935	Cone-Reproducer cone.
3598	Capacitor-.1 mfd.-Capacitor(C3,C12,C18).	S-1284	Board-Terminal Board.
3602	Resistor-60,000 ohm-Carbon type- $\frac{3}{4}$ Watt(R1).	S-1350	Coil assembly-cone housing magnet and field coil assembly.
3604	Capacitor-400 mmfd.-Capacitor (C14).		
3606	Capacitor-One .005 mfd.and One .25 mfd.in single unit (C19,C20).		
3632	Resistor-500 ohm-Carbon Type-1 Watt (R8).		
6303	Resistor-20,000 ohm-Carbon type- $\frac{3}{4}$ Watt(R3,R12).		
6306	Resistor-14,000 ohm-Carbon type-1 watt(R10).		