


Model RE-33 RCA Victrola

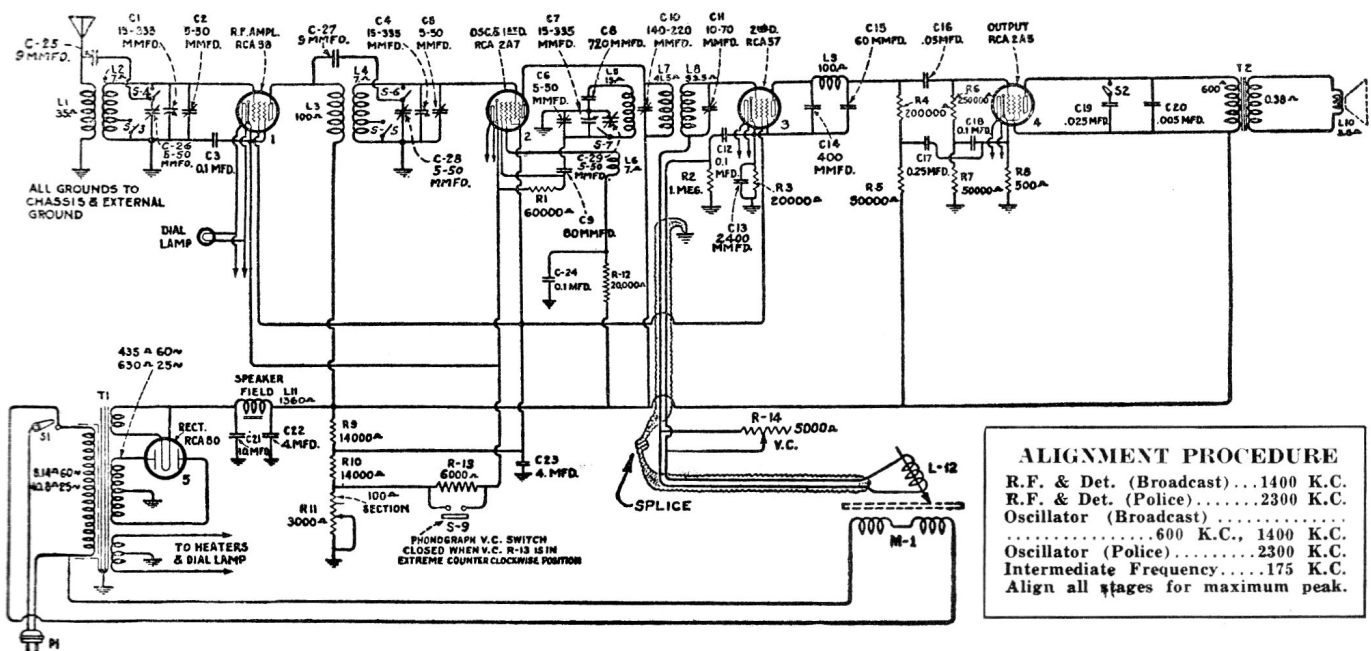

REPLACEMENT PARTS FOR MODEL RE-33

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK NO.	DESCRIPTION	STOCK NO.	DESCRIPTION
RECEIVER ASSEMBLIES			
S-1140	Shield-Radiotron Tube Shield.	6471	Coil-Oscillator Coil.
S-1151	Socket-6 Contact Radiotron Tube Socket.	S-1362	Capacitor-Double 4. mfd.-electrolytic capacitor (C22,C23).
S-1280	Resistor-200,000 ohm-Carbon Type-1/2 watt(R4).	7590	Capacitor-10 mfd.-electrolytic capacitor (C21).
S-1308	Capacitor-1 mfd.Capacitor(C24).	9002	Transformer-Power Transformer 105-125V 25 Cycles (T1).
S-1309	Knob-Range Switch knob.	3575	Socket-dial lamp socket & bracket.
S-1338	Socket-4 Contact Tube socket and shell assembly.	6465	Control-Volume control.(R11).
S-1339	Coil-Antenna Coil-Tapped.	6466	Switch-Tone control switch. (S2).
S-1341	Coil-R.F.Coil-Tapped.	6467	Transformer-Output transformer.
S-1343	Scale-Tuning dial and scale assembly.	7586	Capacitor-Variable tuning capacitor.
S-1351	Capacitor-9 mmfd.Capacitor(C25,C27).	S-1344	Switch-Range change switch.
S-1352	Transformer-Power Transformer 105-125 V 60 Cycle (T1).	8987	Cone-Reproducer cone.
2269	Capacitor-720 mmfd.capacitor(C8).	8988	Coil assembly-cone housing,magnet and field coil assembly.
2747	Cap-Contact Cap.	S-1345	Board-Terminal Board.
3050	Resistor 14,000 ohm-Carbon Type-3 Watt.(R9).	PICKUP AND ARM ASSEMBLIES	
3076	Resistor-1. megohm-Carbon Type-1/2 Watt(R2).	3810	Coil-Pickup coil.
3456	Capacitor-.05 mfd. capacitor(C16).	3811	Screw-Needle holding screw.
3459	Capacitor-80 mmfd. capacitor (C9).	3812	Armature.
3472	Capacitor-.0024 mfd.capacitor(C13).	6592	Pickup and arm assembly complete.
3514	Resistor-250,000 ohms-Carbon Type-1/2 Watt(R6).	TURNTABLE AND MOTOR ASSEMBLIES	
3572	Socket-7 Contact-Radiotron tube socket.	S-1309	Knob-Phonograph volume control knob.
S-1373	Coil-Choke Coil Assembly (L9).	S-1374	Lamination-Stator laminations Assembled-25 Cycle.
3584	Ring-Coil retaining ring-	S-1375	Lamination-Rotor lamination Assembled-25 Cycle.
3592	Knob-Tuning Control,Volume Control and Tone Control knob.	S-1376	Turntable Complete-with spindle for 25 cycle.
3594	Resistor-50,000 ohm-Carbon type-1/2 Watt (R5,R7).	S-1377	Motor Complete-105-125 Volts-25 Cycle.
3596	Capacitor-60 mmfd.-Capacitor (C15).	S-1378	Coil-Stator Coil-25 Cycle.
3597	Capacitor-.25 mfd.-Capacitor (C18).	S-1379	Control-Phonograph volume control.
3598	Capacitor-1.1 mfd.-Capacitor(C3,C12,C18).	3808	Board-Motor terminal board.
3602	Resistor-60,000 ohm-Carbon type-1/4 watt(R1).	3809	Spring.
3604	Capacitor-400 mmfd.-Capacitor(C14).	3813	Motor Suspension Assembly-Comprising:3 Screws, 3 Metal Bushings,6 Rubber Bushings,3 Flat Washers,3 Lock Washers and 3 Nuts.
3606	Capacitor-One .005 mfd.and One .25 mfd.in single unit (C19,C20).	7651	Coil-Stator Coil-60 Cycle.
3632	Resistor-500 ohm-Carbon Type-1 Watt(R8).	7653	Lamination-Stator laminations Assembled-60 Cycle.
6303	Resistor-20,000 ohm-Carbon Type-1/2 Watt(R3, R12).	7655	Lamination-Rotor lamination assembly-60 Cycle.
6306	Resistor-14,000 ohm-Carbon Type-1 Watt(R10).	7657	Base-Motor Base and Bearing Assembly.
6464	Transformer-Intermediate Frequency Transformer.	9038	Motor Complete-105-125 Volts-60 Cycle.
		9040	Turntable Complete-with spindle for 60 Cycle.
		10194	Ball-Steel Ball Bearing.