
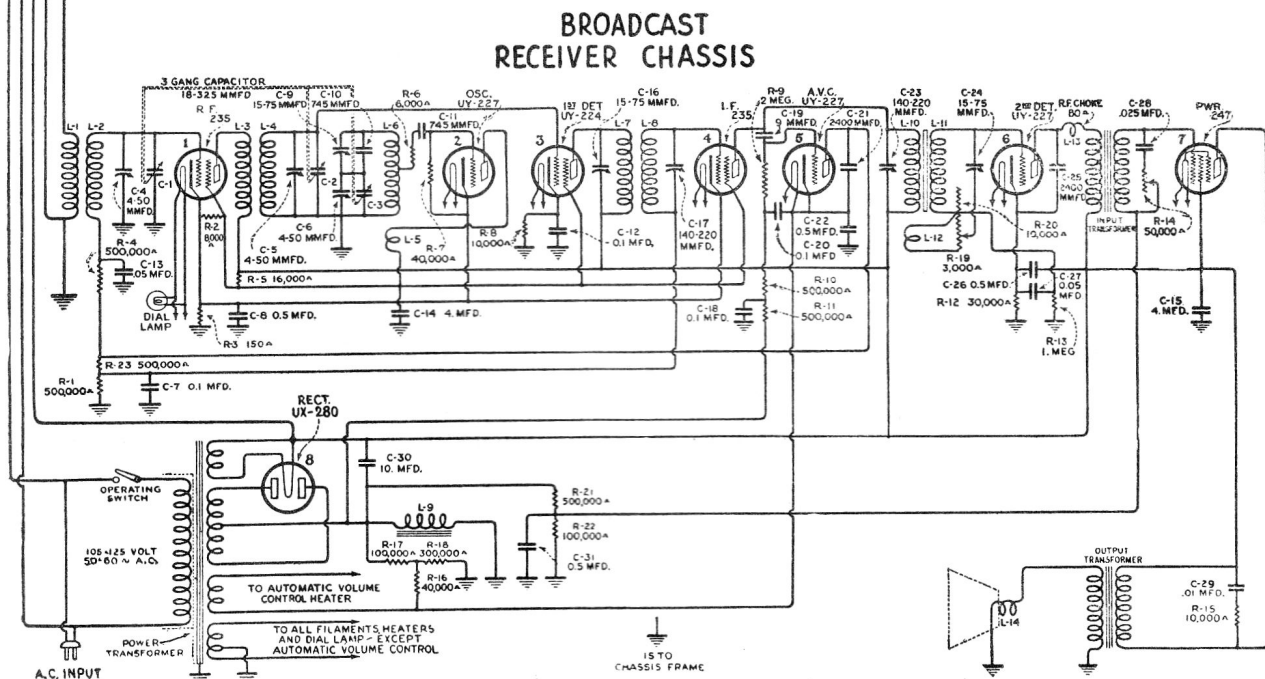


Models RO-112 & SWA-102 A.C. Receivers

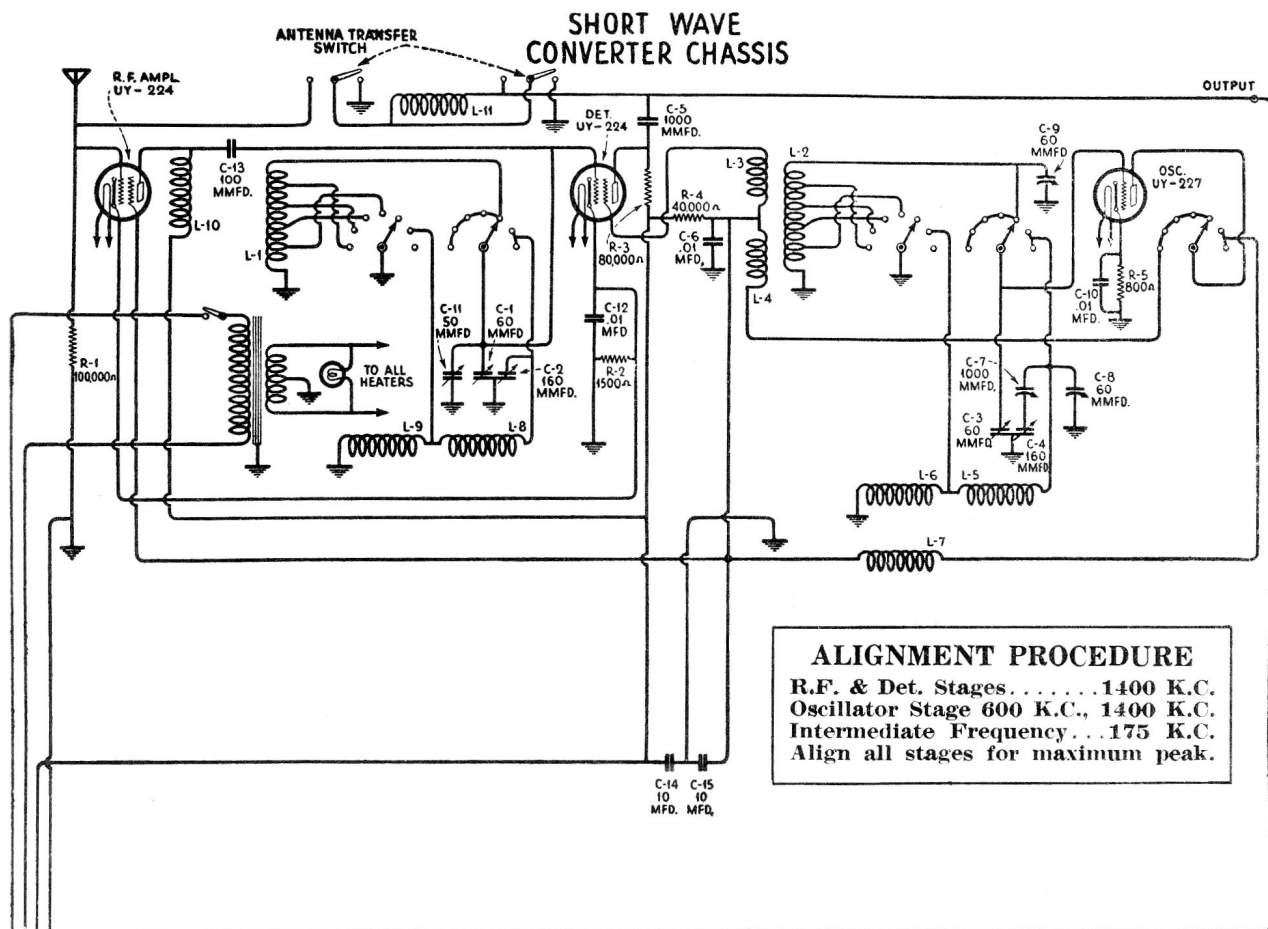

NOTE. On some models operating switch for broadcast receiver is in circuit to Converter.

REPLACEMENT PARTS — MODELS RO-112 & SWA-102

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

Stock No.	DESCRIPTION	Stock No.	DESCRIPTION
	LONG WAVE RECEIVER		
2563	Resistor—6,000 ohms—Carbon type—1 watt	8837	Support—Receiver chassis metal mounting support—
2963	Resistor—8,000 ohms—Carbon type—1 watt	S-1034	Escutcheon—Tuning dial escutcheon.....
2746	Socket—Dial lamp socket.....		LOUDSPEAKER ASSEMBLY
2747	Cap—Grid contactor caps—	S-1017	Coil assembly—Comprising field coil, cone bracket and magnet.....
2749	Capacitor—2400 mmfd.....	8559	Ring—Cone retaining ring.....
2882	Socket—UY Radiotron socket complete with insulation strip.....	8601	Cone—Speaker cone.....
2968	Socket—UX Radiotron socket—Complete with insulation strip.....		SHORT WAVE RECEIVER
2970	Resistor—500,000 ohms—Carbon type—1 watt.....	2747	Cap—Grid contactor cap—
S-1074	Knob—Tuning control, volume control or tone control knob.....	S-1074	Knob—Station selector or Resonator knob.
3003	Cushion—Receiver chassis rubber cushion —	3058	Resistor—100,000 ohms—Carbon type—1 watt.....
S-1030	Capacitor—9 mmfd.....	3153	Resistor—1,500 ohms—Carbon type—1 watt
S-1031	Bracket—Dial lamp bracket and indicator..	S-1077	Cord—Drive cord—
3045	Resistor—40,000 ohms—Carbon type—1 watt	S-1029	Spring—Drive cord tension spring—
3048	Resistor—500,000 ohms—Carbon type— $\frac{1}{2}$ watt.....	S-1104	Socket—UY Radiotron socket—Complete with insulation strip.....
3049	Resistor—150 ohms—Carbon type— $\frac{1}{2}$ watt	S-1078	Switch—"Off and On"—Toggle switch complete with mounting nut.....
3056	Shield—Radiotron shield.....	S-1079	Drive shaft and pulley.....
3076	Resistor—1 megohm—Carbon type— $\frac{1}{2}$ watt	S-1080	Coil—For resistor board assembly.....
3077	Resistor—30,000 ohms—Carbon type— $\frac{1}{2}$ watt.....	S-1081	Coil — Coil assembly complete with mounting eyelet—For switch and bracket assembly.....
3078	Resistor—10,000 ohms—Carbon type— $\frac{1}{2}$ watt.....	S-1082	Socket—Dial lamp socket and bracket with mounting rivets.....
3079	Resistor—40,000 ohms—Carbon type— $\frac{1}{2}$ watt.....	S-1085	Capacitor—1,000 mmfd.....
3081	Resistor—16,000 ohms—Carbon type—3 watt	S-1073	Resistor—800 ohms—Carbon type—1 watt.
3092	Volume control—Volume control complete with mounting nut.....	S-1076	Resistor—80,000 ohms—Carbon type—1 watt
S-1033	Tone control—Tone control complete with mounting nut.....	S-1068	Resistor—40,000 ohms—Carbon type—3 watt
3095	Coil—R. F. coil.....	S-1083	Coupling—Switch lever shaft coupling bushing with 2 groove pins—
S-1292	Coil—1st detector and oscillator coil.....	S-1084	Switch—Antenna transfer toggle switch....
S-1065	Coil—Choke coil.....	S-1086	Binding post—Complete with terminal lug, mounting washer and nut.....
S-1066	Board—Terminal board with 1 soldering terminal.....	6109	Knob—Knob with pointer.....
S-1028	Cord—Drive cord—	S-1087	Dial lamp shield and indicator.....
S-1029	Spring—Drive cord tension spring—	S-1090	Escutcheon—Band selector switch knob escutcheon.....
S-1037	Resistor—100,000 ohms—Carbon type— $\frac{1}{2}$ watt.....	S-1088	Cushion—Receiver chassis rubber cushion
S-1067	Resistor—500,000 ohms—Carbon type— $\frac{1}{4}$ watt.....	7062	Capacitor — Adjustable capacitor — 15-70 mmfd.....
S-1035	Resistor—300,000 ohms—Carbon type— $\frac{1}{2}$ watt.....	S-1091	Capacitor—0.01 mfd.....
S-1032	Resistor—2 megohm—Carbon type— $\frac{1}{2}$ watt	S-1095	Capacitor—Double adjustable capacitor— One section 10-70 mmfd., one section 800-1000 mmfd.....
S-1287	Cord—Power cord.....	S-1089	Coil—High frequency detector coil.....
7062	Capacitor — Adjustable capacitor — 15-70 mmfd.....	S-1092	Coil—Low frequency detector and oscillator coil.....
6319	Capacitor—0.01 mfd.....	S-1093	Coil—High frequency oscillator coil.....
2734	Capacitor—745 mmfd.....	S-1094	Capacitor—Variable capacitor—7 plate— Complete with mounting nut and washer.
S-1040	Transformer—1st Intermediate transformer.	S-1096	Transformer—Filament power transformer —105-120 volts—60 cycles.....
S-1041	Transformer—2nd Intermediate transformer.	S-1097	Transformer—Filament power transformer —105-120 volts, 25 cycles.....
S-1042	Capacitor—Comprising two 0.05 mfd., four 0.5 mfd., one 10.0 mfd., two 4.0 mfd. and four 0.1 mfd. capacitors in metal container.....	S-1099	Lever—Switch lever assembly—Comprising shaft, 3 switch levers and coupling bushing.
S-1004	Transformer—Audio transformer.....	S-1100	Switch—Band selector switch complete with mounting washer and nut.....
S-1061	Transformer — Power transformer — 110 volts—60 cycles.....	S-1101	Capacitor—Tuning capacitor assembly.....
7362	Capacitor—0.025 mfd.....	S-1102	Dial drum and scale.....
S-1138	Drum—Dial drum and scale.....	8837	Support—Chassis metal mounting support
S-1070	Capacitor—20 mfd. electrolytic capacitor— In metal container.....	S-1103	Capacitor—100 mmfd.....
S-1055	Transformer—Power transformer—25 cycles.	S-1107	Escutcheon—Metal bezel for dial.....
S-1039	Capacitor—Variable tuning capacitor.....		