

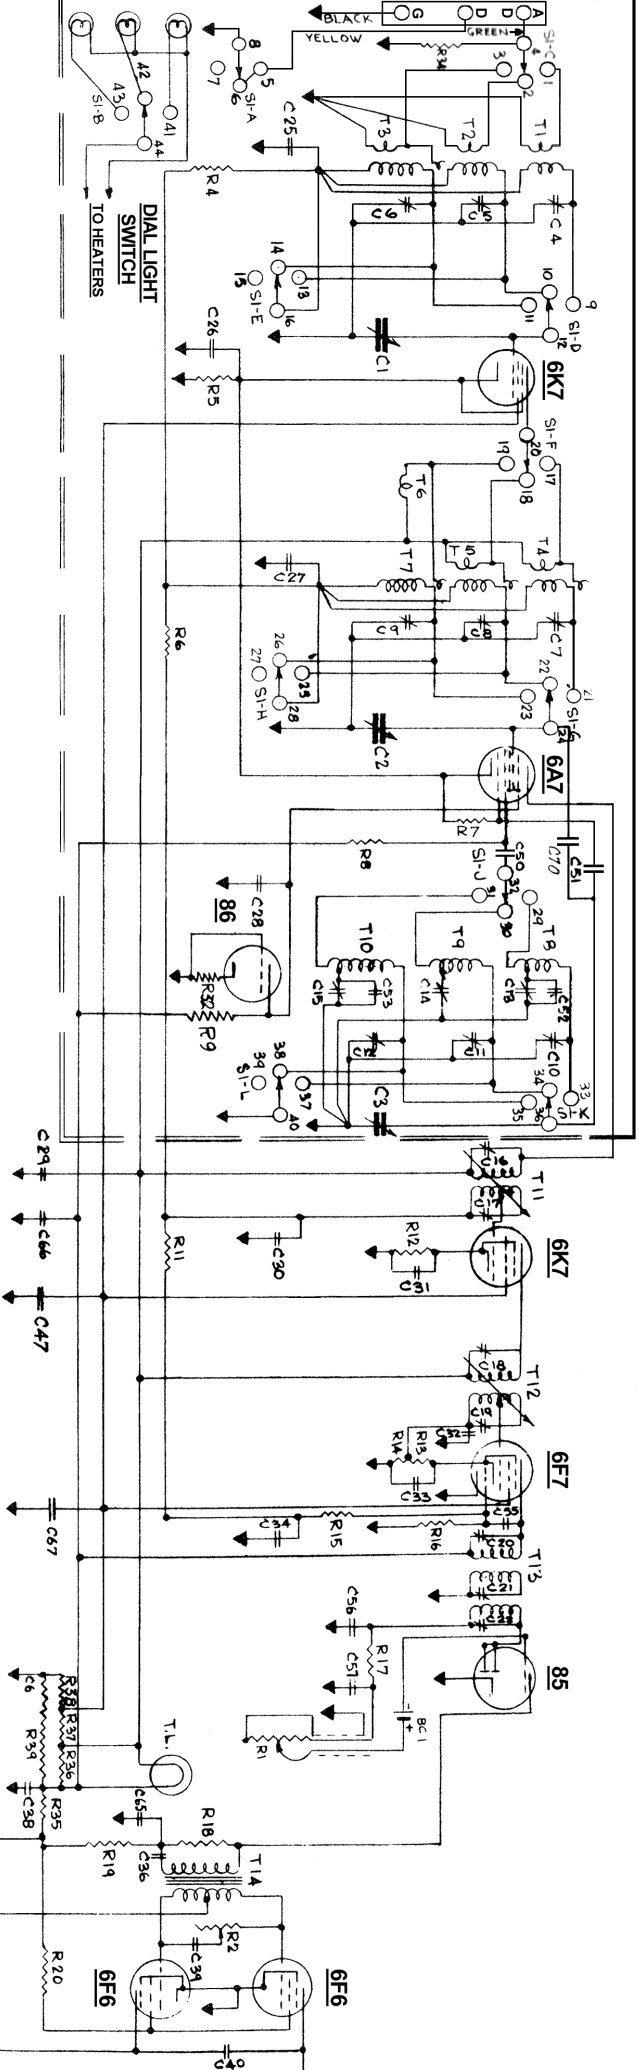


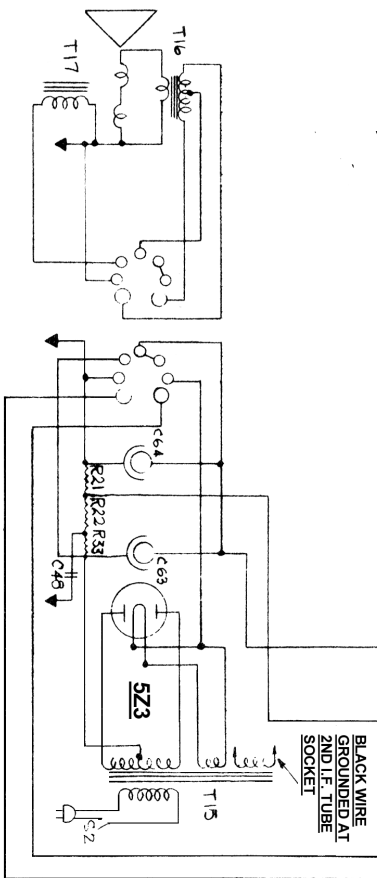

Rogers Models 11/95, 11/97 (Chassis 6R932) Rogers Model 11/96 (Chassis 6R931)

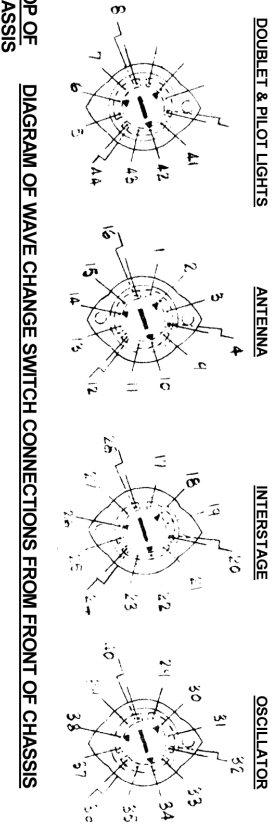

BOTTOM OF CHASSIS

TOP OF CHASSIS

DIAGRAM OF WAVE CHANGE SWITCH CONNECTIONS FROM FRONT OF CHASSIS

RESISTORS

Item #	Resistance	Part #
Variable		
R1	1,000,000 Ohm	L.C.13402
R2	10,000,000 Ohm	T.C.13400
Graphite		
R4	100,000 Ohm	40531
R5	150 Ohm	33313
R6	100,000 Ohm	40531
R7	50,000 Ohm	33301
R8	20,000 Ohm	40542
R9	20,000 Ohm	40546
R11	500,000 Ohm	33505
R12	400 Ohm	33310
R13	466 Ohm	33310
R14	1,000 Ohm	33315
R15	500,000 Ohm	33303
R16	500,000 Ohm	33503
R17	50,000 Ohm	33301
R18	50,000 Ohm	33301
R19	50,000 Ohm	33301
R20	750 Ohm	40545
R21	50,000 Ohm	33301
R22	50,000 Ohm	33301
R32	2,000 Ohm	33319
R33	50,000 Ohm	33301
R34	10,000 Ohm	33318
Wire Wound		
R35	1,180 Ohm	
R36	3,600 Ohm	
R37	10,000 Ohm	Candohm
R38	10,000 Ohm	13554
R39	20,000 Ohm	
Mica		
C50	200 mmf.	37905
C51	100 mmf.	37906
C52	1500 mmf.	34122
C53	200 mmf.	37908
C55	50 mmf.	37904
C56	200 mmf.	37902
C57	100 mmf.	37906

CONDENSERS

Item #	Capacitance	Part #
Variable Air		
C1	450 mmf. Gang	Def. 13521
C2	450 mmf. Gang	R. & M. 13565
C3	450 mmf. Gang	
Variable Mica		
C4	S.W. Ant. Pad.)	
C5	P.C. Ant. Pad.)	5353
C6	B.C. Ant. Pad.)	
C7	S.W. Int. P. Pad.)	
C8	P.C. Int. P. Pad.)	5353
C9	B.C. Int. P. Pad.)	
C10	S.W. Osc. Pad.)	
C11	P.C. Osc. Pad.)	5353
C12	B.C. Osc. Pad.)	
C13	S.W. Osc. S. Pad.)	
C14	P.C. Osc. S. Pad.)	5287
C15	B.C. Osc. S. Pad.	4670
C16	1st I. F. Pad.)	
C17	1st I. F. Pad.)	4639
C18	2nd I. F. Pad.)	
C19	2nd I. F. Pad.)	4639
C20	3rd I. F. Pad.)	
C21	3rd I. F. Pad.)	4639
C22	3rd I. F. Pad.	12404
Tabular		
C25	0.05 mf.	200 V. 38102
C26	0.1 mf.	200 V. 38106
C27	0.05 mf.	200 V. 38102
C28	0.1 mf.	200 V. 38106
C29	0.1 mf.	400 V. 38121
C30	0.05 mf.	200 V. 38102
C31	0.1 mf.	200 V. 38106
C32	0.05 mf.	200 V. 38102
C33	0.1 mf.	200 V. 38106
C34	0.05 mf.	200 V. 38102
C36	0.25 mf.	200 V. 38107
C38	0.25 mf.	400 V. 38127
C39	0.005 mf.	600 V. 38110
C40	0.0015 mf.	800 V. 11977
C41	0.5 mf.	200 V. 38106
C47	0.1 mf.	200 V. 38106
C48	0.5 mf.	200 V. 38108

CONDENSERS

Item #	Capacitance	Part #
C63	30 mf. Wet	39012
C64	30 mf. Wet	13014
C65	2 mf. Dry	
C66	4 mf. Dry	13085
C67	4 mf. Dry	
C70	Neutralizing Capacity	

TRANSFORMERS

Item #	Description	Part #
T1	S.W. Ant. Trans.	5279
T2	P.C. Ant. Trans.	5278
T3	B.C. Ant. Trans.	5277
T4	S.W. Int. Trans.	5283
T5	P.C. Int. Trans.	5282
T6	B.C. Int. Pri.	5281
T7	B.C. Int. Sec.	5280
T8	S.W. Osc. Trans.	5286
T9	P.C. Osc. Trans.	5285
T10	B.C. Osc. Trans.	5284
T11	1st I. F. Trans.	5287
T12	2nd I. F. Trans.	5287
T13	3rd I. F. Trans.	5007
T14	1st A.F. Trans.	5333
T15	Power Trans.	5335
T16	Output Trans.	5331
T17	Speaker	5328
T17	Speaker	5329
T11	1st I.F. Trans.	5379 (Not Variable)
T12	2nd I.F. Trans.	5379 (" ")
T13	3rd I.F. Trans.	5380 (2 Circuit)


Items marked x are used on Model 931 only.
Items marked @ are used on Model 932 only.

Parts List for Rogers models 11/95, 11/97

Chassis 6R932

Parts List for Rogers model 11/96

Chassis 6D931

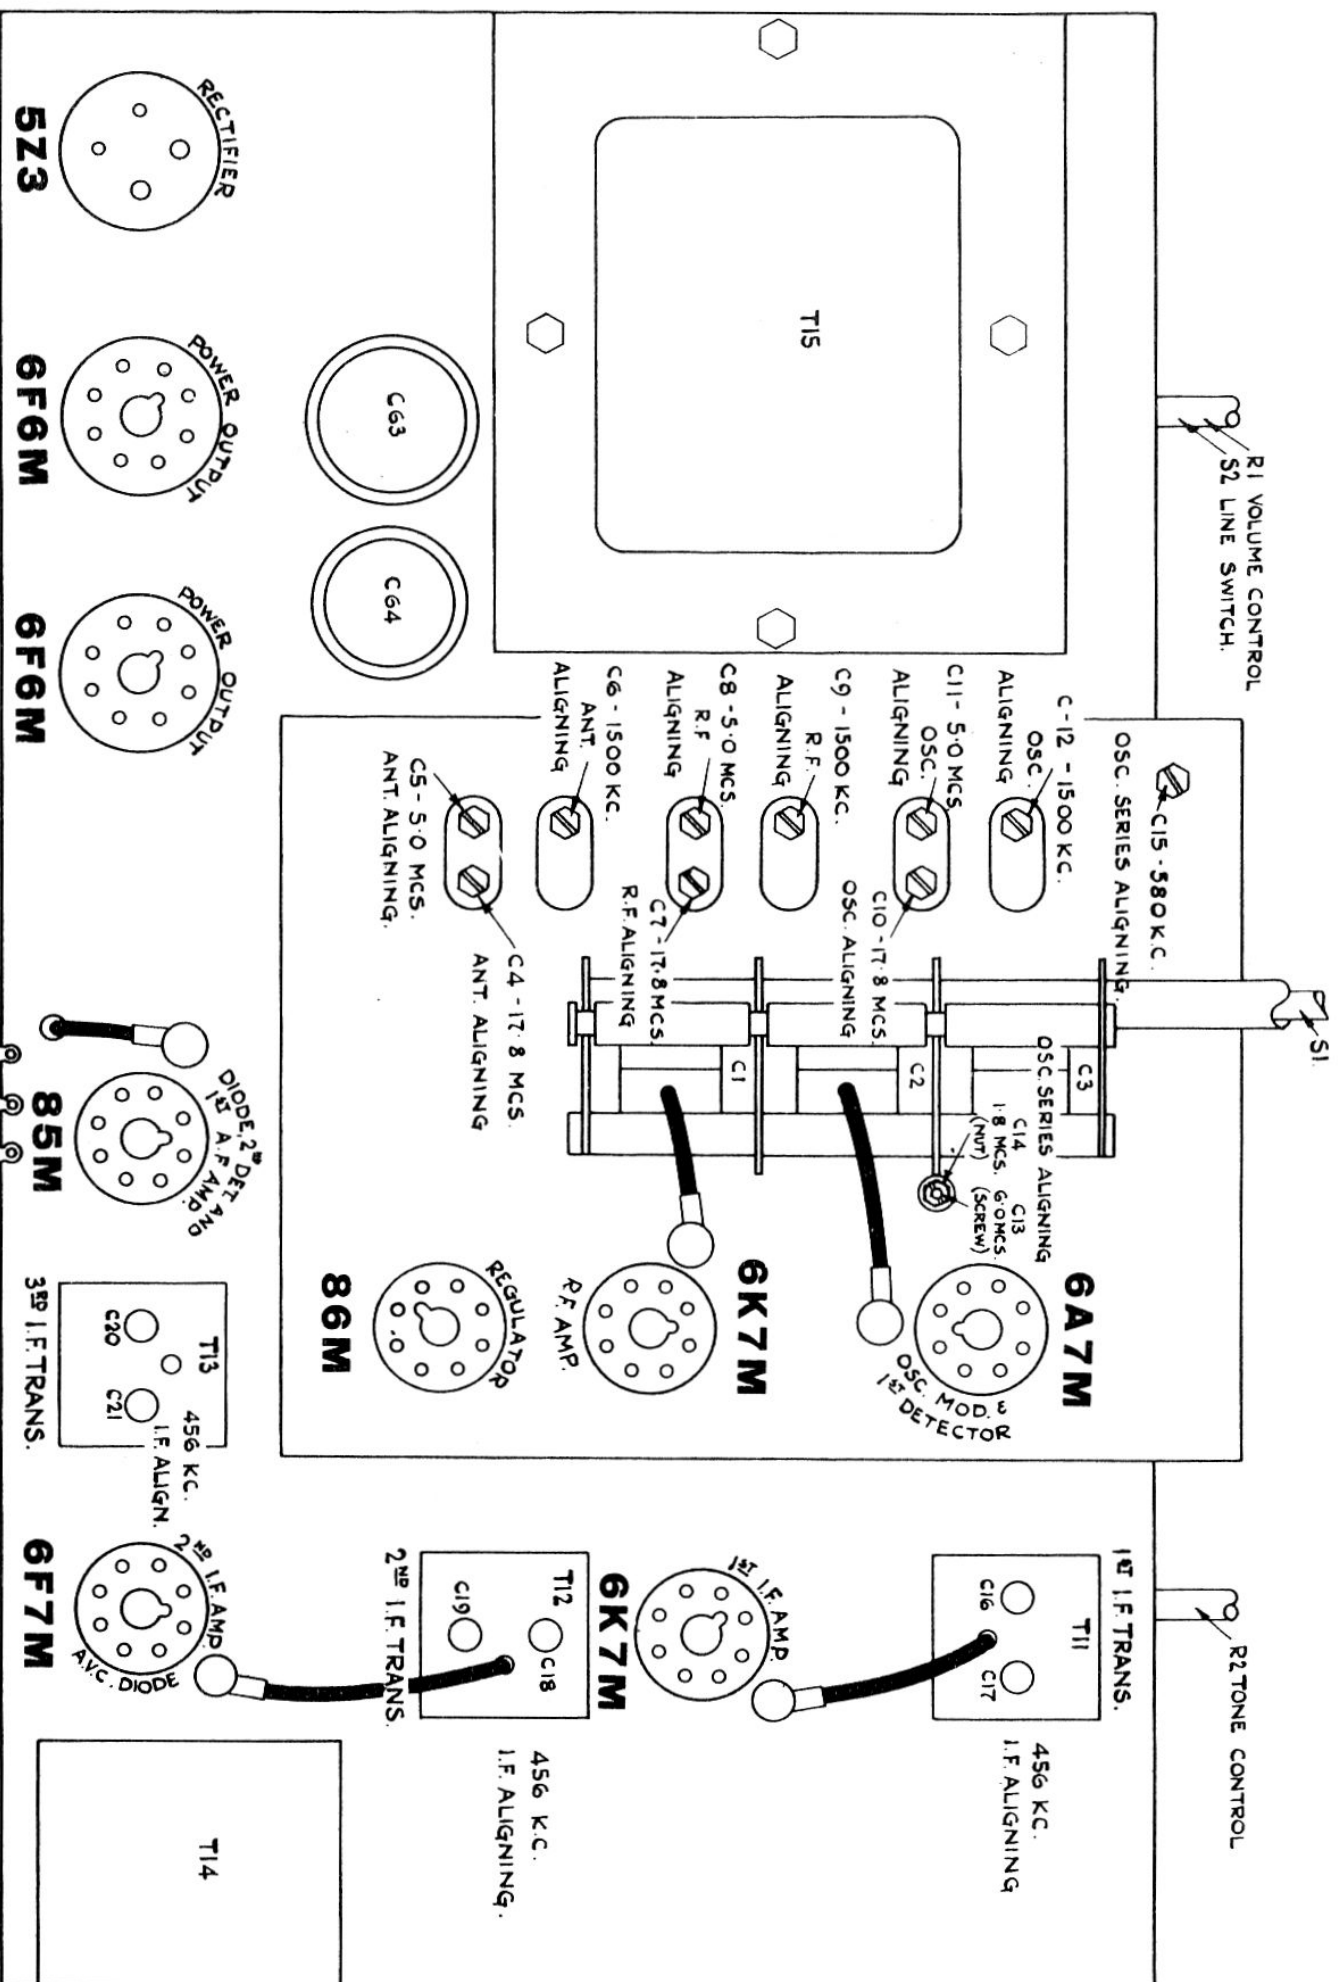

MODELS "11/95" and "11/97" - - TYPE 6R932 CHASSIS

Rogers Alignment See "ROGERS MULTI-BAND AC & BATTERY RECEIVER ALIGNMENT"