

# TCM-S63/S64V/S65/S66V

## SONY. SERVICE MANUAL

### SUPPLEMENT-1

File this Supplement with the Service Manual.

**Subject : Change of REC/PB Head**

*US Model*  
TCM-S63/S64V/S66V  
*Canadian Model*  
TCM-S65/S66V  
*AEP Model*  
TCM-S65/S66V  
*UK Model*  
TCM-S65/S66V  
*E Model*  
TCM-S63/S64V  
*Tourist Model*  
TCM-S66V

Page 11

 or under line : changed portion


Former			New		
<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
108	3-385-721-01	GUIDE, HEAD	108	<u>3-907-591-01</u>	GUIDE, HEAD
109	3-385-723-01	SCREW	109	<u>3-907-592-01</u>	SCREW
123	_____		123	<u>3-907-593-01</u>	WASHER
124	_____		124	<u>3-907-594-01</u>	SPRING
HRP901 1-543-607-21 HEAD, MAGNETIC (REC/PB)			HRP901 <u>1-543-410-11</u> HEAD, MAGNETIC (REC/PB)		

The record/playback head azimuth adjustment is requested due to this change.

### Record/playback Head Azimuth Adjustment

#### Procedure :

1. Mode : Playback

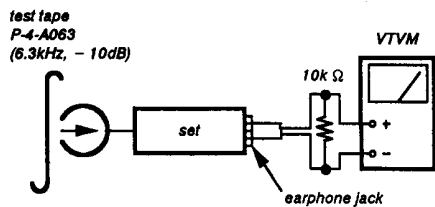

2. Turn the adjustment screw to obtain the maximum reading on VTVM.

**Note :** Several peaks may appear, but take the maximum.

3. After the adjustment, lock the adjustment screw with suitable locking compound.

#### Adjustment Location :

