


TC-RX606ES/RX611S

SERVICE MANUAL

US Model
Canadian Model
TC-RX606ES
AEP Model
RX611S

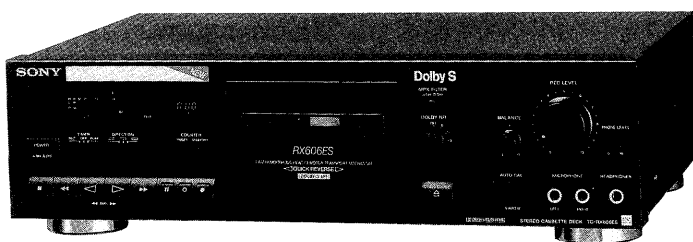

* Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.
"DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	TC - RX79
Tape Transport Mechanism Type	TCM - 200R10

SPECIFICATIONS

Recording system	4-track 2-channel stereo
Fast winding time	Approx. 90 sec. (with Sony C-60 cassette)
Bias	AC bias
Heads	Erasing head × 1 (ferrite head) Playback/Recording head × 1 (LA head)
Motors	Capstan motor × 1 (DC servo motor) Reel motor × 1 (DC motor) Assist (mechanism drive) motor × 1 (DC motor)

Signal-to-noise ratio (at peak level and weighted)

Cassette (Dolby NR off)	Type IV (Sony ES-IV)	Type II (Sony UX-S or UX)	Type I (Sony HF-S)
	59 dB	58 dB	56 dB

S/N ratio improvement (approximate values)

With Dolby B NR on : 5 dB at 1 kHz; 10 dB at 5 kHz
With Dolby C NR on : 15 dB at 500 Hz; 20 dB at 1 kHz
With Dolby S NR on : 10 dB at 100 Hz; 24 dB at 1 kHz

Harmonic distortion	0.4% (with Sony HF-S, 160 nWb/m, 315 Hz, 3rd H.D.) 1.8% (with Sony ES-IV, 250 nWb/m, 315 Hz, 3rd H.D.)
---------------------	---

Frequency response (Dolby NR off)

Type IV cassette (Sony ES-IV)	20-20,000Hz (± 3dB, IEC) (RX606ES) 20-19,000Hz (± 3dB, IEC) (RX611S) 30-15,000Hz (± 3dB (- 4dB, recording))
Type IV cassette (Sony UX-S or UX)	25-18,000Hz (± 3dB, IEC)
Type IV cassette (Sony HF-S)	25-16,000Hz (± 3dB, IEC)

Wow and flutter	±0.09% W.Peak (IEC) 0.06% W.RMS (NAB) ±0.16% W.Peak (DIN)
-----------------	---

Inputs

Line inputs (phono jacks)	Sensitivity	0.16 V
	Input impedance	47 k ohms
Microphone inputs (phono jacks)	Sensitivity (For a low-impedance microphone)	0.4 mV

Outputs

Line outputs (phono jacks)	Rated output level	0.5 V at a load impedance of 47 k ohms
	Load impedance	Over 10 k ohms
Headphones (stereo phone jack)	Output level	0 - 3 mW at a load impedance of 32 ohms

General

Power requirements	120 V AC, 60 Hz (US, Canadian model) 220V AC, 50/60Hz (AEP model)
Power consumption	20 W
Dimensions	Approx. 430 × 123 × 306 mm (w/h/d) (17 × 4 7/8 × 12 1/8 inches) including projecting parts and controls
Mass	Approx. 4.8 kg (10 lbs 10 oz)

Supplied accessories

Audio connecting cords (2)

Design and specifications are subject to change without notice.

STEREO CASSETTE DECK
SONY®



Features

For higher quality recording/playback

- **The Dolby HX PRO*** system which improves the linearity of the tape's high-range response during recording.
- **B, C and S type Dolby NR*** systems which reduce tape noise.
- **Automatic calibration** which ensures optimum recording conditions to bring out the best in every tape.
- **Ceramic cassette holder** for improved stability of tape running during playback and recording.

For your convenience

- **Quick reversing** at the end of a tape to minimize interruptions during playback and recording.
- **The Multi-AMS and Memory Play functions** which provide easy access to a desired selection.
- **Timer-activated playback and recording** through the use of an optional timer.
- **Automatic switching between line and microphone input** when recording with a microphone.

For easier operation

- **Easy-to-read linear counter** which shows the elapsed recording or playing time.

* Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.


"DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL		4
2. DISASSEMBLY		5
3. ADJUSTMENTS		
3-1. MECHANICAL ADJUSTMENT		8
3-2. ELECTRICAL ADJUSTMENT		8
4. DIAGRAMS		
4-1. BLOCK DIAGRAM		12
4-2. IC BLOCK DIAGRAM		12
4-3. CIRCUIT BOARDS LOCATION		15
4-4. SEMICONDUCTOR LEAD LAYOUTS		15
4-5. SCHEMATIC DIAGRAM		16
4-6. PRINTED WIRING BOARDS		21
5. EXPLODED VIEWS		
5-1. FRONT PANEL SECTION		27
5-2. CHASSIS SECTION		28
5-3. MECHANISM DECK SECTION 1 (TCM-200R10)		29
5-4. MECHANISM DECK SECTION2 (TCM-200R10)		30
6. ELECTRICAL PARTS LIST		31

MODEL IDENTIFICATION

— Specification Label —

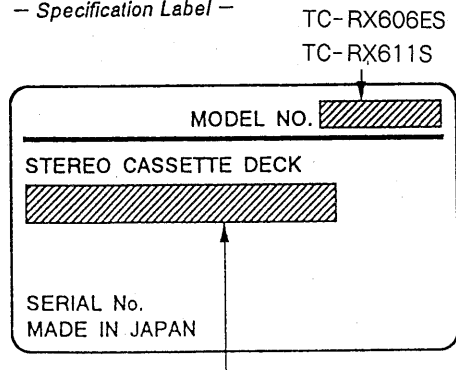

US, Canadian Model : AC : 120V 60Hz 20W
AEP Model : AC : 220-230V 50/60Hz 20W

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE Δ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

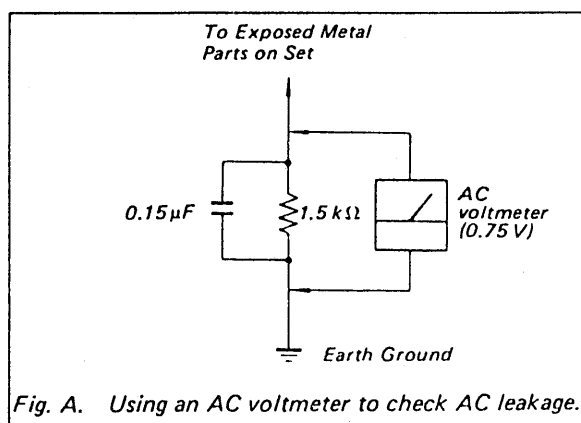



Fig. A. Using an AC voltmeter to check AC leakage.

SECTION 1 GENERAL

This section is extracted from instruction manual of TC-RX606ES.

Identifying the Parts

Front Panel

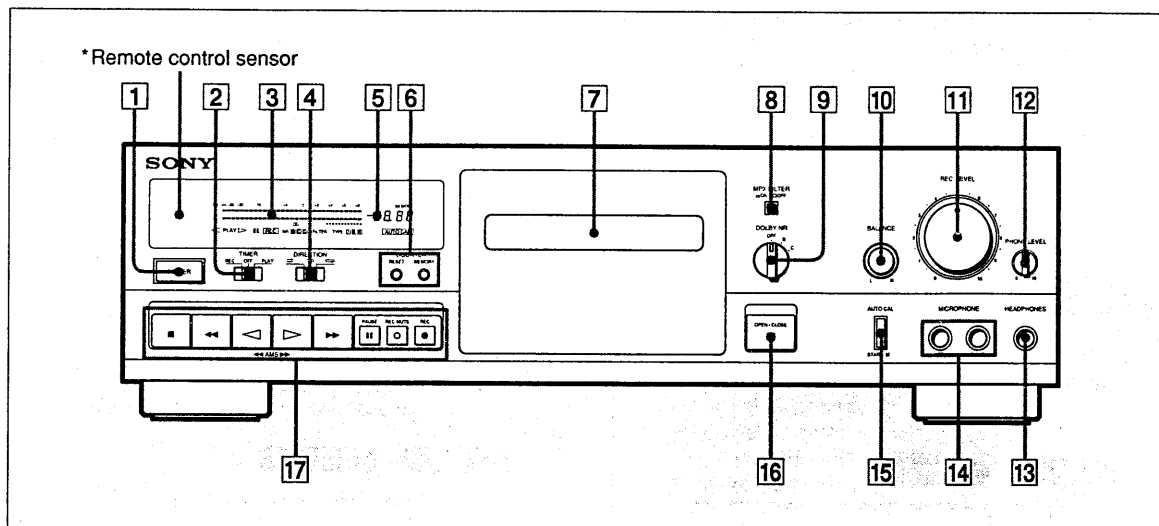

For details, refer to the page number(s) indicated in parentheses.

- 1 POWER switch
- 2 TIMER switch (page 16)
- 3 Peak level meter (page 13)
- 4 DIRECTION mode switch (pages 7 and 11)
- 5 Linear counter (page 10)
- 6 COUNTER buttons
 - RESET button (page 10)
 - MEMORY button (pages 9 and 10)
- 7 Cassette holder
- 8 MPX FILTER button (page 13)
- 9 DOLBY NR (noise reduction) switch (pages 7 and 11)
- 10 BALANCE control (page 11)
- 11 REC (recording) LEVEL control (pages 11 and 13)
- 12 PHONE (headphones) LEVEL control (page 7)
- 13 HEADPHONES jack (stereo phone jack) (page 7)
- 14 MICROPHONE jacks (phone jacks)
- 15 AUTO CAL button (page 14)
- 16 ▲ OPEN/CLOSE button

17 Tape operation buttons

- (stop) button
- ◀◀ (leftward fast winding) (Multi-AMS**) button
- ◀ (reverse play) button
- ▶ (forward play) button
- ▶▶ (rightward fast winding) (Multi-AMS**) button
- || PAUSE button
- REC MUTE (record muting) button (page 15)
- REC (recording) button

*Remote control sensor

You can remotely control this cassette deck with:

- A remote commander that came with a Sony amplifier or receiver if it has the  mark and cassette deck control capability.
- An optional Sony remote commander with the  mark and cassette deck control capability.


**AMS is an abbreviation for Automatic Music Sensor.

SECTION 2 DISASSEMBLY


NOTE: Follow the disassembly procedure in the numerical order given.

Unscrew four screws (M3×8)
and remove the upper case.

• MAIN BOARD

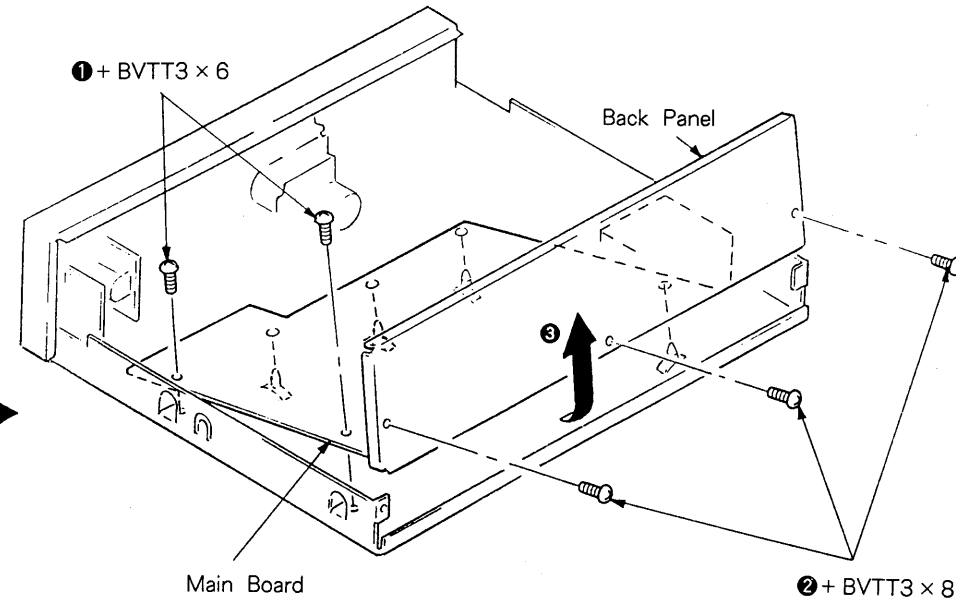


• MECHANISM DECK

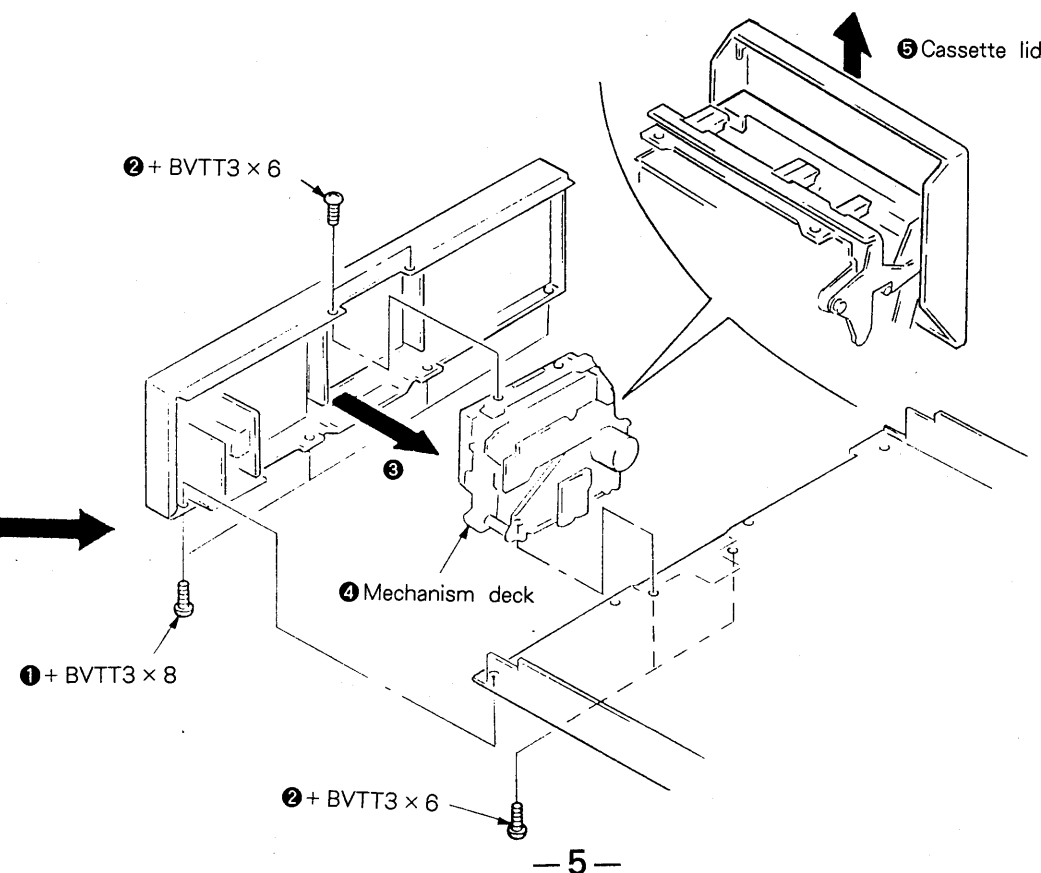

-5-


• CASSETTE HOLDER

Remove the cassette holder
by pushing the lift lever up.

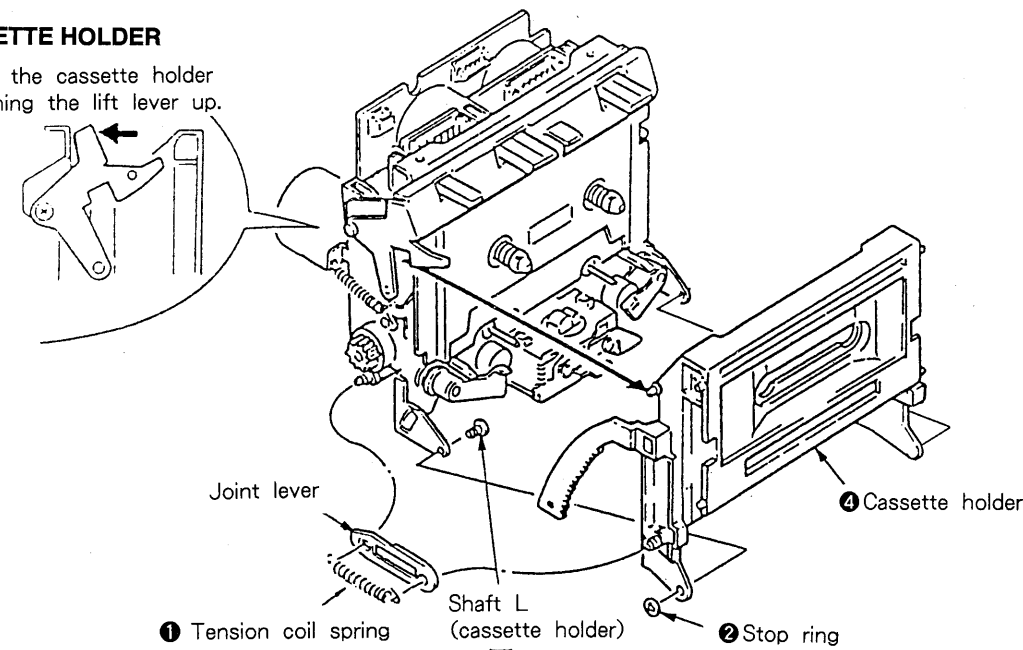


• ORNAMENTAL PLATE

Remove the ornamental plate
by pushing the lift lever up.

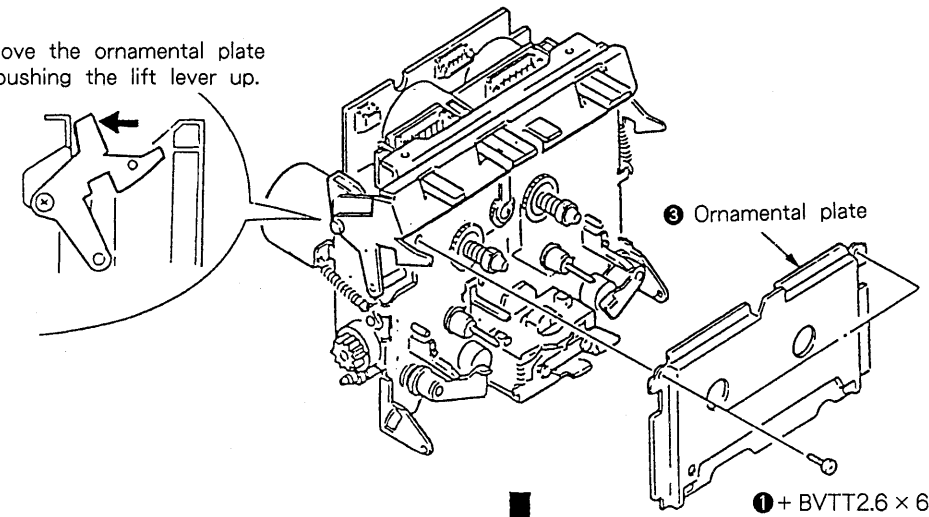


• PINCH LEVER, HEAD

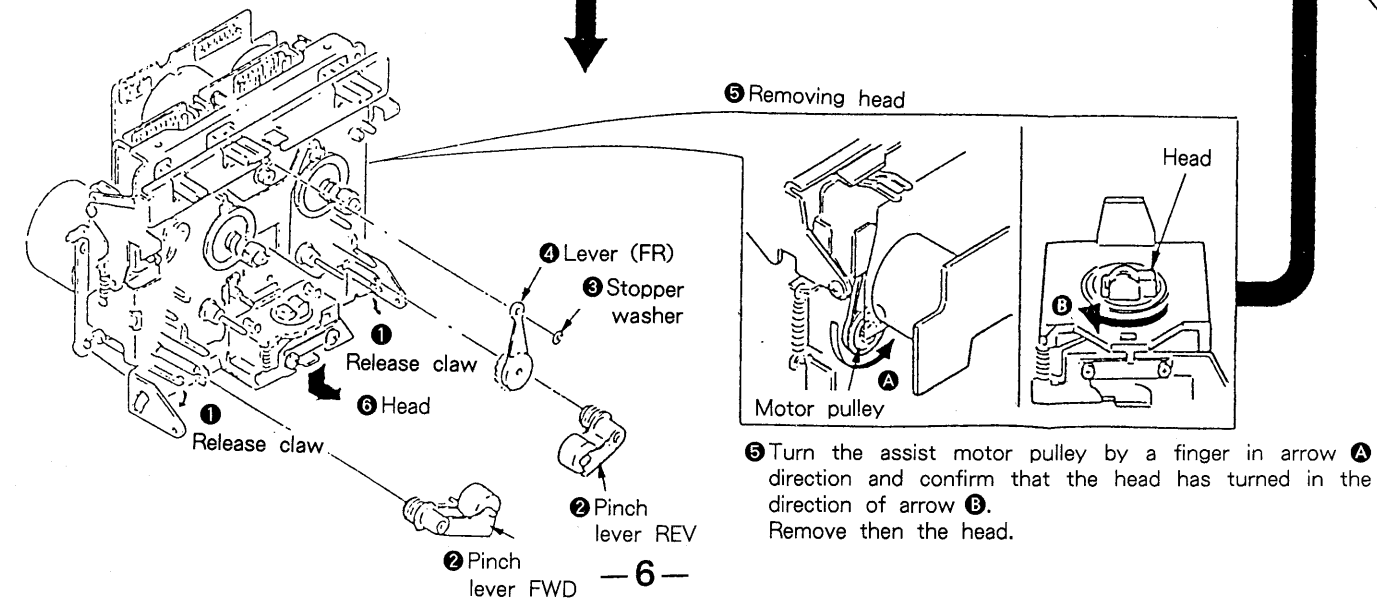


-6-

• CAPSTAN MOTOR, FLYWHEEL

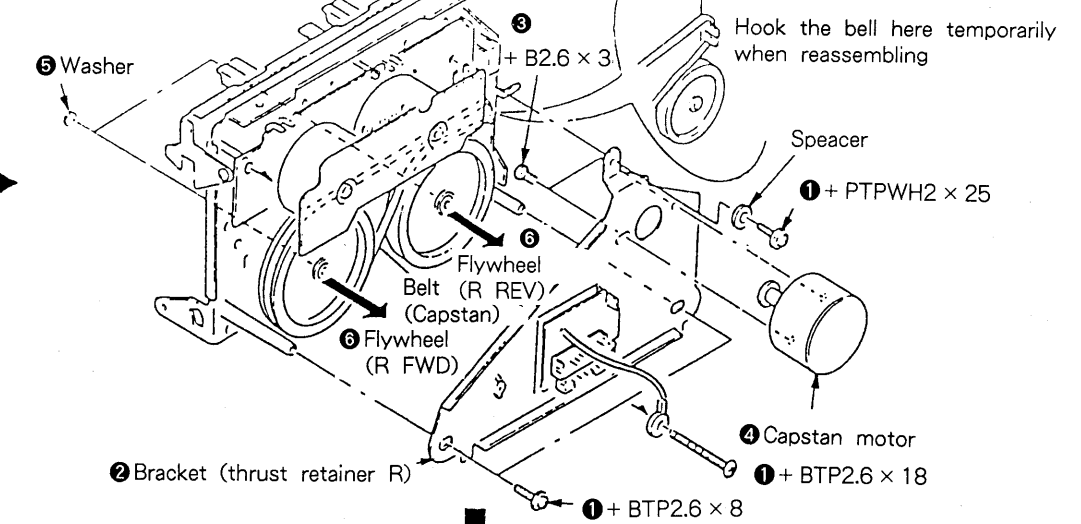

• REEL MOTOR AND ASSIST MOTOR

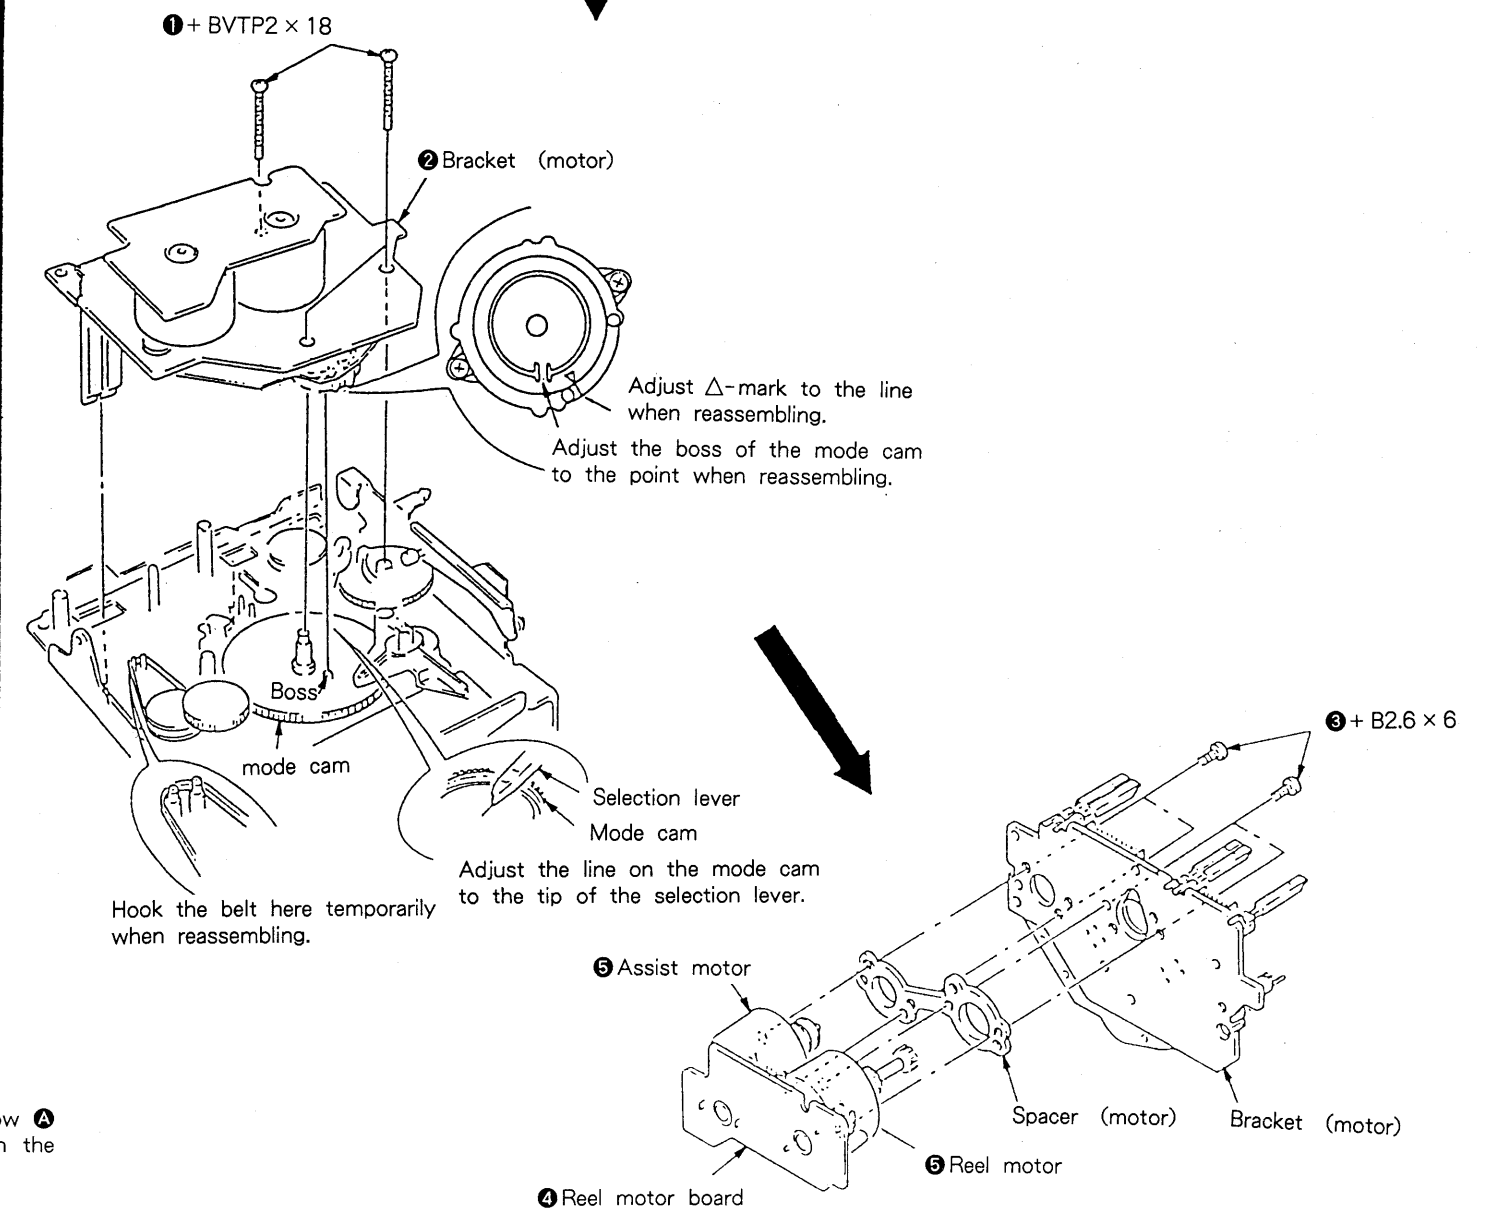

-7-

SECTION 3 ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENT

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab :

record/playback head	pinch roller
erase head	rubber belts
capstan	idler
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed in the rated power supply voltage unless otherwise noted.

Torque Measurement

Torque	Torque meter	Meter reading
FWD	CQ-102C	30-60g • cm (0.42-0.84 oz • inch)
FWD Back tension	CQ-102C	1-5g • cm (0.014-0.07 oz • inch)
REV	CQ-102RC	30-60g • cm (0.42-0.84 oz • inch)
REV Back tension	CQ-102RC	1-5g • cm (0.014-0.07 oz • inch)
FF, REW	CQ-201B	65-90g • cm (0.91-1.26oz • inch)

3-2. ELECTRICAL ADJUSTMENT

1. This adjustment should be performed in the order given in the service manual. (As a rule, adjustments about playback should be performed before those about recording.)
 2. The adjustments should be performed for both L-ch and R-ch.
 3. Simultaneous recording/playback can be established by connecting a signal to LINE IN, setting up the record mode and selecting tape monitor. The recorded signal is played back from LINE OUT simultaneously.
- Switches and controls should be set as follows unless otherwise specified.

DOLBY NR switch	: OFF
TIMER switch	: OFF
DIRECTION switch	: ⇌
MPX FILTER switch	: OFF

4. Execute the following adjustments in TEST mode.
Establish the TEST mode by inserting the shorting plug CNE805 (2P EH).


Check that all FL tubes light in TEST mode.

Upon completion of adjustment, remove the shorting plug.

• Standard Record :

Deliver the standard input signal level to the input jack and set the REC LEVEL (RV604) and BALANCE (RV605) to obtain the standard output signal level.

— Record Mode —

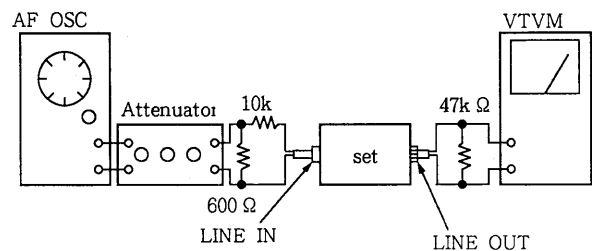

0 dBV = 1V

Standard Input Level

input terminal	LINE IN
source impedance	10k Ω
input level	0.5V (-6dB)

Standard Output Level

output terminal	LINE OUT
load impedance	47k Ω
output level	0.5V (-6dB)

[FWD/REV Head Azimuth Adjustment]

Note : Perform this adjustment after head rotated.


(When head is in FWD direction, start adjustment with REV.)

Finish this adjustment screw with tightening (clockwise) direction.


Procedure :

1. Mode : FWD playback

Test tape
P-4-A100
(10kHz, -12.2dBV)

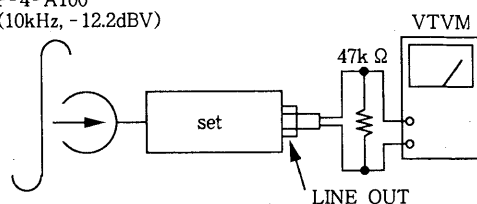



- Turn the adjustment screw for the maximum output levels of both L-ch and R-ch. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

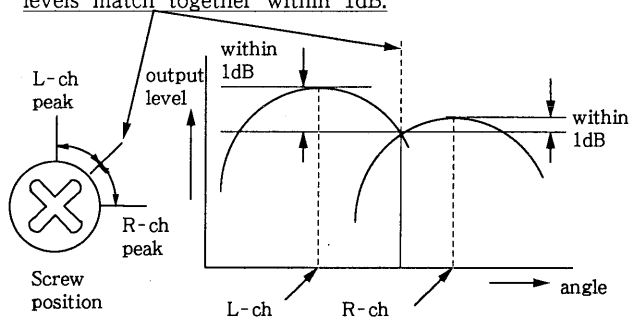


3. Phase Check

Mode : playback

Test tape
P-4-A100
(10kHz, -12.2dBV)

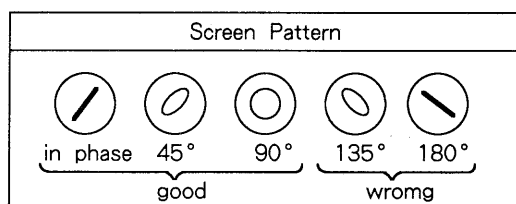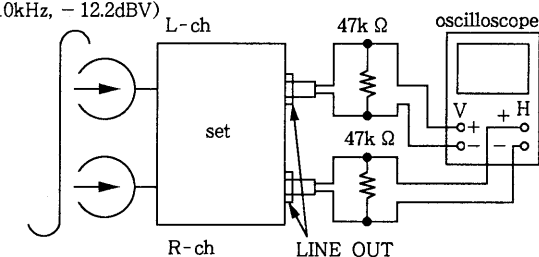


Adjustment point :

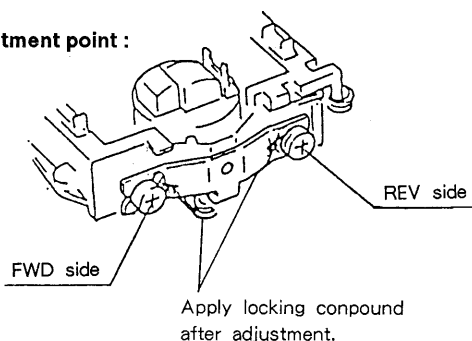

[Tape Speed/Wow Check]

Procedure :

test tape
WS-48B
(3kHz, -2.2dBV)

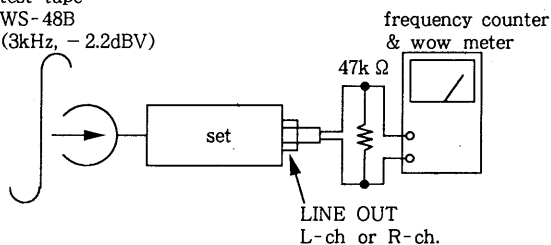


- Playback the tape top of the test tape. Measure output frequency and wow.
- Measure in both FWD and REV modes.

Specifications

tape speed	
check limit	: 2970~3030Hz
adjustment value (FWD)	: 2985~3015Hz
wow (wrms)	: less than 0.11 %

Adjustment location :

MD (rear of motor)

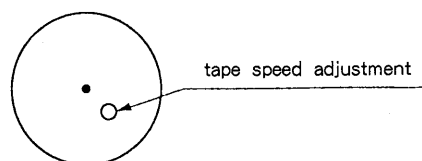


[Playback Level Adjustment]

Procedure :

Mode : playback

Test tape
P-4-L300
(315Hz, -2.2dBV)

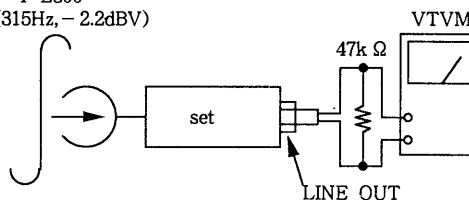

Adjust RV101 (L-ch) and RV201 (R-ch) so that the reading on VTVM meets the adjustment limits below.

Adjustment Limits :

LINE OUT level : 0.301~0.338V (-10.5dB~-9.5dB)

Level difference between channels : less than 0.5dB

Check that the LINE OUT level does not change even if Playback and Stop operation is repeated several times.

[Bias Current Consumption Adjustment]


Note :

Perform bias current consumption adjustment before record bias adjustment.

After completion of bias current consumption adjustment, re-adjust record bias adjustment.

Procedure :

1. Set record bias adjustments RV103 (L-ch) and RV203 (R-ch) to their mechanical center. Feed no signal to LINE IN. Establish REC/FWD mode.
2. Adjust T101 (L-ch) and T201 (R-ch) for minimum reading of digital VTVM.

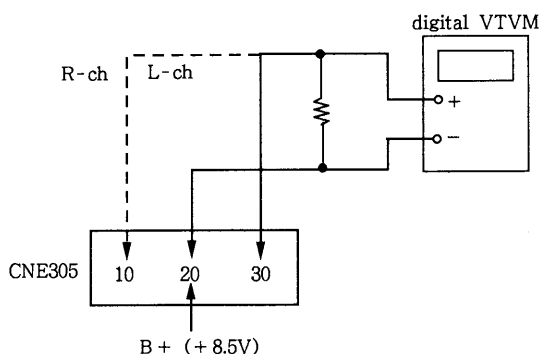

measurement : less than 130mV

(The value is measured using CS-413 after completion of this adjustment.)


[Record Bias and Record Level Adjustment]

Conditions :

REC LEVEL control : standard record position (page 8)

Procedure :

1. Simultaneous record/playback mode

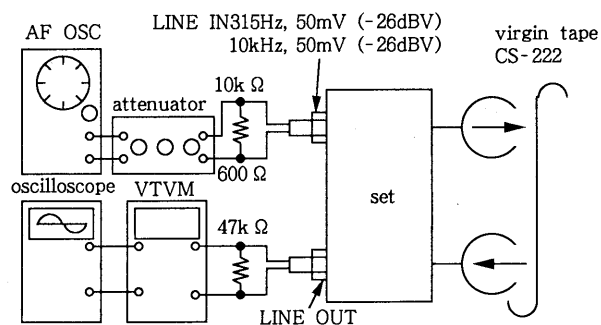

2. Adjust the followings so that minimum output level must have the specified standard output level.

- (1) Adjust RV103 (L-ch), RV203 (R-ch)
..... record bias adjustment
- (2) Adjust RV102 (L-ch), RV202 (R-ch)
..... record level adjustment

Adjustment value :

- (1) 10kHz level with reference to 315Hz : $-0.5\text{dBV} \sim +0.5\text{dBV}$
- (2) 315Hz level : $-26.5\text{dBV} \sim -25.5\text{dBV}$

[REC EQ (IV) Adjustment]

• Record Bias and Record Level

Make adjust only when the 10kHz level output is higher in the Record Bias and Record Level Adjustment.

1. Connect the input signal (-26dBV). Record the signal and play it back. Only when 10kHz signal level is 1dB higher or more than 315Hz level, adjust EQ ADJ RV104 (L-ch) and RV204 (R-ch) so that frequency response becomes flat.


[Quick Reverse Adjustment]

Conditions :

DIRECTION MODE switch : $\rightleftarrows$

Procedure :


Quick reverse adjustment tape
(leader portion of black cassette half)
set digital VTVM

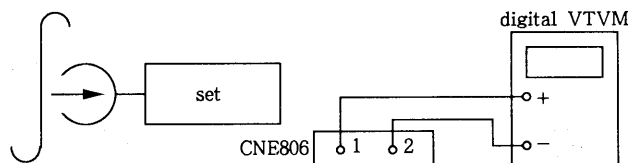


1. Insert the adjustment tape. Playback the leader portion in FWD mode.
 2. Check CNE806 voltage for more than 4.5V. Adjust then RV801 for $4.5\text{V} \pm 0.5\text{V}$.
 3. Repeat FWD and STOP several times and check then the adjustment voltage.
 4. Enter DIRECTION MODE $\rightleftarrows$
 5. Start playing back the tape top of the quick reverse check tape in FWD MODE.
- Confirm that tape enters FWD mode at the junction of leader tape and magnetic tape.

4-2. IC BLOCK DIAGRAM

- IC803 BA6219B
- IC804, 805 LB1641

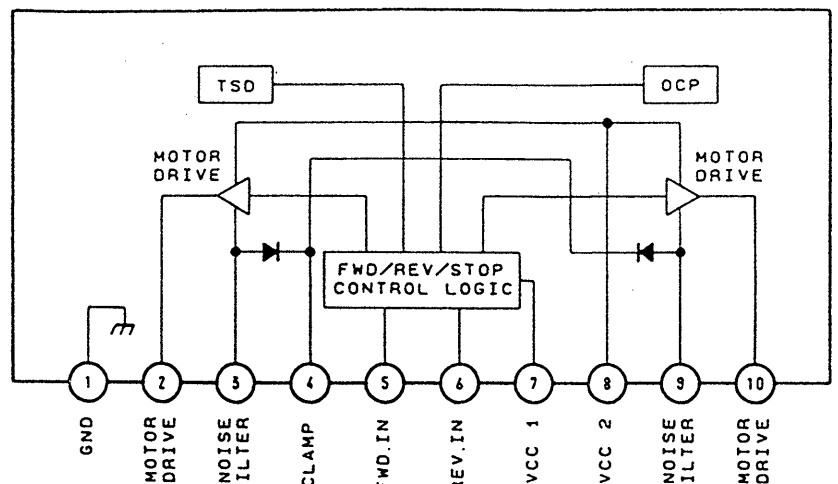


- IC806 M50253P

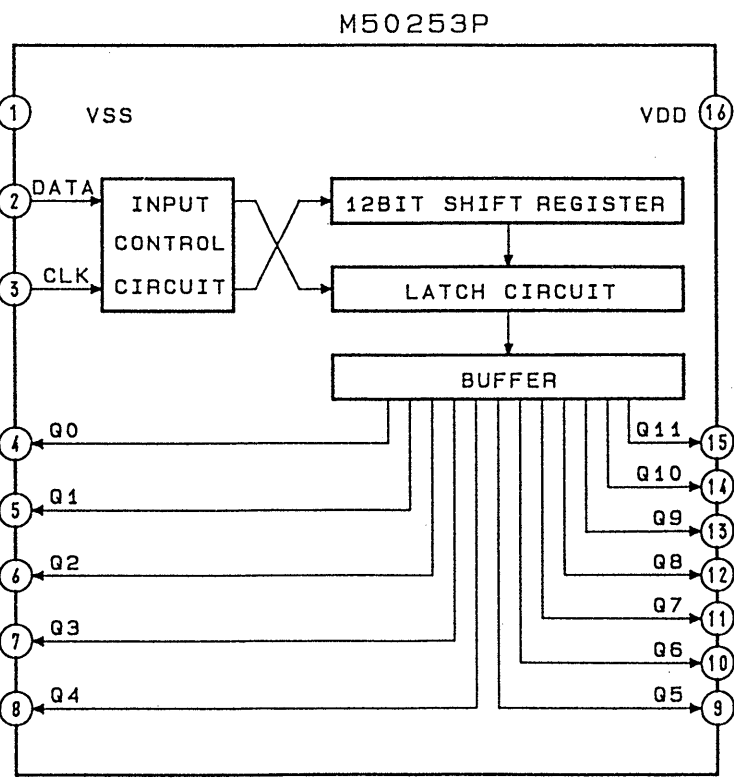


SECTION 4
DIAGRAMS


4-1. BLOCK DIAGRAM

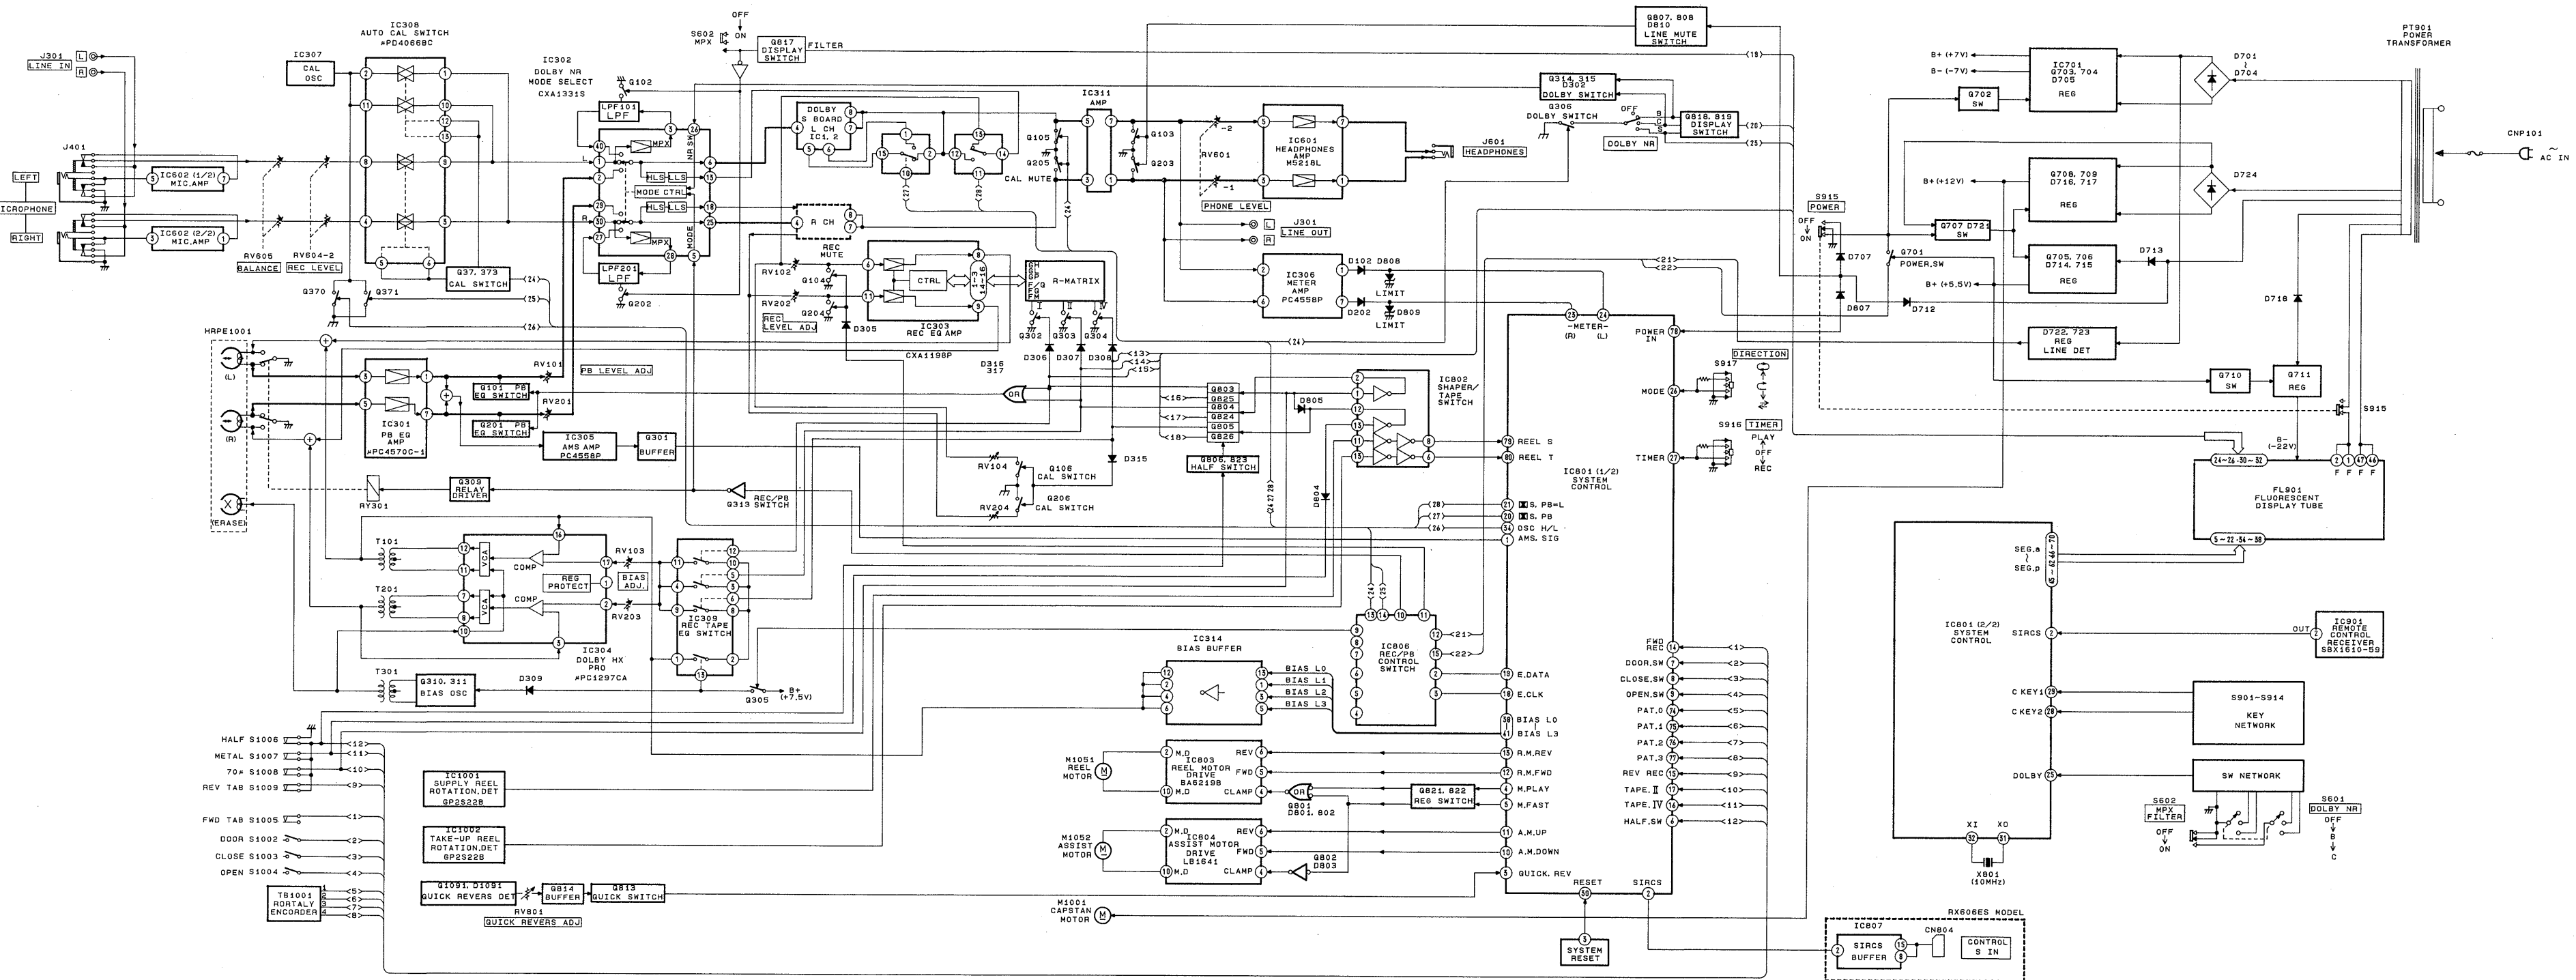


4-3. CIRCUIT BOARDS LOCATION

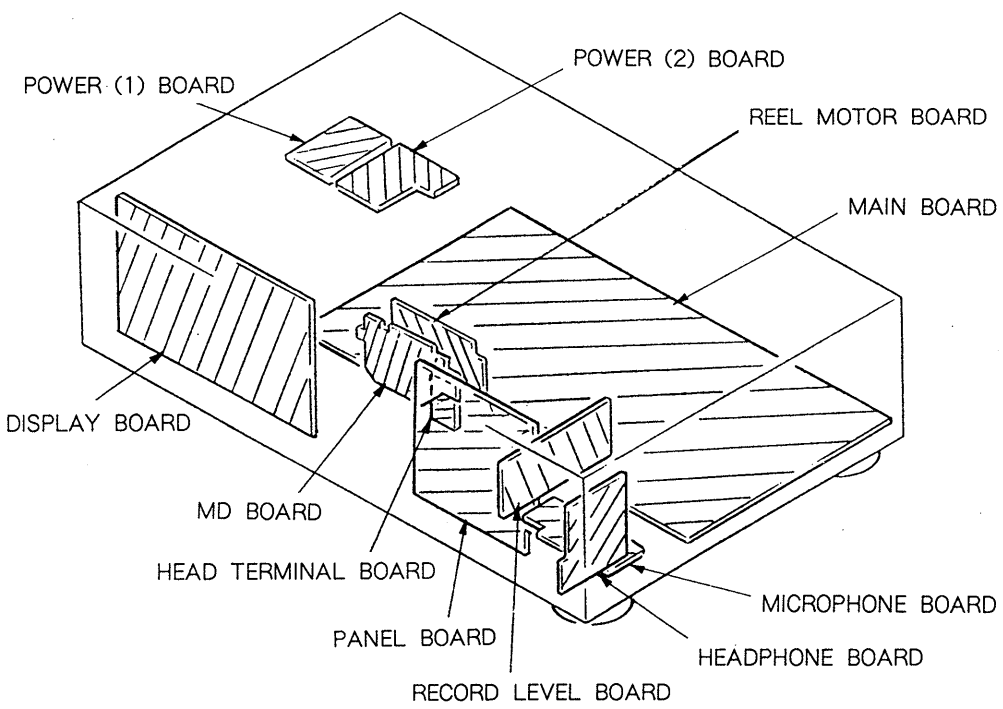


4-4. SEMICONDUCTOR LEAD LAYOUTS

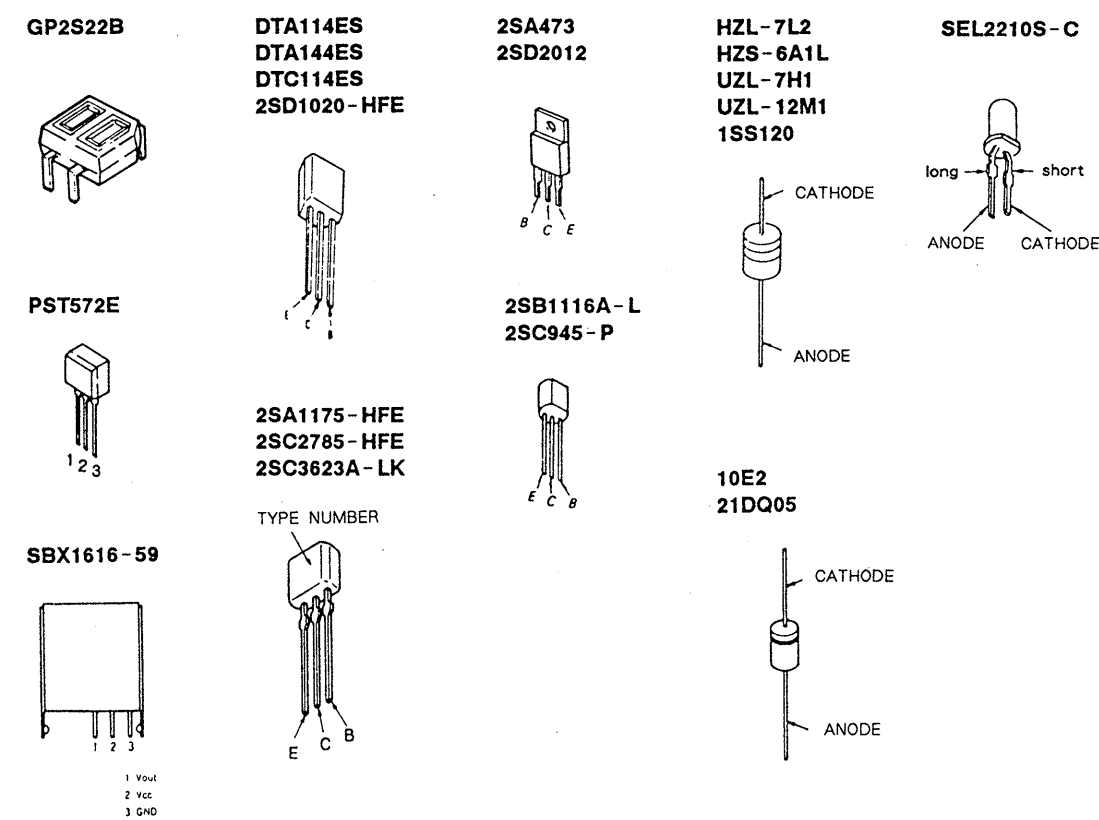

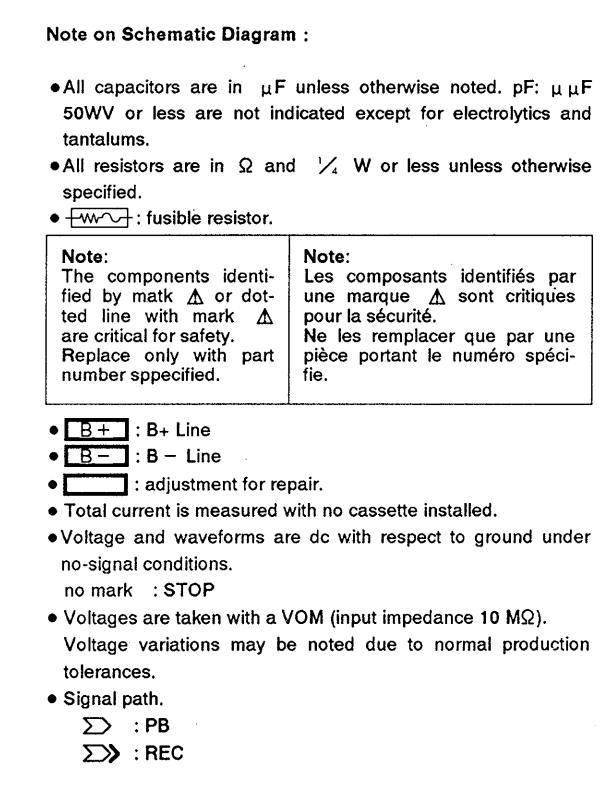

4-6. PRINTED WIRING BOARDS

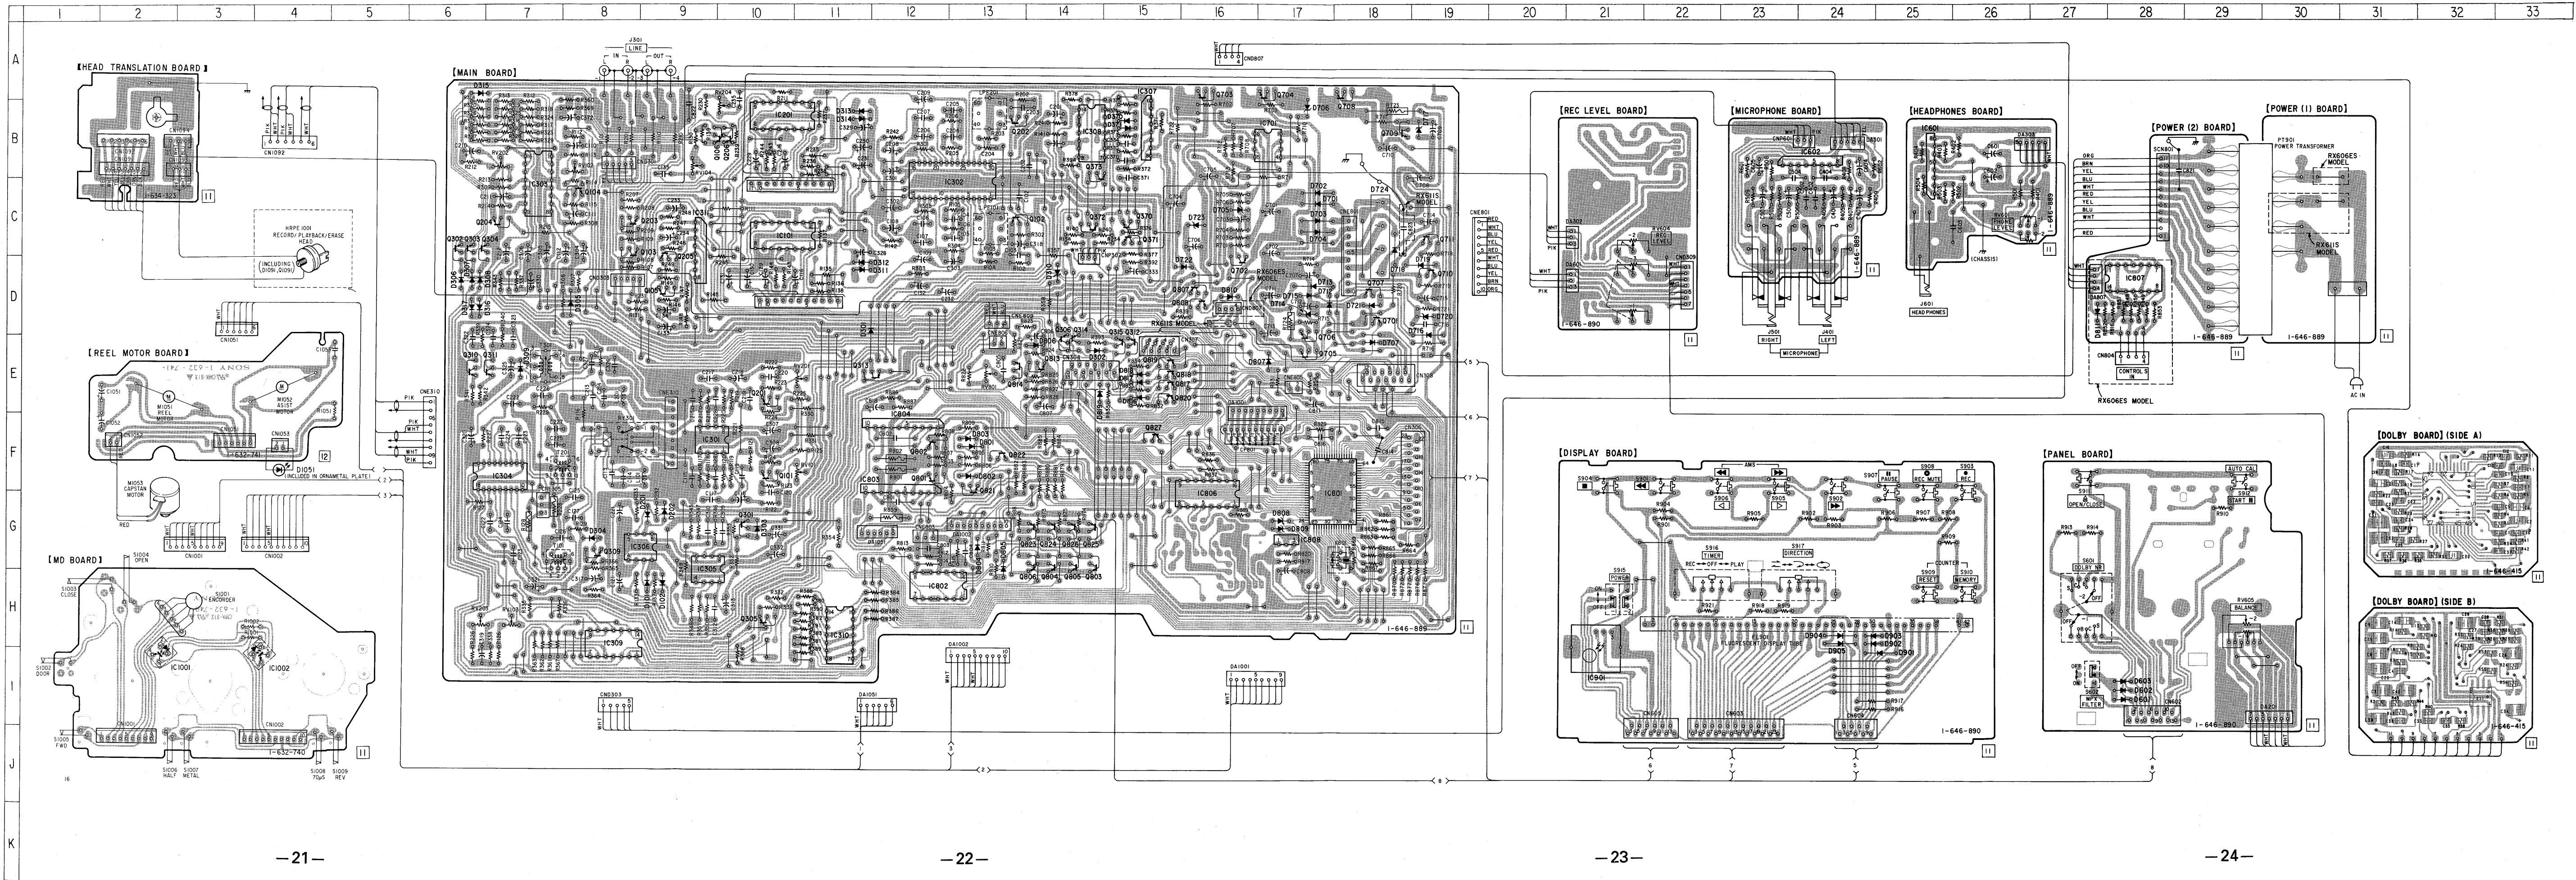

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D101	H-9	D808	G-17	Q204	C-6
D102	H-9	D809	G-17	Q205	C-9
D201	G-9	D810	D-16	Q206	B-10
D202	G-9	D811	D-27	Q301	G-10
D301	D-11	D816	E-15	Q302	C-6
D302	E-14	D817	E-15	Q303	C-6
D303	G-10	D818	E-15	Q304	C-6
D304	G-8	D819	E-14	Q305	H-10
D305	D-8	D901	H-25	Q306	D-14
D306	D-8	D902	H-25	Q309	G-8
D307	D-6	D903	H-25	Q310	E-6
D308	D-6	D904	H-24	Q311	E-7
D309	E-7	D905	H-24	Q312	D-15
D310	D-14	D1051	F-4	Q313	E-11
D311	D-12			Q314	D-14
D312	D-12	IC1	G-32	Q315	D-15
D313	B-11	IC2	C-33	Q370	C-15
D314	B-11	IC101	C-10	Q371	C-15
D315	A-6	IC201	F-9	Q373	B-14
D316	D-6	IC301	B-13	Q701	D-18
D317	D-6	IC302	C-7	Q702	D-16
D370	B-15	IC303	F-7	Q703	A-16
D371	B-15	IC304	G-9	Q704	A-17
D601	I-28	IC305	G-8	Q705	E-17
D602	I-28	IC306	A-15	Q706	D-17
D603	I-28	IC307	B-14	Q707	D-18
D701	C-17	IC308	H-8	Q708	B-18
D702	C-17	IC309	H-11	Q709	B-18
D703	C-17	IC310	C-25	Q710	D-19
D704	C-17	IC311	B-25	Q711	C-19
D705	C-16	IC601	B-24	Q801	F-12
D706	B-17	IC602	B-17	Q802	F-12
D707	E-18	IC701	F-17	Q803	H-14
D712	D-17	IC801	H-12	Q804	H-14
D713	D-17	IC802	E-12	Q805	H-14
D714	D-17	IC803	F-16	Q806	D-15
D715	D-17	IC804	D-28	Q808	D-15
D716	D-19	IC806	G-17	Q813	E-14
D717	B-19	IC807	I-21	Q814	E-13
D718	C-18	IC808	I-3	Q815	E-15
D719	C-18	IC901	I-4	Q819	E-15
D720	D-19	IC1001	F-10	Q820	F-13
D721	D-18	IC1002	C-9	Q822	F-13
D722	C-15	Q101	C-8	Q823	G-14
D723	C-16	Q102	D-9	Q824	G-14
D724	C-18	Q103	B-9	Q825	G-14
D801	F-13	Q104	E-10	Q826	G-14
D802	F-13	Q105	B-13	Q827	F-15
D803	F-13	Q201	C-9		
D804	G-13	Q202			
D805	G-13	Q203			
D806	E-14				
D807	E-16				

Note on Mounting Diagram :

- : Parts extracted from the component side.
- : Pattern on the side which is seen.

SECTION 5 EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example :
KNOB, BALANCE (WHITE)...(RED)

Parts color Cabinet's color


5-1. FRONT PANEL SECTION

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spéci-fie.


- A : DISPLAY BOARD
- B : REC LEVEL BOARD
- ▲ A : MICROPHONE BOARD
- ▲ B : HEADPHONES BOARD

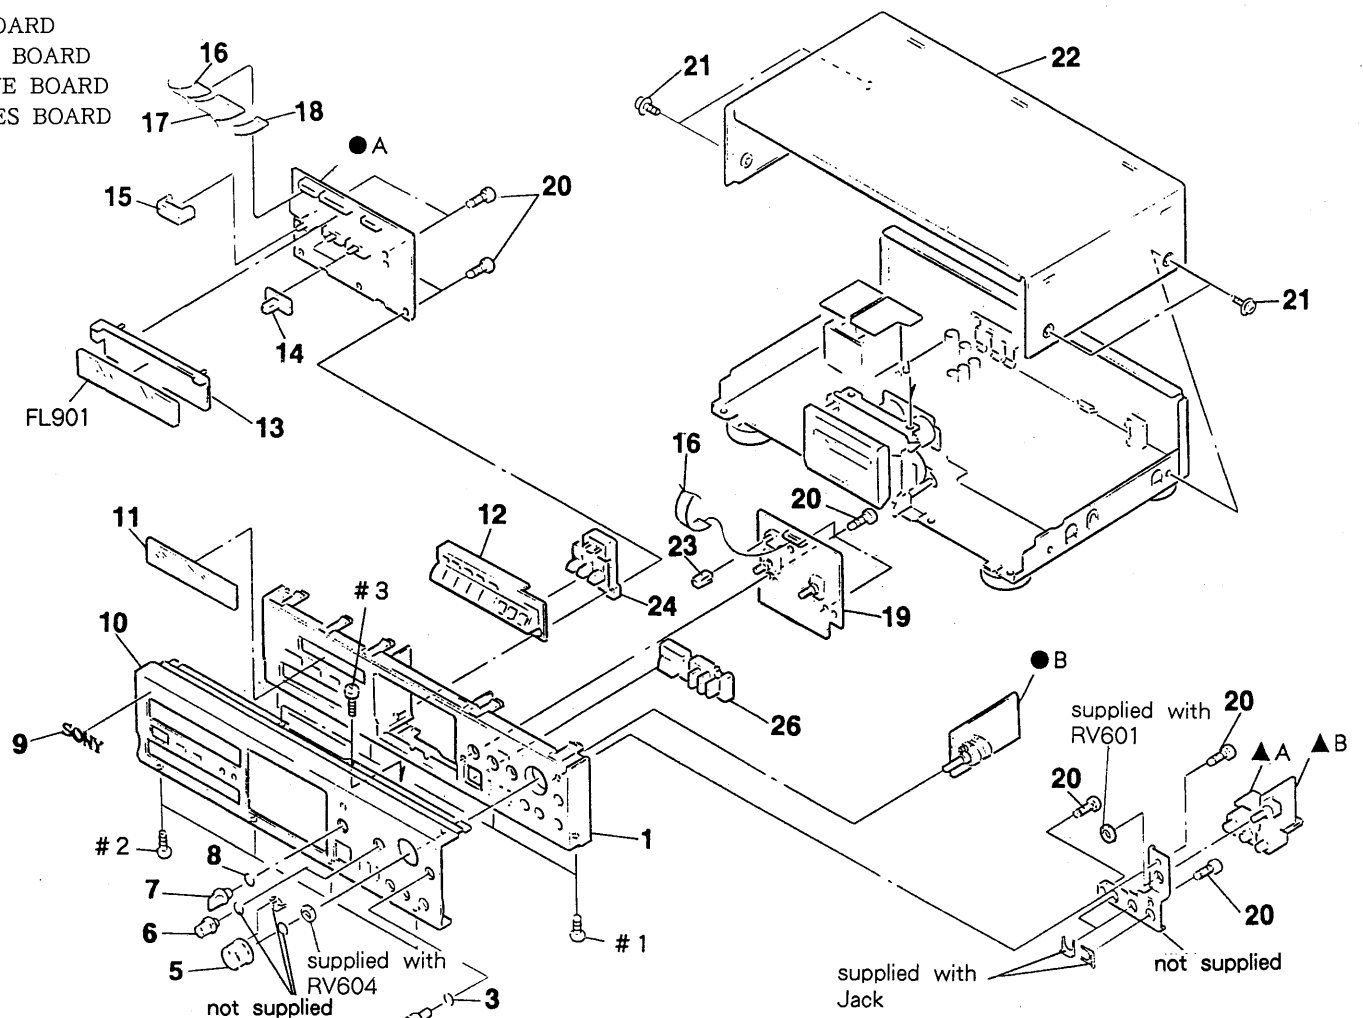

Ref. No.	Part No.	Description	Remarks
1	3-386-253-01	PANEL (BASE)	
3	3-370-186-01	SPRING (SWPA), RING	
4	3-350-495-01	KNOB (VOL)	
5	3-367-438-11	KNOB (REC)	
6	X-3365-387-1	KNOB (BAL) ASSY (B)	
7	4-908-097-21	KNOB	
8	3-350-440-01	SPRING	
9	4-942-568-01	EMBLEM (NO. 5), SONY	
10	3-386-251-11	PANEL, FRONT (606ES)	
10	3-386-251-21	PANEL, FRONT (611S)	
11	3-386-243-11	WINDOW (M)	
12	3-386-246-01	BUTTON (FR)	
* 13	3-386-245-01	HOLDER (FL)	
14	4-922-518-01	KNOB (TIMER)	

Ref. No.	Part No.	Description	Remarks
15	3-354-932-01	BUTTON (POWER)	
16	1-751-140-11	WIRE (FLAT TYPE) (13 CORE)	
17	1-751-141-11	WIRE (FLAT TYPE) (23 CORE)	
18	1-575-782-11	WIRE, FLAT TYPE (9 CORE)	
* 19	A-2006-958-A	PANEL BOARD, COMPLETE (INCLUDED ● A, B)	
20	4-951-620-01	SCREW (2. 6X8), +BVTP	
21	3-704-366-01	SCREW (CASE) (M3X8)	
22	3-332-578-61	CASE	
23	3-380-952-01	BUTTON	
24	3-386-248-01	BUTTON (RE)	
26	3-386-249-11	BUTTON (EJ)	
FL901	1-517-155-11	INDICATOR TUBE, FLUORESCENT	

5-2. CHASSIS SECTION

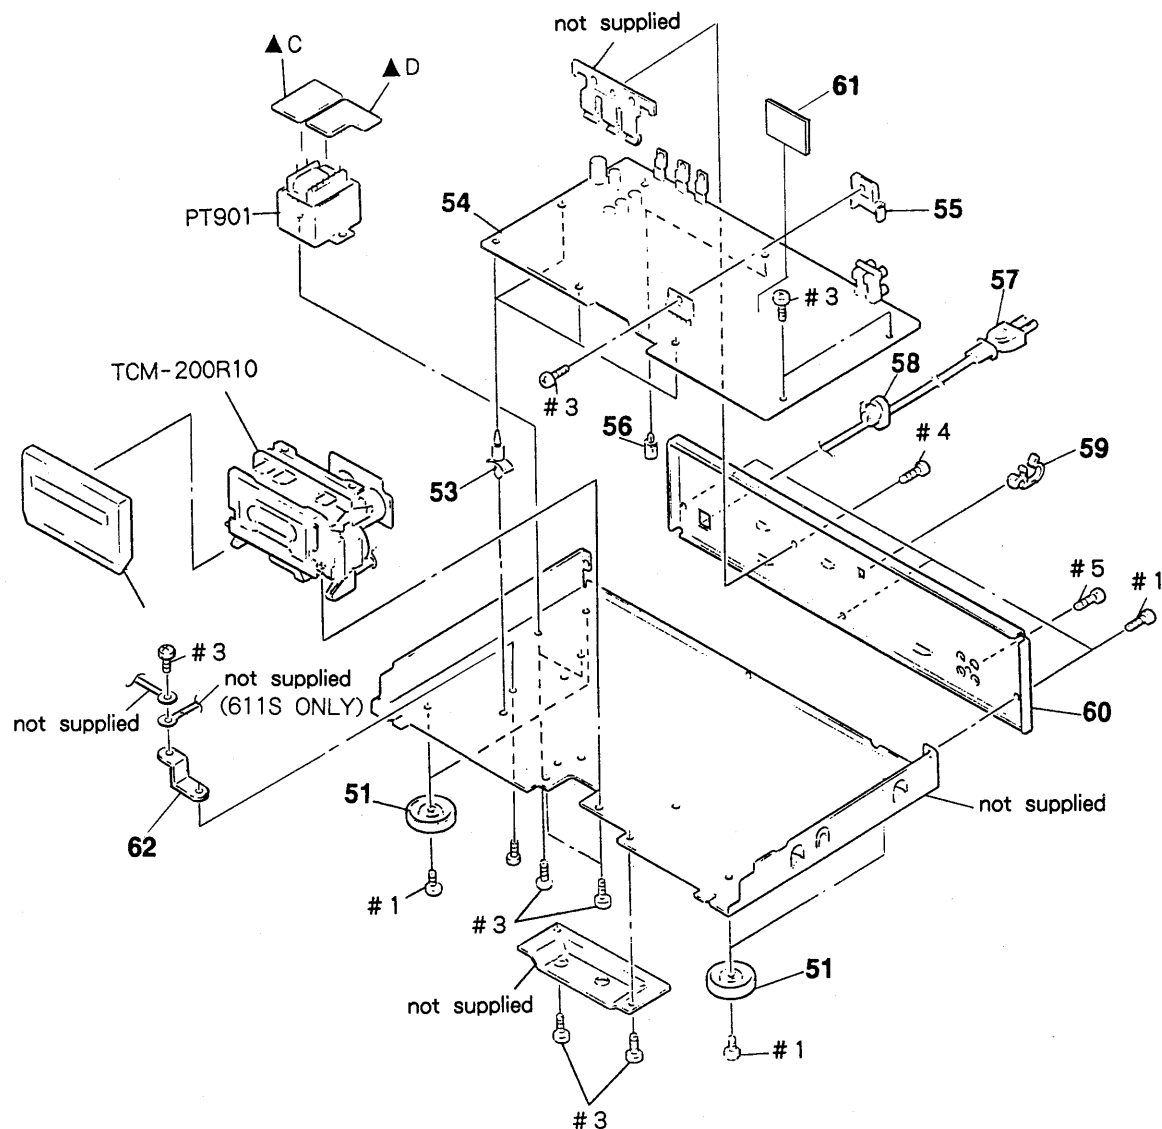

▲ C : POWER (1) BOARD


▲ D : POWER (2) BOARD

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-943-148-42	FOOT (F58175SW)		▲57	1-575-651-21	CORD, POWER (611S)	
52	X-3366-166-1	LID ASSY, CASSETTE (606ES)		* 58	3-703-244-00	BUSHING (2104), CORD (611S)	
52	X-3366-236-1	LID ASSY, CASSETTE (611S)		* 58	3-703-571-11	BUSHING (S) (4516), CORD (606ES)	
* 53	3-346-265-11	HOLDER, PC BOARD		* 59	4-949-235-01	HOOK	
* 54	A-2006-955-A	MAIN BOARD, COMPLETE (INCLUDED ▲A-D) (606ES)		* 60	3-386-252-11	PANEL, BACK (606ES)	
* 54	A-2006-960-A	MAIN BOARD, COMPLETE (INCLUDED ▲A-D) (611S)		* 60	3-386-252-21	PANEL, BACK (611S)	
* 55	3-356-925-01	HEAT SINK		* 61	A-2006-954-A	MOUNTED PCB (A), DOLBY (S)	
* 56	3-669-610-00	SPACER		* 62	3-332-563-01	STUD (P)	
▲57	1-558-945-21	CORD, POWER (POLAR. SPT-1) (606ES)		▲PT901	1-423-475-11	TRANSFORMER, POWER (606ES)	
				▲PT901	1-423-476-11	TRANSFORMER, POWER (611S)	

Note:
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


5-3. MECHANISM DECK SECTION 1 (TCM-200R10)

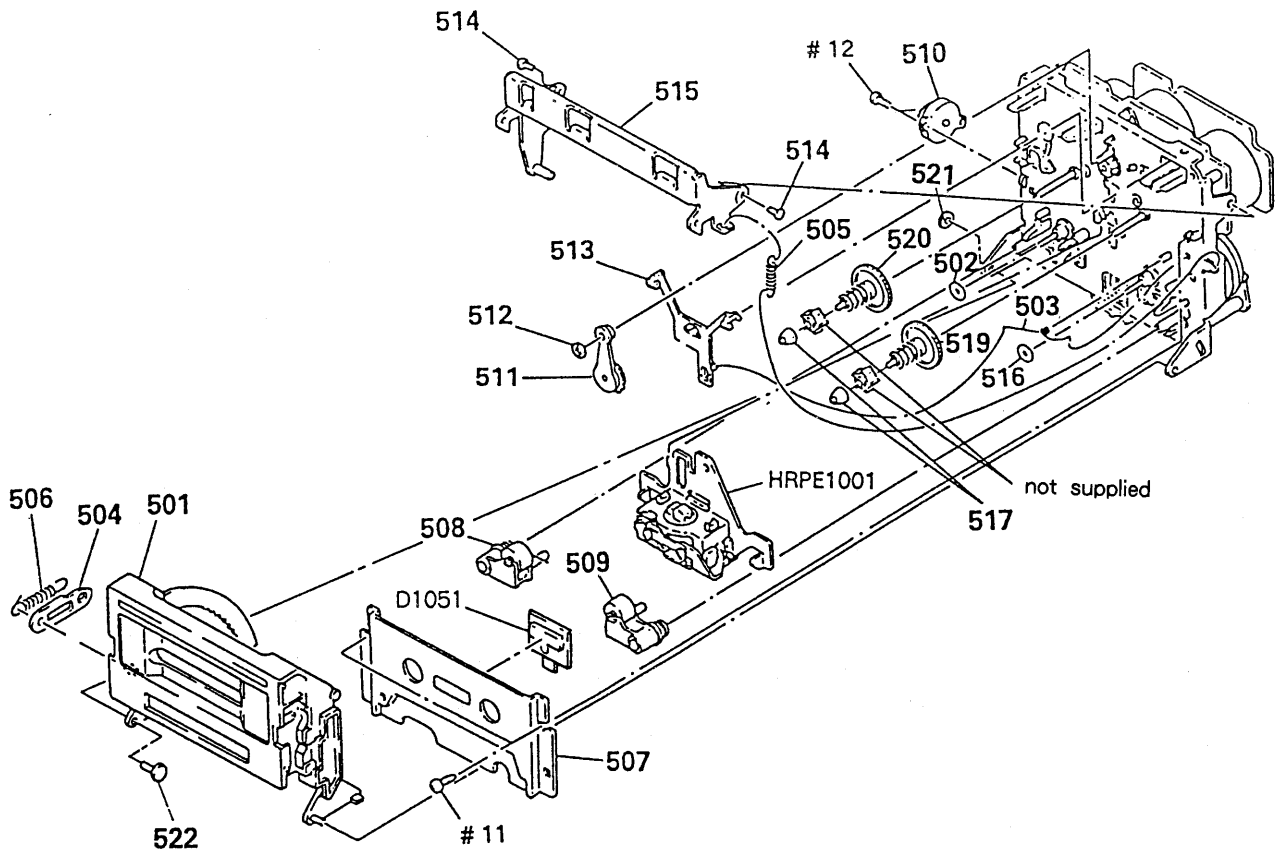

Ref. No.	Part No.	Description	Remarks
501	X-3365-299-1	HOLDER (CD-C) ASSY, CASSETTE	
502	3-356-714-01	WASHER	
503	3-356-619-01	SPRING (B), TORSION	
* 504	3-356-717-01	LEVER (JOINT)	
505	3-356-625-01	SPRING, TENSION	
506	3-356-626-01	SPRING, TENSION	
507	X-3356-613-1	PLATE ASSY, ORNAMENTAL	
508	X-3343-456-1	LEVER (PINCH R) ASSY	
509	X-3343-455-1	LEVER (PINCH F) ASSY	
510	3-712-786-01	DAMPER, OIL	
511	X-3356-641-1	LEVER (FR2) ASSY	
512	3-669-465-11	WASHER (1.5), STOPPER	

Ref. No.	Part No.	Description	Remarks
513	3-356-614-01	SLIDER (BRAKE)	
514	3-356-601-11	SCREW, STEP	
* 515	X-3356-608-1	LEVER (LIFTER) ASSY	
516	3-356-713-01	WASHER	
517	3-362-308-01	CAP (REEL)	
519	X-3356-627-1	REEL GEAR (S) ASSY	
520	X-3356-628-1	REEL GEAR (T) ASSY	
521	3-558-708-21	WASHER, STOPPER	
522	3-378-341-01	SHAFT (L) (CASSETTE HOLDER)	
D1051	8-719-980-85	DIODE SLF325C	
HRPE1001	A-2003-722-A	DECK ASSY, HEAD	

5-4. MECHANISM DECK SECTION 2 (TCM- 200R10)

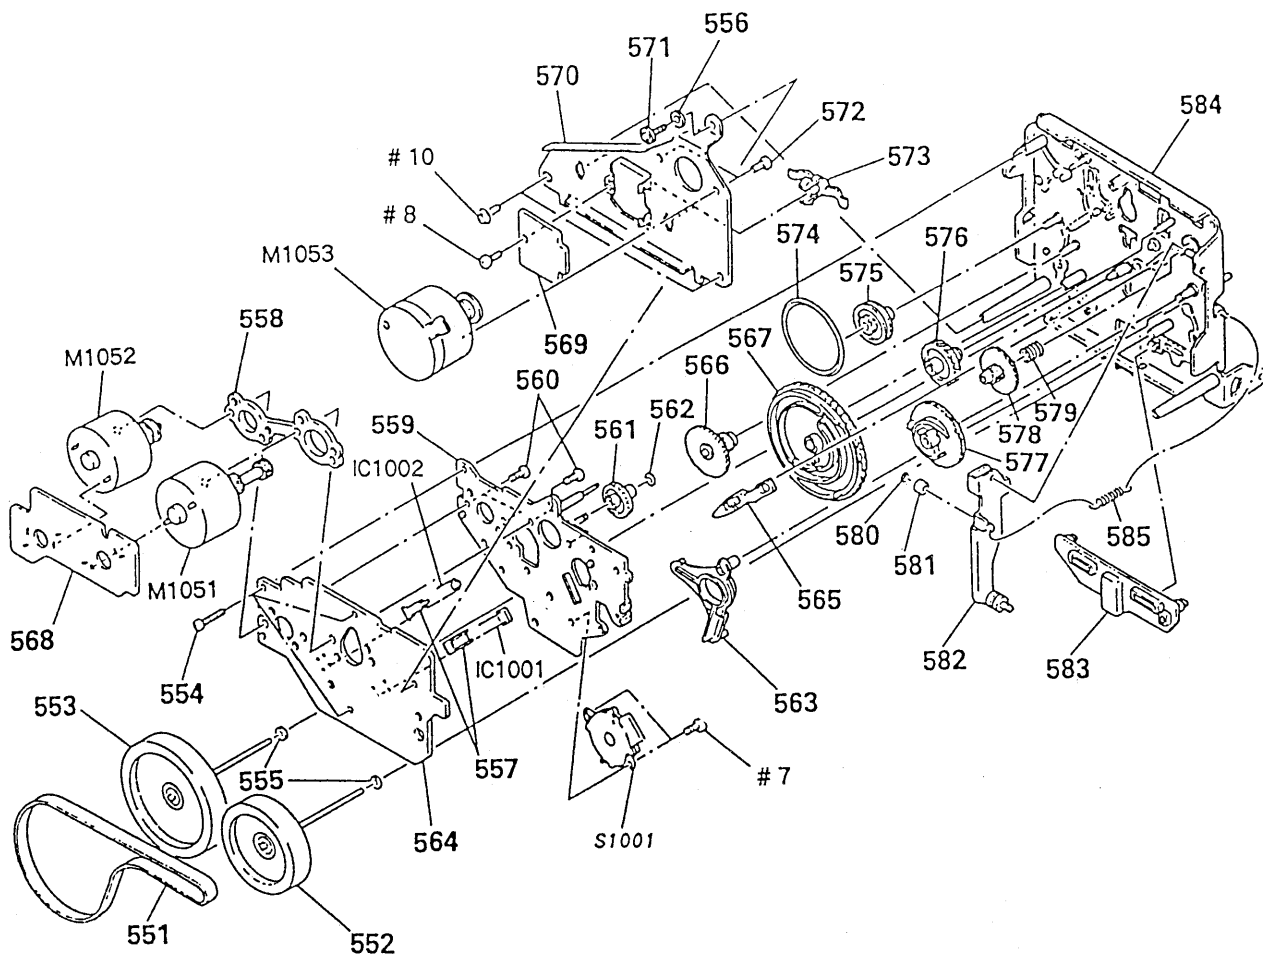

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
551	3-356-730-01	BELT (CAPSTAN R2)	
552	X-3356-642-1	FLYWHEEL (R FWD) ASSY	
553	X-3356-643-1	FLYWHEEL (R REV) ASSY	
554	3-355-801-01	SCREW (BTP 2X18)	
555	3-356-705-01	WASHER (CAPSTAN)	
* 556	3-356-718-01	SPACER (THRUST RETAINER R)	
557	3-356-631-01	HOLDER (SENSOR)	
* 558	3-356-628-01	SPACER (MOTOR)	
* 559	X-3356-602-1	BRACKET (MOTOR R) ASSY	
560	3-363-804-01	SCREW (+P 2. 6X6. 5)	
561	3-356-702-01	GEAR (COMMUNICATION B)	
562	3-669-465-00	WASHER (1.5), STOPPER	
563	3-356-613-01	LEVER (MODE)	
* 564	1-632-740-11	MD BOARD	
565	3-356-617-01	LEVER (SELECTION)	
566	3-356-606-01	GEAR (MODE)	
567	3-356-615-01	GEAR (MODE CAM RR)	
* 568	1-632-741-11	REAL MOTOR BOARD	
* 569	1-634-323-11	TRANSLATION BOARD	
* 570	3-356-629-01	BRACKET (THRUST RETAINER R)	

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
571	3-356-707-01	SCREW (+PTPWH 2X25)	
572	4-885-599-00	SCREW, FITTING, REINFORCEMENT	
573	3-575-321-00	RETAINER, THRUST, CAPSTAN	
574	3-356-603-01	BELT (MODE)	
575	3-356-607-01	PULLEY (MODE)	
576	3-356-703-01	GEAR (COMMUNICATION C)	
577	3-356-616-01	GEAR (LOADING CAM)	
578	3-356-609-01	GEAR (LOADING)	
579	3-356-605-01	SPRING, COMPRESSION	
580	3-558-708-11	WASHER, STOPPER	
581	3-356-630-01	ROLLER (LOADING)	
* 582	X-3356-606-1	LEVER (LOADING) ASSY	
583	3-356-612-01	SLIDER (REVERSE)	
584	X-3356-634-1	CHASSIS (R2) COMPLETE ASSY, MECH	
585	3-356-624-01	SPRING, TENSION	
IC1001	8-749-920-97	IC GP2S22B	
IC1002	8-749-920-97	IC GP2S22B	
M1051	X-3356-638-1	MOTOR (REEL R) ASSY	
M1052	X-3356-604-1	MOTOR (ASSIST) ASSY	
M1053	X-3356-646-1	MOTOR (CAPSTAN V1) ASSY	
S1001	1-466-525-11	ENCODER, ROTARY	

SECTION 6

ELECTRICAL PARTS LIST

MD MAIN DOLBY

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spéci-fie.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...
- CAPACITORS:
uF: μ F
- COILS
uH: μ H

Ref. No.	Part No.	Description	Remarks
*	1-632-740-11	MD BOARD *****	
	3-356-631-01	HOLDER (SENSOR)	
	CN1001 1-506-615-11	PIN, CONNECTOR 9P	
*	CN1002 1-564-502-11	PIN, CONNECTOR 10P	
	< IC >		
	IC1001 8-749-920-97	DI ODE GP2S22B	
	IC1002 8-749-920-97	DI ODE GP2S22B	
	< RESISTOR >		
	R1001 1-249-408-11	CARBON 180 5% 1/4W F	
	R1002 1-249-408-11	CARBON 180 5% 1/4W F	
	< SWITCH >		
	S1002 1-570-953-11	SWITCH, PUSH (1 KEY) (DOOR)	
	S1003 1-571-958-11	SWITCH, PUSH (1 KEY) (CLOSE)	
	S1004 1-572-126-11	SWITCH, PUSH (1 KEY) (OPEN)	
	S1005 1-572-125-11	SWITCH, LEAF (FWD TAB)	
	S1006 1-572-202-11	SWITCH, LEAF (HALF)	
	S1007 1-572-125-11	SWITCH, LEAF (METAL)	
	S1008 1-572-125-11	SWITCH, LEAF (70u)	
	S1009 1-572-125-11	SWITCH, LEAF (REV TAB)	
	< TERMINAL >		
*	TB1001 1-694-018-11	TERMINAL (5P)	

Ref. No.	Part No.	Description	Remarks
*	A-2006-955-A	MAIN BOARD, COMPLETE (INCLUDED Δ A-D) ***** (606ES)	
*	A-2006-960-A	MAIN BOARD, COMPLETE (INCLUDED Δ A-D) ***** (611S)	
*	A-2006-954-A	MOUNTED PCB (A), DOLBY (S) *****	
*	1-690-880-21	LEAD (WITH CONNECTOR)	
*	3-356-925-01	HEAT SINK	
	7-685-871-01	SCREW +BVTT 3X6 (S)	
	< CAPACITOR >		
	C1 1-164-222-11	CERAMIC CHIP 0.22uF 25V	
	C2 1-135-177-21	TANTALUM CHIP 1uF 20% 20V	
	C3 1-104-558-91	FILM CHIP 0.039uF 5% 16V	
	C4 1-163-007-11	CERAMIC CHIP 680PF 10% 50V	
	C5 1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
	C6 1-164-717-11	CERAMIC CHIP 0.0082uF 5% 50V	
	C7 1-164-222-11	CERAMIC CHIP 0.22uF 25V	
	C8 1-104-562-11	FILM CHIP 0.082uF 5% 16V	
	C9 1-104-553-11	FILM CHIP 0.015uF 5% 16V	
	C10 1-165-319-11	CERAMIC CHIP 0.1uF 50V	
	C11 1-135-145-11	TANTALUM CHIP 0.47uF 10% 35V	
	C12 1-164-222-11	CERAMIC CHIP 0.22uF 25V	
	C13 1-165-319-11	CERAMIC CHIP 0.1uF 50V	
	C14 1-162-568-11	CERAMIC CHIP 0.33uF 10% 16V	
	C15 1-104-562-11	FILM CHIP 0.082uF 5% 16V	
	C16 1-135-145-11	TANTALUM CHIP 0.47uF 10% 35V	
	C17 1-165-319-11	CERAMIC CHIP 0.1uF 50V	
	C18 1-164-222-11	CERAMIC CHIP 0.22uF 25V	
	C19 1-163-035-00	CERAMIC CHIP 0.047uF 50V	
	C20 1-104-553-11	FILM CHIP 0.015uF 5% 16V	
	C21 1-164-717-11	CERAMIC CHIP 0.0082uF 5% 50V	
	C22 1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
	C23 1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
	C24 1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
	C25 1-163-012-00	CERAMIC CHIP 0.0018uF 10% 50V	

MAIN DOLBY

Ref. No.	Part No.	Description	Remarks
C26	1-104-558-91	FILM CHIP	0.039uF 5% 16V
C27	1-163-012-00	CERAMIC CHIP	0.0018uF 10% 50V
C28	1-163-012-00	CERAMIC CHIP	0.0018uF 10% 50V
C29	1-104-563-11	FILM CHIP	0.1uF 5% 16V
C30	1-135-145-11	TANTALUM CHIP	0.47uF 10% 35V
C31	1-104-555-11	FILM CHIP	0.022uF 5% 16V
C32	1-104-563-11	FILM CHIP	0.1uF 5% 16V
C33	1-163-024-00	CERAMIC CHIP	0.018uF 10% 50V
C34	1-104-563-11	FILM CHIP	0.1uF 5% 16V
C35	1-163-012-00	CERAMIC CHIP	0.0018uF 10% 50V
C36	1-165-319-11	CERAMIC CHIP	0.1uF 50V
C37	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C38	1-163-024-00	CERAMIC CHIP	0.018uF 10% 50V
C39	1-104-555-11	FILM CHIP	0.022uF 5% 16V
C40	1-104-563-11	FILM CHIP	0.1uF 5% 16V
C101	1-124-907-11	ELECT	10uF 20% 50V
C102	1-162-294-31	CERAMIC	0.001uF 10% 50V
C103	1-161-375-00	CERAMIC	0.0022uF 20% 50V
C104	1-130-475-00	MYLAR	0.0022uF 5% 50V
C105	1-130-475-00	MYLAR	0.0022uF 5% 50V
C106	1-136-174-00	FILM	0.56uF 5% 50V
C107	1-136-171-00	FILM	0.33uF 5% 50V
C108	1-124-907-11	ELECT	10uF 20% 50V
C109	1-124-927-11	ELECT	4.7uF 20% 100V
C110	1-124-902-00	ELECT	0.47uF 20% 50V
C111	1-124-907-11	ELECT	10uF 20% 50V
C112	1-124-907-11	ELECT	10uF 20% 50V
C113	1-162-285-31	CERAMIC	180PF 10% 50V
C114	1-136-935-11	FILM	22PF 5% 630V
C115	1-164-736-31	CERAMIC	0.0012uF 10% 50V
C116	1-124-907-11	ELECT	10uF 20% 50V
C117	1-130-487-00	MYLAR	0.022uF 5% 50V
C118	1-124-657-00	ELECT	10uF 20% 50V
C119	1-161-494-00	CERAMIC	0.022uF 25V
C120	1-130-488-00	MYLAR	0.027uF 5% 50V
C121	1-124-925-11	ELECT	2.2uF 20% 100V
C122	1-136-153-00	FILM	0.01uF 5% 50V
C123	1-136-157-00	FILM	0.022uF 5% 50V
C124	1-136-161-00	FILM	0.047uF 5% 50V
C125	1-136-272-00	FILM	68PF 5% 630V
C126	1-130-468-00	MYLAR	560PF 5% 50V
C127	1-136-433-11	FILM	100PF 5% 630V
C128	1-162-282-31	CERAMIC	100PF 10% 50V
C129	1-124-907-11	ELECT	10uF 20% 50V
C130	1-124-916-11	ELECT	22uF 20% 63V
C131	1-124-907-11	ELECT	10uF 20% 50V
C132	1-124-907-11	ELECT	10uF 20% 50V
C133	1-124-925-11	ELECT	2.2uF 20% 100V
C134	1-124-925-11	ELECT	2.2uF 20% 100V
C135	1-130-475-00	MYLAR	0.0022uF 5% 50V

Ref. No.	Part No.	Description	Remarks
C201	1-124-907-11	ELECT	10uF 20% 50V
C202	1-162-294-31	CERAMIC	0.001uF 10% 50V
C203	1-161-375-00	CERAMIC	0.0022uF 20% 50V
C204	1-130-475-00	MYLAR	0.0022uF 5% 50V
C205	1-130-475-00	MYLAR	0.0022uF 5% 50V
C206	1-136-174-00	FILM	0.56uF 5% 50V
C207	1-136-171-00	FILM	0.33uF 5% 50V
C208	1-124-907-11	ELECT	10uF 20% 50V
C209	1-124-927-11	ELECT	4.7uF 20% 100V
C210	1-124-902-00	ELECT	0.47uF 20% 50V
C211	1-124-907-11	ELECT	10uF 20% 50V
C212	1-124-907-11	ELECT	10uF 20% 50V
C213	1-162-285-31	CERAMIC	180PF 10% 50V
C214	1-136-935-11	FILM	22PF 5% 630V
C215	1-164-736-31	CERAMIC	0.0012uF 10% 50V
C216	1-124-907-11	ELECT	10uF 20% 50V
C217	1-130-487-00	MYLAR	0.022uF 5% 50V
C218	1-124-657-00	ELECT	10uF 20% 50V
C219	1-161-494-00	CERAMIC	0.022uF 25V
C220	1-130-488-00	MYLAR	0.027uF 5% 50V
C221	1-124-925-11	ELECT	2.2uF 20% 100V
C222	1-136-153-00	FILM	0.01uF 5% 50V
C223	1-136-157-00	FILM	0.022uF 5% 50V
C224	1-136-161-00	FILM	0.047uF 5% 50V
C225	1-136-272-00	FILM	68PF 5% 630V
C226	1-130-468-00	MYLAR	560PF 5% 50V
C227	1-136-433-11	FILM	100PF 5% 630V
C228	1-162-282-31	CERAMIC	100PF 10% 50V
C229	1-124-907-11	ELECT	10uF 20% 50V
C230	1-124-916-11	ELECT	22uF 20% 63V
C231	1-124-907-11	ELECT	10uF 20% 50V
C232	1-124-907-11	ELECT	10uF 20% 50V
C233	1-124-925-11	ELECT	2.2uF 20% 100V
C234	1-124-925-11	ELECT	2.2uF 20% 100V
C235	1-130-475-00	MYLAR	0.0022uF 5% 50V
C301	1-124-907-11	ELECT	10uF 20% 50V
C302	1-124-907-11	ELECT	10uF 20% 50V
C303	1-124-916-11	ELECT	22uF 20% 63V
C304	1-124-903-11	ELECT	1uF 20% 50V
C305	1-124-907-11	ELECT	10uF 20% 50V
C306	1-124-907-11	ELECT	10uF 20% 50V
C307	1-124-443-00	ELECT	100uF 20% 10V
C308	1-124-443-00	ELECT	100uF 20% 10V
C309	1-162-217-31	CERAMIC	56PF 5% 50V
C310	1-161-494-00	CERAMIC	0.022uF 25V
C312	1-162-217-31	CERAMIC	56PF 5% 50V
C313	1-124-925-11	ELECT	2.2uF 20% 100V
C317	1-124-927-11	ELECT	4.7uF 20% 100V
C318	1-124-925-11	ELECT	2.2uF 20% 100V
C319	1-124-902-00	ELECT	0.47uF 20% 50V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C320	1-124-477-11	ELECT	47uF 20% 25V	C801	1-164-159-11	CERAMIC	0.1uF 50V
C321	1-124-477-11	ELECT	47uF 20% 25V	C802	1-164-159-11	CERAMIC	0.1uF 50V
C322	1-136-230-00	FILM	0.0022uF 5% 100V	C803	1-162-294-31	CERAMIC	0.001uF 10% 50V
C323	1-136-230-00	FILM	0.0022uF 5% 100V	C804	1-162-294-31	CERAMIC	0.001uF 10% 50V
C324	1-130-856-00	FILM	0.0068uF 5% 100V	C805	1-161-377-00	CERAMIC	0.0047uF 30% 16V
C325	1-124-907-11	ELECT	10uF 20% 50V	C806	1-124-477-11	ELECT	47uF 20% 25V
C326	1-136-558-11	FILM	0.0039uF 5% 630V	C807	1-124-927-11	ELECT	4.7uF 20% 100V
C327	1-107-046-00	MICA	4.7PF 500V	C808	1-124-903-11	ELECT	1uF 20% 50V
C328	1-124-927-11	ELECT	4.7uF 20% 100V	C811	1-124-443-00	ELECT	100uF 20% 10V
C329	1-124-927-11	ELECT	4.7uF 20% 100V	C814	1-164-159-11	CERAMIC	0.1uF 50V (606ES)
C330	1-124-902-00	ELECT	0.47uF 20% 50V	C814	1-161-494-00	CERAMIC	0.022uF 25V (611S)
C331	1-124-477-11	ELECT	47uF 20% 25V	C815	1-164-159-11	CERAMIC	0.1uF 50V
C332	1-124-477-11	ELECT	47uF 20% 25V	C816	1-161-494-00	CERAMIC	0.022uF 25V
C333	1-124-903-11	ELECT	1uF 20% 50V	C818	1-124-902-00	ELECT	0.47uF 20% 50V
C334	1-136-161-00	FILM	0.047uF 5% 50V	C819	1-164-159-11	CERAMIC	0.1uF 50V (606ES)
C335	1-161-494-00	CERAMIC	0.022uF 25V	C821	1-162-293-31	CERAMIC	820PF 10% 50V (611S)
C370	1-130-477-00	MYLAR	0.0033uF 5% 50V	C822	1-162-294-31	CERAMIC	0.001uF 10% 50V (611S)
C371	1-136-164-00	FILM	0.082uF 5% 50V	C823	1-162-306-11	CERAMIC	0.01uF 20% 16V (611S)
C372	1-124-902-00	ELECT	0.47uF 20% 50V	< CONNECTOR >			
C401	1-124-903-11	ELECT	1uF 20% 50V	* CN1	1-537-473-11	TERMINAL (LEAD PIN)	
C402	1-162-292-31	CERAMIC	680PF 10% 50V	* CN304	1-568-832-11	SOCKET, CONNECTOR 13P	
C403	1-124-903-11	ELECT	1uF 20% 50V	* CN306	1-568-839-11	SOCKET, CONNECTOR 23P	
C404	1-162-282-31	CERAMIC	100PF 10% 50V	* CN307	1-568-828-11	SOCKET, CONNECTOR 9P	
C405	1-162-306-11	CERAMIC	0.01uF 20% 16V (611S)	* CN308	1-568-832-11	SOCKET, CONNECTOR 13P	
C505	1-162-306-11	CERAMIC	0.01uF 20% 16V (611S)	CN804	1-558-350-31	CORD (WITH CONNECTOR) (606ES)	
C501	1-124-903-11	ELECT	1uF 20% 50V	* CN808	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P	
C502	1-162-292-31	CERAMIC	680PF 10% 50V	* CND301	1-564-339-61	PIN, CONNECTOR 5P	
C503	1-124-903-11	ELECT	1uF 20% 50V	* CND303	1-564-339-51	PIN, CONNECTOR 5P	
C504	1-162-282-31	CERAMIC	100PF 10% 50V	* CND807	1-564-338-51	PIN, CONNECTOR 4P (606ES)	
C601	1-124-927-11	ELECT	4.7uF 20% 100V	* CNE305	1-564-506-11	PLUG, CONNECTOR 3P	
C602	1-124-927-11	ELECT	4.7uF 20% 100V	* CNE310	1-564-509-11	PLUG, CONNECTOR 6P	
C603	1-161-494-00	CERAMIC	0.022uF 25V	* CNE311	1-564-505-11	PLUG, CONNECTOR 2P	
C604	1-124-443-00	ELECT	100uF 20% 10V	* CNE801	1-564-513-11	PLUG, CONNECTOR 10P	
C605	1-124-443-00	ELECT	100uF 20% 10V	* CNE803	1-564-506-11	PLUG, CONNECTOR 3P	
C701	1-124-556-11	ELECT	2200uF 20% 16V	* CNE805	1-564-505-41	PLUG, CONNECTOR 2P	
C702	1-124-556-11	ELECT	2200uF 20% 16V	* CNE806	1-564-505-41	PLUG, CONNECTOR 2P	
C703	1-126-176-11	ELECT	220uF 20% 10V	* CNE809	1-564-506-11	PLUG, CONNECTOR 3P	
C704	1-124-999-11	ELECT	2200uF 20% 10V	* CNP302	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C705	1-124-999-11	ELECT	2200uF 20% 10V	* CNP601	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C706	1-124-473-11	ELECT	1000uF 20% 10V	< COMPOSITION CIRCUIT BLOCK >			
C707	1-124-907-11	ELECT	10uF 20% 50V	CP801	1-233-204-11	COMPOSITION CIRCUIT BLOCK	
C708	1-124-564-11	ELECT	4700uF 20% 25V	< DIODE >			
C709	1-124-907-11	ELECT	10uF 20% 50V	D101	8-719-912-20	DIODE 1SS120	
C710	1-124-360-00	ELECT	1000uF 20% 16V	D102	8-719-912-20	DIODE 1SS120	
C711	1-126-936-11	ELECT	3300uF 20% 16V	D201	8-719-912-20	DIODE 1SS120	
C712	1-124-907-11	ELECT	10uF 20% 50V	D202	8-719-912-20	DIODE 1SS120	
C713	1-124-473-11	ELECT	1000uF 20% 10V	D301	8-719-912-20	DIODE 1SS120	
C714	1-124-122-11	ELECT	100uF 20% 50V				
C715	1-126-947-11	ELECT	47uF 20% 35V				
C716	1-164-159-11	CERAMIC	0.1uF 50V				

MAIN

DOLBY

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D302	8-719-912-20	DIODE	1SS120	D816	8-719-912-20	DIODE	1SS120
D303	8-719-912-20	DIODE	1SS120	D817	8-719-912-20	DIODE	1SS120
D304	8-719-912-20	DIODE	1SS120	D818	8-719-912-20	DIODE	1SS120
D305	8-719-912-20	DIODE	1SS120	D819	8-719-912-20	DIODE	1SS120
D306	8-719-912-20	DIODE	1SS120	< IC >			
D307	8-719-912-20	DIODE	1SS120	IC1	8-752-056-51	IC	CXA1417Q-T6
D308	8-719-912-20	DIODE	1SS120	IC2	8-759-711-85	IC	NJM4580E-D
D309	8-719-912-20	DIODE	1SS120	IC101	8-759-140-53	IC	MC14053BCP
D310	8-719-933-49	DIODE	HZS7C1L	IC201	8-759-140-53	IC	MC14053BCP
D311	8-719-200-82	DIODE	11ES2	IC301	8-759-111-44	IC	uPC4570C-1
D312	8-719-200-82	DIODE	11ES2	IC302	8-752-059-54	IC	CXA1332S
D313	8-719-200-82	DIODE	11ES2	IC303	8-752-060-64	IC	CXA1198AP
D314	8-719-200-82	DIODE	11ES2	IC304	8-759-106-56	IC	uPC1297CA
D315	8-719-912-20	DIODE	1SS120	IC305	8-759-145-58	IC	uPC4558C
D316	8-719-912-20	DIODE	1SS120	IC306	8-759-145-58	IC	uPC4558C
D317	8-719-912-20	DIODE	1SS120	IC307	8-759-634-50	IC	M5218AL
D370	8-719-912-20	DIODE	1SS120	IC308	8-759-000-49	IC	uPD4066BC
D371	8-719-912-20	DIODE	1SS120	IC309	8-759-000-49	IC	uPD4066BC
D701	8-719-200-02	DIODE	10E2	IC310	8-759-916-14	IC	SN74HC04N
D702	8-719-200-02	DIODE	10E2	IC311	8-759-634-50	IC	M5218AL
D703	8-719-200-02	DIODE	10E2	IC601	8-759-634-50	IC	M5218AL
D704	8-719-200-02	DIODE	10E2	IC602	8-759-634-50	IC	M5218AL
D705	8-719-933-33	DIODE	HZS6A1L	IC701	8-759-145-58	IC	uPC4558C
D706	8-719-933-33	DIODE	HZS6A1L	IC801	8-752-841-97	IC	CXP82316-011Q
D707	8-719-912-20	DIODE	1SS120	IC802	8-759-240-69	IC	TC4069UBP
D712	8-719-912-20	DIODE	1SS120	IC803	8-759-973-95	IC	BA6219B
D713	8-719-200-31	DIODE	21DQ05	IC804	8-759-822-09	IC	LB1641
D714	8-719-933-44	DIODE	HZS7A2L	IC806	8-759-635-31	IC	M50253P
D715	8-719-912-20	DIODE	1SS120	IC807	8-759-140-11	IC	uPD4011BC (606ES)
D716	8-719-912-20	DIODE	1SS120	IC808	8-759-520-90	IC	PST572E
D717	8-719-001-70	DIODE	UZL-12M1	< JACK >			
D718	8-719-200-02	DIODE	10E2	J301	1-573-070-11	JACK, PIN 4P(LINE IN/OUT)	
D719	8-719-200-02	DIODE	10E2	J401	1-507-854-21	JACK, LARGE TYPE(MICROPHONE L)	
D720	8-719-933-49	DIODE	HZS7C1L	J501	1-507-854-21	JACK, LARGE TYPE(MICROPHONE R)	
D721	8-719-912-20	DIODE	1SS120	J601	1-507-796-71	JACK(HEADPHONES)	
D722	8-719-912-20	DIODE	1SS120	< COIL >			
D723	8-719-933-33	DIODE	HZS6A1L	L101	1-410-780-11	INDUCTOR	27mH
D724	8-719-312-09	DIODE	RBA-402	L201	1-410-780-11	INDUCTOR	27mH
D801	8-719-912-20	DIODE	1SS120	< FILTER >			
D802	8-719-912-20	DIODE	1SS120	LPF101	1-236-475-11	FILTER, LOW PASS	
D803	8-719-912-20	DIODE	1SS120	LPF201	1-236-475-11	FILTER, LOW PASS	
D804	8-719-912-20	DIODE	1SS120	< TRANSISTOR >			
D805	8-719-912-20	DIODE	1SS120	Q101	8-729-900-80	TRANSISTOR	DTC114ES
D806	8-719-912-20	DIODE	1SS120	Q102	8-729-900-80	TRANSISTOR	DTC114ES
D807	8-719-912-20	DIODE	1SS120	Q103	8-729-142-25	TRANSISTOR	2SD1020-HFE
D808	8-719-933-33	DIODE	HZS6A1L				
D809	8-719-933-33	DIODE	HZS6A1L				
D810	8-719-912-20	DIODE	1SS120				
D811	8-719-912-20	DIODE	1SS120 (606ES)				

Ref. No.	Part No.	Description	Remarks
Q104	8-729-142-25	TRANSISTOR 2SD1020-HFE	
Q105	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q106	8-729-900-80	TRANSISTOR DTC114ES	
Q201	8-729-900-80	TRANSISTOR DTC114ES	
Q202	8-729-900-80	TRANSISTOR DTC114ES	
Q203	8-729-142-25	TRANSISTOR 2SD1020-HFE	
Q204	8-729-142-25	TRANSISTOR 2SD1020-HFE	
Q205	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q206	8-729-900-80	TRANSISTOR DTC114ES	
Q301	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q302	8-729-900-80	TRANSISTOR DTC114ES	
Q303	8-729-900-80	TRANSISTOR DTC114ES	
Q304	8-729-900-80	TRANSISTOR DTC114ES	
Q305	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q306	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q309	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q310	8-729-194-57	TRANSISTOR 2SC945-P	
Q311	8-729-194-57	TRANSISTOR 2SC945-P	
Q312	8-729-900-61	TRANSISTOR DTA114ES	
Q313	8-729-900-61	TRANSISTOR DTA114ES	
Q314	8-729-900-61	TRANSISTOR DTA114ES	
Q315	8-729-900-61	TRANSISTOR DTA114ES	
Q370	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q371	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q372	8-729-900-80	TRANSISTOR DTC114ES	
Q373	8-729-900-89	TRANSISTOR DTC114ES	
Q701	8-729-900-80	TRANSISTOR DTC114ES	
Q702	8-729-900-80	TRANSISTOR DTC114ES	
Q703	8-729-141-83	TRANSISTOR 2SA473	
Q704	8-729-209-15	TRANSISTOR 2SD2012	
Q705	8-729-209-15	TRANSISTOR 2SD2012	
Q706	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q707	8-729-900-80	TRANSISTOR DTC114ES	
Q708	8-729-141-83	TRANSISTOR 2SA473	
Q709	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q710	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q711	8-729-140-04	TRANSISTOR 2SB1116A-L	
Q801	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q802	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q803	8-729-900-61	TRANSISTOR DTA114ES	
Q804	8-729-900-61	TRANSISTOR DTA114ES	
Q805	8-729-900-61	TRANSISTOR DTA114ES	
Q806	8-729-900-61	TRANSISTOR DTA114ES	
Q807	8-729-900-65	TRANSISTOR DTA114ES	
Q808	8-729-900-80	TRANSISTOR DTC114ES	
Q809	8-729-900-61	TRANSISTOR DTA114ES (611S)	
Q813	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q814	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q817	8-729-900-61	TRANSISTOR DTA114ES	

Ref. No.	Part No.	Description	Remarks
Q818	8-729-900-61	TRANSISTOR DTA114ES	
Q819	8-729-900-61	TRANSISTOR DTA114ES	
Q820	8-729-900-61	TRANSISTOR DTA114ES	
Q821	8-729-900-80	TRANSISTOR DTC114ES	
Q822	8-729-900-80	TRANSISTOR DTC114ES	
Q823	8-729-900-61	TRANSISTOR DTA114ES	
Q824	8-729-900-61	TRANSISTOR DTA114ES	
Q825	8-729-900-61	TRANSISTOR DTA114ES	
Q826	8-729-900-61	TRANSISTOR DTA114ES	
Q827	8-729-900-61	TRANSISTOR DTA114ES	
< RESISTOR >			
R1	1-216-013-00	METAL CHIP 33 5% 1/10W	
R2	1-216-675-11	METAL CHIP 10K 0.5% 1/10W	
R3	1-216-681-11	METAL CHIP 18K 0.5% 1/10W	
R4	1-218-774-11	METAL CHIP 820K 0.50% 1/10W	
R5	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R6	1-216-656-11	METAL CHIP 1.6K 0.5% 1/10W	
R7	1-216-657-11	METAL CHIP 1.8K 0.5% 1/10W	
R8	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R9	1-216-058-00	METAL GLAZE 2.4K 5% 1/10W	
R10	1-216-654-11	METAL CHIP 1.3K 0.5% 1/10W	
R11	1-216-013-00	METAL CHIP 33 5% 1/10W	
R12	1-216-017-00	METAL CHIP 47 5% 1/10W	
R13	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R14	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R15	1-216-058-00	METAL GLAZE 2.4K 5% 1/10W	
R16	1-216-013-00	METAL CHIP 33 5% 1/10W	
R17	1-216-017-00	METAL CHIP 47 5% 1/10W	
R18	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
R19	1-216-656-11	METAL CHIP 1.6K 0.5% 1/10W	
R20	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R21	1-218-774-11	METAL CHIP 820K 0.50% 1/10W	
R22	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R23	1-216-678-11	METAL CHIP 13K 0.5% 1/10W	
R24	1-216-673-11	METAL CHIP 8.2K 0.5% 1/10W	
R25	1-216-675-11	METAL CHIP 10K 0.5% 1/10W	
R26	1-216-676-11	METAL CHIP 11K 0.5% 1/10W	
R27	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R28	1-216-697-11	METAL CHIP 82K 0.5% 1/10W	
R29	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R30	1-216-660-11	METAL CHIP 2.4K 0.5% 1/10W	
R31	1-216-680-11	METAL CHIP 16K 0.5% 1/10W	
R32	1-216-685-11	METAL CHIP 27K 0.5% 1/10W	
R33	1-216-080-00	METAL CHIP 20K 5% 1/10W	
R34	1-216-684-11	METAL CHIP 24K 0.5% 1/10W	
R35	1-216-084-00	METAL CHIP 30K 5% 1/10W	
R36	1-216-084-00	METAL CHIP 30K 5% 1/10W	
R37	1-216-074-00	METAL CHIP 11K 5% 1/10W	

MAIN DOLBY

Ref. No.	Part No.	Description	Remarks
R38	1-216-086-00	METAL GLAZE 36K 5%	1/10W
R39	1-216-066-00	METAL CHIP 5.1K 5%	1/10W
R40	1-216-084-00	METAL CHIP 30K 5%	1/10W
R41	1-216-078-00	METAL GLAZE 16K 5%	1/10W
R42	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
R43	1-216-081-00	METAL CHIP 22K 5%	1/10W
R44	1-216-689-11	METAL CHIP 39K 0.5%	1/10W
R45	1-216-689-11	METAL CHIP 39K 0.5%	1/10W
R53	1-216-058-00	METAL GLAZE 2.4K 5%	1/10W
R54	1-216-675-11	METAL CHIP 10K 0.5%	1/10W
R55	1-216-666-11	METAL CHIP 4.3K 0.5%	1/10W
R101	1-259-460-11	CARBON 22K 5%	1/6W
R102	1-247-887-00	CARBON 220K 5%	1/4W
R103	1-249-423-11	CARBON 3.3K 5%	1/4W F
R104	1-249-428-11	CARBON 8.2K 5%	1/4W F
R105	1-247-864-11	CARBON 24K 5%	1/4W
R106	1-249-414-11	CARBON 560 5%	1/4W F
R107	1-259-436-11	CARBON 2.2K 5%	1/6W
R108	1-259-467-11	CARBON 43K 5%	1/6W
R109	1-249-421-11	CARBON 2.2K 5%	1/4W F
R110	1-259-428-11	CARBON 1K 5%	1/6W
R111	1-249-429-11	CARBON 10K 5%	1/4W
R112	1-249-424-11	CARBON 3.9K 5%	1/4W F
R113	1-249-421-11	CARBON 2.2K 5%	1/4W F
R114	1-249-429-11	CARBON 10K 5%	1/4W
R115	1-249-421-11	CARBON 2.2K 5%	1/4W F
R116	1-249-428-11	CARBON 8.2K 5%	1/4W F
R117	1-259-464-11	CARBON 33K 5%	1/6W
R118	1-259-400-11	CARBON 68 5%	1/6W
R119	1-259-479-11	CARBON 130K 5%	1/6W
R120	1-259-446-11	CARBON 5.6K 5%	1/6W
R121	1-249-421-11	CARBON 2.2K 5%	1/4W F
R122	1-249-421-11	CARBON 2.2K 5%	1/4W F
R123	1-247-840-00	CARBON 2.4K 5%	1/4W
R124	1-247-887-00	CARBON 220K 5%	1/4W
R125	1-249-421-11	CARBON 2.2K 5%	1/4W F
R126	1-247-858-11	CARBON 13K 5%	1/4W
R127	1-249-435-11	CARBON 33K 5%	1/4W
△R128	1-219-153-11	FUSIBLE 10 5%	1/4W F
R129	1-247-883-00	CARBON 150K 5%	1/4W
R130	1-249-427-11	CARBON 6.8K 5%	1/4W F
R131	1-249-434-11	CARBON 27K 5%	1/4W
R132	1-247-874-11	CARBON 62K 5%	1/4W
R133	1-249-410-11	CARBON 270 5%	1/4W F
R134	1-249-405-11	CARBON 100 5%	1/4W F
R135	1-215-459-00	METAL 39K 1%	1/6W
R136	1-215-448-00	METAL 13K 1%	1/6W
R137	1-215-459-00	METAL 39K 1%	1/6W

Ref. No.	Part No.	Description	Remarks
R138	1-215-448-00	METAL 13K 1%	1/6W
R139	1-247-887-00	CARBON 220K 5%	1/4W
R140	1-247-887-00	CARBON 220K 5%	1/4W
R141	1-247-887-00	CARBON 220K 5%	1/4W
R142	1-249-437-11	CARBON 47K 5%	1/4W
R143	1-249-437-11	CARBON 47K 5%	1/4W
R144	1-249-437-11	CARBON 47K 5%	1/4W
R145	1-249-437-11	CARBON 47K 5%	1/4W
R146	1-247-848-11	CARBON 5.1K 5%	1/4W
R147	1-249-437-11	CARBON 47K 5%	1/4W
R148	1-249-434-11	CARBON 27K 5%	1/4W
R149	1-249-429-11	CARBON 10K 5%	1/4W
R201	1-259-460-11	CARBON 22K 5%	1/6W
R202	1-247-887-00	CARBON 220K 5%	1/4W
R203	1-249-423-11	CARBON 3.3K 5%	1/4W F
R204	1-249-428-11	CARBON 8.2K 5%	1/4W F
R205	1-247-864-11	CARBON 24K 5%	1/4W
R206	1-249-414-11	CARBON 560 5%	1/4W F
R207	1-259-436-11	CARBON 2.2K 5%	1/6W
R208	1-259-467-11	CARBON 43K 5%	1/6W
R209	1-249-421-11	CARBON 2.2K 5%	1/4W F
R210	1-259-428-11	CARBON 1K 5%	1/6W
R211	1-249-429-11	CARBON 10K 5%	1/4W
R212	1-249-424-11	CARBON 3.9K 5%	1/4W F
R213	1-249-421-11	CARBON 2.2K 5%	1/4W F
R214	1-249-429-11	CARBON 10K 5%	1/4W
R215	1-249-421-11	CARBON 2.2K 5%	1/4W F
R216	1-249-428-11	CARBON 8.2K 5%	1/4W F
R217	1-259-464-11	CARBON 33K 5%	1/6W
R218	1-259-400-11	CARBON 68 5%	1/6W
R219	1-259-479-11	CARBON 130K 5%	1/6W
R220	1-259-446-11	CARBON 5.6K 5%	1/6W
R221	1-249-421-11	CARBON 2.2K 5%	1/4W F
R222	1-249-421-11	CARBON 2.2K 5%	1/4W F
R223	1-247-840-00	CARBON 2.4K 5%	1/4W
R224	1-247-887-00	CARBON 220K 5%	1/4W
R225	1-249-421-11	CARBON 2.2K 5%	1/4W F
R226	1-247-858-11	CARBON 13K 5%	1/4W
R227	1-249-435-11	CARBON 33K 5%	1/4W
△R228	1-219-153-11	FUSIBLE 10 5%	1/4W F
R229	1-247-883-00	CARBON 150K 5%	1/4W
R230	1-249-427-11	CARBON 6.8K 5%	1/4W F
R231	1-249-434-11	CARBON 27K 5%	1/4W
R232	1-247-874-11	CARBON 62K 5%	1/4W
R233	1-249-410-11	CARBON 270 5%	1/4W F
R234	1-249-405-11	CARBON 100 5%	1/4W F
R235	1-215-459-00	METAL 39K 1%	1/6W
R236	1-215-448-00	METAL 13K 1%	1/6W
R237	1-215-459-00	METAL 39K 1%	1/6W
R238	1-215-448-00	METAL 13K 1%	1/6W

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R239	1-247-887-00	CARBON	220K	5%	1/4W	R343	1-249-420-11	CARBON	1. 8K	5%	1/4W F
R240	1-247-887-00	CARBON	220K	5%	1/4W	R345	1-249-441-11	CARBON	100K	5%	1/4W
R241	1-247-887-00	CARBON	220K	5%	1/4W	R346	1-249-441-11	CARBON	100K	5%	1/4W
R242	1-249-437-11	CARBON	47K	5%	1/4W	R347	1-249-429-11	CARBON	10K	5%	1/4W
R243	1-249-437-11	CARBON	47K	5%	1/4W	R348	1-249-428-11	CARBON	8. 2K	5%	1/4W F
R244	1-249-437-11	CARBON	47K	5%	1/4W	R349	1-249-441-11	CARBON	100K	5%	1/4W
R245	1-249-437-11	CARBON	47K	5%	1/4W	R350	1-249-441-11	CARBON	100K	5%	1/4W
R246	1-247-848-11	CARBON	5. 1K	5%	1/4W	R351	1-249-423-11	CARBON	3. 3K	5%	1/4W F
R247	1-249-437-11	CARBON	47K	5%	1/4W	R352	1-249-429-11	CARBON	10K	5%	1/4W
R248	1-249-434-11	CARBON	27K	5%	1/4W	R353	1-249-429-11	CARBON	10K	5%	1/4W
R249	1-249-429-11	CARBON	10K	5%	1/4W	R354	1-249-417-11	CARBON	1K	5%	1/4W F
R301	1-249-417-11	CARBON	1K	5%	1/4W F	R357	1-249-425-11	CARBON	4. 7K	5%	1/4W F
R302	1-249-437-11	CARBON	47K	5%	1/4W	R358	1-249-429-11	CARBON	10K	5%	1/4W
R303	1-249-403-11	CARBON	68	5%	1/4W F	R360	1-247-881-00	CARBON	120K	5%	1/4W
R304	1-249-429-11	CARBON	10K	5%	1/4W	R361	1-249-437-11	CARBON	47K	5%	1/4W
R305	1-215-455-00	METAL	27K	1%	1/6W	R362	1-249-437-11	CARBON	47K	5%	1/4W
R306	1-249-421-11	CARBON	2. 2K	5%	1/4W F	R363	1-249-437-11	CARBON	47K	5%	1/4W
R307	1-249-417-11	CARBON	1K	5%	1/4W F	R364	1-249-421-11	CARBON	2. 2K	5%	1/4W F
R308	1-249-441-11	CARBON	100K	5%	1/4W	R365	1-249-431-11	CARBON	15K	5%	1/4W
R309	1-215-454-00	METAL	24K	1%	1/6W	R366	1-249-429-11	CARBON	10K	5%	1/4W
R312	1-249-438-11	CARBON	56K	5%	1/4W	R367	1-249-437-11	CARBON	47K	5%	1/4W
R313	1-249-436-11	CARBON	39K	5%	1/4W	R368	1-249-421-11	CARBON	2. 2K	5%	1/4W F
R314	1-247-885-00	CARBON	180K	5%	1/4W	R369	1-249-423-11	CARBON	3. 3K	5%	1/4W F
R315	1-247-882-11	CARBON	130K	5%	1/4W	R370	1-249-425-11	CARBON	4. 7K	5%	1/4W F
R316	1-249-436-11	CARBON	39K	5%	1/4W	R371	1-249-433-11	CARBON	22K	5%	1/4W
R317	1-247-870-11	CARBON	43K	5%	1/4W	R372	1-249-436-11	CARBON	39K	5%	1/4W
R318	1-247-893-11	CARBON	390K	5%	1/4W	R373	1-249-441-11	CARBON	100K	5%	1/4W
R319	1-247-866-11	CARBON	30K	5%	1/4W	R374	1-249-441-11	CARBON	100K	5%	1/4W
R320	1-247-888-11	CARBON	240K	5%	1/4W	R375	1-247-840-00	CARBON	2. 4K	5%	1/4W
R321	1-247-890-11	CARBON	300K	5%	1/4W	R376	1-249-421-11	CARBON	2. 2K	5%	1/4W F
R322	1-247-872-11	CARBON	51K	5%	1/4W	R377	1-249-421-11	CARBON	2. 2K	5%	1/4W F
R323	1-249-438-11	CARBON	56K	5%	1/4W	R378	1-249-429-11	CARBON	10K	5%	1/4W
R324	1-247-885-00	CARBON	180K	5%	1/4W	R380	1-247-874-11	CARBON	62K	5%	1/4W
R325	1-247-870-11	CARBON	43K	5%	1/4W	R381	1-247-866-11	CARBON	30K	5%	1/4W
R326	1-247-880-11	CARBON	110K	5%	1/4W	R382	1-249-431-11	CARBON	15K	5%	1/4W
R327	1-247-876-11	CARBON	75K	5%	1/4W	R383	1-247-852-11	CARBON	7. 5K	5%	1/4W
R328	1-249-438-11	CARBON	56K	5%	1/4W	R384	1-249-434-11	CARBON	27K	5%	1/4W
R329	1-249-438-11	CARBON	56K	5%	1/4W	R385	1-249-434-11	CARBON	27K	5%	1/4W
R330	1-249-409-11	CARBON	220	5%	1/4W F	R386	1-249-434-11	CARBON	27K	5%	1/4W
R331	1-249-409-11	CARBON	220	5%	1/4W F	R387	1-249-434-11	CARBON	27K	5%	1/4W
R332	1-249-422-11	CARBON	2. 7K	5%	1/4W F	R388	1-249-429-11	CARBON	10K	5%	1/4W
R333	1-249-429-11	CARBON	10K	5%	1/4W	R389	1-249-429-11	CARBON	10K	5%	1/4W
R335	1-249-431-11	CARBON	15K	5%	1/4W	R390	1-249-429-11	CARBON	10K	5%	1/4W
R336	1-247-848-11	CARBON	5. 1K	5%	1/4W	R391	1-249-429-11	CARBON	10K	5%	1/4W
R337	1-247-870-11	CARBON	43K	5%	1/4W	R392	1-249-433-11	CARBON	22K	5%	1/4W
R338	1-249-441-11	CARBON	100K	5%	1/4W	R393	1-249-427-11	CARBON	6. 8K	5%	1/4W F
R339	1-249-437-11	CARBON	47K	5%	1/4W	R394	1-249-435-11	CARBON	33K	5%	1/4W
R340	1-249-437-11	CARBON	47K	5%	1/4W	R401	1-249-433-11	CARBON	22K	5%	1/4W
R341	1-249-389-11	CARBON	4. 7	5%	1/4W F	R402	1-249-421-11	CARBON	2. 2K	5%	1/4W F
R342	1-249-389-11	CARBON	4. 7	5%	1/4W F	R403	1-249-433-11	CARBON	22K	5%	1/4W

MAIN

DOLBY

Ref. No.	Part No.	Description	Remarks
R404	1-249-409-11	CARBON 220 5%	1/4W F
R405	1-249-441-11	CARBON 100K 5%	1/4W
R406	1-249-429-11	CARBON 10K 5%	1/4W
R407	1-249-411-11	CARBON 330 5%	1/4W
R408	1-249-437-11	CARBON 47K 5%	1/4W
R409	1-249-441-11	CARBON 100K 5%	1/4W
R501	1-249-433-11	CARBON 22K 5%	1/4W
R502	1-249-421-11	CARBON 2. 2K 5%	1/4W F
R503	1-249-433-11	CARBON 22K 5%	1/4W
R504	1-249-409-11	CARBON 220 5%	1/4W F
R505	1-249-441-11	CARBON 100K 5%	1/4W
R506	1-249-429-11	CARBON 10K 5%	1/4W
R507	1-249-411-11	CARBON 330 5%	1/4W
R508	1-249-437-11	CARBON 47K 5%	1/4W
R509	1-249-441-11	CARBON 100K 5%	1/4W
R601	1-249-409-11	CARBON 220 5%	1/4W F
R602	1-249-409-11	CARBON 220 5%	1/4W F
R701	1-249-433-11	CARBON 22K 5%	1/4W
R702	1-249-425-11	CARBON 4. 7K 5%	1/4W F
R703	1-249-420-11	CARBON 1. 8K 5%	1/4W F
R704	1-249-421-11	CARBON 2. 2K 5%	1/4W F
R705	1-249-427-11	CARBON 6. 8K 5%	1/4W F
R706	1-249-419-11	CARBON 1. 5K 5%	1/4W F
R707	1-259-452-11	CARBON 10K 5%	1/6W
R708	1-259-432-11	CARBON 1. 5K 5%	1/6W
R709	1-249-425-11	CARBON 4. 7K 5%	1/4W F
R710	1-249-409-11	CARBON 220 5%	1/4W F
R711	1-259-428-11	CARBON 1K 5%	1/6W
R712	1-259-448-11	CARBON 6. 8K 5%	1/6W
R713	1-259-448-11	CARBON 6. 8K 5%	1/6W
R714	1-249-417-11	CARBON 1K 5%	1/4W F
R715	1-249-425-11	CARBON 4. 7K 5%	1/4W F
R716	1-249-433-11	CARBON 22K 5%	1/4W
R717	1-249-425-11	CARBON 4. 7K 5%	1/4W F
R718	1-249-433-11	CARBON 22K 5%	1/4W
R719	1-249-436-11	CARBON 39K 5%	1/4W
R720	1-249-429-11	CARBON 10K 5%	1/4W
R721	1-249-437-11	CARBON 47K 5%	1/4W
R722	1-247-742-11	CARBON 180 5%	1/2W
△R723	1-219-135-11	FUSIBLE 0. 15 10%	1/4W
△R724	1-219-137-11	FUSIBLE 0. 33 10%	1/4W
△R801	1-212-954-11	FUSIBLE 6. 8 5%	1/2W F
△R802	1-212-952-00	FUSIBLE 5. 6 5%	1/2W F
R803	1-249-426-11	CARBON 5. 6K 5%	1/4W
R804	1-249-426-11	CARBON 5. 6K 5%	1/4W
R805	1-249-417-11	CARBON 1K 5%	1/4W F
R806	1-247-838-00	CARBON 2K 5%	1/4W
R807	1-249-426-11	CARBON 5. 6K 5%	1/4W
R808	1-249-428-11	CARBON 8. 2K 5%	1/4W F
R809	1-249-426-11	CARBON 5. 6K 5%	1/4W

Ref. No.	Part No.	Description	Remarks
R810	1-247-887-00	CARBON 220K 5%	1/4W
R811	1-247-887-00	CARBON 220K 5%	1/4W
R812	1-249-436-11	CARBON 39K 5%	1/4W
R813	1-247-891-00	CARBON 330K 5%	1/4W
R814	1-247-891-00	CARBON 330K 5%	1/4W
R815	1-249-436-11	CARBON 39K 5%	1/4W
R816	1-249-441-11	CARBON 100K 5%	1/4W (606ES)
R817	1-249-441-11	CARBON 100K 5%	1/4W
R820	1-249-417-11	CARBON 1K 5%	1/4W F
R821	1-249-413-11	CARBON 470 5%	1/4W F
R822	1-249-417-11	CARBON 1K 5%	1/4W F
R823	1-249-429-11	CARBON 10K 5%	1/4W
R824	1-249-429-11	CARBON 10K 5%	1/4W
R825	1-249-433-11	CARBON 22K 5%	1/4W
R826	1-249-429-11	CARBON 10K 5%	1/4W
R827	1-249-421-11	CARBON 2. 2K 5%	1/4W F
R828	1-249-410-11	CARBON 270 5%	1/4W F
R829	1-247-887-00	CARBON 220K 5%	1/4W
R831	1-249-413-11	CARBON 470 5%	1/4W F
R832	1-249-441-11	CARBON 100K 5%	1/4W
R833	1-249-441-11	CARBON 100K 5%	1/4W
R834	1-249-441-11	CARBON 100K 5%	1/4W
R835	1-249-441-11	CARBON 100K 5%	1/4W
R836	1-249-429-11	CARBON 10K 5%	1/4W
R837	1-249-429-11	CARBON 10K 5%	1/4W
R839	1-249-433-11	CARBON 22K 5%	1/4W
R848	1-249-429-11	CARBON 10K 5%	1/4W (606ES)
R849	1-249-429-11	CARBON 10K 5%	1/4W (606ES)
R850	1-249-429-11	CARBON 10K 5%	1/4W (606ES)
R851	1-249-429-11	CARBON 10K 5%	1/4W (606ES)
R852	1-249-405-11	CARBON 100 5%	1/4W F(606ES)
R853	1-249-393-11	CARBON 10 5%	1/4W F(606ES)
R854	1-249-436-11	CARBON 39K 5%	1/4W
△R859	1-212-942-00	FUSIBLE 2. 2 5%	1/2W F
R861	1-247-852-11	CARBON 7. 5K 5%	1/4W
R862	1-249-431-11	CARBON 15K 5%	1/4W
R863	1-247-866-11	CARBON 30K 5%	1/4W
R864	1-247-862-11	CARBON 20K 5%	1/4W
R865	1-247-852-11	CARBON 7. 5K 5%	1/4W
R866	1-249-431-11	CARBON 15K 5%	1/4W
R867	1-247-866-11	CARBON 30K 5%	1/4W
R869	1-249-429-11	CARBON 10K 5%	1/4W
R870	1-249-429-11	CARBON 10K 5%	1/4W
R871	1-249-429-11	CARBON 10K 5%	1/4W
R872	1-249-429-11	CARBON 10K 5%	1/4W
R873	1-249-441-11	CARBON 100K 5%	1/4W
R874	1-249-441-11	CARBON 100K 5%	1/4W
R875	1-249-441-11	CARBON 100K 5%	1/4W
R876	1-249-429-11	CARBON 10K 5%	1/4W
R877	1-249-429-11	CARBON 10K 5%	1/4W

Note:
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
R878	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R879	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R880	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R881	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R882	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R883	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R884	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R885	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R886	1-249-430-11	CARBON 12K 5% 1/4W	
R887	1-249-435-11	CARBON 33K 5% 1/4W	
R888	1-249-441-11	CARBON 100K 5% 1/4W	
R889	1-249-425-11	CARBON 4.7K 5% 1/4W F	
< VARIABLE RESISTOR >			
RV101	1-241-630-11	RES, ADJ, CARBON 10K	
RV102	1-241-630-11	RES, ADJ, CARBON 10K	
RV103	1-241-631-11	RES, ADJ, CARBON 22K	
RV104	1-238-019-11	RES, ADJ, CARBON 47K	
RV201	1-241-630-11	RES, ADJ, CARBON 10K	
RV202	1-241-630-11	RES, ADJ, CARBON 10K	
RV203	1-241-631-11	RES, ADJ, CARBON 22K	
RV204	1-238-019-11	RES, ADJ, CARBON 47K	
RV601	1-223-313-11	RES, VAR, CARBON 20K/20K(PHONE LEVEL)	
RV801	1-238-019-11	RES, ADJ, CARBON 47K	
< RELAY >			
RY301	1-515-683-11	RELAY	
< TRANSFORMER >			
T101	1-433-335-11	TRANSFORMER, BIAS OSCILLATION	
T201	1-433-335-11	TRANSFORMER, BIAS OSCILLATION	
T301	1-433-336-11	TRANSFORMER, BIAS OSCILLATION	
< VIBRATOR >			
X801	1-579-175-11	VIBRATOR, CERAMIC	

*	A-2006-958-A	PANEL BOARD, COMPLETE (INCLUDED ●A, B)	

*	3-386-245-01	HOLDER (FL)	
< CONNECTOR >			
* CN602	1-568-832-11	SOCKET, CONNECTOR 13P	
* CN603	1-568-839-11	SOCKET, CONNECTOR 23P	
* CN604	1-568-828-11	SOCKET, CONNECTOR 9P	
* CN605	1-568-832-11	SOCKET, CONNECTOR 13P	

Ref. No.	Part No.	Description	Remarks
< CONNECTOR >			
* CND309	1-564-341-51	PIN, CONNECTOR 7P	
< DIODE >			
D601	8-719-912-20	DIODE 1SS120	
D602	8-719-912-20	DIODE 1SS120	
D603	8-719-912-20	DIODE 1SS120	
D901	8-719-912-20	DIODE 1SS120	
D902	8-719-912-20	DIODE 1SS120	
D903	8-719-912-20	DIODE 1SS120	
D904	8-719-912-20	DIODE 1SS120	
D905	8-719-912-20	DIODE 1SS120	
< FILTER >			
FL901	1-517-155-11	INDICATOR TUBE, FLUORESCENT	
< IC >			
IC901	8-741-100-48	IC SBX1610-59	
< RESISTOR >			
R901	1-247-836-11	CARBON 1.6K 5% 1/4W	
R902	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R903	1-249-423-11	CARBON 3.3K 5% 1/4W F	
R904	1-247-836-11	CARBON 1.6K 5% 1/4W	
R905	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R906	1-249-423-11	CARBON 3.3K 5% 1/4W F	
R907	1-249-426-11	CARBON 5.6K 5% 1/4W	
R908	1-247-856-00	CARBON 11K 5% 1/4W	
R909	1-247-866-11	CARBON 30K 5% 1/4W	
R910	1-249-426-11	CARBON 5.6K 5% 1/4W	
R913	1-247-838-00	CARBON 2K 5% 1/4W	
R914	1-249-422-11	CARBON 2.7K 5% 1/4W F	
R916	1-249-441-11	CARBON 100K 5% 1/4W	
R917	1-249-441-11	CARBON 100K 5% 1/4W	
R918	1-249-431-11	CARBON 15K 5% 1/4W	
R919	1-247-864-11	CARBON 24K 5% 1/4W	
R921	1-247-840-00	CARBON 2.4K 5% 1/4W	
< VARIABLE RESISTOR >			
RV604	1-223-314-11	RES, VAR, CARBON 50K/50K(REC LEVEL)	
RV605	1-223-312-11	RES, VAR, CARBON 50K/50K(BALANCE)	
< SWITCH >			
S601	1-692-410-11	SWITCH, ROTARY(DOLBY NR)	
S602	1-571-305-11	SWITCH, PUSH (1 KEY)(MPX FILTER)	
S901	1-554-303-21	SWITCH, TACTILE(◀)	
S902	1-554-303-21	SWITCH, TACTILE(▶)	
S903	1-554-303-21	SWITCH, TACTILE(●REC)	

PANEL	REEL	TRANSLATION
-------	------	-------------

Ref. No.	Part No.	Description	Remarks
S904	1-554-303-21	SWITCH, TACTILE(■)	
S905	1-554-303-21	SWITCH, TACTILE(►)	
S906	1-554-303-21	SWITCH, TACTILE(◄)	
S907	1-554-303-21	SWITCH, TACTILE(■PAUSE)	
S908	1-554-303-21	SWITCH, TACTILE(●REC MUTE)	
S909	1-554-303-21	SWITCH, TACTILE(RESET)	
S910	1-554-303-21	SWITCH, TACTILE(MEMORY)	
S911	1-554-303-21	SWITCH, TACTILE(▲OPEN/CLOSE)	
S912	1-554-303-21	SWITCH, TACTILE(AUTO CAL)	
S915	1-692-409-11	SWITCH, PUSH (1 KEY)(POWER)	
S916	1-571-520-11	SWITCH, SLIDE(TIMER)	
S917	1-571-520-11	SWITCH, SLIDE(DIRECTION)	

*	1-632-741-11	REEL MOTOR BOARD	

		< CAPACITOR >	
C1051	1-124-907-11	ELECT 10uF 20% 50V	
C1052	1-124-907-11	ELECT 10uF 20% 50V	
C1053	1-164-159-11	CERAMIC 0.1uF 50V	
		< CONNECTOR >	
* CN1051	1-564-499-11	PIN, CONNECTOR 6P	
* CN1052	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
* CN1053	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
		< RESISTOR >	
R1051	1-249-414-11	CARBON 560 5% 1/4W F	

*	1-634-323-11	TRANSLATION BOARD	

		< CONNECTOR >	
* CN1091	1-564-709-11	PIN, CONNECTOR (SMALL TYPE) 7P	
* CN1092	1-564-509-11	PLUG, CONNECTOR 6P	
* CN1093	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
* CN1094	1-564-506-11	PLUG, CONNECTOR 3P	

		MISCELLANEOUS	

16	1-751-140-11	WIRE (FLAT TYPE) (13 CORE)	
17	1-751-141-11	WIRE (FLAT TYPE) (23 CORE)	
18	1-575-782-11	WIRE, FLAT TYPE (9 CORE)	
△57	1-558-945-21	CORD, POWER (POLAR. SPT-1) (606ES)	
△57	1-575-651-21	CORD, POWER (611S)	

Ref. No.	Part No.	Description	Remarks
D1051	8-719-980-85	DIODE SLF325C	
IC1001	8-749-920-97	IC GP2S22B	
IC1002	8-749-920-97	IC GP2S22B	
M1051	X-3356-638-1	MOTOR (REEL R) ASSY	
M1052	X-3356-604-1	MOTOR (ASSIST) ASSY	
M1053	X-3356-646-1	MOTOR (CAPSTAN V1) ASSY	
△PT901	1-423-475-11	TRANSFORMER, POWER (606ES)	
△PT901	1-423-476-11	TRANSFORMER, POWER (611S)	
HRPE1001	A-2003-722-A	DECK ASSY, HEAD	
S1001	1-466-525-11	ENCODER, ROTARY	

ACCESSORIES & PACKING MATERIALS

1-558-271-11 CORD, CONNECTION

1-558-271-11 CORD, CONNECTION

1-696-170-11 CORD, CONNECTION

* 3-350-830-01 CUSHION (606ES:US, 611S)

* 3-388-322-21 INDIVIDUAL CARTON (611S)

3-756-291-11 MANUAL, INSTRUCTION (ENGLISH/FRENCH/
SPANISH/PORTUGUESE) (611S)

3-756-291-21 MANUAL, INSTRUCTION (ENGLISH) (606ES)

3-756-291-31 MANUAL, INSTRUCTION (FRENCH) (606ES:CND)

3-756-291-41 MANUAL, INSTRUCTION (GERMAN/DUTCH/
SWEDISH/ITALIAN) (611S)

HARDWARE LIST

#1	7-682-548-09	SCREW +BVTT 3X8 (S)
#2	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S
#3	7-685-871-01	SCREW +BVTT 3X6 (S)
#4	7-682-547-09	SCREW +BVTT 3X6 (S)
#5	7-621-849-00	SCREW (BV/RING)
#7	7-621-255-35	SCREW +BVTT 2X5 (S)
#8	7-621-770-67	SCREW +BVTT 2.6X6 (S)
#10	7-685-131-19	SCREW +BTP 2.6X4 TYPE2 N-S
#11	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S
#12	7-621-255-20	SCREW +BVTT 2X4 (S)

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TC-RX606ES / RX611S

SONY SERVICE MANUAL

US Model
Canadian Model
TC-RX606ES

AEP Model
RX611S

CORRECTION-1

Correct your service manual as shown below.

 : indicates corrected portion.

Page	INCORRECT	CORRECT
9	Playback Level Adjustment	Playback Level Adjustment
	:	:
	:	:
	:	:
	:	:
	Adjustment limits :	Adjustment limits :
	LINE OUT level : 0.301~0.338V(−10.5dB~−9.5dB)	LINE OUT level : 0.302 ~ 0.338V(− 7.2 ~ − 8.2dB) 