

# MODELS E-81 & E-86

## Eight-Tube, Three-Band, A-C Superheterodyne Receivers

### Electrical Specifications

#### FREQUENCY RANGES

"Standard Broadcast"..... 530- 1,800 kc

"Medium Wave"..... 1,800- 6,300 kc

"Short Wave"..... 6,300-22,000 kc

#### Intermediate Frequency

#### RADIOTRON COMPLEMENT

(1) Type -6L7..... First Detector

(2) Type -6J7..... Oscillator

(3) Type -6K7..... Intermediate Amplifier

(4) Type -6H6..... Second Detector and A.V.C.

Pilot Lamps (3).....

#### POWER-SUPPLY RATINGS

Rating A.....

Rating B.....

#### POWER OUTPUT

Undistorted..... 2 watts

Maximum..... 4.5 watts

#### ALIGNMENT FREQUENCIES

"Standard Broadcast".....

"Medium Wave".....

"Short Wave".....

Intermediate Frequency.....

(5) Type -6F5.....

(6) Type -6F6.....

(7) Type -5Z4.....

(8) Type -6E5.....

Audio Voltage Amplifier

Power Output

Full-Wave Rectifier

Tuning Tube

Mazda No. 46, 6.3 volts, 0.25 amperes

#### LOUDSPEAKER

Type.....

Impedance (V.C.).....

Electrodynamic

2.2 ohms at 400 cycles

### Mechanical Specifications

#### CABINET DIMENSIONS

Height.....

Width.....

Depth.....

#### WEIGHTS

Net.....

Shipping.....

Chassis Base Dimensions.....

Over-All Height of Chassis.....

Operating Controls.....

Tuning Drive Ratios.....

E-81..... E-86.....

21 $\frac{3}{4}$  inches..... 40 inches

15 $\frac{7}{8}$  inches..... 25 $\frac{1}{2}$  inches

8 $\frac{3}{4}$  inches..... 12 $\frac{1}{8}$  inches

28 $\frac{1}{2}$  pounds..... 55 $\frac{3}{4}$  pounds

35 pounds..... 70 pounds

12 inches x 7 inches x 2 $\frac{1}{2}$  inches

8 $\frac{3}{8}$  inches

(1) Volume, (2) Tuning, (3) Range Selector, (4) Power Switch-Tone

10 to 1 and 50 to 1

### General Description

These receivers represent the result of thorough development, design, and substantial manufacture. Noteworthy technical improvements have been applied in achieving marked advantages of operation and efficiency of performance.

Model E-81 is an eight-tube, table-type, superheterodyne receiver with an eight-inch electrodynamic loudspeaker. Model E-86 differs from the Model E-81 in that it is of the console type and has a twelve-inch electrodynamic loudspeaker.

Design features incorporated in these receivers include: built-in doublet antenna coupler; improved

plunger-type air-dielectric adjustable trimming capacitors in the antenna and oscillator coil circuits; high-efficiency first detector (converter) with separate oscillator; magnetite core adjusted i-f transformers, low-frequency oscillator tracking, and wave-trap; aural compensated volume control; continuously variable tone control with music-voice switch; automatic volume control; phonograph terminal board; band selective indication of dial scales; and a dust-proof electrodynamic loudspeaker.

The tuning range is continuous through the "Standard broadcast," "Medium wave," and "Short wave" bands. This extensive range includes the important short-wave broadcast bands at 49, 31, 19, 16, and 13 meters in addition to channels assigned for

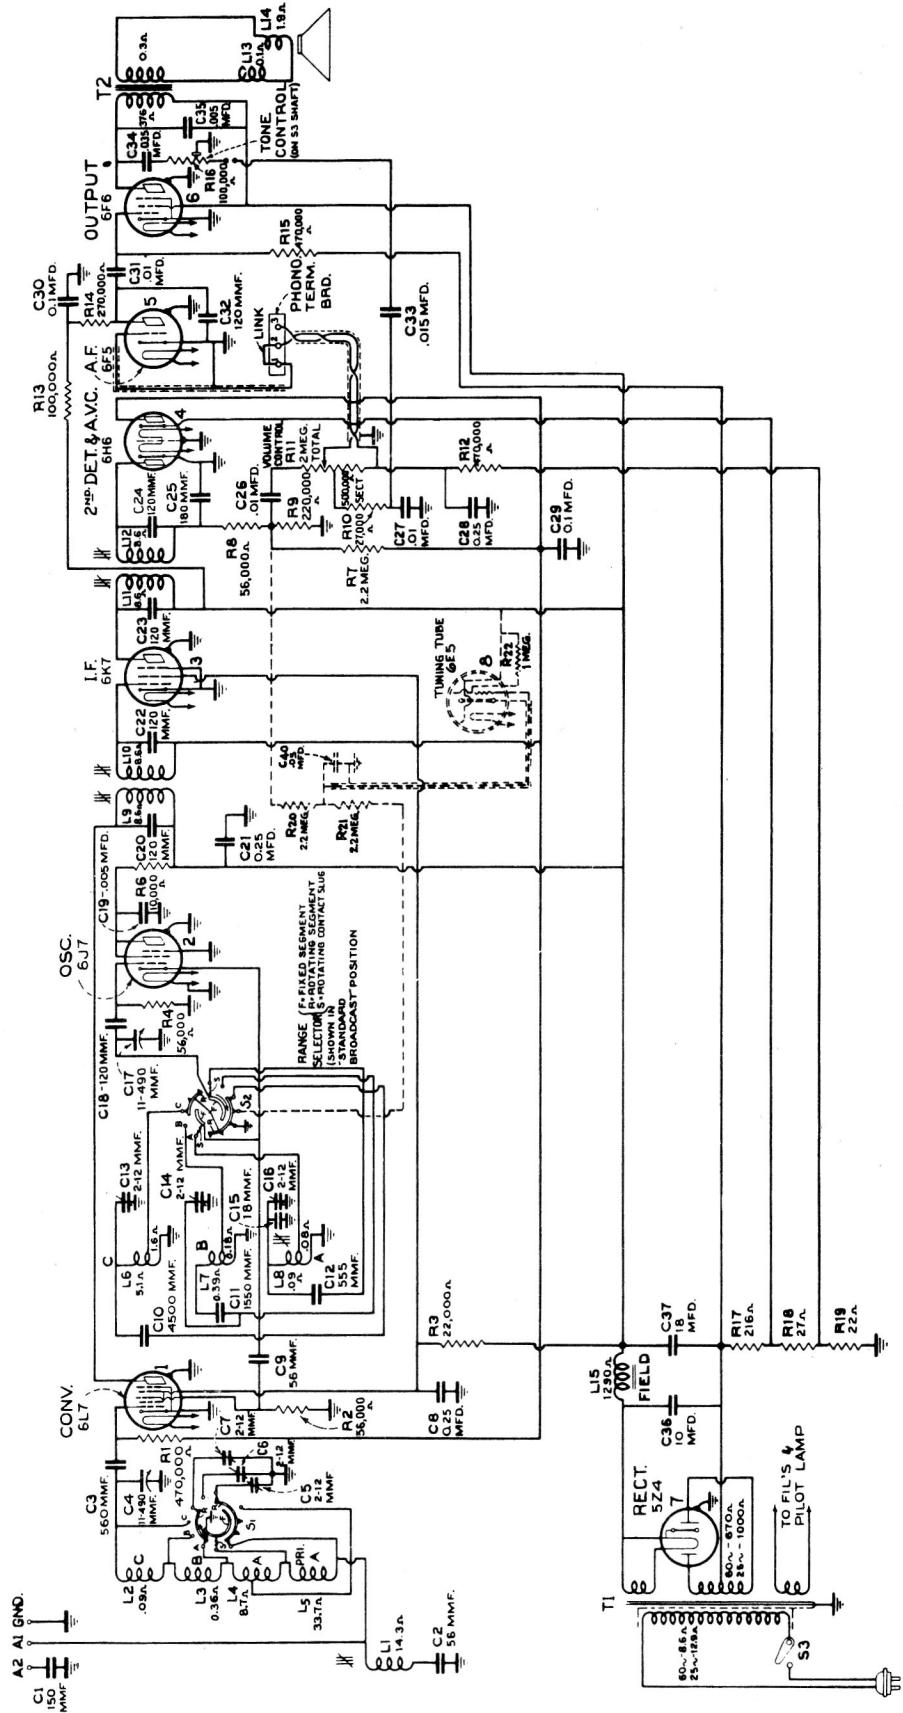


Figure 1—Schematic Circuit Diagram

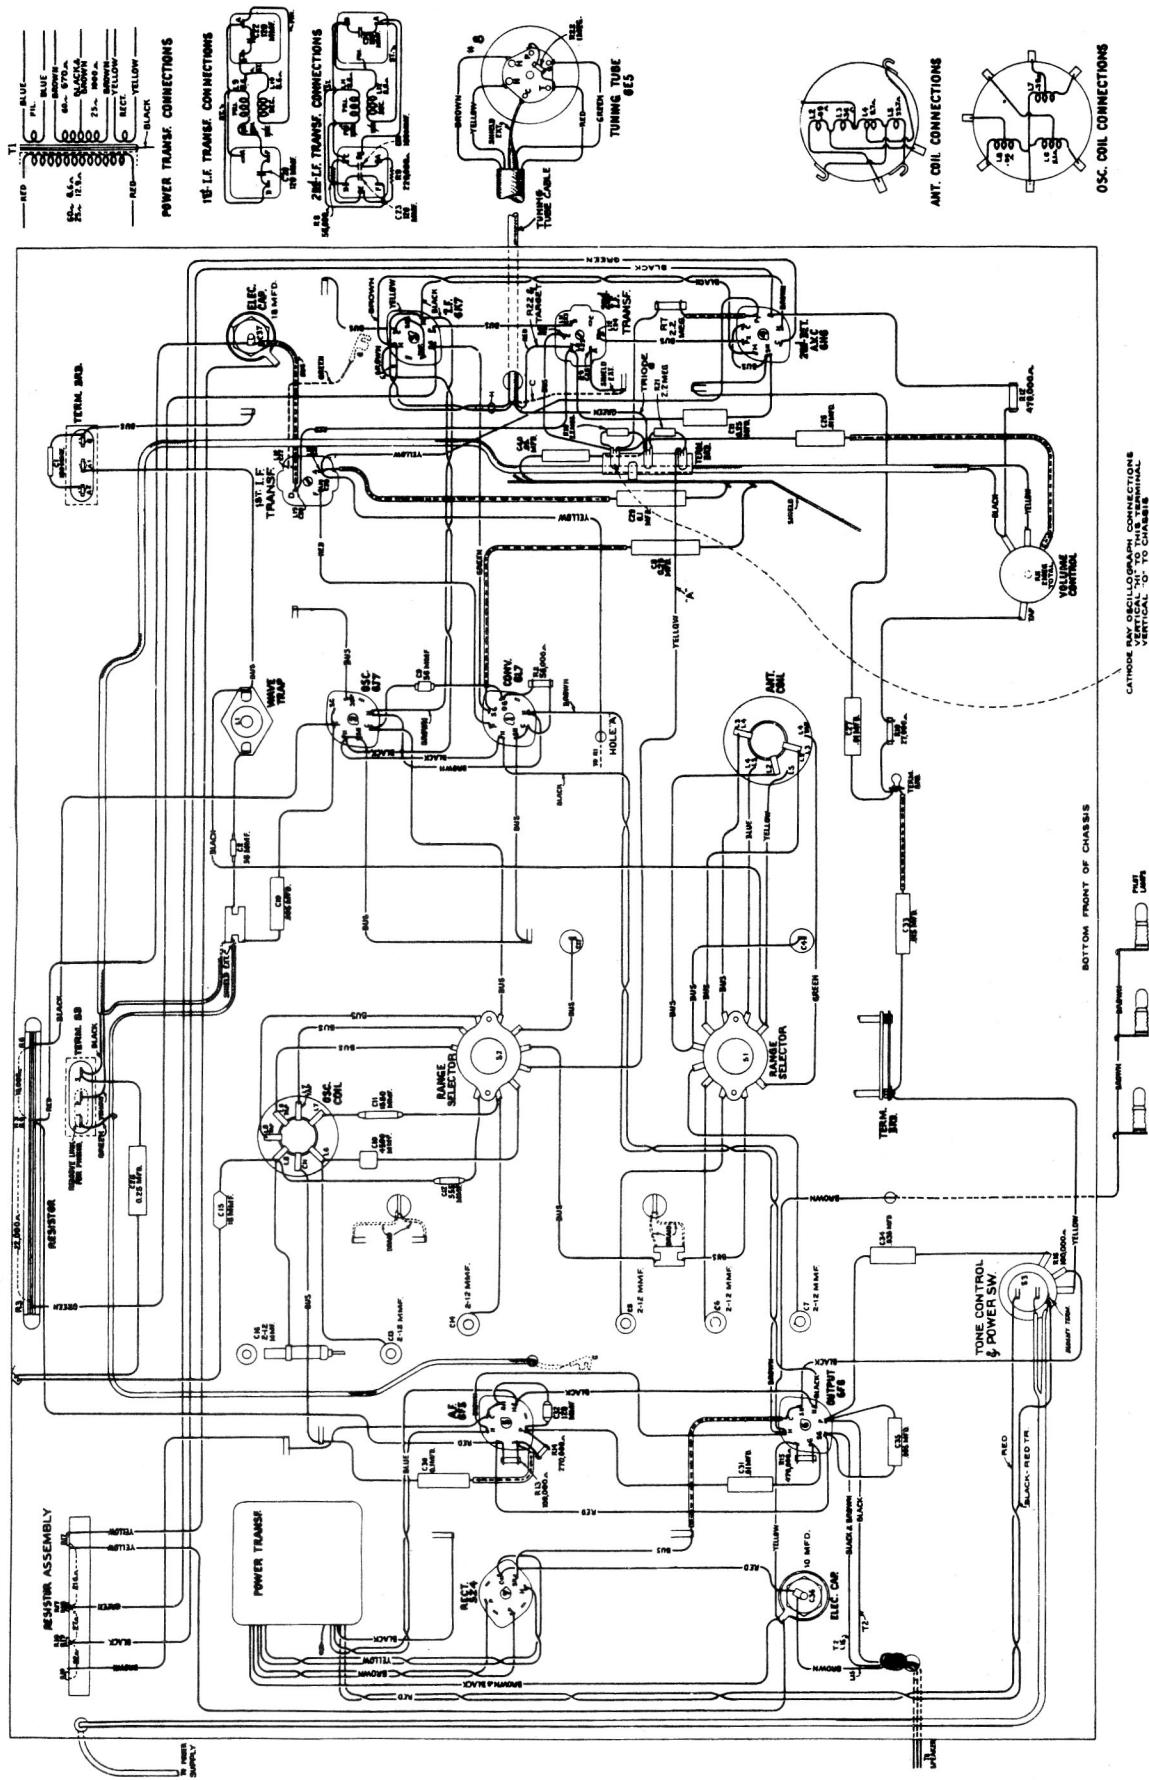


Figure 2—Chassis Wiring Diagram


police, amateur, and aviation communication. Trimming adjustments are located at accessible points. Their number is reduced to the least that is consistent with efficient operation. A double tuning knob

arrangement permits the choice of either a ten-to-one or a fifty-to-one dial ratio, the latter permits ease of tuning, especially in the "Medium wave" and "Short wave" bands.

## Circuit Arrangement

The conventional type of superheterodyne circuit is used. It consists of a first-detector (converter) stage, separate oscillator stage, a single i-f stage, a diode-detector—automatic-volume-control stage, an audio voltage-amplifier stage, a pentode power-output stage, a full-wave rectifier stage and Cathode Ray Tuner.

A single-wire antenna, or a doublet antenna, when connected to the proper input terminals of the receiver, is coupled to control grid No. 1 of the Type-6L7 through a tuned r-f transformer. This transformer is tapped so that the range selector increases the range of tuning by decreasing the amount of inductance. A unique method of switching causes L5 to become the primary with L4, L3, and L2 as secondary, L4 to become the primary with L3 and L2 as secondary, and L3 to become the primary with L2 as secondary, for range selector positions "Standard broadcast," "Medium wave," and "Short wave" respectively. Separate windings are employed

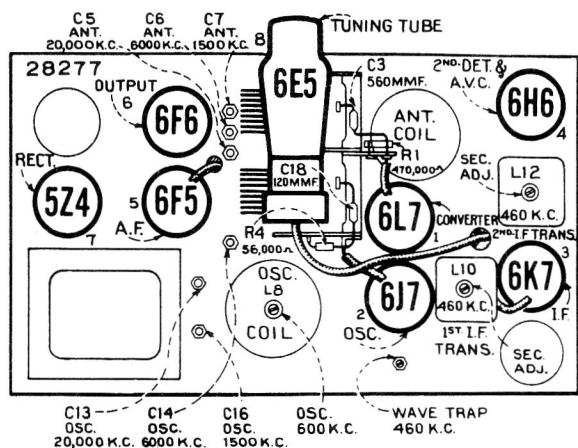

arate, distinct, and similar waves appear on the screen. If only one wave appears, increase the "Freq." control on the oscillograph to obtain two waves. These waves will be identical in shape, totally disconnected, and appear in reversed positions. They will have a common base line, which is discontinuous. Adjust the "Freq." and "Sync." controls of the oscillograph to make them remain motionless on the screen. Continue increasing the test oscillator frequency until these forward and reverse curves move together and overlap, with their highest points exactly coincident. This condition will be obtained at a test oscillator setting of **approximately 575 kc**.

- (f) With the images established as in (e), re-adjust the two magnetite core screws on the second i-f transformer so that they cause the curves on the oscillograph screen to become exactly coincident throughout their lengths and have maximum amplitude.
- (g) Without altering the adjustments of the apparatus, shift the "Ant." output of the test oscillator to the input of the i-f system, i.e., to the Type 6L7 first-detector grid cap through a .001-mfd. capacitor (with grid lead in place). Regulate the test oscillator output so that the amplitude of the oscillographic image is approximately the same as used above for adjustment (f).
- (h) The two first i-f transformer magnetite core screws (one on top and one on bottom) should then be adjusted so that they cause the forward and reverse curves to become coincident throughout their lengths and have maximum amplitude. The composite wave obtained in this manner represents the resonance characteristic of the total i-f system. Lack of symmetry or irregularity of the resultant image will indicate the presence of a defect in the i-f system.

#### R-F Adjustments

Calibrate the pointer of the tuning dial by adjusting it to the extreme low-frequency end of dial scale (beyond 55 on dial) with the plates of the gang tuning condenser in full mesh. Alignment must be made in the sequence of "Short wave" band, "Medium wave" band, "Wave-trap," and "Standard broadcast" band.

#### "Short Wave" Band

- (i) Connect the "Ant." output of the test oscillator to the antenna terminal "A1" through a 300-ohm resistor. Remove the plug of the frequency modulator cable from the test oscillator. Turn test oscillator modulation switch to "On." Shift the oscillograph "Timing" switch to "Int."
- (j) Set receiver range selector to its "Short wave" position and dial pointer to 20,000 kc. Adjust the test oscillator to 20,000 kc. Set oscillator air trimmer C13 to minimum capacity (plunger full out), and antenna air trimmer C5 to maximum capacity (plunger full in). Slowly push in oscillator trimmer C13 until maximum (peak) amplitude of output is reached. Two peaks may be found. Adjust C13 to the peak with minimum

capacity (plunger near out) for maximum indication. Tighten lock nut. Slowly pull out plunger of antenna air trimmer C5 until maximum (peak) amplitude of output is reached while slightly rocking the gang tuning condenser back and forth through the signal. Two peaks may be found with this circuit. The peak with maximum capacity (plunger near in) should be used. Tighten lock nut.

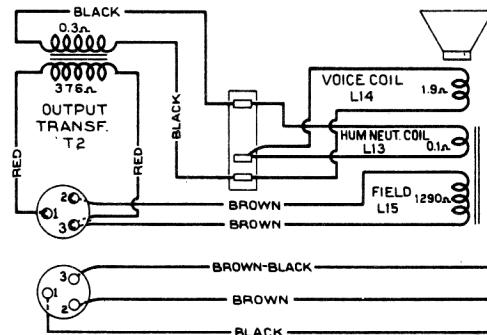


Figure 5—Loudspeaker Wiring

#### "Medium Wave" Band

- (k) Place receiver range selector to its "Medium wave" position with the receiver dial pointer set to 6,000 kc. Tune the test oscillator to 6,000 kc. Carefully adjust the oscillator and antenna air trimmers C14 and C6 respectively, so that each brings about maximum (peak) amplitude of output as shown by the wave on the oscillograph. When adjusting the oscillator trimmer C14, two peaks may be found. The one of minimum capacitance (plunger near out) should be used. Tighten lock nuts.

#### "Wave-Trap" Adjustment

- (l) Connect the output of the test oscillator to the antenna terminal "A1" through a 200 mmfd. (important) capacitor. Place receiver range selector in "Standard broadcast" position. Set the receiver dial to a position of no extraneous signals near 600 kc. Tune the test oscillator to 460 kc. Adjust the wave-trap magnetite core screw to the point which causes minimum amplitude of output (maximum suppression of signal) as shown by the wave on the oscillograph. An increase of the test-oscillator output may be necessary before this point of minimum amplitude, obtained by correct adjustment of wave-trap screw, becomes apparent on oscillograph screen.

#### "Standard Broadcast" Band

- (m) Reduce output of test oscillator to minimum. Set receiver dial pointer to 600 kc. Tune the test oscillator to 600 kc and increase its output until a deflection is noticeable on the oscillograph screen.
- (n) Adjust oscillator magnetite core screw (top of oscillator coil) so that maximum (peak) amplitude of output is shown on the oscillograph screen.

- (o) Set receiver dial pointer to 1,500 kc. Set the test oscillator to 1,500 kc (1,500-3,100- $\text{kc}$  range) and increase its output to produce a registration on the oscilloscope. Carefully adjust the oscillator and antenna air trimmers C16 and C7 respectively so that each brings about maximum (peak) amplitude of output as shown by the waves on the oscilloscope. Shift the oscilloscope "Timing" switch to "Ext." Place the frequency modulator sweep-range switch to "Lo" position and insert plug of the frequency modulator cable in test oscillator jack. Turn test oscillator modulation switch to "Off." Retune the test oscillator (increase frequency) until the forward and reverse waves show on the oscilloscope screen and become coincident at their highest points. This will occur at a test oscillator setting of approximately 1,680 kc. Adjust the trimmers C16 and C7 again, setting each to the point which produces the best coincidence and maximum amplitude of the images.
- (p) Remove the plug of the frequency modulator cable from test oscillator jack. Turn test oscillator modulation switch to "On." Set oscilloscope "Timing" switch to "Int." Tune test oscillator to 200 kc. (200-400- $\text{kc}$  range). Tune receiver for maximum response to this signal at a dial reading of approximately 600 kc. Third harmonic

of 200 kc is used for this adjustment. Shift oscilloscope "Timing" switch to "Ext." Insert the plug of the frequency modulator cable in test oscillator jack. Turn test oscillator modulation switch to "Off." Retune the test oscillator (increase frequency) until the forward and reverse waves show on the oscilloscope screen. This will occur at a test oscillator setting of approximately 230 kc. Disregarding the fact that the two images may come together, adjust the oscillator magnetite core screw (top of oscillator coil) to produce maximum amplitude of images. Shift oscilloscope "Timing" switch to "Int." Remove the plug of the frequency modulator cable from the test oscillator. Turn test oscillator modulation switch to "On." Repeat adjustment (o), and then lock C16 and C7.

### Output Indicator Alignment

Attach the output indicator across the loudspeaker voice-coil circuit. Advance the receiver volume control to its maximum position, letting it remain in such position for all adjustments. For each adjusting operation, regulate the test oscillator output so that the signal level is as low as possible and still be observable at the receiver output. Use of such small signal will obviate broadness of tuning which would otherwise result from a.v.c. action on a stronger one.

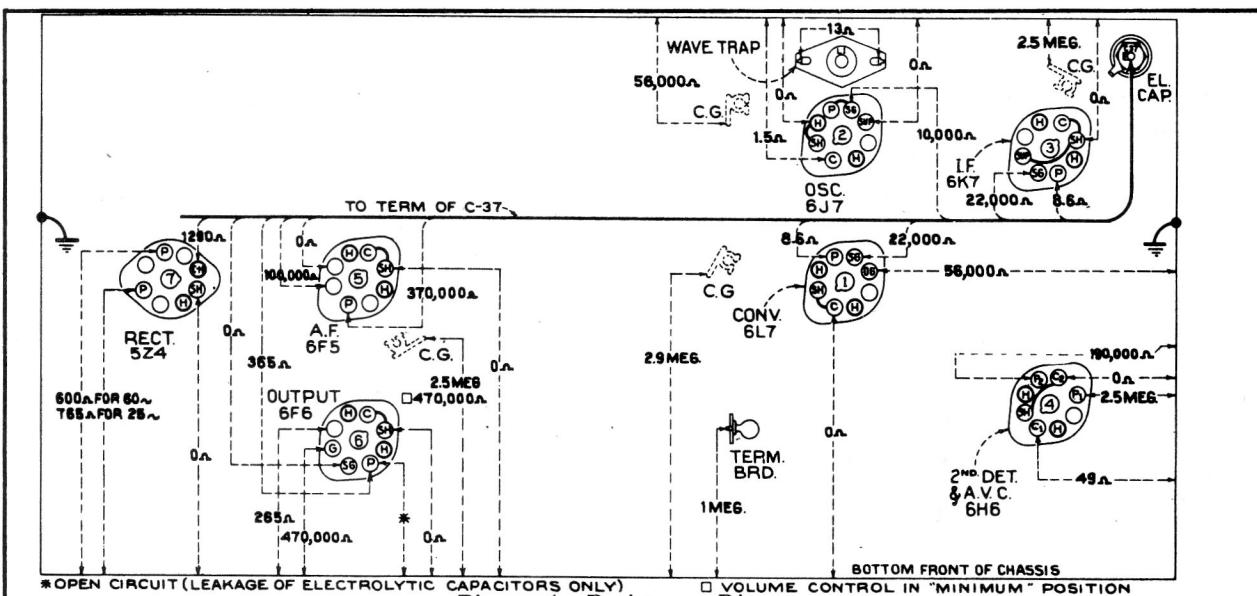


Figure 6—Resistance Diagram  
Power supply disconnected—Radiotrons in sockets—Tuning condenser in full-mesh—  
Range selector in "Standard broadcast" position—Volume control maximum

### Resistance Measurements

The resistance values shown between Radiotron socket contacts, grid caps, resistors, and terminals to receiver chassis ground or other pertinent point on figure 6, permit a rapid continuity check of the circuits. The use of this diagram in conjunction with the Schematic Circuit Diagram, figure 1, and Chassis Wiring Diagram, figure 2, will permit the location of certain troubles which might otherwise be difficult to ascertain. Each value as specified should hold within  $\pm 20\%$ . Variations in excess of this limit will usually be indicative of trouble in circuit under test. Resistance values were measured with the

Radiotrons in sockets, range selector in "Standard broadcast" position, tuning condenser in full mesh, and volume control set at maximum unless otherwise noted. In all cases of measuring the resistance between points of the circuit and ground, it will be necessary to connect the negative terminal of the resistance meter to chassis-ground. If the polarity of the resistance meter is not known, it may be readily ascertained by connecting a d-c voltmeter of indicated polarity across the terminals of the device.

## I-F Adjustments

- (a) Connect the "Ant." output of the test oscillator to the grid cap of the Type 6L7 (with grid lead in place) through a .001-mfd. capacitor, with "Gnd." to receiver chassis. Tune the test oscillator to 460 kc, place its modulation switch to "On" and its output switch to "Hi."
  - (b) Adjust the two magnetite core screws of the second i-f transformer (one on top and one on bottom), to produce maximum (peak) output.
  - (c) The two first i-f transformer magnetite core screws (one on top and one on bottom) should be adjusted to produce maximum (peak) output. It is advisable to repeat the adjustment of all i-f magnetite core screws to assure that the interaction between them has not disturbed the original adjustments.

## R-F Adjustments

Calibrate the pointer of the tuning dial by adjusting it to the extreme low-frequency end of dial scale (beyond 55 on dial) with the plates of the gang tuning condenser in full mesh. Alignment must be made in sequence of "Short wave" band, "Medium wave" band, "Wave-trap", and "Standard broadcast" band.

### **"Short Wave" Band**

- (d) Connect the "Ant." output of the test oscillator to the antenna terminal "A1" through a 300-ohm resistor, leaving the "Gnd." of the oscillator connected to the receiver chassis.

(e) Place range selector to its "Short wave" position. Set receiver dial pointer to 20,000 kc. Adjust test oscillator to 20,000 kc. Set oscillator air trimmer C13 to minimum capacity (plunger full out), and antenna air trimmer C5 to maximum capacity (plunger full in). Slowly push in oscillator trimmer C13 until maximum (peak) output is reached. Two peaks may be found. Adjust C13 to the peak with minimum capacity (plunger near out) for maximum indication. Tighten lock nut. Slowly pull out plunger of antenna air trimmer C5 until maximum (peak) output is reached while slightly rocking the gang tuning condenser back and forth through the signal. Two peaks may be found with this circuit. The peak with maximum capacity (plunger near in) should be used. Tighten lock nut.

### **"Medium Wave" Band**

- (f) Place the receiver range selector to its "Medium

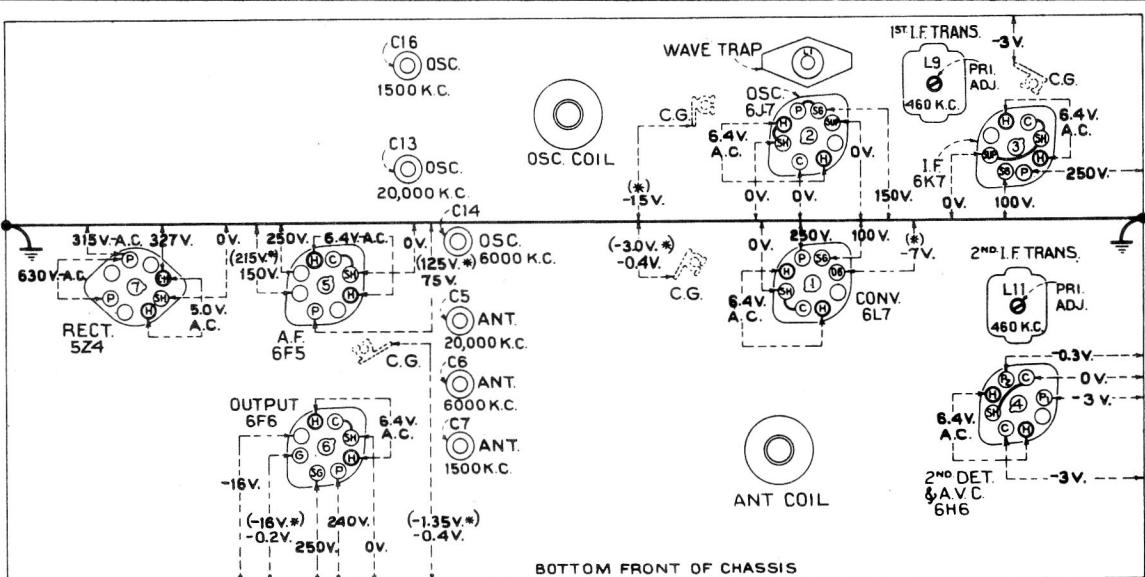


Figure 7—Radiotron Socket Voltages, Coil, and Trimmer Locations

Measured at 115 volts, 60-cycle supply—Tuned to approximately 1,000 kc—No signal being received—  
Volume control minimum

## Radiotron Socket Voltages

**Note:** Two voltage values are shown for some readings. The higher value shown in parenthesis with asterisk (\*) indicates operating conditions without voltmeter loading. The lower value is the actual measured voltage and differs from the higher value because of the additional loading of the voltmeter through the high series circuit resistance.

The voltage values indicated from the Radiotron socket contacts, grid caps, resistors, and terminals to receiver chassis ground on figure 7 will assist in locating cause for

faulty operation. Each value as specified should hold within  $\pm 20\%$  when the receiver is normally operative at its rated line voltage. Variations in excess of this limit will usually be indicative of trouble in the basic circuits. These voltages were measured with receiver tuned to approximately 1,000 kc, no signal being received and volume control set at maximum. To duplicate the conditions under which the voltages were measured requires a 1,000-ohm-per-volt d-c meter, having ranges of 10, 50, 250, 500, and 1,000 volts. Use the nearest range above the voltage to be measured. A-c voltages were measured with a corresponding a-c meter.

wave" position, with the receiver dial pointer set to 6,000 kc. Tune test oscillator to 6,000 kc. Carefully adjust the oscillator and antenna air trimmers C14 and C6 respectively, so that each brings about maximum (peak) output. When adjusting the oscillator trimmer C14, two peaks may be found. The one of minimum capacitance (plunger near out) should be used.

#### "Wave-Trap" Adjustment

- (g) Connect the "Ant." output of the test oscillator to the antenna terminal "A1" through a 200 mmfd. (important) capacitor. Place the range selector to its "Standard broadcast" position and set the receiver dial pointer to a position of no extraneous signals near 600 kc. Tune the test oscillator to 460 kc. Adjust the wave-trap magnetite core screw to the point which causes minimum output (maximum suppression of signal). An increase of the test-oscillator output may be necessary before the point of minimum output, obtained by adjustment of wave-trap screw, becomes apparent on the output indicator.

#### "Standard Broadcast" Band

- (h) Reduce output of test oscillator to a minimum. Tune the test oscillator to 600 kc and set receiver dial pointer to 600 kc. Adjust output of test oscillator until a slight indication of output is visible.
- (i) Adjust the oscillator magnetite core screw (top of oscillator coil) so that maximum (peak) output results.
- (j) Set receiver dial pointer to 1,500 kc. Tune the test oscillator to 1,500 kc. Carefully adjust the oscillator and antenna air trimmers C16 and C7 respectively so that each brings about maximum (peak) output.
- (k) Tune the test oscillator to 600 kc. Tune the receiver to pick up this signal disregarding the dial reading at which it is best received. Adjust oscillator magnetite core screw (top of oscillator coil) for maximum (peak) output while rocking

gang tuning condenser. After completing this adjustment, the trimmers C16 and C7 should be re-adjusted as in (j) to correct for any change in the oscillator high-frequency tuning which has been caused by the preceding adjustment.

#### Antenna and Ground Terminals

These receivers are equipped with an antenna-ground terminal board having three terminals. These terminals are marked "A2," "A1," and "G", the latter being the ground terminal and should always be connected to a good external ground.

The transmission line leads of antenna systems, having no receiver coupling units, should be connected to terminals "A2" and "A1". When receiver coupling units are supplied with antenna kits, they should be connected to terminals "A1" and "G". Connect a single wire antenna to terminal "A1".

#### Phonograph Terminal Board

A terminal board is provided for connecting a phonograph into the audio amplifying circuit. Typical methods of connecting a low-impedance pickup, or Models R-93 and R93X Record Players are shown on the Schematic Diagram (figure 8).

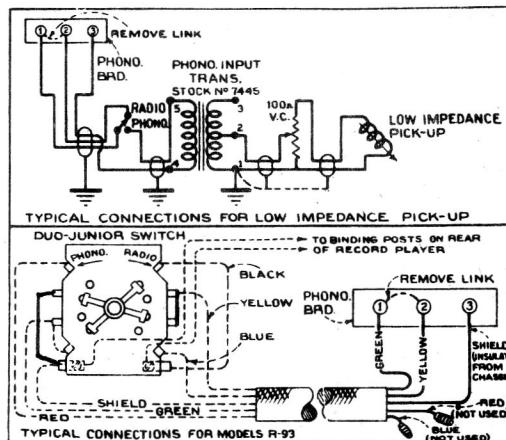


Figure 8—Pick-up Wiring

## REPLACEMENT PARTS

Stock No.	Description	Stock No.	Description
<b>RECEIVER ASSEMBLIES</b>			
12706	Arm-Hub and arm complete for operating shutter (located on range switch shaft).....	12511	Cap-Grid contact cap-Package of 5
12716	Board-Antenna and ground terminal board.....	12714	Capacitor-Adjustable capacitor (C5,C6,C7,C13,C14,C16).....
12717	Board-Phonograph terminal board..	12722	Capacitor-18 Mmfd.(C15).....
5237	Bushing-Variable capacitor mounting bushing assembly-Package of 3	12723	Capacitor-56 Mmfd.(C9).....
12730	Cable-Shielded cable approximately 14 $\frac{1}{2}$ in.long,-volume control to phono terminal board.....	12726	Capacitor-56 Mmfd.(C2).....
11625	Cable-Tuning tube cable and socket complete.....	12724	Capacitor-120 Mmfd.(C18,C32).....
		12404	Capacitor-120 Mmfd.(C20,C22,C23,C24).....
		12725	Capacitor-150 Mmfd.(C1).....
		12406	Capacitor-180 Mmfd.(C25).....
		12727	Capacitor-555 Mmfd.(C12).....
		12537	Capacitor-560 Mmfd.(C3).....
		12729	Capacitor-1,550 Mmfd.(C11).....
		12728	Capacitor-4,500 Mmfd.(C10).....
		4868	Capacitor-.005 Mfd.(C19,C35).....

# REPLACEMENT PARTS—E-81 & E-86

Stock No.	Description	Stock No.	Description
4858	Capacitor-.01 Mfd.(C26,C27,C31)...	11195	Socket-5-contact 5Z4 radiotron socket.....
4792	Capacitor-.015 Mfd.(C33).....	11198	Socket-7-contact 6J7,6K7 or 6L7 radiotron socket.....
12670	Capacitor-.035 Mfd.(C34).....	11196	Socket-8-contact 6F5,6F6,6H6, radiotron socket.....
4836	Capacitor-.05 Mfd.(C40).....	11222	Socket-Dial lamp socket.....
4883	Capacitor-0.1 Mfd.(C29).....	11381	Socket-Tuning tube socket and cover.....
11414	Capacitor-0.1 Mfd.(C30).....	12007	Spring-Retaining spring for core Stock No.12006,12664 and 12711- Package of 10.....
S1592	Capacitor-0.25 Mfd.(C28).....	12849	Spring-Tension spring for band indicator shutter link - Package of 5.....
5170	Capacitor-0.25 Mfd.(C8,C21).....	12707	Switch-Range switch (S1,S2).....
11240	Capacitor-10 Mfd. (C36).....	12668	Tone Control-Control and Operating Switch, (R16, S3).....
5212	Capacitor-18 Mfd. (C37).....	12652	Transformer-First I.F. transformer complete,(L9,L10,C20,C22)
12708	Coil-Antenna coil and shield(L2, L3,L4,L5).....	11999	Transformer-Power transformer 105-125 volts,60 cycle (T1)....
12709	Coil-Oscillator coil and shield (L6,L7,L8).....	12132	Transformer-Power transformer 105-125 volts,25 cycle (T1)....
12701	Condenser-2-gang variable tuning condenser,(C4,C17).....	12653	Transformer-Second I.F. transformer complete (L11,L12,C23, C24,C25,R8,R9).....
5119	Connector-3-contact female connector for speaker cable.....	12654	Trap-Wave trap complete (L1)....
12711	Core-Adjustable core and stud for Stock No.12709.....	13144	Volume Control-Control and operating switch, (R11).....
12006	Core-Adjustable core and stud for Stock No.12652 and 12653.....	REPRODUCER ASSEMBLIES	
12664	Core-Adjustable core and stud for Stock No.12654.....	12641	Board-Reproducer terminal board.
12703	Dial-Station selector dial scale.	12640	Bracket-Output transformer mounting bracket.....
12702	Drive-Vernier drive for tuning capacitor.....	12012	Coil-Field coil (L15).....
12712	Indicator-S t a t i o n selector indicator pointer.....	11469	Coil Neutralizing coil (L13)....
5226	Lamp-Indicator dial lamp 6.3 volt, Package of 2.....	12642	Cone-Reproducer cone and dust cap (L14),Table Model).....
12718	Mask-Dial light diffuser complete with red, orange and green colored screen.....	12667	Cone-Reproducer cone and dust cap (L14),(Console Model).....
12738	Resistor-27,000 ohms, insulated, 1/4 watt,(R10).....	5118	Connector-3-contact male connector for speaker cable.....
11282	Resistor-56,000 ohm,carbon type, 1/10 watt (R8,R4).....	12666	Cover-Speaker cover(Console Model).....
12286	Resistor-56,000 ohm, carbon type, 1/4 watt, (R2).....	9696	Reproducer Complete (Console Model).....
11281	Resistor-100,000 ohm,carbon type, 1/10 watt (R13).....	9699	Reproducer Complete (Table Model)
11398	Resistor-220,000 ohm,carbon type, 1/10 watt (R9).....	11253	Transformer-Output transformer (T2).....
11453	Resistor-270,000 ohm,carbon type, 1/10 watt (R14).....	11886	Washer-Spring washer to hold field coil securely-Package of 5
11452	Resistor-470,000 ohm,carbon type, 1/10 watt (R1,R15).....	MISCELLANEOUS ASSEMBLIES	
12285	Resistor-470,000 ohm,insulated, 1/4 watt,(R12).....	11996	Bracket-Tuning tube mounting bracket.....
11382	Resistor-1 meg.,carbon type,1/10 watt,(R22).....	12698	Crystal-Station selector crystal and escutcheon.....
11626	Resistor-2.2 meg.,carbon type, 1/4 watt,(R7,R20,R21).....	12742	Escutcheon-Tuning tube escutcheon
12004	Resistor-Voltage divider comprising one 216 ohm,one 27 ohm and one 22 ohm sections(R17,R18,R19)	12699	Knob-Large tuning knob.....
12715	Resistor-Wire wound comprising one 22,000 ohm and one 10,000 one sections(R3,R6).....	11582	Knob-Range switch knob.....
4669	Screw-No.8-32 set screw for arm Stock No.12706-Package of 10...	12700	Knob-Vernier tuning knob(small).
12651	Shield-Coil shield for Stock No. 12708.....	11347	Knob-volume control or tone control knob.....
12710	Shield-Coil shield for Stock No. 12709.....	11377	Screw-Chassis mounting screw assembly for Table Model - Package of 4.....
12735	Shield-Dial lamp shield-Package of 5.....	11210	Screw-Chassis mounting screw assembly for Console Model - Package of 4.....
12008	Shield-I.F.transformer shield for Stock No.12652 and 12653.....	4982	Spring-Retaining spring for knob stock No. 12699-Package of 10..
12581	Shield-Shield top for I.F.transformer,Stock No.12653.....	11349	Spring-Retaining spring for knob stock No.11347,11582, and 12700 - Package of 5.....
12607	Shield-Shield top for I.F.transformer,Stock No.12652.....		
12704	Shutter-Dial scale holder and shutter assembly for band indicator.....		