

CDP-XE800

SERVICE MANUAL

AEP Model



Model Name Using Similar Mechanism	NEW
CD Mechanism Type	CDM36-14
Base Unit Type	BU-14
Optical Pick-up Type	KSS-213B/S-N

SPECIFICATIONS

Compact disc player

Laser	Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous
Laser output	Max 44.6 μW * * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture.
Frequency response	2 Hz to 20 kHz $\pm 0.5 \text{ dB}$
Signal-to-noise ratio	More than 108 dB
Dynamic range	More than 99 dB
Harmonic distortion	Less than 0.0027%
Channel separation	More than 103 dB

Outputs

	Jack type	Maximum output level	Load impedance
LINE OUT	Phono jacks	2 V (at 50 kilohms)	Over 50 kilohms
DIGITAL OUT (OPTICAL)	Optical output connector	-18 dBm	Wave length: 660 nm
PHONES	Stereo phone jack	10 mW	32 ohms

General

Power requirements	220 V - 230 V AC, 50/60 Hz
Power consumption	14 W
Dimensions (approx.) (w/h/d)	430 x 107 x 295 mm (17 x 4 1/4 x 11 5/8 in.) incl. projecting parts
Mass (approx.)	3.6 kg (7 lbs 15 oz)

Supplied accessories

Audio cord (2 phono plugs - 2 phono plugs) (1)
Remote commander (remote) (1)
Sony SUM-3 (NS) batteries (2)

Design and specifications are subject to change without notice.



COMPACT DISC PLAYER
SONY®

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
ADVARSEL : USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VORSICHT : UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.
VARO! : AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALT-TIINA NÄKYMÄTTÖMÄLLÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING : OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL : USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.

This caution label is located inside the unit.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS


Section	Title	Page
SECTION 1. SERVICING NOTE		3
SECTION 2. GENERAL		4
SECTION 3. DISASSEMBLY		
3-1.	Front Panel Assembly	5
SECTION 4. TEST MODE		6
SECTION 5. ELECTRICAL BLOCK CHECKING		8
SECTION 6. DIAGRAMS		
6-1.	Circuit Boards Location	10
6-2.	IC Pin Function	
	• IC801 System Control, Fluorescent Indicator Tube Drive (CXP82316-060Q) ..	11
6-3.	Printed Wiring Board — BD Section —	13
6-4.	Schematic Diagram — BD Section —	15
6-5.	Printed Wiring Board — Main Section —	20
6-6.	Schematic Diagram — Main Section —	23
SECTION 7. EXPLODED VIEWS		
7-1.	Front Panel Section	27
7-2.	Chassis Section	28
7-3.	CD Mechanism Section (CDM36-14)	29
7-4.	Base Unit Section (BU-14)	30
SECTION 8. ELECTRICAL PARTS LIST		31

SECTION 1

SERVICING NOTE

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF

Insert a screwdriver into the aperture of the unit bottom, and move it in the direction of arrow.

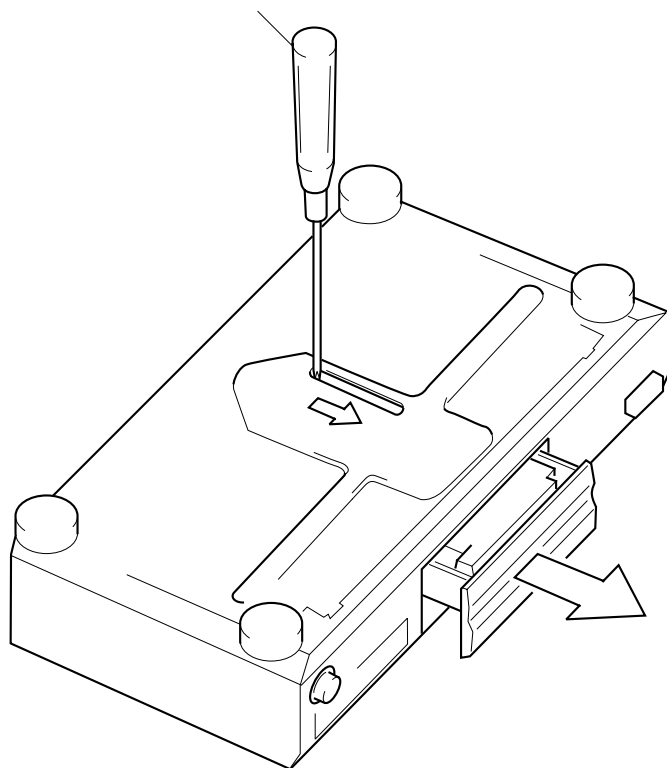

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.


LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveform is output three times.

SECTION 2 GENERAL

Identifying the Parts

Front Panel

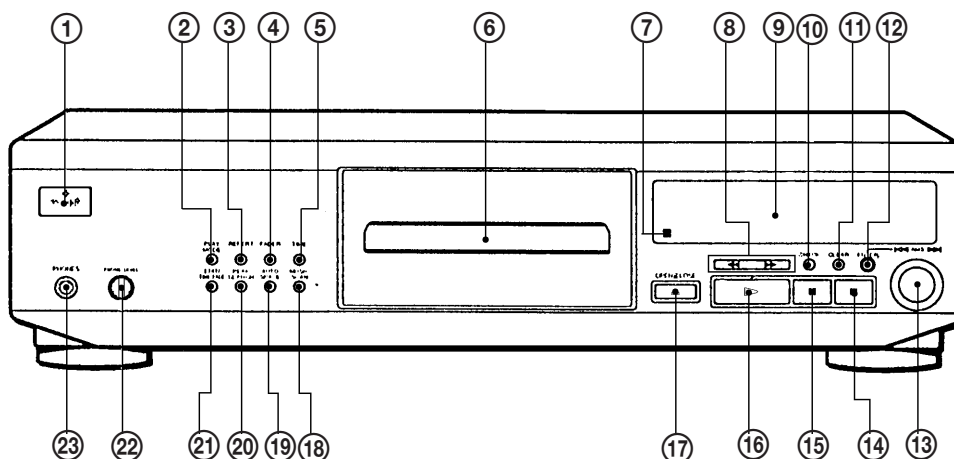

- ① POWER switch
- ② PLAY MODE button
- ③ REPEAT button
- ④ FADER button
- ⑤ TIME button
- ⑥ Disc tray
- ⑦ Remote sensor
- ⑧ <</>> buttons
- ⑨ Display window
- ⑩ CHECK button
- ⑪ CLEAR button
- ⑫ ENTER button
- ⑬ AMS* ± knob
- ⑭ (stop) button
- ⑮ (pause) button


- ⑯ (play) button
- ⑰ OPEN/CLOSE button
- ⑱ MUSIC SCAN button
- ⑲ AUTO SPACE button
- ⑳ PEAK SEARCH button
- ㉑ EDIT/TIME FADE button
- ㉒ PHONE LEVEL control
- ㉓ PHONES jack

* AMS is the abbreviation for Automatic Music Sensor.

SECTION 3 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

3-1. FRONT PANEL ASSEMBLY

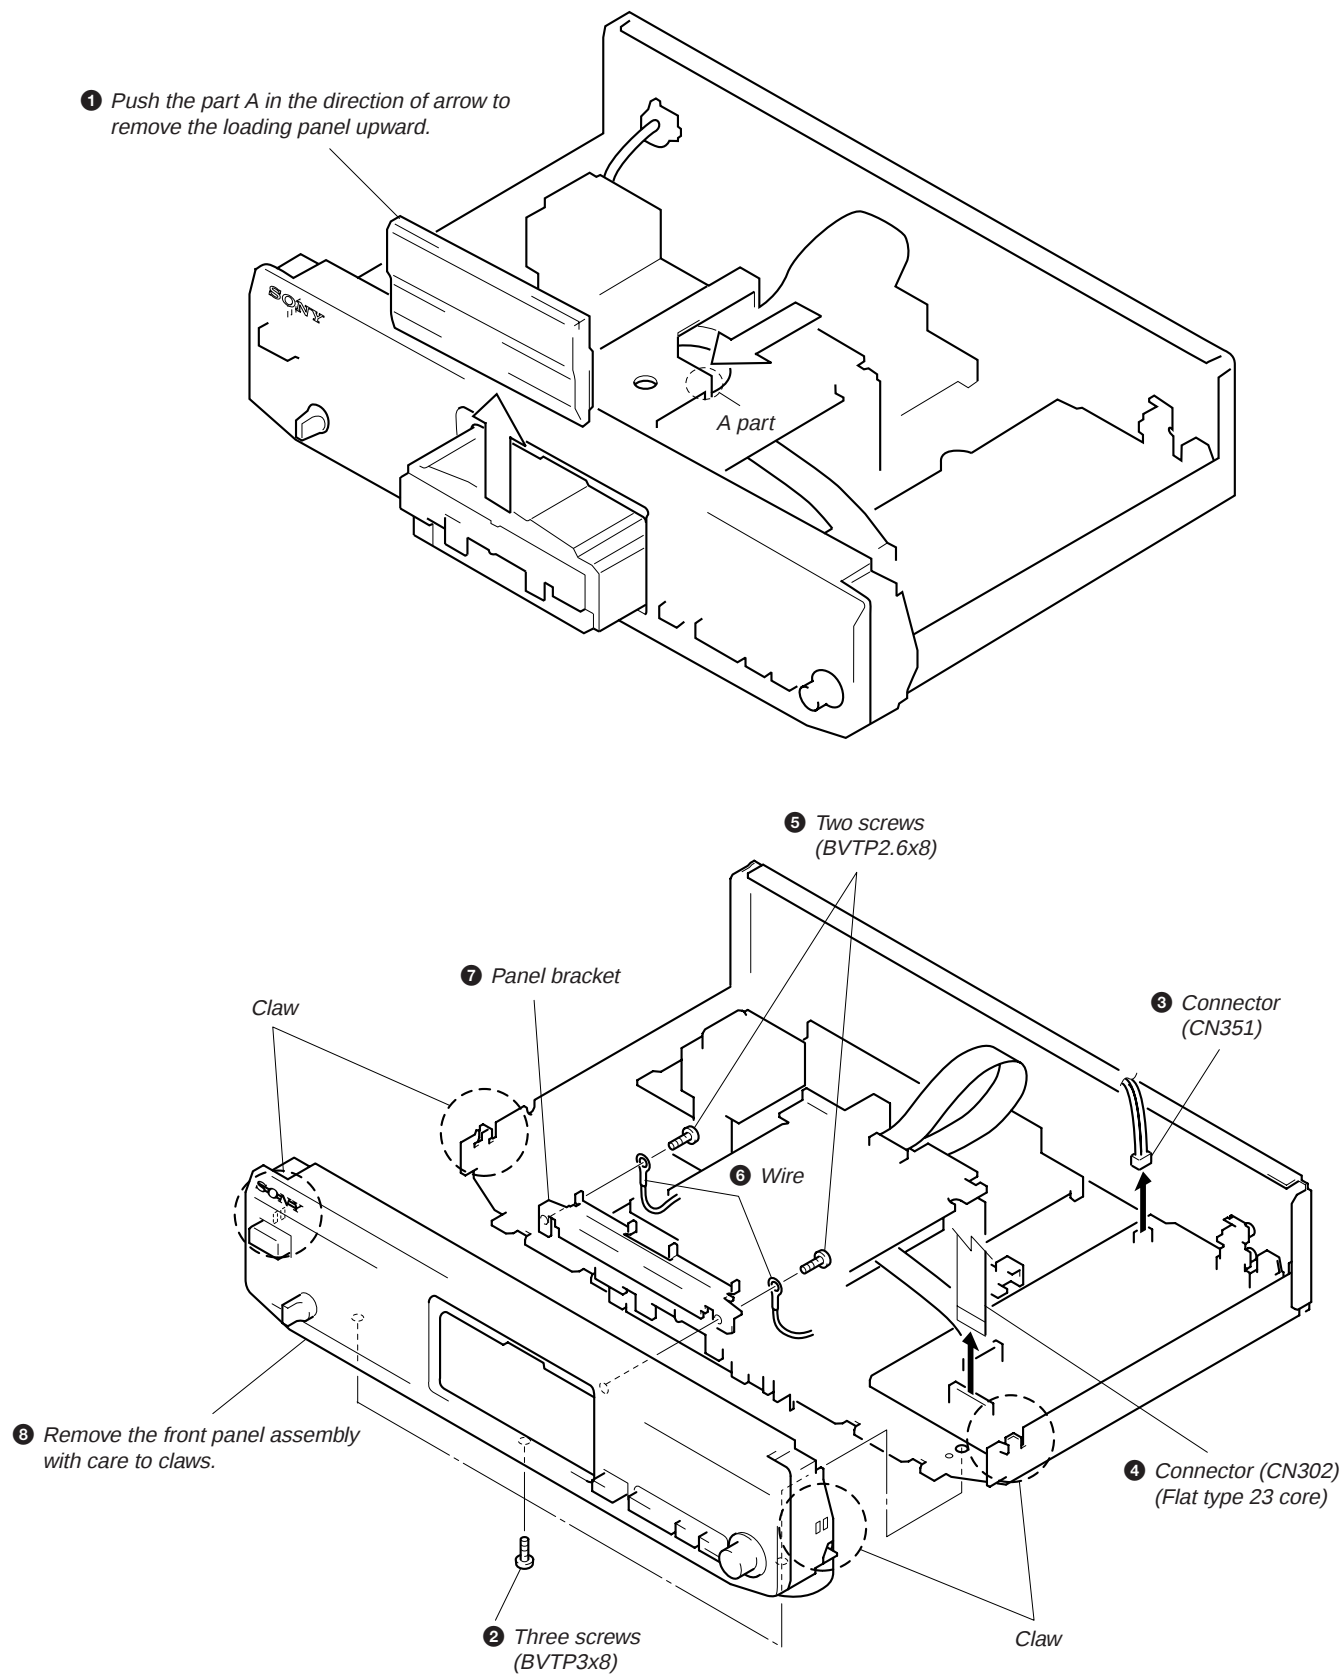

SECTION 4 TEST MODE

4-1. AF MODE

The following checks can be performed in the AF mode, which is set by connecting the TP2 (AFADJ : JW76) terminal on MAIN board to the Ground and turning on the power.

• FL tube check

After all segments light up, when the ▷ button is pressed, the following will be displayed. (Partial lighting 1)



When the ■ button is pressed, the following will be displayed. (partial lighting 2)

	2		4	
6		8		10
	12		14	
16		18		20

(Partial lighting 2)

When the OPEN/CLOSE ≡ button is pressed, all will light up again.

When the ◀◀ AMS ▶▶ knob is turned right, the following will be displayed. (partial lighting 3)

1				

(Partial lighting 3)

• Key check

All buttons have corresponding button numbers. When a button is pressed, the counter will count up and display the button's number. However, the counter will only count to "17". It will not count for buttons already pressed once, but will display the button's number.



Button	Button No. Displayed	Button	Button No. Displayed
TIME	00	ENTER	32
FADER	01	CLEAR	33
REPEAT	02	CHECK	34
PLAY MODE	03	▶▶	35
EDIT/	04	◀◀	36
TIME FADE		OPEN/	All lit
PEAK SEARCH	05	CLOSE ≡	
AUTO SPACE	06	PLAY ▷	Partial lighting 1
MUSIC SCAN	07	STOP ■	Partial lighting 2
■	25	◀◀ AMS ▶▶	Partial lighting 3

• Remote commander check

When the ▷ button of the remote commander is pressed, the "▷" lights up. All go off when the other buttons are pressed.

• Audio check

- Initial setting of digital filter and release of mute.
- When the TP2 (AFADJ) terminal on MAIN board is set to HIGH (VDD), emphasis turns on. When set to LOW (GND), it turns off.

4-2. ADJ MODE

The following operations are performed in the ADJ mode, which is set by connecting the TP1 (ADJ : JW75) terminal to the Ground and turning on the power.

- During playback, there is no problem even if the GFS is continuously LOW.
- High speed search is prohibited during access.
- During playback, the gain of focus servo and spindle servo does not decrease.
- Servo related manual operations and measurement can be performed.
(For details of operations, refer to Table of Key Operations in ADJ Mode.)

4-3. CLV-S MODE

The spindle servo for playback sets into the CLV-S mode when the TP2 (AFADJ) terminal is connected to Ground after turning on the power.

TABLE OF BUTTON OPERATIONS IN ADJ MODE


The jitter value display mode can be set after the all-music remaining number mode using the TIME button.

The functions of the number buttons are shown in the following table.

FUNCTIONS OF NUMBER BUTTONS (With the attached remote commander)

Button	Function
1	Focus bias 8-step up
2	Middle of focus bias up/down turning point
3	Tracking servo, sled servo off
4	Auto gain initialization
5	Focus servo off
6	Focus bias 8-step down
7	Immediate readjustment of focus bias
8	Tracking servo, sled servo on
10	Auto focus bias start point

[MAIN BOARD] — Component Side —

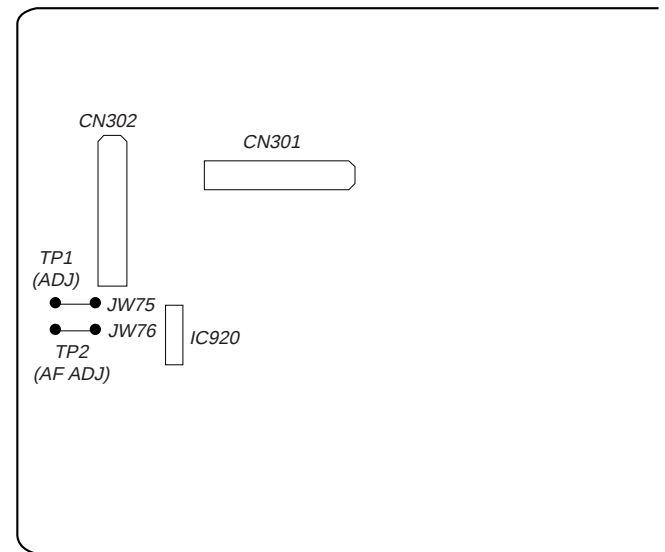


SECTION 5 ELECTRICAL BLOCK CHECKING

Note:

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S Curve Check

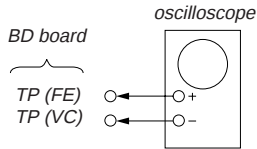

Procedure :

1. Connect oscilloscope to test point TP (FE) on BD board.
2. Connect between test point TP (FEI) and TP (VC) by lead wire.
3. Turned Power switch on.
4. Put disc (YEDS-18) in and turned Power switch on again and actuate the focus search. (actuate the focus search when disc table is moving in and out.)
5. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3±1 Vp-p.


S-curve waveform

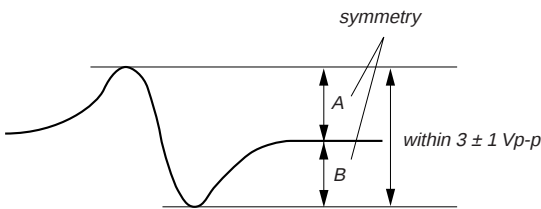

6. After check, remove the lead wire connected in step 2.

Note : • Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
• Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

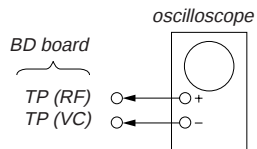


Procedure :


1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turned Power switch on.
3. Put disc (YEDS-18) in to play the number five track.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note: A clear RF signal waveform means that the shape “ $\diamond$ ” can be clearly distinguished at the center of the waveform.

RF signal waveform

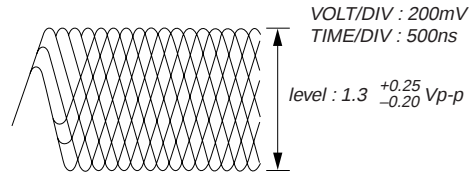


E-F Balance (1 Track Jump) Check (Without remote commander)

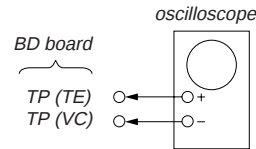


Procedure :

1. Connect oscilloscope to test point TP (TE) on BD board.
2. Turned Power switch on.
3. Put disc (YEDS-18) in to play the number five track.
4. Press the “ $\blacksquare$ (Pause)” button. (Becomes the 1 track jump mode)
5. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.
Confirm the following :
 $A/B \times 100 = \text{less than } \pm 22\%$

1 track jump waveform

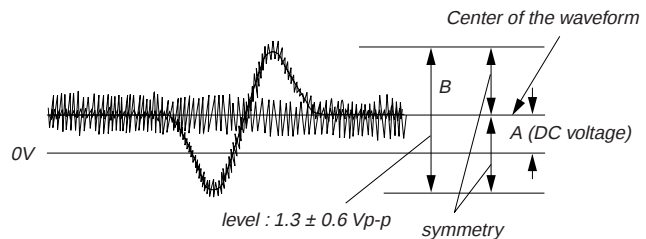


E-F Balance Check (With remote commander)

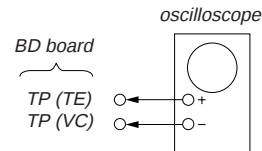


Procedure :

1. Connect the test point TP1 (ADJ : JW75) on MAIN board to the ground with a lead wire on main board.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Turn the Power switch on to set the ADJ mode.
4. Put disc (YEDS-18) in to play the number five track.
5. Press the “3” button. (The tracking servo and the sledding servo are turned OFF.)

- Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.
Confirm the following :
 $A/B \times 100 = \text{less than } \pm 22\%$

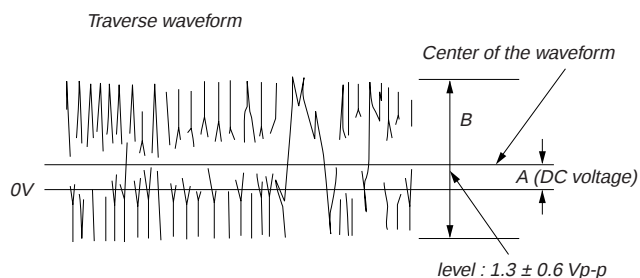

- Press the "8" button. (The tracking servo and sledding servo are turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 6.

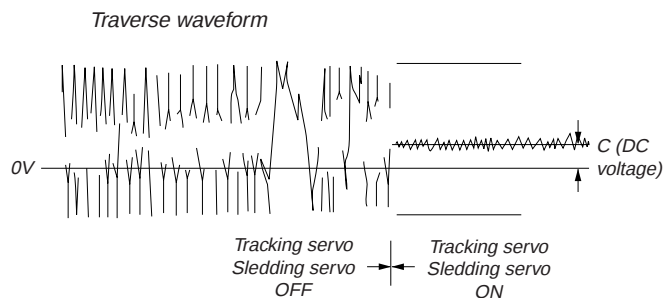


- Disconnect the lead wire of TP1 (ADJ : JW75) connected in step 1.

RF PLL Free-run Frequency Check

Procedure :


- Connect frequency counter to test point (XPLCK) with lead wire.

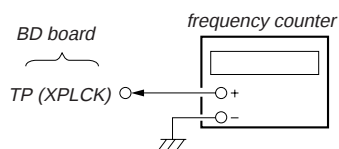


- Turned Power switch on.
- Put the disc (YEDS-18) in to play the number five track.
Confirm that reading on frequency counter is 4.3218MHz.

Adjustment Location :

[BD BOARD] — Side A —

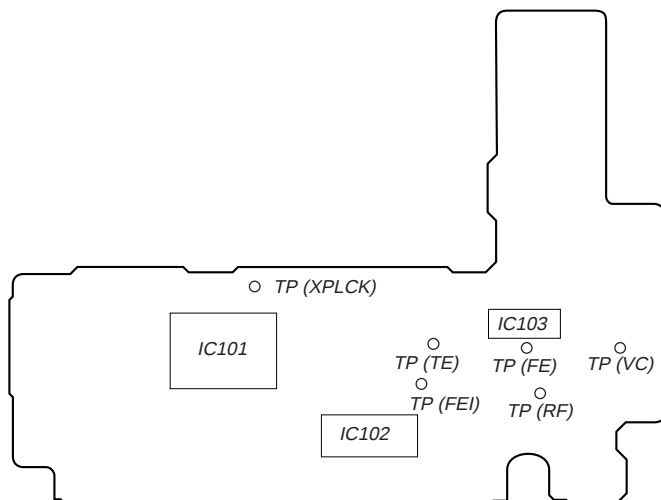


[MAIN BOARD] — Component Side —

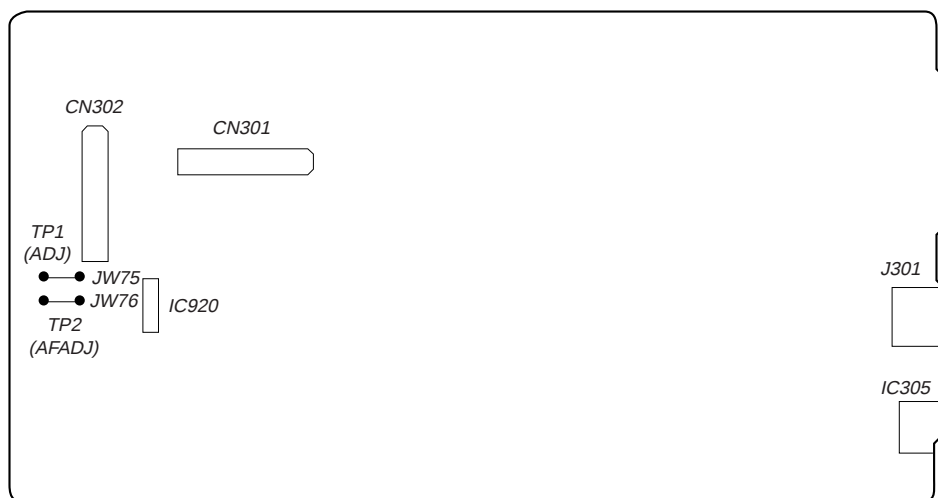

SECTION 6 DIAGRAMS

6-1. CIRCUIT BOARDS LOCATION



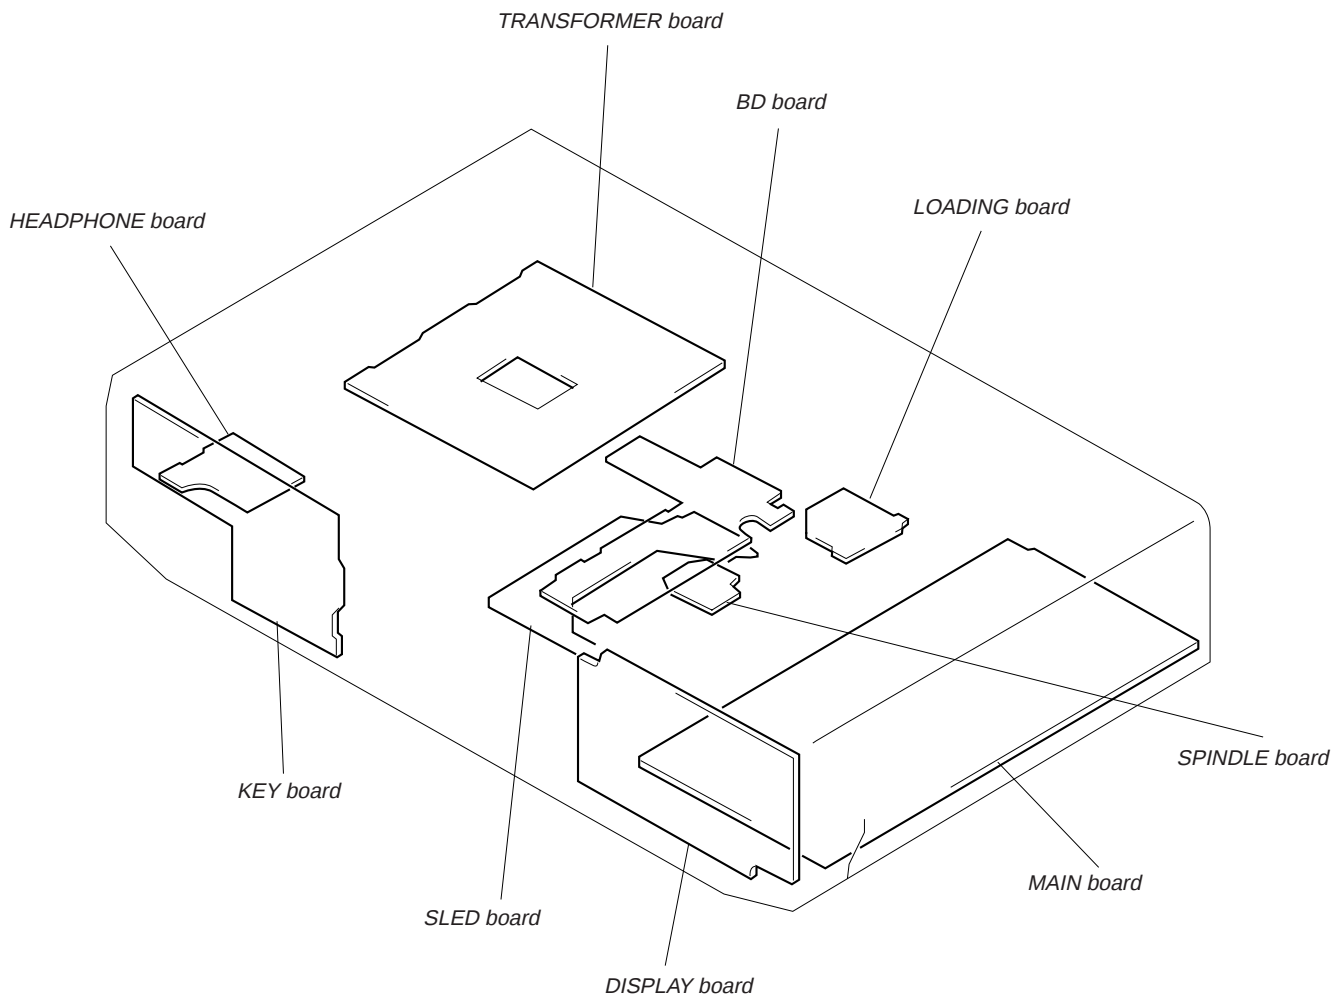


6-2. IC PIN FUNCTION

• IC801 SYSTEM CONTROL, FLUORESCENT INDICATOR TUBE DRIVE (CXP82316-060Q)

Pin No.	Pin Name	I/O	Function
1	TIMER	–	Connected to +5V.
2	RM (BUSIN)	I	Audio bus input.
3	+5V	–	Connected to +5V.
4	OPEN	–	Not used. (open)
5	OPEN	–	
6	(BUS-OUT)	–	
7	PRGL	O	Latch signal output to digital filter (IC303).
8	CLK	O	Serial clock output.
9	SENSE	I	SENSE signal input.
10	DATA	O	Serial data output.
11	SQCK	O	Read out clock output for subcode Q data.
12	SUBQ	I	Subcode Q data input.
13	OPEN	–	Not used. (open)
14	AMUTE	O	Analog muting control signal output.
15	LDON	O	Optical pickup laser diode control output.
16	XLT	O	Serial data latch signal output.
17	RVLED	–	Not used. (open)
18	RV+	O	Remote commander volume +. (Not used)
19	RV–	O	Remote commander volume –. (Not used)
20	LDOUT	O	Loading motor control signal output.
21	LDIN	O	
22 to 27	KEY0 to KEY5	I	Key input. (S801 to S810, S820 to S826, S828)
28	ADJ/AFADJ	–	ADJ, AFADJ test pin.
29	IN/OUTSW	I	Loading IN/OUT switch input.
30	RST	I	Reset signal input.
31	EXTAL	I	Clock input. (4 MHz)
32	XTAL	O	Clock output. (4 MHz)
33	V _{SS}	–	Ground
34 to 41	OPEN	–	Not used. (open)
42 to 62	S1 to S21	O	Fluorescent Indicator Tube segment output.
63 to 70	1G to 8G	O	Fluorescent Indicator Tube grid output.
71	VFDP (–30V)	–	–30V pin for Fluorescent Indicator tube.
72	V _{DD} (+5V)	–	+5V pin.
73	—	–	
74	SEL1	–	Connected to Ground.
75	IN PORT	–	Connected to +5V.
76	IN PORT	–	
77	IN PORT	–	
78	SCOR	I	Read out timing signal input for subcode Q data.
79	SEL2	–	Connected to Ground.
80	SEL3	–	Connected to +5V.


• IC Block Diagrams

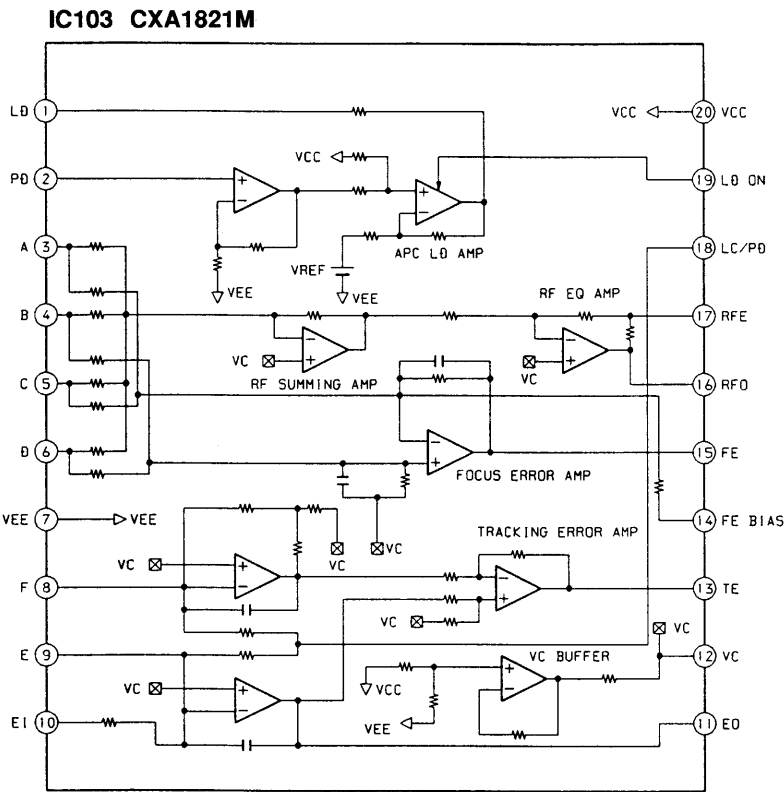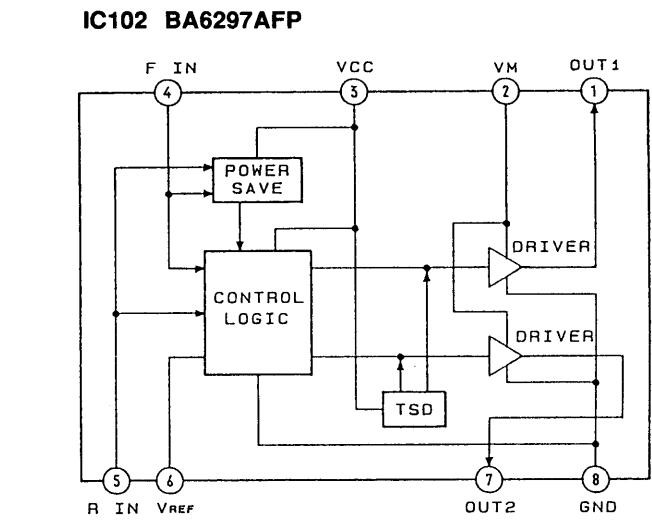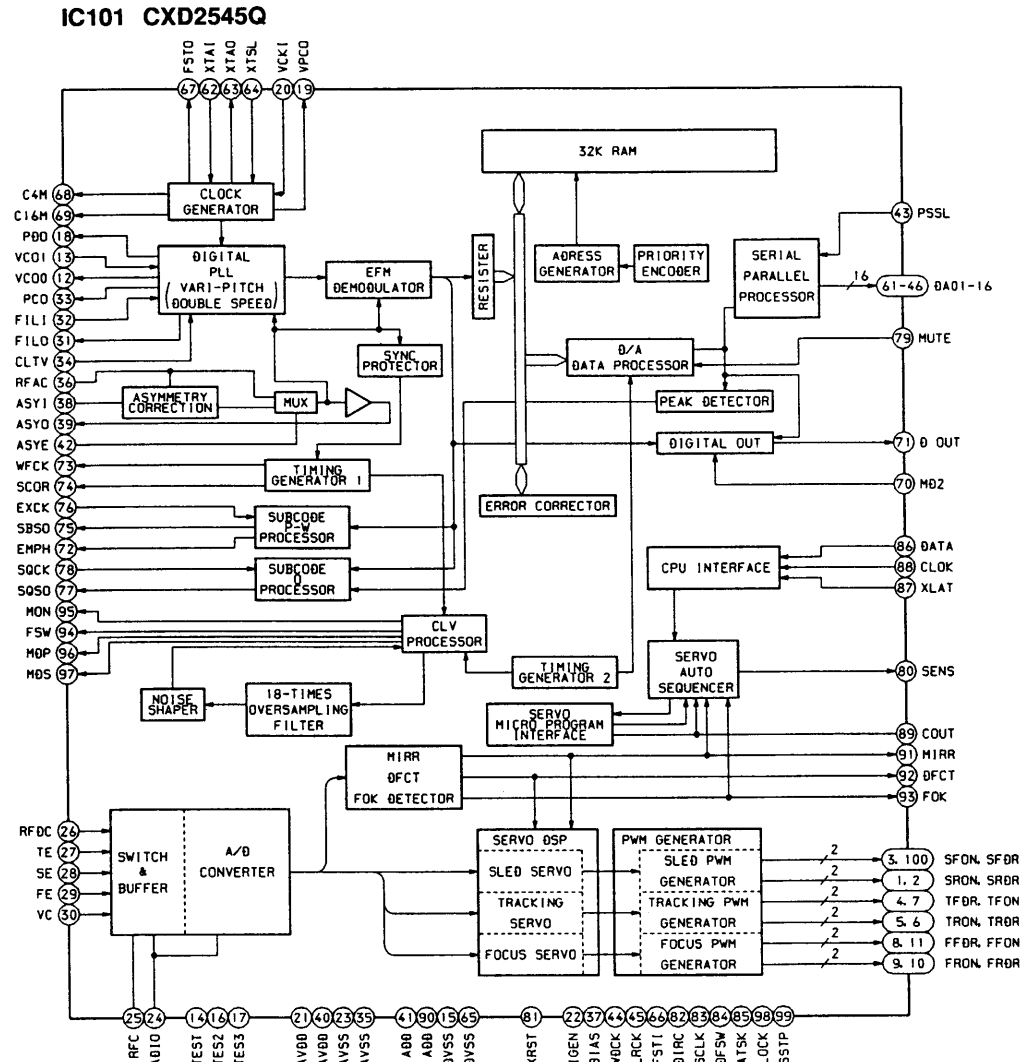


• Semiconductor Location

Ref. No.	Location
D101	E-1
IC101	D-3
IC102	E-4
IC103	D-6
Q101	D-7
Q102	D-7


6-3. PRINTED WIRING BOARD — BD SECTION —
• See page 10 for Circuit Boards Location.

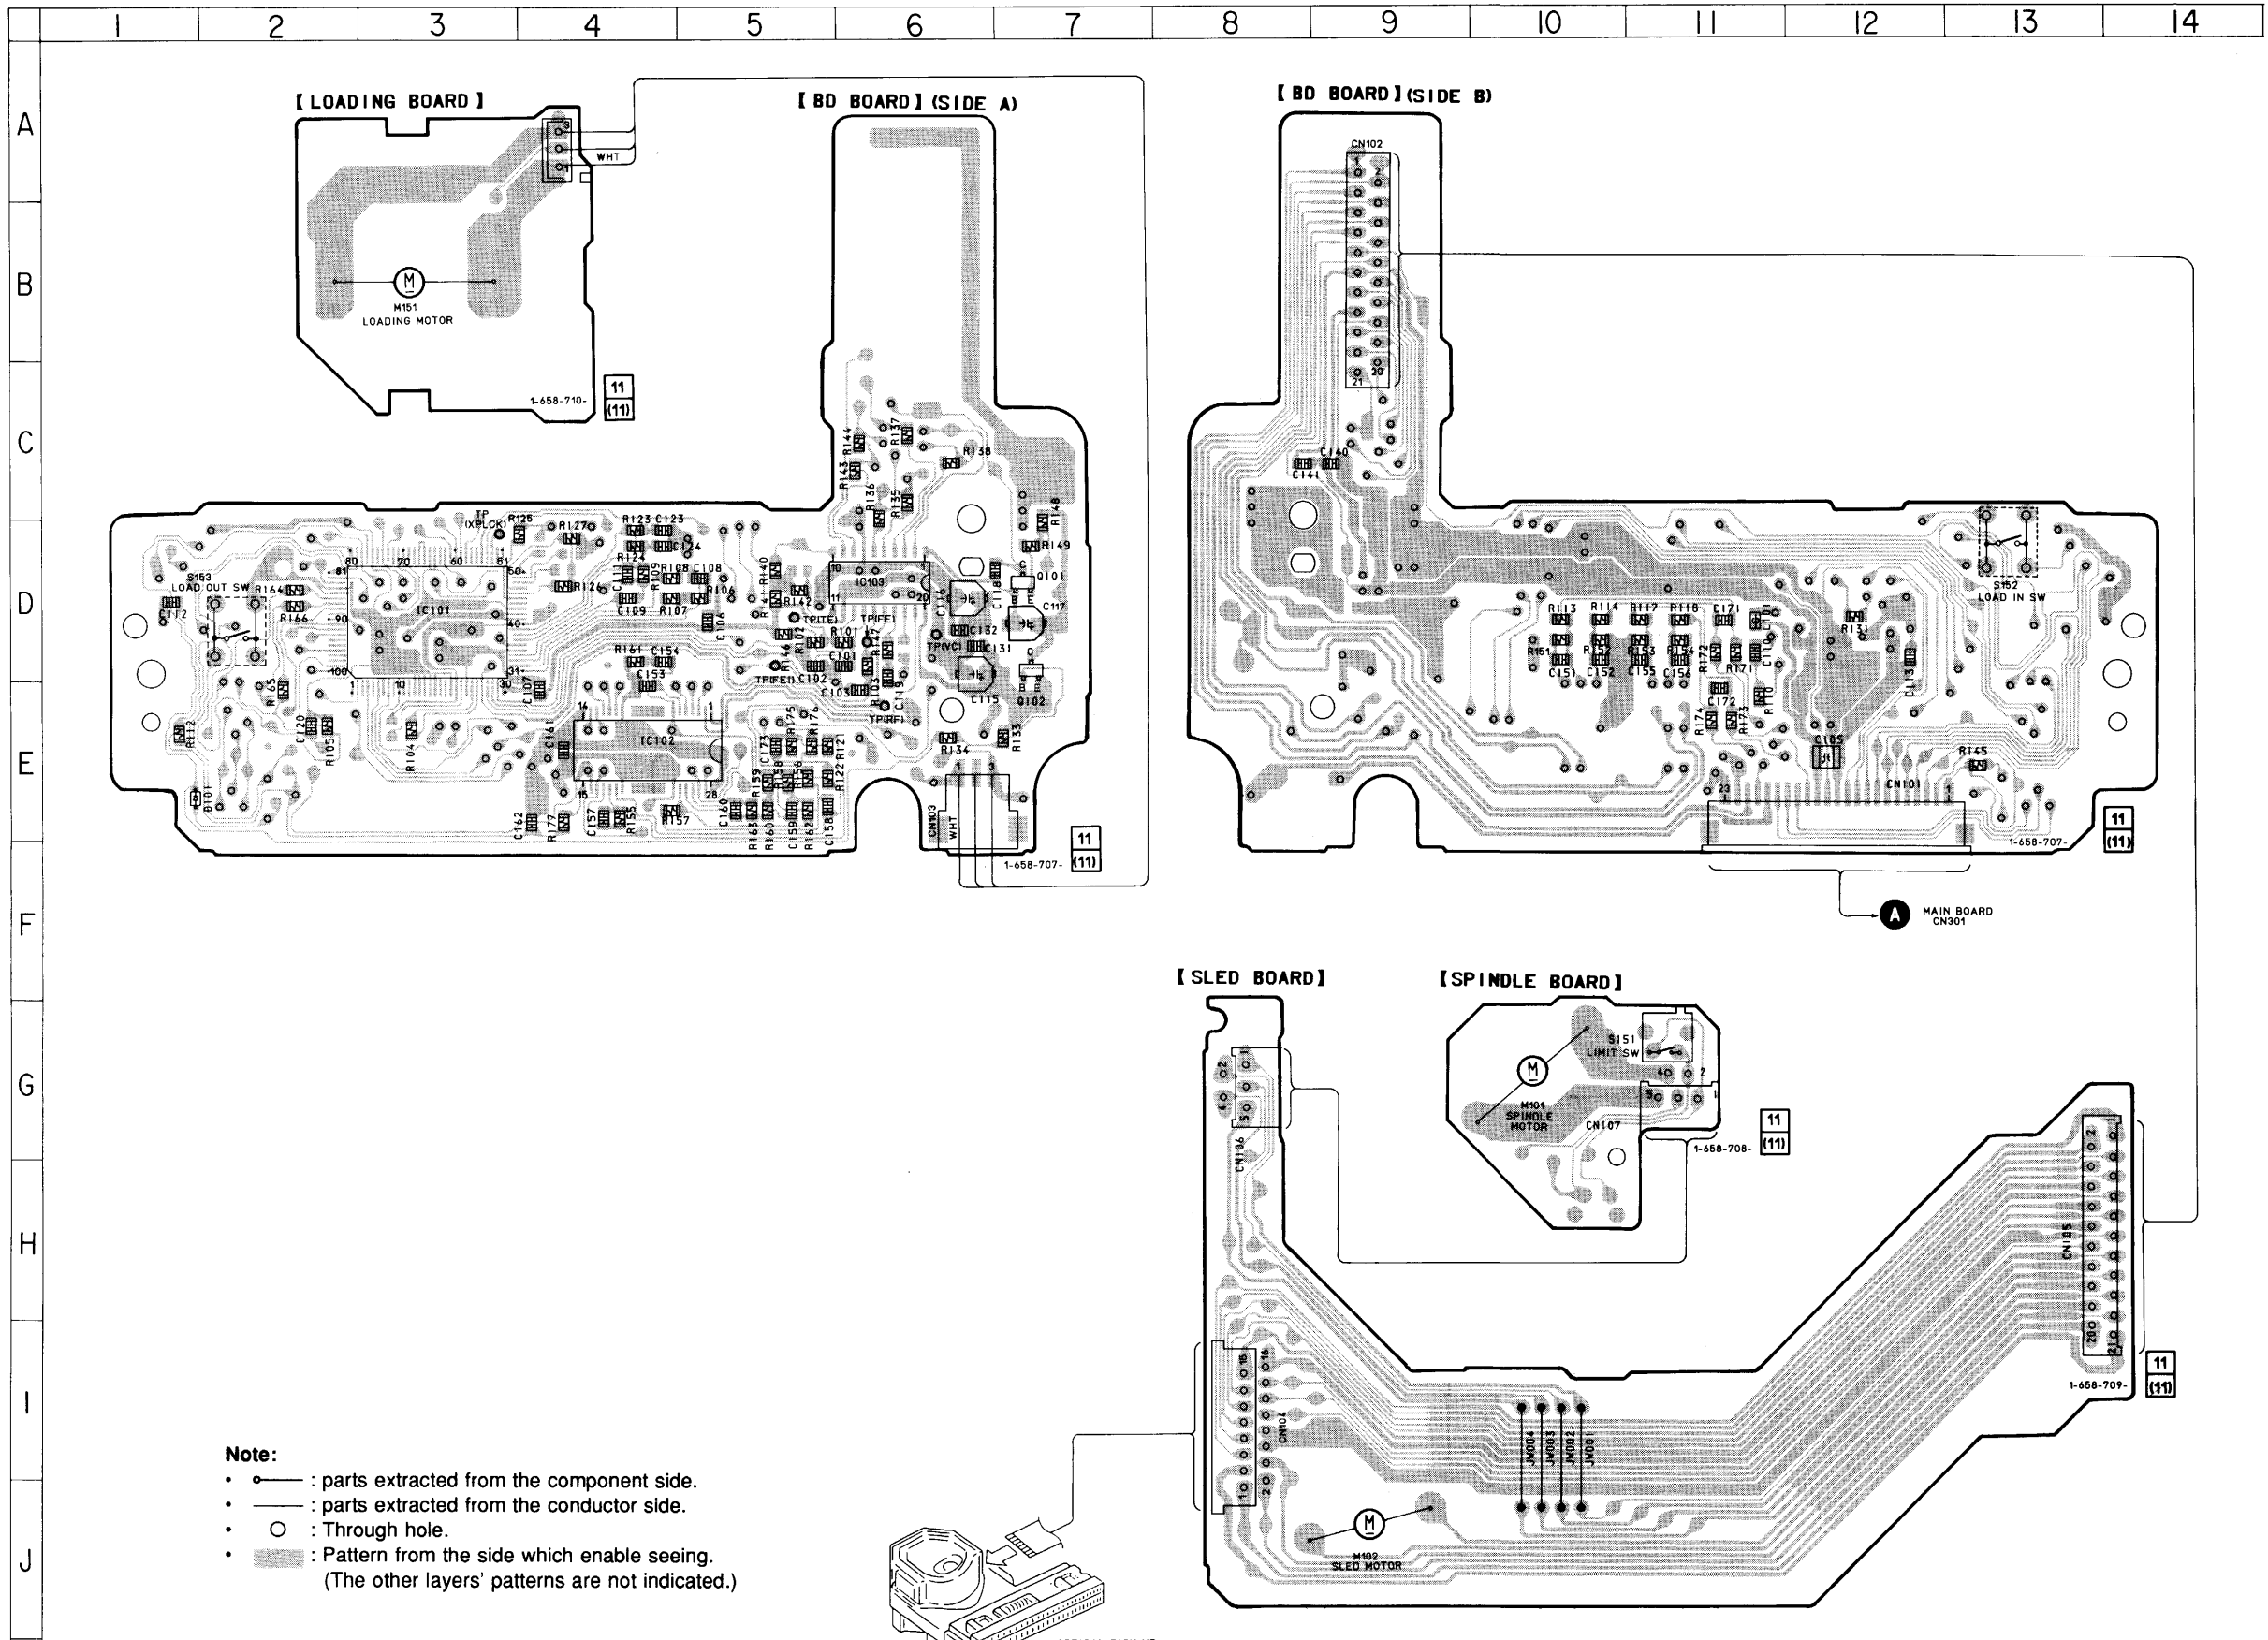


6-4. SCHEMATIC DIAGRAM — BD SECTION —

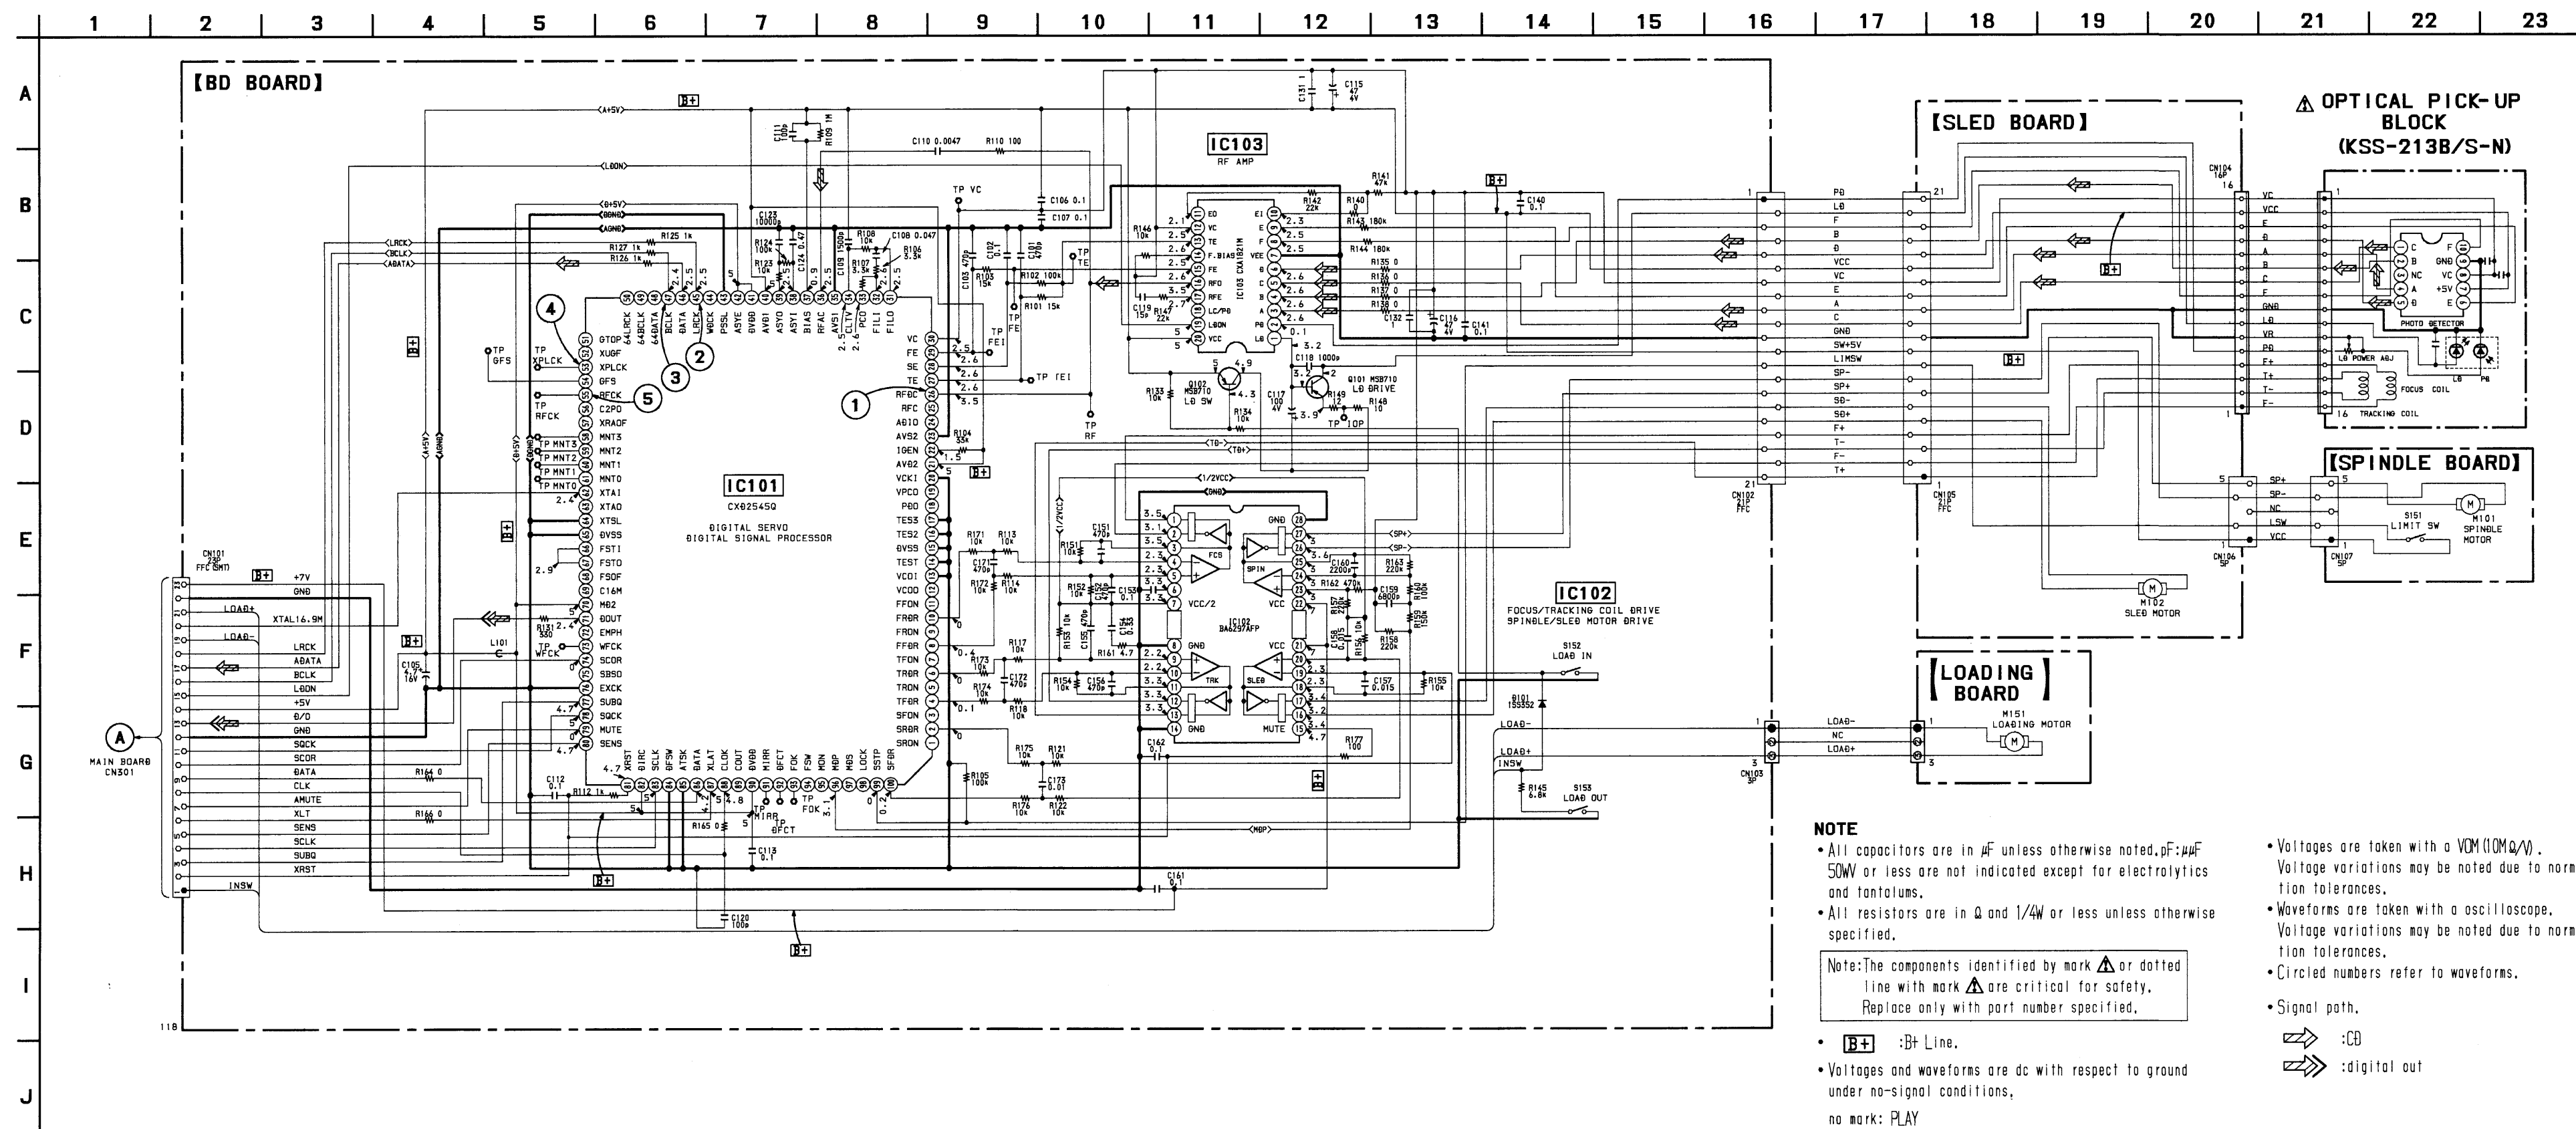

• Waveforms

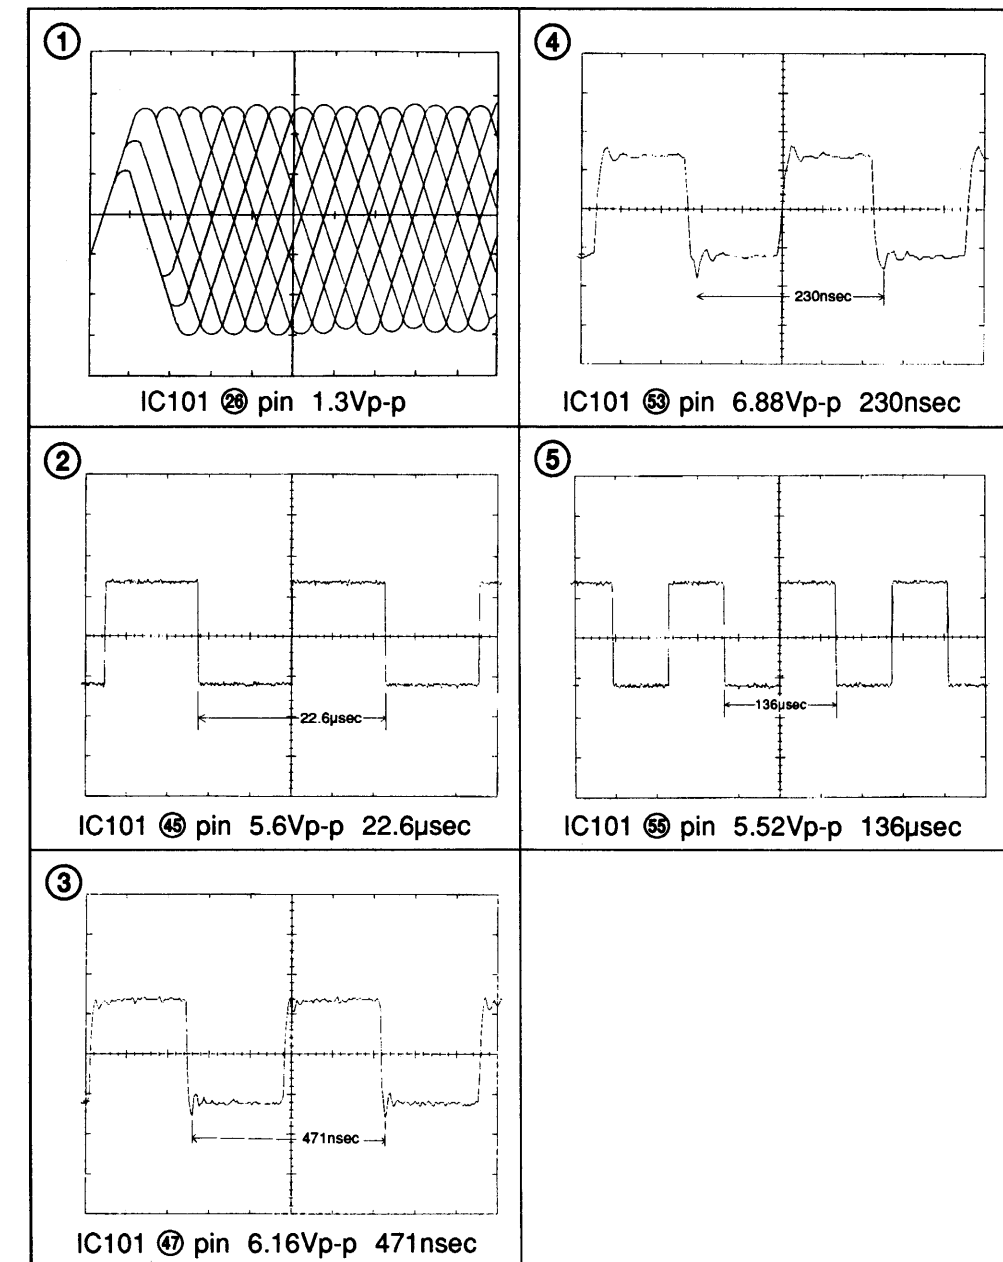

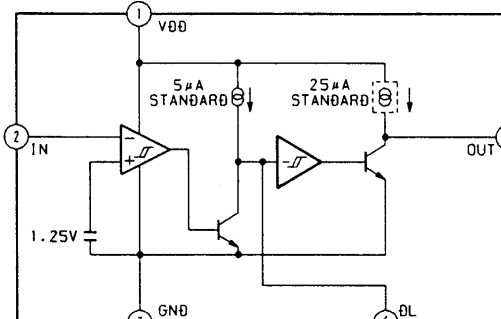


Ref. No.	Location
D301	J-3
D302	G-4
D303	J-9
D910	J-6
D911	I-5
D912	I-5
D913	I-4
D930	I-8
D931	I-8
D932	I-7
D933	I-7
D934	I-9
D935	I-9
D936	H-6
D937	H-6

IC301	J-3
IC303	G-6
IC304	I-10
IC305	F-11
IC401	G-9
IC501	H-9
IC801	B-3
IC802	B-7
IC920	G-3
IC930	H-8
IC931	H-6


Q301	J-9
Q401	G-10
Q403	F-10
Q404	F-3
Q501	H-10
Q503	H-10
Q504	F-3
Q801	C-6
Q910	J-5
Q911	I-5
Q920	H-3
Q930	H-7
Q931	H-6
Q932	J-6
Q933	H-5
Q934	I-6

-  : parts extracted from the component side.
- : parts extracted from the conductor side.
-  : Pattern from the side which enable seeing.


- See page 10 for Circuit Boards Location.

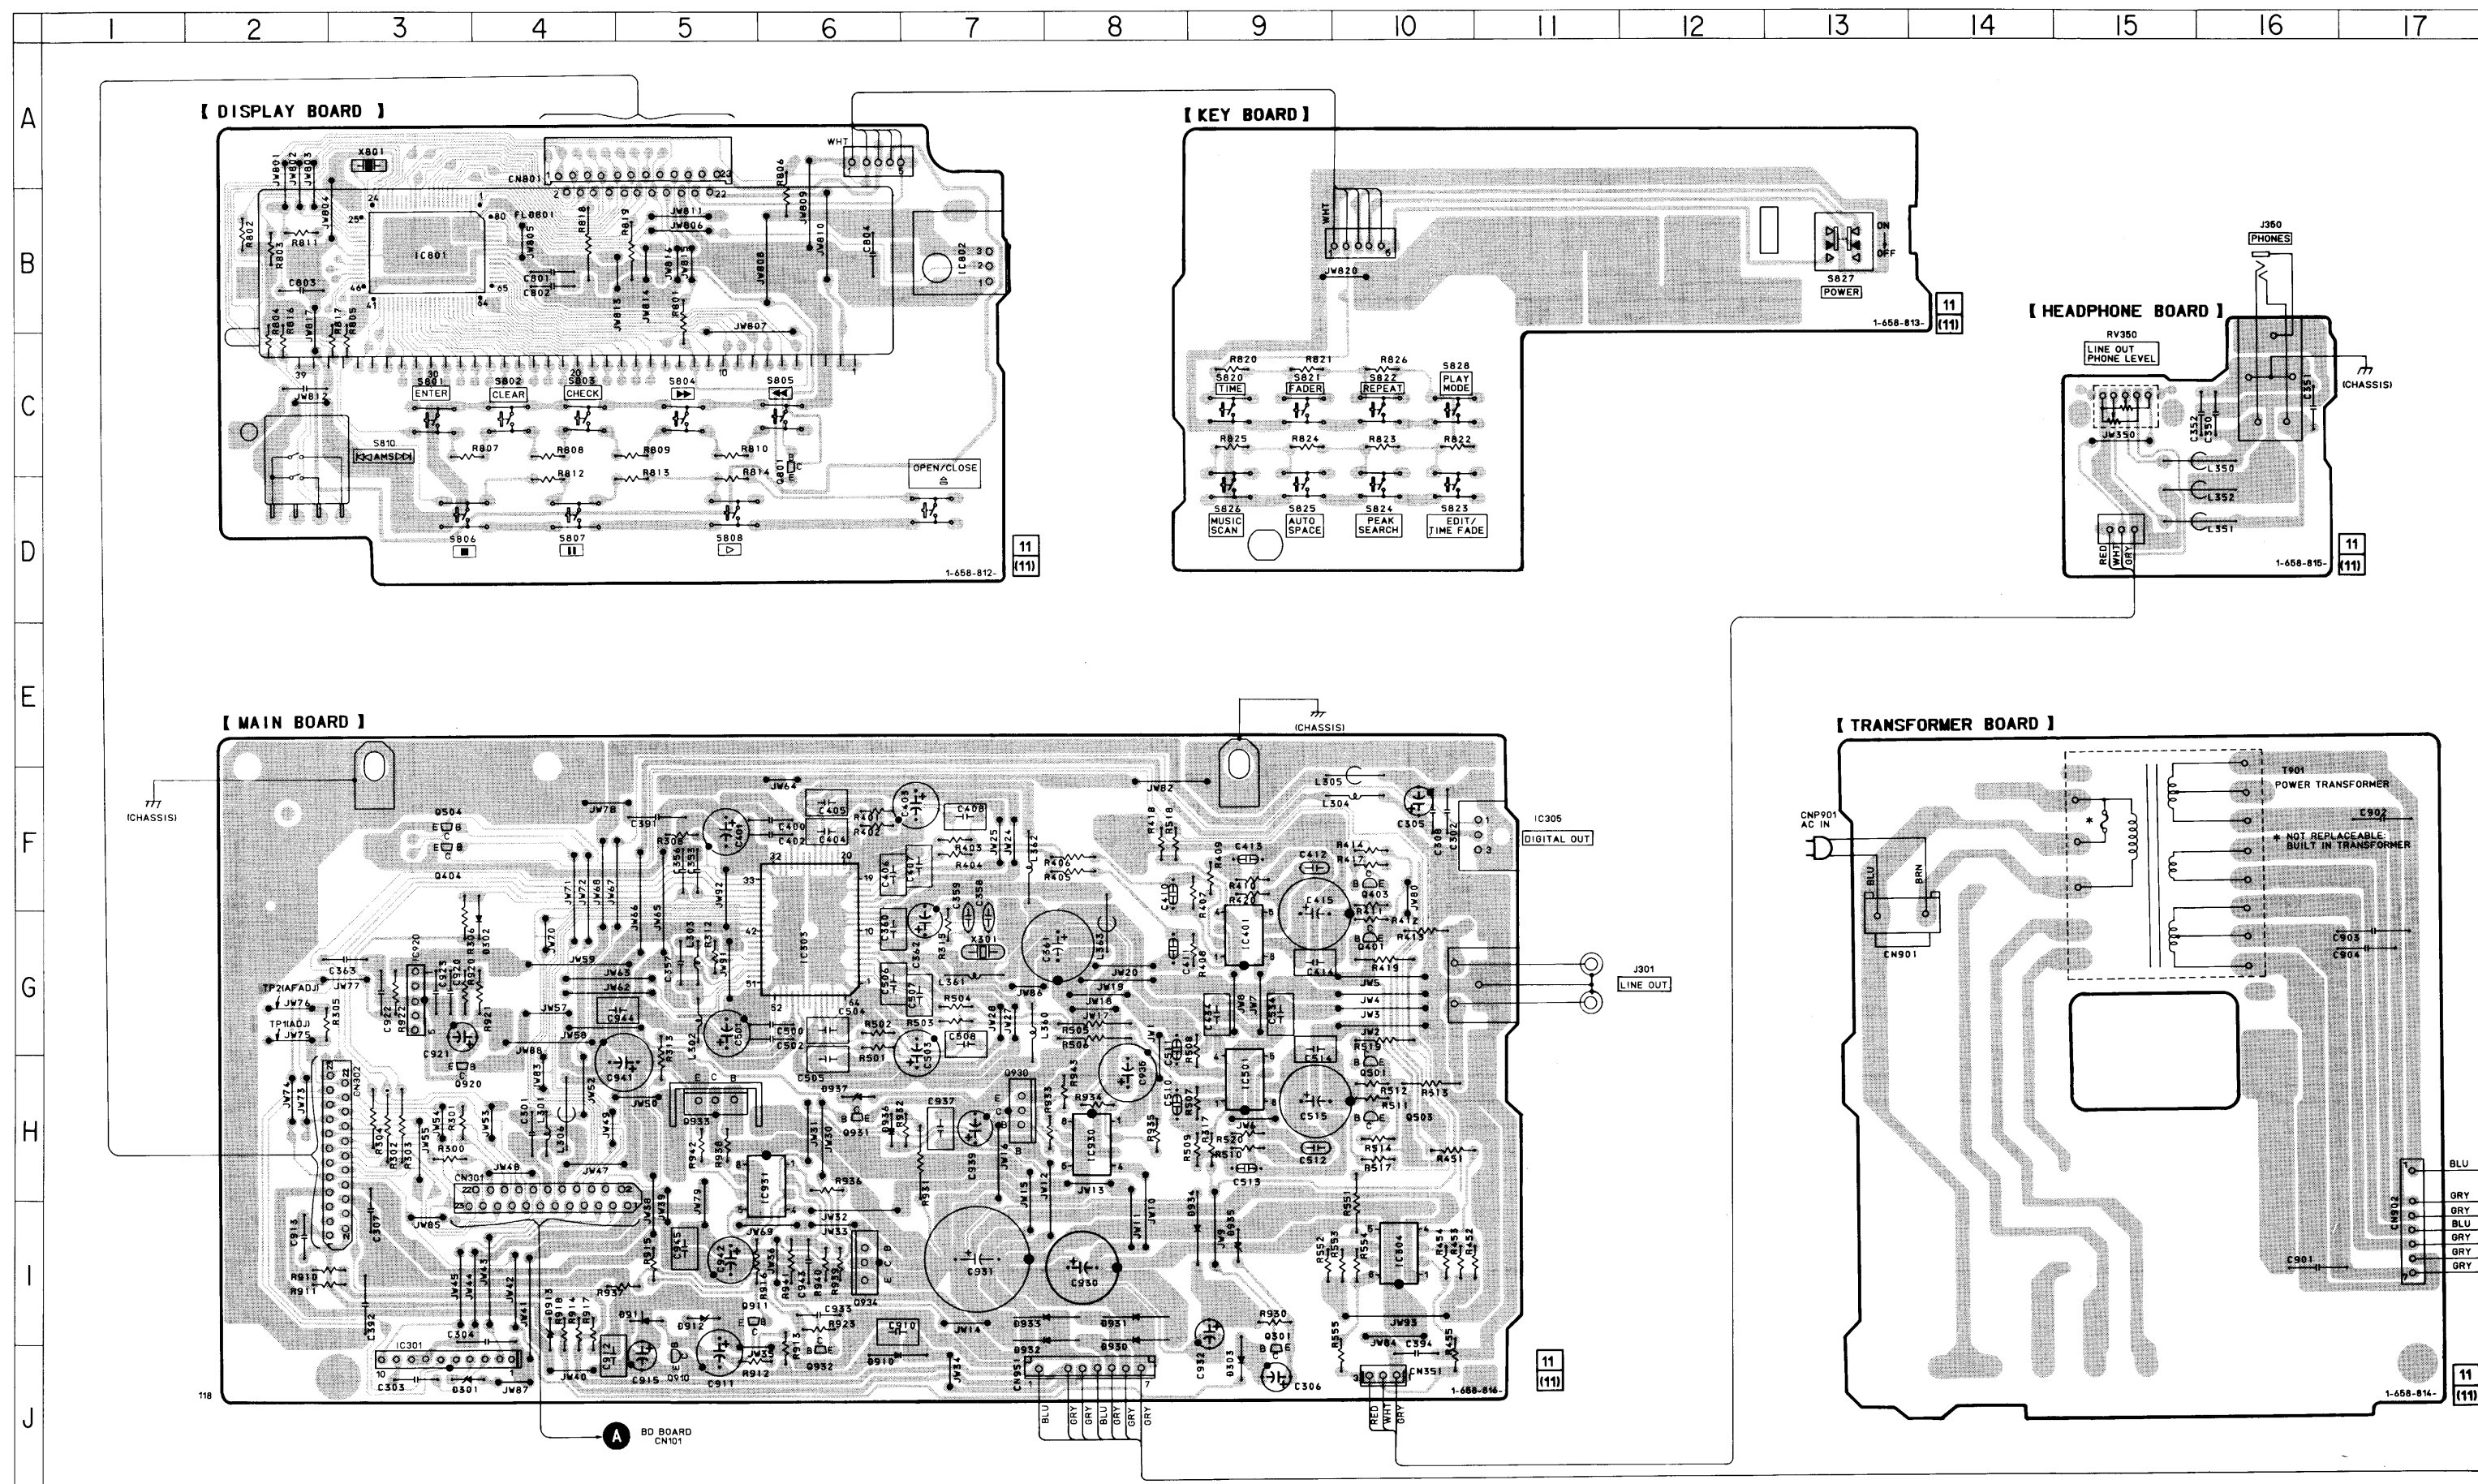

6-6. SCHEMATIC DIAGRAM — MAIN SECTION —
• See page 11 for IC Pin Function. (IC801)

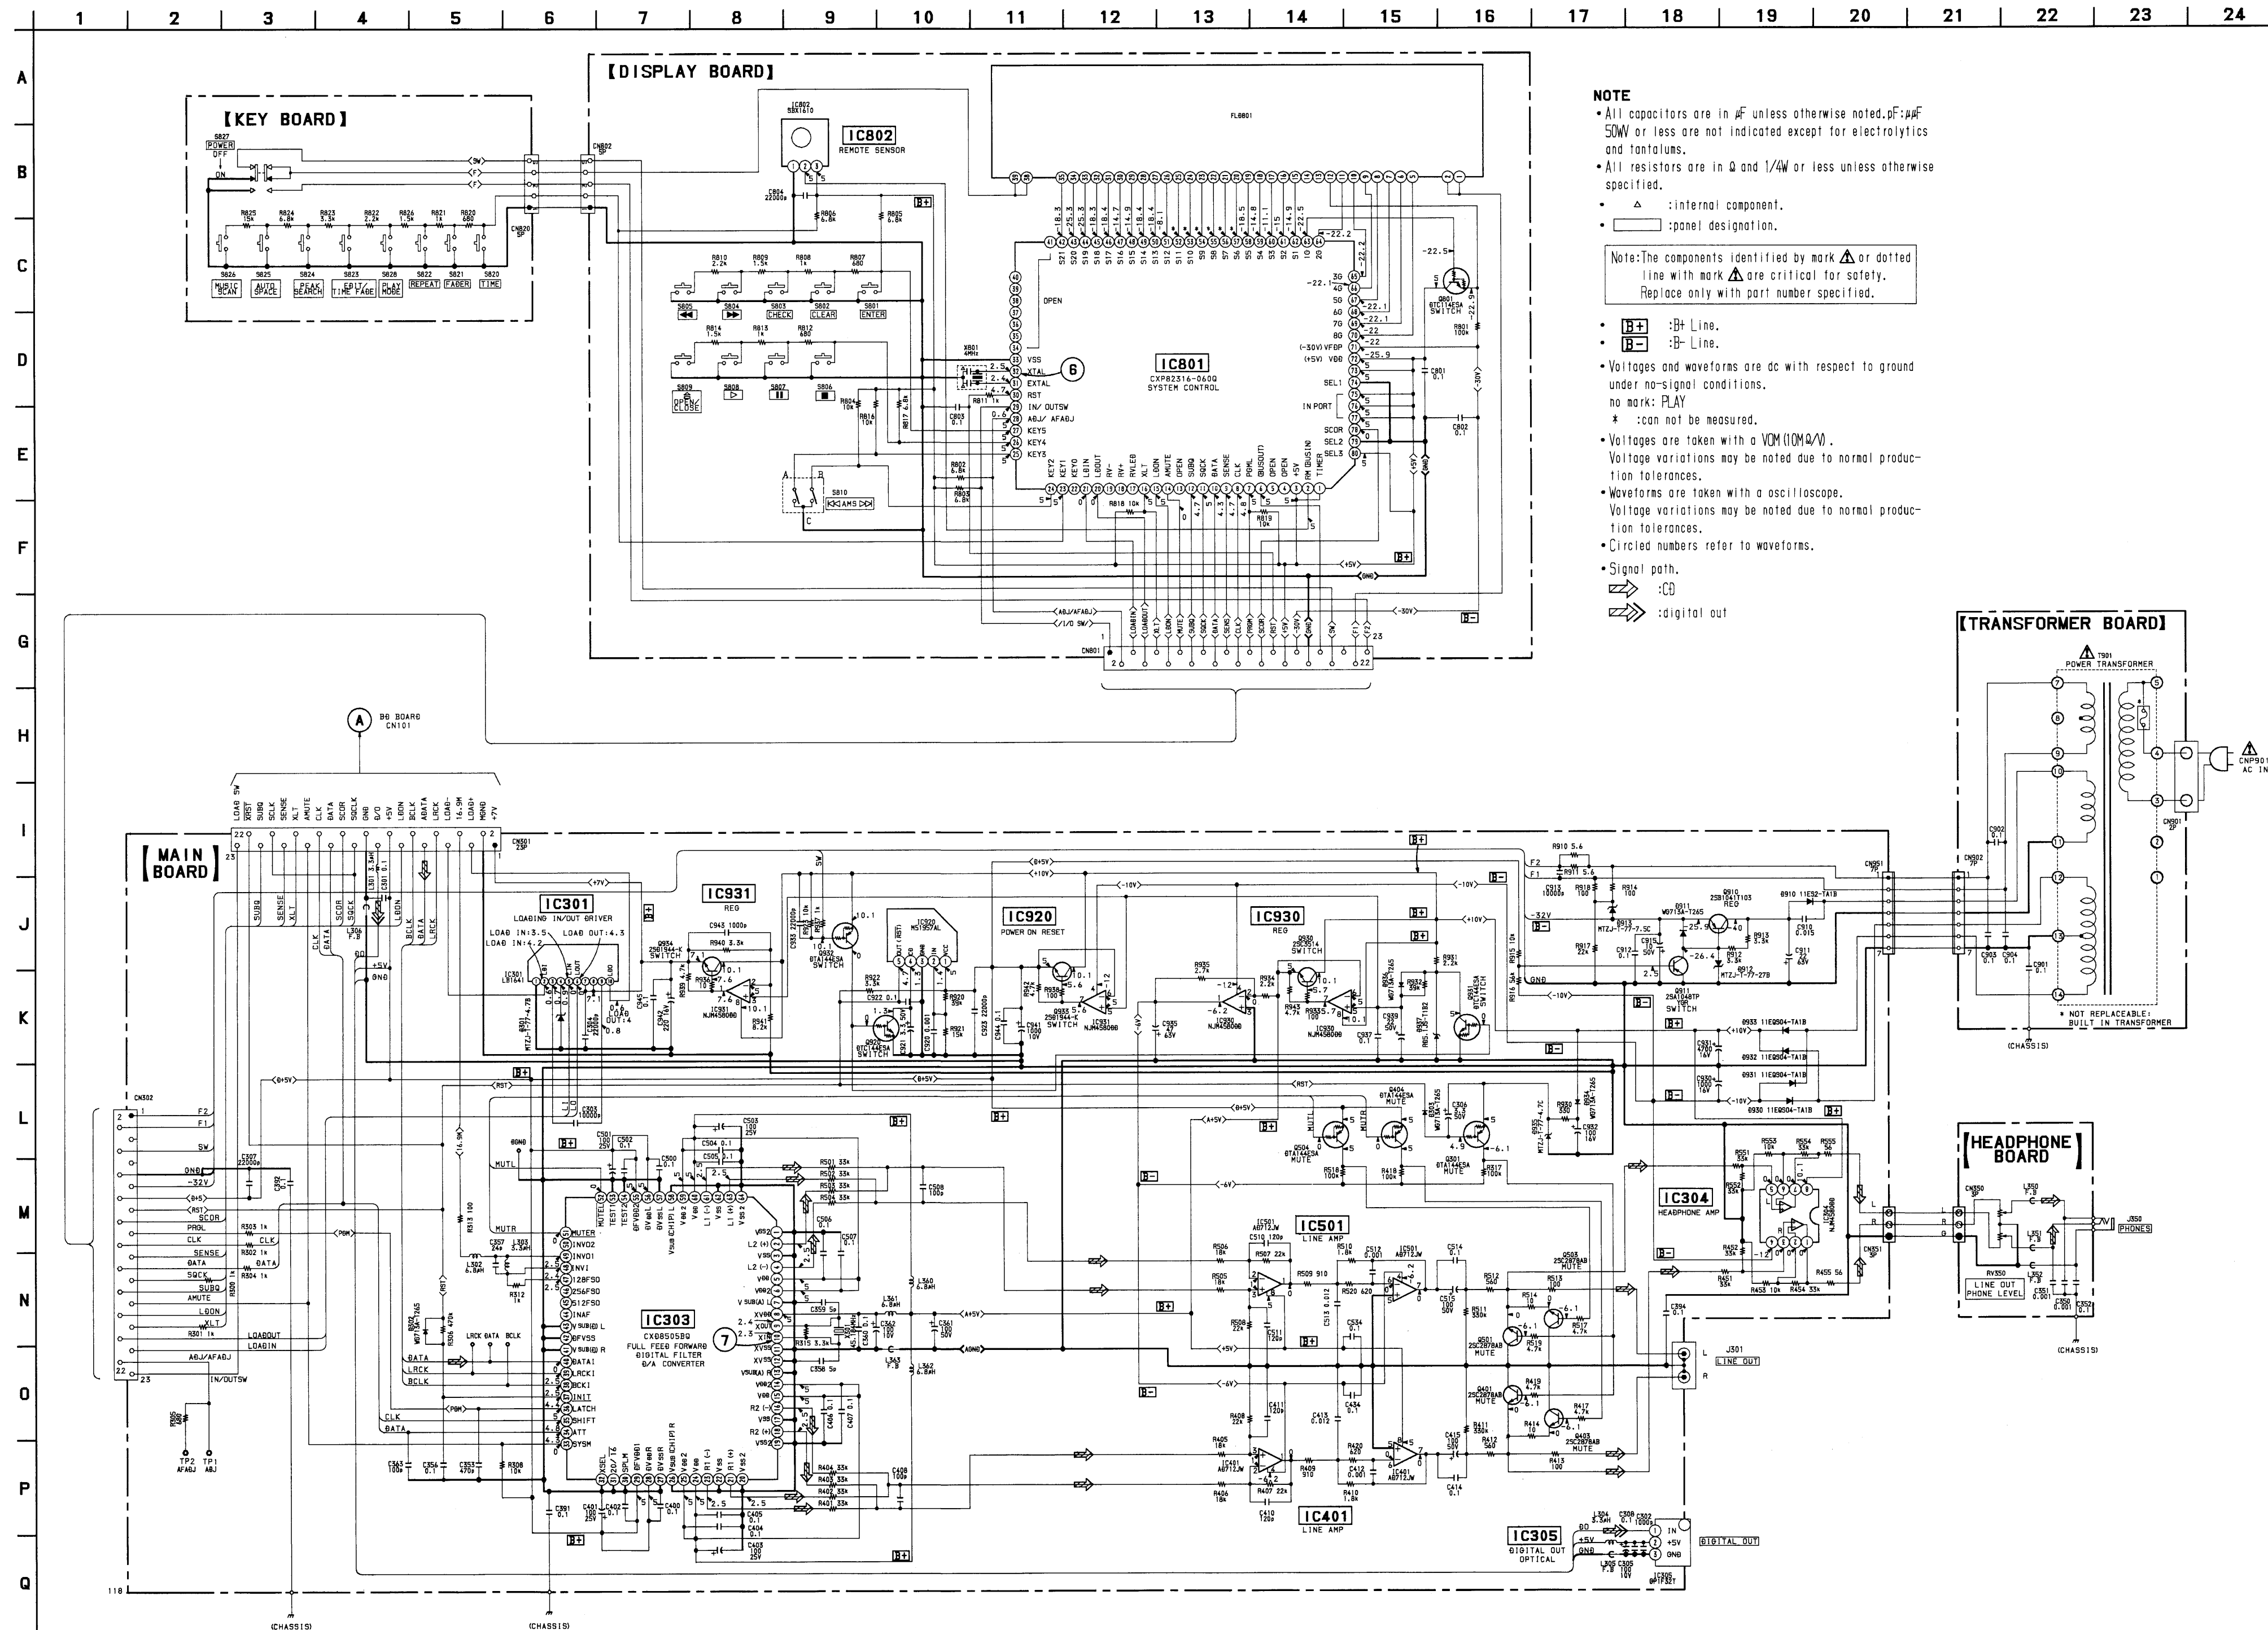

• Waveforms

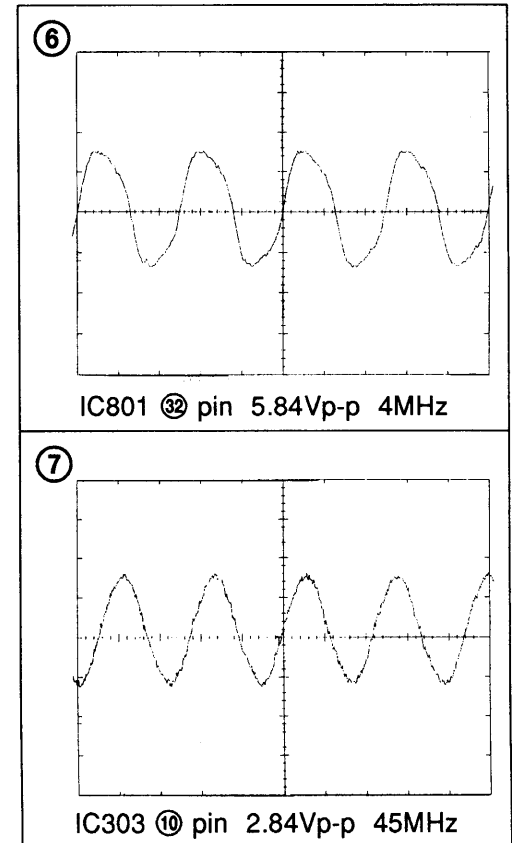


SECTION 7 EXPLODED VIEWS

NOTE:

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.


The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

7-1. FRONT PANEL SECTION

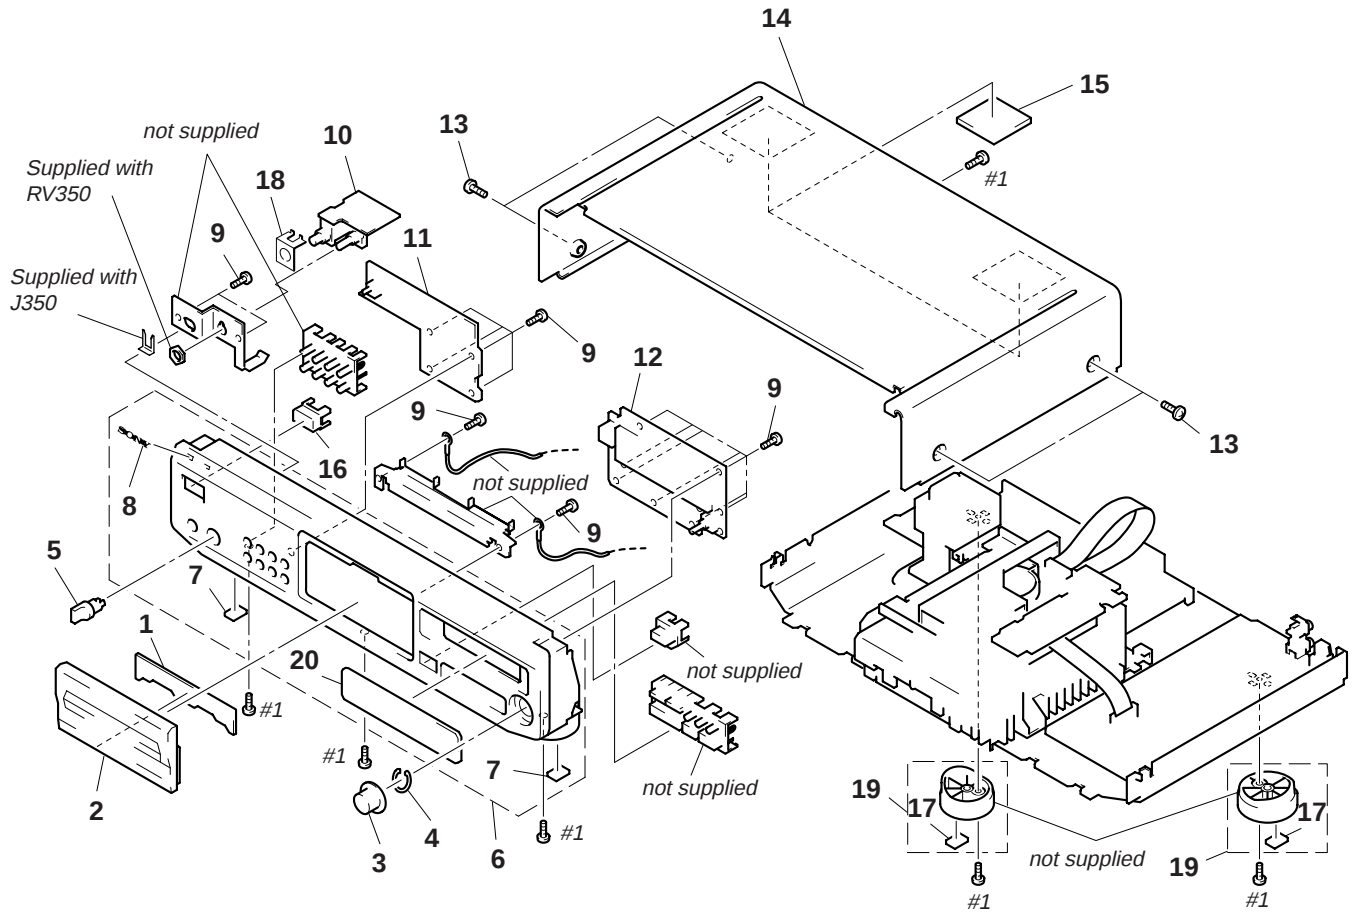

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 1	4-980-480-01	CUSHION (LOADING)		* 11	1-658-813-11	KEY BOARD	
2	4-978-900-01	PANEL, LOADING		* 12	A-4673-819-A	DISP BOARD, COMPLETE	
3	4-977-590-21	KNOB (AMS)		13	3-363-099-01	SCREW (CASE 3 TP2)	
4	3-354-981-01	SPRING (SUS), RING		* 14	4-978-901-01	CASE (409526)	
5	4-950-189-01	KNOB (A) (VOL)		* 15	4-962-329-01	DAMPER	
6	X-4946-658-1	PANEL ASSY (ALS), FRONT		16	4-977-589-21	BUTTON (POWER)	
7	4-978-398-01	CUSHION		17	4-977-358-01	CUSHION (8X12.5)	
8	4-963-404-21	EMBLEM (5-A), SONY		* 18	4-962-201-01	PLATE (HP), GROUND	
9	4-951-620-01	SCREW (2.6X8), +BVTP		19	X-3371-435-1	FOOT ASSY (F50150S)	
* 10	1-658-815-11	HEADPHONE BOARD		20	4-978-897-01	PLATE, INDICATION	


7-2. CHASSIS SECTION

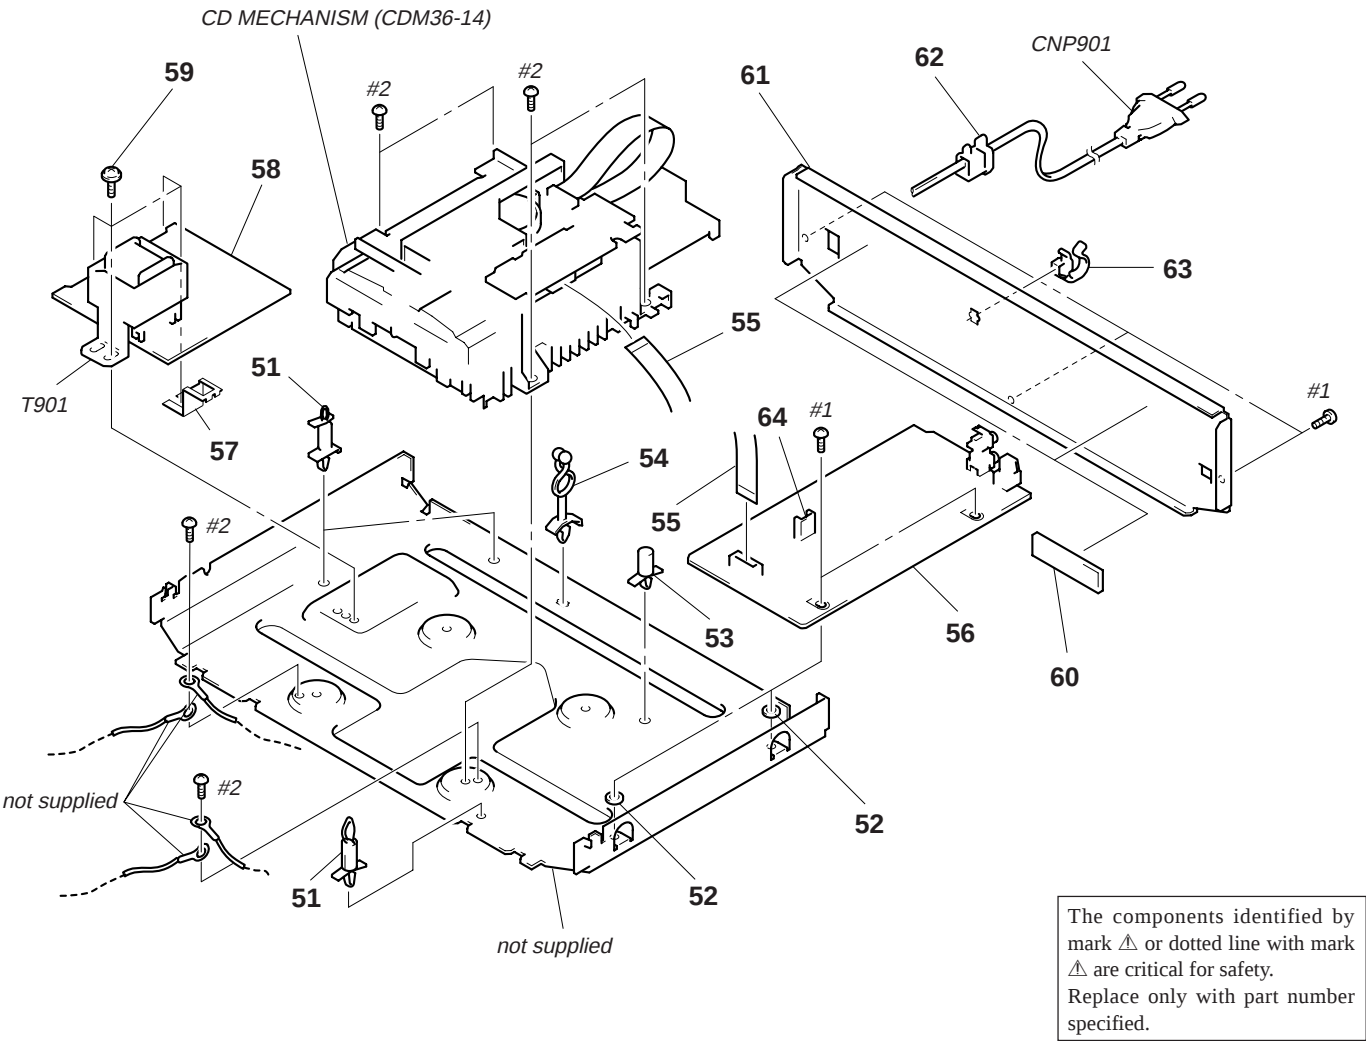

Ref. No.	Part No.	Description	Remark
* 51	4-954-051-51	HOLDER, PC BOARD	
52	4-955-939-01	WASHER (CASE)	
* 53	3-349-025-41	HOLDER, PC BOARD	
54	3-703-319-00	PURSE LOCK (DIA.15)	
55	1-776-235-11	WIRE (FLAT TYPE) (23 CORE)	
* 56	A-4673-818-A	MAIN BOARD, COMPLETE	
* 57	4-962-200-02	PLATE (TR), GROUND	
* 58	1-658-814-11	TRANSFORMER BOARD	
59	2-383-566-00	SCREW	

Ref. No.	Part No.	Description	Remark
60	4-959-077-01	DAMPER	
* 61	4-978-904-41	PANEL, BACK	
62	3-703-244-00	BUSHING, CORD	
* 63	4-949-235-01	HOOK	
* 64	3-309-144-21	HEAT SINK	
$\triangle$ CNP901	1-575-651-21	CORD, POWER	
$\triangle$ T901	1-429-367-11	TRANSFORMER, POWER	


7-3. CD MECHANISM SECTION (CDM36-14)

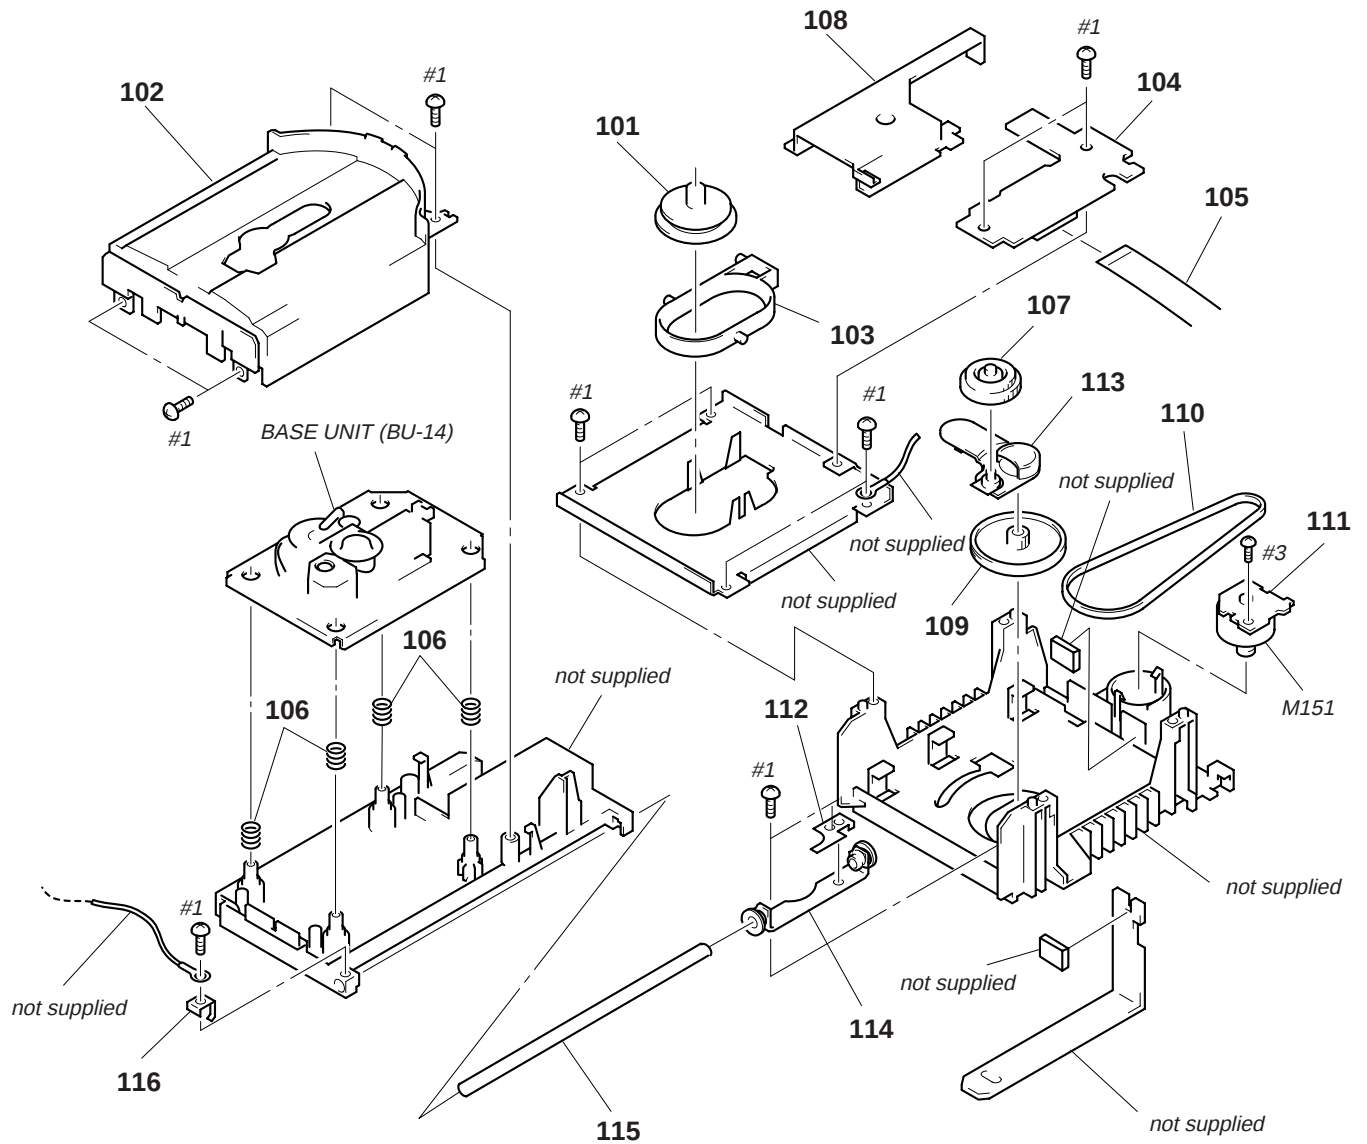

Ref. No.	Part No.	Description	Remark
101	1-452-820-11	MAGNET (ASSY)	
* 102	4-977-902-01	PANEL (DRAWER)	
* 103	4-977-894-01	HOLDER (AP)	
* 104	A-4673-722-A	BD BOARD, COMPLETE	
105	1-776-998-11	WIRE (FLAT TYPE) (21 CORE)	
106	4-948-503-01	SPRING (BU), COMPRESSION	
107	4-977-897-01	GEAR	
* 108	4-977-893-01	CAM, SLIDE	
109	4-977-896-01	PULLEY	

Ref. No.	Part No.	Description	Remark
110	4-968-905-01	BELT (CDM)	
* 111	1-658-710-11	LOADING BOARD	
* 112	4-977-891-01	PLATE, GROUND	
113	4-977-898-01	LEVER (SWING)	
* 114	4-977-892-01	BEARING	
* 115	4-977-888-01	SHAFT	
* 116	4-977-889-01	PLATE (BU), GROUND	
M151	A-4660-968-A	MOTOR ASSY (LOADING)	

7-4. BASE UNIT SECTION (BU-14)

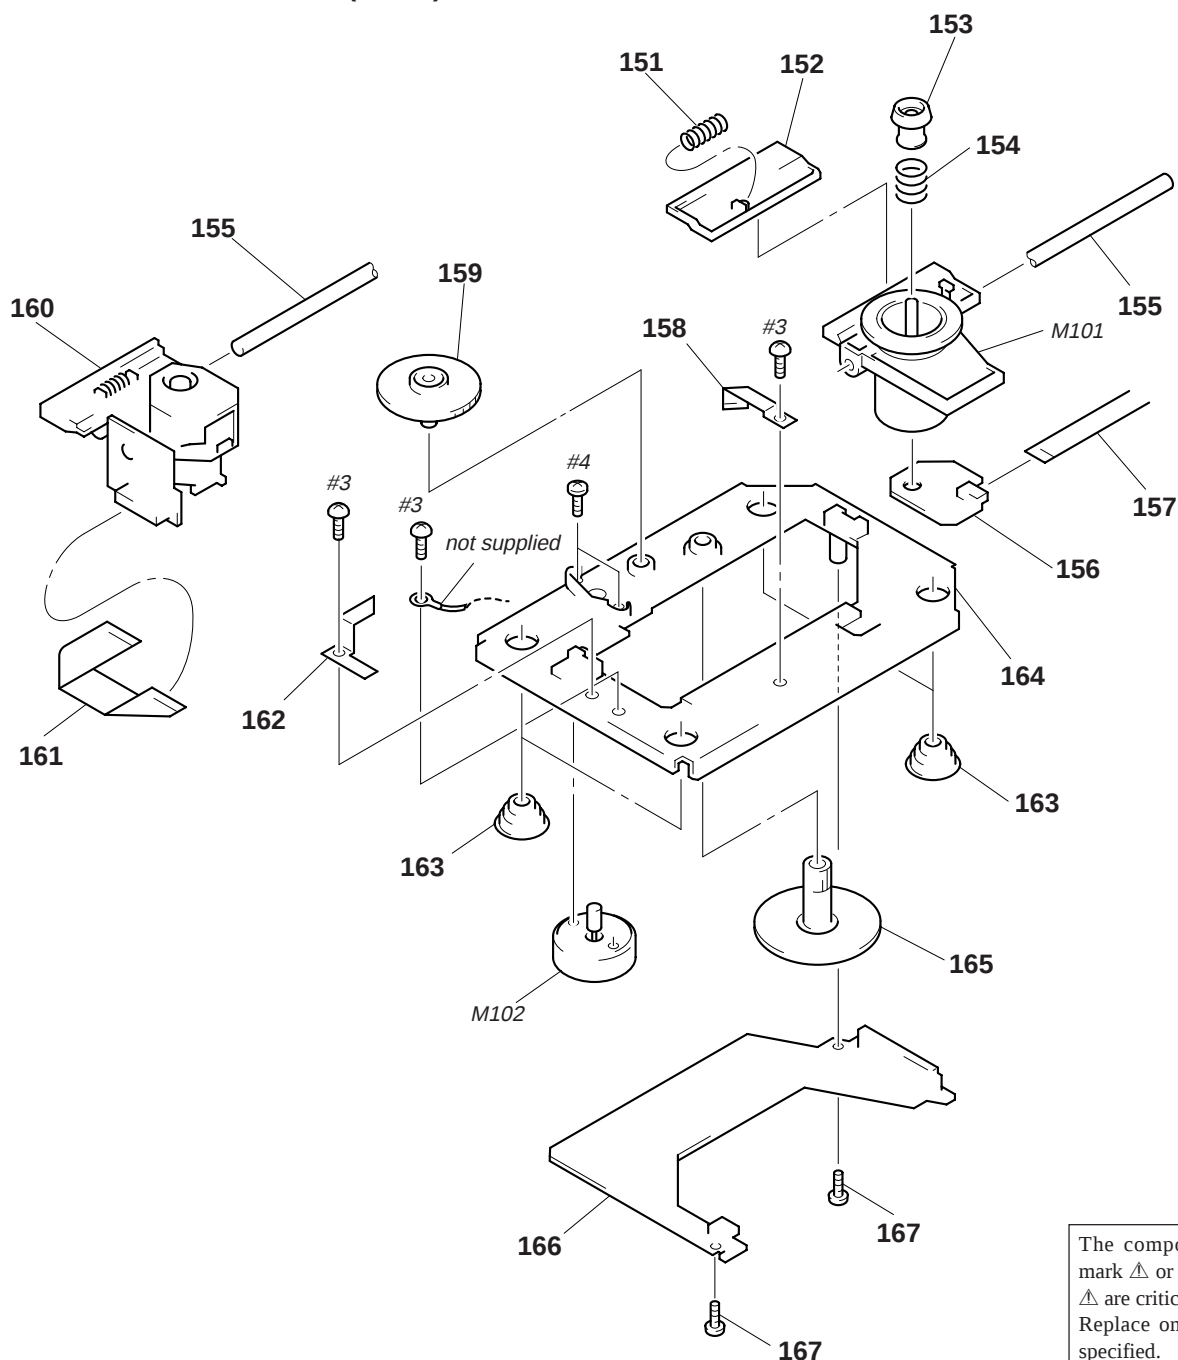

Ref. No.	Part No.	Description	Remark
151	4-977-925-01	SPRING(SLIDE BASE),COMPRESSION	
152	4-977-926-01	RACK, SLIDE	
153	4-977-915-01	CAP, CENTERING	
154	4-977-927-01	SPRING (CENTERING),COMPRESSION	
155	4-977-923-01	SHAFT, SLED	
* 156	1-658-708-11	SPINDLE BOARD	
157	1-775-990-11	WIRE (FLAT TYPE) (5 CORE)	
* 158	4-977-928-01	SPRING (SPINDLE), LEAF	
159	4-977-921-01	GEAR (B), FLAT	
⚠ 160	8-848-376-01	OPTICAL PICK-UP KSS-213B/S-N	

Ref. No.	Part No.	Description	Remark
161	1-775-991-11	WIRE (FLAT TYPE) (16 CORE)	
* 162	4-977-924-01	SPRING (OP), LEAF	
163	4-951-940-01	INSULATOR (BU)	
* 164	4-977-918-01	BASE (OUTSERT)	
165	4-977-920-01	GEAR (C), FLAT	
* 166	1-658-709-11	SLED BOARD	
167	4-951-620-01	SCREW (2.6X8), +BVTP	
M101	X-4947-304-1	MOTOR ASSY (SPINDLE)	
M102	X-4947-303-1	MOTOR ASSY (SLED)	

SECTION 8 ELECTRICAL PARTS LIST

BD

Note:

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable

- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
*	A-4673-722-A	BD BOARD, COMPLETE *****					C162	1-163-038-91	CERAMIC CHIP	0.1uF			25V
		< CAPACITOR >					C171	1-163-005-11	CERAMIC CHIP	470PF	10%		50V
							C172	1-163-005-11	CERAMIC CHIP	470PF	10%		50V
							C173	1-164-232-11	CERAMIC CHIP	0.01uF			50V
							< CONNECTOR >						
C101	1-163-005-11	CERAMIC CHIP	470PF	10%		50V	CN101	1-770-072-11	CONNECTOR, FFC 23P				
C102	1-163-038-91	CERAMIC CHIP	0.1uF			25V	CN102	1-750-753-11	CONNECTOR, FFC/FPC 21P				
C103	1-163-005-11	CERAMIC CHIP	470PF	10%		50V	CN103	1-774-653-21	PIN, CONNECTOR (PC BOARD) 3P				
C105	1-135-155-21	TANTALUM CHIP	4.7uF	10%		16V	< DIODE >						
C106	1-163-038-91	CERAMIC CHIP	0.1uF			25V	D101	8-719-016-74	DIODE 1SS352				
C107	1-163-038-91	CERAMIC CHIP	0.1uF			25V	< IC >						
C108	1-163-035-00	CERAMIC CHIP	0.047uF			50V	IC101	8-752-369-78	IC CXD2545Q				
C109	1-163-145-00	CERAMIC CHIP	0.0015uF	5%		50V	IC102	8-759-071-79	IC BA6297AFP				
C110	1-163-017-00	CERAMIC CHIP	0.0047uF	5%		50V	IC103	8-752-072-45	IC CXA1821M-T6				
C111	1-163-251-11	CERAMIC CHIP	100PF	5%		50V	< COIL >						
C112	1-163-038-91	CERAMIC CHIP	0.1uF			25V	L101	1-414-234-11	INDUCTOR, FERRITE BEAD				
C113	1-163-038-91	CERAMIC CHIP	0.1uF			25V	< TRANSISTOR >						
C115	1-126-607-11	ELECT CHIP	47uF	20%		4V	Q101	8-729-010-08	TRANSISTOR MSB710-R				
C116	1-126-607-11	ELECT CHIP	47uF	20%		4V	Q102	8-729-010-08	TRANSISTOR MSB710-R				
C117	1-126-209-11	ELECT	100uF	20%		4V	< RESISTOR >						
C118	1-163-275-11	CERAMIC CHIP	0.001uF	5%		50V	R101	1-216-077-00	METAL CHIP	15K	5%		1/10W
C119	1-163-231-11	CERAMIC CHIP	15PF	5%		50V	R102	1-216-097-91	METAL GLAZE	100K	5%		1/10W
C120	1-163-251-11	CERAMIC CHIP	100PF	5%		50V	R103	1-216-077-00	METAL CHIP	15K	5%		1/10W
C123	1-164-232-11	CERAMIC CHIP	0.01uF			50V	R104	1-216-085-00	METAL CHIP	33K	5%		1/10W
C124	1-164-005-11	CERAMIC CHIP	0.47uF			25V	R105	1-216-097-91	METAL GLAZE	100K	5%		1/10W
C131	1-164-346-11	CERAMIC CHIP	1uF			16V	R106	1-216-061-00	METAL CHIP	3.3K	5%		1/10W
C132	1-164-346-11	CERAMIC CHIP	1uF			16V	R107	1-216-061-00	METAL CHIP	3.3K	5%		1/10W
C140	1-163-038-91	CERAMIC CHIP	0.1uF			25V	R108	1-216-073-00	METAL CHIP	10K	5%		1/10W
C141	1-163-038-91	CERAMIC CHIP	0.1uF			25V	R109	1-216-121-91	METAL GLAZE	1M	5%		1/10W
C151	1-163-005-11	CERAMIC CHIP	470PF	10%		50V	R110	1-216-025-91	METAL GLAZE	100	5%		1/10W
C152	1-163-005-11	CERAMIC CHIP	470PF	10%		50V	R112	1-216-049-91	METAL GLAZE	1K	5%		1/10W
C153	1-163-038-91	CERAMIC CHIP	0.1uF			25V	R113	1-216-073-00	METAL CHIP	10K	5%		1/10W
C154	1-164-336-11	CERAMIC CHIP	0.33uF			25V							
C155	1-163-005-11	CERAMIC CHIP	470PF	10%		50V							
C156	1-163-005-11	CERAMIC CHIP	470PF	10%		50V							
C157	1-163-023-00	CERAMIC CHIP	0.015uF	5%		50V							
C158	1-163-023-00	CERAMIC CHIP	0.015uF	5%		50V							
C159	1-163-019-00	CERAMIC CHIP	0.0068uF	10%		50V							
C160	1-164-161-11	CERAMIC CHIP	0.0022uF	10%		100V							
C161	1-163-038-91	CERAMIC CHIP	0.1uF			25V							

BD

DISPLAY

Ref. No.	Part No.	Description				Remark
R114	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R117	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R118	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R121	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R122	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R123	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R124	1-216-097-91	METAL GLAZE	100K	5%	1/10W	
R125	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R126	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R127	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R131	1-216-037-00	METAL CHIP	330	5%	1/10W	
R133	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R134	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R135	1-216-295-91	CONDUCTOR, CHIP(2012)				
R136	1-216-295-91	CONDUCTOR, CHIP(2012)				
R137	1-216-295-91	CONDUCTOR, CHIP(2012)				
R138	1-216-295-91	CONDUCTOR, CHIP(2012)				
R140	1-216-295-91	CONDUCTOR, CHIP(2012)				
R141	1-216-089-91	METAL GLAZE	47K	5%	1/10W	
R142	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R143	1-216-103-91	METAL GLAZE	180K	5%	1/10W	
R144	1-216-103-91	METAL GLAZE	180K	5%	1/10W	
R145	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R146	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R147	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R148	1-216-001-00	METAL CHIP	10	5%	1/10W	
R149	1-216-003-11	METAL GLAZE	12	5%	1/10W	
R151	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R152	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R153	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R154	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R155	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R156	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R157	1-216-105-91	METAL GLAZE	220K	5%	1/10W	
R158	1-216-105-91	METAL GLAZE	220K	5%	1/10W	
R159	1-216-101-00	METAL CHIP	150K	5%	1/10W	
R160	1-216-097-91	METAL GLAZE	100K	5%	1/10W	
R161	1-216-308-00	METAL CHIP	4.7	5%	1/10W	
R162	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R163	1-216-105-91	METAL GLAZE	220K	5%	1/10W	
R164	1-216-295-91	CONDUCTOR, CHIP(2012)				
R165	1-216-295-91	CONDUCTOR, CHIP(2012)				
R166	1-216-295-91	CONDUCTOR, CHIP(2012)				
R171	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R172	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R173	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R174	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R175	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R176	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R177	1-216-025-91	METAL GLAZE	100	5%	1/10W	

Ref. No.	Part No.	Description				Remark
		< SWITCH >				
S152	1-762-010-11	SWITCH, LEVER (LOAD IN SW)				
S153	1-762-010-11	SWITCH, LEVER (LOAD OUT SW)				

*	A-4673-819-A	DISPLAY BOARD, COMPLETE				

		< CAPACITOR >				
C801	1-164-159-21	CERAMIC	0.1uF		50V	
C802	1-164-159-21	CERAMIC	0.1uF		50V	
C803	1-164-159-21	CERAMIC	0.1uF		50V	
C804	1-161-494-00	CERAMIC	0.022uF		25V	
		< CONNECTOR >				
* CN801	1-568-865-11	SOCKET, CONNECTOR 23P				
		< FLUORESCENT INDICATOR >				
FLD801	1-519-757-11	INDICATOR TUBE, FLUORESCENT				
		< IC >				
IC801	8-752-869-37	IC CXP82316-060Q				
IC802	8-741-810-59	IC SBX1810-59				
		< TRANSISTOR >				
Q801	8-729-029-67	TRANSISTOR DTC114ESA-TP				
		< RESISTOR >				
R801	1-249-441-11	CARBON	100K	5%	1/4W	
R802	1-249-427-11	CARBON	6.8K	5%	1/4W	
R803	1-249-427-11	CARBON	6.8K	5%	1/4W	
R804	1-249-429-11	CARBON	10K	5%	1/4W	
R805	1-249-427-11	CARBON	6.8K	5%	1/4W	
R806	1-249-427-11	CARBON	6.8K	5%	1/4W	
R807	1-249-415-11	CARBON	680	5%	1/4W	
R808	1-249-417-11	CARBON	1K	5%	1/4W	
R809	1-249-419-11	CARBON	1.5K	5%	1/4W	
R810	1-249-421-11	CARBON	2.2K	5%	1/4W	
R811	1-249-417-11	CARBON	1K	5%	1/4W	
R812	1-249-415-11	CARBON	680	5%	1/4W	
R813	1-249-417-11	CARBON	1K	5%	1/4W	
R814	1-249-419-11	CARBON	1.5K	5%	1/4W	
R816	1-249-429-11	CARBON	10K	5%	1/4W	
R817	1-249-427-11	CARBON	6.8K	5%	1/4W	
R818	1-249-429-11	CARBON	10K	5%	1/4W	
R819	1-249-429-11	CARBON	10K	5%	1/4W	
		< SWITCH >				
S801	1-554-303-21	SWITCH, TACTILE (ENTER)				
S802	1-554-303-21	SWITCH, TACTILE (CLEAR)				

DISPLAY

HEADPHONE

KEY

LOADING

MAIN

Ref. No.	Part No.	Description	Remark
S803	1-554-303-21	SWITCH, TACTILE (CHECK)	
S804	1-554-303-21	SWITCH, TACTILE (▶▶)	
S805	1-554-303-21	SWITCH, TACTILE (◀◀)	
S806	1-554-303-21	SWITCH, TACTILE (■)	
S807	1-554-303-21	SWITCH, TACTILE (▨)	
S808	1-554-303-21	SWITCH, TACTILE (▷)	
S809	1-554-303-21	SWITCH, TACTILE (△ OPEN/CLOSE)	
S810	1-473-452-11	ENCODER, ROTARY (◀◀ AMS ▶▶)	
< VIBRATOR >			
X801	1-577-082-11	VIBRATOR, CERAMIC (4MHZ)	

*	1-658-815-11	HEADPHONE BOARD	*****
< MOTOR >			
M151	A-4660-968-A	MOTOR ASSY (LOADING)	

*	4-962-201-01	PLATE (HP), GROUND	
< CAPACITOR >			
C350	1-162-294-31	CERAMIC	0.001uF 10% 50V
C351	1-162-294-31	CERAMIC	0.001uF 10% 50V
C352	1-164-159-21	CERAMIC	0.1uF 50V
< JACK >			
J350	1-750-162-61	JACK (LARGE TYPE)(PHONES)	
< COIL >			
L350	1-412-473-41	INDUCTOR	0uH
L351	1-412-473-41	INDUCTOR	0uH
L352	1-412-473-41	INDUCTOR	0uH
< VARIABLE RESISTOR >			
RV350	1-223-926-11	RES, VAR, CARBON 1K/1K	(LINE OUT PHONE LEVEL)

*	1-658-813-11	KEY BOARD	*****
< RESISTOR >			
R820	1-249-415-11	CARBON	680 5% 1/4W
R821	1-249-417-11	CARBON	1K 5% 1/4W
R822	1-249-421-11	CARBON	2.2K 5% 1/4W
R823	1-249-423-11	CARBON	3.3K 5% 1/4W
R824	1-249-427-11	CARBON	6.8K 5% 1/4W
R825	1-249-431-11	CARBON	15K 5% 1/4W
R826	1-249-419-11	CARBON	1.5K 5% 1/4W
< SWITCH >			
S820	1-554-303-21	SWITCH, TACTILE (TIME)	
S821	1-554-303-21	SWITCH, TACTILE (FADER)	

Ref. No.	Part No.	Description	Remark
S822	1-554-303-21	SWITCH, TACTILE (REPEAT)	
S823	1-554-303-21	SWITCH, TACTILE (EDIT/TIME FADE)	
S824	1-554-303-21	SWITCH, TACTILE (PEAK SEARCH)	
S825	1-554-303-21	SWITCH, TACTILE (AUTO SPACE)	
S826	1-554-303-21	SWITCH, TACTILE (MUSIC SCAN)	
S827	1-554-118-00	SWITCH, PUSH (1 KEY)(POWER)	
S828	1-554-303-21	SWITCH, TACTILE (PLAY MODE)	

*	1-658-710-11	LOADING BOARD	*****
< MOTOR >			
M151	A-4660-968-A	MOTOR ASSY (LOADING)	

*	A-4673-818-A	MAIN BOARD, COMPLETE	*****
< CAPACITOR >			
1-537-770-21	TERMINAL BOARD, GROUND		
3-309-144-21	HEAT SINK		
7-685-871-01	SCREW +BVTT 3X6 (S)		
< CAPACITOR >			
C301	1-164-159-21	CERAMIC	0.1uF 50V
C302	1-162-294-31	CERAMIC	0.001uF 10% 50V
C303	1-162-306-11	CERAMIC	0.01uF 30% 16V
C304	1-161-494-00	CERAMIC	0.022uF 25V
C305	1-124-443-00	ELECT	100uF 20% 10V
C306	1-126-962-11	ELECT	3.3uF 20% 50V
C307	1-161-494-00	CERAMIC	0.022uF 25V
C308	1-164-159-21	CERAMIC	0.1uF 50V
C353	1-162-290-31	CERAMIC	470PF 10% 50V
C356	1-164-159-21	CERAMIC	0.1uF 50V
C357	1-162-208-31	CERAMIC	24PF 5% 50V
C358	1-102-942-00	CERAMIC	5.0PF ±0.5PF 50V
C359	1-102-942-00	CERAMIC	5.0PF ±0.5PF 50V
C360	1-136-850-11	FILM	0.1uF 5% 63V
C361	1-126-063-11	ELECT	100uF 20% 50V
C362	1-124-994-11	ELECT	100uF 20% 10V
C363	1-162-282-31	CERAMIC	100PF 10% 50V
C391	1-164-159-21	CERAMIC	0.1uF 50V
C392	1-164-159-21	CERAMIC	0.1uF 50V
C394	1-164-159-21	CERAMIC	0.1uF 50V
C400	1-164-159-21	CERAMIC	0.1uF 50V
C401	1-124-122-11	ELECT	100uF 20% 50V
C402	1-164-159-21	CERAMIC	0.1uF 50V
C403	1-124-122-11	ELECT	100uF 20% 50V
C404	1-136-850-11	FILM	0.1uF 5% 63V
C405	1-136-850-11	FILM	0.1uF 5% 63V
C406	1-136-850-11	FILM	0.1uF 5% 63V
C407	1-136-850-11	FILM	0.1uF 5% 63V

MAIN

Ref. No.	Part No.	Description	Remark		
C408	1-136-808-11	FILM	100PF	5%	100V
C410	1-102-816-00	CERAMIC	120PF	5%	50V
C411	1-102-816-00	CERAMIC	120PF	5%	50V
C412	1-106-343-00	MYLAR	1000PF	5%	200V
C413	1-130-484-00	MYLAR	0.012uF	5%	50V
C414	1-136-850-11	FILM	0.1uF	5%	63V
C415	1-126-063-11	ELECT	100uF	20%	50V
C434	1-136-850-11	FILM	0.1uF	5%	63V
C500	1-164-159-21	CERAMIC	0.1uF		50V
C501	1-124-122-11	ELECT	100uF	20%	50V
C502	1-164-159-21	CERAMIC	0.1uF		50V
C503	1-124-122-11	ELECT	100uF	20%	50V
C504	1-136-850-11	FILM	0.1uF	5%	63V
C505	1-136-850-11	FILM	0.1uF	5%	63V
C506	1-136-850-11	FILM	0.1uF	5%	63V
C507	1-136-850-11	FILM	0.1uF	5%	63V
C508	1-136-808-11	FILM	100PF	5%	100V
C510	1-102-816-00	CERAMIC	120PF	5%	50V
C511	1-102-816-00	CERAMIC	120PF	5%	50V
C512	1-106-343-00	MYLAR	1000PF	5%	200V
C513	1-130-484-00	MYLAR	0.012uF	5%	50V
C514	1-136-850-11	FILM	0.1uF	5%	63V
C515	1-126-063-11	ELECT	100uF	20%	50V
C534	1-136-850-11	FILM	0.1uF	5%	63V
C910	1-136-802-11	FILM	0.015uF	5%	100V
C911	1-124-929-11	ELECT	22uF	20%	100V
C912	1-136-850-11	FILM	0.1uF	5%	63V
C913	1-162-306-11	CERAMIC	0.01uF	30%	16V
C915	1-124-907-11	ELECT	10uF	20%	50V
C920	1-162-294-31	CERAMIC	0.001uF	10%	50V
C921	1-126-962-11	ELECT	3.3uF	20%	50V
C922	1-164-159-21	CERAMIC	0.1uF		50V
C923	1-161-494-00	CERAMIC	0.022uF		25V
C930	1-124-360-00	ELECT	1000uF	20%	16V
C931	1-124-523-11	ELECT	4700uF	20%	16V
C932	1-104-665-11	ELECT	100uF	20%	16V
C933	1-161-494-00	CERAMIC	0.022uF		25V
C935	1-128-200-11	ELECT	47uF	20%	63V
C937	1-136-850-11	FILM	0.1uF	5%	63V
C939	1-124-916-11	ELECT	22uF	20%	63V
C941	1-124-473-11	ELECT	1000uF	20%	10V
C942	1-124-120-11	ELECT	220uF	20%	25V
C943	1-162-294-31	CERAMIC	0.001uF	10%	50V
C944	1-136-850-11	FILM	0.1uF	5%	63V
C945	1-136-850-11	FILM	0.1uF	5%	63V
< CONNECTOR >					
CN301	1-750-428-11	CONNECTOR, FFC/FPC 23P			
CN302	1-750-428-11	CONNECTOR, FFC/FPC 23P			
CN351	1-506-468-11	PIN, CONNECTOR 3P			
CN951	1-766-269-11	PIN, CONNECTOR (PC BOARD) 7P			

Ref. No.	Part No.	Description	Remark
< DIODE >			
D301	8-719-010-34	DIODE UZ-4.7BSC	
D302	8-719-911-19	DIODE 1SS119	
D303	8-719-911-19	DIODE 1SS119	
D910	8-719-200-82	DIODE 11ES2	
D911	8-719-911-19	DIODE 1SS119	
D912	8-719-982-15	DIODE MTZJ-27B	
D913	8-719-110-03	DIODE RD7.5ESB2	
D930	8-719-210-21	DIODE 11EQS04	
D931	8-719-210-21	DIODE 11EQS04	
D932	8-719-210-21	DIODE 11EQS04	
D933	8-719-210-21	DIODE 11EQS04	
D934	8-719-911-19	DIODE 1SS119	
D935	8-719-921-40	DIODE MTZJ-4.7C	
D936	8-719-911-19	DIODE 1SS119	
D937	8-719-115-38	DIODE RD5.1JS-T1B2	
< IC >			
IC301	8-759-822-09	IC LB1641	
IC303	8-759-370-62	IC CXD8505BQ	
IC304	8-759-710-59	IC NJM4580D-D	
IC305	8-749-921-12	IC GP1F32T (DIGITAL OUT)	
IC401	8-759-971-80	IC AD712JN	
IC501	8-759-971-80	IC AD712JN	
IC920	8-759-636-16	IC M51957AL	
IC930	8-759-710-59	IC NJM4580D-D	
IC931	8-759-710-59	IC NJM4580D-D	
< JACK >			
J301	1-774-727-11	JACK, PIN 2P (LINE OUT)	
< COIL >			
L301	1-410-322-11	INDUCTOR 3.3uH	
L302	1-410-507-11	INDUCTOR 6.8uH	
L303	1-410-503-11	INDUCTOR 3.3uH	
L304	1-410-322-11	INDUCTOR 3.3uH	
L305	1-412-473-41	INDUCTOR 0uH	
L306	1-412-473-41	INDUCTOR 0uH	
L360	1-410-507-11	INDUCTOR 6.8uH	
L361	1-410-507-11	INDUCTOR 6.8uH	
L362	1-410-507-11	INDUCTOR 6.8uH	
L363	1-412-473-41	INDUCTOR 0uH	
< TRANSISTOR >			
Q301	8-729-029-56	TRANSISTOR DTA144ESA-TP	
Q401	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q403	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q404	8-729-029-56	TRANSISTOR DTA144ESA-TP	
Q501	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q503	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q504	8-729-029-56	TRANSISTOR DTA144ESA-TP	
Q910	8-729-019-64	TRANSISTOR 2SB1041	

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
Q911	8-729-119-76	TRANSISTOR	2SA1175-HFE				R509	1-247-830-11	CARBON	910	5%	1/4W	
Q920	8-729-030-03	TRANSISTOR	DTC144ESA-TP				R510	1-249-420-11	CARBON	1.8K	5%	1/4W	
Q930	8-729-104-18	TRANSISTOR	2SC3514-Q				R511	1-247-891-00	CARBON	330K	5%	1/4W	
Q931	8-729-030-03	TRANSISTOR	DTC144ESA-TP				R512	1-249-414-11	CARBON	560	5%	1/4W	
Q932	8-729-029-56	TRANSISTOR	DTA144ESA-TP				R513	1-247-807-31	CARBON	100	5%	1/4W	
Q933	8-729-021-82	TRANSISTOR	2SD2396K				R514	1-249-393-11	CARBON	10	5%	1/4W	
Q934	8-729-021-82	TRANSISTOR	2SD2396K				R517	1-249-425-11	CARBON	4.7K	5%	1/4W	
< RESISTOR >							R518	1-249-441-11	CARBON	100K	5%	1/4W	
R300	1-249-417-11	CARBON	1K	5%	1/4W		R519	1-249-425-11	CARBON	4.7K	5%	1/4W	
R301	1-249-417-11	CARBON	1K	5%	1/4W		R520	1-247-826-00	CARBON	620	5%	1/4W	
R302	1-249-417-11	CARBON	1K	5%	1/4W		R551	1-249-435-11	CARBON	33K	5%	1/4W	
R303	1-249-417-11	CARBON	1K	5%	1/4W		R552	1-249-435-11	CARBON	33K	5%	1/4W	
R304	1-249-417-11	CARBON	1K	5%	1/4W		R553	1-249-429-11	CARBON	10K	5%	1/4W	
R305	1-249-415-11	CARBON	680	5%	1/4W		R554	1-249-435-11	CARBON	33K	5%	1/4W	
R306	1-247-895-91	CARBON	470K	5%	1/4W		R555	1-249-402-11	CARBON	56	5%	1/4W	
R308	1-249-429-11	CARBON	10K	5%	1/4W		R910	1-249-390-11	CARBON	5.6	5%	1/4W	
R312	1-249-417-11	CARBON	1K	5%	1/4W		R911	1-249-390-11	CARBON	5.6	5%	1/4W	
R313	1-247-807-31	CARBON	100	5%	1/4W		R912	1-249-423-11	CARBON	3.3K	5%	1/4W	
R315	1-249-423-11	CARBON	3.3K	5%	1/4W		R913	1-249-423-11	CARBON	3.3K	5%	1/4W	
R317	1-249-441-11	CARBON	100K	5%	1/4W		R914	1-247-807-31	CARBON	100	5%	1/4W	
R401	1-249-435-11	CARBON	33K	5%	1/4W		R915	1-249-429-11	CARBON	10K	5%	1/4W	
R402	1-249-435-11	CARBON	33K	5%	1/4W		R916	1-249-438-11	CARBON	56K	5%	1/4W	
R403	1-249-435-11	CARBON	33K	5%	1/4W		R917	1-247-863-91	CARBON	22K	5%	1/4W	
R404	1-249-435-11	CARBON	33K	5%	1/4W		R918	1-247-807-31	CARBON	100	5%	1/4W	
R405	1-249-432-11	CARBON	18K	5%	1/4W		R920	1-249-436-11	CARBON	39K	5%	1/4W	
R406	1-249-432-11	CARBON	18K	5%	1/4W		R921	1-249-431-11	CARBON	15K	5%	1/4W	
R407	1-247-863-91	CARBON	22K	5%	1/4W		R922	1-249-423-11	CARBON	3.3K	5%	1/4W	
R408	1-247-863-91	CARBON	22K	5%	1/4W		R923	1-249-429-11	CARBON	10K	5%	1/4W	
R409	1-247-830-11	CARBON	910	5%	1/4W		R930	1-249-411-11	CARBON	330	5%	1/4W	
R410	1-249-420-11	CARBON	1.8K	5%	1/4W		R931	1-249-421-11	CARBON	2.2K	5%	1/4W	
R411	1-247-891-00	CARBON	330K	5%	1/4W		R932	1-249-436-11	CARBON	39K	5%	1/4W	
R412	1-249-414-11	CARBON	560	5%	1/4W		R933	1-247-807-31	CARBON	100	5%	1/4W	
R413	1-247-807-31	CARBON	100	5%	1/4W		R934	1-249-421-11	CARBON	2.2K	5%	1/4W	
R414	1-249-393-11	CARBON	10	5%	1/4W		R935	1-249-422-11	CARBON	2.7K	5%	1/4W	
R417	1-249-425-11	CARBON	4.7K	5%	1/4W		R936	1-249-393-11	CARBON	10	5%	1/4W	
R418	1-249-441-11	CARBON	100K	5%	1/4W		R937	1-249-417-11	CARBON	1K	5%	1/4W	
R419	1-249-425-11	CARBON	4.7K	5%	1/4W		R938	1-247-807-31	CARBON	100	5%	1/4W	
R420	1-247-826-00	CARBON	620	5%	1/4W		R939	1-249-425-11	CARBON	4.7K	5%	1/4W	
R451	1-249-435-11	CARBON	33K	5%	1/4W		R940	1-249-423-11	CARBON	3.3K	5%	1/4W	
R452	1-249-435-11	CARBON	33K	5%	1/4W		R941	1-249-428-11	CARBON	8.2K	5%	1/4W	
R453	1-249-429-11	CARBON	10K	5%	1/4W		R942	1-249-425-11	CARBON	4.7K	5%	1/4W	
R454	1-249-435-11	CARBON	33K	5%	1/4W		R943	1-249-425-11	CARBON	4.7K	5%	1/4W	
R455	1-249-402-11	CARBON	56	5%	1/4W		< VIBRATOR >						
R501	1-249-435-11	CARBON	33K	5%	1/4W		X301	1-760-955-11	VIBRATOR, CRYSTAL (45.184MHZ)				
R502	1-249-435-11	CARBON	33K	5%	1/4W		*****						
R503	1-249-435-11	CARBON	33K	5%	1/4W								
R504	1-249-435-11	CARBON	33K	5%	1/4W								
R505	1-249-432-11	CARBON	18K	5%	1/4W								
R506	1-249-432-11	CARBON	18K	5%	1/4W								
R507	1-247-863-91	CARBON	22K	5%	1/4W								
R508	1-247-863-91	CARBON	22K	5%	1/4W								

SLED

SPINDLE

TRANSFORMER

Ref. No.	Part No.	Description	Remark
*	1-658-709-11	SLED BOARD *****	
		< CONNECTOR >	
CN104	1-774-380-11	CONNECTOR, FFC/FPC 16P	
CN105	1-568-838-11	SOCKET, CONNECTOR 21P	
* CN106	1-750-737-11	CONNECTOR, FFC/FPC 5P	
		< MOTOR >	
M102	X-4947-303-1	MOTOR ASSY (SLED)	

*	1-658-708-11	SPINDLE BOARD *****	
		< CONNECTOR >	
* CN107	1-568-848-11	SOCKET, CONNECTOR 5P	
		< MOTOR >	
M101	X-4947-304-1	MOTOR ASSY (SPINDLE)	
		< SWITCH >	
S151	1-571-958-11	SWITCH, PUSH (1 KEY)(LIMIT SW)	

*	1-658-814-11	TRANSFORMER BOARD *****	
		< CAPACITOR >	
C901	1-164-159-21	CERAMIC 0.1uF	50V
C902	1-164-159-21	CERAMIC 0.1uF	50V
C903	1-164-159-21	CERAMIC 0.1uF	50V
C904	1-164-159-21	CERAMIC 0.1uF	50V
		< CONNECTOR >	
CN901	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P	
		< TRANSFORMER >	
△ T901	1-429-367-11	TRANSFORMER, POWER	

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
55	1-776-235-11	WIRE (FLAT TYPE) (23 CORE)	
101	1-452-820-11	MAGNET (ASSY)	
105	1-776-998-11	WIRE (FLAT TYPE) (21 CORE)	
157	1-775-990-11	WIRE (FLAT TYPE) (5 CORE)	
△ 160	8-848-376-01	OPTICAL PICK-UP KSS-213B/S-N	
		< MOTOR >	
161	1-775-991-11	WIRE (FLAT TYPE) (16 CORE)	
M101	X-4947-304-1	MOTOR ASSY (SPINDLE)	
M102	X-4947-303-1	MOTOR ASSY (SLED)	
M151	A-4660-968-A	MOTOR ASSY (LOADING)	
△ CNP901	1-575-651-21	CORD, POWER	
△ T901	1-429-367-11	TRANSFORMER, POWER	

		ACCESSORIES & PACKING MATERIALS *****	
	1-473-125-11	REMOTE COMMANDER (RM-D820)	
	1-590-925-31	CORD, CONNECTION (AUDIO 100cm)	
	3-810-116-11	MANUAL, INSTRUCTION (ENGLISH,FRENCH,SPANISH,SWEDISH)(AEP)	
	3-810-116-21	MANUAL, INSTRUCTION (GERMAN,DUTCH,ITALIAN,PORTUGUESE)(AEP)	
	3-810-116-31	MANUAL, INSTRUCTION (GERMAN)(G)	
*	3-948-574-01	SHEET (ROLL), PROTECTION	
	4-962-615-01	COVER, BATTERY (for RM-D820)	
*	4-979-127-21	INDIVIDUAL CARTON	
*	4-982-101-01	CUSHION	

		***** HARDWARE LIST *****	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#2	7-685-871-01	SCREW +BVTT 3X6 (S)	
#3	7-682-548-04	SCREW +BVTT 3X8 (S)	
#4	7-627-852-07	SCREW, PRECISION +P 1.7X2.5	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.