

STR-KG800

SERVICE MANUAL

Ver. 1.1 2008.05

AEP Model
Australian Model



- STR-KG800 is the receiver section in HT-DDWG800.

This receiver incorporates Dolby® Digital and Pro Logic Surround and the DTS® Digital Surround System.

* Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

This receiver incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

“x.v.Colour” and “x.v.Colour” logo are trademarks of Sony Corporation.

“BRAVIA” and BRAVIA are trademarks of Sony Corporation.

SPECIFICATIONS

Amplifier section

Power Output¹⁾

Models of area code CEL, AU

Stereo mode (rated) (6 ohms, 1 kHz, THD 1%)
90 W + 90 W

Surround mode (reference) (6 ohms, 1 kHz, THD 10%)

RMS output²⁾

FRONT:135 W

per channel

CENTER:135 W

SURROUND:135 W

per channel

¹⁾ Measured under the following conditions:

Area code	Power requirements
CEL	230 V AC, 50 Hz
AU	240 V AC, 50 Hz

²⁾ Reference power output for front, center and surround speakers. Depending on the sound field settings and the source, there may be no sound output.

Inputs

Analog

Sensitivity: 800 mV/
50 kohms

Digital (Coaxial)

Impedance: 75 ohms

Outputs (Analog)

AUDIO OUT

Voltage: 800 mV/
10 kohms

SUB WOOFER

Voltage: 2 V/1 kohm

Reproduction frequency range:

28 – 20,000 Hz

Tone

Gain levels ±6 dB, 1 dB step

FM tuner section

Tuning range

87.5 - 108.0 MHz

Antenna

FM wire antenna

Antenna terminals

75 ohms, unbalanced

Intermediate frequency

10.7 MHz

AM tuner section

Tuning range

Models of area code CEL, AU

With 9-kHz tuning scale:

531 – 1,602 kHz

Antenna

Loop antenna

Intermediate frequency

450 kHz

Video section

Inputs/Outputs

Video: 1 Vp-p, 75 ohms

COMPONENT VIDEO:

Y: 1 Vp-p, 75 ohms

PB/CB: 0.7 Vp-p, 75 ohms

PR/CR: 0.7 Vp-p, 75 ohms

80 MHz HD Pass Through

– Continued on next page –

MULTI CHANNEL AV RECEIVER

9-887-956-02

2008E05-1

© 2008.05

Sony Corporation

Audio Business Group

Published by Sony Techno Create Corporation

SONY®

General

Power requirements

Area code	Power requirements
CEL	230 V AC, 50/60 Hz
AU	240 V AC, 50 Hz

Power output (DIGITAL MEDIA PORT)
DC OUT: 5 V, 0.7 A MAX

Power consumption

Area code	Power consumption
CEL, AU	200 W

Power consumption (during standby mode)
0.3 W (When “CONTROL
FOR HDMI” in VIDEO
menu is set to “CTRL
OFF”)


Dimensions (width/height/depth) (Approx.)
430 × 157.5 × 318 mm
including projecting parts
and controls

Mass (Approx.) 7.8 kg

Design and specifications are subject to change
without notice.

About area codes

The area code of the receiver you purchased is
shown on the lower right portion of the rear panel
(see the illustration below).

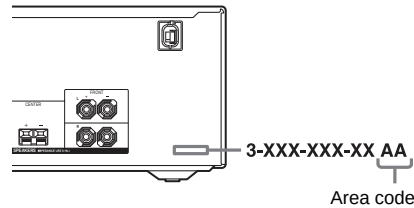

Any differences in operation, according to the area
code, are clearly indicated in the text, for example,
“Models of area code AA only”.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONET WARNING!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE
WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN
THE PARTS LIST ARE CRITICAL TO SAFE OPERATION.
REPLACE THESE COMPONENTS WITH SONY PARTS
WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS
MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

1. SERVICING NOTES	3
2. GENERAL	4
3. DISASSEMBLY	
3-1. Disassembly Flow	9
3-2. Case.....	9
3-3. Back Panel Block.....	10
3-4. Front Panel Block	10
3-5. Main Block	11
3-6. MAIN Board	11
4. TEST MODE	12
5. ELECTRICAL CHECK	14
6. DIAGRAMS	
6-1. Block Diagram - MAIN Section -.....	15
6-2. Block Diagram - HDMI Section -.....	16
6-3. Block Diagram - DSP Section -	17
6-4. Block Diagram - AUDIO Section -.....	18
6-5. Block Diagram - POWER SUPPLY Section -	19
6-6. Printed Wiring Board - MAIN Board -	21
6-7. Schematic Diagram - MAIN Board (1/3) -	22
6-8. Schematic Diagram - MAIN Board (2/3) -	23
6-9. Schematic Diagram - MAIN Board (3/3) -	24
6-10. Schematic Diagram - DIGITAL AB Board (1/5) -.....	25
6-11. Schematic Diagram - DIGITAL AB Board (2/5) -.....	26
6-12. Schematic Diagram - DIGITAL AB Board (3/5) -.....	27
6-13. Schematic Diagram - DIGITAL AB Board (4/5) -.....	28
6-14. Schematic Diagram - DIGITAL AB Board (5/5) -.....	29
6-15. Printed Wiring Board - DIGITAL AB Board (Component Side) -	30
6-16. Printed Wiring Board - DIGITAL AB Board (Conductor Side) -	31
6-17. Printed Wiring Boards - MIC/HEADPHONE Section -.....	32
6-18. Schematic Diagram - MIC/HEADPHONE Section -	33
6-19. Printed Wiring Board - HDMI Board (Side A) -	34
6-20. Printed Wiring Board - HDMI Board (Side B) -	35
6-21. Schematic Diagram - HDMI Board (1/2) -	36
6-22. Schematic Diagram - HDMI Board (2/2) -	37
6-23. Printed Wiring Boards - VIDEO Section -	38
6-24. Schematic Diagram - VIDEO Section -	39
6-25. Printed Wiring Boards - PANEL Section -	40
6-26. Schematic Diagram - PANEL Section -	41
6-27. Printed Wiring Board - DCDC CONVERTER Board -	42
6-28. Schematic Diagram - DCDC CONVERTER Board -	43
6-29. Printed Wiring Board - STANDBY Board -	44
6-30. Schematic Diagram - STANDBY Board -	45
7. EXPLODED VIEWS	
7-1. Front Panel Section	61
7-2. Back Panel Section	62
7-3. MAIN Section.....	63
8. ELECTRICAL PARTS LIST	64

SECTION 1

SERVICING NOTES

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.

Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.

Soldering irons using a temperature regulator should be set to about 350 °C.

Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!

- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

NOTE OF REPLACING THE IC1131 ON THE DIGITAL AB BOARD

IC1131 on the DIGITAL AB board cannot exchange with single. When IC1131 on the DIGITAL AB board is damaged, exchange the entire mounted board.

NOTE OF REPLACING THE IC3511 AND IC3513 ON THE HDMI BOARD


IC3511 and IC3513 on the HDMI board cannot exchange with single. When IC3511 and IC3513 on the HDMI board are damaged, exchange the entire mounted board.

SECTION 2
GENERAL

This section is extracted
from instruction manual.

Receiver


Front panel

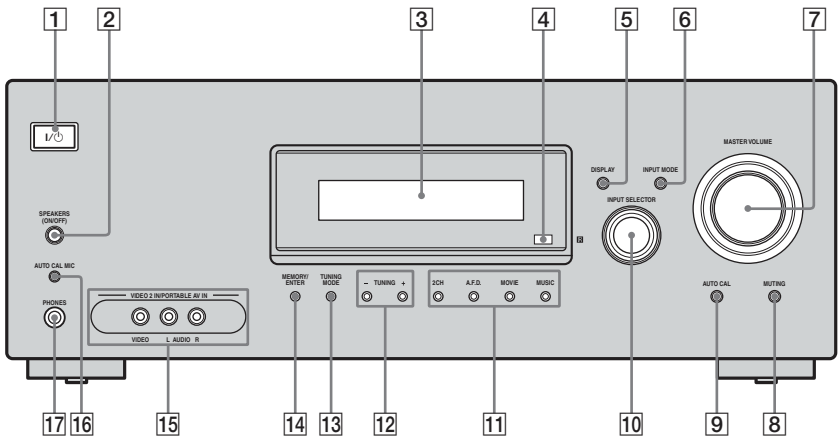

Name	Function
1 I/⏻ (on/standby)	Press to turn the receiver on or off.
2 SPEAKERS (ON/OFF)	Press to turn the speaker system on or off.
3 Display	The current status of the selected component or a list of selectable items appears here.
4 Remote sensor	Receives signals from remote commander.
5 DISPLAY	Press to select information displayed on the display.
6 INPUT MODE	Press to select the input mode when the same components are connected to both digital and analog jacks.
7 MASTER VOLUME	Turn to adjust the volume level of all speakers at the same time.
8 MUTE	Press to turn off the sound temporarily. Press MUTE again to restore the sound.
9 AUTO CAL	Press to activate the Auto Calibration function.

Name	Function
10 INPUT SELECTOR	Turn to select the input source to playback.
11 2CH A.F.D. MOVIE MUSIC	Press to select a sound field.
12 TUNING +/-	Press to scan a station.
13 TUNING MODE	Press to select the tuning mode.
14 MEMORY/ENTER	Press to store a station or enter the selection when selecting the settings.
15 VIDEO 2 IN/ PORTABLE AV IN jacks	Connects to a portable audio/video component such as a camcorder or video game.
16 AUTO CAL MIC jack	Connects to the supplied optimizer microphone for the Auto Calibration function.
17 PHONES jack	Connects to headphones.


About the indicators on the display

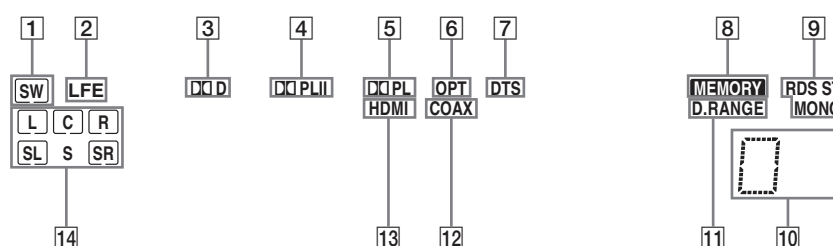

Name	Function
1 SW	Lights up when the audio signal is output from the SUB WOOFER jack.
2 LFE	Lights up when the disc being played back contains an LFE (Low Frequency Effect) channel and the LFE channel signal is actually being reproduced.
3 DDD	Lights up when the receiver is decoding Dolby Digital signals. Note When playing a Dolby Digital format disc, be sure that you have made digital connections and that INPUT MODE is set to "AUTO".
4 DPLII	Lights up when the Pro Logic II Movie/Music decoder is activated.
5 DPL	Lights up when the receiver applies Pro Logic processing to 2 channel signals in order to output the center and surround channel signals.
6 OPT	Lights up when INPUT MODE is set to "AUTO" and the source signal is a digital signal being input through the OPTICAL jack.
7 DTS	Lights up when the receiver is decoding DTS signals. Note When playing a DTS format disc, be sure that you have made digital connections and that INPUT MODE is set to "AUTO".
8 MEMORY	Lights up when a memory function, such as Preset Memory, etc., is activated.

Name	Function
9 Tuner indicators	Lights up when using the receiver to tune in radio stations, etc. Note "RDS" appears for models of area code CEL only.
10 Preset station indicators	Lights up when using the receiver to tune in preset radio stations.
11 D.RANGE	Lights up when dynamic range compression is activated.
12 COAX	Lights up when INPUT MODE is set to "AUTO" and the source signal is a digital signal being input through the COAXIAL jack.
13 HDMI	Lights up when the receiver recognizes a component connected via an HDMI IN jack.
14 Playback channel indicators	The letters (L, C, R, etc.) indicate the channels being played back. The boxes around the letters vary to show how the receiver downmixes the source sound. L R C SL SR S Example: Recording format (Front/ Surround): 3/2.1 Sound Field: A.F.D. AUTO

Rear panel

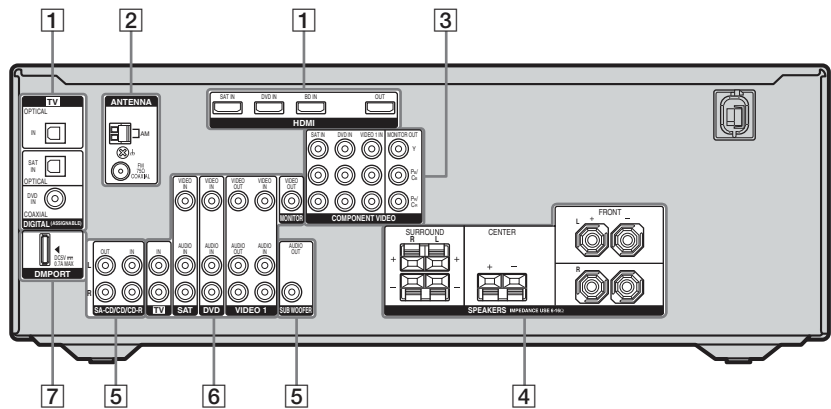

1 DIGITAL INPUT/OUTPUT section

	OPTICAL IN jacks	Connects to a DVD player, etc. The COAXIAL jack provides a better sound quality.
	COAXIAL IN jack	
	HDMI IN/OUT* jacks	Connects to a DVD player, Blu-ray disc player, etc. The image is output to a TV or a projector while the sound can be output from a TV or/and speakers connected to this receiver.

2 ANTENNA section

	FM ANTENNA jack	Connects to the supplied FM wire antenna.
	AM ANTENNA terminals	Connects to the supplied AM loop antenna.

3 COMPONENT VIDEO INPUT/OUTPUT section

	Green (Y)	Connects to a DVD player, TV, satellite tuner, etc. You can enjoy high quality image.
	Blue (Pb/Cb)	
	Red (Pr/Cr)	

4 SPEAKERS section

		Connects to the supplied speakers.

5 AUDIO INPUT/OUTPUT section

	White (L) AUDIO IN/OUT jacks	Connects to a Super Audio CD player, etc..
	Red (R)	
	Black AUDIO OUT jack	Connects to the supplied sub woofer.

6 VIDEO/AUDIO INPUT/OUTPUT section

	White (L) AUDIO IN/OUT jacks	Connects to a VCR, DVD player, etc..
	Red (R)	
	Yellow VIDEO IN/OUT* jacks	


7 DMPORT

	DMPort jack	Connects to a DIGITAL MEDIA PORT adapter.
--	-------------	---

* You can watch the selected input image when you connect the HDMI OUT or MONITOR OUT jack to a TV.

Remote commander

You can use the supplied RM-AAU023 Remote Commander to operate the receiver and to control the Sony audio/video components that the remote is assigned to operate. For details, see “Changing button assignments”.

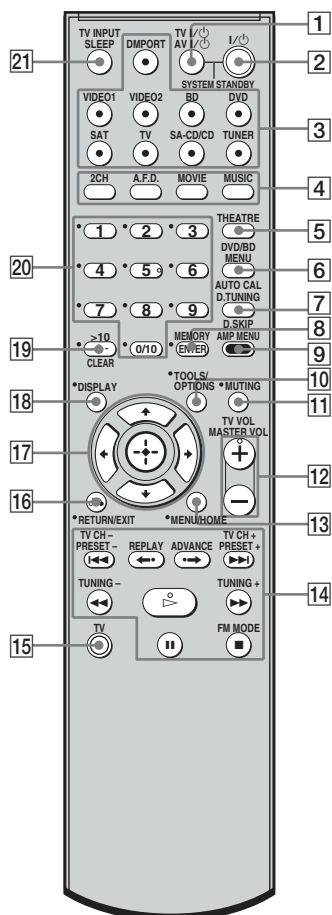

Name	Function
1 TV I/⏻ (on/standby)	Press TV I/⏻ and TV (15) at the same time to turn the TV on or off.
AV I/⏻ (on/standby)	Press to turn on or off the Sony audio/video components that the remote is assigned to operate. If you press I/⏻ (2) at the same time, it will turn off the receiver and other Sony components (SYSTEM STANDBY). Note The function of the AV I/⏻ switch changes automatically each time you press the input buttons (3).
2 I/⏻ (on/standby)	Press to turn the receiver on or off. To turn off all Sony components, press I/⏻ and AV I/⏻ (1) at the same time (SYSTEM STANDBY).
3 Input buttons	Press one of the buttons to select the component you want to use. When you press any of the input buttons, the receiver turns on. The buttons are factory assigned to control Sony components.
4 2CH A.F.D. MOVIE MUSIC	Press to select a sound field.
5 THEATRE	Press to enjoy optimal image suited for movies and to output the sound from the speakers connected to this receiver automatically. Note This button will only function if your TV is compatible with Theater Mode. Refer to the operating instructions supplied with the TV for details.

Name	Function
6 DVD/BD MENU	Press to display the menu of the DVD or Blu-ray disc on the TV screen. Then, use ⬆, ⬇, ⬆, ⬇ and ⬆ (17) to perform menu operations.
AUTO CAL	Press to activate the Auto Calibration function.
7 D.TUNING	Press to enter direct tuning mode.
D.SKIP	Press to skip a disc when using a multi-disc changer.
8 ENTER	Press to enter the value after selecting a channel, disc or track using the numeric buttons of the TV, VCR or satellite tuner.
MEMORY	Press to store a station.
9 AMP MENU	Press to display the menu of the receiver. Then, use ⬆, ⬇, ⬆, ⬇ and ⬆ (17) to perform menu operations.
10 TOOLS/OPTIONS	Press to display and select the options of the DVD player or Blu-ray disc player. Press TOOLS/OPTIONS and TV (15) at the same time to display the options applicable to the Sony TV.
11 MUTING	Press to turn off the sound temporarily. Press MUTING again to restore the sound. Press MUTING and TV (15) at the same time to activate the TV's muting function.
12 TV VOL + ^a /–	Press TV VOL +/– and TV (15) at the same time to adjust the volume level of the TV.
MASTER VOL + ^a /–	Press to adjust the volume level of all speakers at the same time.

Name	Function
13 MENU/HOME	Press to display the menu of the VCR, DVD player, satellite tuner or Blu-ray disc player on the TV screen. Press MENU/HOME and TV (15) at the same time to display the TV's menu. Then, use $\blacktriangle$, $\blacktriangledown$, $\blacktriangleleft$, $\blacktriangleright$ and $\oplus$ (17) to perform menu operations.
14 $\blacktriangleleft/\blacktriangleright$ ^{b)}	Press to skip a track of the CD player, DVD player or Blu-ray disc player.
REPLAY $\blacktriangleleft$ ADVANCE $\blacktriangleright$	Press to replay the previous scene or fast forward the current scene of the VCR, DVD player or Blu-ray disc player.
$\blacktriangleleft/\blacktriangleright$ ^{b)}	Press to – search tracks in the forward/reverse direction of the DVD player. – start fast forward/rewind of the VCR, CD player or Blu-ray disc player.
$\blacktriangleright$ ^{a)b)}	Press to start playback of the VCR, CD player, DVD player, or Blu-ray disc player.
$\parallel$ ^{b)}	Press to pause playback or recording of the VCR, CD player, DVD player or Blu-ray disc player. (Also starts recording with components in recording standby.)
$\blacksquare$ ^{b)}	Press to stop playback of the VCR, CD player, DVD player or Blu-ray disc player.
TV CH +/-	Press TV CH +/- and TV (15) at the same time to select preset TV channels.
PRESET +/-	Press to select – preset stations. – preset channels of the VCR or satellite tuner.
TUNING +/-	Press to scan a station.
FM MODE	Press to select the FM monaural or stereo reception.

Name	Function
15 TV	Press TV and the button with orange printing at the same time to enable TV operation.
16 RETURN/EXIT $\blacktriangleleft$	Press to – return to the previous menu. – exit the menu while the menu or on-screen guide of the VCR, DVD player, satellite tuner or Blu-ray disc player is displayed on the TV screen. Press RETURN/EXIT $\blacktriangleleft$ and TV (15) at the same time to return to the previous menu or exit the TV's menu while the menu is displayed on the TV screen.
17 $\oplus$, $\blacktriangleleft/\blacktriangleright/\blacktriangleleft/\blacktriangleright$	After pressing AMP MENU (9), DVD/BD MENU (6), or MENU/HOME (13), press $\blacktriangleleft$, $\blacktriangledown$, $\blacktriangleleft$ or $\blacktriangleright$ to select the settings. Then, press $\oplus$ to enter the selection if you have pressed DVD/BD MENU or MENU/HOME previously. Press $\oplus$ also to enter the selection of the receiver, VCR, satellite tuner, CD player, DVD player or Blu-ray disc player.
18 DISPLAY	Press to select information displayed on the TV screen of the VCR, satellite tuner, CD player, DVD player or Blu-ray disc player. Press DISPLAY and TV (15) at the same time to display TV's information on the TV screen.
19 -/--	Press to select the channel entry mode, either one or two digit of the VCR. Press -/-- and TV (15) at the same time to select the channel entry mode, either one or two digits of the TV.
>10	Press to select the track numbers over 10 of the CD player.
CLEAR	Press to clear a mistake when you press the incorrect numeric button.

Name	Function
20 Numeric buttons (number 5^{a)})	Press to – preset/tune to preset stations. – select track numbers of the CD player, DVD player or Blu-ray disc player. Press 0/10 to select track number 10. – select channel numbers of the VCR or satellite tuner. Press the numeric buttons and TV (15) at the same time to select the TV channels.
21 TV INPUT	Press TV INPUT and TV (15) at the same time to select the input signal (TV input or video input).
SLEEP	Press to activate the Sleep Timer function and the duration which the receiver turns off automatically.

^{a)}The number 5, TV VOL +/MASTER VOL + and $\blacktriangleright$ buttons have tactile dots. Use the tactile dots as references when operating the receiver.

^{b)}This button is also available for DIGITAL MEDIA PORT adapter operation. For details on the function of the button, see the operating instructions supplied with the DIGITAL MEDIA PORT adapter.


Notes

- Some functions explained in this section may not work depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the component, the above operation may not be possible or may operate differently than described.

SECTION 3 DISASSEMBLY


- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW

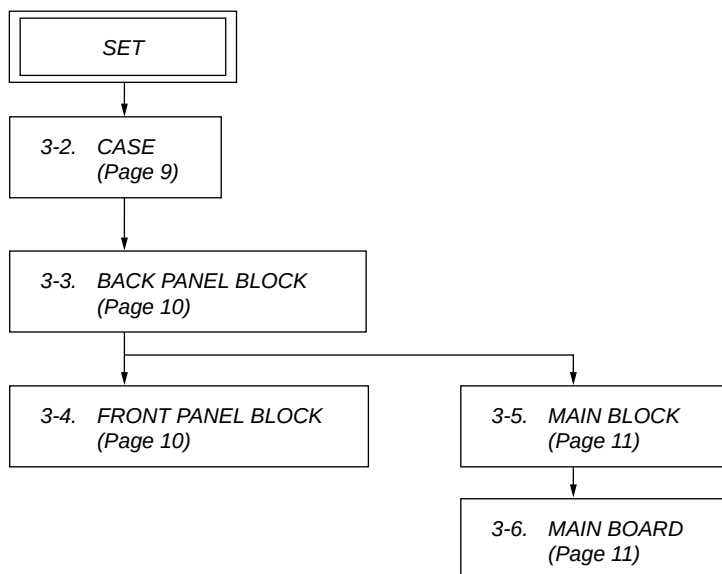


Note: Follow the disassembly procedure in the numerical order shown below.


3-2. CASE

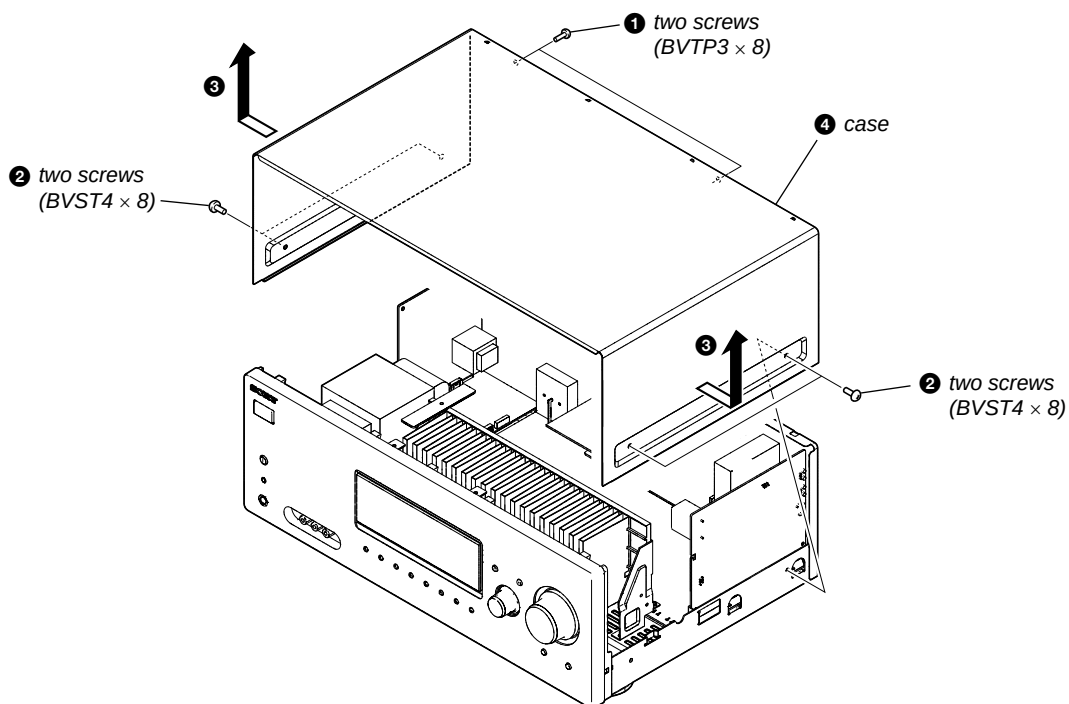


3-3. BACK PANEL BLOCK

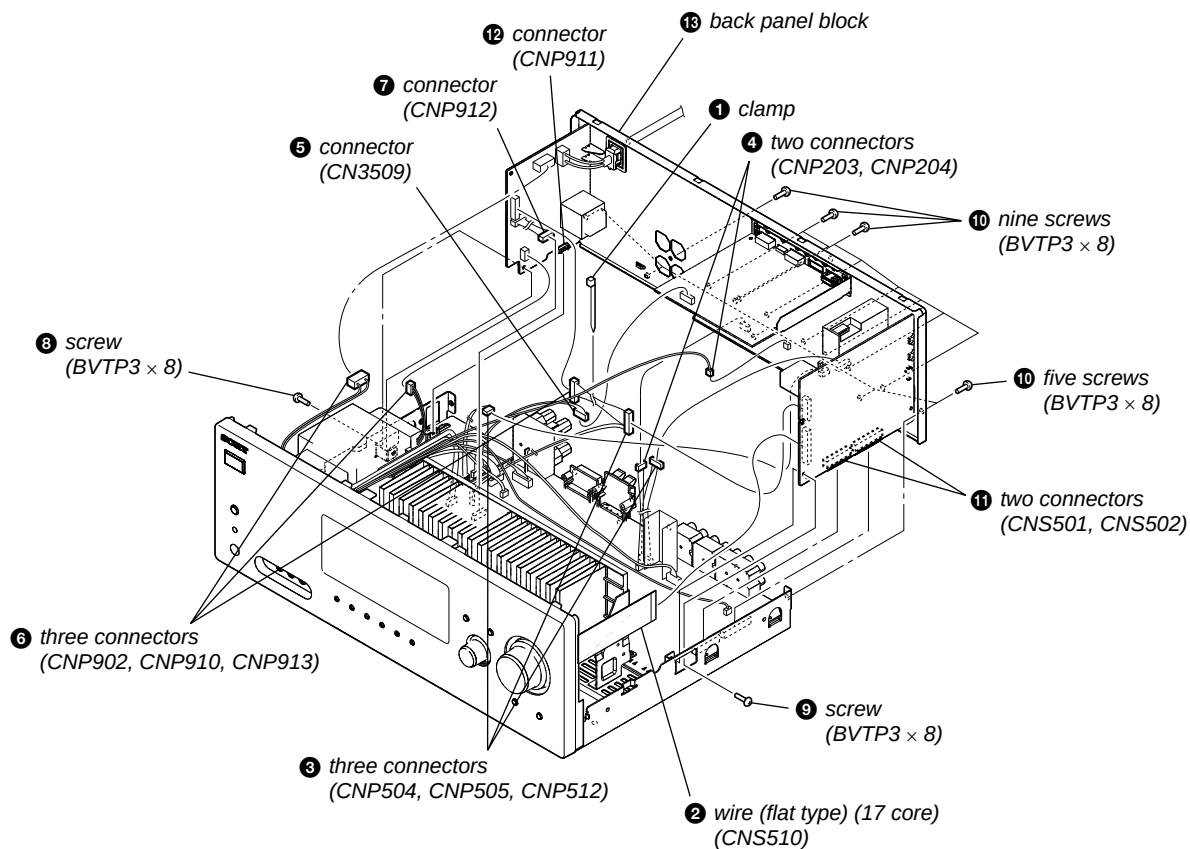


3-4. FRONT PANEL BLOCK

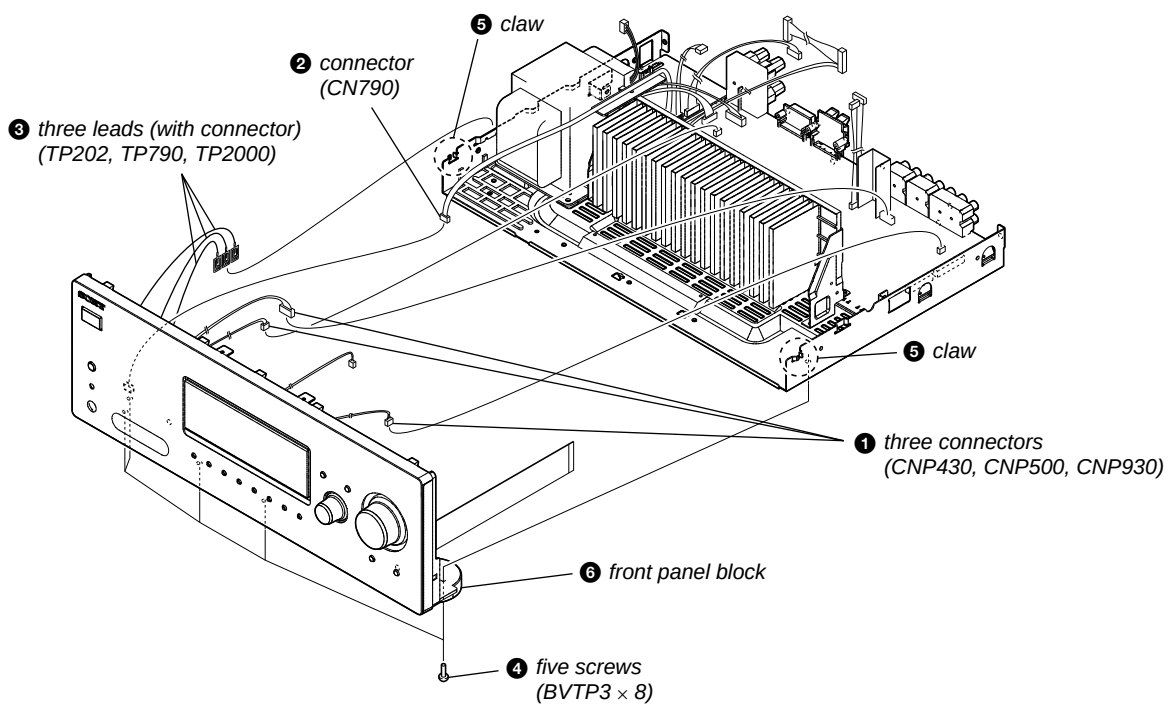

3-5. MAIN BLOCK

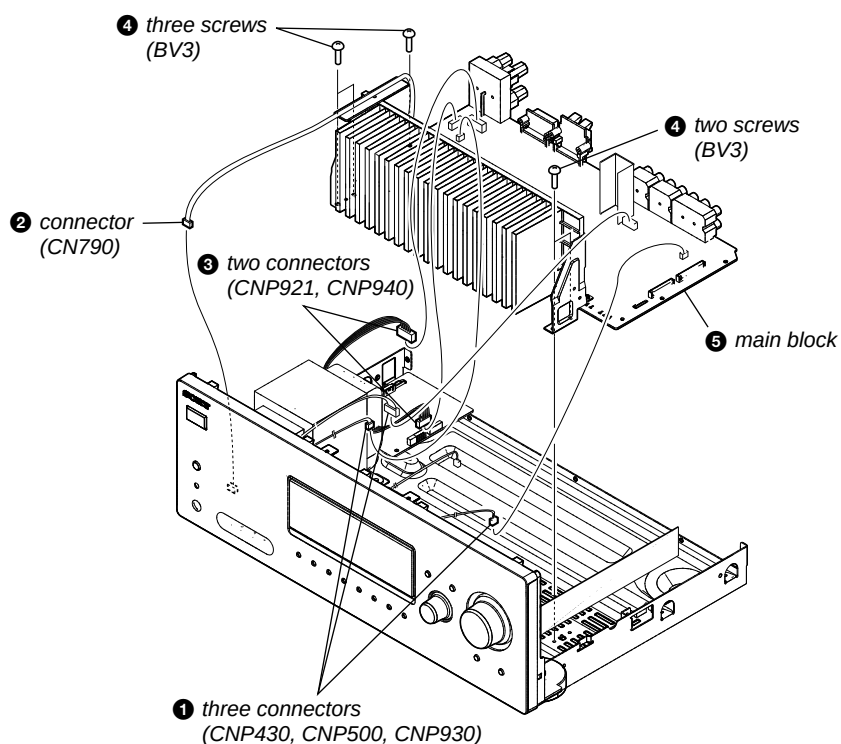

3-6. MAIN BOARD

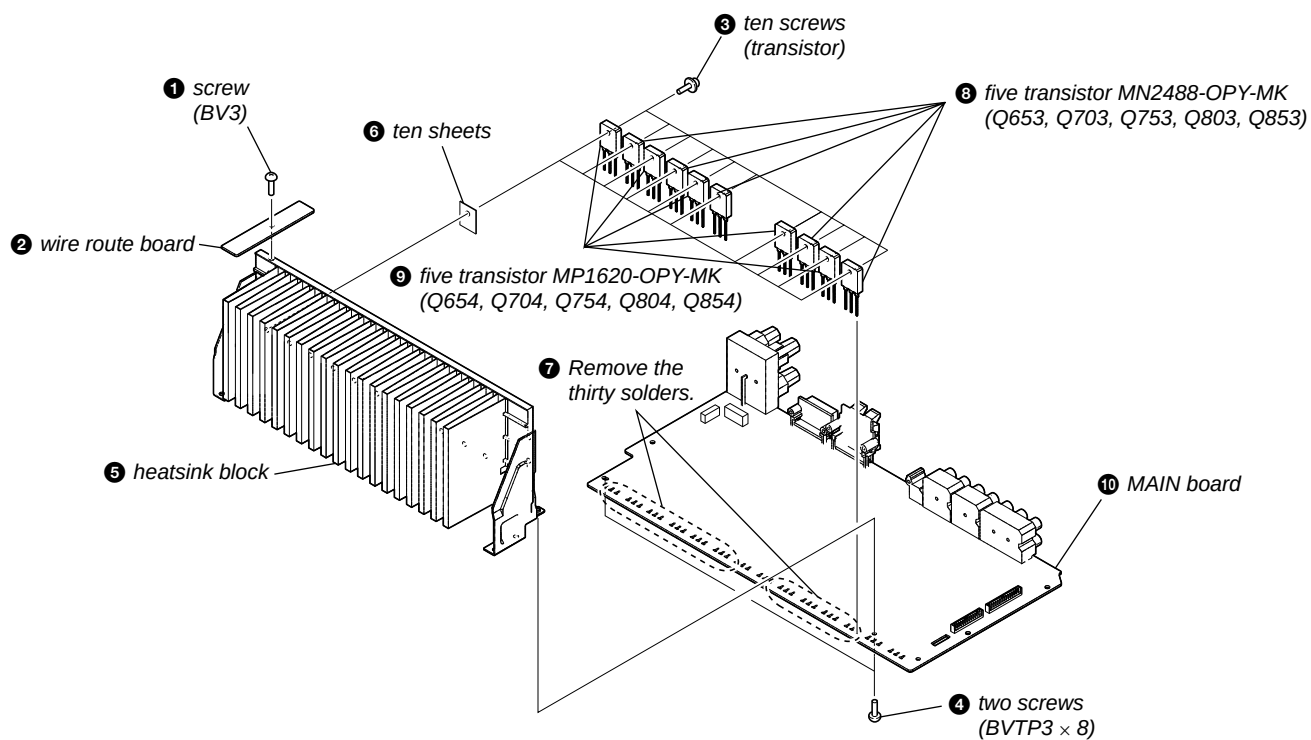


SECTION 4 TEST MODE

FL CHECK MODE


All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.

Procedure:


1. When pressing the [TUNING MODE] and [DISPLAY] buttons, press the [I/⏻] button to turn on the main power.
2. All segments turn on.



3. Turn the [INPUT SELECTOR] dial.
4. Test pattern 1 turn on.



5. Turn the [INPUT SELECTOR] dial once again.
6. Test pattern 2 turn on.



7. Turn the [INPUT SELECTOR] dial once again. All segments turn off.
8. Every turning of the [INPUT SELECTOR] dial turns on each segment one after another on the same order.

S.F. CLEAR MODE

The preset sound filed is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

Procedure:

1. While pressing the [2CH] button, press the [I/⏻] button to turn on the main power.
2. The message "S.F CLR." appears and initialization is performed.

VERSION CHECK MODE

When this mode is used the model, the destination and the software version number are displayed.

Procedure:

1. While pressing the [SPEAKERS (ON/OFF)] and [DISPLAY] buttons, press the [I/⏻] button to turn on the main power.
2. The model, the destination and the software version number appear.

KEY CHECK MODE

This mode is used to check the key.

Procedure:

1. While pressing the [SPEAKERS (ON/OFF)] and [2CH] buttons, press the [I/⏻] button to turn on the main power.
2. The message "REST 13" appears.
3. Every pressing of any button other than the [I/⏻] button counts down the buttons. The buttons which are already counted once are not counted again.
4. When all buttons are pressed, the message "REST 00" appears.

SWAP ALL MODE

When this mode is used, output the audio signal of front L/R channel to all channel.

Procedure:

1. While pressing the [MEMORY/ENTER] and [DISPLAY] buttons, press the [I/⏻] button to turn on the main power.
2. The message "DSP TEST" appears.
3. Press the [AMP MENU] button on the remote commander, and the message "9_DSPTST" appears.
4. Press the [➡] button on the remote commander to enter the DSP test mode menu.
5. Press the [⬇] button on the remote commander twice to enter the swap mode, and the message "SWP.AUTO" appears.
6. Press the [➡] button on the remote commander twice to select "SWP.□ALL".

SHIPMENT MODE

All preset contents are cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.


Procedure:

1. While pressing the [SPEAKERS (ON/OFF)] and [MUSIC] buttons, press the [I/⏻] button to turn on the main power.
2. The message "CLEARING" appears.


DCAC FACTORY TEST MODE

DCAC Factory Test mode have two stages:

1. DCAC DSP Data Line Checking
2. DCAC board Checking

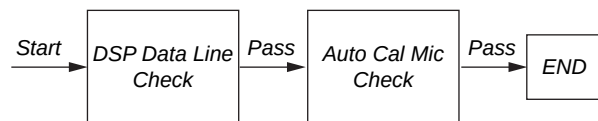

Factory Test System Setup

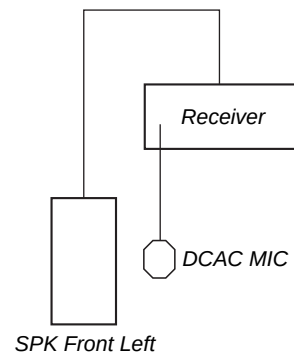

1. When power off :
While pressing the [MEMORY/ENTER] and [MOVIE] buttons, press the [I/⏻] button to turn on the main power.
"DCAC FTM" appears.
Afterward, press the [TUNING MODE] to start DCAC factory test mode.

1. DCAC DSP Data Line Checking

After press the [TUNING MODE] button, DCAC Factory test mode will start, below display will show:

“DCAC x” x = 1, 2, 3, 4

If there is error happen, below display will show:

“ERR SD0x” x = 1 → D1501 or R1530 problem

x = 2 → D1502 problem

x = 3 → D1503 problem

x = 4 → D1504 problem

2. DCAC board Checking

Connect front left speaker of the receiver and AUTO CAL microphone. Turn [MASTER VOLUME] jog, there will be test tone sound output from front left speaker, and the display will change accordingly.

“AD - xxx” xxx = 0 to 255 (depends on loudness of test tone)

RE-BOX CLASSIFICATION TEST MODE**Procedure:**


1. While pressing the [MEMORY/ENTER] and [INPUT MODE] buttons, press the [I/⏻] button to turn on the main power.
2. The message “R.BOX□□□XX” appears.
XX: times set powered on

VACS CONTROL TEST MODE

The VACS feature of the amplifier is turned off purposely.

Procedure:

1. While pressing the [MEMORY/ENTER] and [2CH] buttons, press the [I/⏻] button to turn on the main power.
2. The message “VACS OFF” appears.

**SECTION 5
ELECTRICAL CHECK****FM AUTO STOP CHECK****Procedure:**

1. Turn on the set.
2. Input the following signal from signal generator to FM antenna input directly.

Carrier frequency: A = 87.5 MHz, B = 98 MHz, C = 108 MHz

Deviation : 75 kHz

Modulation : 1 kHz

ANT input : 1 kHz


Note: Use 75 ohm coaxial cable to connect signal generator and the set.
You cannot use video cable for checking.
Use signal generator whose output impedance is 75 ohm.

3. Set to FM tuner function and scan the input FM signal with automatic scanning.
4. Confirm that input frequency of A, B and C are detected and automatic scanning stops.


When the station signal is received in good condition, automatic scanning stops.

SECTION 6 DIAGRAMS


6-1. BLOCK DIAGRAM - MAIN Section -

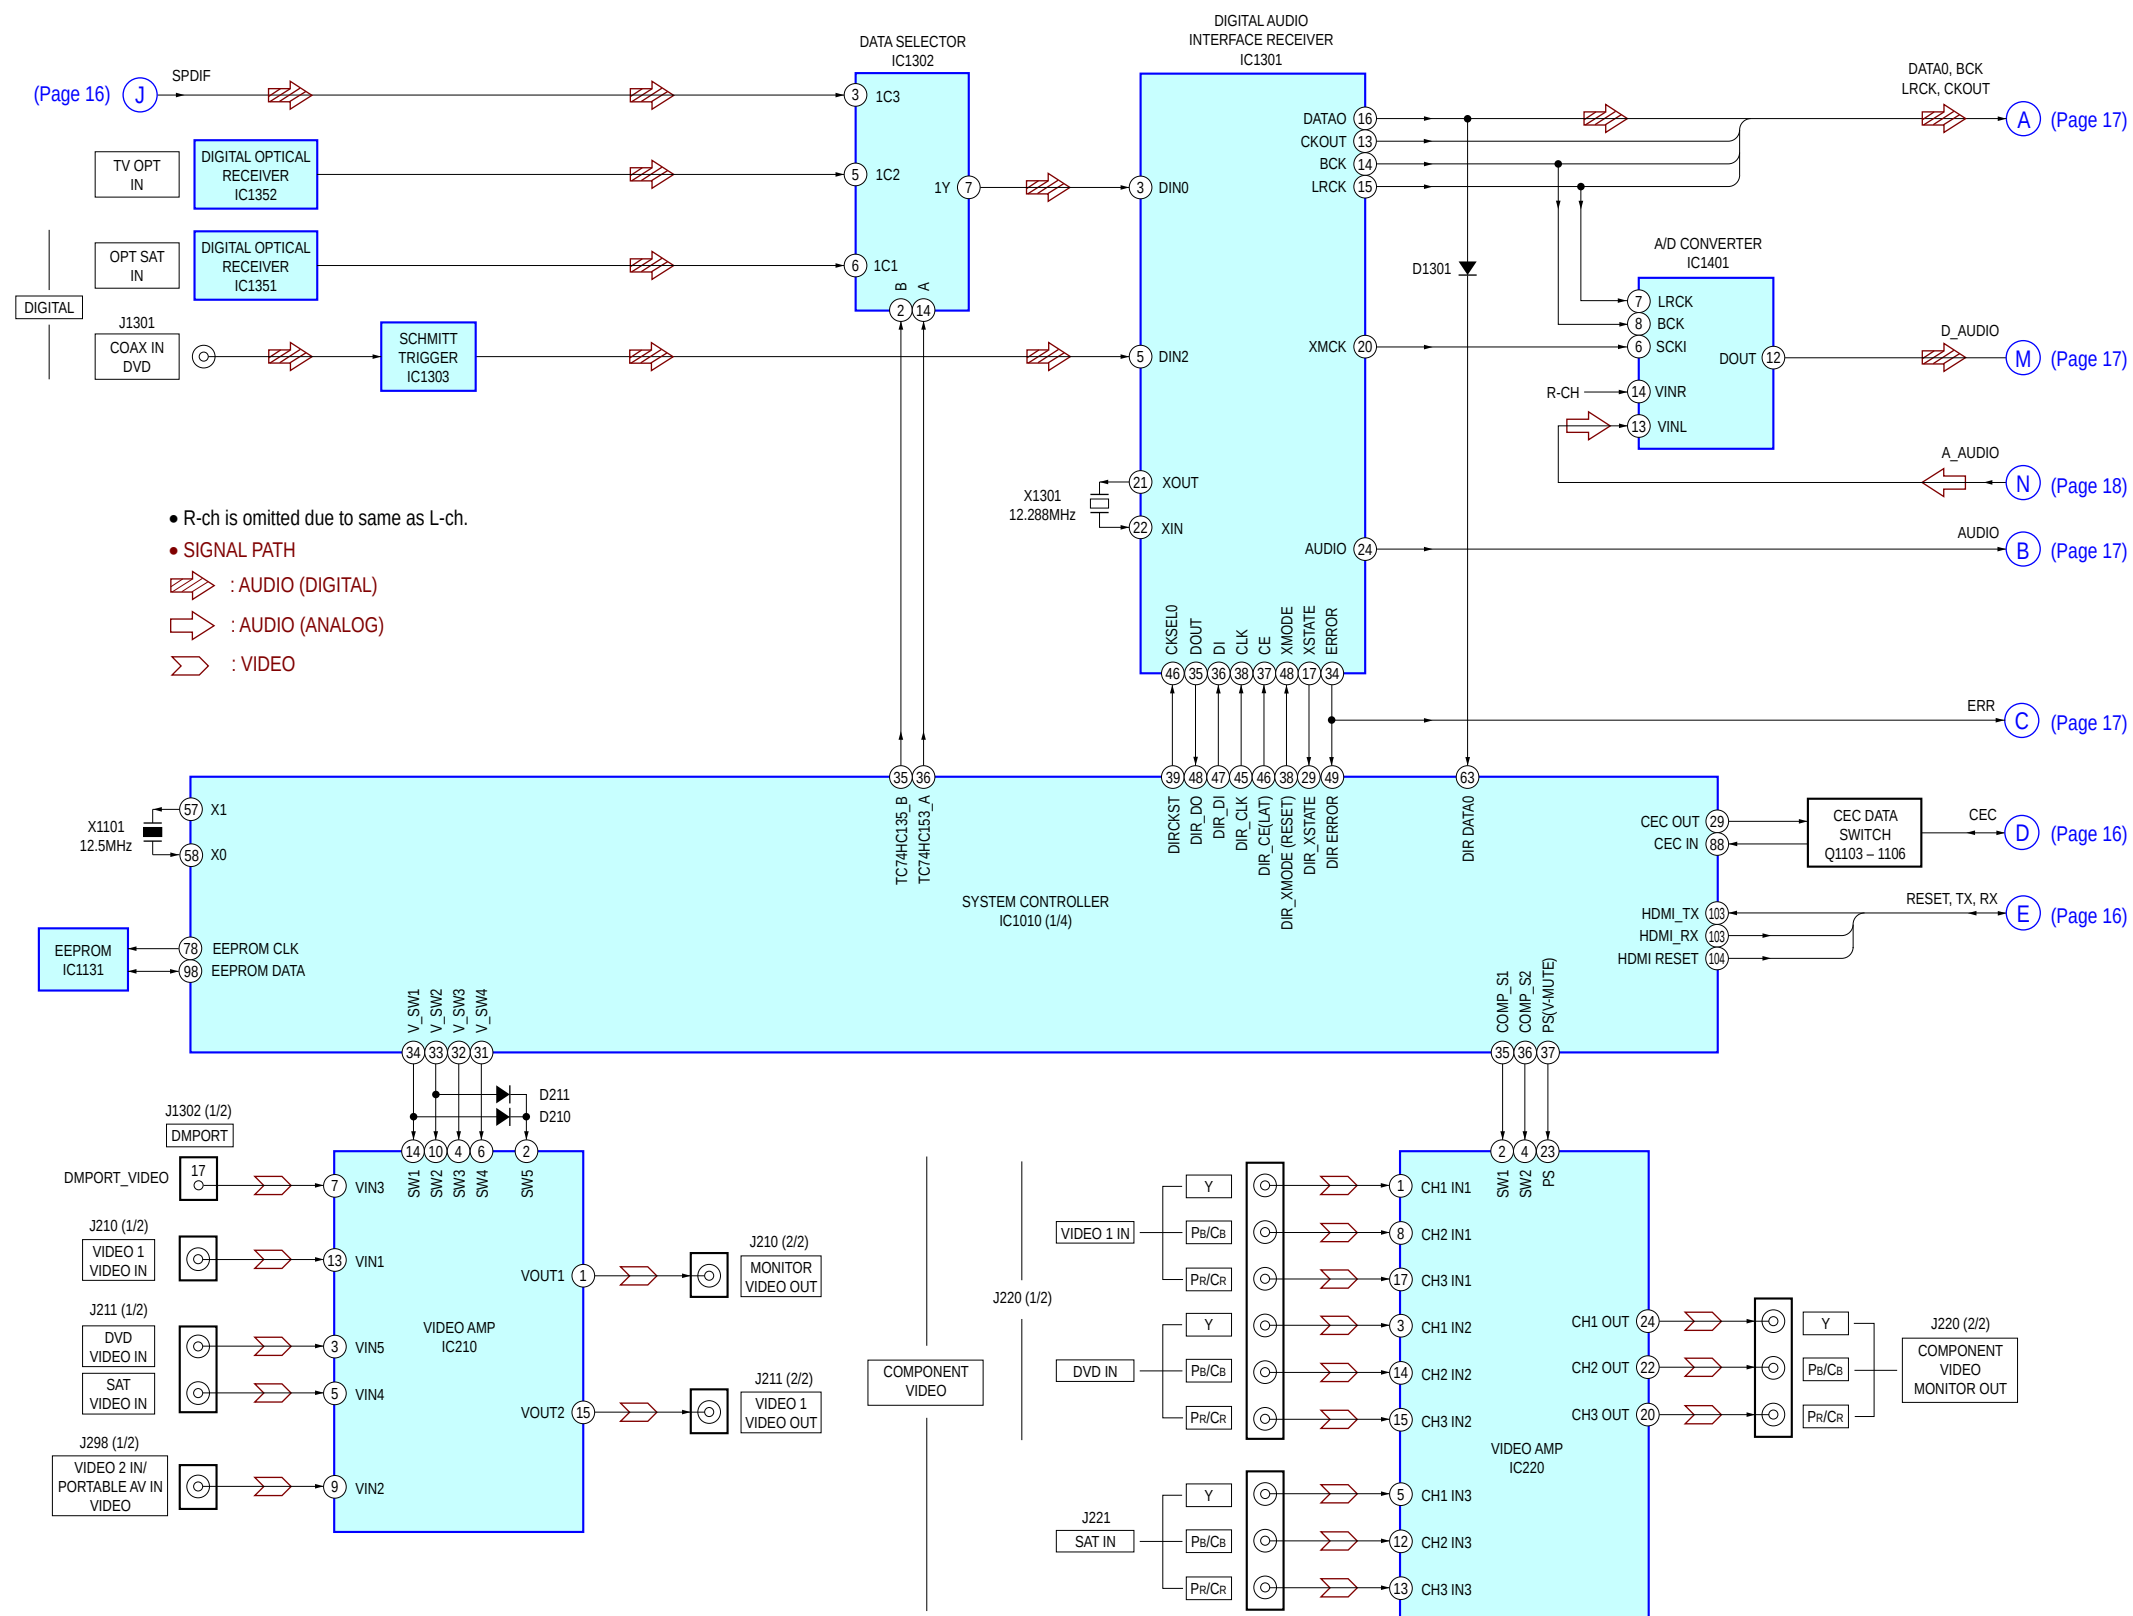


6-2. BLOCK DIAGRAM - HDMI Section -

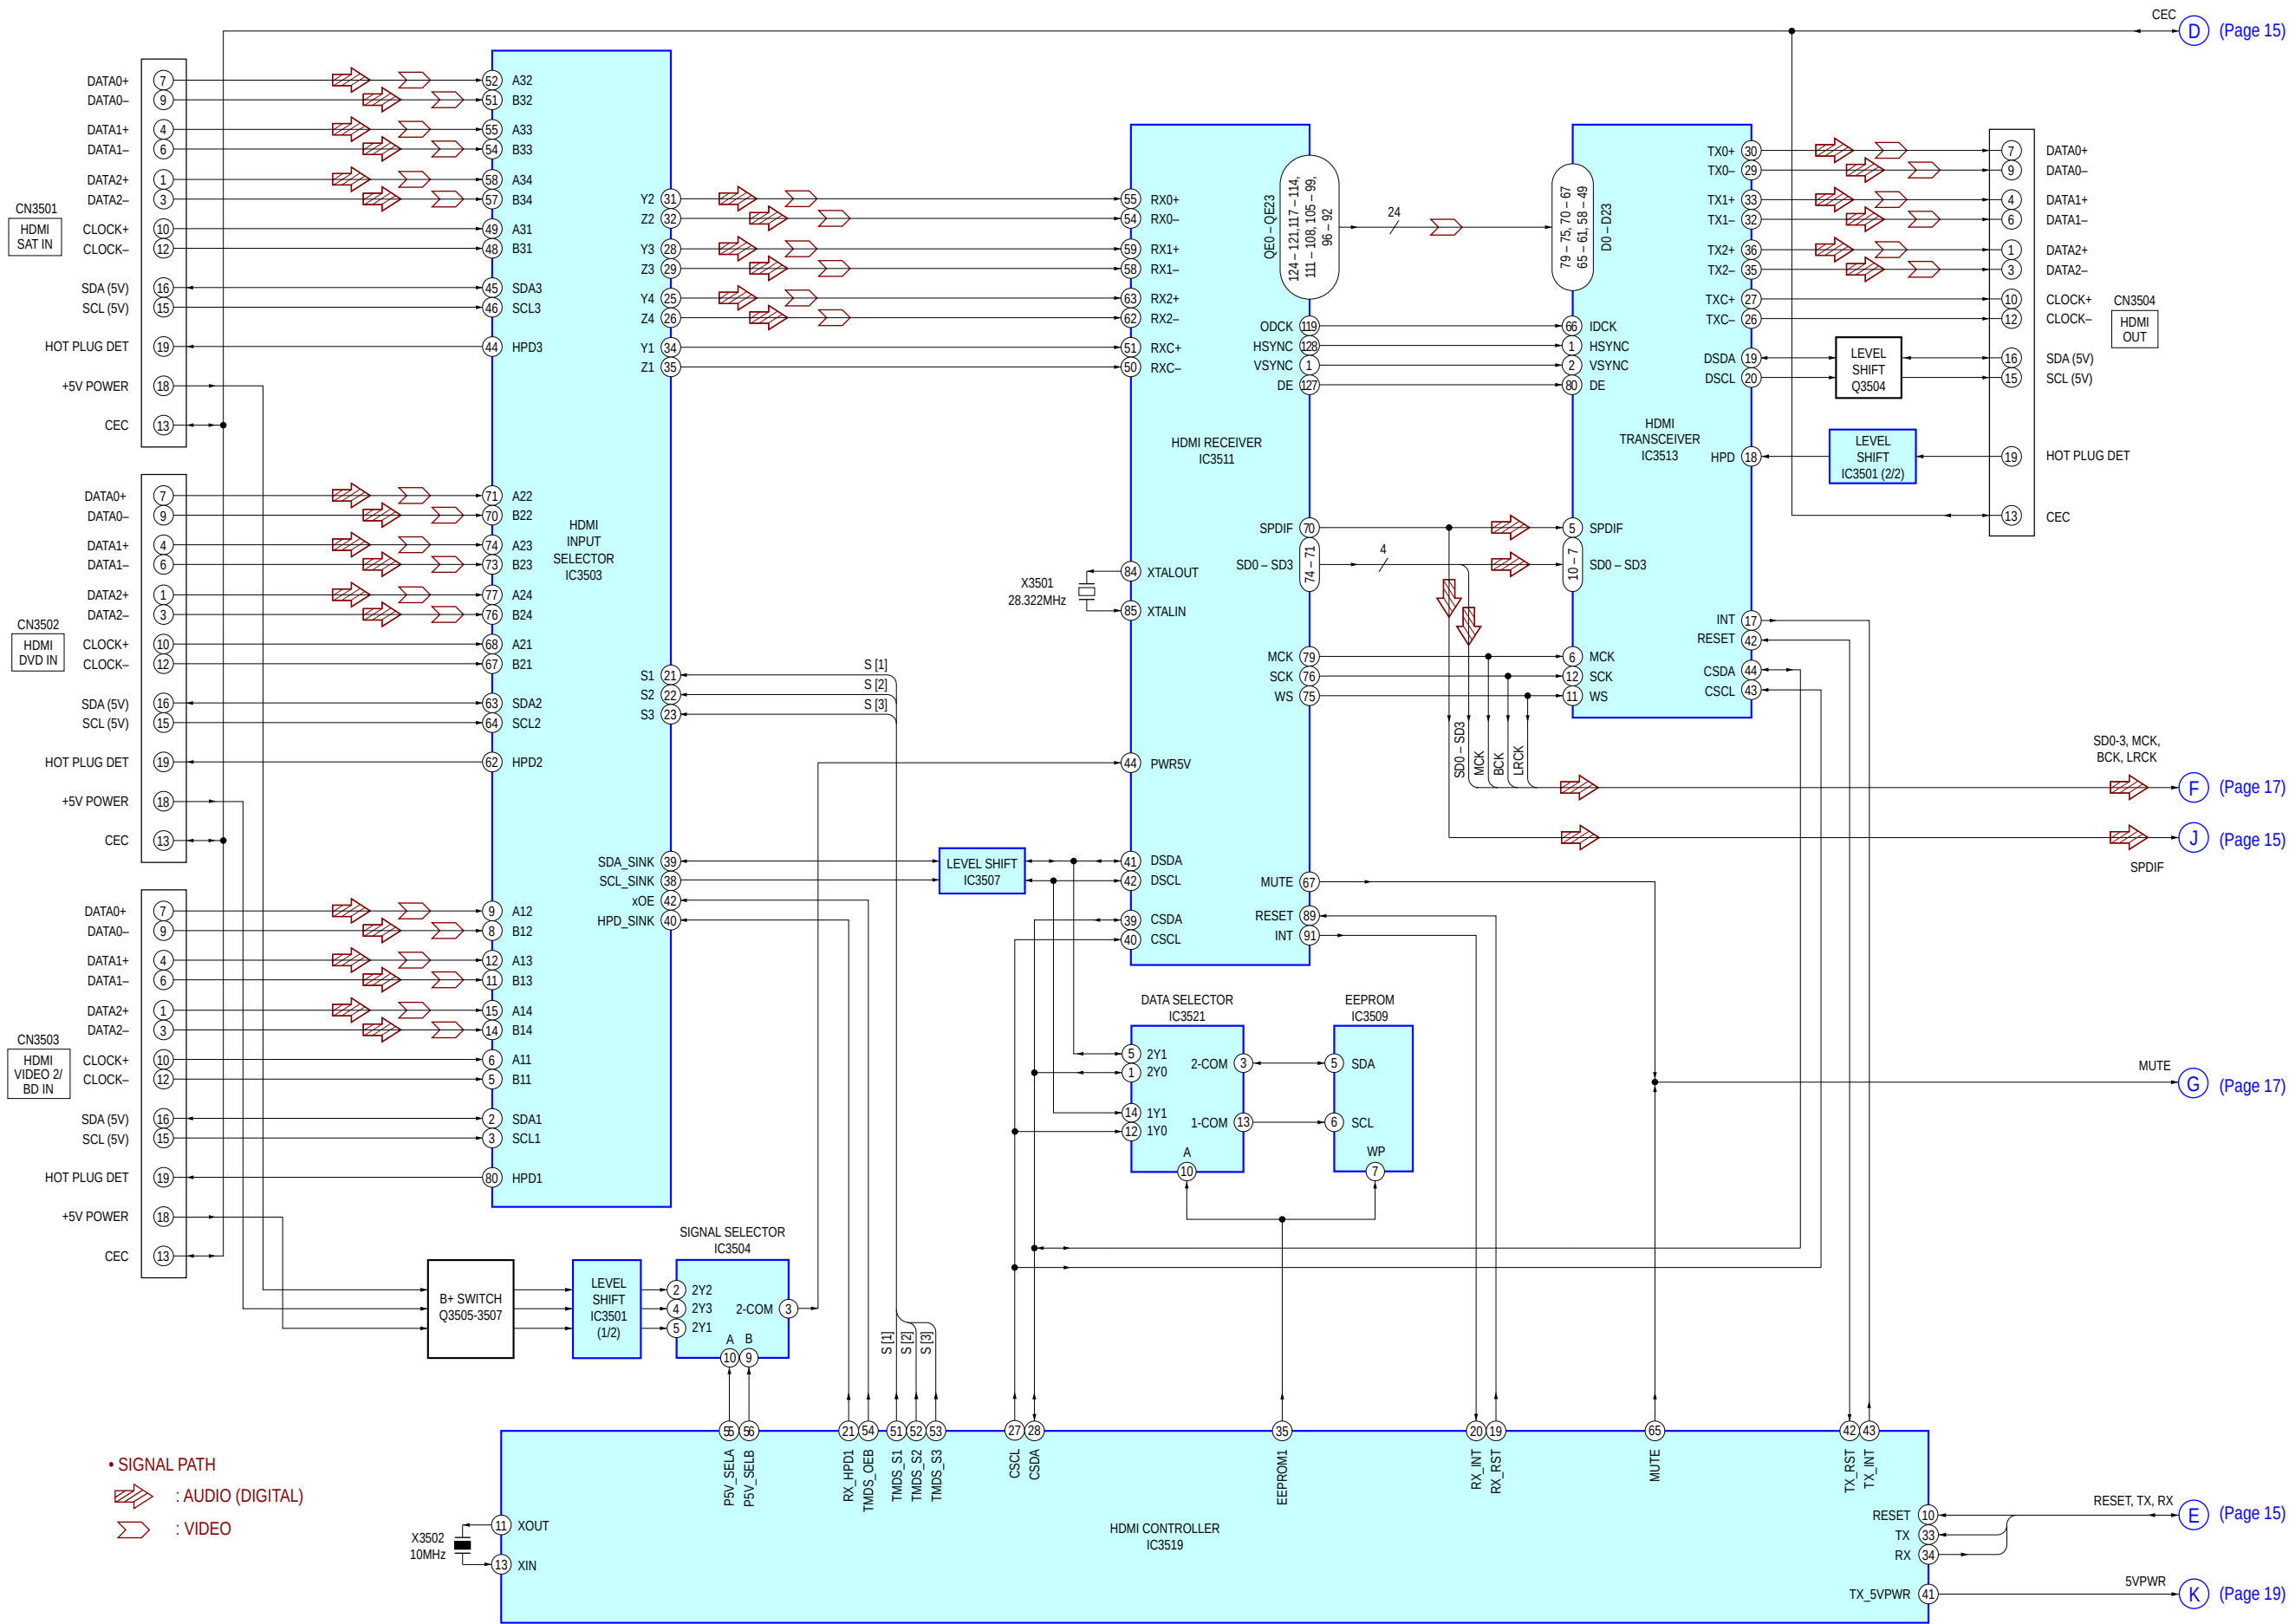


6-3. BLOCK DIAGRAM - DSP Section -

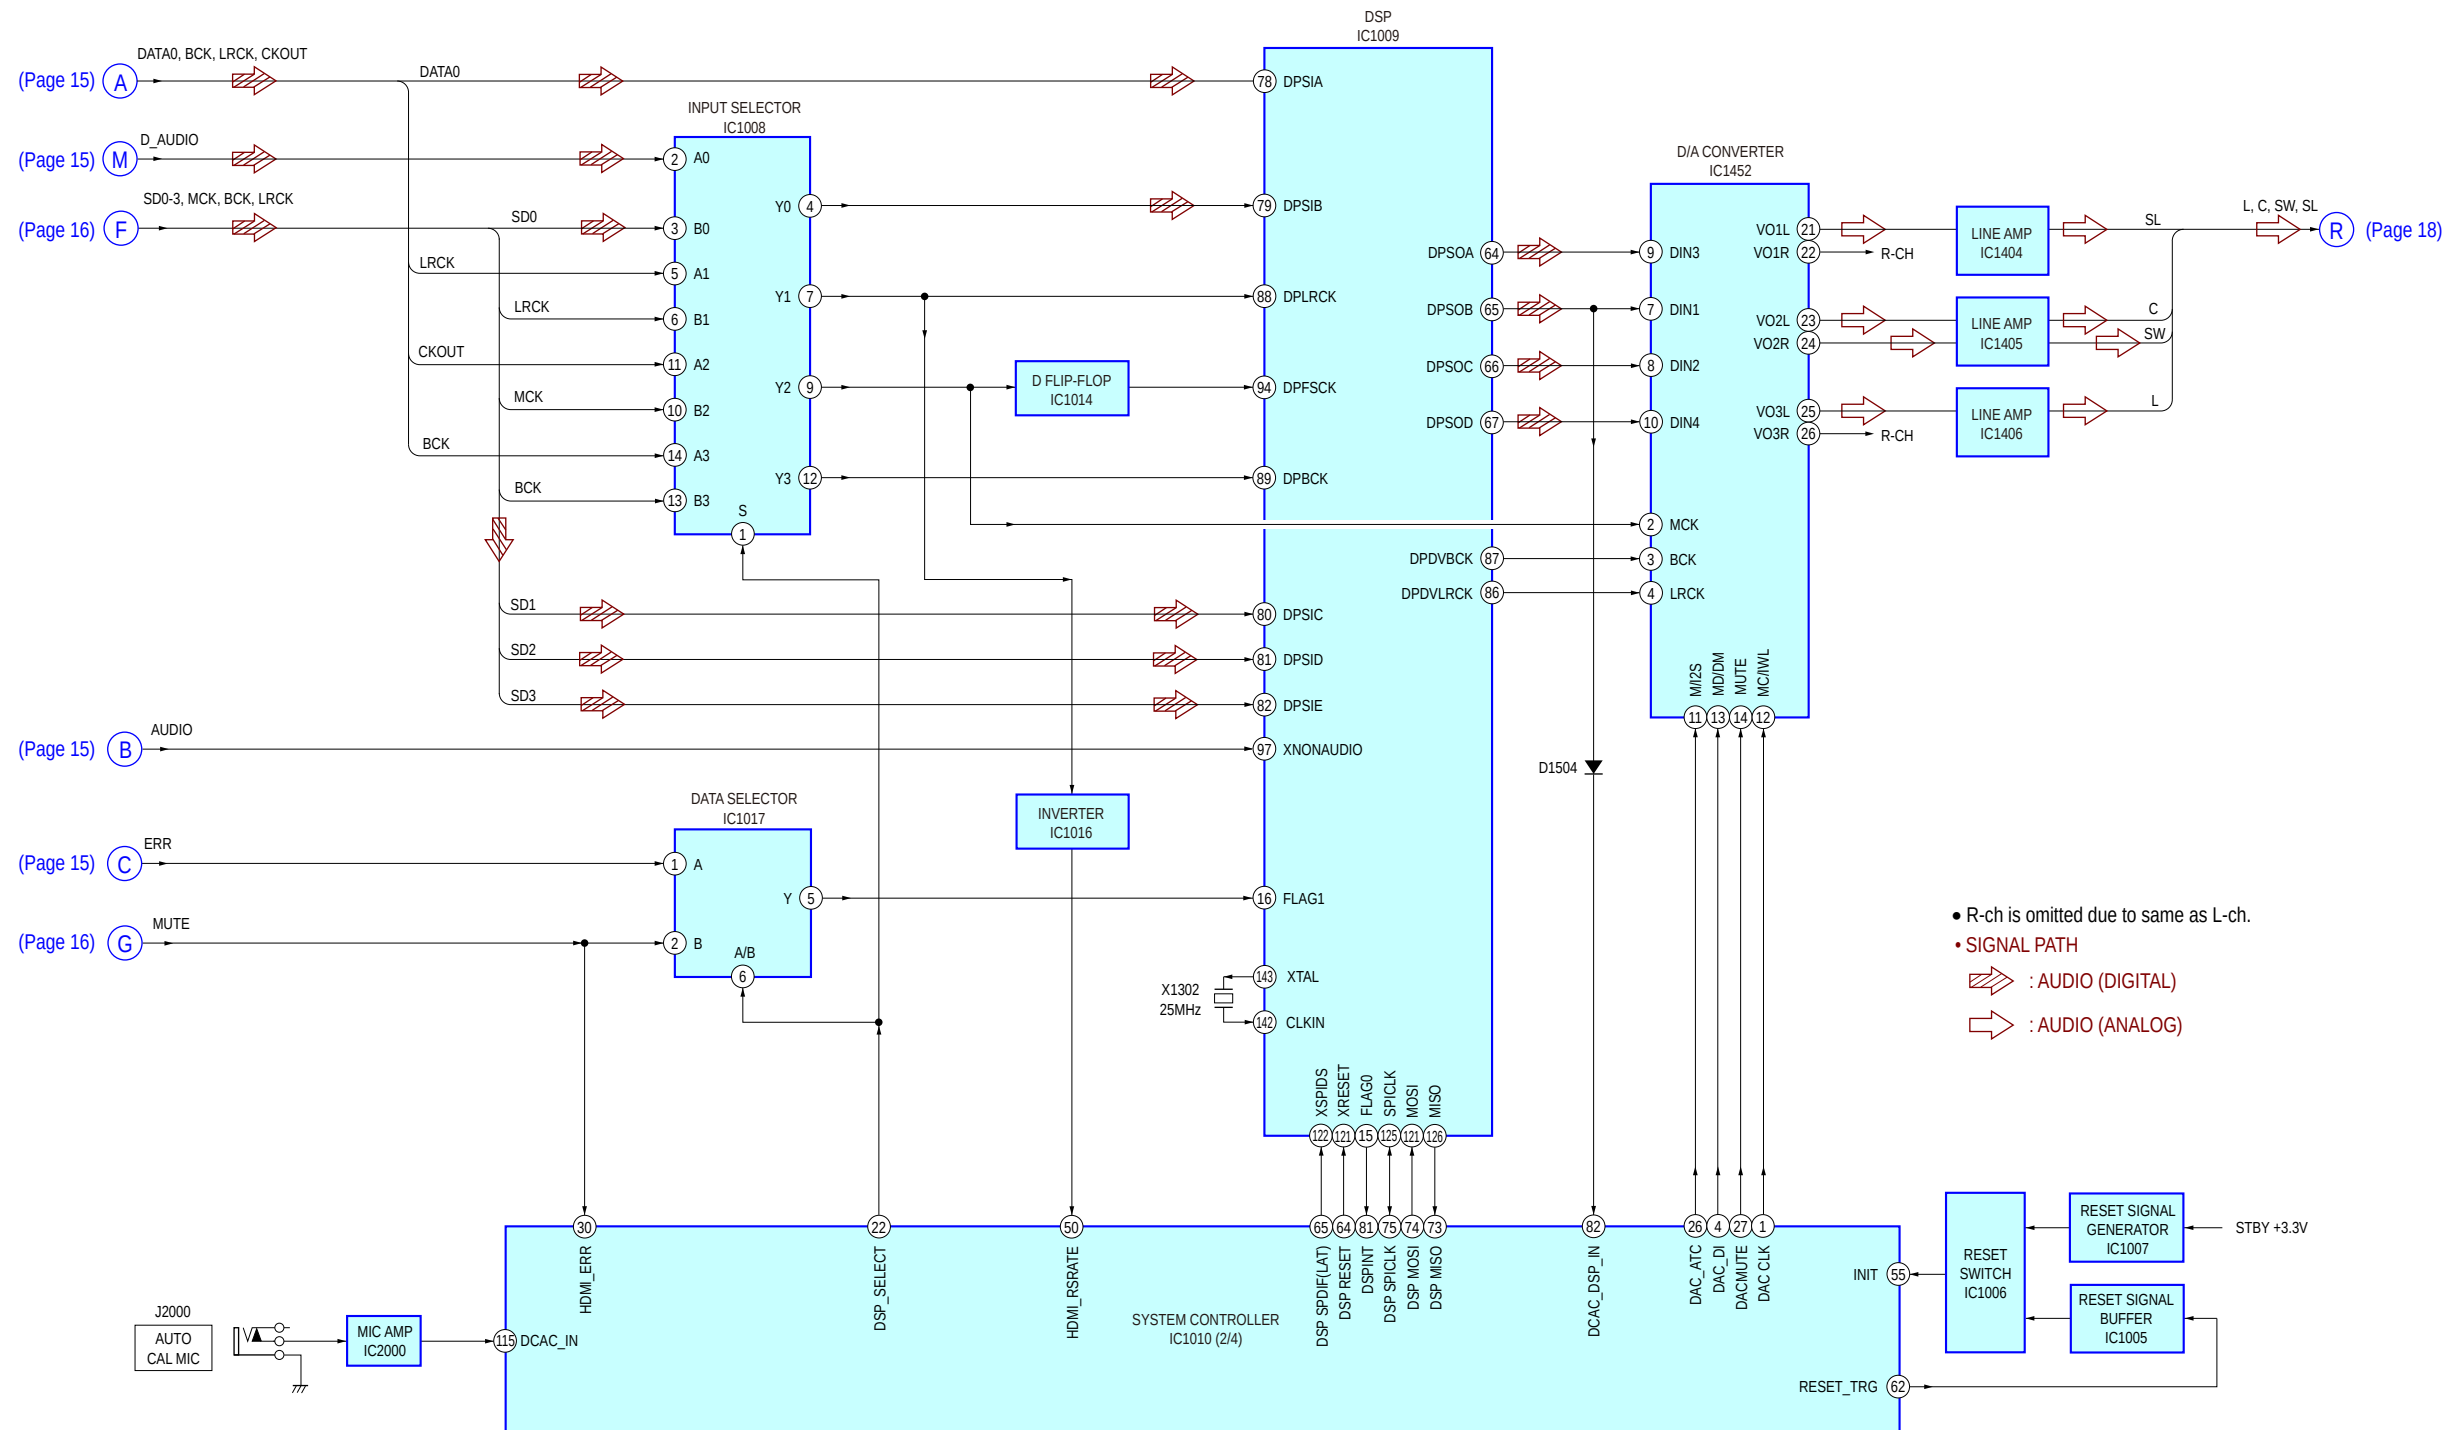

6-4. BLOCK DIAGRAM - AUDIO Section -

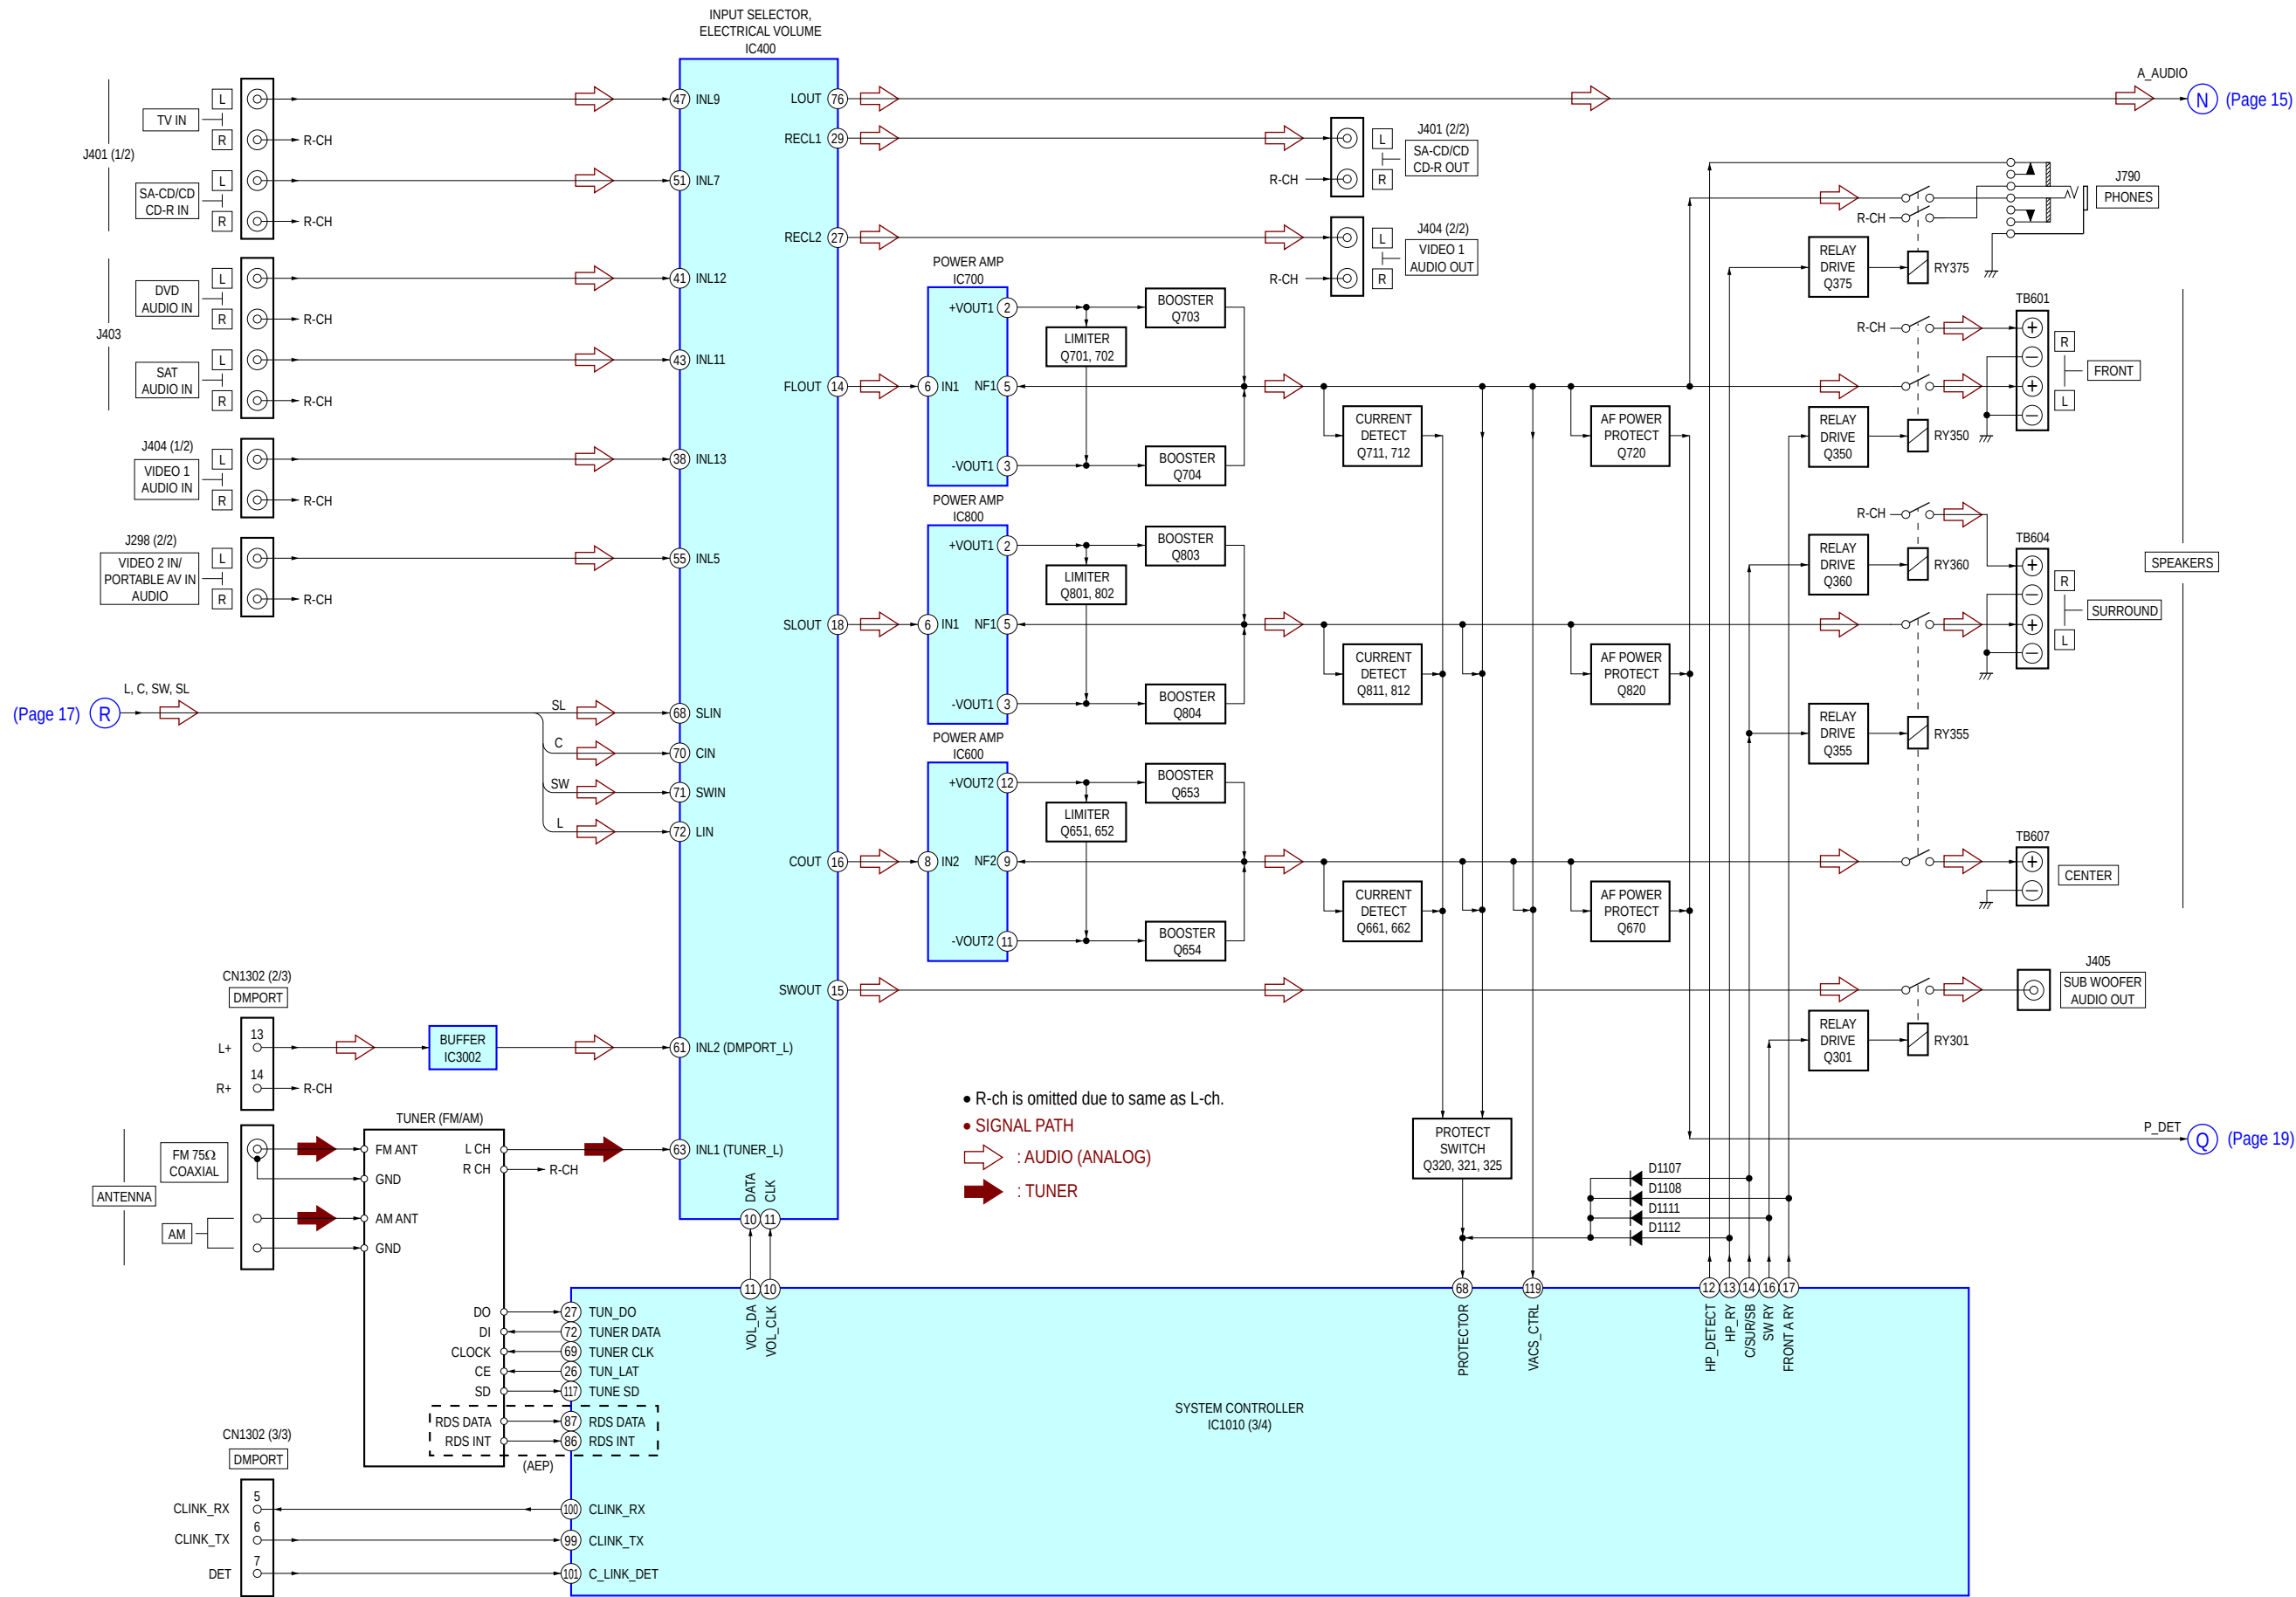

19

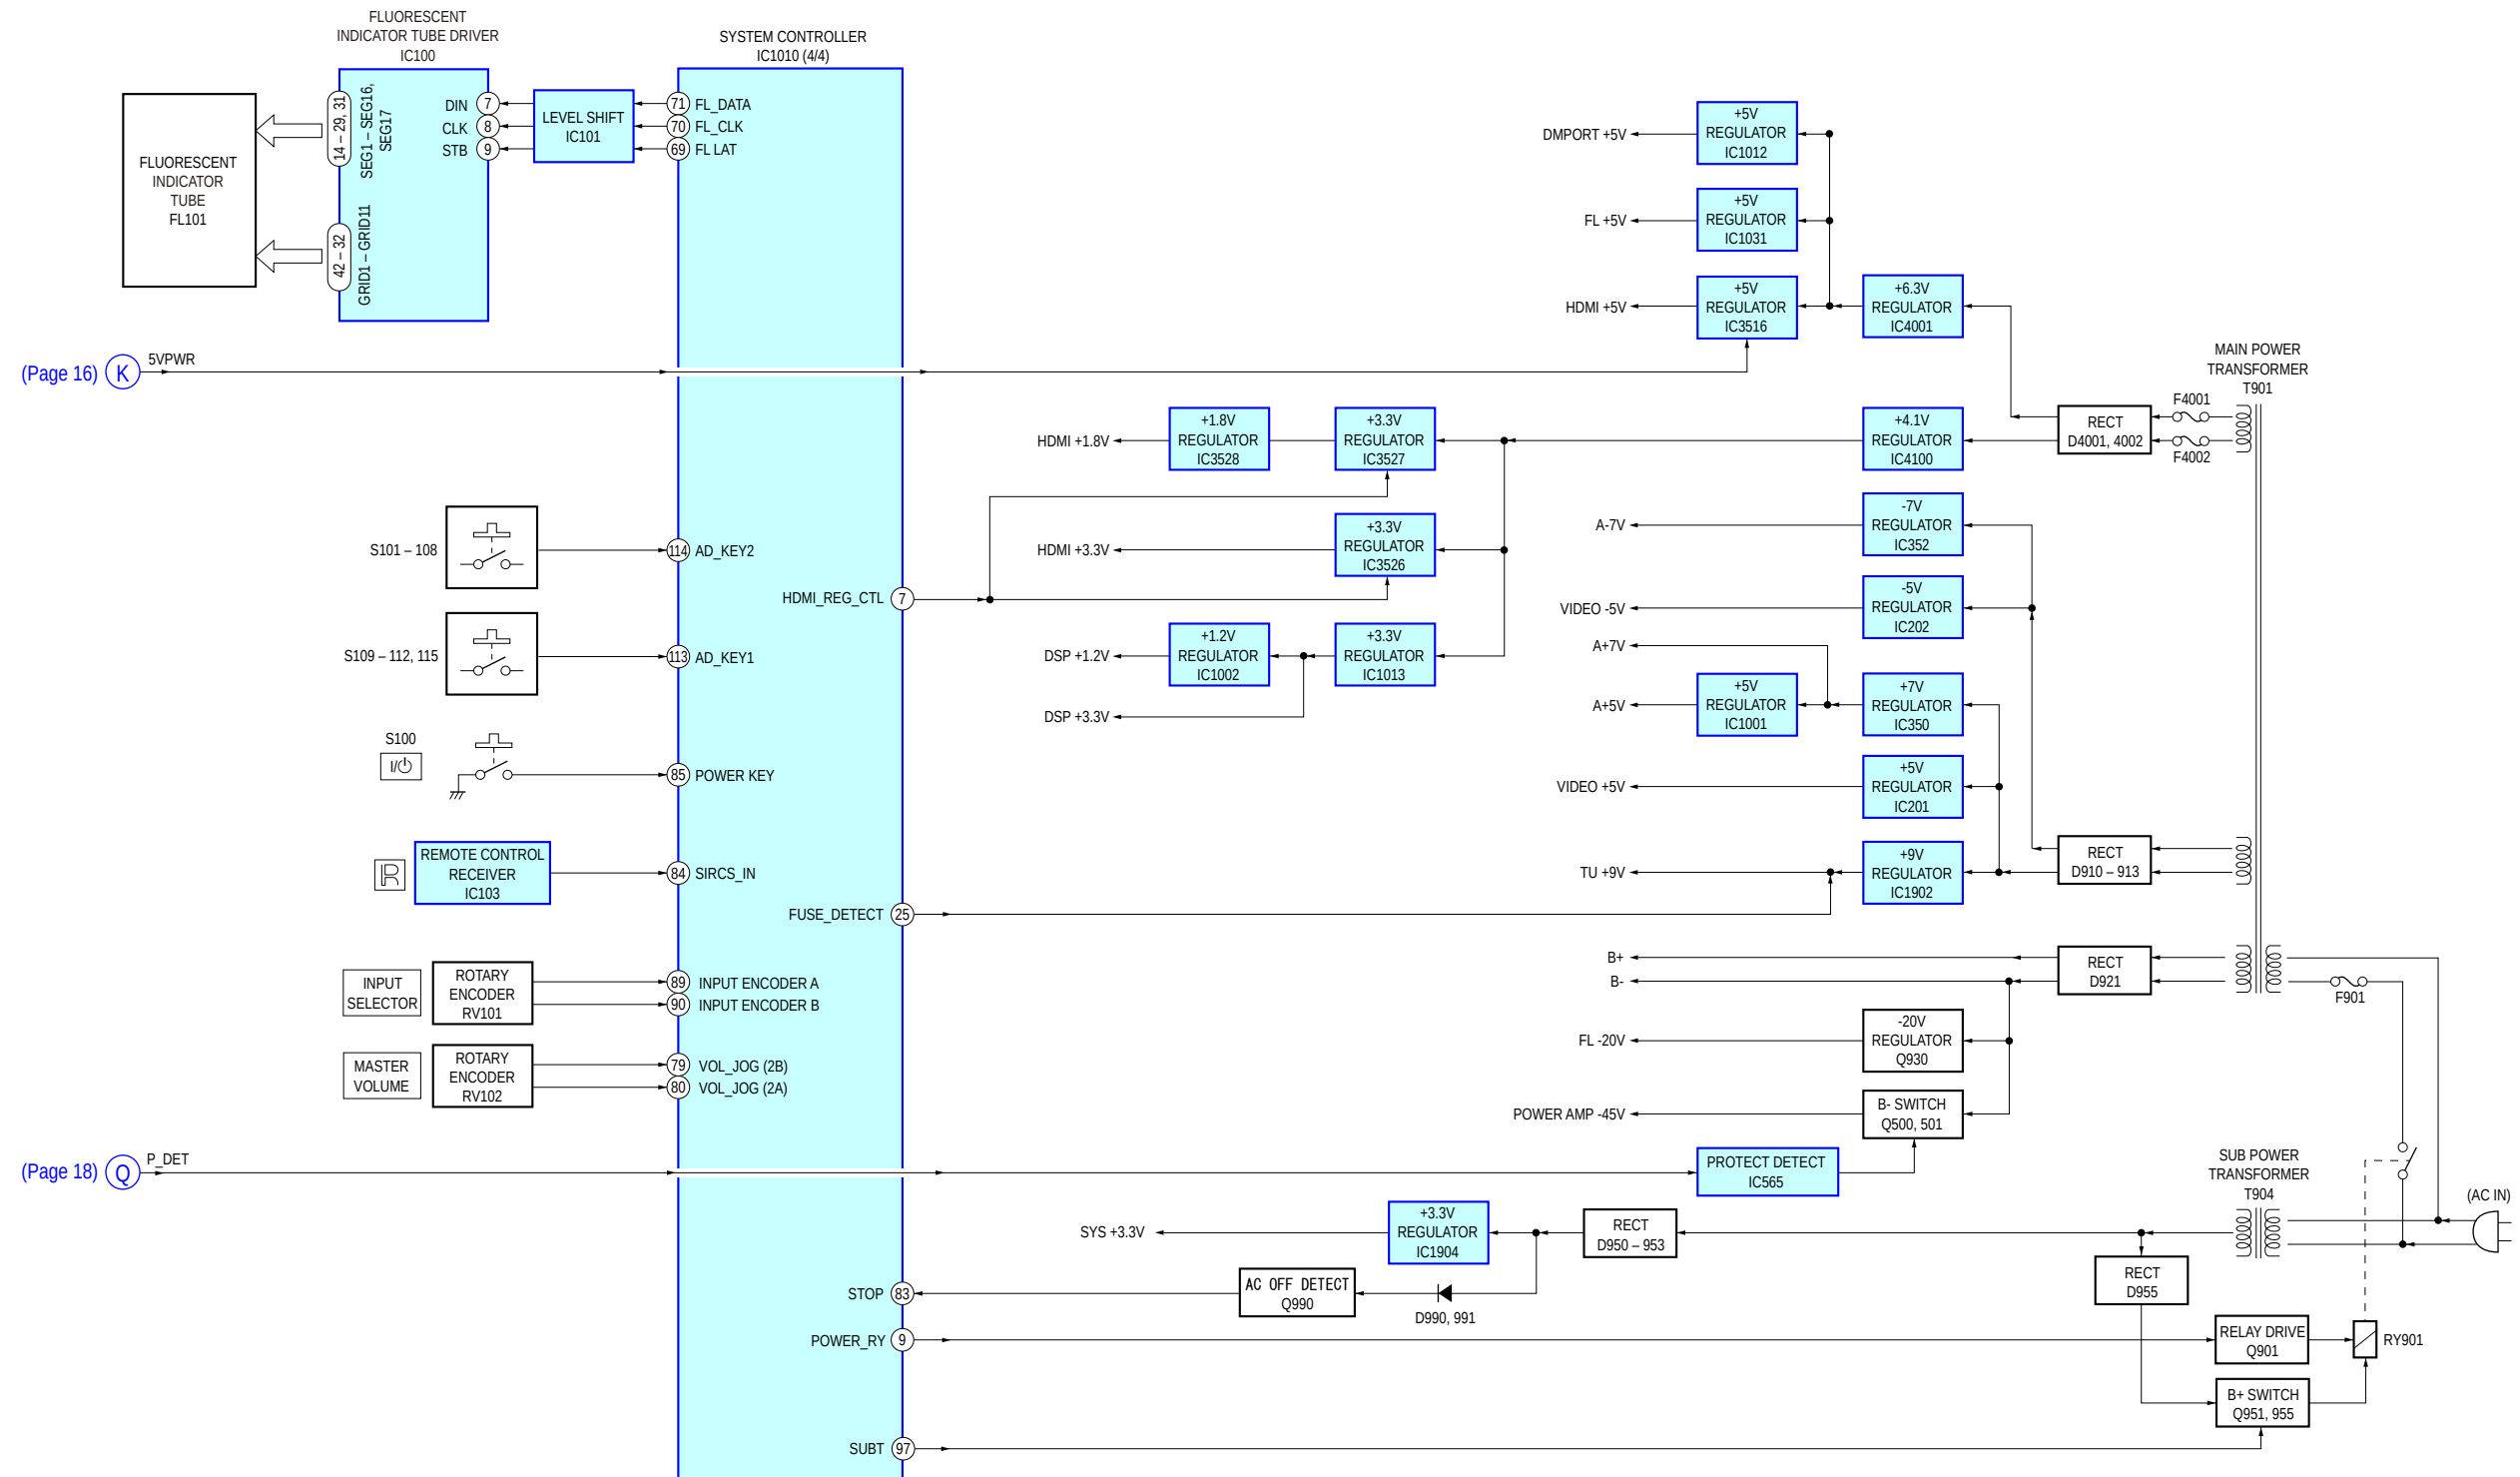

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)



For Printed Wiring Boards.

- Note:**
- — : Parts extracted from the component side.
 - : Parts extracted from the conductor side.
 - △ : Internal component.
 - : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Conductor Side)
Pattern face side: Parts on the parts face side seen from the parts face are indicated.
(Component Side)

Caution:
Parts face side: Parts on the parts face side seen from the pattern face are indicated.
(SIDE A)
Pattern face side: Parts on the pattern face side seen from the parts face are indicated.
(SIDE B)

- Indication of transistor.

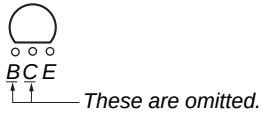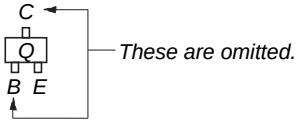


For Schematic Diagrams.

- Note:**
- All capacitors are in μF unless otherwise noted. (p: pF)
50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
 - △ : internal component.
 - ⎓ : nonflammable resistor.
 - ⎓ : flusible resistor.
 - : panel designation.


Note: The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
no mark : TUNER
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 - ⇒ : AUDIO (DIGITAL)
 - ⇒ : AUDIO (ANALOG)
 - ⇒ : TUNER
 - ⇒ : VIDEO
- Abbreviation
AUS : Australian model

• Circuit Boards Location

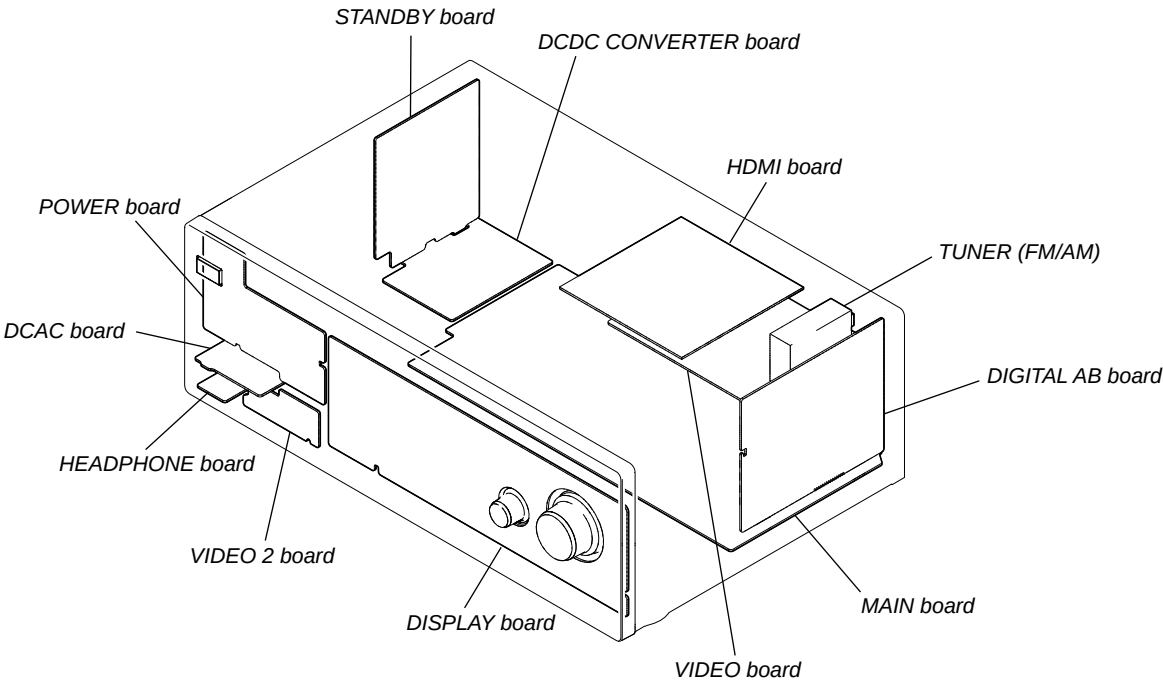


6-7. SCHEMATIC DIAGRAM - MAIN Board (1/3) - • See page 46 for IC Block Diagrams.

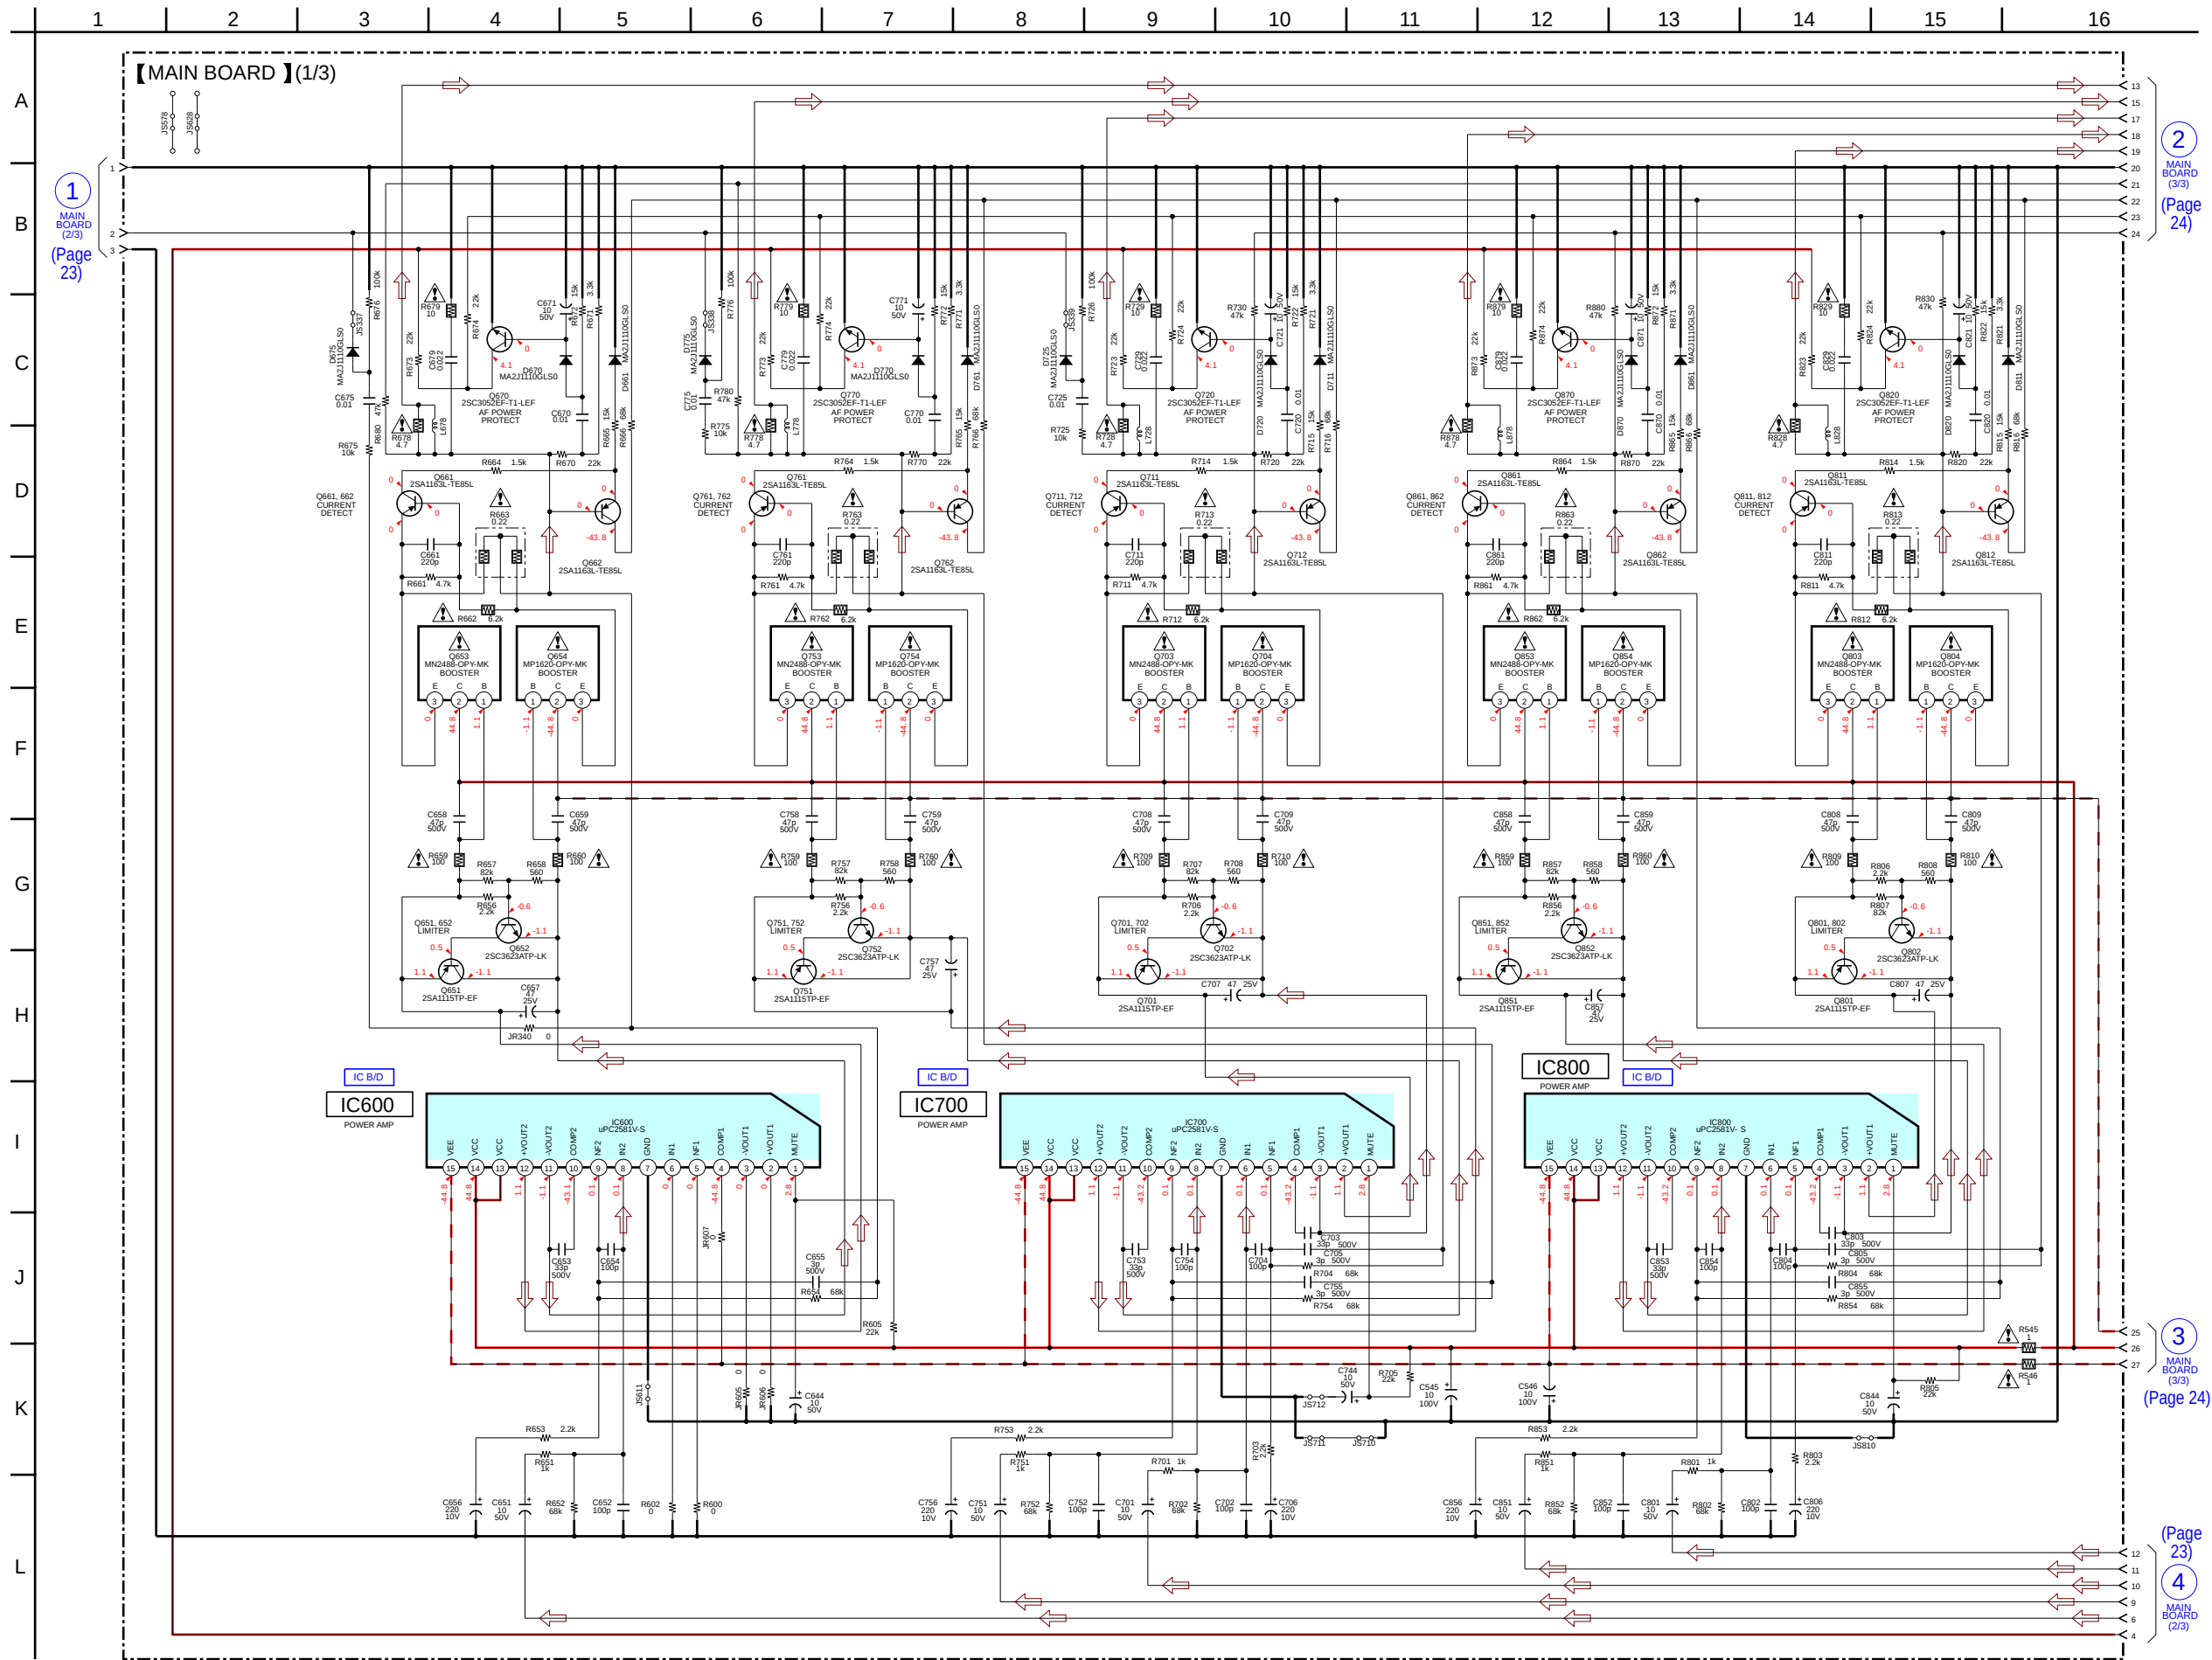


23



6-9. SCHEMATIC DIAGRAM - MAIN Board (3/3) -

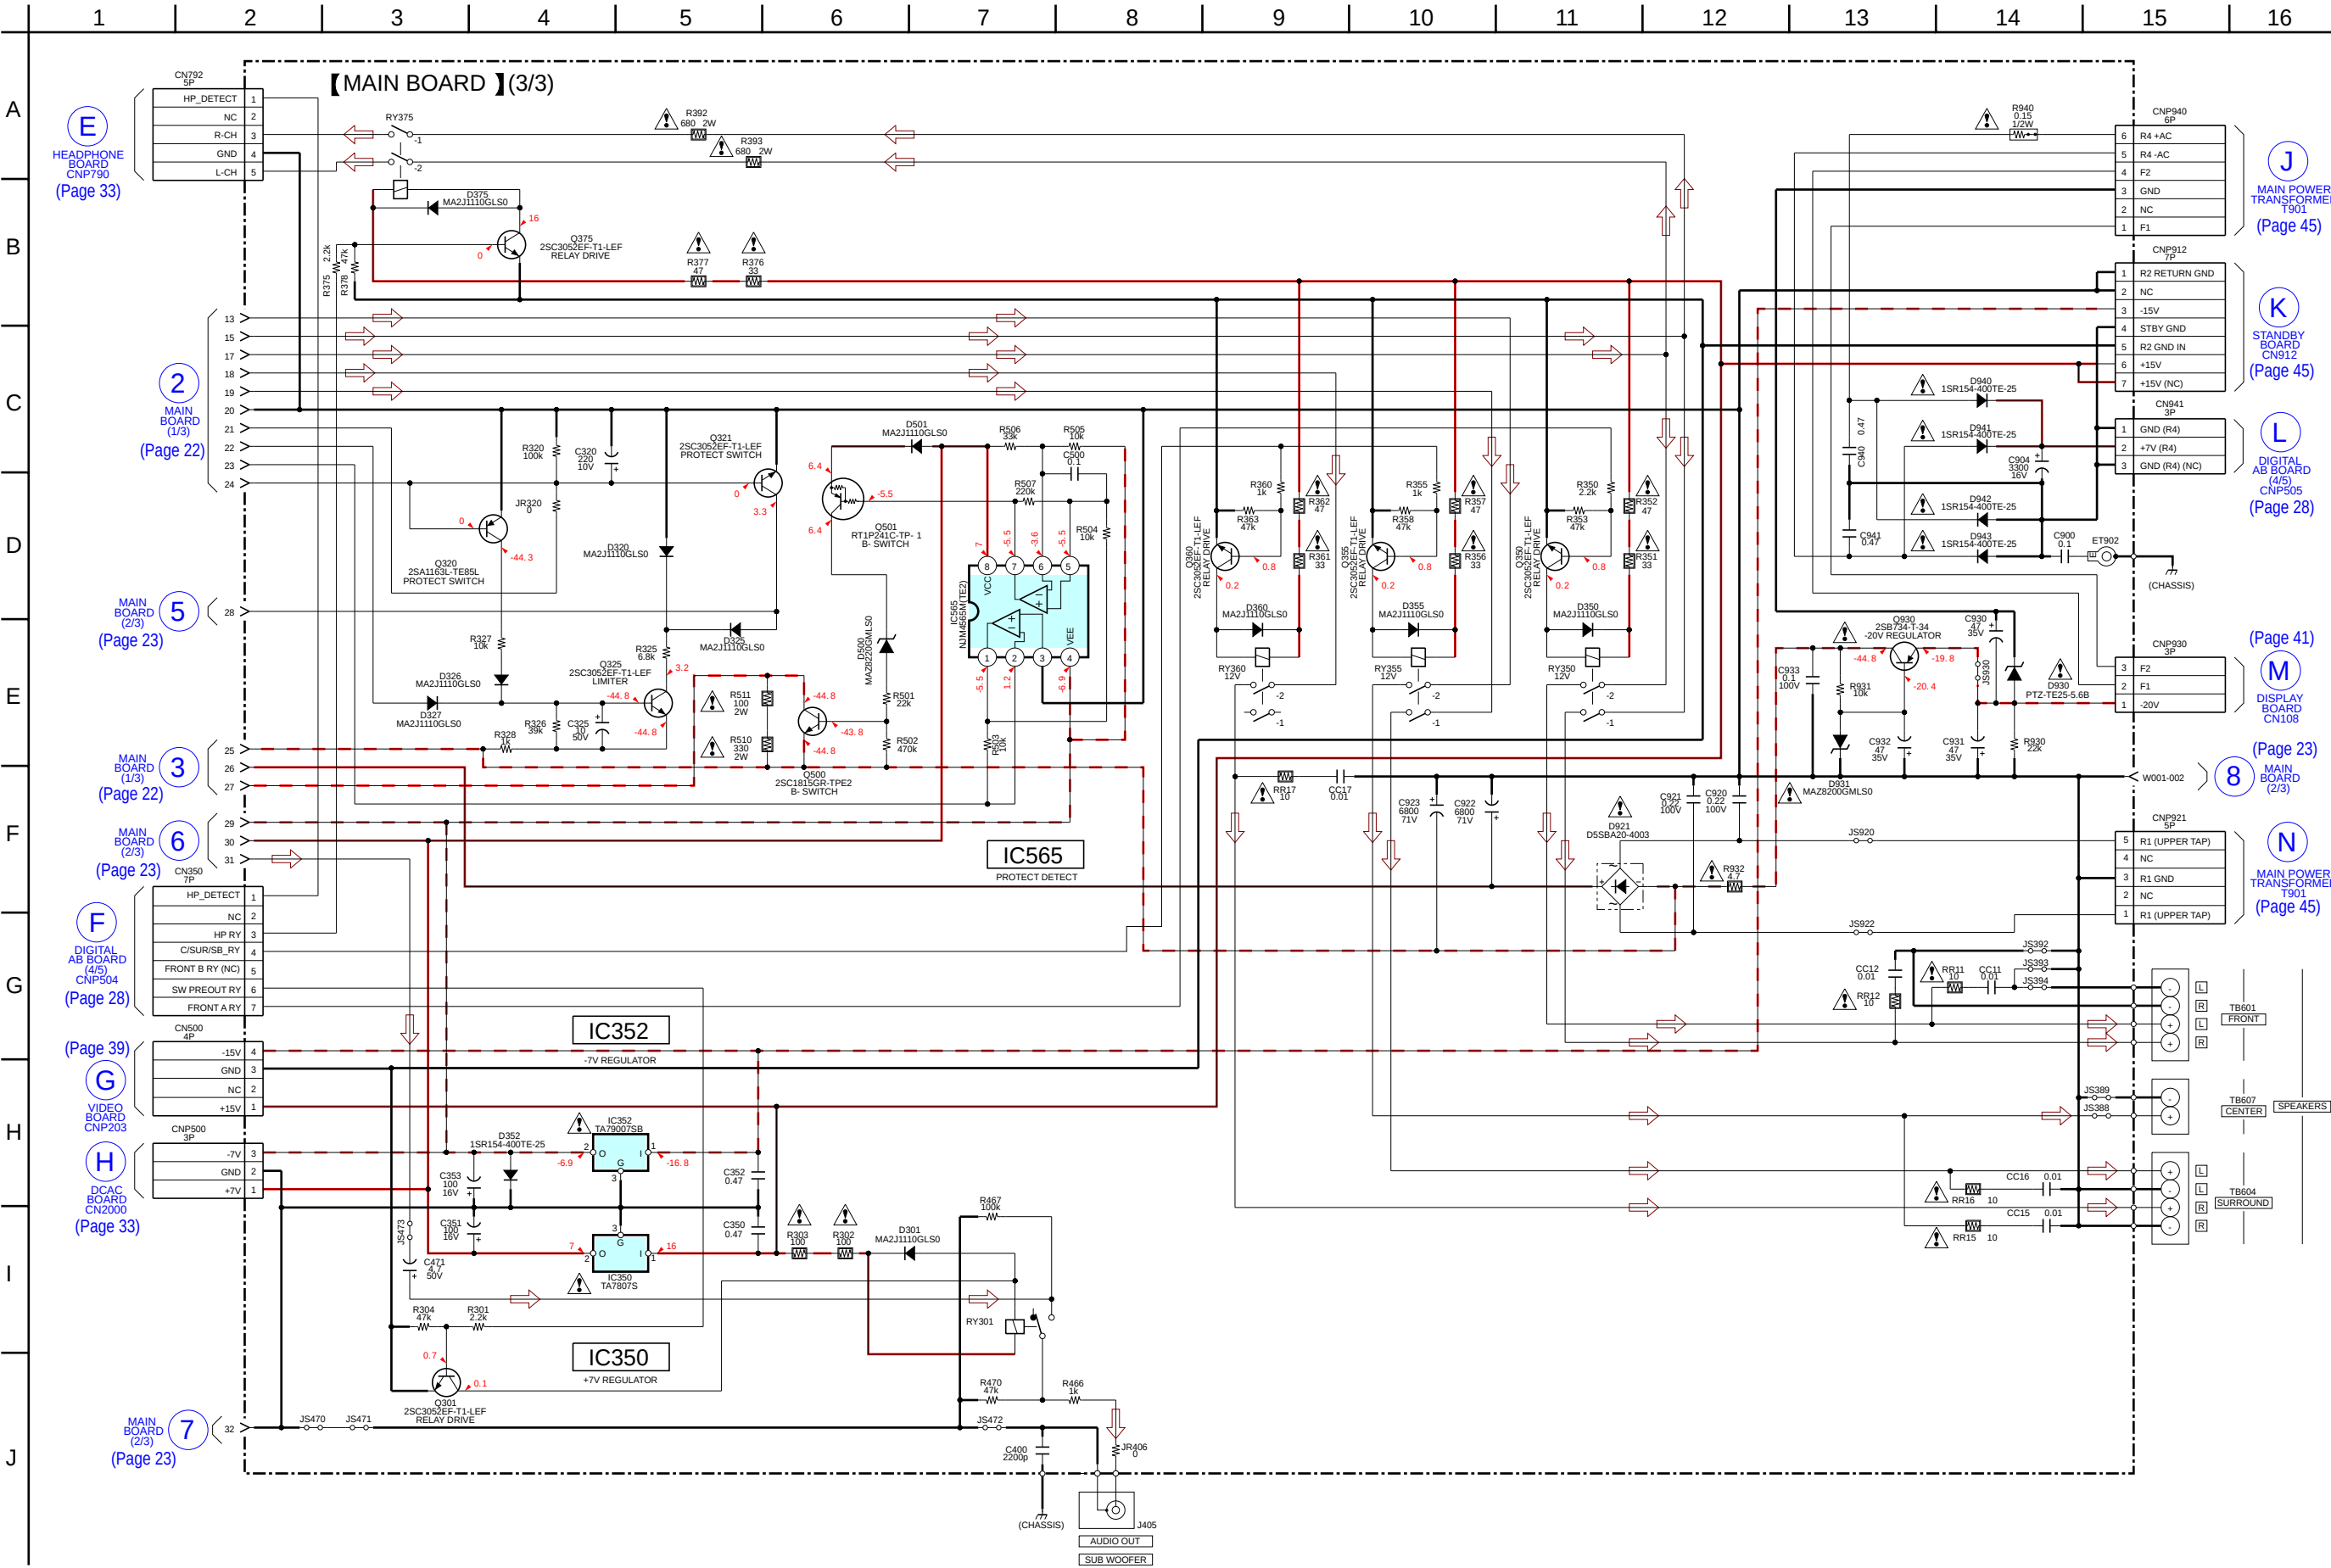


6-10. SCHEMATIC DIAGRAM - DIGITAL AB Board (1/5) - • See page 33 for Waveforms. • See page 46 for IC Block Diagrams.

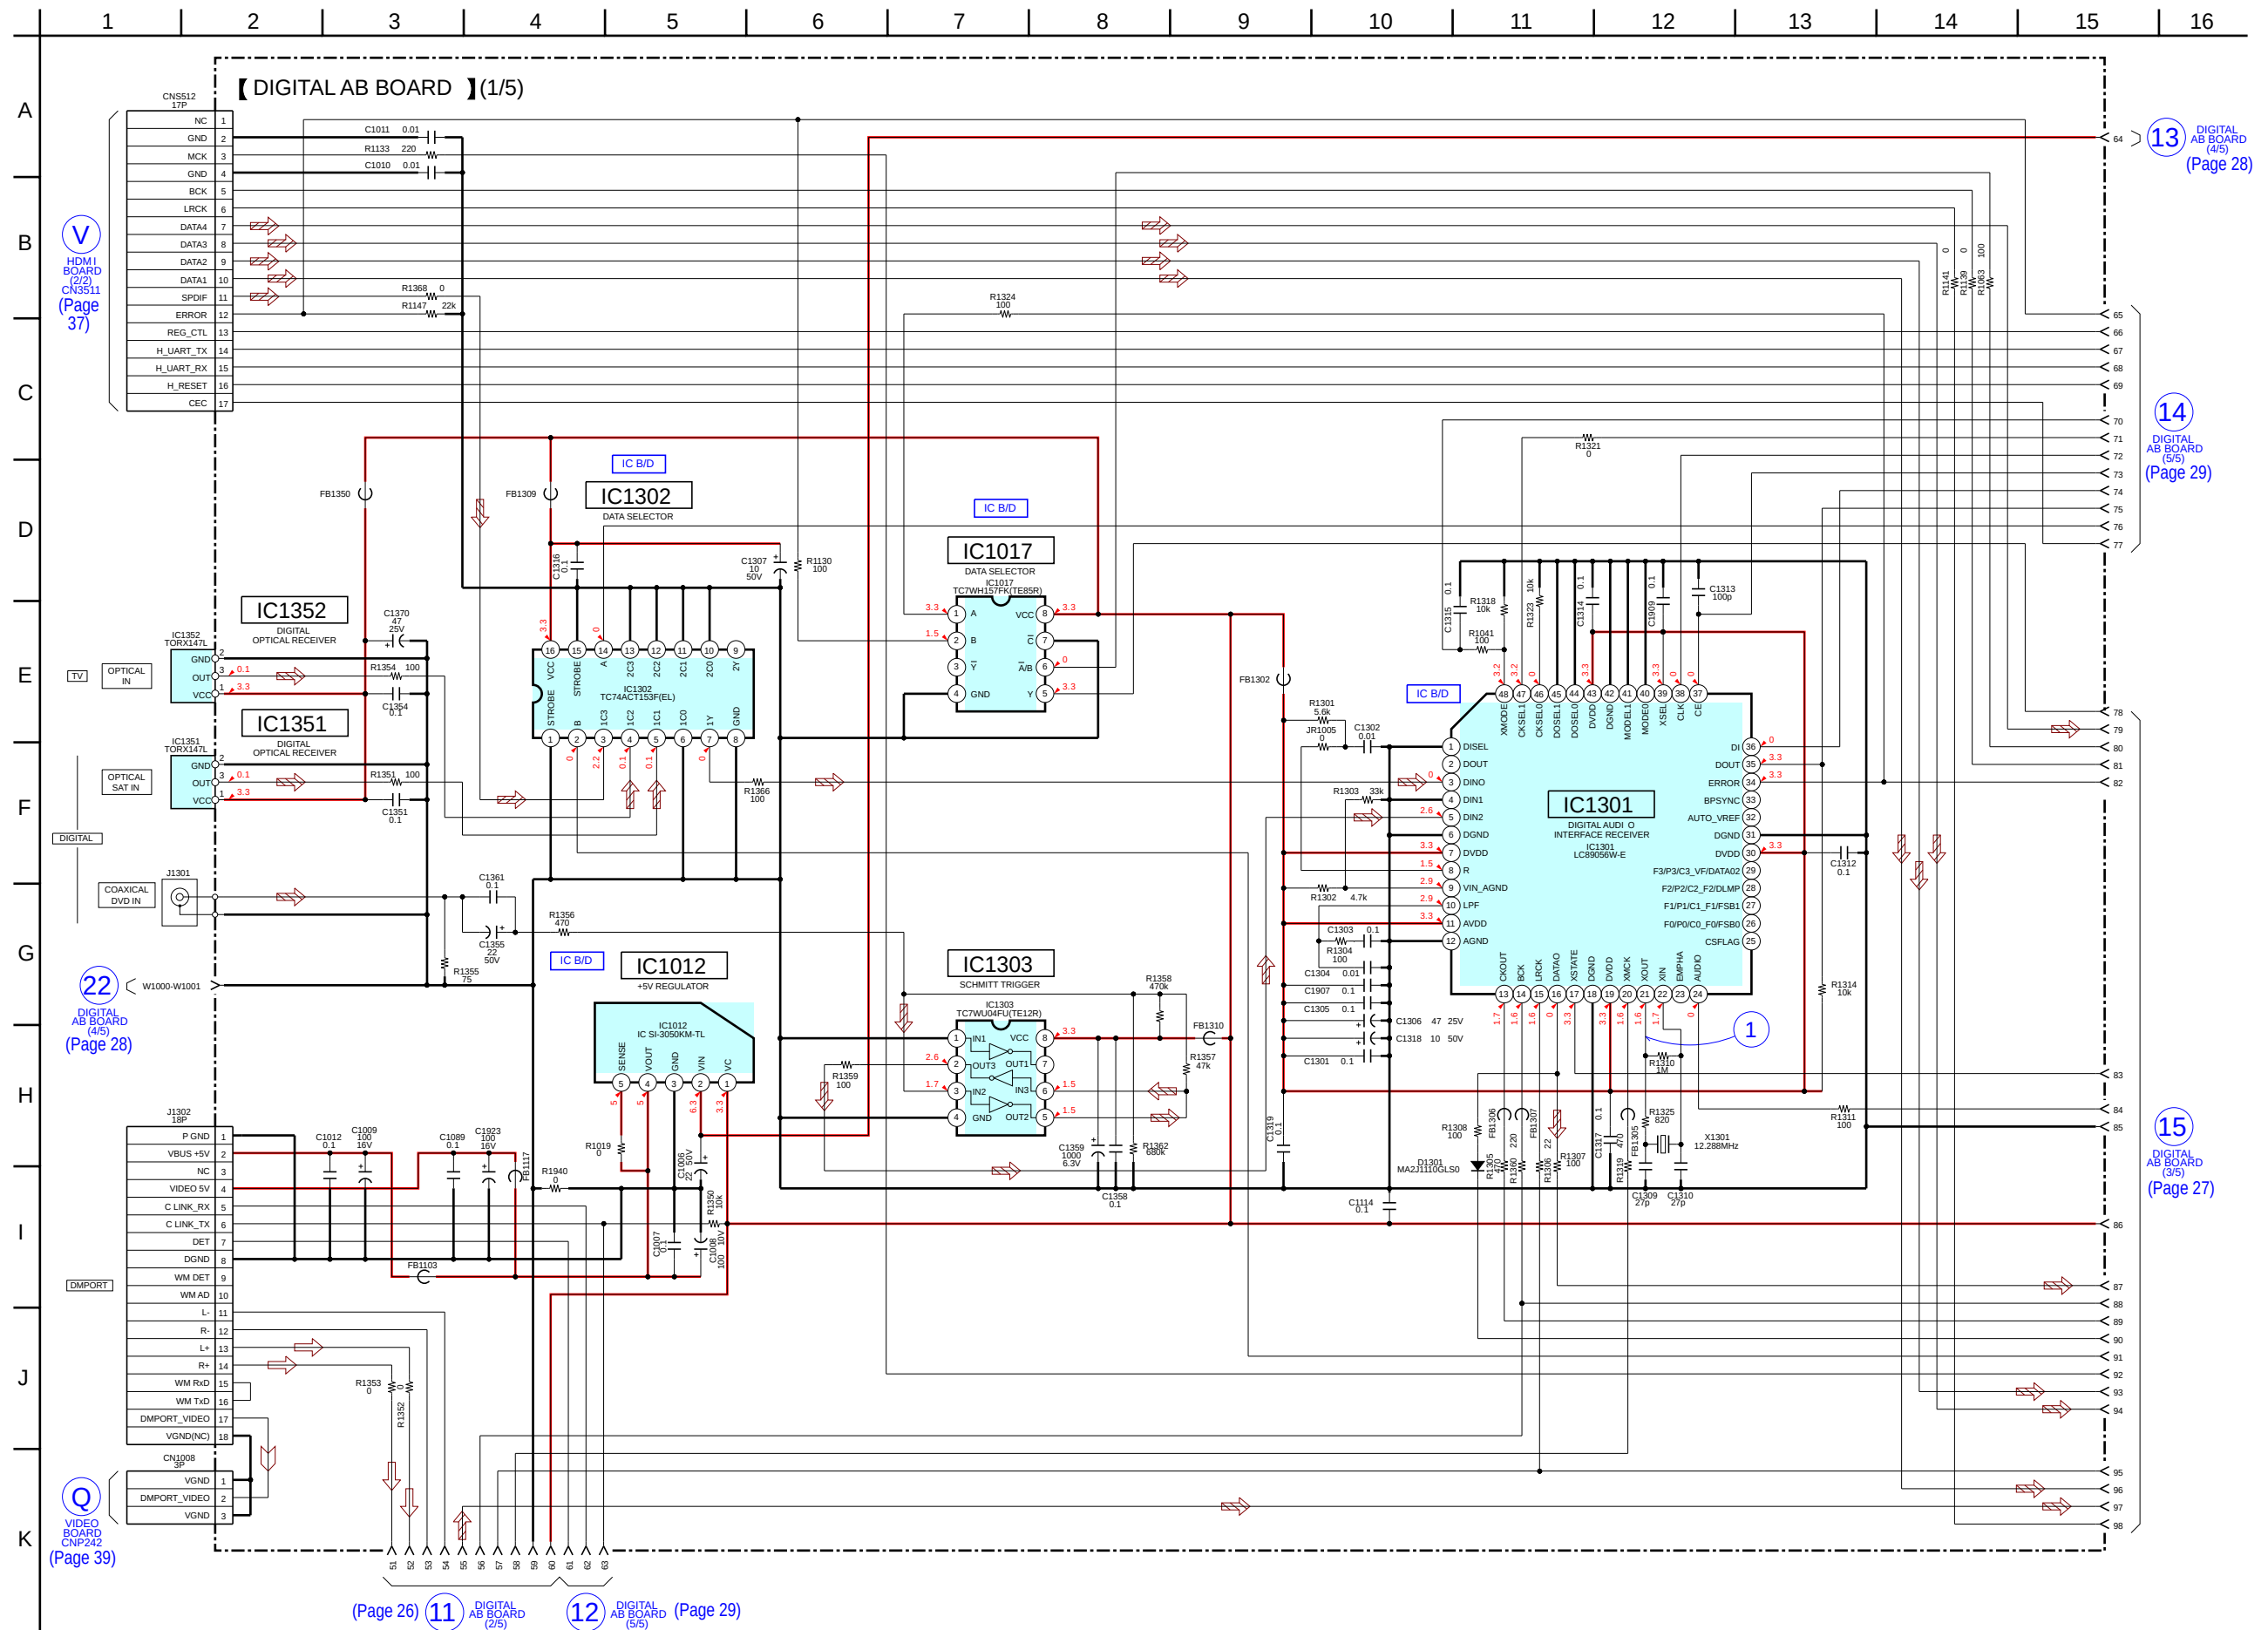


26 26




6-12. SCHEMATIC DIAGRAM - DIGITAL AB Board (3/5) - • See page 33 for Waveforms. • See page 46 for IC Block Diagrams. • See page 53 for IC Pin Function Description.

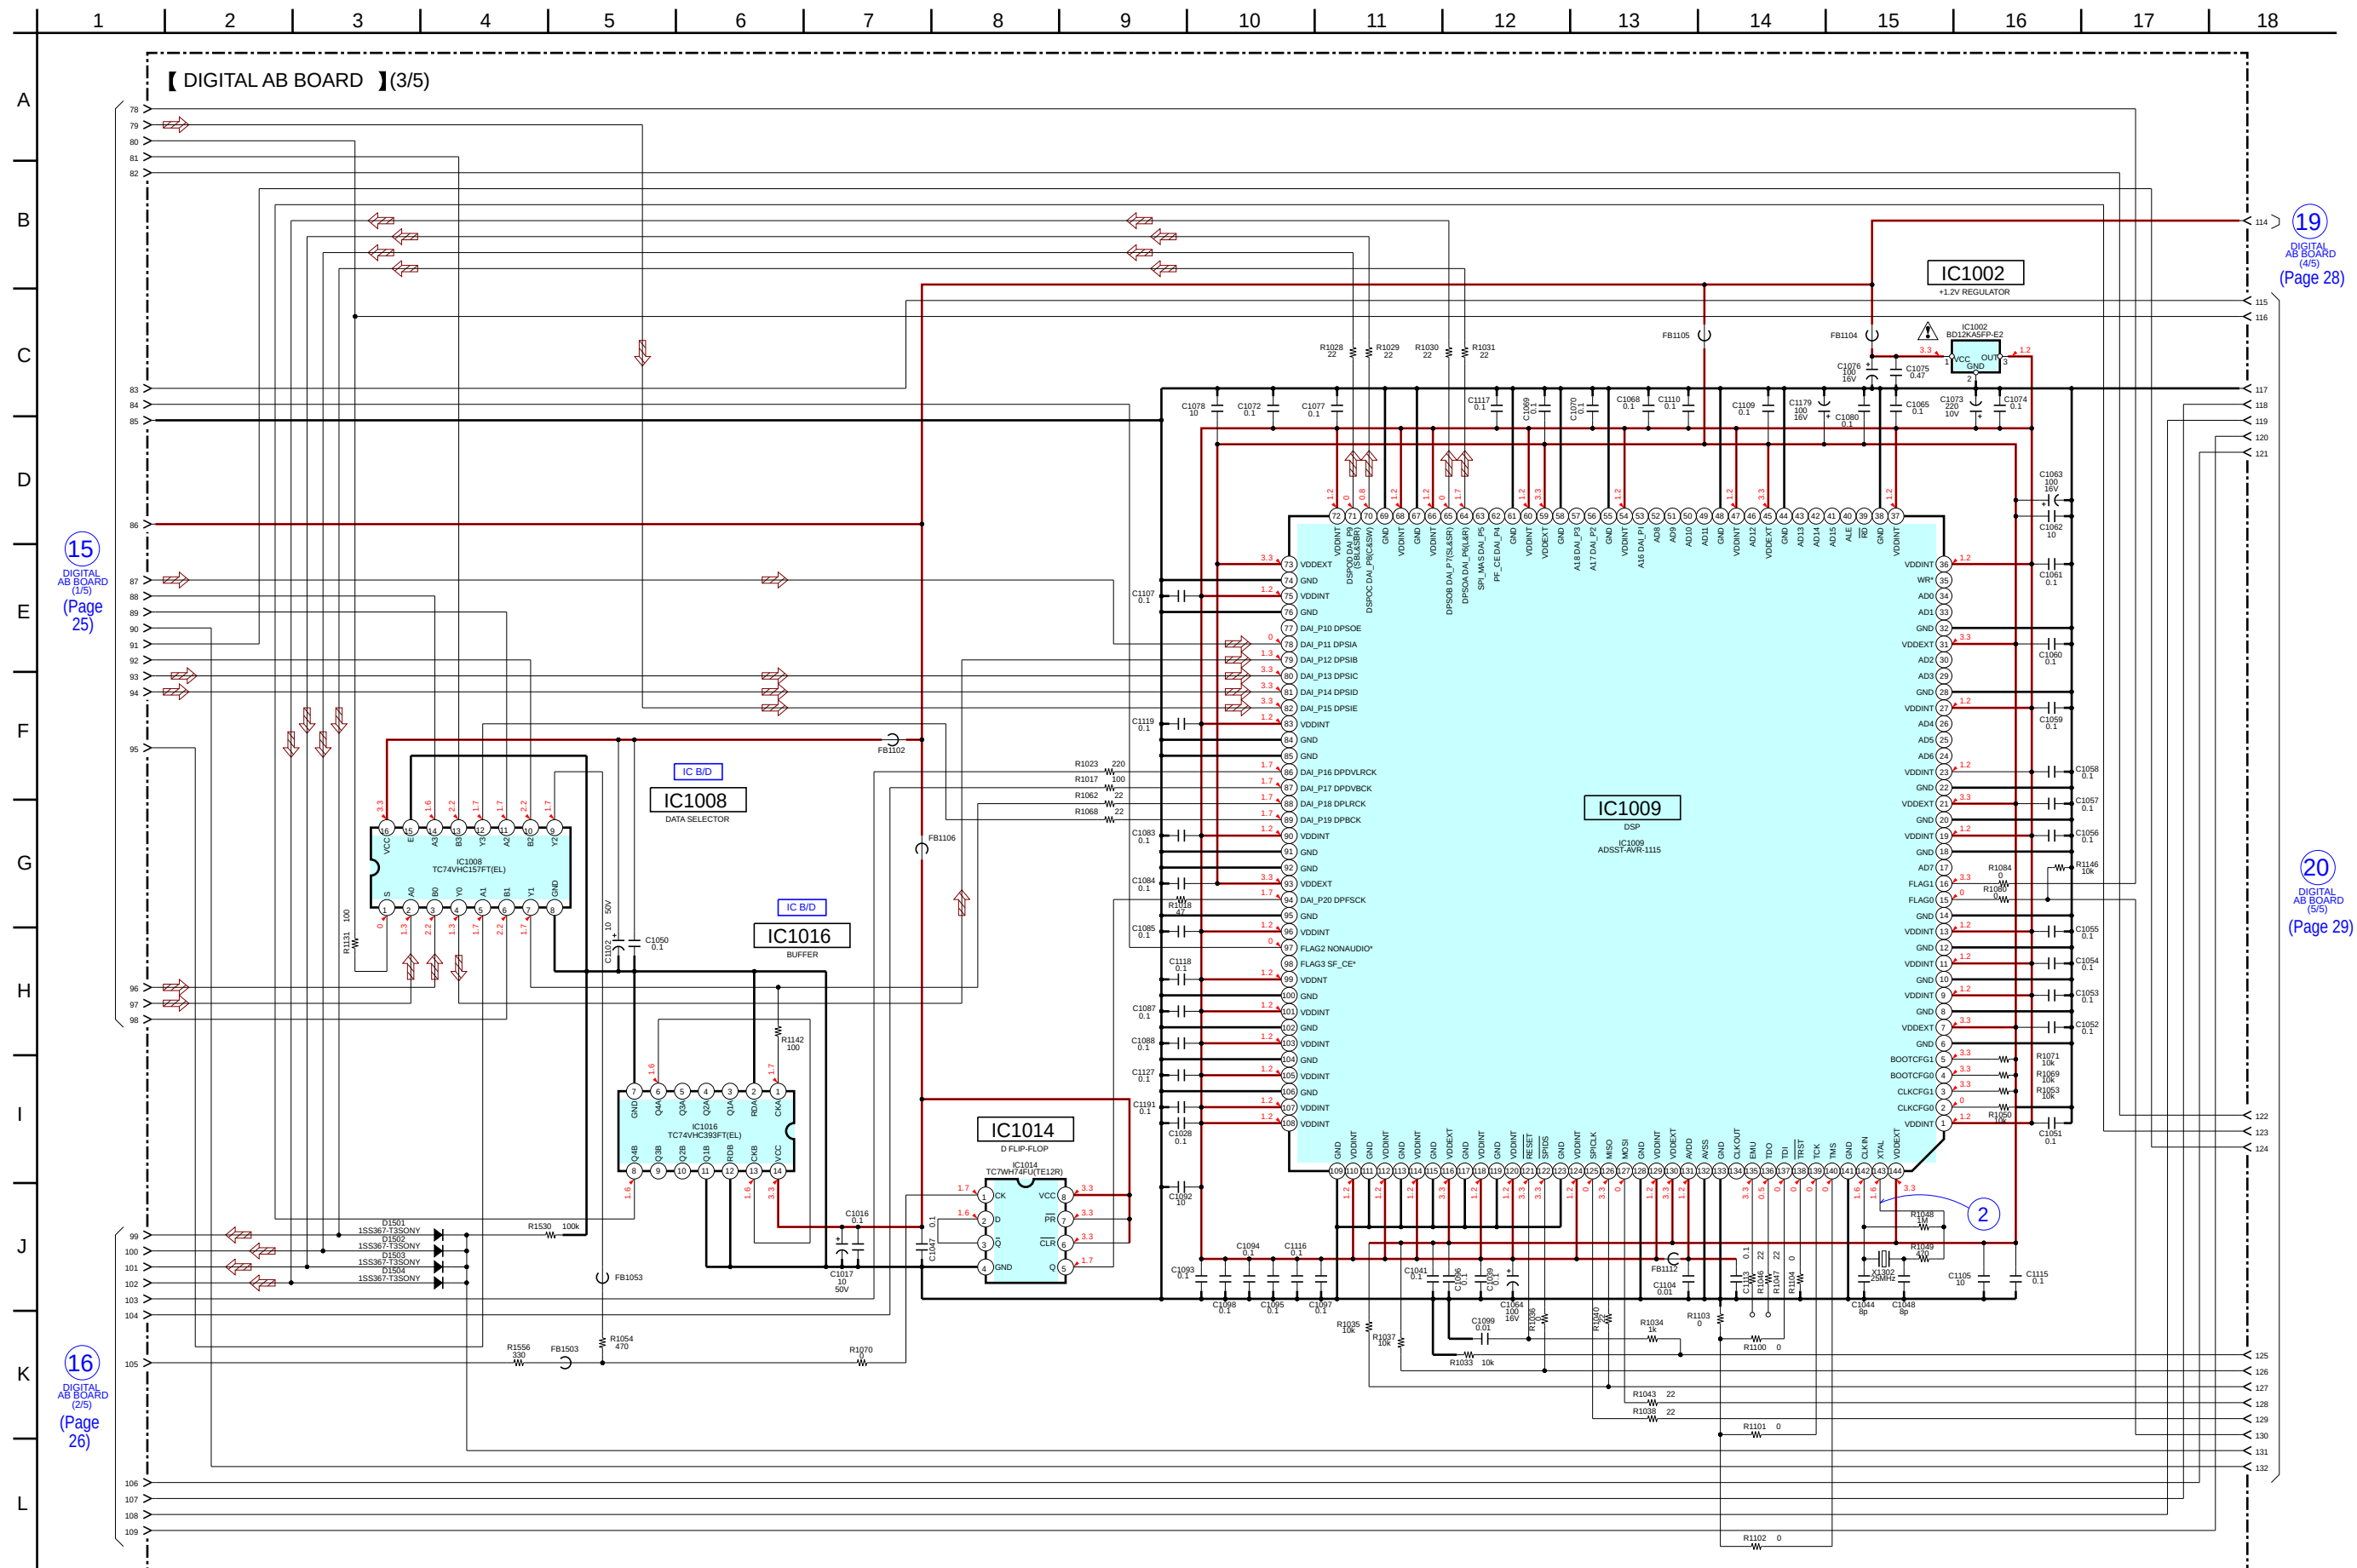


6-13. SCHEMATIC DIAGRAM - DIGITAL AB Board (4/5) - • See page 46 for IC Block Diagrams.

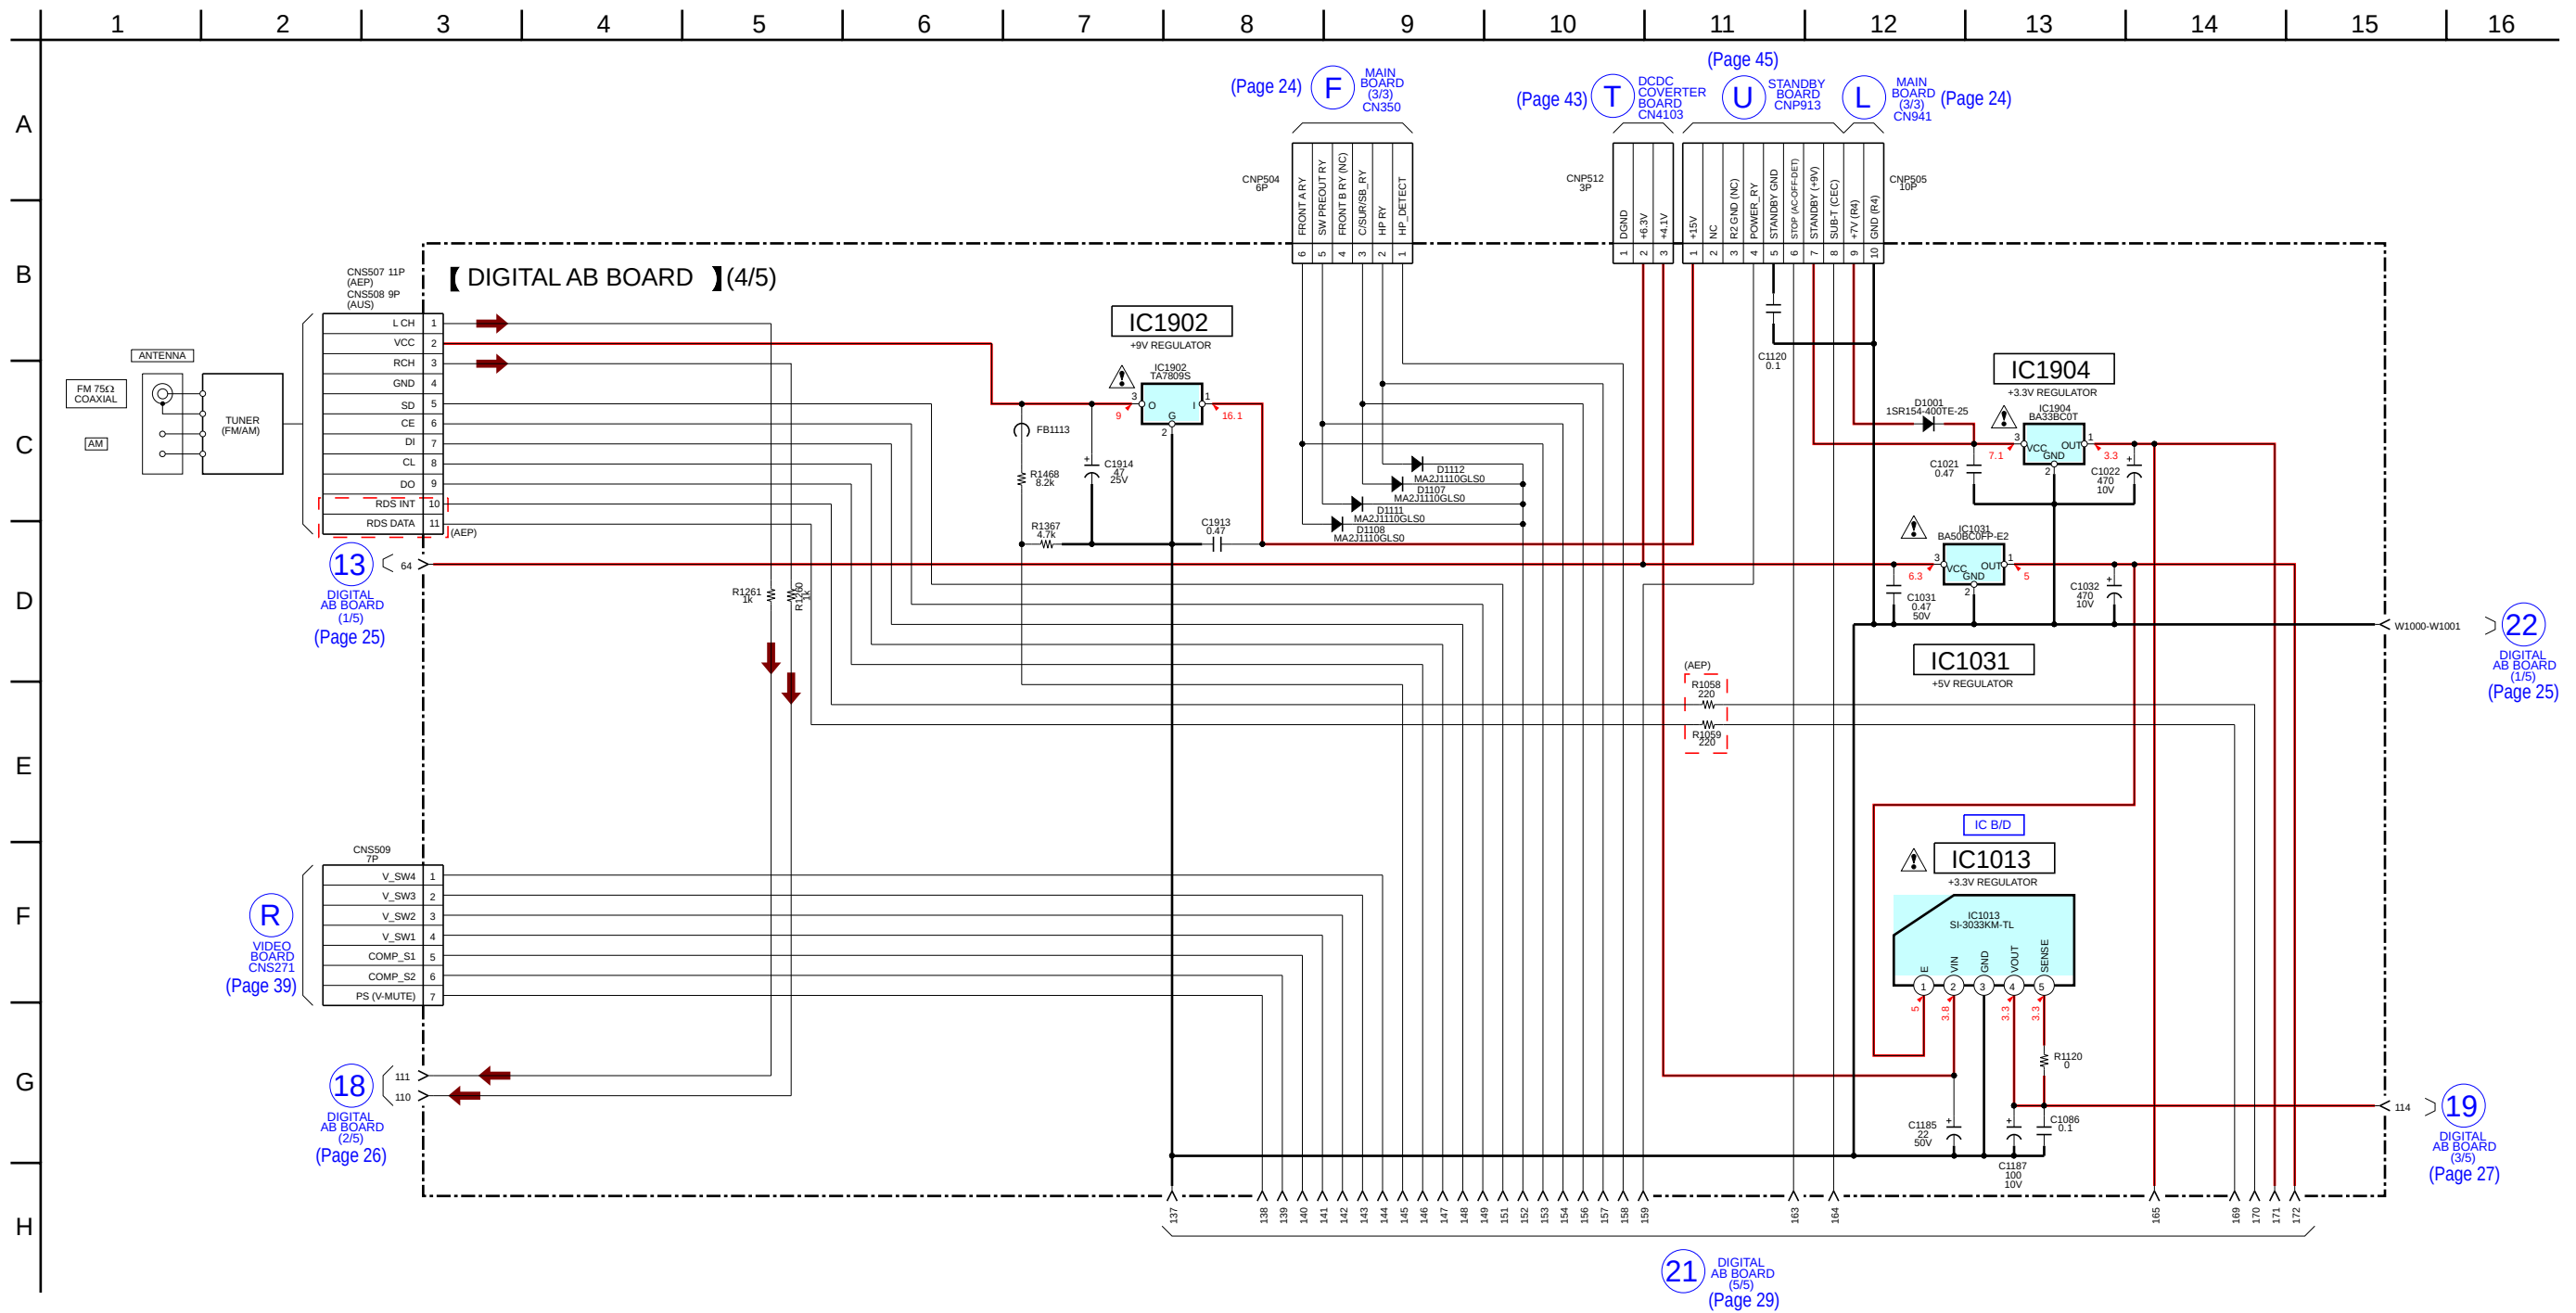

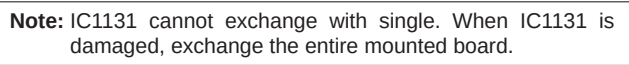


6-16. PRINTED WIRING BOARD - DIGITAL AB Board (Conductor Side) - • See page 20 for Circuit Boards Location. • : Uses unleaded solder.

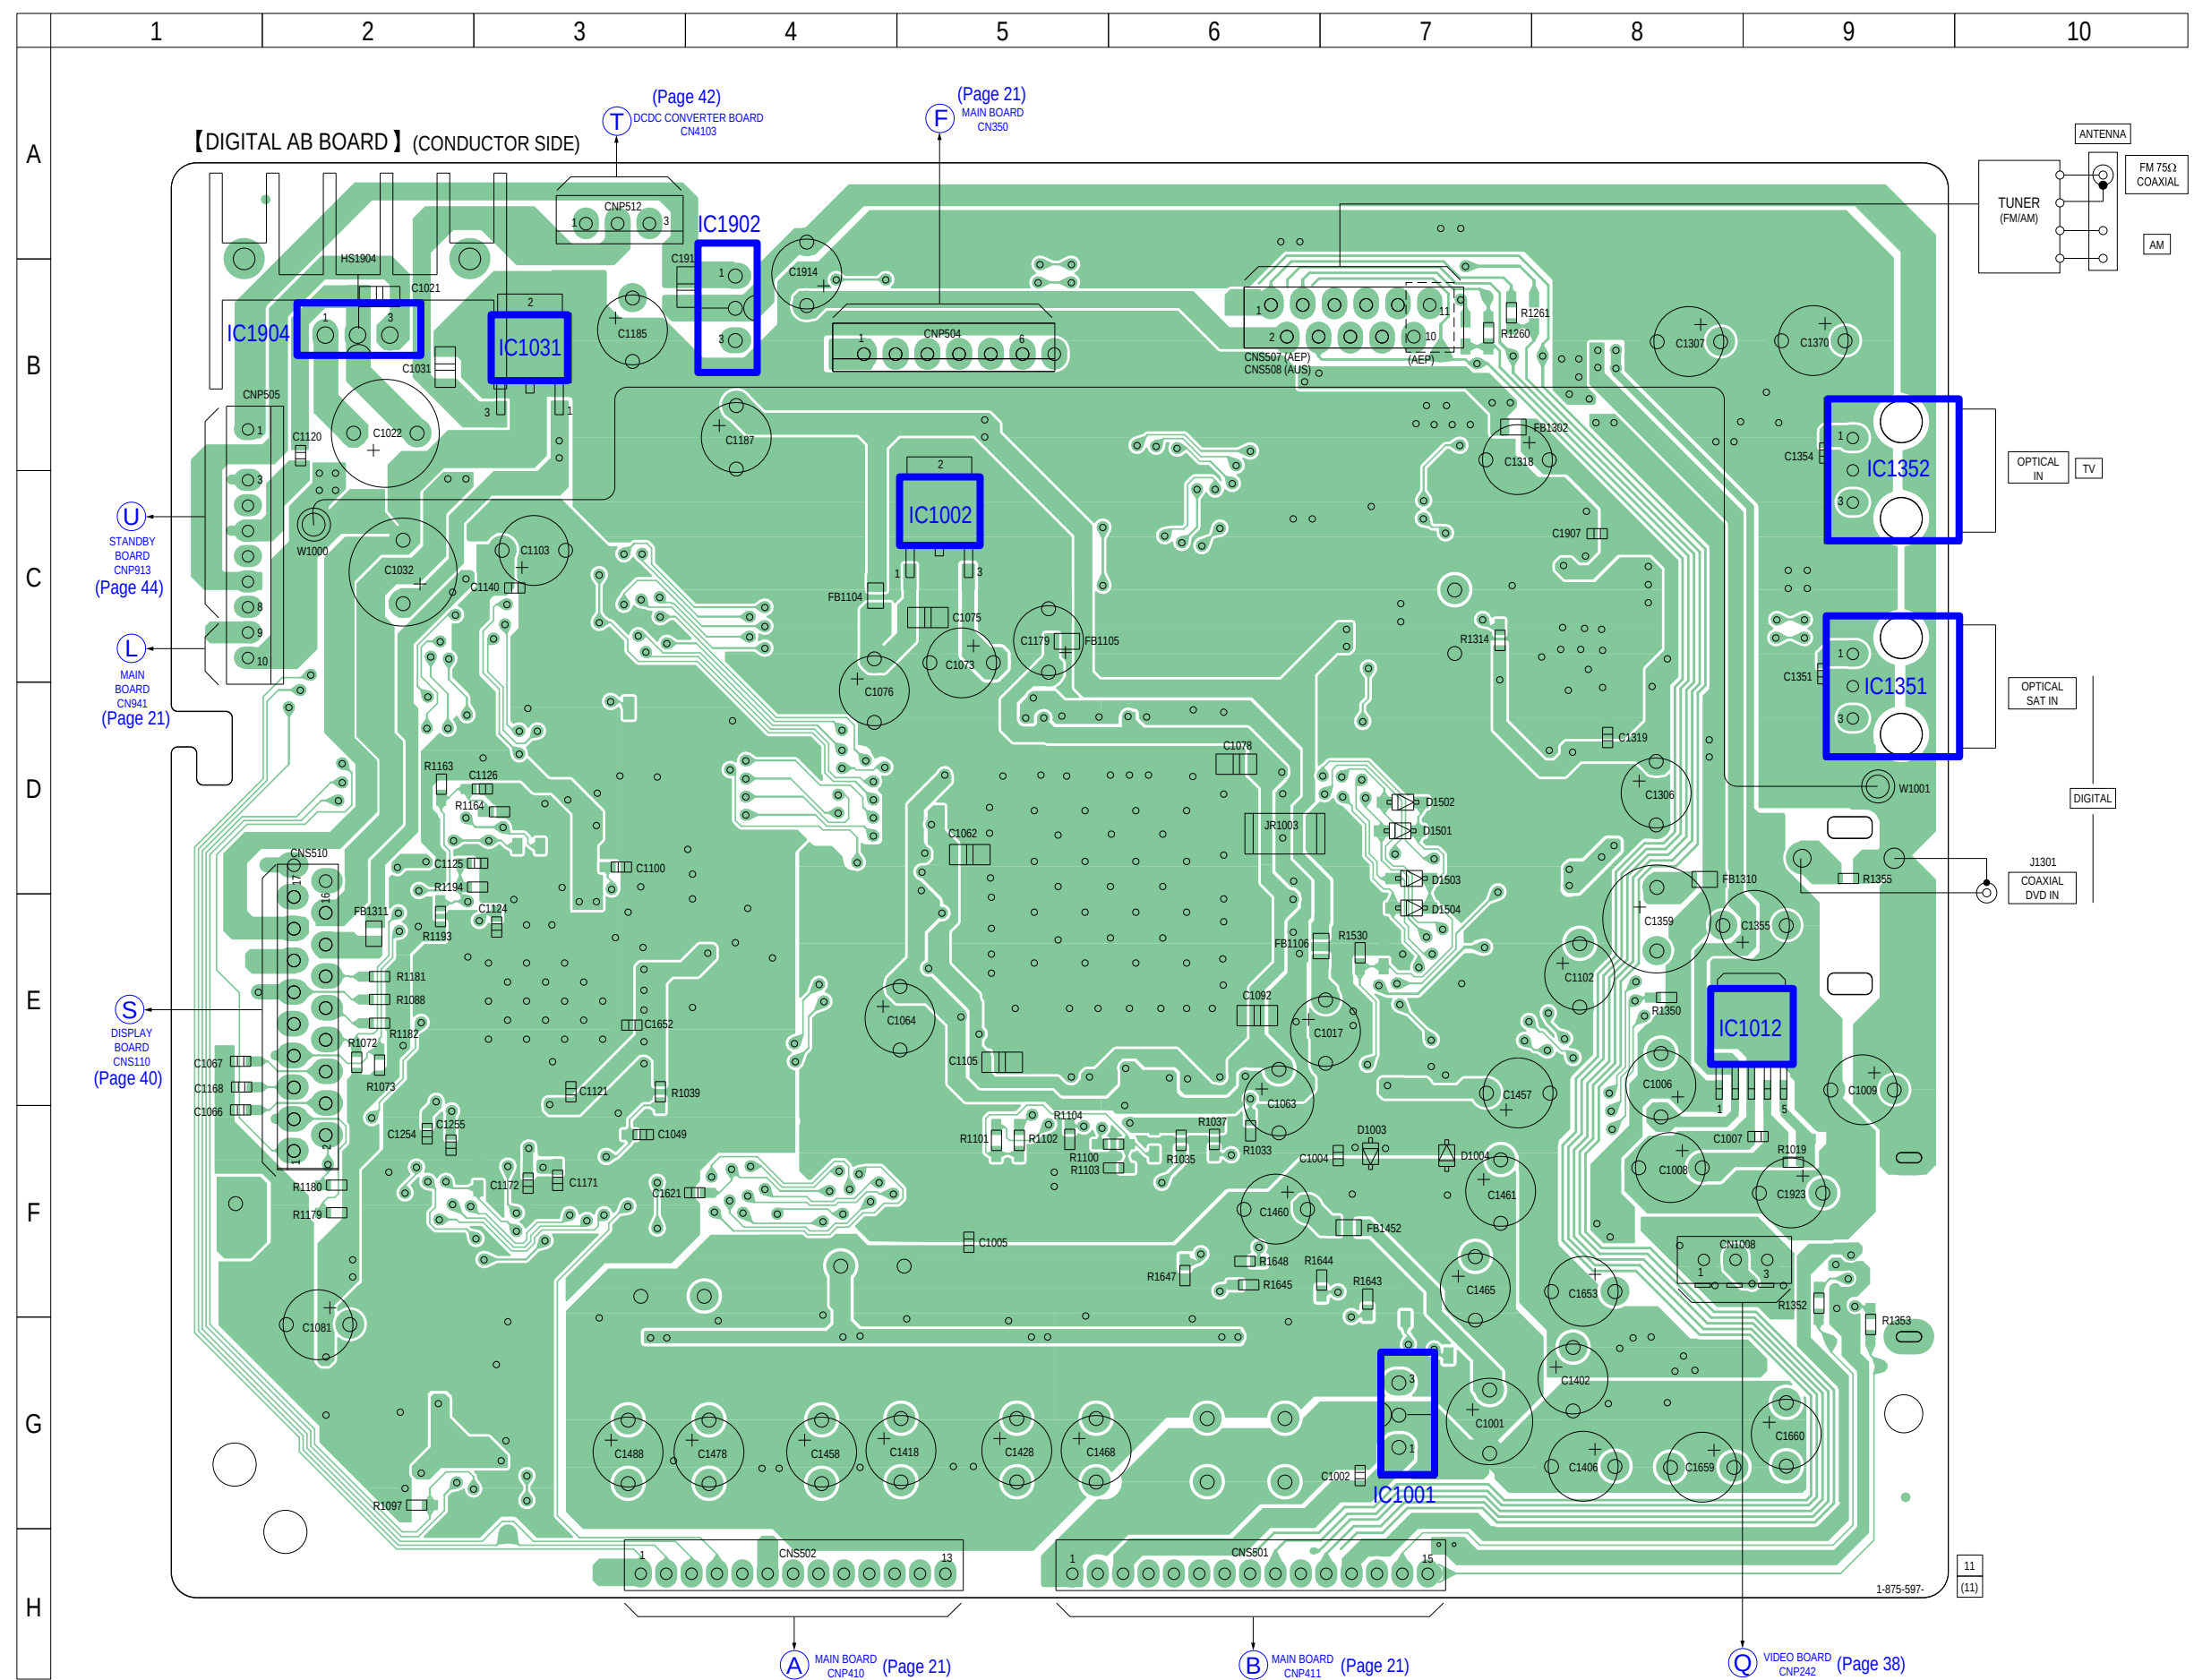

• Semiconductor Location

Ref. No.	Location
D1003	F-7
D1004	F-7
D1501	D-7
D1502	D-7
D1503	D-7
D1504	E-7
IC1001	G-7
IC1002	C-5
IC1012	E-9
IC1031	B-3
IC1351	D-9
IC1352	B-9
IC1902	B-4
IC1904	B-2


6-17. PRINTED WIRING BOARDS - MIC/HEADPHONE Section - • See page 20 for Circuit Boards Location. • : Uses unleaded solder.

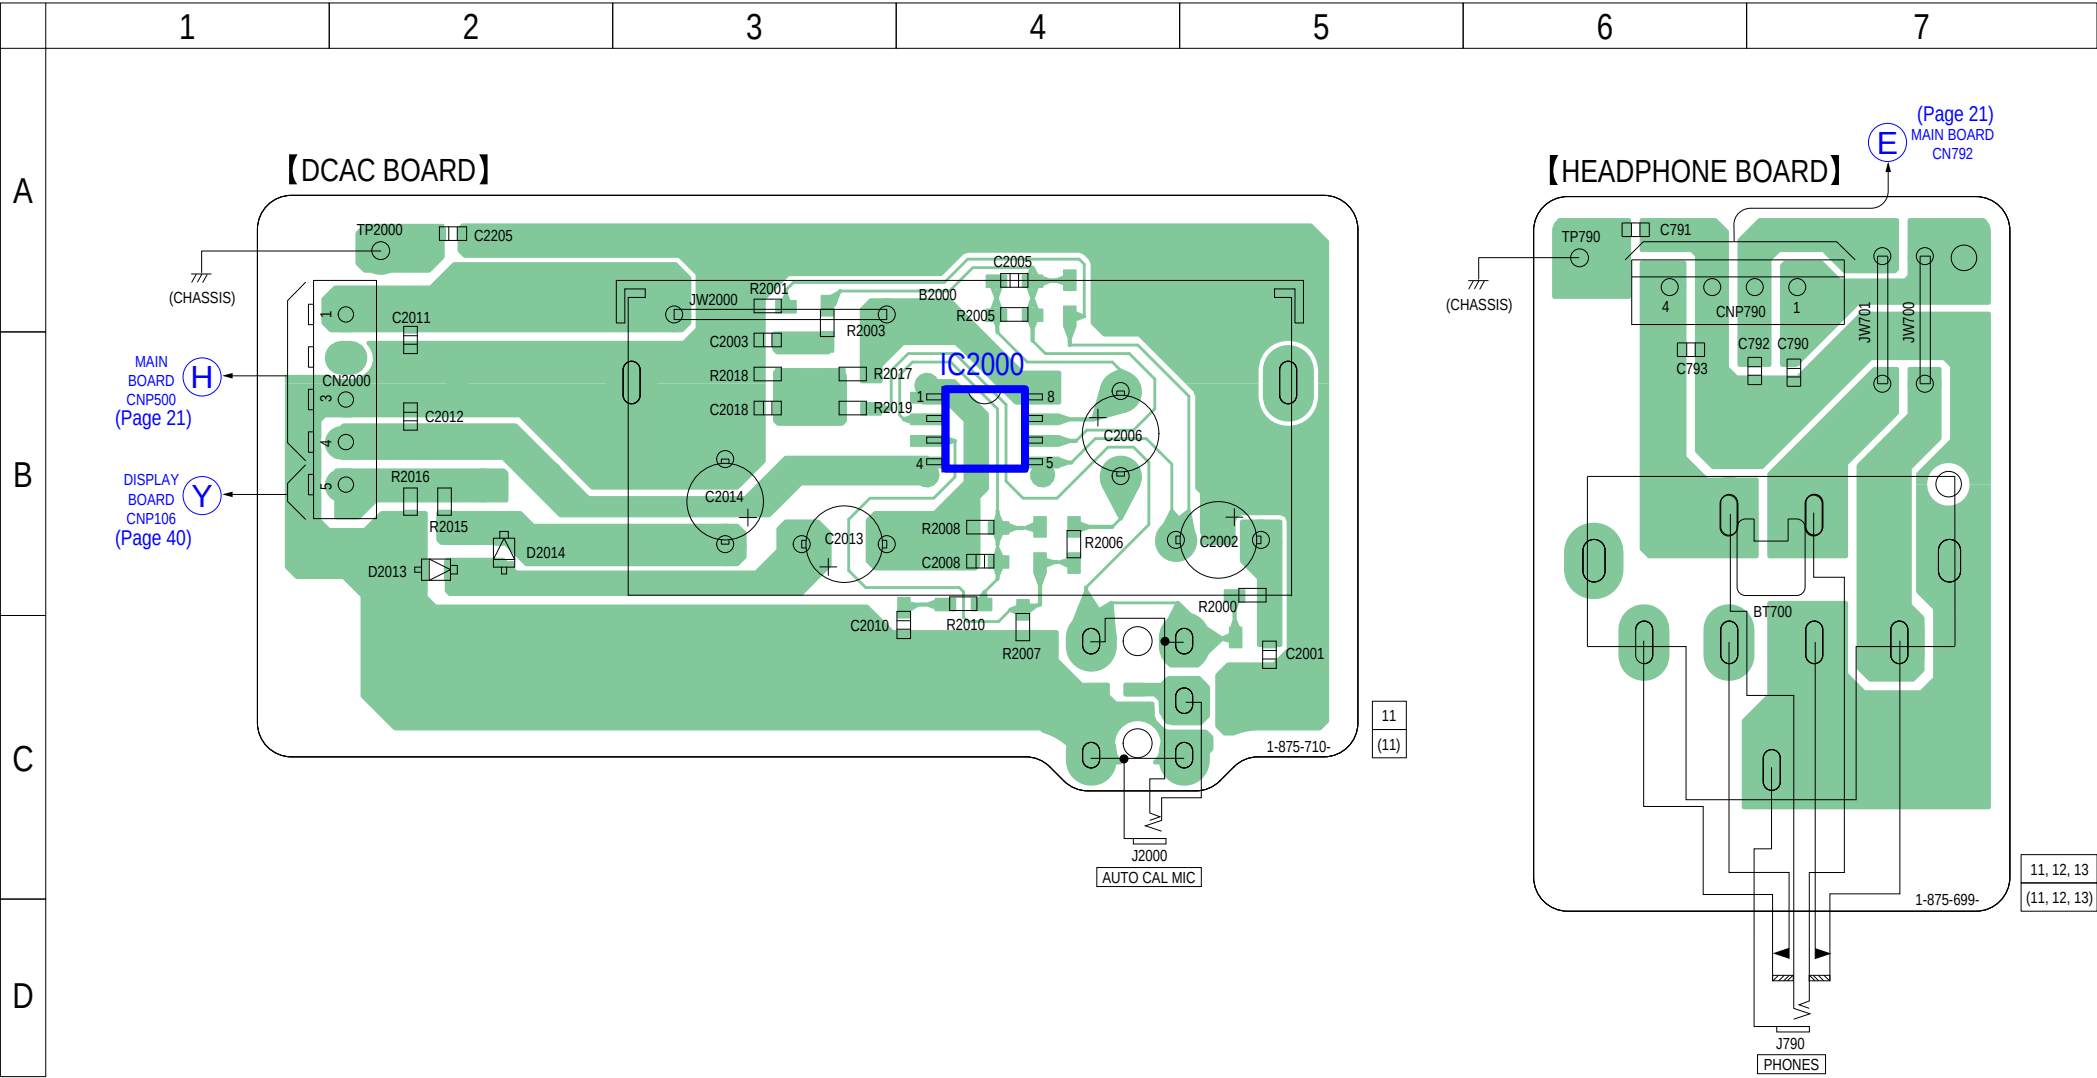

33



6-19. PRINTED WIRING BOARD - HDMI Board (Side A) - • See page 20 for Circuit Boards Location. •  : Uses unleaded solder.

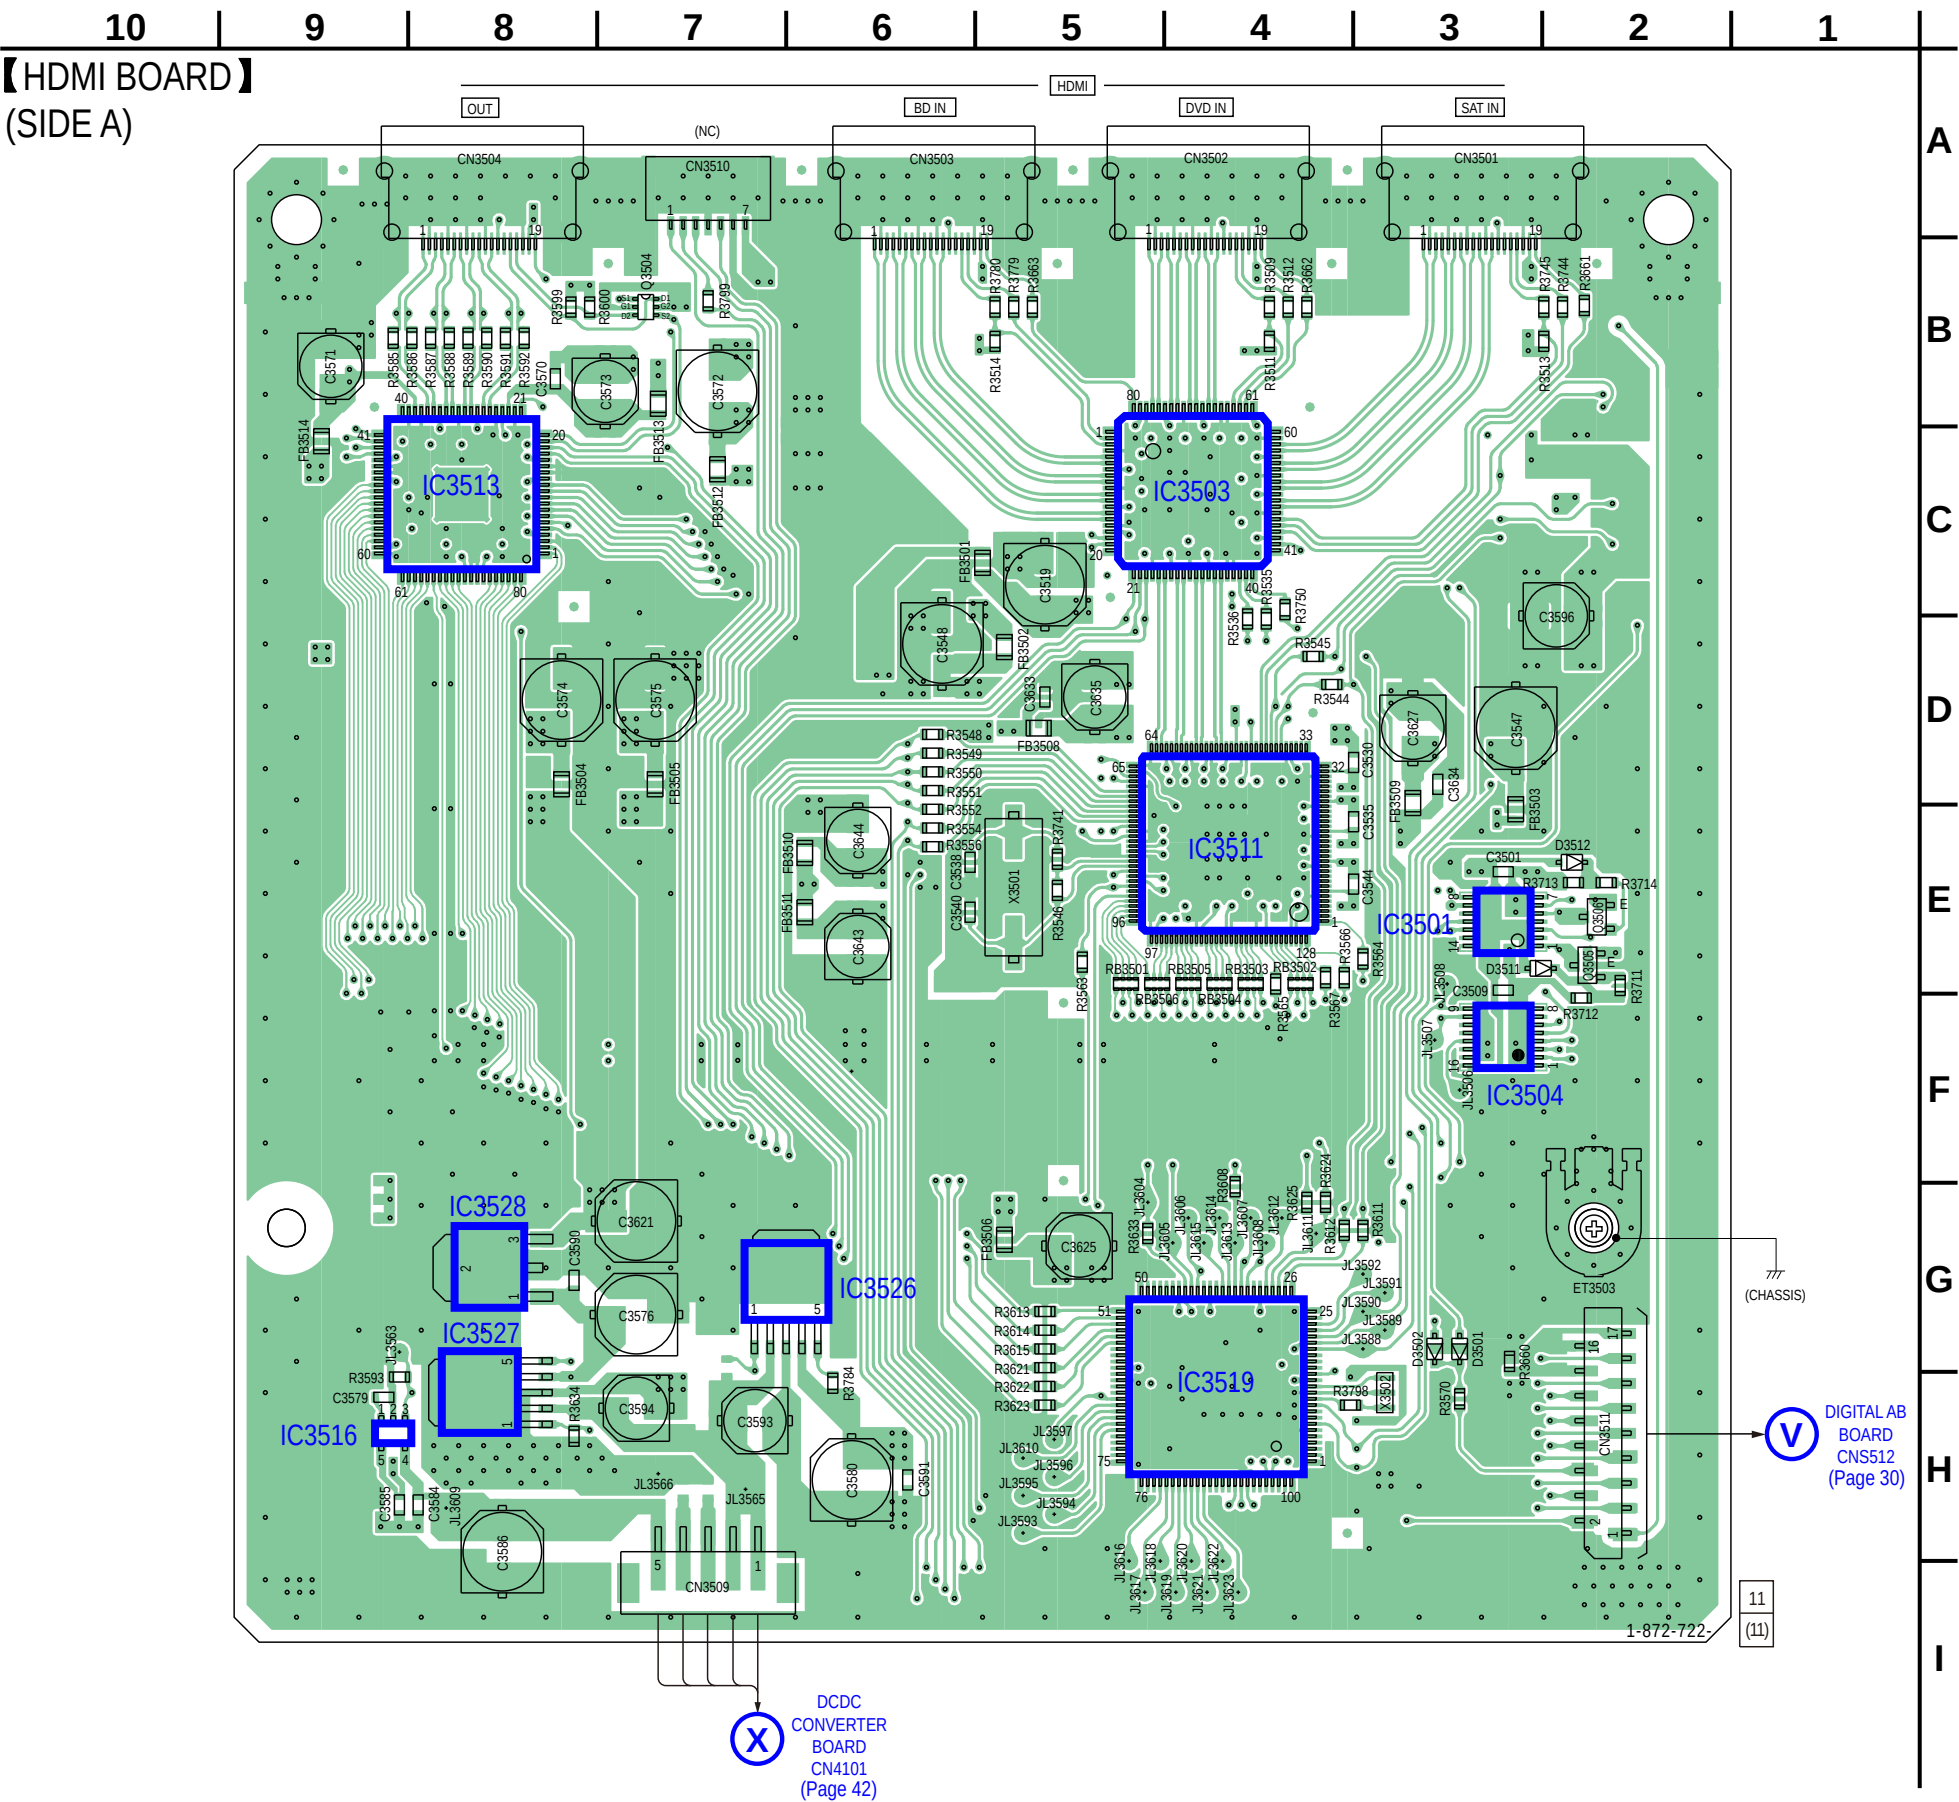


• See page 20 for Circuit Boards Location. • : Uses unleaded solder.



: Uses unleaded solder.



6-21. SCHEMATIC DIAGRAM - HDMI Board (1/2) - • See page 33 for Waveforms. • See page 46 for IC Block Diagrams. • See page 53 for IC Pin Function Description.

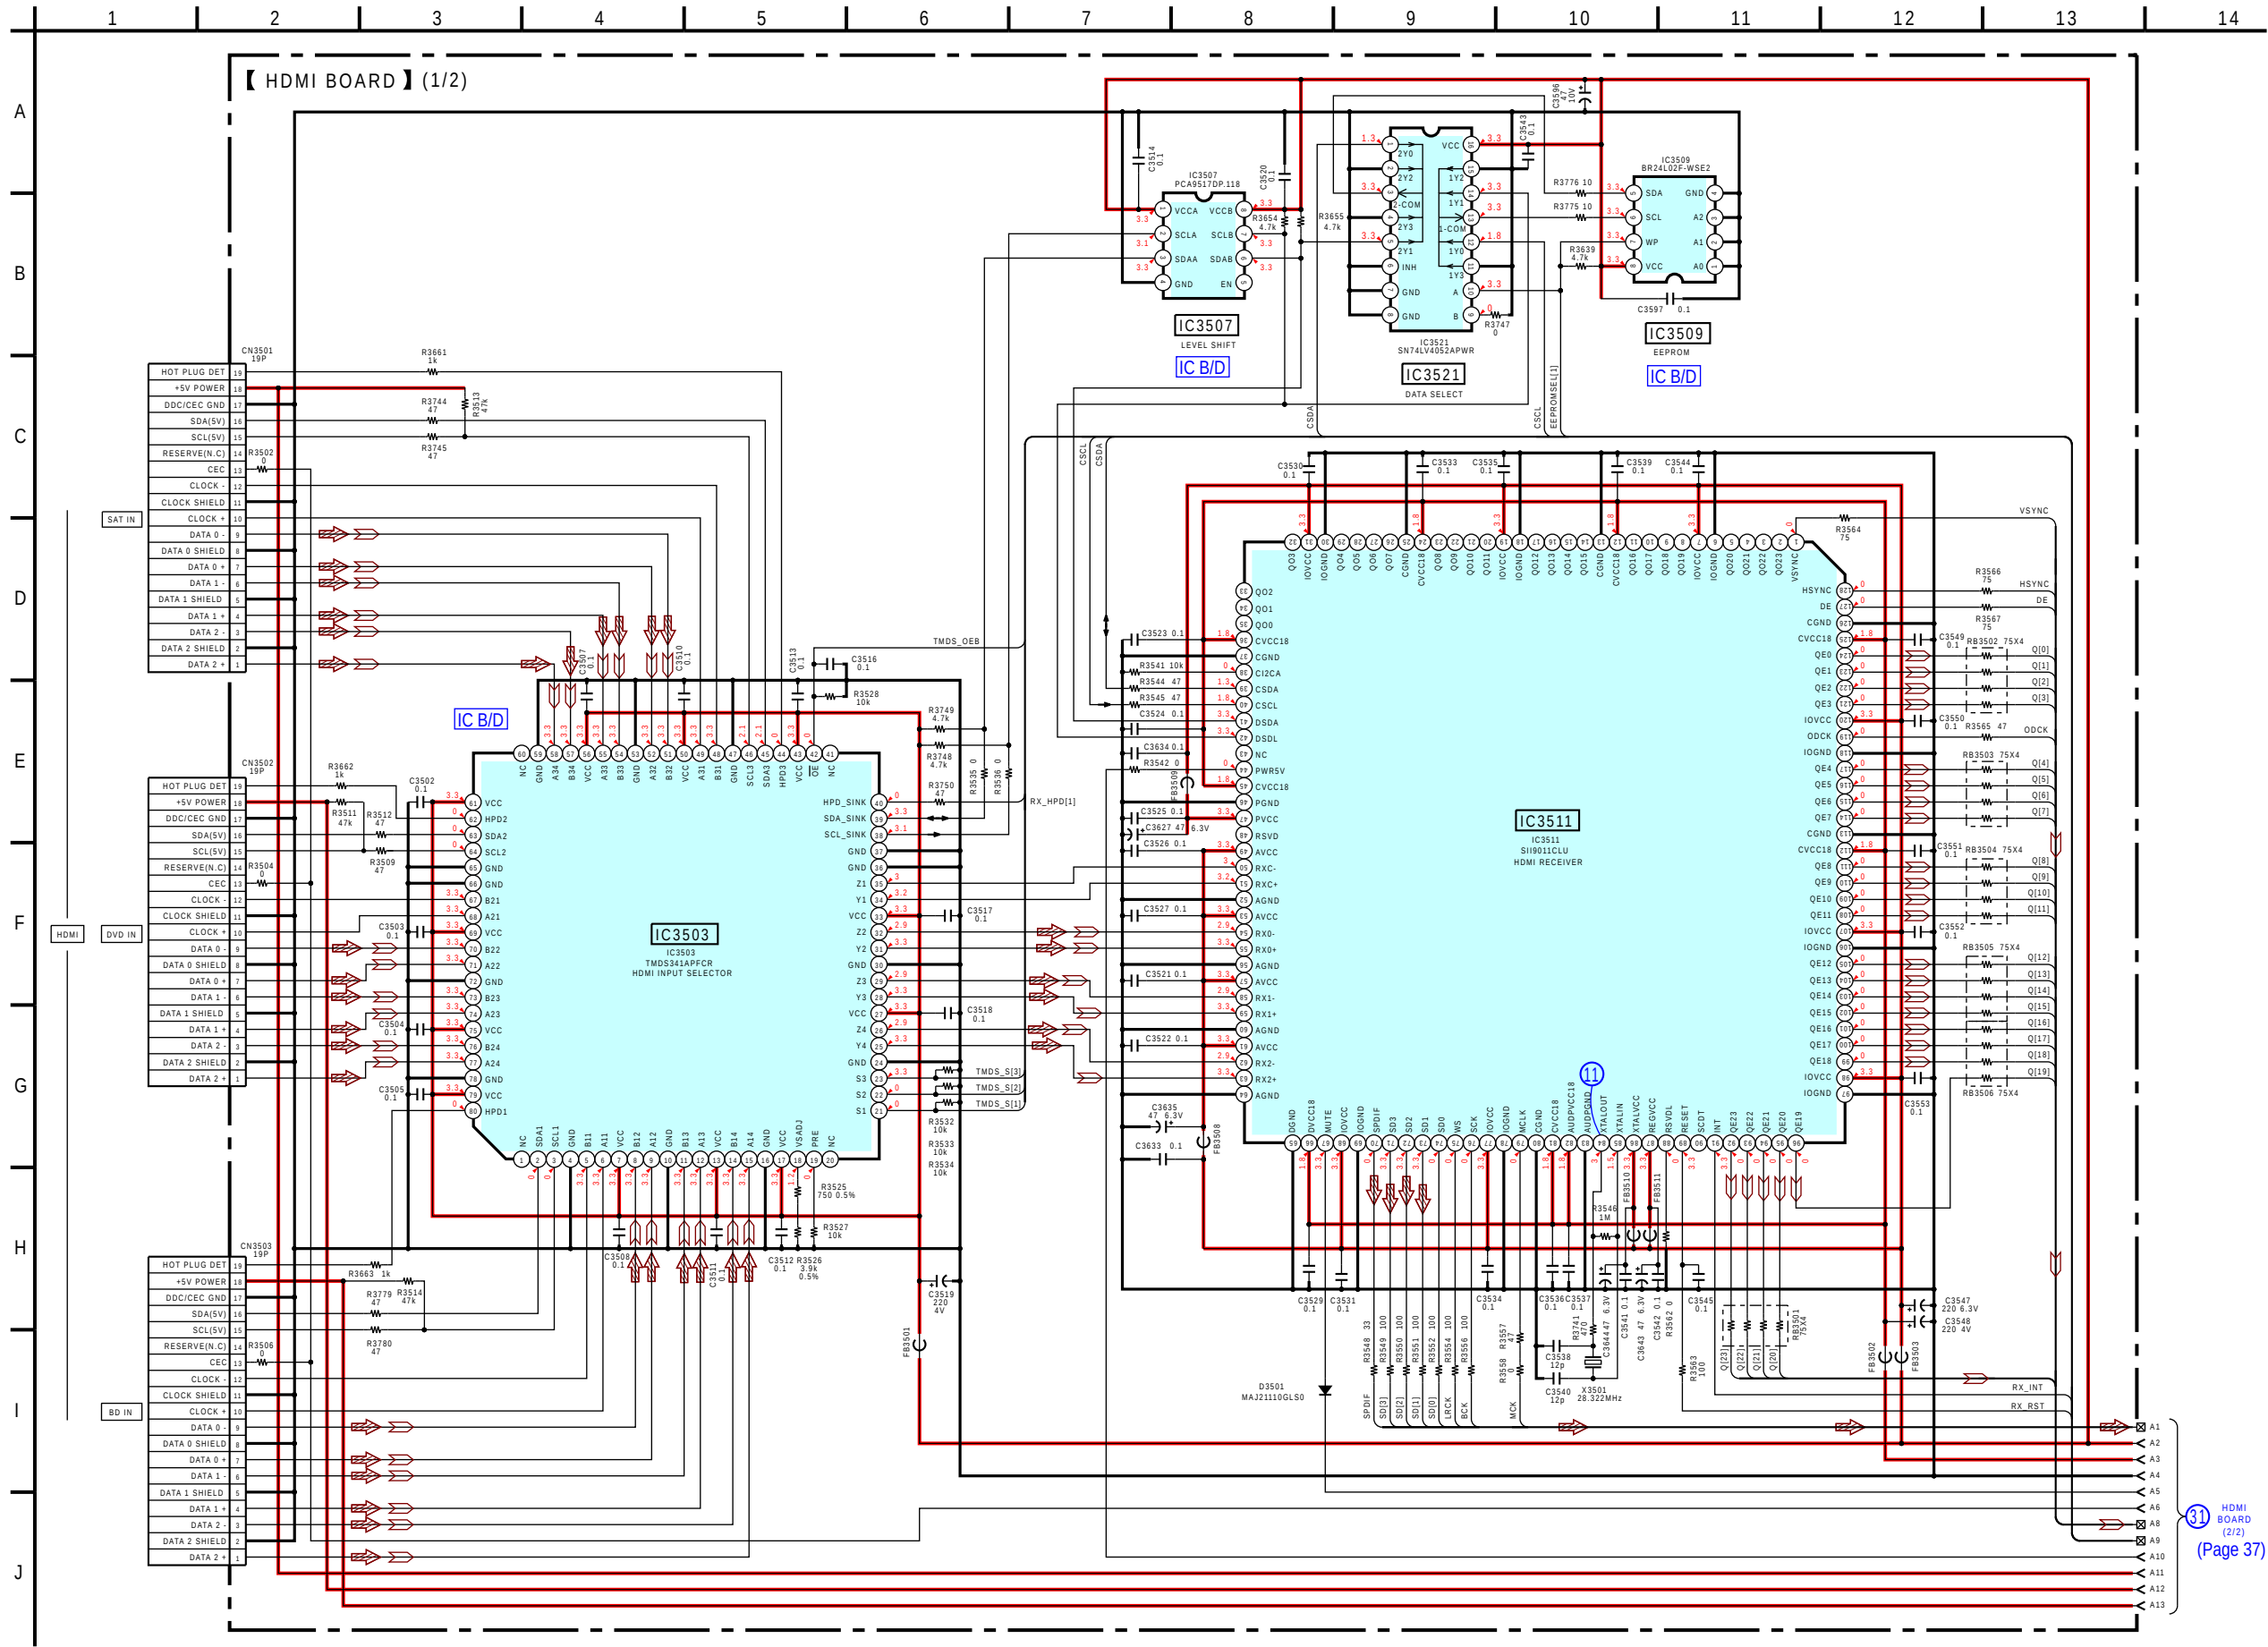

Note: IC3511 cannot exchange with single. When IC3511 is damaged, exchange the entire mounted board.

37




Note: IC3513 cannot exchange with single. When IC3513 is damaged, exchange the entire mounted board.


6-23. PRINTED WIRING BOARDS - VIDEO Section - • See page 20 for Circuit Boards Location. • : Uses unleaded solder.

• Semiconductor Location


Ref. No.	Location
D210	C-2
D211	C-2
IC201	C-3
IC202	C-4
IC210	C-3
IC220	D-5

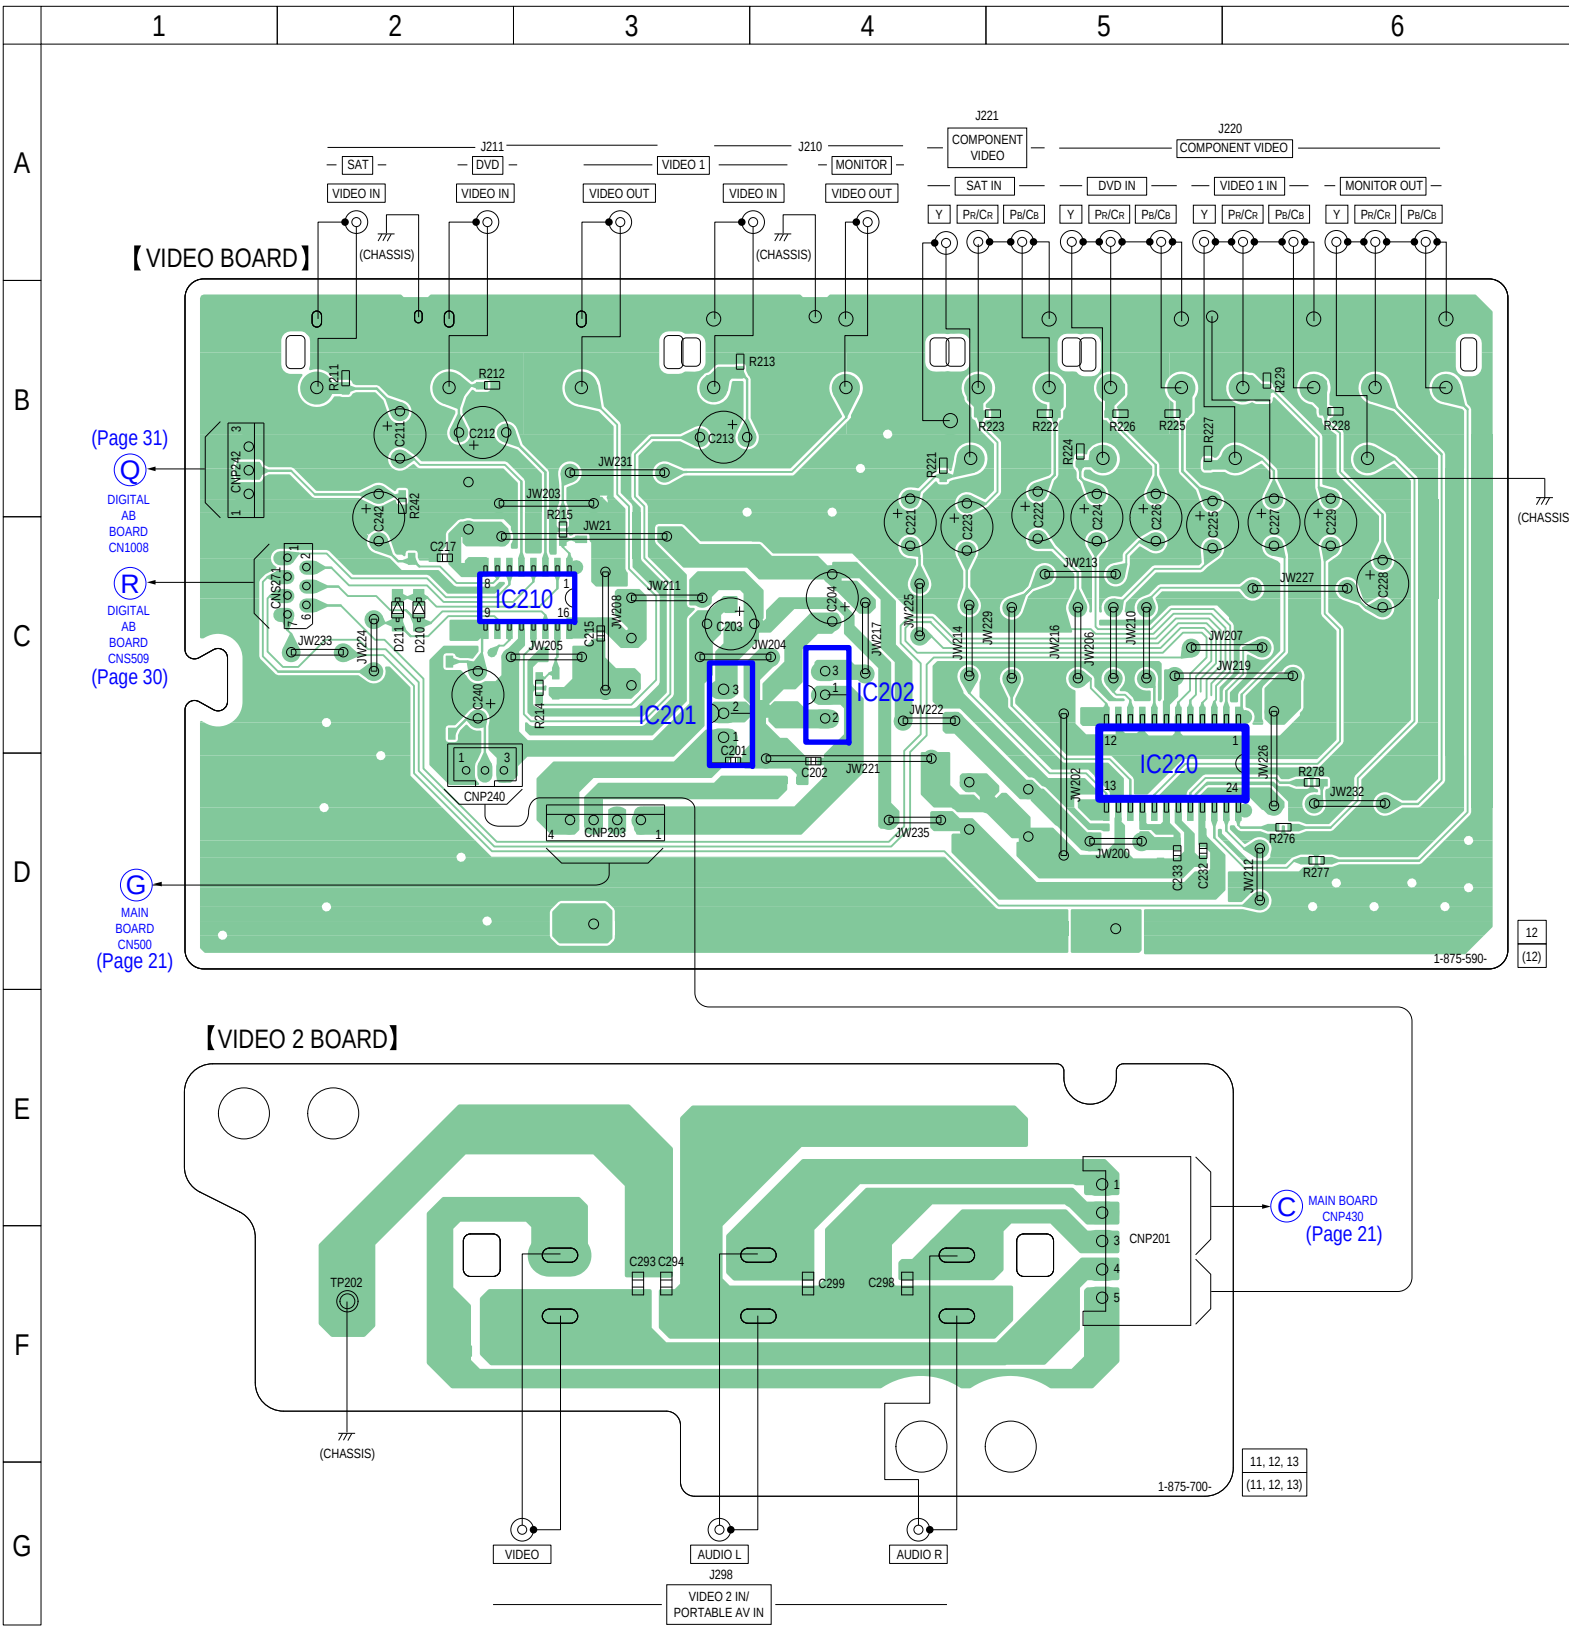


6-24. SCHEMATIC DIAGRAM - VIDEO Section - • See page 46 for IC Block Diagrams.

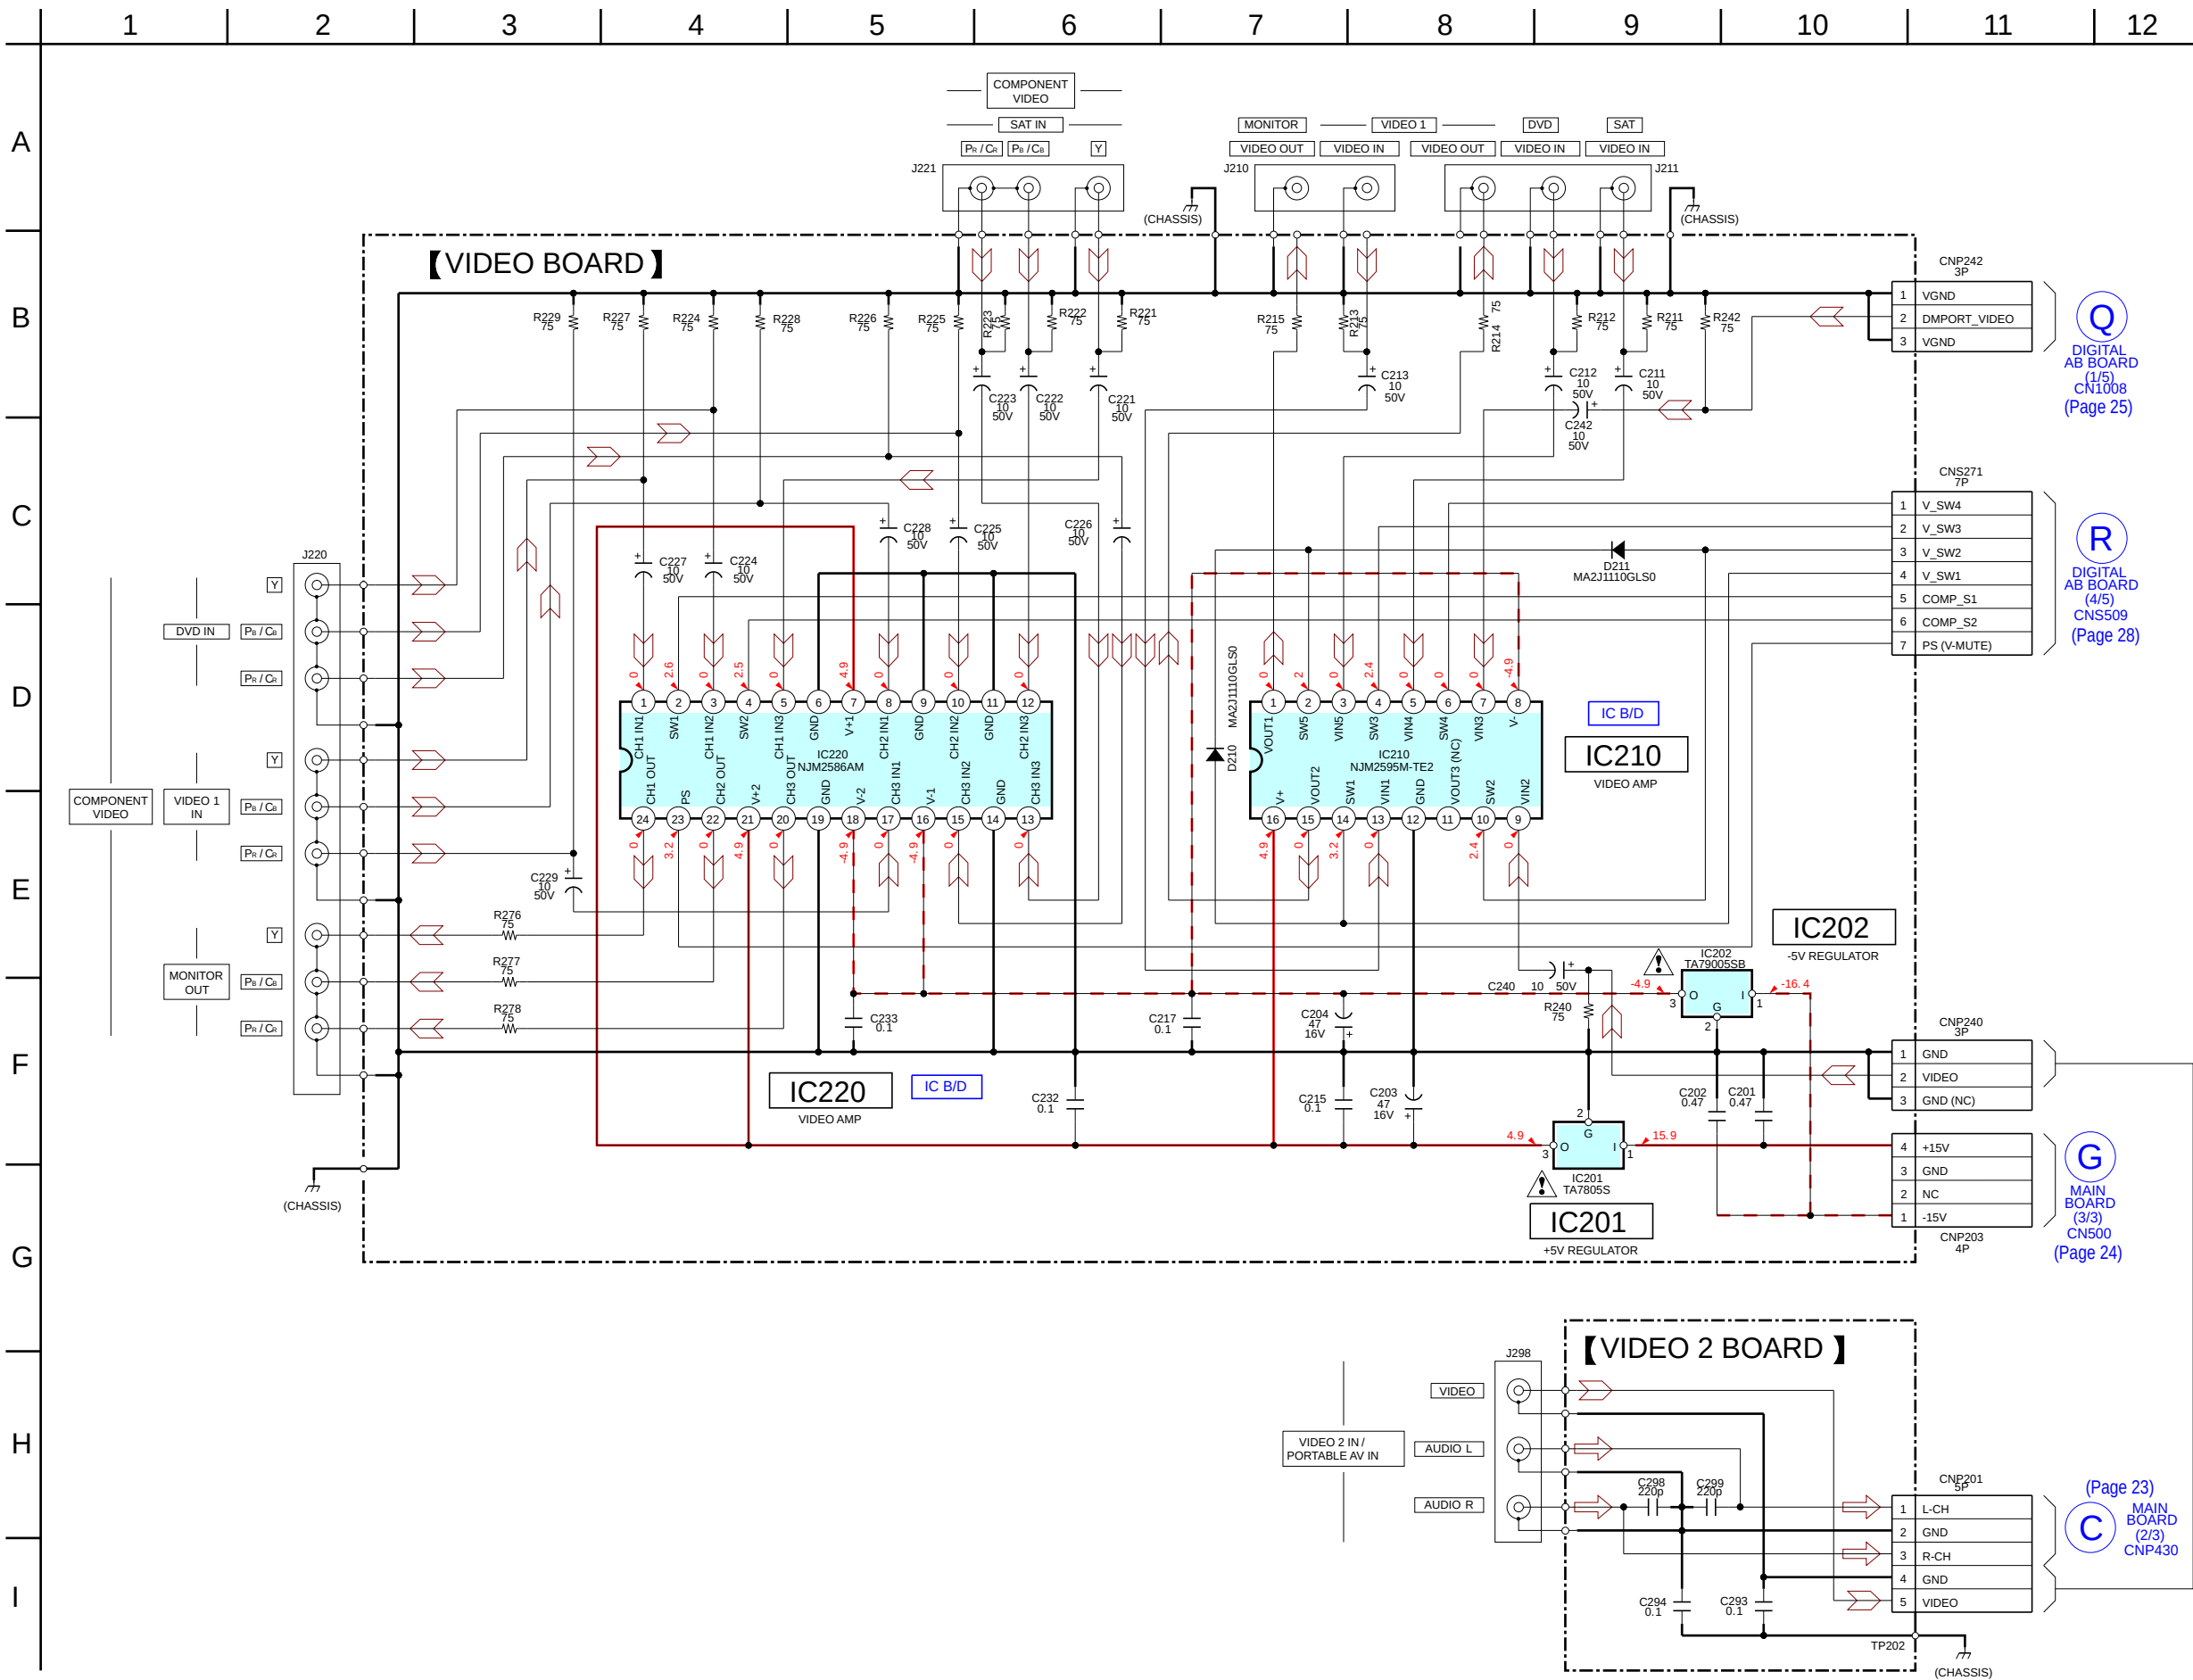


6-25. PRINTED WIRING BOARDS - PANEL Section - • See page 20 for Circuit Boards Location. • : Uses unleaded solder.

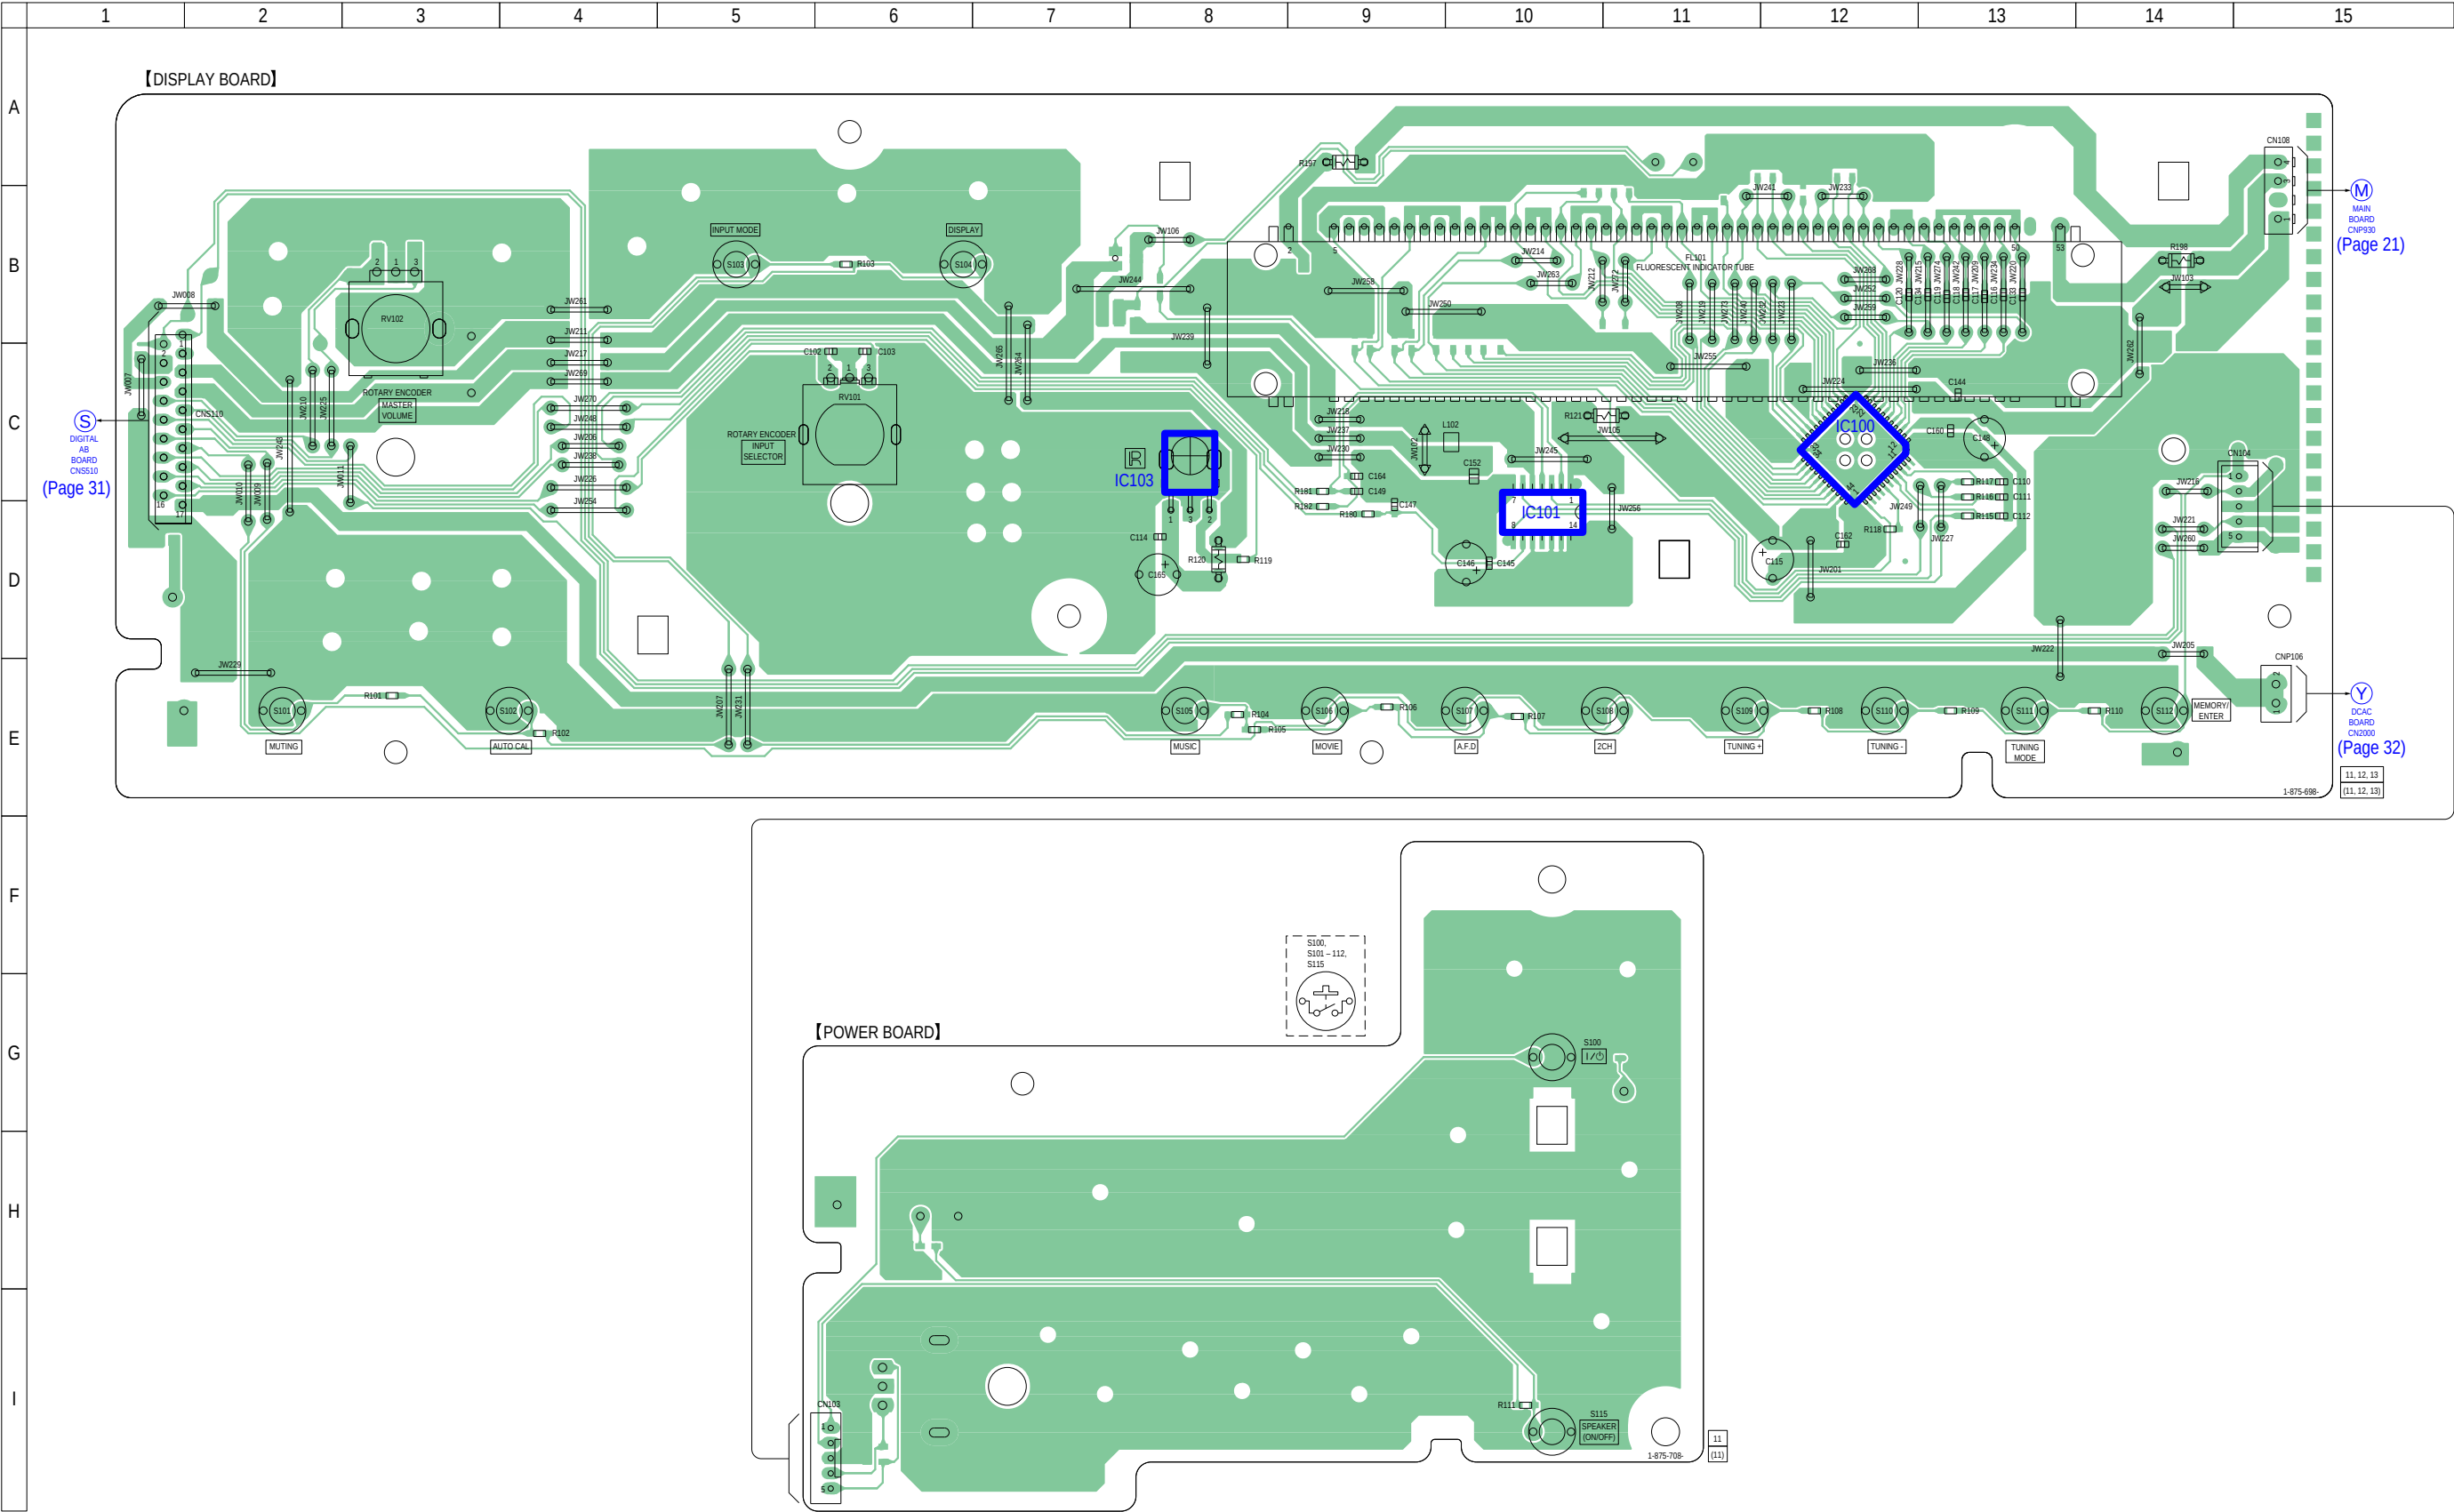


6-26. SCHEMATIC DIAGRAM - PANEL Section - • See page 33 for Waveforms. • See page 46 for IC Block Diagrams.

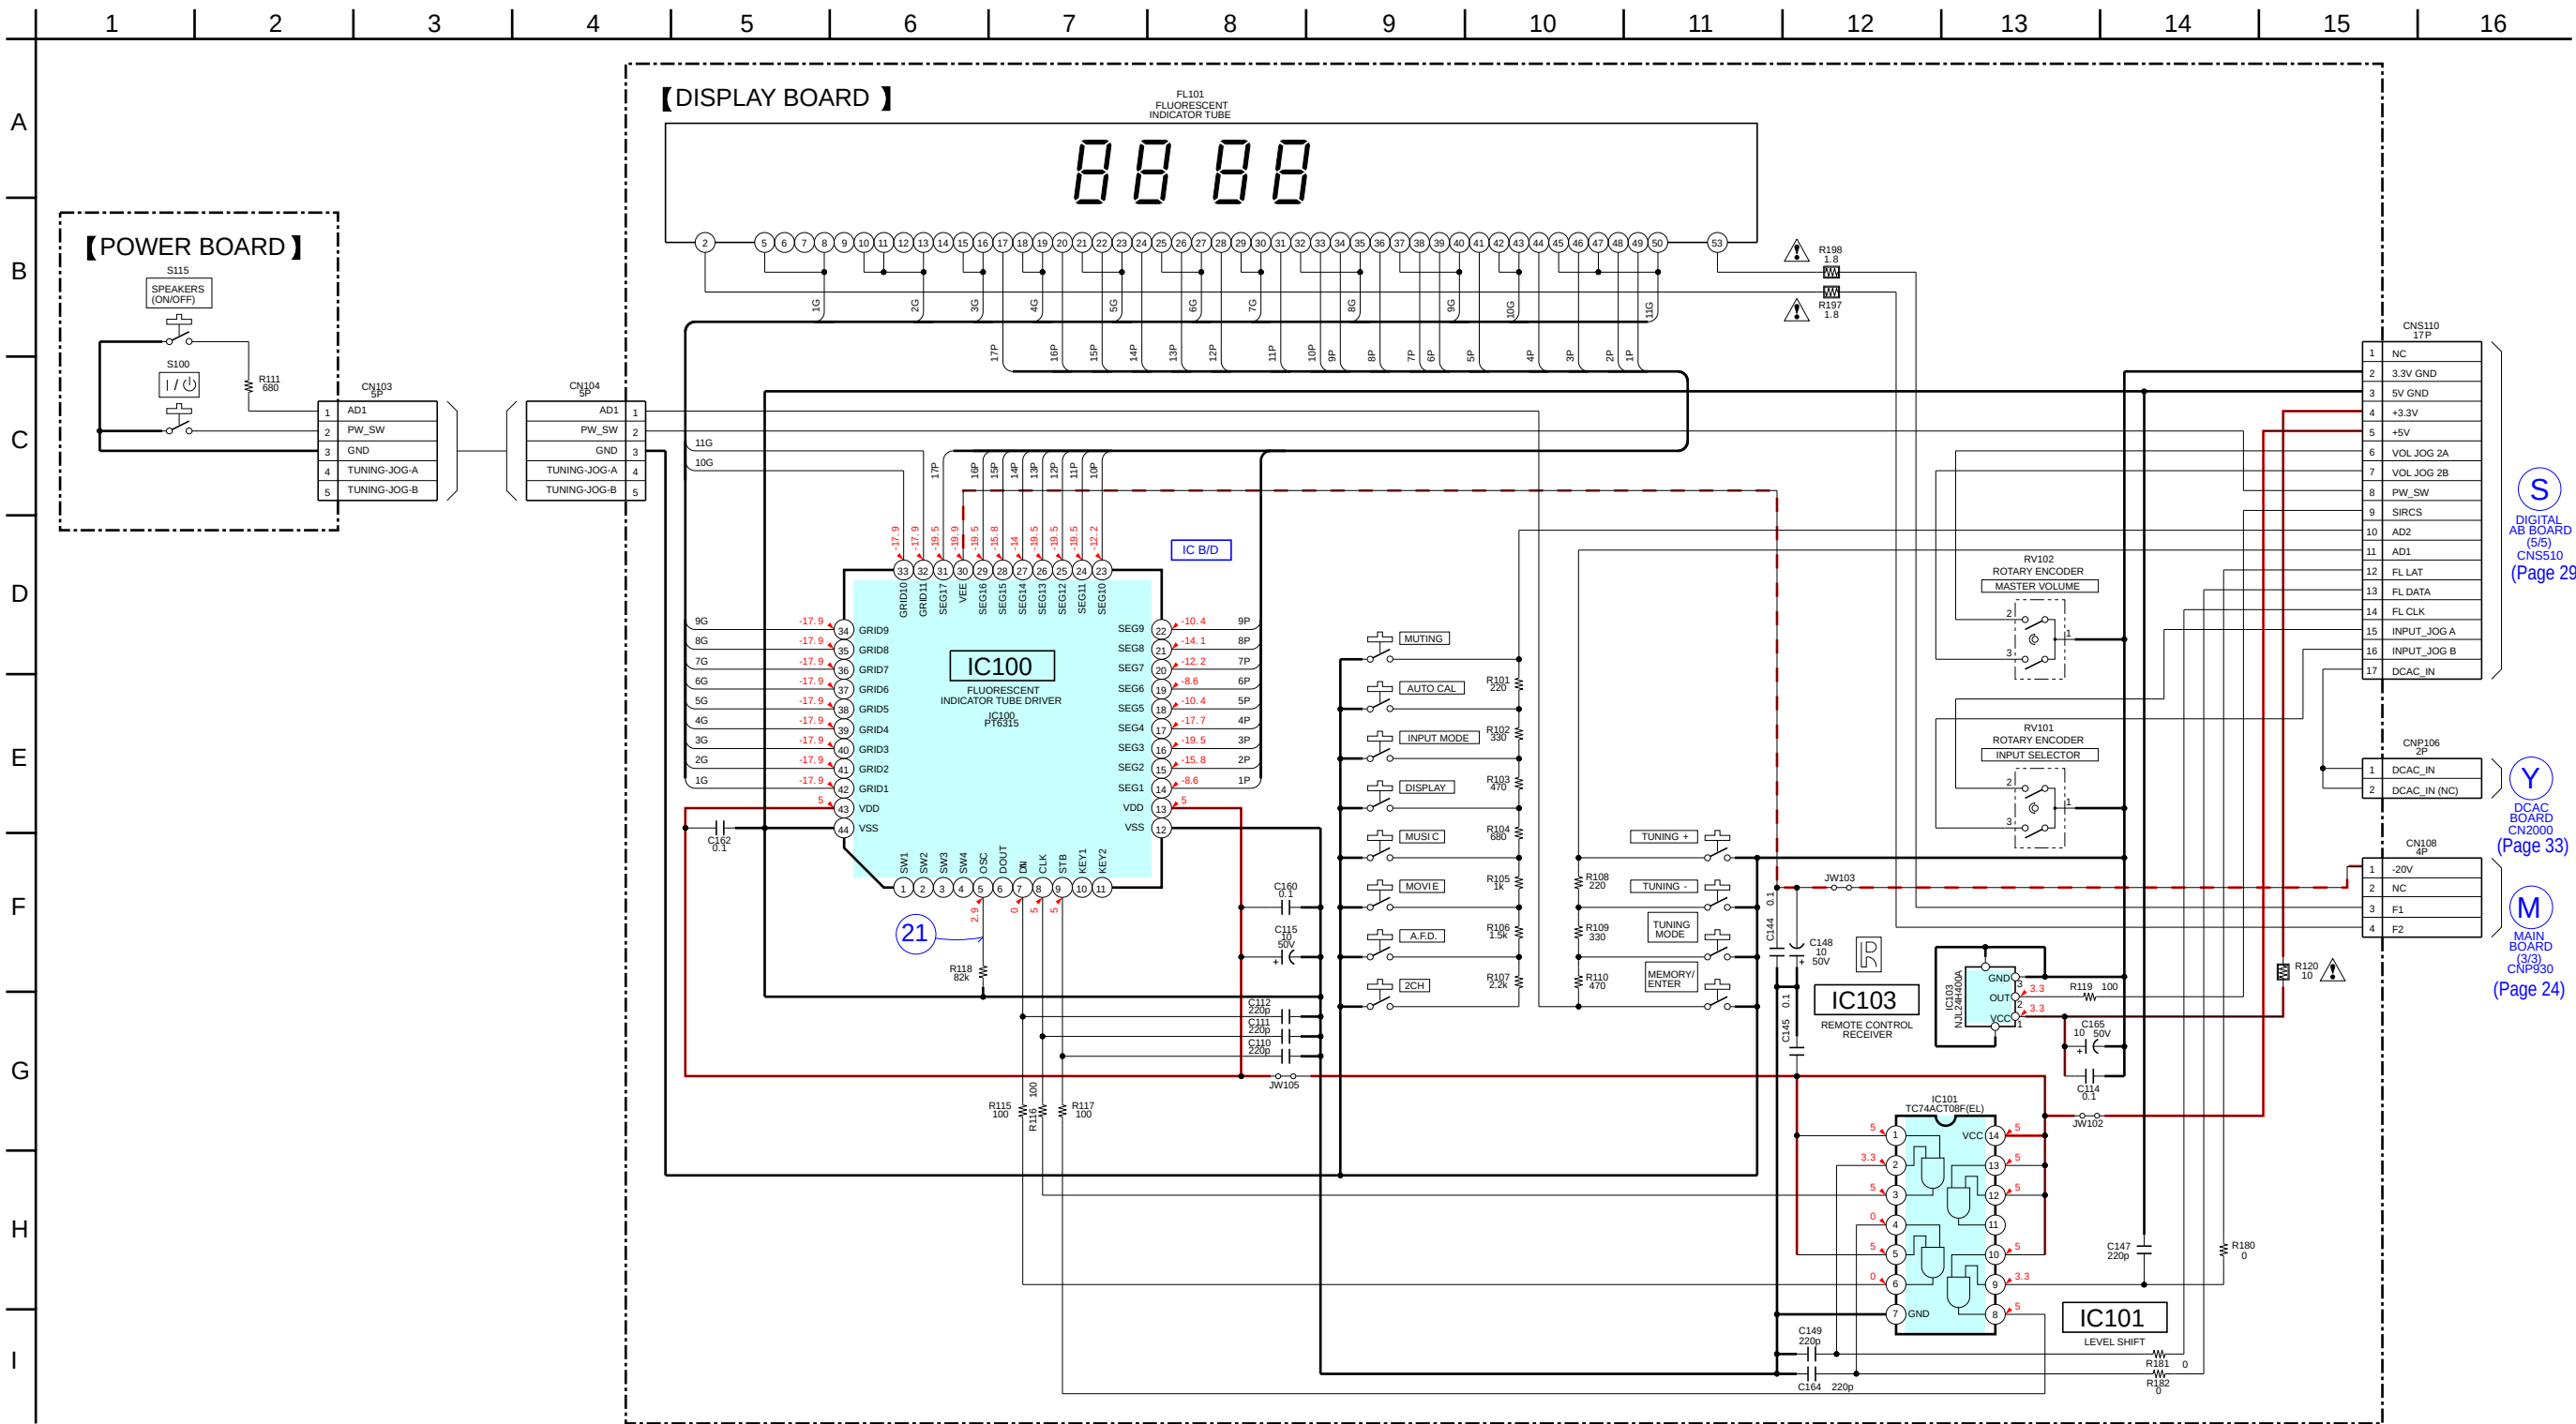

6-27. PRINTED WIRING BOARD - DCDC CONVERTER Board - • See page 20 for Circuit Boards Location. •  : Uses unleaded solder.

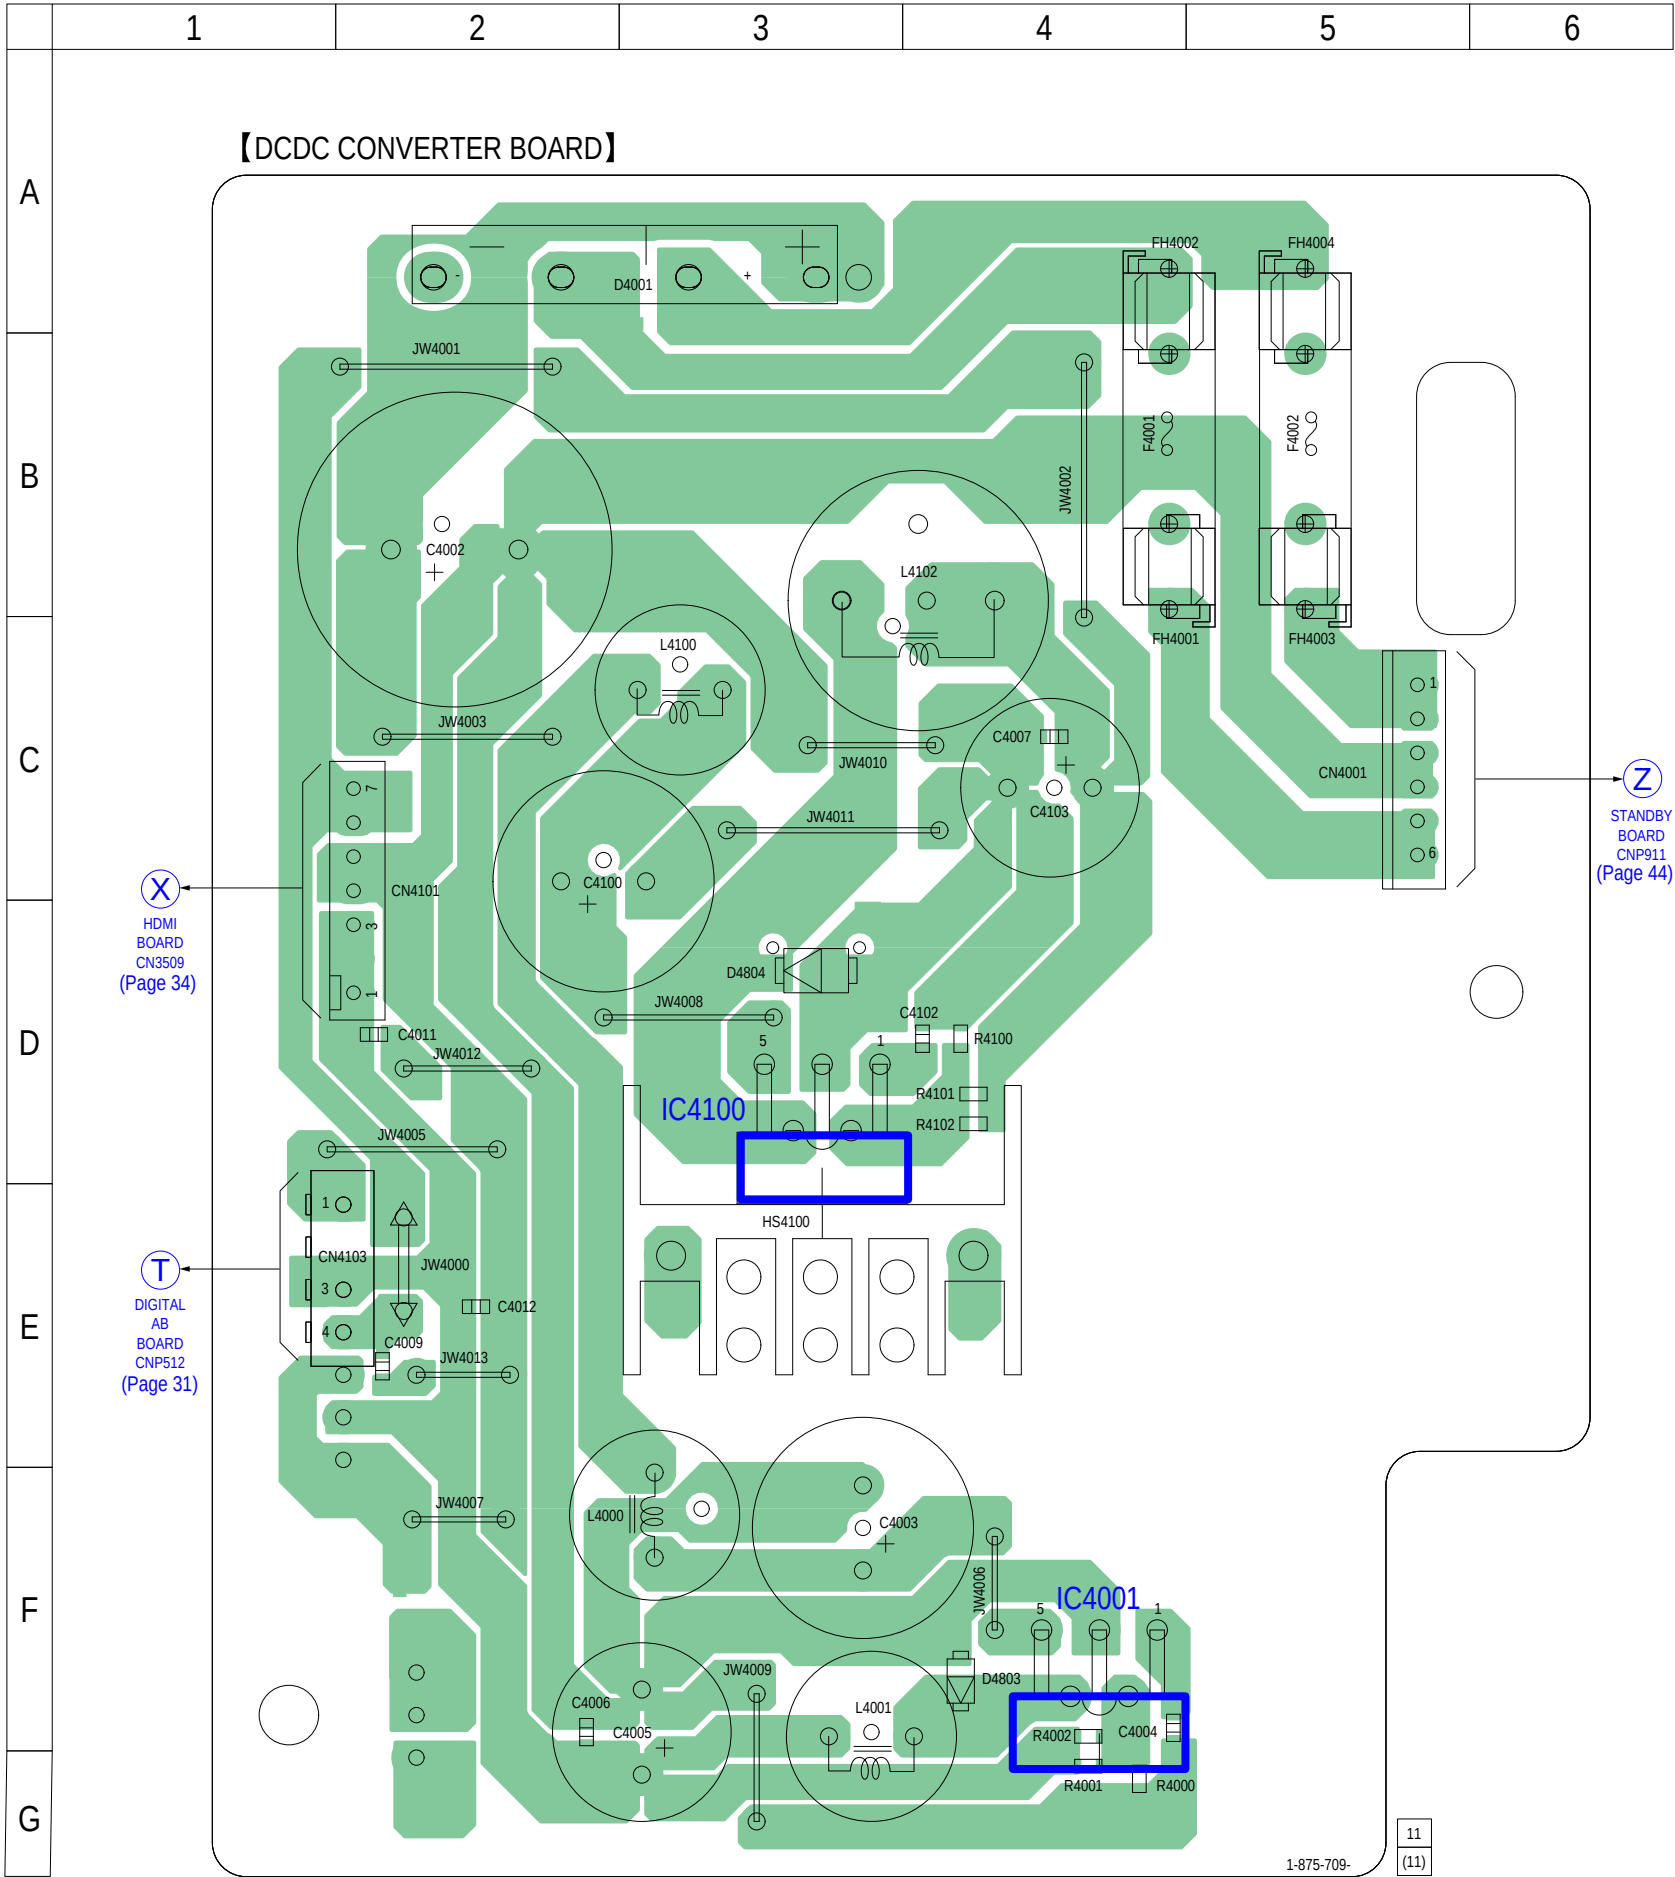


6-28. SCHEMATIC DIAGRAM - DCDC CONVERTER Board - • See page 46 for IC Block Diagrams.

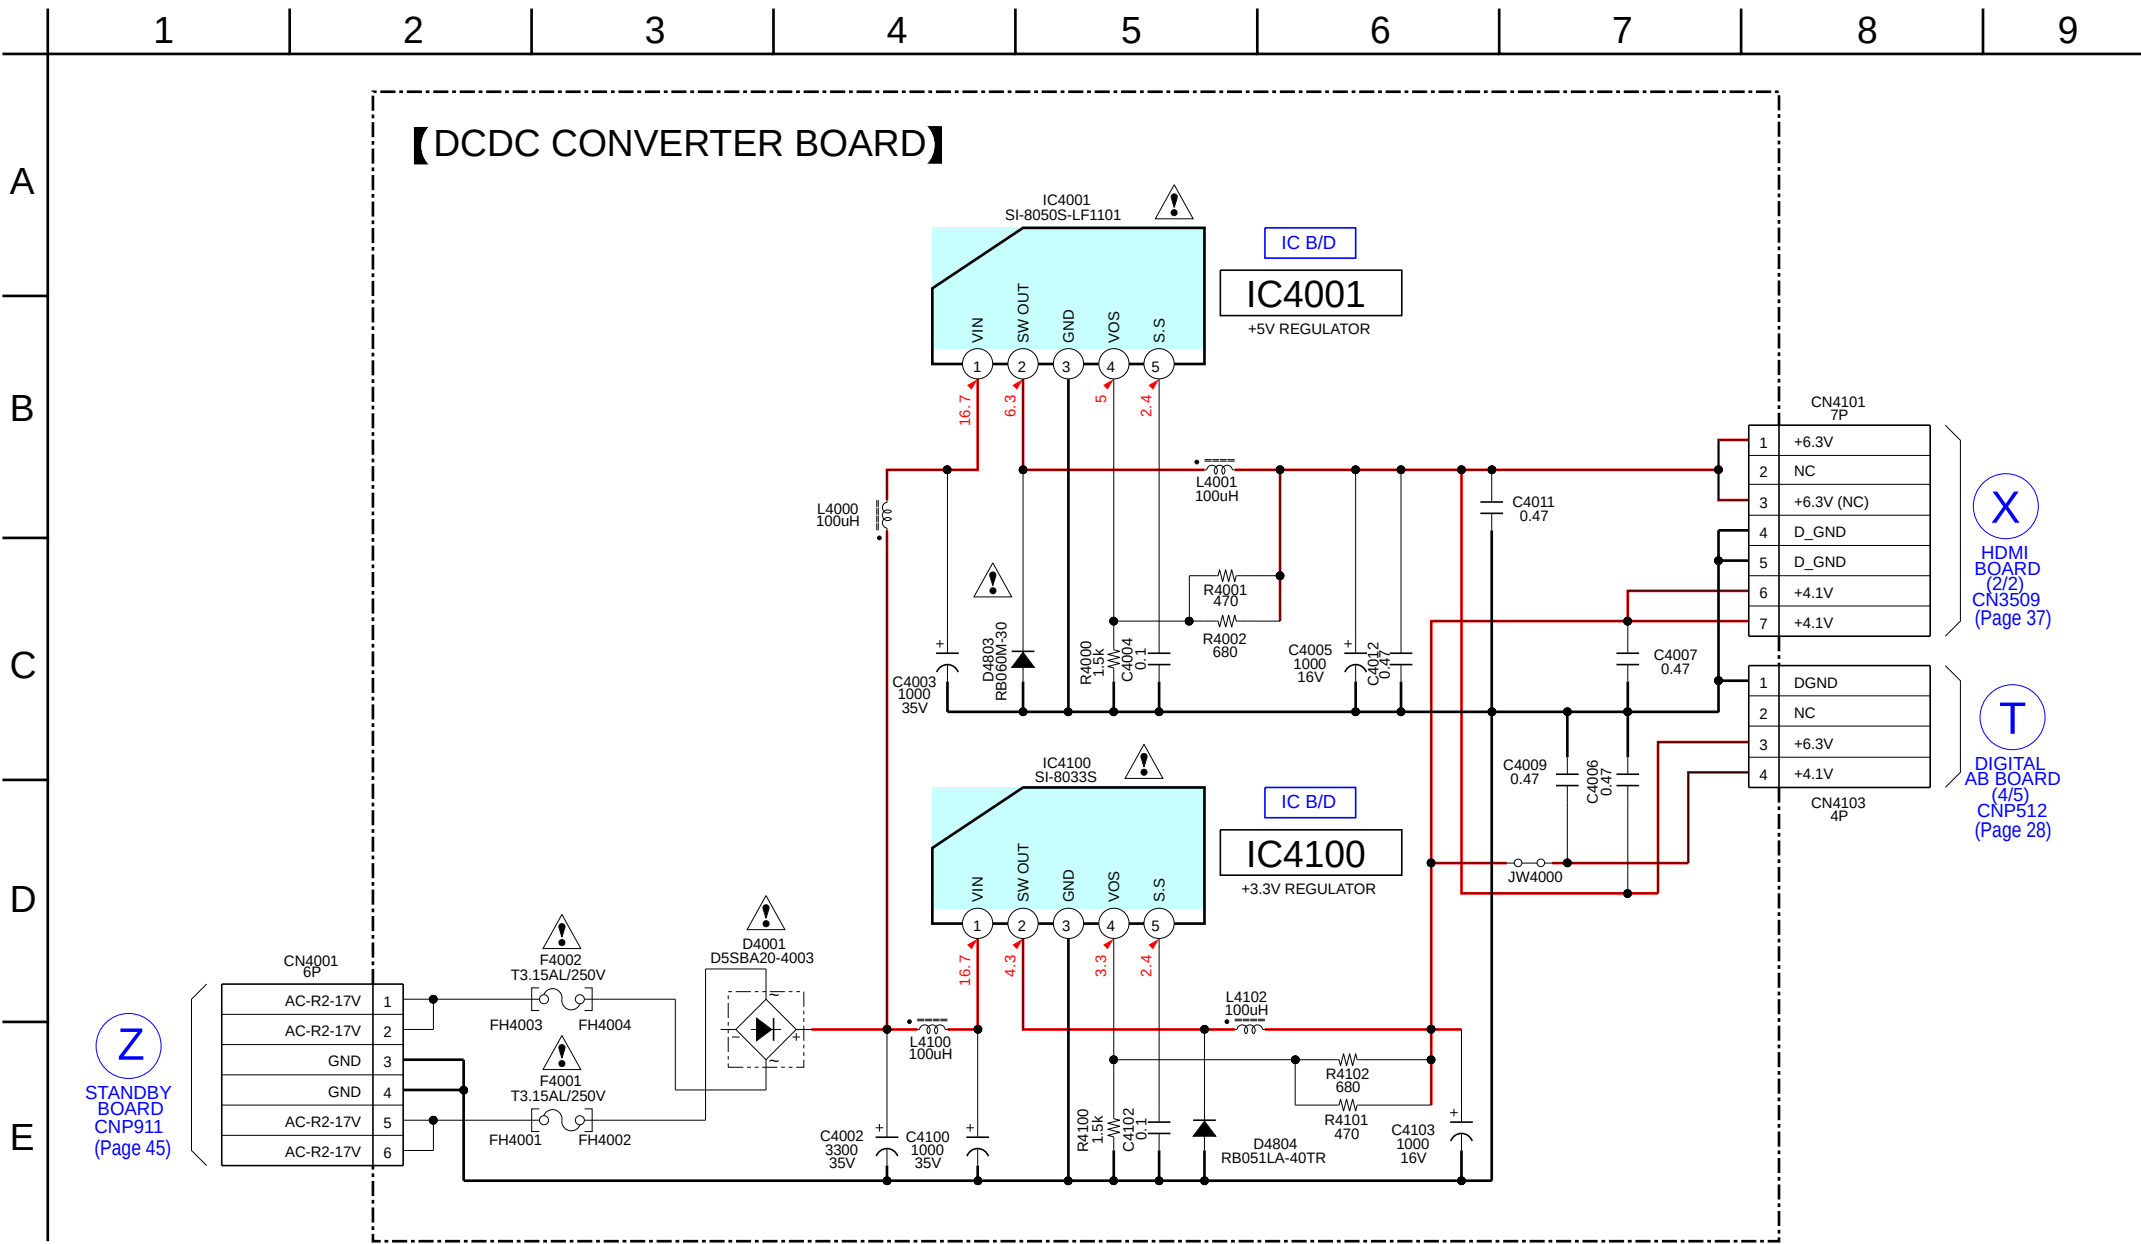


6-29. PRINTED WIRING BOARD - STANDBY Board - • See page 20 for Circuit Boards Location. •  : Uses unleaded solder.

• Semiconductor Location

Ref. No.	Location
D901	C-4
D910	D-3
D911	D-4
D912	D-4
D913	D-4
D950	D-2
D951	D-2
D952	D-2
D953	D-2
D955	D-3
D990	D-2
D991	D-2
Q901	C-4
Q951	C-3
Q955	C-4
Q990	C-3

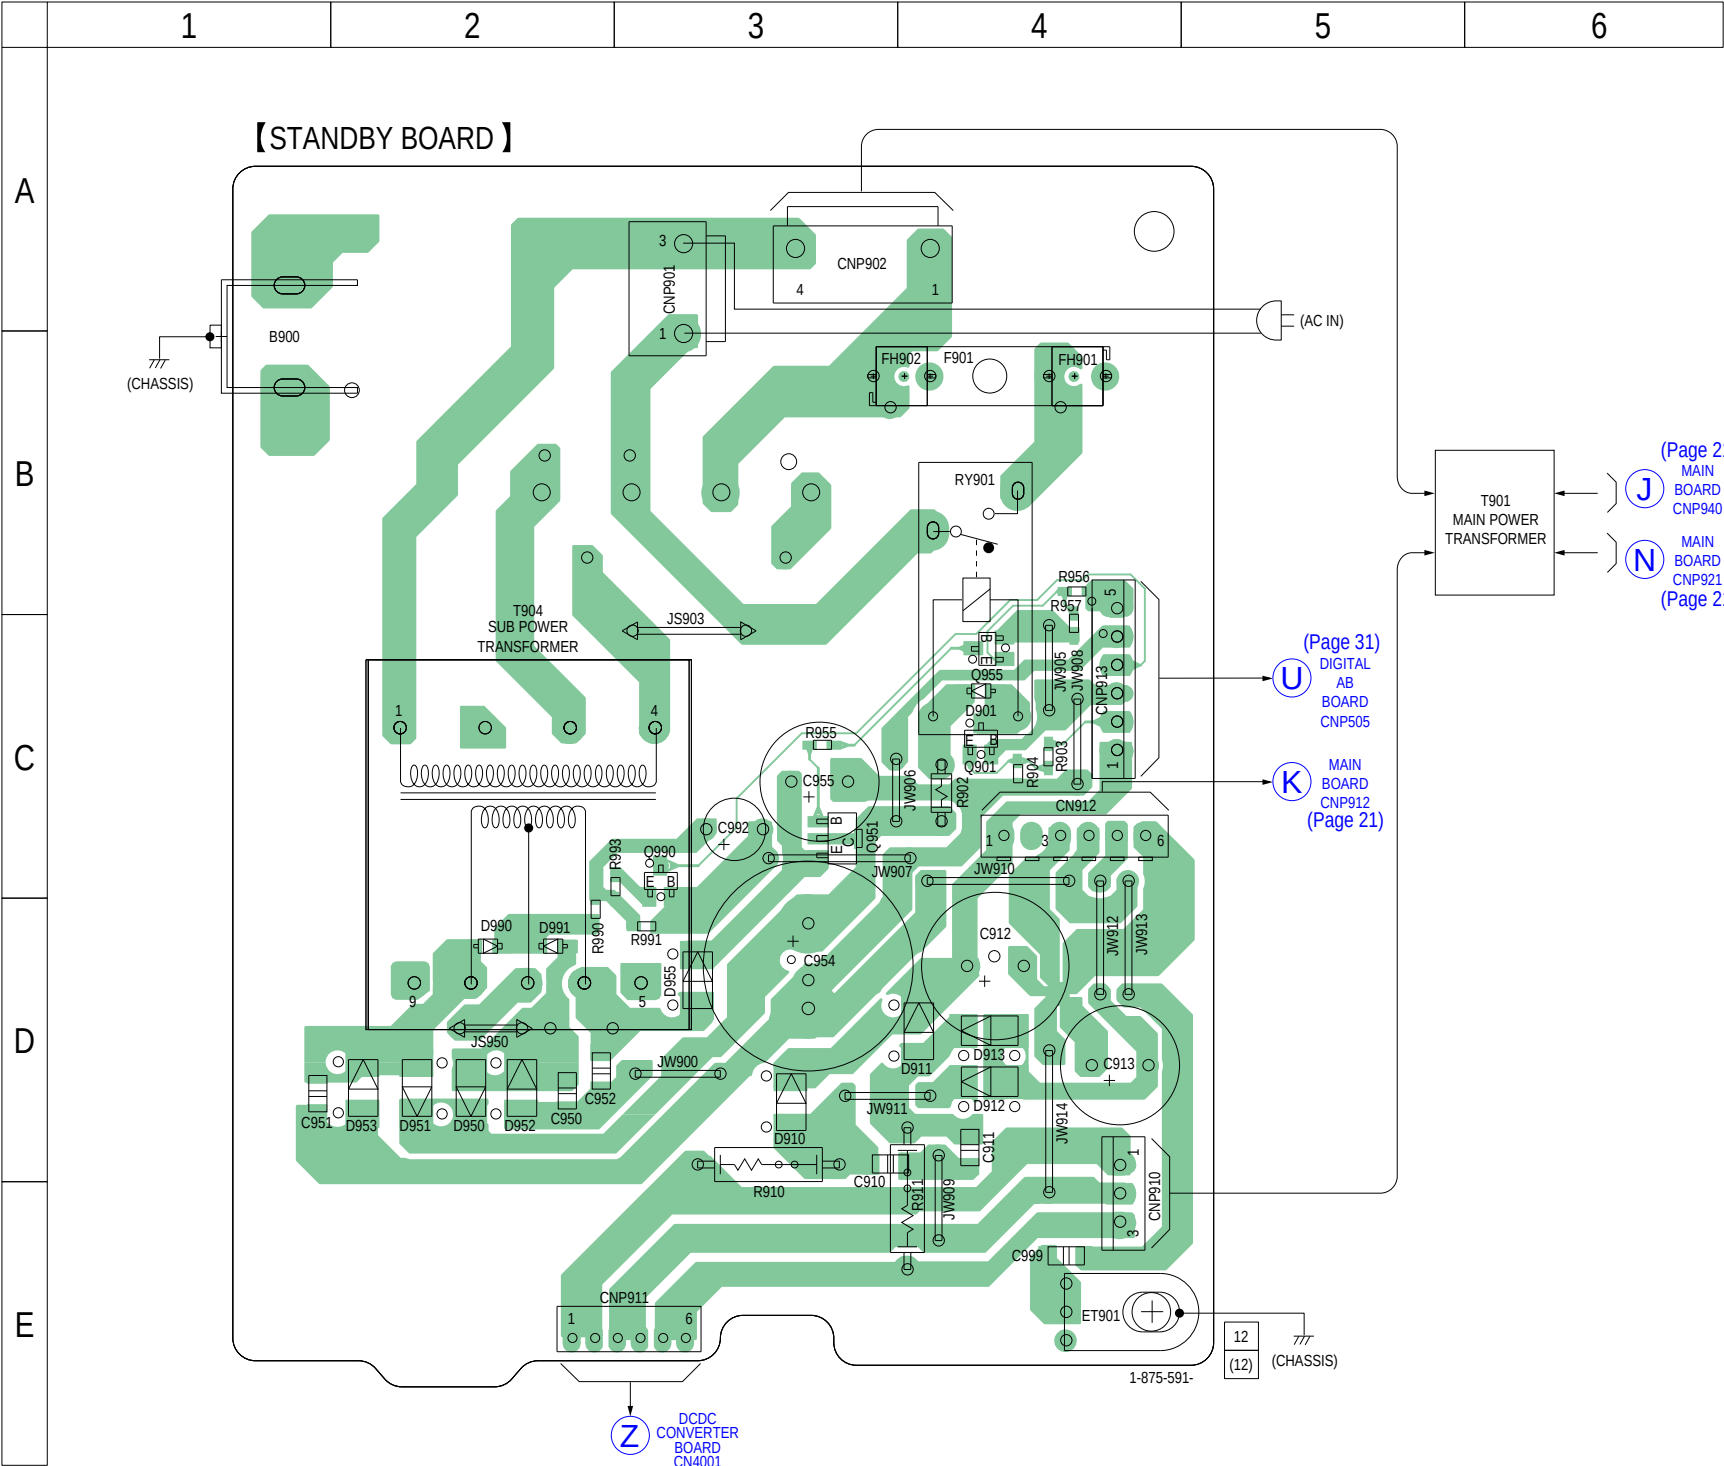


6-30. SCHEMATIC DIAGRAM - STANDBY Board -

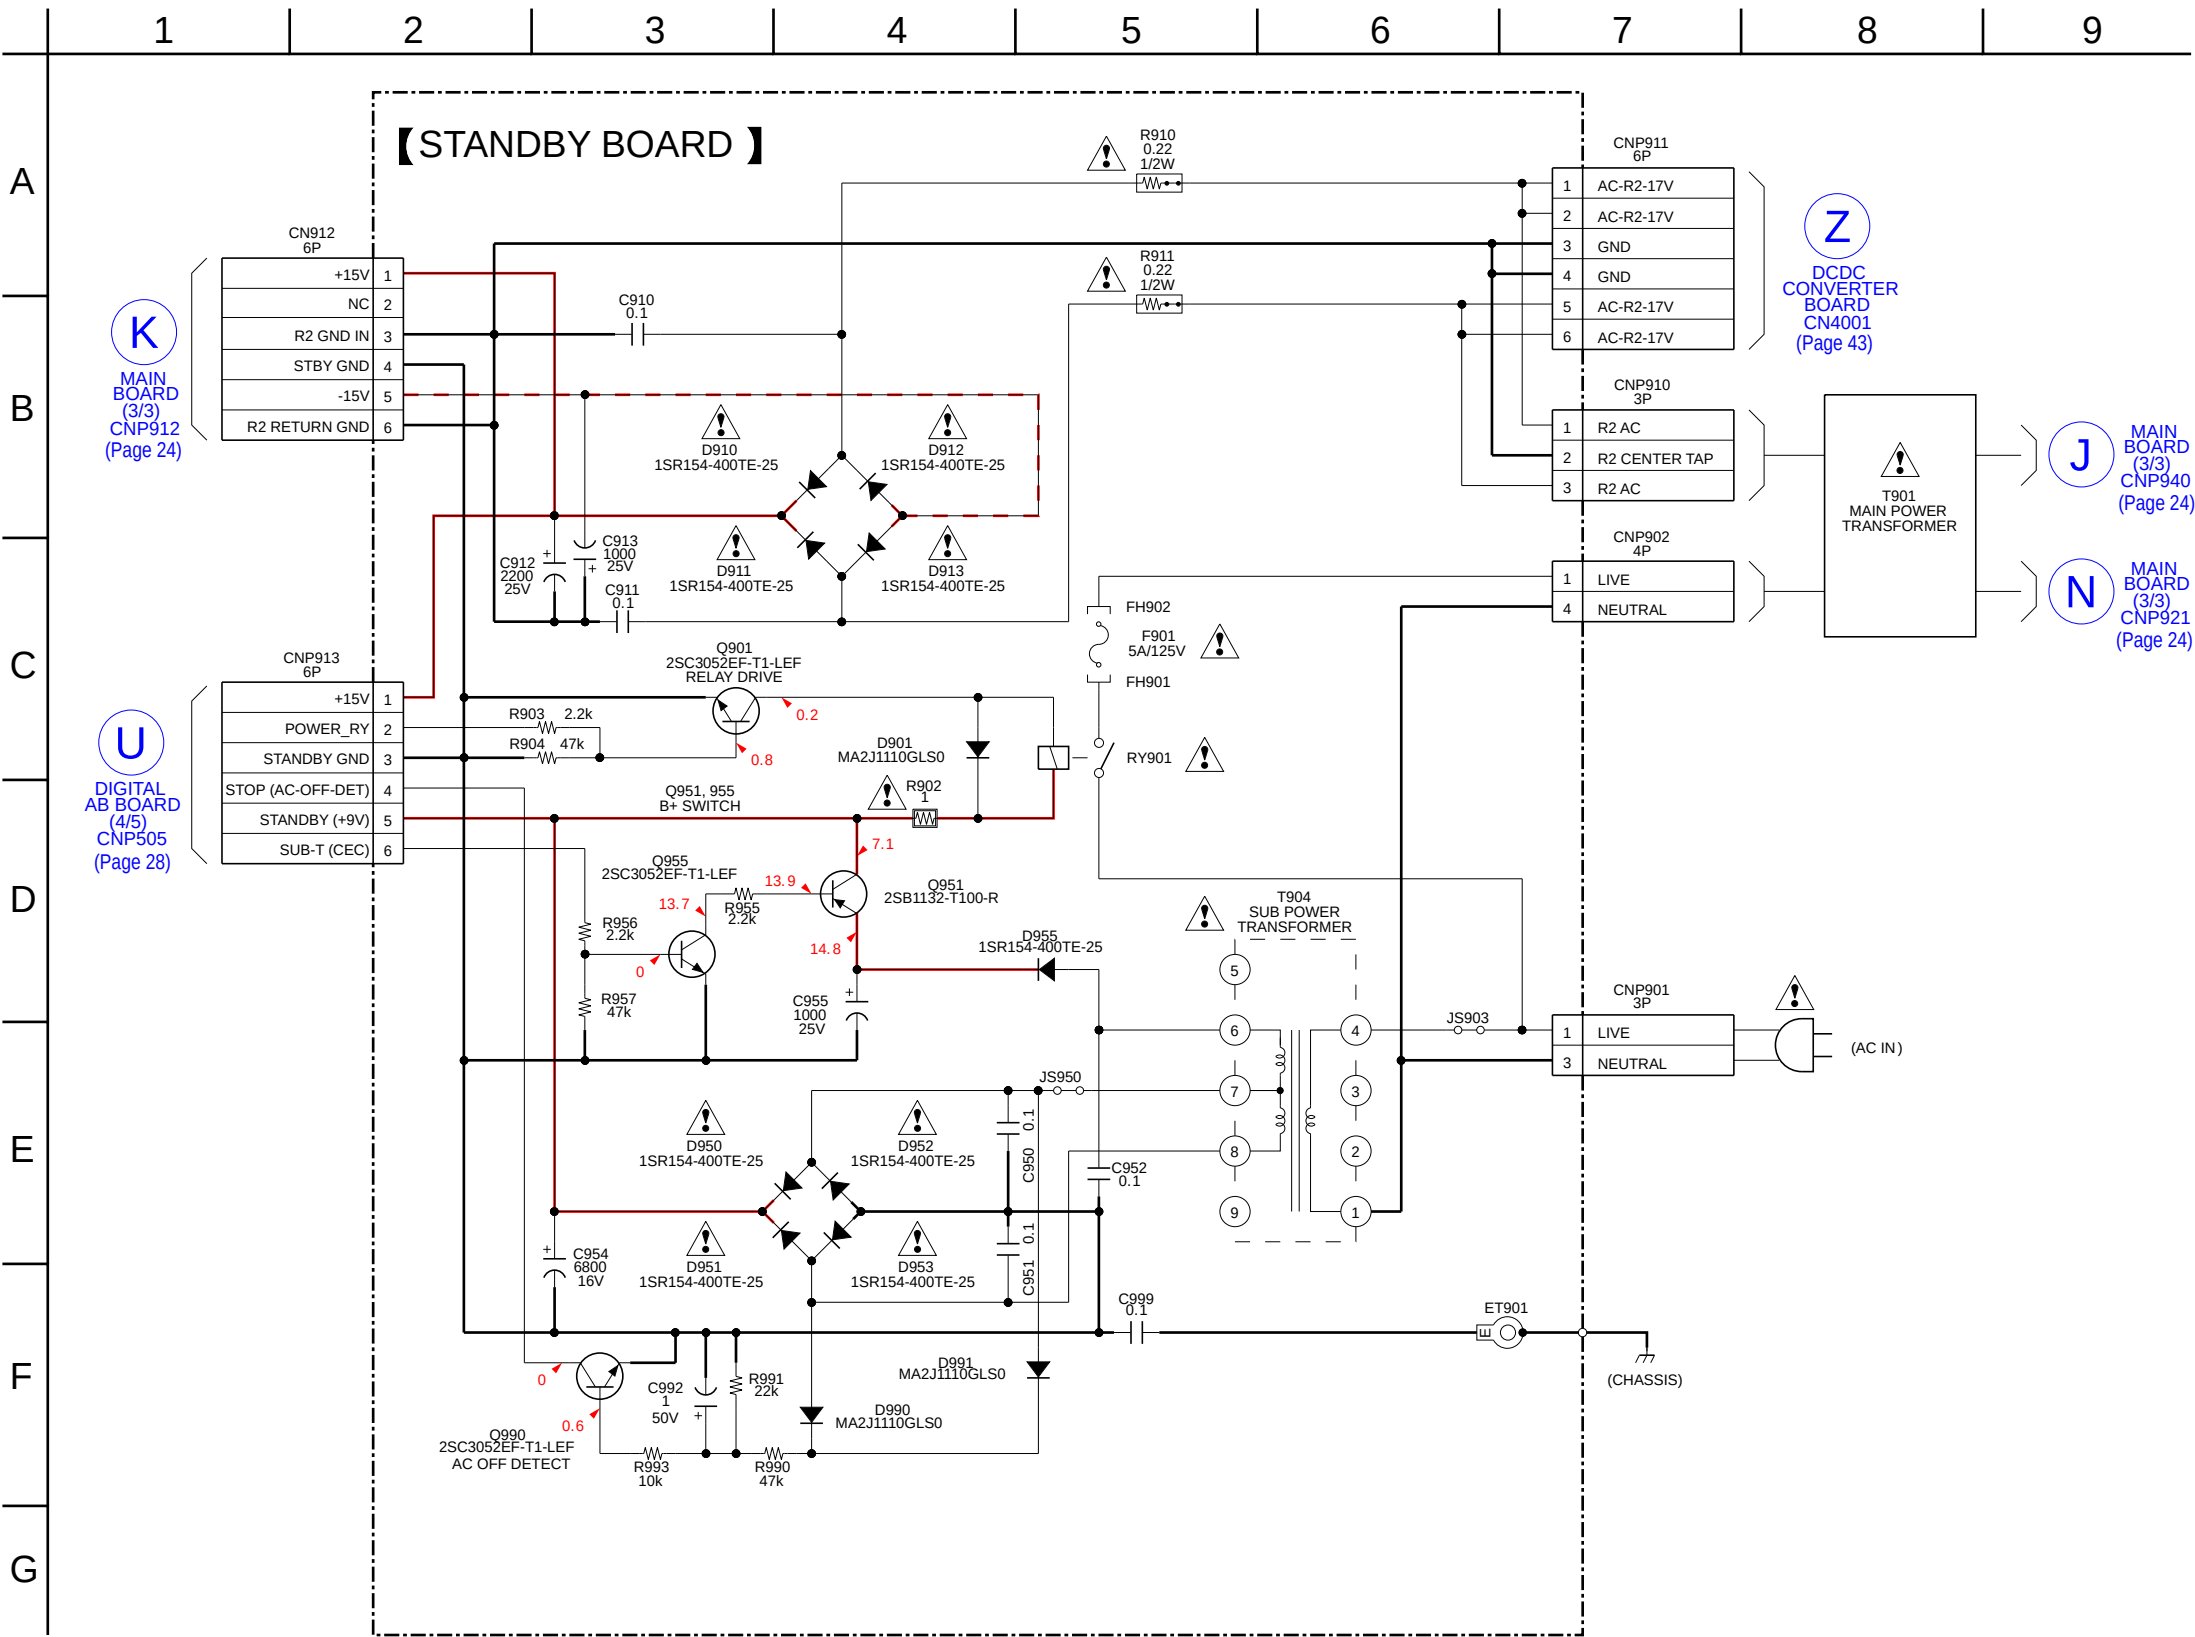


STR-KG800


- IC Block Diagrams
 - MAIN Board –
IC400 BD3471KS2

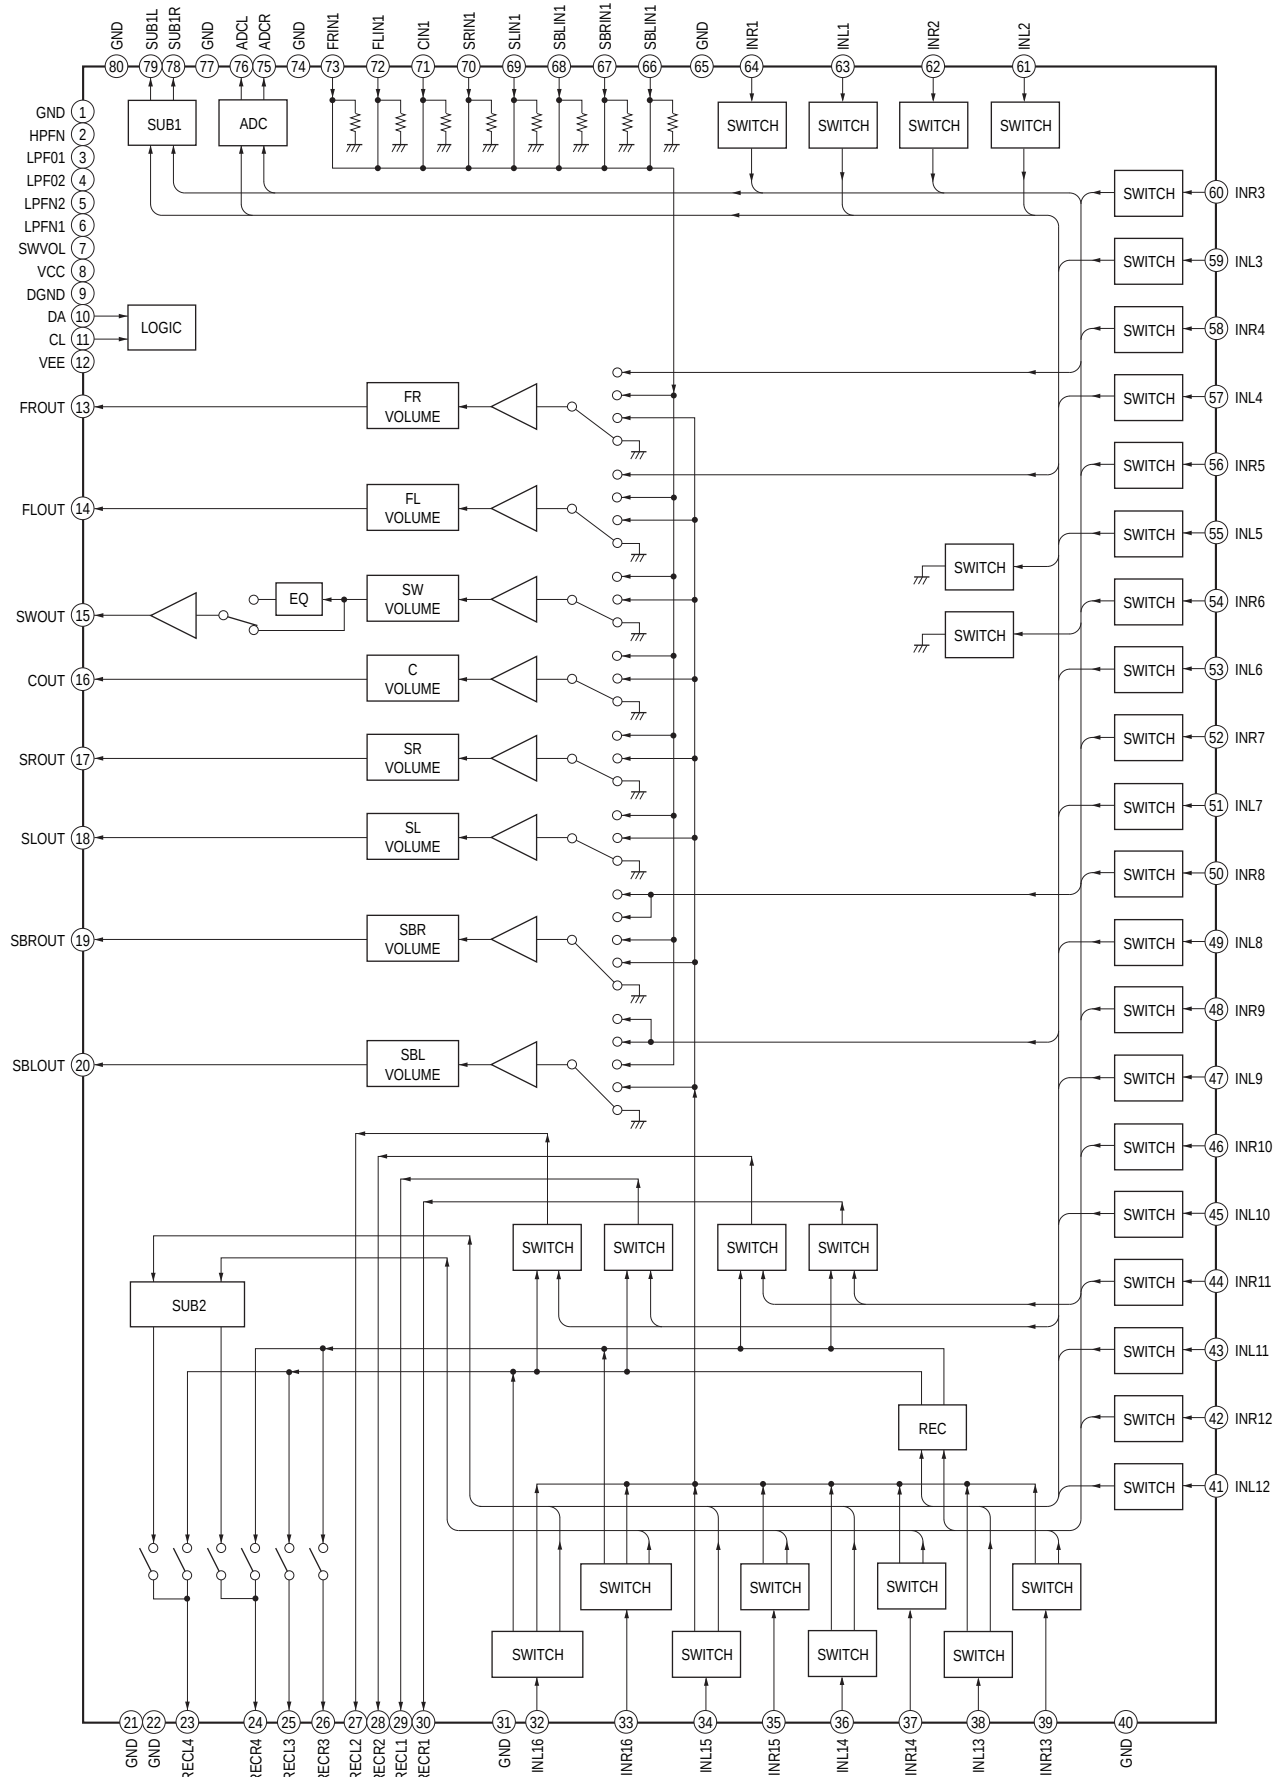


IC600, 700, 800 μPC2581V-S

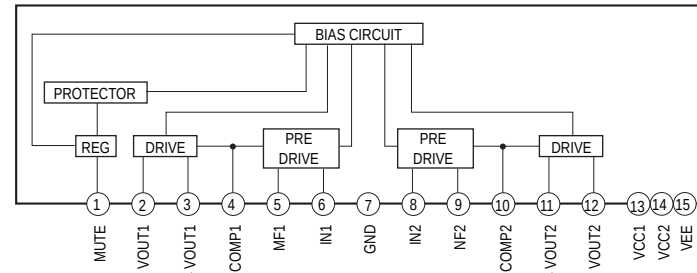


– DIGITAL AB Board –
IC1008 TC74VHC157FT (EL)

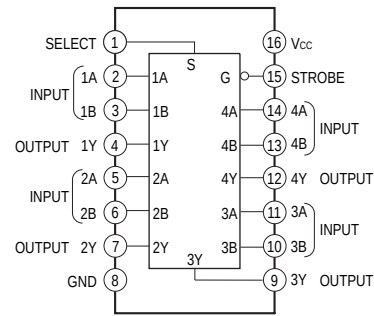


IC1012 SI-3050KM-TLS
IC1013 SI-3033KM-TLS

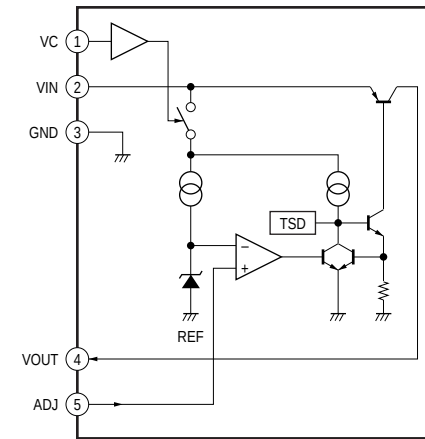


IC1016 TC74VHC393FT (EL)



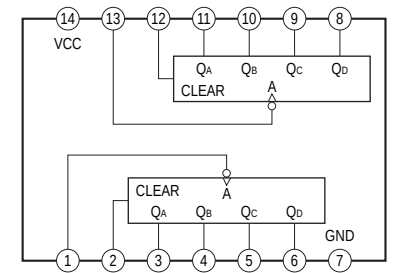


IC1017 TC7WH157FK (TE85R)

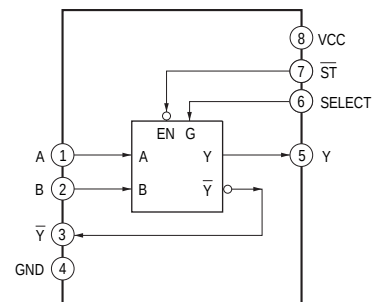


IC1301 LC89056W-E

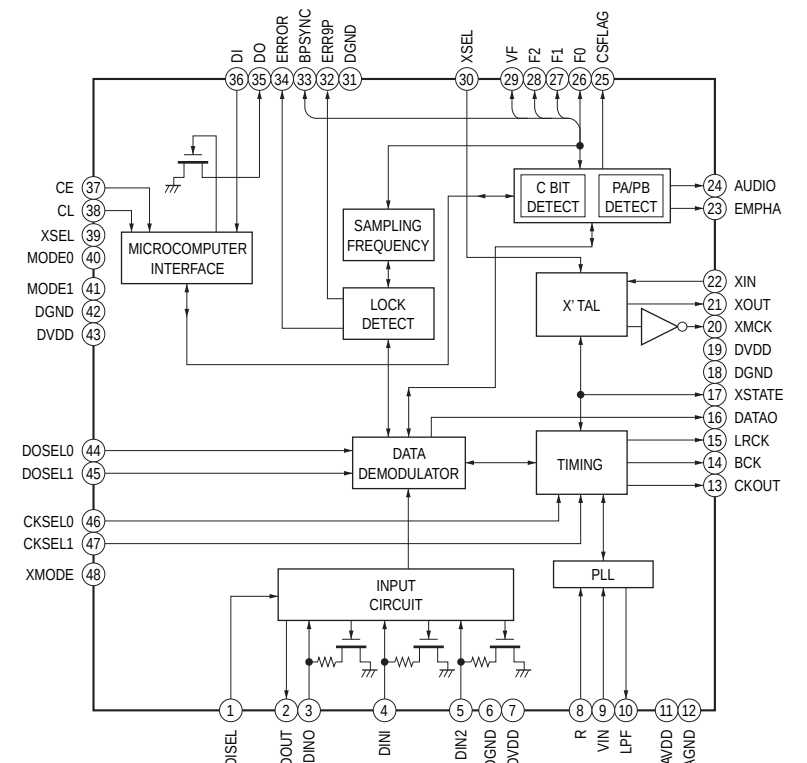


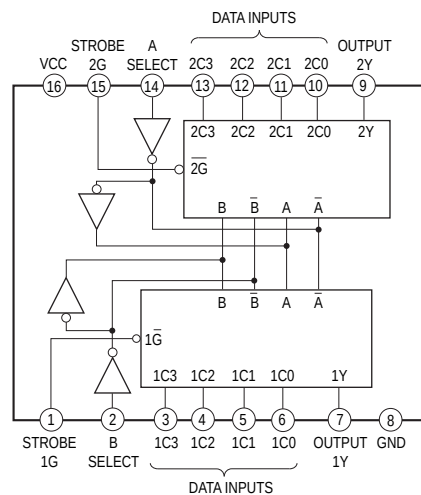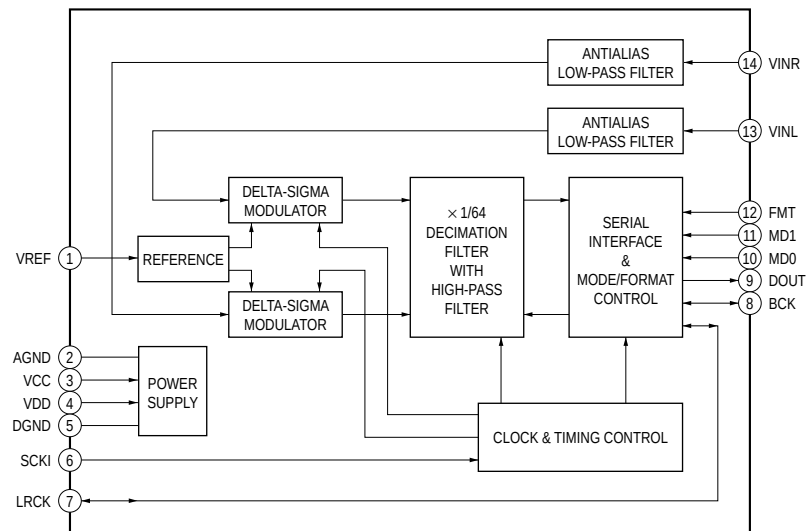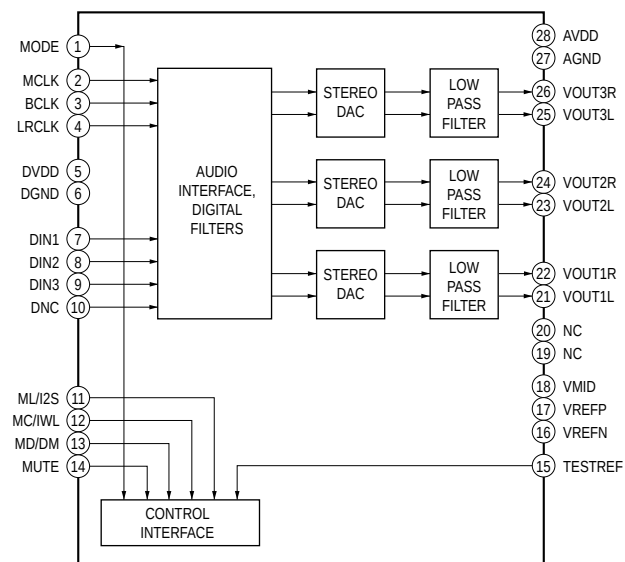IC1302 TC74ACT153F (EL)**IC1401 PCM1808PWR****IC1452 WM8766GEDS/R**


- HDMI Board -
IC3503 TMD5341APFCR

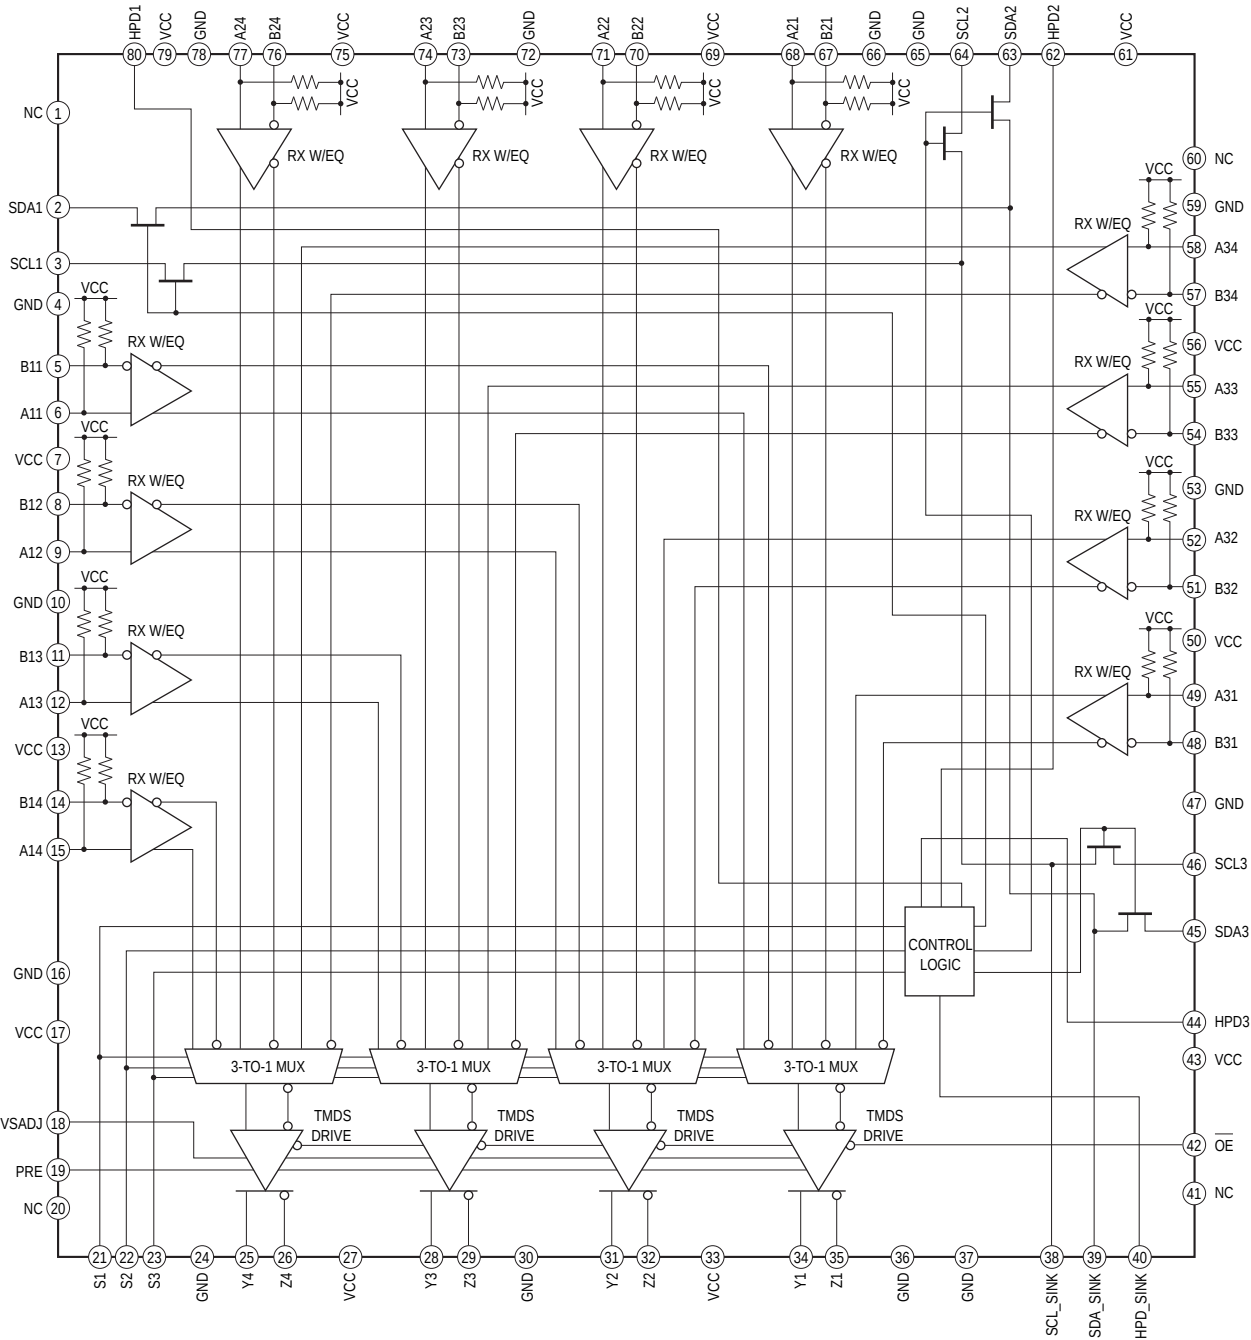


IC3507 PCA9517DP.118

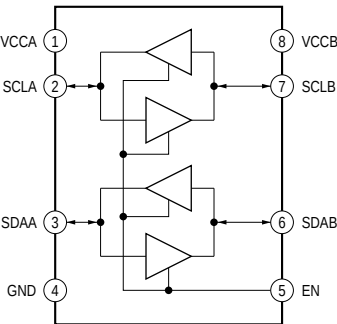


IC3509 BR24L02F-WE2

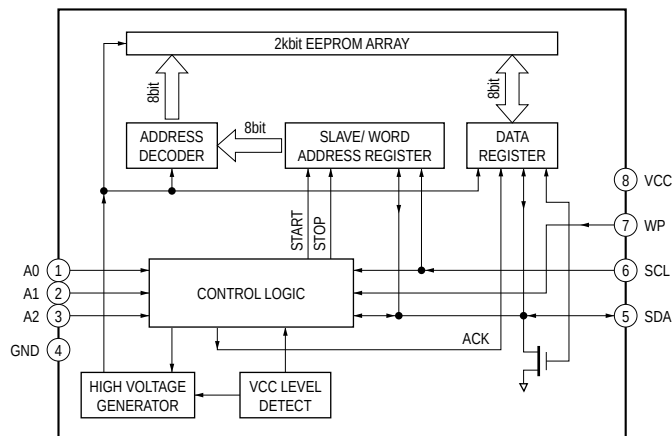


IC3513 SII9030CTU-7

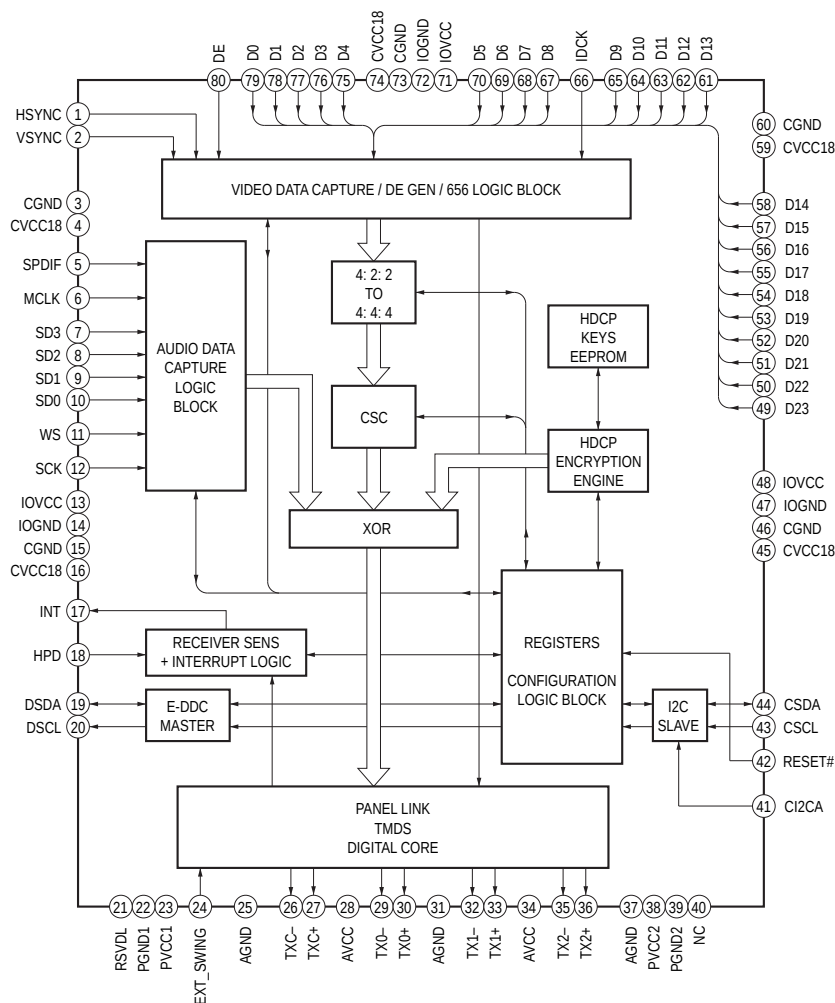


IC3516 TK11150CSSL-G


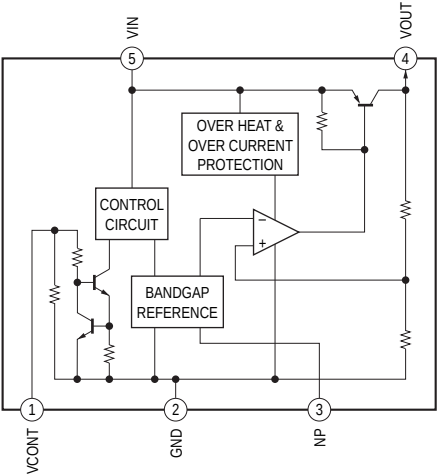


IC3526, 3527 SI-3033KM-TL

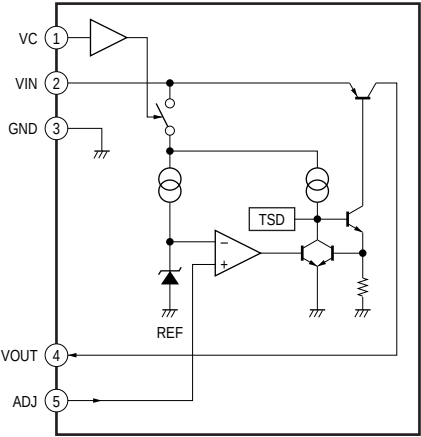

- VIDEO Board -
IC210 NJM2595M-TE2

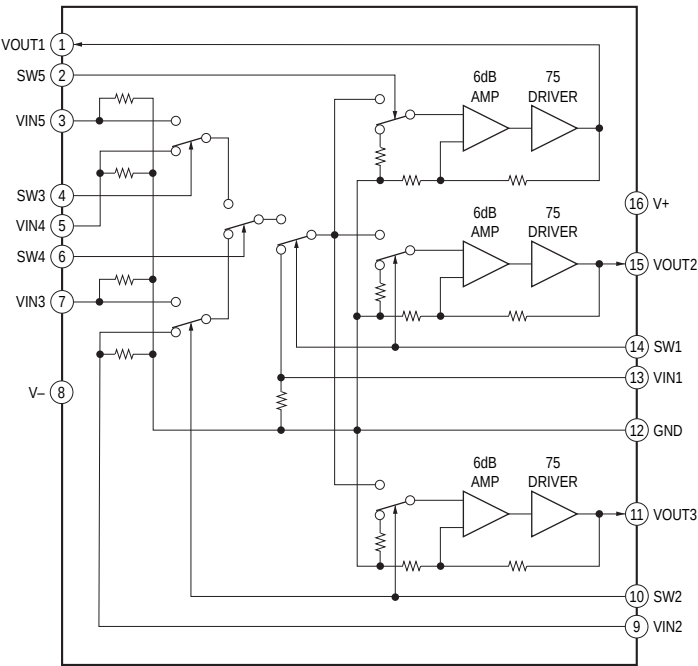

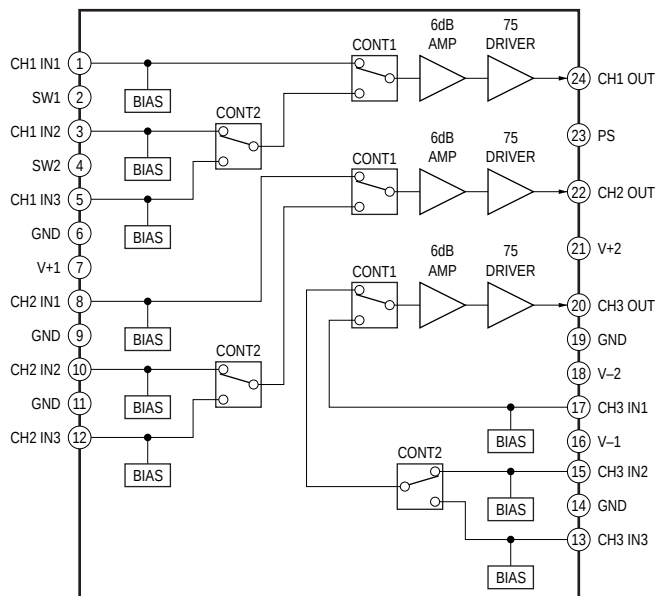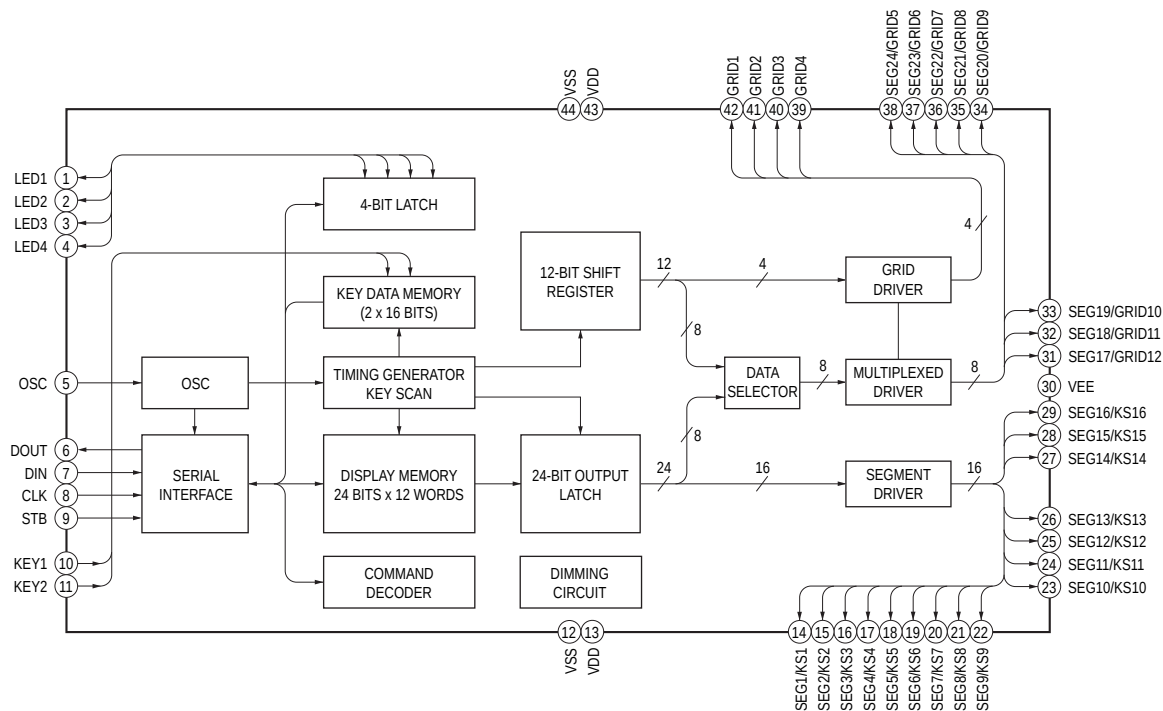
IC220 NJM2586AM**– DISPLAY Board –
IC100 PT6315**

STR-KG800

– DCDC CONVERTER Board –

IC4001 SI-8050S-LF1101

IC4100 SI-8033S

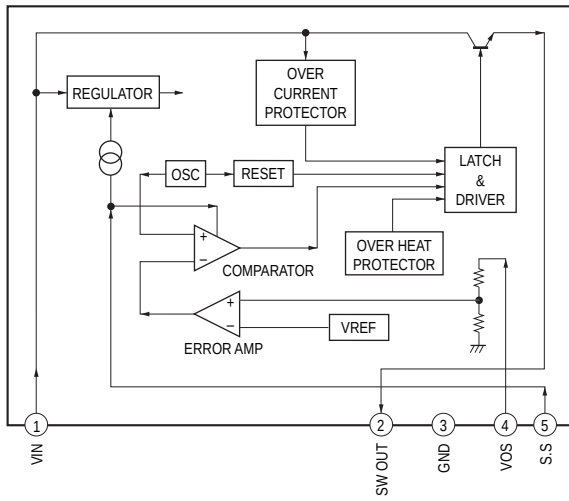

• IC Pin Function Description

DIGITAL BOARD IC1009 ADSST-AVR-1115 (DSP)

Pin No.	Pin Name	I/O	Description
1	VDDINT	-	Power supply terminal (+1.2V)
2, 3	CLKCFG0, CLKCFG1	I	Clock frequency setting terminal
4, 5	BOOTCFG0, BOOTCFG1	I	Boot mode setting terminal for DSP
6	GND	-	Ground terminal
7	VDDEXT	-	Power supply terminal (+3.3V)
8	GND	-	Ground terminal
9	VDDINT	-	Power supply terminal (+1.2V)
10	GND	-	Ground terminal
11	VDDINT	-	Power supply terminal (+1.2V)
12	GND	-	Ground terminal
13	VDDINT	-	Power supply terminal (+1.2V)
14	GND	-	Ground terminal
15	FRAG1	O	Interrupt status output to the system controller
16	FRAG2	I	PLL lock error signal and data error flag input terminal
17	AD7	I/O	Two-way data bus and address signal output with S-RAM Not used
18	GND	-	Ground terminal
19	VDDINT	-	Power supply terminal (+1.2V)
20	GND	-	Ground terminal
21	VDDEXT	-	Power supply terminal (+3.3V)
22	GND	-	Ground terminal
23	VDDINT	-	Power supply terminal (+1.2V)
24 to 26	AD6 to AD4	I/O	Two-way data bus and address signal output with S-RAM Not used
27	VDDINT	-	Power supply terminal (+1.2V)
28	GND	-	Ground terminal
29, 30	AD3, AD2	I/O	Two-way data bus and address signal output with S-RAM Not used
31	VDDEXT	-	Power supply terminal (+3.3V)
32	GND	-	Ground terminal
33, 34	AD1, AD0	I/O	Two-way data bus and address signal output with S-RAM Not used
35	XWR	O	Data write enable signal output to the S-RAM "L": active Not used
36, 37	VDDINT	-	Power supply terminal (+1.2V)
38	GND	-	Ground terminal
39	XRD	O	Read strobe signal output to the S-RAM "L": active Not used
40	ALE	O	Address latch enable signal output terminal Not used
41 to 43	AD15 to AD13	I/O	Two-way data bus and address signal output with S-RAM Not used
44	GND	-	Ground terminal
45	VDDEXT	-	Power supply terminal (+3.3V)
46	AD12	I/O	Two-way data bus and address signal output with S-RAM Not used
47	VDDINT	-	Power supply terminal (+1.2V)
48	GND	-	Ground terminal
49 to 52	AD11 to AD8	I/O	Two-way data bus and address signal output with S-RAM Not used
53	A16	O	Address signal output to S-RAM Not used
54	VDDINT	-	Power supply terminal (+1.2V)
55	GND	-	Ground terminal
56, 57	A17, A18	O	Address signal output to S-RAM Not used
58	GND	-	Ground terminal
59	VDDEXT	-	Power supply terminal (+3.3V)
60	VDDINT	-	Power supply terminal (+1.2V)
61	GND	-	Ground terminal
62	PF_CE	I/O	Chip enable signal input/output terminal Not used
63	SPI_MAS	O	Master/slave selection signal output terminal "L": DSP is master Not used
64	DPSOA	O	PCM audio signal (front L/R) output to the D/A converter
65	DPSOB	O	PCM audio signal (surround L/R) output to the D/A converter
66	VDDINT	-	Power supply terminal (+1.2V)
67	GND	-	Ground terminal
68	VDDINT	-	Power supply terminal (+1.2V)
69	GND	-	Ground terminal
70	DPSOC	O	PCM audio signal (center, sub woofer) output to the D/A converter

Pin No.	Pin Name	I/O	Description
71	DPSOD	O	PCM audio signal (surround back L/R) output to the D/A converter
72	VDDINT	-	Power supply terminal (+1.2V)
73	VDDEXT	-	Power supply terminal (+3.3V)
74	GND	-	Ground terminal
75	VDDINT	-	Power supply terminal (+1.2V)
76	GND	-	Ground terminal
77	DPSOE	O	PCM audio signal output terminal Not used
78	DPSIA	I	PCM audio signal (digital input) input from the digital audio interface receiver
79	DPSIB	I	PCM audio signal (front L/R) input terminal
80	DPSIC	I	PCM audio signal (surround L/R) input terminal
81	DPSID	I	PCM audio signal (center, sub woofer) input terminal
82	DPSIE	I	PCM audio signal (surround back L/R) input terminal
83	VDDINT	-	Power supply terminal (+1.2V)
84, 85	GND	-	Ground terminal
86	DPDVLCK	O	L/R sampling clock signal output to the D/A converter for PCM audio output
87	DPDVBCK	O	Bit clock signal output to the D/A converter for PCM audio output
88	DPLRCK	I	L/R sampling clock signal input terminal for PCM audio input
89	DPBCK	I	Bit clock signal input terminal for PCM audio input
90	VDDINT	-	Power supply terminal (+1.2V)
91, 92	GND	-	Ground terminal
93	VDDEXT	-	Power supply terminal (+3.3V)
94	DPFCK	I	Master clock signal input terminal
95	GND	-	Ground terminal
96	VDDINT	-	Power supply terminal (+1.2V)
97	XNONAUDIO	I	Digital input signal switch control signal input from the digital audio interface receiver
98	XSF_CE	O	Chip enable signal output terminal Not used
99	VDDINT	-	Power supply terminal (+1.2V)
100	GND	-	Ground terminal
101	VDDINT	-	Power supply terminal (+1.2V)
102	GND	-	Ground terminal
103	VDDINT	-	Power supply terminal (+1.2V)
104	GND	-	Ground terminal
105	VDDINT	-	Power supply terminal (+1.2V)
106	GND	-	Ground terminal
107, 108	VDDINT	-	Power supply terminal (+1.2V)
109	GND	-	Ground terminal
110	VDDINT	-	Power supply terminal (+1.2V)
111	GND	-	Ground terminal
112	VDDINT	-	Power supply terminal (+1.2V)
113	GND	-	Ground terminal
114	VDDINT	-	Power supply terminal (+1.2V)
115	GND	-	Ground terminal
116	VDDEXT	-	Power supply terminal (+3.3V)
117	GND	-	Ground terminal
118	VDDINT	-	Power supply terminal (+1.2V)
119	GND	-	Ground terminal
120	VDDINT	-	Power supply terminal (+1.2V)
121	XRESET	I	System reset signal input from the system controller
122	XSPIDS	I	Serial data latch pulse signal input from the system controller
123	GND	-	Ground terminal
124	VDDINT	-	Power supply terminal (+1.2V)
125	SPICLK	I/O	Serial data transfer clock signal input/output with the system controller
126	MISO	O	Serial data output to the main system controller
127	MOSI	I	Serial data input from the main system controller
128	GND	-	Ground terminal
129	VDDINT	-	Power supply terminal (+1.2V)
130	VDDEXT	-	Power supply terminal (+3.3V)
131	AVDD	-	Power supply terminal (+3.3V)
132	AVSS	-	Ground terminal

Pin No.	Pin Name	I/O	Description
133	GND	-	Ground terminal
134	CLKOUT	-	Not used
135	XEMU	-	Not used
136	TDO	-	Not used
137	TDI	-	Not used
138	CTRST	-	Not used
139	TCK	-	Not used
140	TMS	-	Not used
141	GND	-	Ground terminal
142	CLKIN	I	System clock input terminal (25 MHz)
143	XTAL	O	System clock output terminal (25 MHz)
144	VDDEXT	-	Power supply terminal (+3.3V)

DIGITAL BOARD IC1010 MB91353APMT-G-117E1 (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	DAC_CLK	O	Clock signal output to the D/A converter
2	XMDACMS	O	Serial data latch pulse signal output terminal Not used
3	XMDACMD1	O	Serial data output terminal Not used
4	DAC_D1	O	Serial data output to the D/A converter
5	TUNING A	I	Jog dial pulse input terminal Not used
6	TUNING B	I	Jog dial pulse input terminal Not used
7	HDMI_REG_CTRL	O	Power on/off control signal output terminal for the HDMI section "H": power on
8	DSP_SELECT	O	DSP select signal output to the switching and data selector
9	POWER_RY	O	Relay drive signal (for main power) output terminal "H": relay on
10	VOL_CL	O	Clock signal output to the electrical volume
11	VOL_DA	O	Serial data output to the electrical volume
12	HP_DETECT	I	Headphone detection signal input terminal "H": headphone is connected
13	HP_RY	O	Relay drive signal (for headphone) output terminal "H": relay on
14	C/SUR/SB	O	Relay drive signal (for center and surround) output terminal "H": relay on
15	FRONT B RY/ STER_SW	O	Relay drive signal (for front B) output terminal Not used
16	SW_RY	O	Relay drive signal (for sub woofer) output terminal "H": relay on
17	FRONT A RY	O	Relay drive signal (for front A) output terminal "H": relay on
18	GND	-	Ground terminal
19	VCC	-	Power supply terminal (+3.3V)
20	SBR_RY	O	Relay drive signal (for surround back) output terminal Not used
21	TUNE_LAT	O	Serial data latch pulse signal output to the tuner (FM/AM)
22	TUNE_DI	O	Serial data output to the tuner (FM/AM)
23	T_CLK	O	Serial data transfer clock signal output to the tuner (FM/AM)
24	TUNE_DO	I	PLL data input from the tuner (FM/AM)
25	FUSE_DETECT	I	Fuse detection signal input terminal
26	DAC_ATC	O	Serial data latch pulse signal output to the D/A converter
27	DAC_MUTE	O	Muting signal output to the D/A converter
28	CEC_OUT	O	CEC serial data output to the HDMI OUT connector
29	DIR_XSTATE	I	Source clock selection monitor input from the digital audio interface receiver
30	HDMI_ERR	I	HDMI audio error signal input terminal
31 to 34	V_SW4 to V_SW1	O	Video select signal output to the video amplifier
35, 36	COMP_S1, COMP_S2	O	Component video select signal output to the video amplifier
37	PS(V-MUTE)	O	Muting signal output to the video amplifier
38	DIR_XMODE(RESET)	O	Reset signal output to the digital audio interface receiver "L": reset
39	DIRCKST	O	Clock selection signal output to the digital audio interface receiver
40	GND	-	Ground terminal
41, 42	NO USE	-	Not used
43	GND	-	Ground terminal
44	+3.3V	-	Power supply terminal (+3.3V)
45	DIR_CLK	O	Serial data transfer clock signal output to the digital audio interface receiver
46	DIR_CE(LAT)	O	Chip enable signal output to the digital audio interface receiver
47	DIR_DI	O	Serial data output to the digital audio interface receiver
48	DIR_DO	I	Serial data input from the digital audio interface receiver
49	DIR_ERROR	I	PLL lock error signal and data error flag input from the digital audio interface receiver
50	HDMI_FSRATE	I	Serial data input terminal
51	NMI	I	Non maskable interrupt signal input terminal Not used
52	MD2	I	CPU operation mode setting signal input terminal "H": flash programming
53	MD1	I	CPU operation mode setting signal input terminal Not used
54	MD0	I	CPU operation mode setting signal input terminal Not used
55	INIT	I	External reset signal input terminal
56	+3.3V	-	Power supply terminal (+3.3V)
57	X1	O	Main system clock output terminal (24 MHz)
58	X0	I	Main system clock input terminal (24 MHz)
59	GND	-	Ground terminal
60	XOA	I	Sub system clock input terminal Not used
61	X1A	O	Sub system clock output terminal Not used
62	RST_TRG	O	Reset signal output terminal
63	DIR_DATA0	I	Serial data input from the digital audio interface receiver

Pin No.	Pin Name	I/O	Description
64	DSP_RESET	O	System reset signal output to the DSP
65	DSP_SPIDS(LAT)	O	Serial data latch pulse signal output to the DSP
66	74ACT153_B	O	Data selection signal output terminal
67	74ACT154_A	O	Data selection signal output terminal
68	PROTECTOR	I	Protector status detect signal input terminal
69	FL LAT	O	Strobe signal output to the fluorescent indicator tube
70	FL_CLK	O	Serial data transfer clock signal output to the fluorescent indicator tube
71	FL_DATA	O	Serial data output to the fluorescent indicator tube
72	NO USE	O	Not used
73	DSP MISO	I	Serial data input from the DSP
74	DSP MOSI	O	Serial data output to the DSP
75	DSP SPICLK	I/O	Serial data transfer clock signal input/output with the DSP
76	GND	-	Ground terminal
77	+3.3V	-	Power supply terminal (+3.3V)
78	EEPROM CLK	O	Serial data transfer clock signal output to the EEPROM
79	VOL_JOG (2B)	I	Jog dial pulse input from the rotary encoder (for MASTER VOLUME) (B phase input)
80	VOL_JOG (2A)	I	Jog dial pulse input from the rotary encoder (for MASTER VOLUME) (A phase input)
81	DSPINT	I	Interrupt status input from the DSP
82	DCAC_DSP_IN	I	Mic signal interrupt input terminal
83	STOP	I	AC off detection signal input terminal "L": AC off
84	SIRCS_IN	I	SIRCS signal input from the remote control receiver
85	POWER KEY	I	Power key input terminal
86	RDS INT	I	RDS serial data transfer clock signal input from the tuner (FM/AM) (AEP model only)
87	RDS DATA	I	RDS serial data input from the tuner (FM/AM) (AEP model only)
88	CEC IN	I	CEC serial data input from the HDMI OUT connector
89	INPUT ENCODER A	I	Jog dial pulse input from the rotary encoder (for INPUT SELECTOR) (A phase input)
90	INPUT ENCODER B	I	Jog dial pulse input from the rotary encoder (for INPUT SELECTOR) (B phase input)
91	NO USE	O	Not used
92	XM_MIXMO	O	Serial data output terminal Not used
93	XM_MOXMI	I	Serial data input terminal Not used
94	XMRESET	O	Reset signal output terminal Not used
95	+3.3V	-	Power supply terminal (+3.3V)
96	GND	-	Ground terminal
97	SUBT	O	Transformer power on/off control signal output terminal
98	EEPROM DATA	I/O	Two-way data bus with the EEPROM
99	CLINK_TX	I	Receive data input from the DMPORT connector
100	CLINK_RX	O	Transmit data output to the DMPORT connector
101	CLINK_DET	I	Digital media port adapter connection detection signal input terminal
102	FLASH2/ HDMI_UART_RX	O	UART data output to the HDMI controller
103	FLASH1/ HDMI_UART_TX	I	UART data input from the HDMI controller
104	HDMI RESET	O	System reset signal output to the HDMI controller "L": reset
105, 106	NO USE	-	Not used
107	GND	-	Ground terminal (for D/A converter)
108	DAVC	-	Power supply terminal (+3.3V) (for D/A converter)
109	AVCC	-	Analog power supply terminal (+3.3V) (for A/D converter)
110	AVRH	-	Reference voltage input terminal (+3.3V) (for A/D converter)
111	AVSS/AVRL	-	Analog ground terminal (for A/D converter)
112	GND	-	Ground terminal
113, 114	AD KEY1, AD KEY2	I	Front panel key input terminal (A/D input)
115	DCAC_IN	I	Mic signal input terminal
116	VERSION	I	Setting terminal for the destination
117	RDS SIGNAL	I	Tuning detection signal input from the tuner (FM/AM)
118	MODEL	I	Setting terminal for the model
119	VACS_CTRL	I	VACS control signal input terminal
120	NO USE	I	Not used

HDMI BOARD IC3511 SII9011CLU (HDMI RECEIVER)

Pin No.	Pin Name	I/O	Description
1	VSYNC	O	Vertical synchronize signal output for the HDMI transceiver
2 to 5	QO23 to QO20	-	Not used
6	IOGND	-	Ground terminal
7	IOVCC	-	Power supply terminal (+3.3V)
8 to 11	QO19 to QO16	-	Not used
12	CVCC18	-	Power supply terminal (+1.8V)
13	CGND	-	Ground terminal
14 to 17	QO15 to QO12	-	Not used
18	IOGND	-	Ground terminal
19	IOVCC	-	Power supply terminal (+3.3V)
20 to 23	QO11 to QO8	-	Not used
24	CVCC18	-	Power supply terminal (+1.8V)
25	CGND	-	Ground terminal
26 to 29	QO7 to QO4	-	Not used
30	IOGND	-	Ground terminal
31	IOVCC	-	Power supply terminal (+3.3V)
32 to 35	QO3 to QO0	-	Not used
36	CVCC18	-	Power supply terminal (+1.8V)
37	CGND	-	Ground terminal
38	CI2CA	-	Not used
39	CSDA	I/O	I2C two-way data bus with the HDMI controller and HDMI transceiver
40	CSCL	I	I2C clock signal input from the HDMI controller
41	DSDA	I/O	I2C two-way data bus with the level shift and data selector
42	DSDL	I	I2C clock signal input from the level shift and data selector
43	NC	-	Not used
44	PWR5V	I	Power detect signal input terminal
45	CVCC18	-	Power supply terminal (+1.8V)
46	PGND	-	Ground terminal
47	PVCC	-	Power supply terminal (+3.3V)
48	PSVD	-	Not used
49	AVCC	-	Power supply terminal (+3.3V)
50	RXC-	I	TMDS clock signal input from the HDMI input selector
51	RXC+	I	TMDS clock signal input from the HDMI input selector
52	AGND	-	Ground terminal
53	AVCC	-	Power supply terminal (+3.3V)
54	RX0-	I	TMDS data input from the HDMI input selector
55	RX0+	I	TMDS data input from the HDMI input selector
56	AGND	-	Ground terminal
57	AVCC	-	Power supply terminal (+3.3V)
58	RX1-	I	TMDS data input from the HDMI input selector
59	RX1+	I	TMDS data input from the HDMI input selector
60	AGND	-	Ground terminal
61	AVCC	-	Power supply terminal (+3.3V)
62	RX2-	I	TMDS data input from the HDMI input selector
63	RX2+	I	TMDS data input from the HDMI input selector
64, 65	AGND, DGND	-	Ground terminal
66	DVCC18	-	Power supply terminal (+1.8V)
67	MUTE	O	Audio muting signal output terminal
68	IOVCC	-	Power supply terminal (+3.3V)
69	IOGND	-	Ground terminal
70	SPDIF	O	SPDIF signal output for the digital audio interface receiver and HDMI transceiver
71 to 74	SD3 to SD0	O	Serial data output for the DSP and HDMI transceiver
75	WS	O	Word select signal output for the DSP and HDMI transceiver
76	SCK	O	Serial clock signal output for the DSP and HDMI transceiver
77	IOVCC	-	Power supply terminal (+3.3V)

Pin No.	Pin Name	I/O	Description
78	I0GND	-	Ground terminal
79	MCLK	O	Audio master clock signal output for the DSP and HDMI transceiver
80	CGND	-	Ground terminal
81	CVCC18	-	Power supply terminal (+1.8V)
82	AUDPVCC18	-	Power supply terminal (+1.8V)
83	AUDPGND	-	Ground terminal
84	XTALOUT	O	System clock output terminal (28.322 MHz)
85	XTALIN	I	System clock input terminal (28.322 MHz)
86	ZTALVCC	-	Power supply terminal (+3.3V)
87	REGVCC	-	Power supply terminal (+3.3V)
88	RSVDL	-	Not used
89	RESET	I	Reset signal input from the HDMI controller "L": reset
90	SCDT	-	Not used
91	INT	O	Interrupt signal output for the HDMI controller
92 to 96	QE23 to QE19	O	Serial data output for the HDMI transceiver
97	I0GND	-	Ground terminal
98	I0VCC	-	Power supply terminal (+3.3V)
99 to 105	QE18 to QE12	O	Serial data output for the HDMI transceiver
106	I0GND	-	Ground terminal
107	I0VCC	-	Power supply terminal (+3.3V)
108 to 111	QE11 to QE8	O	Serial data output for the HDMI transceiver
112	CVCC18	-	Power supply terminal (+1.8V)
113	CGND	-	Ground terminal
114 to 117	QE7 to QE4	O	Serial data output for the HDMI transceiver
118	I0GND	-	Ground terminal
119	ODCK	O	Output data clock signal output for the HDMI transceiver
120	I0VCC	-	Power supply terminal (+3.3V)
121 to 124	QE3 to QE0	O	Serial data output for the HDMI transceiver
125	CVCC18	-	Power supply terminal (+1.8V)
126	CGND	-	Ground terminal
127	DE	O	Data enable signal output for the HDMI transceiver
128	HSYNC	O	Horizontal synchronize signal output for the HDMI transceiver

HDMI RE BOARD IC3519 M30620FCPPG-RSX01 (HDMI CONTROLLER)

Pin No.	Pin Name	I/O	Description
1 to 5	NC	-	Not used
6	BYTE	-	Not used
7	CNVSS	I	Processor mode switch input terminal (for test)
8, 9	NC	-	Not used
10	RESET	I	System reset signal input from the main system controller "L": reset
11	XOUT	O	System clock output terminal (10 MHz)
12	VSS	-	Ground terminal
13	XIN	I	System clock input terminal (10 MHz)
14	VCC_3.3V	-	Power supply terminal (+3.3V)
15	NMI	-	Not used
16 to 18	NC	-	Not used
19	RX_RST	O	System reset signal output to the HDMI receiver "L": reset
20	RX_INT	I	Interrupt status input from the HDMI receiver
21	RX_HPDI	O	Hot plug connection detect signal output to the HDMI input selector
22 to 26	NC	-	Not used
27	CSCL	O	Serial data transfer clock signal output to the HDMI section
28	CSDA	I/O	Two-way data bus with the HDMI section
29	232COUT	O	Serial data output terminal for the RS-232C
30	232CIN	I	Serial data input terminal for the RS-232C
31, 32	NC	-	Not used
33	TX	I	UART data input from the system controller
34	RX	O	UART data output to the system controller
35	EEPROMSEL1	O	Write enable signal output to the EEPROM
36 to 39	NC	-	Not used
40	VDAC_RESET	-	Not used
41	TX_5VPWR	O	Power on/off control signal output terminal "H": power on
42	TX_RST	I	Interrupt status input from the HDMI transceiver
43	TX_INT	O	System reset signal output to the HDMI transceiver "L": reset
44 to 50	NC	-	Not used
51 to 53	TMDS_S1 to TMDS_S3	O	Source selection signal output to the HDMI input selector
54	TMDS_OEB	O	Output enable signal output to the HDMI input selector
55, 56	P5V_SELA, P5V_SELB	O	HDMI SAT IN, DVD IN, VEDEO 2/BD IN jack detection signal select signal output terminal
57 to 59	NC	-	Not used
60	VCC_3.3V	-	Power supply terminal (+3.3V)
61	NC	-	Not used
62	VSS	-	Ground terminal
63, 64	NC	-	Not used
65	MUTE	O	Audio muting signal output terminal
66	AD_SW	-	Not used
67	AD_INT	-	Not used
68	AD_RST	-	Not used
69	PROUT_RST	-	Not used
70	PROU_OUT_SW	-	Not used
71 to 90	NC	-	Not used
91 to 93	MODEL_SW3 to MODEL_SW1	I	Model setting terminal
94	AVSS	-	Ground terminal
95	NC	-	Not used
96	VREF	I	Reference voltage (+3.3V) input terminal
97	AVCC	-	Power supply terminal (+3.3V)
98 to 100	NC	-	Not used

SECTION 7 EXPLODED VIEWS

Note:


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)
Parts Color Cabinet's Color
- Abbreviation
AUS : Australian model

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


The components identified by mark $\square$ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

7-1. FRONT PANEL SECTION

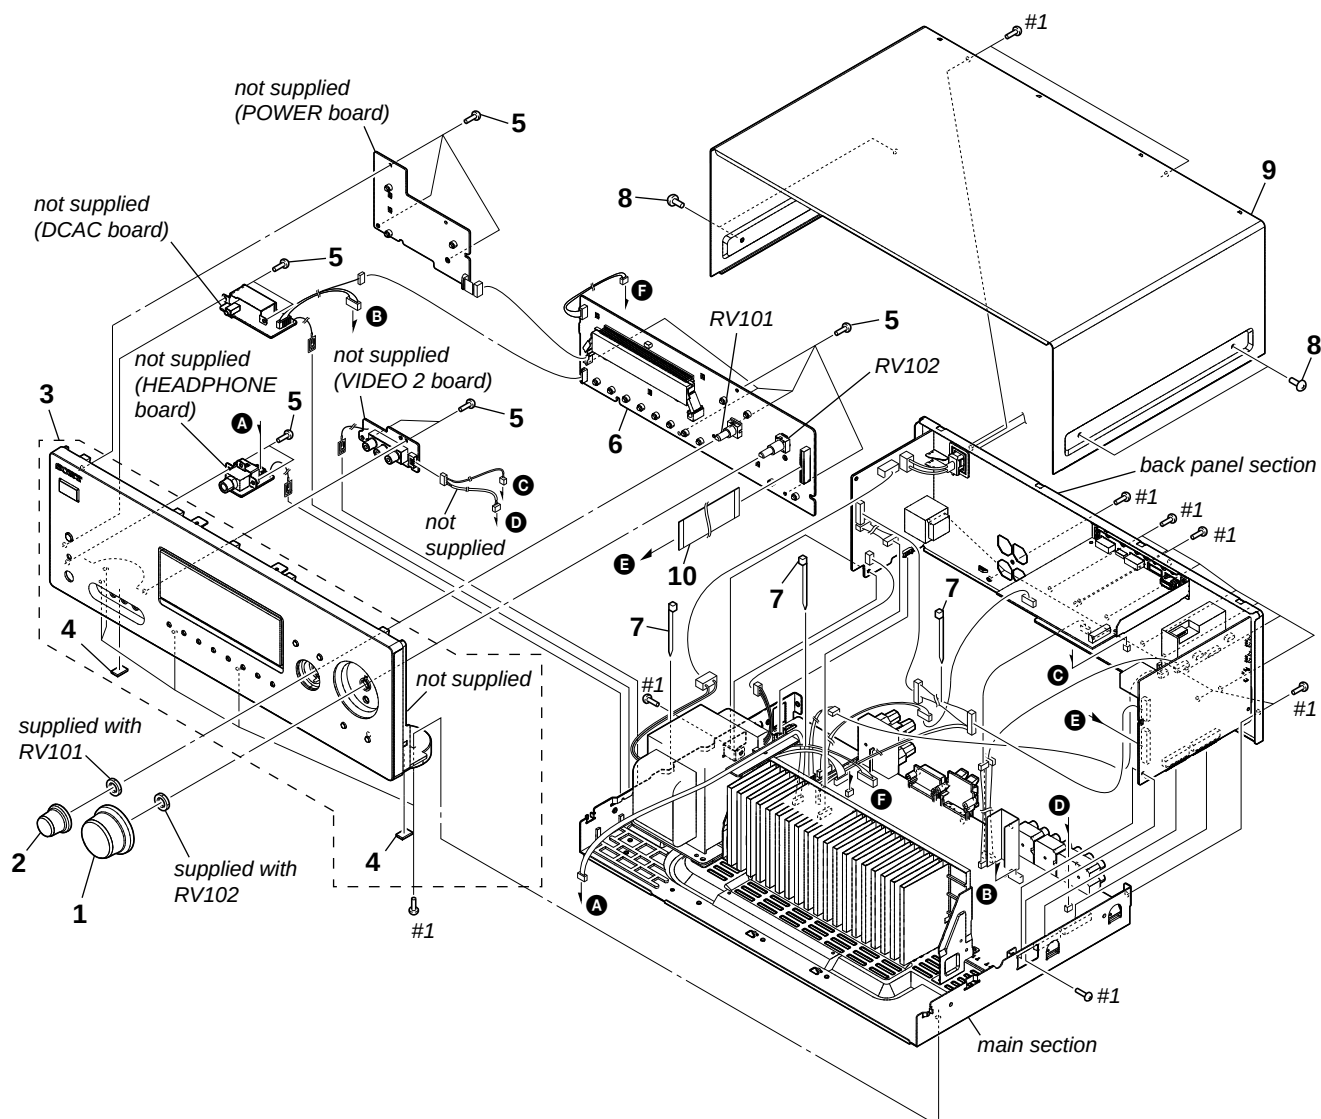

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	2-661-142-01	VOLUME KNOB		8	2-580-630-01	SCREW, +BVST 4X8	
2	X-2190-020-1	KNOB MENU ASSY		9	3-285-693-11	CASE	
3	X-2187-664-2	FRONT PANEL ASSY (AEP)					
3	X-2190-658-1	FRONT PANEL ASSY (AUS)		10	1-828-994-11	WIRE (FLAT TYPE) (17 CORE)	
4	4-977-358-01	CUSHION		RV101	1-418-817-31	ENCODER, ROTARY (INPUT SELECTOR)	
5	3-087-053-01	+BVTP2.6 (3CR)		RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE)	
6	A-1433-583-A	DISPLAY BOARD, COMPLETE				(MASTER VOLUME)	
7	3-701-748-00	CLAMP		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	


7-2. BACK PANEL SECTION

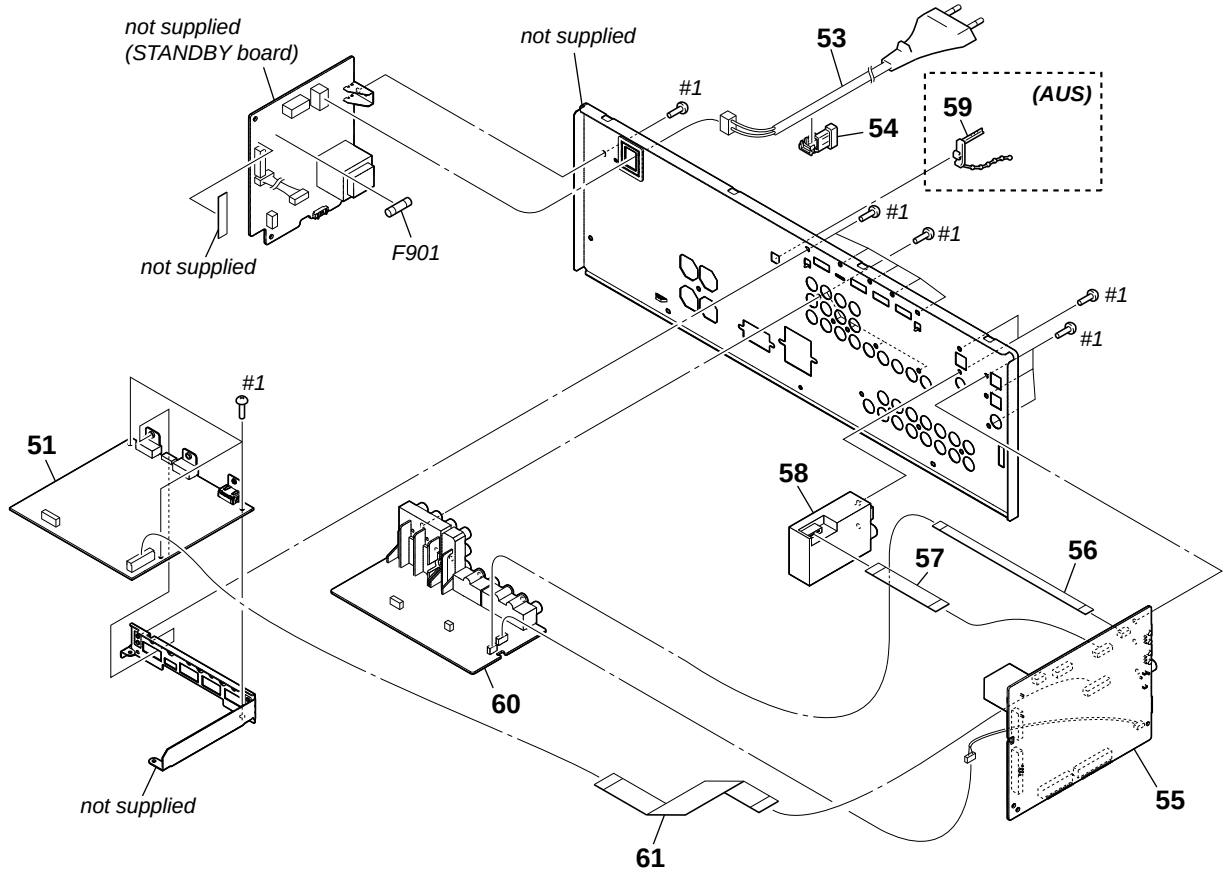

Note: If wire (flat type) is replaced, install it after bending it in the same form as that before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	A-1438-372-A	HDMI BOARD, COMPLETE (for SERVICE)		57	1-828-961-51	WIRE (FLAT TYPE) (11 CORE) (AEP)	
53	1-777-071-83	CORD, POWER (AEP)		58	1-693-737-21	TUNER (FM/AM) (AEP)	
53	1-833-566-21	POWER-SUPPLY CORD (AUS)		58	1-693-749-21	TUNER (FM/AM) (AUS)	
54	4-966-267-12	BUSHING (FBS001), CORD		59	4-956-370-12	BAND, PLUG FIXED (AUS)	
55	A-1433-592-A	DIGITAL AB BOARD, COMPLETE (AEP)		60	A-1433-570-A	VIDEO BOARD, COMPLETE	
55	A-1542-877-A	DIGITAL AB BOARD, COMPLETE (AUS)		61	1-828-350-51	WIRE (FLAT TYPE) (17 CORE)	
56	1-828-299-51	WIRE (FLAT TYPE) (7 CORE)		F901	1-532-464-33	FUSE (T2.5AL/250V)	
57	1-828-951-11	WIRE (FLAT TYPE) (9 CORE) (AUS)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

7-3. MAIN SECTION

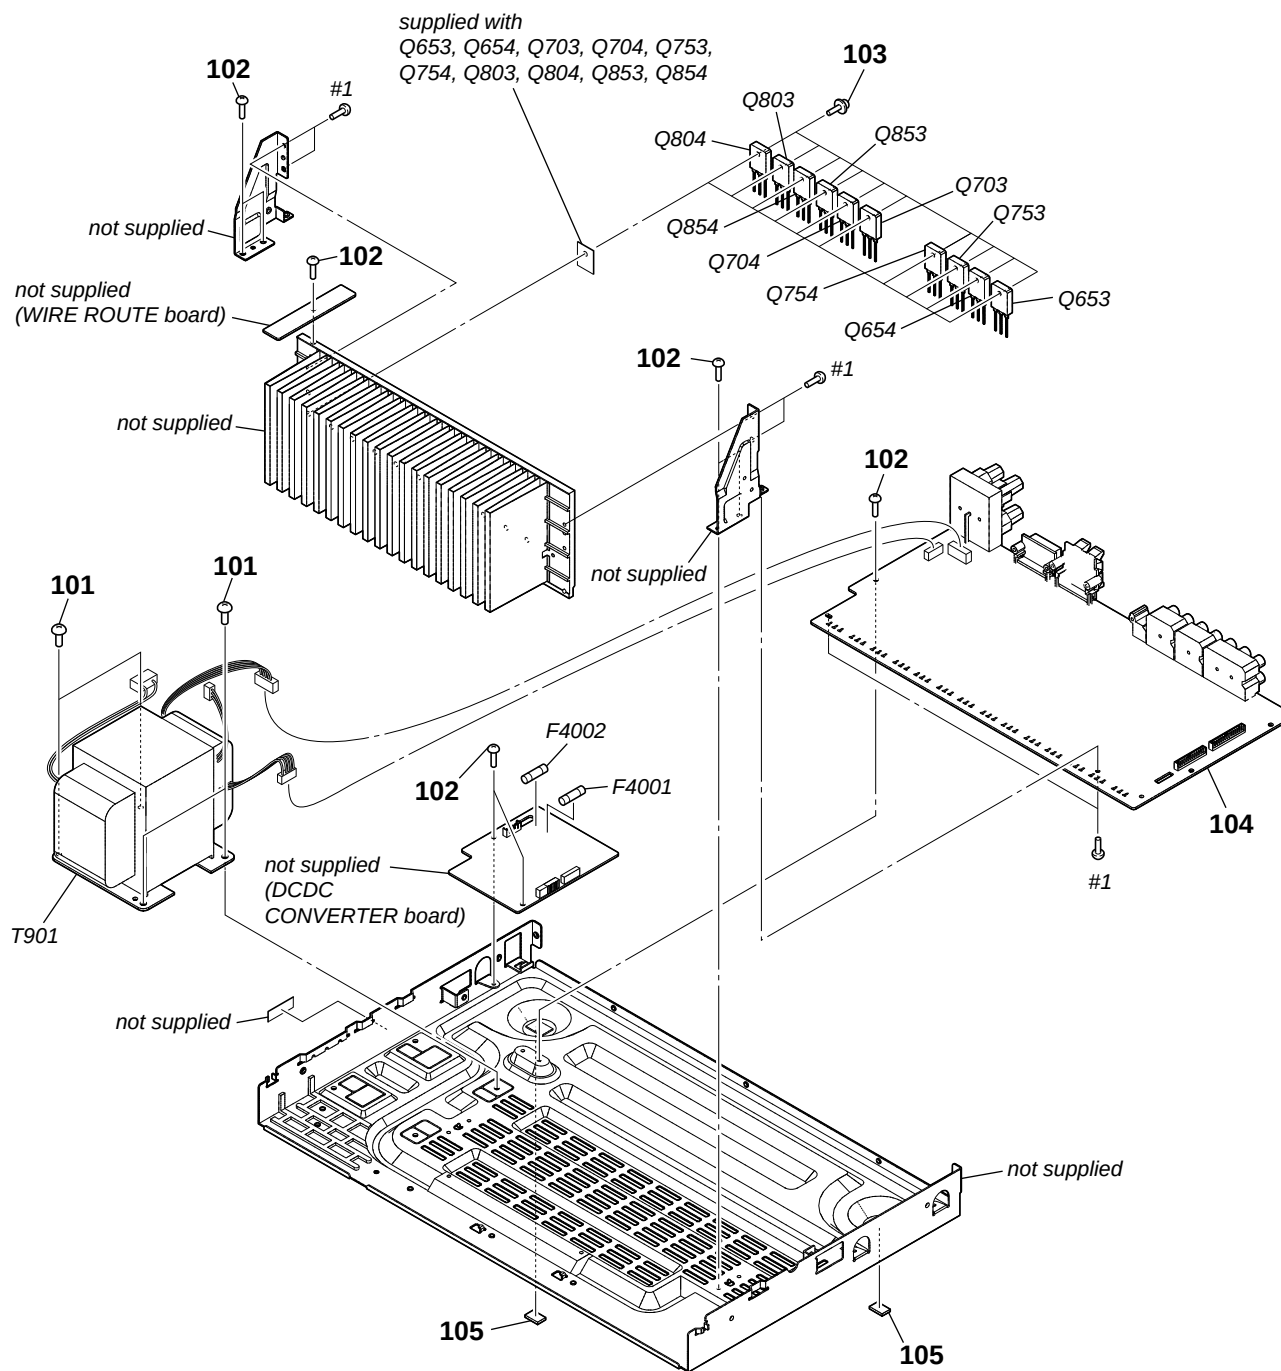

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-249-675-01	+BV SUMITITE S 4X6 ROUND		Q704	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
102	3-077-331-21	+BV3 (3-CR)		Q753	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
103	3-905-609-01	SCREW (TRANSISTOR)		Q754	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
104	A-1433-568-A	MAIN BOARD, COMPLETE		Q803	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
105	4-977-358-01	CUSHION		Q804	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
△ F4001	1-532-465-33	FUSE (T3.15AL/250V)		Q853	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
△ F4002	1-532-465-33	FUSE (T3.15AL/250V)		Q854	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
Q653	6-702-390-01	TRANSISITOR MN2488-OPY-MK		△ T901	1-443-525-11	POWER TRANSFORMER	
Q654	6-702-391-01	TRANSISITOR MP1620-OPY-MK		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
Q703	6-702-390-01	TRANSISITOR MN2488-OPY-MK					

SECTION 8
ELECTRICAL PARTS LIST

Note:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS
uF: μF
- COILS
uH: μH

- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ, for example:
uA. . . : μA. . . , uPA. . . , μPA. . . ,
uPB. . . : μPB. . . , uPC. . . , μPC. . . ,
uPD. . . : μPD. . .
- Abbreviation
AUS : Australian model

When indicating parts by reference number, please include the board name.

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

The components identified by mark  contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		DCAC BOARD *****				< LEAD >	
		< CAPACITOR >		* TP2000	1-690-880-31	LEAD (WITH CONNECTOR)	

						DCDC CONVERTER BOARD *****	
C2001	1-162-927-11	CERAMIC CHIP 100PF	5% 50V				
C2002	1-126-160-11	ELECT 1uF	20% 50V				
C2003	1-100-436-91	CERAMIC CHIP 0.033uF	10% 25V				
C2005	1-162-921-11	CERAMIC CHIP 33PF	5% 50V				
C2006	1-126-160-11	ELECT 1uF	20% 50V	7-685-646-79		SCREW +BVTP 3X8 TYPE2 IT-3	
						< CAPACITOR >	
C2008	1-162-924-11	CERAMIC CHIP 56PF	5% 50V	C4002	1-128-549-11	ELECT 3300uF 20% 35V	
C2010	1-100-436-91	CERAMIC CHIP 0.033uF	10% 25V	C4003	1-128-959-21	ELECT 1000uF 20% 35V	
C2011	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V	C4004	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
C2012	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V	C4005	1-128-950-21	ELECT 1000uF 20% 16V	
C2013	1-126-160-11	ELECT 1uF	20% 50V	C4006	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
C2014	1-124-465-00	ELECT 0.47uF	20% 50V	C4007	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
C2018	1-100-566-91	CERAMIC CHIP 0.1uF	10% 25V	C4009	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
C2205	1-100-566-91	CERAMIC CHIP 0.1uF	10% 25V	C4011	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
				C4012	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
		< DIODE >		C4100	1-128-959-21	ELECT 1000uF 20% 35V	
D2013	6-501-817-01	DIODE MA2J1110GLS0					
D2014	6-501-817-01	DIODE MA2J1110GLS0		C4102	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
				C4103	1-128-950-21	ELECT 1000uF 20% 16V	
		< IC >				< CONNECTOR >	
IC2000	8-759-710-97	IC NJM4565M-D		CN4001	1-778-226-21	CONNECTOR, BOARD TO BOARD 6P	
		< JACK >				< DIODE >	
J2000	1-820-056-21	SMALL TYPE JACK (3.5mm) (AUTO CAL MIC)		 D4001	8-719-081-52	DIODE D5SBA20-4003	
		< RESISTOR >		 D4803	6-502-218-01	DIODE RB060M-30	
				D4804	6-501-361-01	DIODE RB051LA-40TR	
R2000	1-216-821-11	METAL CHIP 1K	5% 1/10W			< FUSE HOLDER >	
R2001	1-216-833-11	METAL CHIP 10K	5% 1/10W				
R2003	1-216-833-11	METAL CHIP 10K	5% 1/10W	FH4001	1-533-233-11	FUSE HOLDER	
R2005	1-216-857-11	METAL CHIP 1M	5% 1/10W	FH4002	1-533-233-11	FUSE HOLDER	
R2006	1-216-821-11	METAL CHIP 1K	5% 1/10W	FH4003	1-533-233-11	FUSE HOLDER	
				FH4004	1-533-233-11	FUSE HOLDER	
R2007	1-216-833-11	METAL CHIP 10K	5% 1/10W			< IC >	
R2008	1-216-854-11	METAL CHIP 560K	5% 1/10W	 IC4001	8-759-474-09	IC SI-8050S-LF1101	
R2010	1-216-833-11	METAL CHIP 10K	5% 1/10W	 IC4100	8-759-659-28	IC SI-8033S	
R2015	1-216-839-11	METAL CHIP 33K	5% 1/10W			< COIL >	
R2016	1-216-835-11	METAL CHIP 15K	5% 1/10W				
				L4000	1-456-545-11	COIL, CHOKE 100uH	
R2017	1-216-825-11	METAL CHIP 2.2K	5% 1/10W	L4001	1-456-545-11	COIL, CHOKE 100uH	
R2018	1-216-822-11	METAL CHIP 1.2K	5% 1/10W	L4100	1-456-545-11	COIL, CHOKE 100uH	
R2019	1-216-825-11	METAL CHIP 2.2K	5% 1/10W				

DCDC CONVERTER

DIGITAL AB

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
L4102	1-456-721-11	COIL, CHOKE	100uH			C1069	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
		< RESISTOR >				C1070	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
R4000	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	C1072	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
R4001	1-216-817-11	METAL CHIP	470	5%	1/10W	C1073	1-126-923-91	ELECT	220uF	20%	10V
R4002	1-216-819-11	METAL CHIP	680	5%	1/10W	C1074	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
R4100	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	C1075	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V
R4101	1-216-817-11	METAL CHIP	470	5%	1/10W	C1076	1-126-933-11	ELECT	100uF	20%	16V
R4102	1-216-819-11	METAL CHIP	680	5%	1/10W	C1077	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
*****						C1078	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
A-1433-592-A	DIGITAL AB BOARD, COMPLETE (AEP)					C1079	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
A-1542-877-A	DIGITAL AB BOARD, COMPLETE (AUS)					C1080	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
	*****					C1081	1-126-960-11	ELECT	1uF	20%	50V
7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3					C1082	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		< CAPACITOR >				C1083	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1001	1-126-925-91	ELECT	470uF	20%	10V	C1084	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1002	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V	C1085	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1004	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1086	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1005	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1087	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1006	1-126-965-91	ELECT	22uF	20%	50V	C1088	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1007	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1089	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1008	1-165-722-11	ELECT	100uF	20%	10V	C1092	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C1009	1-126-933-11	ELECT	100uF	20%	16V	C1093	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1010	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1094	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1011	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1095	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1012	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1096	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1016	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1097	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1017	1-126-964-11	ELECT	10uF	20%	50V	C1098	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1021	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V	C1099	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C1022	1-135-372-31	ELECT	470uF	20%	10V	C1100	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1028	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1101	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1031	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V	C1102	1-126-964-11	ELECT	10uF	20%	50V
C1032	1-135-372-31	ELECT	470uF	20%	10V	C1103	1-126-947-11	ELECT	47uF	20%	35V
C1039	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1104	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C1041	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1105	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C1044	1-164-848-11	CERAMIC CHIP	8PF	0.5PF	50V	C1107	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1047	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1108	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1048	1-164-848-11	CERAMIC CHIP	8PF	0.5PF	50V	C1109	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1049	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1110	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1050	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1112	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1051	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1113	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1052	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1114	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1053	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1115	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1054	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1116	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1055	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1117	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1056	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1118	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1057	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1119	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1058	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1120	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1059	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1121	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1060	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1122	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1061	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1123	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1062	1-165-875-11	CERAMIC CHIP	10uF	10%	10V	C1124	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1063	1-126-933-11	ELECT	100uF	20%	16V	C1125	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1064	1-126-933-11	ELECT	100uF	20%	16V	C1126	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1065	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1127	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1066	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C1129	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1067	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C1131	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C1068	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1132	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
						C1139	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C1140	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C1142	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V

STR-KG800

Ver. 1.1

DIGITAL AB

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
C1168	1-162-927-11	CERAMIC CHIP	100PF	5%	50V		C1461	1-112-083-11	ELECT	100uF	20%	16V	
C1171	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C1462	1-115-412-11	CERAMIC CHIP	680PF	5%	25V	
C1172	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C1463	1-164-934-11	CERAMIC CHIP	330PF	10%	50V	
C1179	1-126-933-11	ELECT	100uF	20%	16V		C1465	1-112-100-11	ELECT	10uF	20%	50V	
C1185	1-126-965-91	ELECT	22uF	20%	50V		C1468	1-126-964-11	ELECT	10uF	20%	50V	
C1187	1-165-722-11	ELECT	100uF	20%	10V		C1470	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	
C1191	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1471	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	
C1254	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C1472	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	
C1255	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C1473	1-164-934-11	CERAMIC CHIP	330PF	10%	50V	
C1258	1-164-933-11	CERAMIC CHIP	220PF	10%	50V		C1474	1-115-412-11	CERAMIC CHIP	680PF	5%	25V	
C1301	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1478	1-126-964-11	ELECT	10uF	20%	50V	
C1302	1-164-947-11	CERAMIC CHIP	0.01uF		50V		C1488	1-126-964-11	ELECT	10uF	20%	50V	
C1303	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1604	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1304	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C1605	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C1305	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1612	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1306	1-126-947-11	ELECT	47uF	20%	35V		C1613	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1307	1-126-964-11	ELECT	10uF	20%	50V		C1614	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1309	1-164-860-11	CERAMIC CHIP	27PF	5%	50V		C1615	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1310	1-164-860-11	CERAMIC CHIP	27PF	5%	50V		C1616	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1312	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1617	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1313	1-164-874-11	CERAMIC CHIP	100PF	5%	50V		C1618	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1314	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1619	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1315	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1620	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C1316	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C1621	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C1317	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1622	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1318	1-126-964-11	ELECT	10uF	20%	50V		C1623	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1319	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C1624	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1320	1-164-874-11	CERAMIC CHIP	100PF	5%	50V		C1625	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1351	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C1626	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1354	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C1627	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1355	1-126-965-91	ELECT	22uF	20%	50V		C1628	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1358	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1629	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1359	1-126-916-11	ELECT	1000uF	20%	6.3V		C1630	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1361	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1631	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1362	1-164-947-11	CERAMIC CHIP	0.01uF		50V		C1632	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1370	1-126-947-11	ELECT	47uF	20%	35V		C1633	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1634	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1402	1-126-964-11	ELECT	10uF	20%	50V		C1650	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C1405	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1652	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C1406	1-126-964-11	ELECT	10uF	20%	50V		C1653	1-126-964-11	ELECT	10uF	20%	50V	
C1411	1-162-963-11	CERAMIC CHIP	680PF	10%	50V		C1654	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1413	1-164-934-11	CERAMIC CHIP	330PF	10%	50V		C1659	1-126-960-11	ELECT	1uF	20%	50V	
C1418	1-126-964-11	ELECT	10uF	20%	50V		C1660	1-126-960-11	ELECT	1uF	20%	50V	
C1419	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V		C1667	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1420	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V		C1701	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C1422	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V		C1704	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C1423	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V		C1907	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C1428	1-126-964-11	ELECT	10uF	20%	50V		C1909	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1432	1-162-963-11	CERAMIC CHIP	680PF	10%	50V		C1913	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V	
C1433	1-164-934-11	CERAMIC CHIP	330PF	10%	50V		C1914	1-126-947-11	ELECT	47uF	20%	35V	
C1450	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1915	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1451	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C1923	1-126-933-11	ELECT	100uF	20%	16V	
C1453	1-164-934-11	CERAMIC CHIP	330PF	10%	50V		< CONNECTOR >						
C1454	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		* CNP504	1-564-509-11	PLUG, CONNECTOR 6P				
C1455	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		CNP505	1-779-799-11	PIN, CONNECTOR 9P				
C1456	1-162-963-11	CERAMIC CHIP	680PF	10%	50V		* CNP512	1-564-506-11	PLUG, CONNECTOR 3P				
C1457	1-112-083-11	ELECT	100uF	20%	16V		CNS501	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P				
C1458	1-126-964-11	ELECT	10uF	20%	50V		CNS502	1-764-865-41	CONNECTOR, BOARD TO BOARD 13P				
C1459	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		CNS507	1-568-830-11	CONNECTOR, FFC 11P (AEP)				
C1460	1-112-083-11	ELECT	100uF	20%	16V								

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CNS508	1-784-770-11	CONNECTOR, FFC 9P (AUS)		IC1131	(Not supplied)	IC S-24CS16A0I-J8T1G	
CNS509	1-785-466-41	CONNECTOR, FFC/FPC 7P		IC1301	8-759-825-15	IC LC89056W-E	
CNS510	1-784-778-11	CONNECTOR, FFC 17P		IC1302	8-759-595-15	IC TC74ACT153F (EL)	
CNS512	1-820-116-41	CONNECTOR, FFC/FPC 17P		IC1303	8-759-096-87	IC TC7WU04FU (TE12R)	
		< DIODE >		IC1351	6-600-466-01	IC TORX147L (SONY)	
						(DIGITAL OPTICAL SAT IN)	
D1001	8-719-053-18	DIODE 1SR154-400TE-25		IC1352	6-600-466-01	IC TORX147L (SONY) (TV OPTICAL IN)	
D1003	8-719-049-09	DIODE 1SS367-T3SONY		IC1401	6-710-554-01	IC PCM1808PWR	
D1004	8-719-049-09	DIODE 1SS367-T3SONY		IC1404	8-759-710-97	IC NJM4565M-D	
D1106	8-719-060-48	DIODE RB751V-40TE-17		IC1405	8-759-710-97	IC NJM4565M-D	
D1107	6-501-817-01	DIODE MA2J1110GLSO		IC1406	8-759-710-97	IC NJM4565M-D	
				IC1452	6-711-875-01	IC WM8766GEDS/R	
D1108	6-501-817-01	DIODE MA2J1110GLSO		△ IC1902	8-759-231-56	IC TA7809S	
D1111	6-501-817-01	DIODE MA2J1110GLSO		△ IC1904	6-705-463-01	IC BA33BC0T	
D1112	6-501-817-01	DIODE MA2J1110GLSO				< JACK >	
D1301	6-501-817-01	DIODE MA2J1110GLSO		J1301	1-784-431-11	JACK, PIN 1P (DIGITAL COAXIAL DVD IN)	
D1501	8-719-049-09	DIODE 1SS367-T3SONY		J1302	1-817-615-21	CONNECTOR, SQUARE TYPE (RECE) (DMPORT)	
						< JUMPER RESISTOR >	
D1502	8-719-049-09	DIODE 1SS367-T3SONY		JR1003	1-211-950-11	SHORT CHIP 0	
D1503	8-719-049-09	DIODE 1SS367-T3SONY		JR1005	1-216-864-11	SHORT CHIP 0	
D1504	8-719-049-09	DIODE 1SS367-T3SONY				< TRANSISTOR >	
		< FERRITE BEAD >		Q1103	8-729-027-43	TRANSISTOR DTC114EKA-T146	
FB1053	1-469-139-21	FERRITE, EMI (SMD) (2012)		Q1104	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
FB1101	1-400-862-11	BEAD, FERRITE		Q1105	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
FB1102	1-400-862-11	BEAD, FERRITE		Q1106	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF	
FB1103	1-400-862-11	BEAD, FERRITE				< RESISTOR >	
FB1104	1-469-670-21	FERRITE, EMI (SMD) (2012)		R1010	1-216-809-11	METAL CHIP 100 5% 1/10W	
				R1011	1-216-845-11	METAL CHIP 100K 5% 1/10W	
FB1105	1-400-862-11	BEAD, FERRITE		R1012	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1106	1-400-862-11	BEAD, FERRITE		R1013	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1112	1-469-670-21	FERRITE, EMI (SMD) (2012)		R1014	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1113	1-400-862-11	BEAD, FERRITE		R1015	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1117	1-400-862-11	BEAD, FERRITE		R1016	1-216-809-11	METAL CHIP 100 5% 1/10W	
				R1017	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1302	1-400-862-11	BEAD, FERRITE		R1018	1-216-805-11	METAL CHIP 47 5% 1/10W	
FB1305	1-469-139-21	FERRITE, EMI (SMD) (2012)		R1019	1-216-864-11	SHORT CHIP 0	
FB1306	1-469-139-21	FERRITE, EMI (SMD) (2012)		R1021	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1307	1-469-139-21	FERRITE, EMI (SMD) (2012)		R1022	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1308	1-400-862-11	BEAD, FERRITE		R1023	1-216-813-11	METAL CHIP 220 5% 1/10W	
				R1025	1-216-809-11	METAL CHIP 100 5% 1/10W	
FB1309	1-400-862-11	BEAD, FERRITE		R1028	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB1310	1-400-862-11	BEAD, FERRITE		R1029	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB1311	1-400-862-11	BEAD, FERRITE		R1030	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB1350	1-400-862-11	BEAD, FERRITE		R1031	1-216-801-11	METAL CHIP 22 5% 1/10W	
FB1403	1-400-862-11	BEAD, FERRITE		R1033	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R1034	1-216-821-11	METAL CHIP 1K 5% 1/10W	
FB1405	1-400-862-11	BEAD, FERRITE		R1035	1-216-833-11	METAL CHIP 10K 5% 1/10W	
FB1452	1-400-862-11	BEAD, FERRITE		R1036	1-216-864-11	SHORT CHIP 0	
FB1453	1-400-862-11	BEAD, FERRITE		R1037	1-216-833-11	METAL CHIP 10K 5% 1/10W	
FB1503	1-469-139-21	FERRITE, EMI (SMD) (2012)		R1038	1-216-801-11	METAL CHIP 22 5% 1/10W	
		< IC >		R1039	1-216-833-11	METAL CHIP 10K 5% 1/10W	
△ IC1001	8-759-231-53	IC TA7805S		R1040	1-216-801-11	METAL CHIP 22 5% 1/10W	
△ IC1002	6-710-766-01	IC BD12KA5FP-E2		R1041	1-216-809-11	METAL CHIP 100 5% 1/10W	
IC1005	8-759-277-63	IC TC7W14FU (TE12R)		R1042	1-216-809-11	METAL CHIP 100 5% 1/10W	
IC1006	8-759-058-62	IC TC7S08FU (TE85R)		R1043	1-216-801-11	METAL CHIP 22 5% 1/10W	
IC1007	6-702-913-01	IC S-80929CNMC-G8ZT2G		R1044	1-216-833-11	METAL CHIP 10K 5% 1/10W	
IC1008	8-759-524-10	IC TC74VHC157FT (EL)					
IC1009	6-709-759-01	IC ADSST-AVR-1115					
IC1010	6-807-917-01	IC MB91353APMT-G-117E1					
IC1012	6-712-614-01	IC SI-3050KM-TLS					
△ IC1013	6-712-616-01	IC SI-3033KM-TLS					
IC1014	8-759-447-77	IC TC7WH74FU (TE12R)					
IC1016	8-759-524-48	IC TC74VHC393FT (EL)					
IC1017	8-759-680-48	IC TC7WH157FK (TE85R)					
△ IC1031	6-705-469-01	IC BA50BC0FP-E2					

Note: IC1131 cannot exchange with single. When IC1131 is damaged, exchange the entire mounted board.

STR-KG800

Ver. 1.1

DIGITAL AB

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R1046	1-216-801-11	METAL CHIP	22	5%	1/10W	R1132	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1047	1-216-801-11	METAL CHIP	22	5%	1/10W	R1133	1-216-813-11	METAL CHIP	220	5%	1/10W
R1048	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1134	1-216-809-11	METAL CHIP	100	5%	1/10W
R1049	1-216-817-11	METAL CHIP	470	5%	1/10W	R1135	1-216-809-11	METAL CHIP	100	5%	1/10W
R1050	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R1053	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1136	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1054	1-216-817-11	METAL CHIP	470	5%	1/10W	R1137	1-216-809-11	METAL CHIP	100	5%	1/10W
R1058	1-216-813-11	METAL CHIP	220	5%	1/10W	R1138	1-216-809-11	METAL CHIP	100	5%	1/10W
					(AEP)	R1139	1-216-864-11	SHORT CHIP	0		
R1059	1-216-813-11	METAL CHIP	220	5%	1/10W	R1140	1-216-809-11	METAL CHIP	100	5%	1/10W
					(AEP)	R1141	1-216-864-11	SHORT CHIP	0		
R1062	1-216-801-11	METAL CHIP	22	5%	1/10W	R1142	1-216-809-11	METAL CHIP	100	5%	1/10W
R1063	1-216-809-11	METAL CHIP	100	5%	1/10W	R1144	1-216-801-11	METAL CHIP	22	5%	1/10W
R1066	1-216-809-11	METAL CHIP	100	5%	1/10W	R1146	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1067	1-216-809-11	METAL CHIP	100	5%	1/10W	R1147	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1068	1-216-801-11	METAL CHIP	22	5%	1/10W						
R1069	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1148	1-216-803-11	METAL CHIP	33	5%	1/10W
						R1151	1-216-864-11	SHORT CHIP	0		
R1070	1-216-864-11	SHORT CHIP	0			R1155	1-216-809-11	METAL CHIP	100	5%	1/10W
R1071	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1156	1-216-864-11	SHORT CHIP	0		
R1072	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R1157	1-216-864-11	SHORT CHIP	0		
R1073	1-216-827-11	METAL CHIP	3.3K	5%	1/10W						
R1076	1-216-809-11	METAL CHIP	100	5%	1/10W	R1158	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1159	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1077	1-216-809-11	METAL CHIP	100	5%	1/10W	R1160	1-216-809-11	METAL CHIP	100	5%	1/10W
R1078	1-216-809-11	METAL CHIP	100	5%	1/10W	R1161	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1080	1-216-864-11	SHORT CHIP	0			R1162	1-216-809-11	METAL CHIP	100	5%	1/10W
R1083	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R1084	1-216-864-11	SHORT CHIP	0			R1163	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R1164	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1088	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1167	1-216-809-11	METAL CHIP	100	5%	1/10W
R1094	1-216-833-11	METAL CHIP	10K	5%	1/10W						
					(AEP)	R1168	1-216-809-11	METAL CHIP	100	5%	1/10W
R1095	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1174	1-216-809-11	METAL CHIP	100	5%	1/10W
					(AEP)						
R1097	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1175	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1100	1-216-864-11	SHORT CHIP	0			R1179	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1180	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1101	1-216-864-11	SHORT CHIP	0			R1181	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1102	1-216-864-11	SHORT CHIP	0			R1182	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1103	1-216-864-11	SHORT CHIP	0								
R1104	1-216-864-11	SHORT CHIP	0			R1186	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1187	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R1191	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1106	1-216-809-11	METAL CHIP	100	5%	1/10W	R1192	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1107	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1193	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1109	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R1111	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1194	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1112	1-216-809-11	METAL CHIP	100	5%	1/10W						
											(AEP)
R1115	1-216-809-11	METAL CHIP	100	5%	1/10W	R1196	1-216-809-11	METAL CHIP	100	5%	1/10W
R1116	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1197	1-216-809-11	METAL CHIP	100	5%	1/10W
R1117	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1199	1-216-809-11	METAL CHIP	100	5%	1/10W
R1118	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1119	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1200	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1202	1-216-809-11	METAL CHIP	100	5%	1/10W
R1120	1-216-864-11	SHORT CHIP	0			R1253	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1122	1-216-809-11	METAL CHIP	100	5%	1/10W	R1260	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1123	1-216-809-11	METAL CHIP	100	5%	1/10W	R1261	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1124	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1125	1-216-809-11	METAL CHIP	100	5%	1/10W	R1301	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
						R1302	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1126	1-216-809-11	METAL CHIP	100	5%	1/10W	R1303	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1127	1-216-809-11	METAL CHIP	100	5%	1/10W	R1304	1-216-809-11	METAL CHIP	100	5%	1/10W
R1128	1-216-809-11	METAL CHIP	100	5%	1/10W	R1305	1-216-817-11	METAL CHIP	470	5%	1/10W
R1129	1-216-809-11	METAL CHIP	100	5%	1/10W						
R1130	1-216-809-11	METAL CHIP	100	5%	1/10W	R1306	1-216-801-11	METAL CHIP	22	5%	1/10W
						R1307	1-216-809-11	METAL CHIP	100	5%	1/10W
R1131	1-216-809-11	METAL CHIP	100	5%	1/10W	R1308	1-216-809-11	METAL CHIP	100	5%	1/10W
						R1310	1-216-857-11	METAL CHIP	1M	5%	1/10W

DIGITAL AB

DISPLAY

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R1311	1-216-809-11	METAL CHIP	100	5%	1/10W	R1513	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1313	1-216-809-11	METAL CHIP	100	5%	1/10W	R1514	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1314	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1515	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1318	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1530	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1319	1-216-817-11	METAL CHIP	470	5%	1/10W	R1556	1-216-815-11	METAL CHIP	330	5%	1/10W
R1321	1-216-864-11	SHORT CHIP	0			R1635	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1323	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1636	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1324	1-216-809-11	METAL CHIP	100	5%	1/10W	R1643	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1325	1-216-820-11	METAL CHIP	820	5%	1/10W	R1644	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1326	1-216-809-11	METAL CHIP	100	5%	1/10W	R1645	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1327	1-216-809-11	METAL CHIP	100	5%	1/10W	R1647	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1350	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1648	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1351	1-216-809-11	METAL CHIP	100	5%	1/10W	R1806	1-216-809-11	METAL CHIP	100	5%	1/10W
R1352	1-216-864-11	SHORT CHIP	0			R1940	1-216-864-11	SHORT CHIP	0		
R1353	1-216-864-11	SHORT CHIP	0			R1949	1-216-841-11	METAL CHIP	47K	5%	1/10W
R1354	1-216-809-11	METAL CHIP	100	5%	1/10W	R1964	1-216-864-11	SHORT CHIP	0		
R1355	1-218-285-11	METAL CHIP	75	5%	1/10W			< VIBRATOR >			
R1356	1-216-817-11	METAL CHIP	470	5%	1/10W						
R1357	1-216-841-11	METAL CHIP	47K	5%	1/10W	X1101	1-781-893-21	VIBRATOR, CERAMIC (CHIP TYPE) (12.5MHz)			
R1358	1-216-853-11	METAL CHIP	470K	5%	1/10W	X1301	1-795-126-21	VIBRATOR, CRYSTAL (12.288MHz)			
R1359	1-216-809-11	METAL CHIP	100	5%	1/10W	X1302	1-795-807-11	VIBRATOR, CRYSTAL (25MHz)			

R1360	1-216-813-11	METAL CHIP	220	5%	1/10W						
R1362	1-216-855-11	METAL CHIP	680K	5%	1/10W		A-1433-583-A	DISPLAY BOARD, COMPLETE			
R1366	1-216-809-11	METAL CHIP	100	5%	1/10W			*****			
R1367	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R1368	1-216-864-11	SHORT CHIP	0					< CAPACITOR >			
R1401	1-216-809-11	METAL CHIP	100	5%	1/10W	C110	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R1414	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C111	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R1416	1-216-821-11	METAL CHIP	1K	5%	1/10W	C112	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R1424	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	C114	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R1425	1-216-864-11	SHORT CHIP	0			C115	1-126-964-11	ELECT	10uF	20%	50V
R1426	1-216-821-11	METAL CHIP	1K	5%	1/10W	C144	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R1427	1-216-864-11	SHORT CHIP	0			C145	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R1434	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C147	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R1435	1-216-864-11	SHORT CHIP	0			C148	1-126-964-11	ELECT	10uF	20%	50V
R1436	1-216-821-11	METAL CHIP	1K	5%	1/10W	C149	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R1447	1-216-821-11	METAL CHIP	1K	5%	1/10W	C160	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R1454	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	C162	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R1455	1-216-864-11	SHORT CHIP	0			C164	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R1456	1-216-821-11	METAL CHIP	1K	5%	1/10W	C165	1-126-964-11	ELECT	10uF	20%	50V
R1463	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W			< CONNECTOR >			
R1464	1-216-864-11	SHORT CHIP	0								
R1466	1-216-821-11	METAL CHIP	1K	5%	1/10W	* CN104	1-691-746-11	CONNECTOR, BOARD TO BOARD 5P			
R1468	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	* CNP106	1-564-517-11	PLUG, CONNECTOR 2P			
R1473	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	CNS110	1-784-778-11	CONNECTOR, FFC 17P			
R1474	1-216-833-11	METAL CHIP	10K	5%	1/10W			< FLUORESCENT INDICATOR TUBE >			
R1476	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R1485	1-216-864-11	SHORT CHIP	0			FL101	1-519-927-11	VACUUM FLOURESCENT DISPLAY			
R1486	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R1493	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W			< IC >			
R1494	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W						
R1495	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	IC100	6-701-729-01	IC PT6315			
R1496	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	IC101	8-759-157-94	IC TC74ACT08F (EL)			
R1497	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	IC103	6-600-349-31	IC NJL24H400A			
R1498	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W			< RESISTOR >			
R1508	1-216-864-11	SHORT CHIP	0								
						R101	1-216-813-11	METAL CHIP	220	5%	1/10W
R1509	1-216-864-11	SHORT CHIP	0			R102	1-216-815-11	METAL CHIP	330	5%	1/10W
R1510	1-216-833-11	METAL CHIP	10K	5%	1/10W	R103	1-216-817-11	METAL CHIP	470	5%	1/10W
R1511	1-216-838-11	METAL CHIP	27K	5%	1/10W	R104	1-216-819-11	METAL CHIP	680	5%	1/10W
R1512	1-216-813-11	METAL CHIP	220	5%	1/10W	R105	1-216-821-11	METAL CHIP	1K	5%	1/10W

STR-KG800

DISPLAY HDMI

Ref. No.	Part No.	Description	Remark		
R106	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R107	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R108	1-216-813-11	METAL CHIP	220	5%	1/10W
R109	1-216-815-11	METAL CHIP	330	5%	1/10W
R110	1-216-817-11	METAL CHIP	470	5%	1/10W
R115	1-216-809-11	METAL CHIP	100	5%	1/10W
R116	1-216-809-11	METAL CHIP	100	5%	1/10W
R117	1-216-809-11	METAL CHIP	100	5%	1/10W
R118	1-216-844-11	METAL CHIP	82K	5%	1/10W
R119	1-216-809-11	METAL CHIP	100	5%	1/10W
△ R120	1-249-393-91	CARBON	10	5%	1/4W F
R180	1-216-864-11	SHORT CHIP	0		
R181	1-216-864-11	SHORT CHIP	0		
R182	1-216-864-11	SHORT CHIP	0		
△ R197	1-249-384-91	CARBON	1.8	5%	1/4W F
△ R198	1-249-384-91	CARBON	1.8	5%	1/4W F
< ROTARY ENCODER >					
RV101	1-418-817-31	ENCODER, ROTARY (INPUT SELECTOR)			
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)			
< SWITCH >					
S101	1-771-410-21	SWITCH, TACTILE (MUTING)			
S102	1-771-410-21	SWITCH, TACTILE (AUTO CAL)			
S103	1-771-410-21	SWITCH, TACTILE (INPUT MODE)			
S104	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
S105	1-771-410-21	SWITCH, TACTILE (MUSIC)			
S106	1-771-410-21	SWITCH, TACTILE (MOVIE)			
S107	1-771-410-21	SWITCH, TACTILE (A.F.D.)			
S108	1-771-410-21	SWITCH, TACTILE (2CH)			
S109	1-771-410-21	SWITCH, TACTILE (TUNING +)			
S110	1-771-410-21	SWITCH, TACTILE (TUNING -)			
S111	1-771-410-21	SWITCH, TACTILE (TUNING MODE)			
S112	1-771-410-21	SWITCH, TACTILE (MEMORY/ENTER)			

㊦	A-1438-372-A	HDMI BOARD, COMPLETE (for SERVICE) *****			
< CAPACITOR >					
C3501	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3502	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3503	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3504	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3505	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3507	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3508	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3509	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3510	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3511	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3512	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3513	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3514	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3516	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3517	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3518	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3519	1-126-210-21	ELECT CHIP	220uF	20%	4V
C3520	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3521	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

Ref. No.	Part No.	Description	Remark		
C3522	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3523	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3524	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3525	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3526	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3527	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3529	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3530	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3531	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3533	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3534	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3535	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3536	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3537	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3538	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C3539	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3540	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C3541	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3542	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3543	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3544	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3545	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3547	1-100-053-21	ELECT CHIP	220uF	20%	6.3V
C3548	1-126-210-21	ELECT CHIP	220uF	20%	4V
C3549	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3550	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3551	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3552	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3553	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3555	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3556	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3557	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3558	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3561	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3562	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3563	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3564	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3566	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3567	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3568	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3569	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3570	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3571	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C3572	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C3573	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C3574	1-126-210-21	ELECT CHIP	220uF	20%	4V
C3575	1-100-053-21	ELECT CHIP	220uF	20%	6.3V
C3576	1-165-667-21	ELECT CHIP	100uF	20%	6.3V
C3579	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3580	1-165-667-21	ELECT CHIP	100uF	20%	6.3V
C3584	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C3585	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3586	1-128-995-21	ELECT CHIP	100uF	20%	10V
C3590	1-128-934-11	CERAMIC CHIP	0.33uF	20%	10V
C3591	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3593	1-128-994-21	ELECT CHIP	47uF	20%	10V
C3594	1-128-994-21	ELECT CHIP	47uF	20%	10V
C3596	1-128-994-21	ELECT CHIP	47uF	20%	10V
C3597	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3615	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark	
C3616	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		IC3519	6-807-915-01	IC M30620FCPGP-RSX01					
							IC3521	8-759-596-39	IC SN74LV4052APWR					
C3617	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V									
C3618	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		△ IC3526	6-707-744-01	IC SI-3033KM-TL					
C3619	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		△ IC3527	6-707-744-01	IC SI-3033KM-TL					
C3620	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		IC3528	8-759-832-05	IC BA18BC0FP-E2					
C3621	1-112-791-11	ELECT CHIP	100uF	20%	16V									
										< TRANSISTOR >				
C3625	1-126-205-11	ELECT CHIP	47uF	20%	6.3V									
C3627	1-126-205-11	ELECT CHIP	47uF	20%	6.3V		Q3504	6-550-014-01	FET	SSM6N15FU (TE85R)				
C3630	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		Q3505	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF				
C3631	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		Q3506	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF				
C3632	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		Q3507	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF				
										< RESISTOR >				
C3633	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V									
C3634	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V									
C3635	1-126-205-11	ELECT CHIP	47uF	20%	6.3V		R3500	1-216-833-11	METAL CHIP	10K	5%	1/10W		
C3643	1-126-205-11	ELECT CHIP	47uF	20%	6.3V		R3502	1-216-864-11	SHORT CHIP	0				
C3644	1-126-205-11	ELECT CHIP	47uF	20%	6.3V		R3504	1-216-864-11	SHORT CHIP	0				
							R3506	1-216-864-11	SHORT CHIP	0				
		< CONNECTOR >					R3509	1-216-805-11	METAL CHIP	47	5%	1/10W		
CN3501	1-820-735-11	HDMI CONNECTOR (HDMI SAT IN)					R3511	1-216-841-11	METAL CHIP	47K	5%	1/10W		
CN3502	1-820-735-11	HDMI CONNECTOR (HDMI DVD IN)					R3512	1-216-805-11	METAL CHIP	47	5%	1/10W		
CN3503	1-820-735-11	HDMI CONNECTOR (HDMI BD IN)					R3513	1-216-841-11	METAL CHIP	47K	5%	1/10W		
CN3504	1-820-735-11	HDMI CONNECTOR (HDMI OUT)					R3514	1-216-841-11	METAL CHIP	47K	5%	1/10W		
CN3509	1-779-993-11	PIN, CONNECTOR (PWB) 5P					R3519	1-216-864-11	SHORT CHIP	0				
CN3510	1-784-859-51	CONNECTOR, FFC (LIF (NON-ZIF)) 7P					R3521	1-216-833-11	METAL CHIP	10K	5%	1/10W		
CN3511	1-820-116-41	CONNECTOR, FFC/FPC 17P					R3524	1-216-833-11	METAL CHIP	10K	5%	1/10W		
							R3525	1-218-844-11	METAL CHIP	750	0.5%	1/10W		
		< DIODE >					R3526	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W		
							R3527	1-216-833-11	METAL CHIP	10K	5%	1/10W		
D3501	6-501-817-01	DIODE MA2J1110GLSO												
D3502	6-501-817-01	DIODE MA2J1110GLSO					R3528	1-216-833-11	METAL CHIP	10K	5%	1/10W		
D3511	6-501-817-01	DIODE MA2J1110GLSO					R3532	1-216-833-11	METAL CHIP	10K	5%	1/10W		
D3512	6-501-817-01	DIODE MA2J1110GLSO					R3533	1-216-833-11	METAL CHIP	10K	5%	1/10W		
D3513	6-501-817-01	DIODE MA2J1110GLSO					R3534	1-216-833-11	METAL CHIP	10K	5%	1/10W		
							R3535	1-216-864-11	SHORT CHIP	0				
		< EARTH TERMINAL >												
							R3536	1-216-864-11	SHORT CHIP	0				
ET3503	1-780-318-11	TERMINAL					R3541	1-216-833-11	METAL CHIP	10K	5%	1/10W		
							R3542	1-216-864-11	SHORT CHIP	0				
		< FERRITE BEAD >					R3544	1-216-805-11	METAL CHIP	47	5%	1/10W		
							R3545	1-216-805-11	METAL CHIP	47	5%	1/10W		
FB3501	1-414-234-22	INDUCTOR, FERRITE BEAD												
FB3502	1-414-234-22	INDUCTOR, FERRITE BEAD					R3546	1-216-857-11	METAL CHIP	1M	5%	1/10W		
FB3503	1-414-234-22	INDUCTOR, FERRITE BEAD					R3548	1-216-803-11	METAL CHIP	33	5%	1/10W		
FB3504	1-414-234-22	INDUCTOR, FERRITE BEAD					R3549	1-216-809-11	METAL CHIP	100	5%	1/10W		
FB3505	1-414-234-22	INDUCTOR, FERRITE BEAD					R3550	1-216-809-11	METAL CHIP	100	5%	1/10W		
							R3551	1-216-809-11	METAL CHIP	100	5%	1/10W		
FB3506	1-414-234-22	INDUCTOR, FERRITE BEAD												
FB3508	1-414-234-22	INDUCTOR, FERRITE BEAD					R3552	1-216-809-11	METAL CHIP	100	5%	1/10W		
FB3509	1-469-152-11	FERRITE, EMI (SMD) (2012)					R3554	1-216-809-11	METAL CHIP	100	5%	1/10W		
FB3510	1-414-234-22	INDUCTOR, FERRITE BEAD					R3556	1-216-809-11	METAL CHIP	100	5%	1/10W		
FB3511	1-414-234-22	INDUCTOR, FERRITE BEAD					R3557	1-216-805-11	METAL CHIP	47	5%	1/10W		
							R3558	1-216-864-11	SHORT CHIP	0				
FB3512	1-414-234-22	INDUCTOR, FERRITE BEAD												
FB3513	1-414-234-22	INDUCTOR, FERRITE BEAD					R3562	1-216-864-11	SHORT CHIP	0				
FB3514	1-414-234-22	INDUCTOR, FERRITE BEAD					R3563	1-216-809-11	METAL CHIP	100	5%	1/10W		
							R3564	1-218-285-11	METAL CHIP	75	5%	1/10W		
		< IC >					R3565	1-216-805-11	METAL CHIP	47	5%	1/10W		
							R3566	1-218-285-11	METAL CHIP	75	5%	1/10W		
IC3501	8-759-389-26	IC 74LCX08MTCX												
IC3503	6-710-819-01	IC TMDS341APFCR												
IC3504	8-759-596-39	IC SN74LV4052APWR					R3567	1-218-285-11	METAL CHIP	75	5%	1/10W		
IC3507	6-708-758-01	IC PCA9517DP.118					R3570	1-216-809-11	METAL CHIP	100	5%	1/10W		
IC3509	6-704-001-01	IC BR24L02F-WSE2					R3576	1-216-805-11	METAL CHIP	47	5%	1/10W		
							R3577	1-216-805-11	METAL CHIP	47	5%	1/10W		
							R3578	1-216-809-11	METAL CHIP	100	5%	1/10W		
IC3511	(Not supplied)	IC SII9011CLU												
IC3513	(Not supplied)	IC SII9030CTU-7					R3579	1-216-833-11	METAL CHIP	10K	5%	1/10W		
IC3516	6-705-337-01	IC TK11150CSCL-G					R3580	1-218-839-11	METAL CHIP	470	0.5%	1/10W		

Note: IC3511 and IC3513 cannot exchange with single. When IC3511 and IC3513 are damaged, exchange the entire mounted board.

STR-KG800

- HDMI
- HEADPHONE
- MAIN

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
R3581	1-216-833-11	METAL CHIP	10K	5%	1/10W		R3744	1-216-805-11	METAL CHIP	47	5%	1/10W	
R3582	1-216-793-11	METAL CHIP	4.7	5%	1/10W		R3745	1-216-805-11	METAL CHIP	47	5%	1/10W	
R3583	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R3747	1-216-864-11	SHORT CHIP	0			
R3584	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R3748	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R3585	1-216-864-11	SHORT CHIP	0				R3749	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R3586	1-216-864-11	SHORT CHIP	0				R3750	1-216-805-11	METAL CHIP	47	5%	1/10W	
R3587	1-216-864-11	SHORT CHIP	0				R3775	1-216-797-11	METAL CHIP	10	5%	1/10W	
R3588	1-216-864-11	SHORT CHIP	0				R3776	1-216-797-11	METAL CHIP	10	5%	1/10W	
R3589	1-216-864-11	SHORT CHIP	0				R3779	1-216-805-11	METAL CHIP	47	5%	1/10W	
R3590	1-216-864-11	SHORT CHIP	0				R3780	1-216-805-11	METAL CHIP	47	5%	1/10W	
R3591	1-216-864-11	SHORT CHIP	0				R3784	1-216-864-11	SHORT CHIP	0			
R3592	1-216-864-11	SHORT CHIP	0				R3788	1-216-864-11	SHORT CHIP	0			
R3593	1-216-833-11	METAL CHIP	10K	5%	1/10W		R3790	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R3594	1-216-833-11	METAL CHIP	10K	5%	1/10W		R3791	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R3595	1-216-833-11	METAL CHIP	10K	5%	1/10W		R3793	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R3597	1-216-864-11	SHORT CHIP	0				R3796	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R3598	1-216-864-11	SHORT CHIP	0				R3797	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R3599	1-216-824-11	METAL CHIP	1.8K	5%	1/10W		R3798	1-216-864-11	SHORT CHIP	0			
R3600	1-216-824-11	METAL CHIP	1.8K	5%	1/10W		R3799	1-216-805-11	METAL CHIP	47	5%	1/10W	
R3601	1-216-833-11	METAL CHIP	10K	5%	1/10W		< COMPOSITION CIRCUIT BLOCK >						
R3602	1-216-833-11	METAL CHIP	10K	5%	1/10W		RB3501	1-234-723-11	RES, NETWORK 75 (1005X4)				
R3603	1-216-833-11	METAL CHIP	10K	5%	1/10W		RB3502	1-234-723-11	RES, NETWORK 75 (1005X4)				
R3604	1-216-833-11	METAL CHIP	10K	5%	1/10W		RB3503	1-234-723-11	RES, NETWORK 75 (1005X4)				
R3605	1-216-833-11	METAL CHIP	10K	5%	1/10W		RB3504	1-234-723-11	RES, NETWORK 75 (1005X4)				
R3608	1-216-805-11	METAL CHIP	47	5%	1/10W		RB3505	1-234-723-11	RES, NETWORK 75 (1005X4)				
R3609	1-216-805-11	METAL CHIP	47	5%	1/10W		RB3506	1-234-723-11	RES, NETWORK 75 (1005X4)				
R3610	1-216-805-11	METAL CHIP	47	5%	1/10W		< VIBRATOR >						
R3611	1-216-805-11	METAL CHIP	47	5%	1/10W		X3501	1-813-570-21	VIBRATOR, CRYSTAL (28.322MHz)				
R3612	1-216-805-11	METAL CHIP	47	5%	1/10W		X3502	1-795-244-11	VIBRATOR, CERAMIC (10MHz)				
R3613	1-216-805-11	METAL CHIP	47	5%	1/10W		*****						
R3614	1-216-805-11	METAL CHIP	47	5%	1/10W		HEADPHONE BOARD						
R3615	1-216-805-11	METAL CHIP	47	5%	1/10W		*****						
R3616	1-216-805-11	METAL CHIP	47	5%	1/10W		< CAPACITOR >						
R3621	1-216-805-11	METAL CHIP	47	5%	1/10W		C791	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	
R3622	1-216-805-11	METAL CHIP	47	5%	1/10W		< CONNECTOR >						
R3623	1-216-805-11	METAL CHIP	47	5%	1/10W		* CNP790	1-564-507-11	PLUG, CONNECTOR 4P				
R3624	1-216-801-11	METAL CHIP	22	5%	1/10W		< JACK >						
R3625	1-216-801-11	METAL CHIP	22	5%	1/10W		J790	1-815-314-21	JACK (PHONES)				
R3633	1-216-864-11	SHORT CHIP	0				< LEAD >						
R3634	1-216-833-11	METAL CHIP	10K	5%	1/10W		* TP790	1-690-880-31	LEAD (WITH CONNECTOR)				
R3639	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		*****						
R3642	1-216-841-11	METAL CHIP	47K	5%	1/10W		A-1433-568-A	MAIN BOARD, COMPLETE					
R3645	1-216-809-11	METAL CHIP	100	5%	1/10W		*****						
R3652	1-216-824-11	METAL CHIP	1.8K	5%	1/10W		7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3					
R3653	1-216-824-11	METAL CHIP	1.8K	5%	1/10W		< CAPACITOR >						
R3654	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		C320	1-126-923-91	ELECT	220uF	20%	10V	
R3655	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		C325	1-126-964-11	ELECT	10uF	20%	50V	
R3660	1-216-864-11	SHORT CHIP	0				C335	1-126-947-11	ELECT	47uF	20%	35V	
R3661	1-216-821-11	METAL CHIP	1K	5%	1/10W		C350	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V	
R3662	1-216-821-11	METAL CHIP	1K	5%	1/10W		C351	1-126-933-11	ELECT	100uF	20%	16V	
R3663	1-216-821-11	METAL CHIP	1K	5%	1/10W								
R3676	1-216-809-11	METAL CHIP	100	5%	1/10W								
R3700	1-216-833-11	METAL CHIP	10K	5%	1/10W								
R3711	1-216-829-11	METAL CHIP	4.7K	5%	1/10W								
R3712	1-216-837-11	METAL CHIP	22K	5%	1/10W								
R3713	1-216-837-11	METAL CHIP	22K	5%	1/10W								
R3714	1-216-829-11	METAL CHIP	4.7K	5%	1/10W								
R3715	1-216-829-11	METAL CHIP	4.7K	5%	1/10W								
R3716	1-216-837-11	METAL CHIP	22K	5%	1/10W								
R3741	1-216-817-11	METAL CHIP	470	5%	1/10W								

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
C352	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V	C761	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C353	1-126-933-11	ELECT	100uF	20%	16V	C770	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C400	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C771	1-126-964-11	ELECT	10uF	20%	50V
C403	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C775	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C405	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C779	1-136-157-00	FILM	0.022uF	5%	50V
C408	1-126-963-11	ELECT	4.7uF	20%	50V	C801	1-126-964-11	ELECT	10uF	20%	50V
C409	1-126-963-11	ELECT	4.7uF	20%	50V	C802	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C430	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	C803	1-102-233-00	CERAMIC	33PF	10%	500V
C431	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	C804	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C449	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C805	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C450	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C806	1-126-923-91	ELECT	220uF	20%	10V
C458	1-126-963-11	ELECT	4.7uF	20%	50V	C807	1-126-947-11	ELECT	47uF	20%	35V
C459	1-126-963-11	ELECT	4.7uF	20%	50V	C808	1-162-815-11	CERAMIC	47PF	5%	500V
C471	1-126-963-11	ELECT	4.7uF	20%	50V	C809	1-162-815-11	CERAMIC	47PF	5%	500V
C487	1-112-089-11	ELECT	47uF	20%	25V	C811	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C488	1-112-089-11	ELECT	47uF	20%	25V	C820	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C489	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C821	1-126-964-11	ELECT	10uF	20%	50V
C499	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C829	1-136-157-00	FILM	0.022uF	5%	50V
C500	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C844	1-126-964-11	ELECT	10uF	20%	50V
C545	1-128-582-11	ELECT	10uF	20%	100V	C851	1-126-964-11	ELECT	10uF	20%	50V
C546	1-128-582-11	ELECT	10uF	20%	100V	C852	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C644	1-126-964-11	ELECT	10uF	20%	50V	C853	1-102-233-00	CERAMIC	33PF	10%	500V
C651	1-126-964-11	ELECT	10uF	20%	50V	C854	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C652	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C855	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C653	1-102-233-00	CERAMIC	33PF	10%	500V	C856	1-126-923-91	ELECT	220uF	20%	10V
C654	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C857	1-126-947-11	ELECT	47uF	20%	35V
C655	1-107-583-11	CERAMIC	3PF	0.25PF	500V	C858	1-162-815-11	CERAMIC	47PF	5%	500V
C656	1-126-923-91	ELECT	220uF	20%	10V	C859	1-162-815-11	CERAMIC	47PF	5%	500V
C657	1-126-947-11	ELECT	47uF	20%	35V	C861	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C658	1-162-815-11	CERAMIC	47PF	5%	500V	C870	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C659	1-162-815-11	CERAMIC	47PF	5%	500V	C871	1-126-964-11	ELECT	10uF	20%	50V
C661	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	C879	1-136-157-00	FILM	0.022uF	5%	50V
C670	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C900	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C671	1-126-964-11	ELECT	10uF	20%	50V	C904	1-126-936-11	ELECT	3300uF	20%	16V
C675	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C920	1-135-851-21	MYLAR	0.22uF		100V
C679	1-136-157-00	FILM	0.022uF	5%	50V	C921	1-135-851-21	MYLAR	0.22uF		100V
C701	1-126-964-11	ELECT	10uF	20%	50V	C922	1-165-946-11	ELECT (BLOCK)	6800uF	20%	71V
C702	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C923	1-165-946-11	ELECT (BLOCK)	6800uF	20%	71V
C703	1-102-233-00	CERAMIC	33PF	10%	500V	C930	1-119-772-91	ELECT	47uF	20%	35V
C704	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C931	1-126-947-11	ELECT	47uF	20%	35V
C705	1-107-583-11	CERAMIC	3PF	0.25PF	500V	C932	1-126-947-11	ELECT	47uF	20%	35V
C706	1-126-923-91	ELECT	220uF	20%	10V	C933	1-100-623-91	CERAMIC CHIP	0.1uF	10%	100V
C707	1-126-947-11	ELECT	47uF	20%	35V	C940	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V
C708	1-162-815-11	CERAMIC	47PF	5%	500V	C941	1-137-980-91	CERAMIC CHIP	0.47uF	10%	50V
C709	1-162-815-11	CERAMIC	47PF	5%	500V	C3022	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C711	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	C3024	1-126-963-11	ELECT	4.7uF	20%	50V
C720	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3025	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C721	1-126-964-11	ELECT	10uF	20%	50V	C3026	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C725	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C3027	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C729	1-136-157-00	FILM	0.022uF	5%	50V	C3032	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C744	1-126-964-11	ELECT	10uF	20%	50V	C3034	1-126-963-11	ELECT	4.7uF	20%	50V
C751	1-126-964-11	ELECT	10uF	20%	50V	C3037	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C752	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	CC01	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C753	1-102-233-00	CERAMIC	33PF	10%	500V	CC02	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C754	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	CC03	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C755	1-107-583-11	CERAMIC	3PF	0.25PF	500V	CC04	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C756	1-126-923-91	ELECT	220uF	20%	10V	CC05	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C757	1-126-947-11	ELECT	47uF	20%	35V	CC08	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C758	1-162-815-11	CERAMIC	47PF	5%	500V	CC09	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C759	1-162-815-11	CERAMIC	47PF	5%	500V	CC11	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

MAIN

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark	
CC12	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			< IC >			
CC15	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
CC16	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
CC17	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
CC51	1-162-927-11	CERAMIC CHIP	100PF	5%	50V						
CC52	1-162-927-11	CERAMIC CHIP	100PF	5%	50V						
CC53	1-162-927-11	CERAMIC CHIP	100PF	5%	50V						
CC54	1-162-927-11	CERAMIC CHIP	100PF	5%	50V						
CC55	1-162-927-11	CERAMIC CHIP	100PF	5%	50V						
CC58	1-162-927-11	CERAMIC CHIP	100PF	5%	50V						
CC59	1-162-927-11	CERAMIC CHIP	100PF	5%	50V			< JACK >			
		< CONNECTOR >									
CNP410	1-573-845-11	CONNECTOR, BOARD TO BOARD 13P					J401	1-774-411-11	JACK, PIN 6P (SA-CD/CD/CD-R IN/OUT, TV IN)		
CNP411	1-573-847-11	CONNECTOR, BOARD TO BOARD 15P					J403	1-794-981-11	JACK, PIN 4P (SAT/DVD AUDIO IN)		
CNP430	1-779-978-11	PIN, CONNECTOR 3P					J404	1-794-981-11	JACK, PIN 4P (VIDEO 1 AUDIO IN/OUT)		
* CNP500	1-564-506-11	PLUG, CONNECTOR 3P					J405	1-774-785-11	JACK, PIN 1P (SUB WOOFER AUDIO OUT)		
* CNP912	1-564-510-11	PLUG, CONNECTOR 7P						< JUMPER RESISTOR >			
* CNP921	1-564-687-11	PIN, CONNECTOR (3.96mm PITCH) 3P					JR320	1-216-864-11	SHORT CHIP	0	
* CNP930	1-564-506-11	PLUG, CONNECTOR 3P					JR321	1-216-864-11	SHORT CHIP	0	
* CNP940	1-564-509-11	PLUG, CONNECTOR 6P					JR322	1-216-864-11	SHORT CHIP	0	
		< DIODE >					JR340	1-216-864-11	SHORT CHIP	0	
D301	6-501-817-01	DIODE MA2J1110GLS0					JR406	1-216-864-11	SHORT CHIP	0	
D320	6-501-817-01	DIODE MA2J1110GLS0									
D325	6-501-817-01	DIODE MA2J1110GLS0					JR434	1-216-864-11	SHORT CHIP	0	
D326	6-501-817-01	DIODE MA2J1110GLS0					JR435	1-216-864-11	SHORT CHIP	0	
D327	6-501-817-01	DIODE MA2J1110GLS0					JR605	1-216-864-11	SHORT CHIP	0	
D335	6-501-712-01	DIODE MAZ8030G0LS0					JR606	1-216-864-11	SHORT CHIP	0	
D350	6-501-817-01	DIODE MA2J1110GLS0					JR607	1-216-864-11	SHORT CHIP	0	
D352	8-719-053-18	DIODE 1SR154-400TE-25									
D355	6-501-817-01	DIODE MA2J1110GLS0					JR702	1-216-864-11	SHORT CHIP	0	
D360	6-501-817-01	DIODE MA2J1110GLS0						< COIL >			
D375	6-501-817-01	DIODE MA2J1110GLS0					L678	1-420-872-52	COIL, AIR-CORE		
D500	6-501-787-01	DIODE MAZ8220GMLS0					L728	1-420-872-52	COIL, AIR-CORE		
D501	6-501-817-01	DIODE MA2J1110GLS0					L778	1-420-872-52	COIL, AIR-CORE		
D661	6-501-817-01	DIODE MA2J1110GLS0					L828	1-420-872-52	COIL, AIR-CORE		
D670	6-501-817-01	DIODE MA2J1110GLS0					L878	1-420-872-52	COIL, AIR-CORE		
D675	6-501-817-01	DIODE MA2J1110GLS0						< TRANSISTOR >			
D711	6-501-817-01	DIODE MA2J1110GLS0					Q301	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D720	6-501-817-01	DIODE MA2J1110GLS0					Q320	8-729-216-31	TRANSISTOR	2SA1163-G	
D725	6-501-817-01	DIODE MA2J1110GLS0					Q321	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D761	6-501-817-01	DIODE MA2J1110GLS0					Q325	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D770	6-501-817-01	DIODE MA2J1110GLS0					Q350	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D775	6-501-817-01	DIODE MA2J1110GLS0					Q355	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D811	6-501-817-01	DIODE MA2J1110GLS0					Q360	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D820	6-501-817-01	DIODE MA2J1110GLS0					Q375	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
D861	6-501-817-01	DIODE MA2J1110GLS0					Q500	8-729-281-53	TRANSISTOR	2SC1815-GR	
D870	6-501-817-01	DIODE MA2J1110GLS0					Q501	8-729-027-31	TRANSISTOR	DTA124EKA-T146	
△ D921	8-719-081-52	DIODE D5SBA20-4003					Q651	8-729-119-76	TRANSISTOR	2SA1175-HFE	
△ D930	6-500-295-01	DIODE PTZ-TE25-5.6B					Q652	8-729-141-30	TRANSISTOR	2SC3623A-LK	
△ D931	6-501-785-01	DIODE MAZ8200GMLS0					Q661	8-729-216-31	TRANSISTOR	2SA1163-G	
△ D940	8-719-053-18	DIODE 1SR154-400TE-25					Q662	8-729-216-31	TRANSISTOR	2SA1163-G	
△ D941	8-719-053-18	DIODE 1SR154-400TE-25					Q670	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
△ D942	8-719-053-18	DIODE 1SR154-400TE-25					Q701	8-729-119-76	TRANSISTOR	2SA1175-HFE	
△ D943	8-719-053-18	DIODE 1SR154-400TE-25					Q702	8-729-141-30	TRANSISTOR	2SC3623A-LK	
		< EARTH TERMINAL >					Q711	8-729-216-31	TRANSISTOR	2SA1163-G	
ET902	1-537-738-21	TERMINAL, GROUND					Q712	8-729-216-31	TRANSISTOR	2SA1163-G	
							Q720	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	
							Q751	8-729-119-76	TRANSISTOR	2SA1175-HFE	
							Q752	8-729-141-30	TRANSISTOR	2SC3623A-LK	

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
Q761	8-729-216-31	TRANSISTOR	2SA1163-G				R454	1-216-821-11	METAL CHIP	1K	5%	1/10W	
Q762	8-729-216-31	TRANSISTOR	2SA1163-G										
Q770	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF				R455	1-216-821-11	METAL CHIP	1K	5%	1/10W	
							R458	1-216-821-11	METAL CHIP	1K	5%	1/10W	
Q801	8-729-119-76	TRANSISTOR	2SA1175-HFE				R459	1-216-821-11	METAL CHIP	1K	5%	1/10W	
Q802	8-729-141-30	TRANSISTOR	2SC3623A-LK				R466	1-216-821-11	METAL CHIP	1K	5%	1/10W	
Q811	8-729-216-31	TRANSISTOR	2SA1163-G				R467	1-216-845-11	METAL CHIP	100K	5%	1/10W	
Q812	8-729-216-31	TRANSISTOR	2SA1163-G										
Q820	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF				R470	1-216-841-11	METAL CHIP	47K	5%	1/10W	
							△ R487	1-249-385-91	CARBON	2.2	5%	1/4W	F
Q851	8-729-119-76	TRANSISTOR	2SA1175-HFE				△ R488	1-249-385-91	CARBON	2.2	5%	1/4W	F
Q852	8-729-141-30	TRANSISTOR	2SC3623A-LK				R501	1-216-837-11	METAL CHIP	22K	5%	1/10W	
Q861	8-729-216-31	TRANSISTOR	2SA1163-G				R502	1-216-853-11	METAL CHIP	470K	5%	1/10W	
Q862	8-729-216-31	TRANSISTOR	2SA1163-G										
Q870	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF				R503	1-216-833-11	METAL CHIP	10K	5%	1/10W	
							R504	1-216-833-11	METAL CHIP	10K	5%	1/10W	
△ Q930	8-729-140-99	TRANSISTOR	2SB734-T-34				R505	1-216-833-11	METAL CHIP	10K	5%	1/10W	
		< RESISTOR >					R506	1-216-839-11	METAL CHIP	33K	5%	1/10W	
							R507	1-216-849-11	METAL CHIP	220K	5%	1/10W	
R301	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		△ R510	1-215-889-51	METAL OXIDE	330	5%	2W	F
△ R302	1-249-405-91	CARBON	100	5%	1/4W	F	△ R511	1-215-886-51	METAL OXIDE	100	5%	2W	F
△ R303	1-249-405-91	CARBON	100	5%	1/4W	F	△ R545	1-249-381-91	CARBON	1	5%	1/4W	F
R304	1-216-841-11	METAL CHIP	47K	5%	1/10W		△ R546	1-249-381-91	CARBON	1	5%	1/4W	F
R320	1-216-845-11	METAL CHIP	100K	5%	1/10W		R600	1-216-864-11	SHORT CHIP	0			
R325	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R602	1-216-864-11	SHORT CHIP	0			
R326	1-216-840-11	METAL CHIP	39K	5%	1/10W		R605	1-216-230-00	RES-CHIP	22K	2%	1/8W	
R327	1-216-833-11	METAL CHIP	10K	5%	1/10W		R651	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R328	1-216-821-11	METAL CHIP	1K	5%	1/10W		R652	1-216-843-11	METAL CHIP	68K	5%	1/10W	
R335	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W		R653	1-208-445-41	RES-CHIP	2.2K	2%	1/10W	
R336	1-216-864-11	SHORT CHIP	0				R654	1-208-826-11	METAL CHIP	68K	0.5%	1/10W	
R337	1-216-837-11	METAL CHIP	22K	5%	1/10W		R656	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R350	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		R657	1-216-844-11	METAL CHIP	82K	5%	1/10W	
△ R351	1-249-399-91	CARBON	33	5%	1/4W	F	R658	1-216-818-11	METAL CHIP	560	5%	1/10W	
△ R352	1-249-401-91	CARBON	47	5%	1/4W	F	△ R659	1-249-405-91	CARBON	100	5%	1/4W	F
R353	1-216-841-11	METAL CHIP	47K	5%	1/10W		△ R660	1-249-405-91	CARBON	100	5%	1/4W	F
R355	1-216-821-11	METAL CHIP	1K	5%	1/10W		R661	1-216-214-00	RES-CHIP	4.7K	2%	1/8W	
△ R356	1-249-399-91	CARBON	33	5%	1/4W	F	△ R662	1-240-855-91	CARBON	6.2K	5%	1/4W	F
△ R357	1-249-401-91	CARBON	47	5%	1/4W	F	△ R663	1-234-182-11	ENCAPSULATED COMPONENT				F
R358	1-216-841-11	METAL CHIP	47K	5%	1/10W		R664	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R360	1-216-821-11	METAL CHIP	1K	5%	1/10W		R665	1-216-835-11	METAL CHIP	15K	5%	1/10W	
△ R361	1-249-399-91	CARBON	33	5%	1/4W	F	R666	1-216-843-11	METAL CHIP	68K	5%	1/10W	
△ R362	1-249-401-91	CARBON	47	5%	1/4W	F	R670	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R363	1-216-841-11	METAL CHIP	47K	5%	1/10W		R671	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
R375	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		R672	1-216-835-11	METAL CHIP	15K	5%	1/10W	
△ R376	1-249-399-91	CARBON	33	5%	1/4W	F	R673	1-216-837-11	METAL CHIP	22K	5%	1/10W	
△ R377	1-249-401-91	CARBON	47	5%	1/4W	F	R674	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R378	1-216-841-11	METAL CHIP	47K	5%	1/10W		R675	1-216-833-11	METAL CHIP	10K	5%	1/10W	
△ R392	1-215-891-51	METAL OXIDE	680	5%	2W	F	R676	1-216-845-11	METAL CHIP	100K	5%	1/10W	
△ R393	1-215-891-51	METAL OXIDE	680	5%	2W	F	△ R678	1-249-389-91	CARBON	4.7	5%	1/4W	F
R401	1-216-821-11	METAL CHIP	1K	5%	1/10W		△ R679	1-249-393-91	CARBON	10	5%	1/4W	F
R402	1-216-821-11	METAL CHIP	1K	5%	1/10W		R680	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R403	1-216-821-11	METAL CHIP	1K	5%	1/10W		R701	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R404	1-216-821-11	METAL CHIP	1K	5%	1/10W		R702	1-216-843-11	METAL CHIP	68K	5%	1/10W	
R405	1-216-821-11	METAL CHIP	1K	5%	1/10W		R703	1-208-445-41	RES-CHIP	2.2K	2%	1/10W	
R408	1-216-821-11	METAL CHIP	1K	5%	1/10W		R704	1-208-826-11	METAL CHIP	68K	0.5%	1/10W	
R409	1-216-821-11	METAL CHIP	1K	5%	1/10W		R705	1-216-230-00	RES-CHIP	22K	2%	1/8W	
R430	1-216-821-11	METAL CHIP	1K	5%	1/10W		R706	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R431	1-216-821-11	METAL CHIP	1K	5%	1/10W		R707	1-216-844-11	METAL CHIP	82K	5%	1/10W	
R449	1-216-821-11	METAL CHIP	1K	5%	1/10W		R708	1-216-818-11	METAL CHIP	560	5%	1/10W	
R450	1-216-821-11	METAL CHIP	1K	5%	1/10W		△ R709	1-249-405-91	CARBON	100	5%	1/4W	F
R451	1-216-821-11	METAL CHIP	1K	5%	1/10W		△ R710	1-249-405-91	CARBON	100	5%	1/4W	F
R452	1-216-821-11	METAL CHIP	1K	5%	1/10W		R711	1-216-214-00	RES-CHIP	4.7K	2%	1/8W	
R453	1-216-821-11	METAL CHIP	1K	5%	1/10W		△ R712	1-240-855-91	CARBON	6.2K	5%	1/4W	F

STR-KG800

MAIN

Ref. No.	Part No.	Description					Remark
△ R713	1-234-182-11	ENCAPSULATED COMPONENT					F
R714	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		
R715	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R716	1-216-843-11	METAL CHIP	68K	5%	1/10W		
R720	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R721	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		
R722	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R723	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R724	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R725	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R726	1-216-845-11	METAL CHIP	100K	5%	1/10W		
△ R728	1-249-389-91	CARBON	4.7	5%	1/4W	F	
△ R729	1-249-393-91	CARBON	10	5%	1/4W	F	
R730	1-216-841-11	METAL CHIP	47K	5%	1/10W		
R751	1-216-821-11	METAL CHIP	1K	5%	1/10W		
R752	1-216-843-11	METAL CHIP	68K	5%	1/10W		
R753	1-208-445-41	RES-CHIP	2.2K	2%	1/10W		
R754	1-208-826-11	METAL CHIP	68K	0.5%	1/10W		
R756	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		
R757	1-216-844-11	METAL CHIP	82K	5%	1/10W		
R758	1-216-818-11	METAL CHIP	560	5%	1/10W		
△ R759	1-249-405-91	CARBON	100	5%	1/4W	F	
△ R760	1-249-405-91	CARBON	100	5%	1/4W	F	
R761	1-216-214-00	RES-CHIP	4.7K	2%	1/8W		
△ R762	1-240-855-91	CARBON	6.2K	5%	1/4W	F	
△ R763	1-234-182-11	ENCAPSULATED COMPONENT					F
R764	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		
R765	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R766	1-216-843-11	METAL CHIP	68K	5%	1/10W		
R770	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R771	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		
R772	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R773	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R774	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R775	1-216-833-11	METAL CHIP	10K	5%	1/10W		
R776	1-216-845-11	METAL CHIP	100K	5%	1/10W		
△ R778	1-249-389-91	CARBON	4.7	5%	1/4W	F	
△ R779	1-249-393-91	CARBON	10	5%	1/4W	F	
R780	1-216-841-11	METAL CHIP	47K	5%	1/10W		
R801	1-216-821-11	METAL CHIP	1K	5%	1/10W		
R802	1-216-843-11	METAL CHIP	68K	5%	1/10W		
R803	1-208-445-41	RES-CHIP	2.2K	2%	1/10W		
R804	1-208-826-11	METAL CHIP	68K	0.5%	1/10W		
R805	1-216-230-00	RES-CHIP	22K	2%	1/8W		
R806	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		
R807	1-216-844-11	METAL CHIP	82K	5%	1/10W		
R808	1-216-818-11	METAL CHIP	560	5%	1/10W		
△ R809	1-249-405-91	CARBON	100	5%	1/4W	F	
△ R810	1-249-405-91	CARBON	100	5%	1/4W	F	
R811	1-216-214-00	RES-CHIP	4.7K	2%	1/8W		
△ R812	1-240-855-91	CARBON	6.2K	5%	1/4W	F	
△ R813	1-234-182-11	ENCAPSULATED COMPONENT					F
R814	1-216-823-11	METAL CHIP	1.5K	5%	1/10W		
R815	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R816	1-216-843-11	METAL CHIP	68K	5%	1/10W		
R820	1-216-837-11	METAL CHIP	22K	5%	1/10W		
R821	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		
R822	1-216-835-11	METAL CHIP	15K	5%	1/10W		
R823	1-216-837-11	METAL CHIP	22K	5%	1/10W		

Ref. No.	Part No.	Description				Remark
R824	1-216-837-11	METAL CHIP	22K	5%	1/10W	
△ R828	1-249-389-91	CARBON	4.7	5%	1/4W	F
△ R829	1-249-393-91	CARBON	10	5%	1/4W	F
R830	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R851	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R852	1-216-843-11	METAL CHIP	68K	5%	1/10W	
R853	1-208-445-41	RES-CHIP	2.2K	2%	1/10W	
R854	1-208-826-11	METAL CHIP	68K	0.5%	1/10W	
R856	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R857	1-216-844-11	METAL CHIP	82K	5%	1/10W	
R858	1-216-818-11	METAL CHIP	560	5%	1/10W	
△ R859	1-249-405-91	CARBON	100	5%	1/4W	F
△ R860	1-249-405-91	CARBON	100	5%	1/4W	F
R861	1-216-214-00	RES-CHIP	4.7K	2%	1/8W	
△ R862	1-240-855-91	CARBON	6.2K	5%	1/4W	F
△ R863	1-234-182-11	ENCAPSULATED COMPONENT				F
R864	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R865	1-216-835-11	METAL CHIP	15K	5%	1/10W	
R866	1-216-843-11	METAL CHIP	68K	5%	1/10W	
R870	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R871	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
R872	1-216-835-11	METAL CHIP	15K	5%	1/10W	
R873	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R874	1-216-837-11	METAL CHIP	22K	5%	1/10W	
△ R878	1-249-389-91	CARBON	4.7	5%	1/4W	F
△ R879	1-249-393-91	CARBON	10	5%	1/4W	F
R880	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R930	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R931	1-216-833-11	METAL CHIP	10K	5%	1/10W	
△ R932	1-249-389-91	CARBON	4.7	5%	1/4W	F
△ R940	1-240-877-91	FUSIBLE	0.15	5%	1/2W	F
R3010	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R3011	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	
R3012	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	
R3013	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R3020	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R3021	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	
R3022	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	
R3023	1-216-841-11	METAL CHIP	47K	5%	1/10W	
△ RR11	1-249-393-91	CARBON	10	5%	1/4W	F
△ RR12	1-249-393-91	CARBON	10	5%	1/4W	F
△ RR15	1-249-393-91	CARBON	10	5%	1/4W	F
△ RR16	1-249-393-91	CARBON	10	5%	1/4W	F
△ RR17	1-249-393-91	CARBON	10	5%	1/4W	F
< RELAY >						
RY301	1-755-267-11	RELAY				
RY350	1-755-170-11	RELAY				
RY355	1-755-170-11	RELAY				
RY360	1-755-170-11	RELAY				
RY375	1-755-170-11	RELAY				
< TERMINAL >						
TB601	1-780-215-11	TERMINAL BOARD (SP) (4P)				(SPEAKERS FRONT)
TB604	1-694-785-11	TERMINAL BOARD (SPEAKERS SURROUND)				
TB607	1-694-157-21	TERMINAL, PUSH (2P) (SPEAKERS CENTER)				

POWER

STANDBY

VIDEO

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
POWER BOARD						< TRANSISTOR >							

< CONNECTOR >													
* CN103	1-691-670-11	CONNECTOR, BOARD TO BOARD 5P					Q901	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF			
< RESISTOR >						Q951	8-729-106-60	TRANSISTOR	2SB1115A-YQ				
						Q955	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF				
						Q990	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF				
< SWITCH >						< RESISTOR >							
R111	1-216-819-11	METAL CHIP	680	5%	1/10W	△ R902	1-249-381-91	CARBON	1	5%	1/4W	F	
						R903	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		
						R904	1-216-841-11	METAL CHIP	47K	5%	1/10W		
S100	1-771-410-21	SWITCH, TACTILE (I/⏏)					△ R910	1-243-634-11	FUSIBLE	0.22	5%	1/2W	F
S115	1-771-410-21	SWITCH, TACTILE (SPEAKERS (ON/OFF))					△ R911	1-243-634-11	FUSIBLE	0.22	5%	1/2W	F

STANDBY BOARD													

< CAPACITOR >													
C910	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V								
C911	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V								
C912	1-126-943-11	ELECT	2200uF	20%	25V								
C913	1-126-942-61	ELECT	1000uF	20%	25V								
C950	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V								
						< RELAY >							
C951	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V								
C952	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V								
C954	1-128-547-11	ELECT	6800uF	20%	16V								
C955	1-126-942-61	ELECT	1000uF	20%	25V								
C992	1-126-960-11	ELECT	1uF	20%	50V								
						< TRANSFORMER >							
C999	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V								
< CONNECTOR >													
CNP901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P					C201	1-100-385-91	CERAMIC CHIP	0.47uF		25V	
* CNP902	1-565-792-11	PIN, CONNECTOR (3.96mm PITCH) 2P					C202	1-100-385-91	CERAMIC CHIP	0.47uF		25V	
* CNP910	1-564-506-11	PLUG, CONNECTOR 3P					C203	1-126-947-11	ELECT	47uF	20%	35V	
CNP911	1-778-227-41	CONNECTOR, BOARD TO BOARD 6P					C204	1-126-947-11	ELECT	47uF	20%	35V	
* CNP913	1-564-509-11	PLUG, CONNECTOR 6P					C211	1-126-964-11	ELECT	10uF	20%	50V	
< DIODE >						C212	1-126-964-11	ELECT	10uF	20%	50V		
D901	6-501-817-01	DIODE MA2J11110GLS0					C213	1-126-964-11	ELECT	10uF	20%	50V	
△ D910	8-719-053-18	DIODE 1SR154-400TE-25					C215	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
△ D911	8-719-053-18	DIODE 1SR154-400TE-25					C217	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
△ D912	8-719-053-18	DIODE 1SR154-400TE-25					C221	1-126-964-11	ELECT	10uF	20%	50V	
△ D913	8-719-053-18	DIODE 1SR154-400TE-25					C222	1-126-964-11	ELECT	10uF	20%	50V	
△ D950	8-719-053-18	DIODE 1SR154-400TE-25					C223	1-126-964-11	ELECT	10uF	20%	50V	
△ D951	8-719-053-18	DIODE 1SR154-400TE-25					C224	1-126-964-11	ELECT	10uF	20%	50V	
△ D952	8-719-053-18	DIODE 1SR154-400TE-25					C225	1-126-964-11	ELECT	10uF	20%	50V	
△ D953	8-719-053-18	DIODE 1SR154-400TE-25					C226	1-126-964-11	ELECT	10uF	20%	50V	
D955	8-719-053-18	DIODE 1SR154-400TE-25					C227	1-126-964-11	ELECT	10uF	20%	50V	
D990	6-501-817-01	DIODE MA2J11110GLS0					C228	1-126-964-11	ELECT	10uF	20%	50V	
D991	6-501-817-01	DIODE MA2J11110GLS0					C229	1-126-964-11	ELECT	10uF	20%	50V	
< EARTH TERMINAL >						C232	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		
ET901	1-537-738-21	TERMINAL, GROUND					C233	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
< FUSE HOLDER >						C240	1-126-964-11	ELECT	10uF	20%	50V		
						C242	1-126-964-11	ELECT	10uF	20%	50V		
< CONNECTOR >						< CONNECTOR >							
FH901	1-533-217-31	FUSE HOLDER					* CNP203	1-564-507-11	PLUG, CONNECTOR 4P				
FH902	1-533-217-31	FUSE HOLDER					CNP240	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P				
						* CNP242	1-564-506-11	PLUG, CONNECTOR 3P					
						CNS271	1-779-275-11	CONNECTOR, FFC (LIF (NON-ZIF)) 7P					

STR-KG800

Ver. 1.1

VIDEO VIDEO2

Ref. No.	Part No.	Description	Remark			
< DIODE >						
D210	6-501-817-01	DIODE MA2J1110GLS0				
D211	6-501-817-01	DIODE MA2J1110GLS0				
< IC >						
△ IC201	8-759-231-53	IC TA7805S				
△ IC202	8-759-373-92	IC TA79005SB				
IC210	6-704-199-01	IC NJM2595M-TE2				
IC220	6-706-767-01	IC NJM2586AM				
< JACK >						
J210	1-815-043-11	JACK, PIN 2P (MONITOR VIDEO OUT,	VIDEO 1 DVD IN)			
J211	1-794-978-11	JACK, PIN 3P (VIDEO 1 VIDEO OUT,	DVD VIDEO IN, SAT VIDEO IN)			
J220	1-816-592-11	JACK, PIN 9P (COMPONENT VIDEO DVD IN/	VIDEO 1 IN/MONITER OUT)			
J221	1-821-278-12	JACK 3P (COMPONENT VIDEO SAT IN)				
< RESISTOR >						
R211	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R212	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R213	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R214	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R215	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R221	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R222	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R223	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R224	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R225	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R226	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R227	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R228	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R229	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R240	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R242	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R276	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R277	1-211-990-11	METAL CHIP	75	0.5%	1/10W	
R278	1-211-990-11	METAL CHIP	75	0.5%	1/10W	

VIDEO 2 BOARD						

< CAPACITOR >						
C293	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	
C294	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	
C298	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C299	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
< CONNECTOR >						
CNP201	1-564-721-11	PIN, CONNECTOR (SMALL TYPE) 5P				
< JACK >						
J298	1-819-187-11	PIN JACK 3P (VIDEO 2 IN/PORTABLE AV IN VIDEO/AUDIO)				
< LEAD >						
* TP202	1-690-880-31	LEAD (WITH CONNECTOR)				

Ref. No.	Part No.	Description	Remark
MISCELLANEOUS			

10	1-828-994-11	WIRE (FLAT TYPE) (17 CORE)	
△ 53	1-777-071-83	CORD, POWER (AEP)	
△ 53	1-833-566-21	POWER-SUPPLY CORD (AUS)	
56	1-828-299-51	WIRE (FLAT TYPE) (7 CORE)	
57	1-828-951-11	WIRE (FLAT TYPE) (9 CORE) (AUS)	
57	1-828-961-51	WIRE (FLAT TYPE) (11 CORE) (AEP)	
58	1-693-737-21	TUNER (FM/AM) (AEP)	
58	1-693-749-21	TUNER (FM/AM) (AUS)	
61	1-828-350-51	WIRE (FLAT TYPE) (17 CORE)	
△ F901	1-532-464-33	FUSE (T2.5AL/250V)	
△ F4001	1-532-465-33	FUSE (T3.15AL/250V)	
△ F4002	1-532-465-33	FUSE (T3.15AL/250V)	
Q653	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
Q654	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
Q703	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
Q704	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
Q753	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
Q754	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
Q803	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
Q804	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
Q853	6-702-390-01	TRANSISITOR MN2488-OPY-MK	
Q854	6-702-391-01	TRANSISITOR MP1620-OPY-MK	
△ T901	1-443-525-11	POWER TRANSFORMER	

Note: If wire (flat type) is replaced, install it after bending it in the same form as that before replacement.

MEMO

REVISION HISTORY

Checking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]